

InteliCharger 65/24 AF



Order code: ICHG-65-24-AF

Automatic Battery Charger

Datasheet

Product description

Automatic battery chargers provide a cost effective solution to most industrial battery charging requirements. The two stage constant current – constant voltage characteristic ensures accurate and efficient battery charging and is designed for permanent connection to the batteries maintaining them in a fully charged condition without overcharging. Device can be also set as power supply.

Key features

- Cost effective
- Micro-processor control
- Compact size DIN rail mounting
- Sealed electronic construction
- Robust & high reliability
- Fully automatic operation
- Power supply mode
- Universal AC input ranges
- Low ripple output
- Passive cooling
- Fail alarm contact set

Certifications and standards

EN 62368-1	
EN61000-6-2	CE
EN61000-6-4	
UL1236 Edition 8	
CSA C22.2 No. 107.2-01	
RoHS 3 Directive (EU 2015/863)	



Technical data

Operating conditions

	40.004 50.00
Working Temperature	-10 °C to +50 °C
Working Humidity	20 to 90 % RH
Storage Temperature	-20 °C to +85 °C
Storage Humidity	10 to 95 % RH
Unpacked Weight	400 g
Withstand Voltage	Input – Output 1.5 kV AC
Isolation Resistance	Input – Output 500 V DC
Isolation Resistance	/ 100M Ω

Protections

Overload Protection	Constant Current Limit/Fold back
Over Voltage Protection	105 % - 125 % Shutdown. Recycle I/P to restart
Over Temp. Protection	Output shutdown with automatic recovery
Reversed Battery Protection	Automatic protection. Disabled when in PSU mode.

Input Specification

Voltage Range, V _{IN}	90 to 264 V AC
Frequency	47 to 63 Hz
Input Current	1.5 A rms max.
Leakage Current	None

Output Specification

Voltage/Current	24.0 V Nominal 3.0 Apk
Ripple & Noise	±0.5 %
Line Regulation	±1.0 %
Load Regulation	±1.5 %0
Efficiency	Up to 90 %

Fault Relay is active, if


- DC short circuit
- Battery voltage lower than 95 % of nominal voltage
- Charger is switched OFF (* in case of DC connected, it takes longer time to switch to NC status)

Alarms and Levels


DC Output Voltages	Float = Factory set to 27.6 V Boost = Float Voltage +4 V
AC / Charger Fail	Loss of AC input or DC output voltage ctrl
Low DC Voltage Alarm	Float Voltage -12 % Alarm, -8 % Reset
High DC Voltage Alarm	Float Voltage +7 % Alarm, +5 % Reset
Over Voltage Protection	Float Voltage +10 %, instant SD
Battery Disconnected	Open circuit on DC output



Dimensions, terminals and mounting

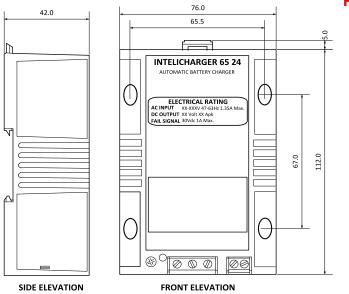

Power supply mode

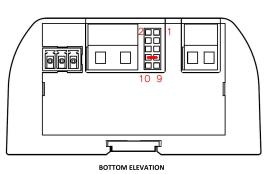


To activate Power supply mode connect pin 7 and 8.

No connection = Default = Charger mode

Note: Dimensions are in mm.

Calibration

- 1. Disconnect the battery. Connect a DC voltmeter to the ± output terminals.
- 2. Turn the "CAL" potentiometer fully anti-clockwise. When the status LED flashes green/red @5 Hz, adjust the "CAL" potentiometer and set the desired float voltage level.
- 3. When the LED red/green @5 Hz flash sequence ends, the unit is calibrated.

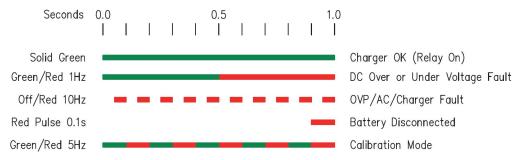



Manufacturer:

ComAp a.s. Czech Republic Phone: +420 246 012 111

E-mail: info@comap-control.com Web: www.comap-control.com

