

InteliDrive Marine

Modular Engine Controller

SW version 1.1.0

1 Document information	7
2 System overview	10
3 Applications overview	15
4 Installation and wiring	16
5 Controller setup	50
6 Communication	63
7 Troubleshooting	72
8 Technical data	79
9 Function description	88
10 Appendix	106
11 Language support	254

Table of contents

1 Document information	7
1.1 Clarification of notation	7
1.2 About this guide	7
1.3 Legal notice	7
1.4 Conformity Declaration	9
2 System overview	10
2.1 Warnings	10
2.2 General description	10
2.3 Configurability and monitoring	11
2.3.1 Open connection from LiteEdit	11
2.3.2 Open connection from web browser	12
2.3.3 Open connection from WinScope	13
3 Applications overview	15
3.1 Single applications	15
4 Installation and wiring	16
4.1 Putting it into operation	16
4.1.1 How to install	16
4.1.2 Analog inputs	19
4.1.3 Binary inputs and outputs	25
4.1.4 Analog outputs	26
4.1.5 Remote modules - CAN bus connection	27
4.2 Mounting	28
4.3 Package contents	28
4.3.1 Software package	28
4.3.2 Components	29
4.4 Terminal diagram and dimension	29
4.5 Extension plug-in modules	31
4.5.1 Extensions plug-in modules installation	31
4.5.2 IL-NT AOUT8	31
4.5.3 IL-NT AIO	33
4.5.4 IL-NT IO1	34
4.5.5 IL-NT BIO8	34
4.6 Communication modules	35
4.6.1 IL-NT RS232	35
4.6.2 IL-NT RS233-485	36

4.6.3 IL-NT S-USB	36
4.6.4 IB-Lite	37
4.6.5 IL-NT GPRS	38
4.7 Remote modules	39
4.7.1 IL-NT RD (SW)	39
4.7.2 IGL-RA15	40
4.7.3 IB-NT	41
4.8 Inteli RPU	41
4.8.1 Installation and wiring	43
4.8.2 Features	46
4.8.3 Overspeed RPM configuration	47
5 Controller setup	50
5.1 Front panel elements	50
5.2 Init screens	52
5.2.1 Init screen	52
5.2.2 Firmware screen	52
5.2.3 Languages screen	52
5.2.4 User interface screen	52
5.3 Display menus	53
5.3.1 Switching between User and Engineer menus	53
5.4 How to select the engine mode?	53
5.5 How to view measured data?	53
5.6 How to view and edit setpoints?	53
5.6.1 How to change the display contrast?	54
5.6.2 How to check software revision?	54
5.6.3 How to check serial number and choose interface?	54
5.6.4 How to change language?	54
5.7 How to find active alarms?	54
5.8 How to list History records?	55
5.9 MEASUREMENT screens description	56
5.9.1 Main measure screen	56
5.9.2 IL-NT-AIO Analog inputs screens	56
5.9.3 InteliDrive Lite Analog inputs screens	56
5.9.4 InteliDrive Marine Binary inputs	57
5.9.5 InteliDrive Marine Binary outputs	57
5.9.6 IL-NT-BIO8 Binary inputs screen	57
5.9.7 IL-NT-IO1 Binary inputs screen	57
5.9.8 ECU State	57
5.9.9 ECU Values	58

5.9.10	Statistic	58
5.9.11	ECU AlarmList	59
5.9.12	Alarm list	59
5.10	Display screens and pages structure	59
6	Communication	63
6.1	Direct cable connection	63
6.2	Remote connection	64
6.2.1	Internet connection	64
6.2.2	AirGate connection	64
6.2.3	Modem connection	65
6.3	Modbus connection	65
6.3.1	Modbus step by step	65
6.4	ECU engine support	66
6.5	Choosing the ECU to configure	66
6.6	ECU Analog inputs	68
6.7	Tier4 final support	68
7	Troubleshooting	72
7.1	Alarm management	72
7.1.1	Sensor fail (FIs)	72
7.1.2	Warning (Wrm)	72
7.1.3	Cooldown (Cd)	72
7.1.4	Shut down (Sd)	73
7.1.5	List of possible alarms	73
7.2	HistoryFile	75
7.2.1	RecordStructure	75
7.2.2	Diagnostic Messages read from ECU	76
7.2.3	List of ECU Diagnostic Codes	76
7.2.4	Tier4 diagnostic codes	77
8	Technical data	79
8.1	Power supply	79
8.2	Operating conditions	80
8.3	Low Temperature modification	80
8.4	Dimensions and weight	80
8.5	Binary inputs and outputs	81
8.5.1	Binary inputs	81
8.5.2	Binary open collector outputs	81
8.6	Analog inputs	81

8.7 Speed pick-up input	81
8.8 D+ function	82
8.9 CAN bus interface	82
8.10 IL-NT RS232 (Optional card)	82
8.11 IL-NT RS232-485 (optional card)	83
8.12 IL-NT S-USB (optional card)	83
8.13 IB-Lite (optional card)	83
8.14 IL-NT GPRS (optional card)	83
8.15 IL-NT AOUT8 (optional card)	83
8.16 IL-NT AIO (optional card)	84
8.17 IL-NT IO1 (optional card)	84
8.18 IL-NT BIO8 (optional card)	84
8.19 IGL-RA15 (optional Remote Annunciator)	85
8.19.1 Power supply	85
8.19.2 Operating conditions	85
8.19.3 Dimensions and weight	85
8.19.4 Horn output	85
8.20 Inteli RPU (optional Redundant Protection Unit)	85
8.20.1 Power supply	85
8.20.2 Operating conditions	86
8.20.3 Dimensions	86
8.20.4 Binary input ES	86
8.20.5 Binary input CU	86
8.20.6 Binary input CONTROLLER	86
8.20.7 Binary output CONTROLLER	86
8.20.8 Binary outputs ENG	87
8.20.9 Magnetic pick-up input	87
9 Function description	88
9.1 Engine operation states	88
9.2 OFF mode	88
9.3 MAN mode	88
9.3.1 Start-stop sequence (simplified)	89
9.4 AUT mode	91
9.5 Engine without pickup operation	91
9.6 Engine timer	91
9.6.1 MAN mode	91
9.6.2 AUT mode	92
9.7 Protections	92
9.8 Engine RPM control in MAN mode	93

9.8.1 Engine RPM Idle - Nominal switching	93
9.8.2 Engine RPM two/three levels switching	94
9.8.3 Engine RPM by Up/Down buttons settings	94
9.8.4 Engine RPM continuous change (using potentiometer)	94
9.8.5 Speed request chart	95
9.9 AUT mode: Engine load limitation - overview	95
9.9.1 Functions 1 and 2	96
9.9.2 Functions 1 and 2 setpoints	97
9.10 AUT mode: Engine regulation by RPM control - overview	101
9.10.1 Functions 3 and 4	103
9.10.2 Functions 3 and 4 setpoints	103
9.10.3 Functions 3 and 4 examples	103
10 Appendix	106
10.1 Setpoints	106
10.1.1 List of setpoint groups	106
10.1.2 List of setpoints	107
10.1.3 Group: Password	110
10.1.4 Group: ATT Settings	111
10.1.5 Group: Basic settings	112
10.1.6 Group: Comms settings	121
10.1.7 Group: Engine params	130
10.1.8 Group: Regulator	146
10.1.9 Group: Load limit	152
10.1.10 Group: Engine protect	157
10.1.11 Group: Date/Time	192
10.1.12 Group: Sensor spec	198
10.1.13 Group: AIO module	206
10.1.14 Group: SMS_E-Mail	211
10.2 Values	214
10.3 Binary input functions	215
10.3.1 Binary inputs IntelliDrive Marine - default configuration	216
10.3.2 Configuration of binary inputs	216
10.3.3 List of LBI	216
10.4 Binary output functions	226
10.4.1 Binary outputs IntelliDrive Marine - default	226
10.4.2 List of LBO	226
11 Language support	254

1 Document information

1.1 Clarification of notation	7
1.2 About this guide	7
1.3 Legal notice	7
1.4 Conformity Declaration	9

Revision number	Related sw. version	Date
2	1.1.0	13.2.2017
1	1.0.0	13.1.2017

Table 1.1 Document history

1.1 Clarification of notation

Note: This type of paragraph calls readers attention to a notice or related theme.

IMPORTANT: This type of paragraph highlights a procedure, adjustment etc., which can cause a damage or improper function of the equipment if not performed correctly and may not be clear at first sight.

Example: This type of paragraph contains information that is used to illustrate how a specific function works.

1.2 About this guide

This manual contains important instructions for ID-FLX-Marine controllers family that shall be followed during installation and maintenance of the IntelliDrive Marine engine controllers.

This manual describes ID-FLX-Marine application examples for single engine applications.

This manual provides general information how to install and operate IntelliDrive Marine controller.

This manual is intended for operators of engines, for engine control panel builders or for everybody who is concerned with installation, operation and maintenance of the engine applications.

1.3 Legal notice

This End User's Guide/Manual as part of the Documentation is an inseparable part of ComAp's Product and may be used exclusively according to the conditions defined in the "END USER or Distributor LICENSE AGREEMENT CONDITIONS – COMAP CONTROL SYSTEMS SOFTWARE" (License Agreement) and/or in the "ComAp a.s. Global terms and conditions for sale of Products and provision of Services" (Terms) and/or in the "Standardní podmínky projektů komplexního řešení ke smlouvě o dílo, Standard Conditions for Supply of Complete Solutions" (Conditions) as applicable.

ComAp's License Agreement is governed by the Czech Civil Code 89/2012 Col., by the Authorship Act 121/2000 Col., by international treaties and by other relevant legal documents regulating protection of the intellectual properties (TRIPS).

The End User and/or ComAp's Distributor shall only be permitted to use this End User's Guide/Manual with ComAp Control System Registered Products. The Documentation is not intended and applicable for any other purpose.

Official version of the ComAp's End User's Guide/Manual is the version published in English. ComAp reserves the right to update this End User's Guide/Manual at any time. ComAp does not assume any responsibility for its use outside of the scope of the Terms or the Conditions and the License Agreement.

Licensed End User is entitled to make only necessary number of copies of the End User's Guide/Manual. Any translation of this End User's Guide/Manual without the prior written consent of ComAp is expressly prohibited!

Even if the prior written consent from ComAp is acquired, ComAp does not take any responsibility for the content, trustworthiness and quality of any such translation. ComAp will deem a translation equal to this End User's Guide/Manual only if it agrees to verify such translation. The terms and conditions of such verification must be agreed in the written form and in advance.

For more details relating to the Ownership, Extent of Permitted Reproductions Term of Use of the Documentation and to the Confidentiality rules please review and comply with the ComAp's License Agreement, Terms and Conditions available on www.comap-control.com.

Security Risk Disclaimer

Pay attention to the following recommendations and measures to increase the level of security of ComAp products and services.

Please note that possible cyber-attacks cannot be fully avoided by the below mentioned recommendations and set of measures already performed by ComAp, but by following them the cyber-attacks can be considerably reduced and thereby to reduce the risk of damage. ComAp does not take any responsibility for the actions of persons responsible for cyber-attacks, nor for any damage caused by the cyber-attack. However, ComAp is prepared to provide technical support to resolve problems arising from such actions, including but not limited to restoring settings prior to the cyber-attacks, backing up data, recommending other preventive measures against any further attacks.

Warning: Some forms of technical support may be provided against payment. There is no legal or factual entitlement for technical services provided in connection to resolving problems arising from cyber-attack or other unauthorized accesses to ComAp's Products or Services.

General security recommendations and set of measures

1. AccessCode

- Change the AccessCode BEFORE the device is connected to a network.
- Use a secure AccessCode – ideally a random string of 8 characters containing lowercase, uppercase letters and digits.
- For each device use a different AccessCode.

2. Password

- Change the password BEFORE the device enters a regular operation.
- Do not leave displays or PC tools unattended if an user, especially administrator, is logged in.

3. Controller Web interface

- The controller web interface at port TCP/80 is based on http, not https, and thus it is intended to be used only in closed private network infrastructures.
- Avoid exposing the port TCP/80 to the public Internet.

4. MODBUS/TCP

- The MODBUS/TCP protocol (port TCP/502) is an instrumentation protocol designed to exchange data between locally connected devices like sensors, I/O modules, controllers etc. From it's nature it does not

contain any kind of security – neither encryption nor authentication. Thus it is intended to be used only in closed private network infrastructures.

- Avoid exposing the port TCP/502 to the public Internet.

5. SNMP

- The SNMP protocol (port UDP/161) version 1,2 is not encrypted. Thus it is intended to be used only in closed private network infrastructures.
- Avoid exposing the port UDP/161 to the public Internet.

1.4 Conformity Declaration



The following described machine complies with the appropriate basic safety and health requirement of the EC Low Voltage Directive No: 73/23 / EEC and EC Electromagnetic Compatibility Directive 89/336 / EEC based on its design and type, as brought into circulation by us.

2 System overview

2.1 Warnings	10
2.2 General description	10
2.3 Configurability and monitoring	11
6 back to Table of contents	

2.1 Warnings

InteliDrive Marine controller can be remotely controlled. In case of the work on the engine check, that nobody can remotely start the engine.

To be sure:

- ▶ Disconnect remote control via RS232 line,
- ▶ Disconnect input REM START/STOP or
- ▶ Disconnect output STARTER

Note: Because of large variety of InteliDrive Marine parameters setting, it is not possible to describe all combination. Some of InteliDrive Marine functions are subject of changes depend on SW version.

Note: The data in this manual only describes the product and are not warranty of performance or characteristic.

Note: SW and HW must be compatible (e.g. ID-FLX-Lite firmware and ID-FLX-Marine hardware) otherwise the function will be disabled. If wrong software is uploaded the message **HARDWARE INCOMPATIBLE** appears on the controller screen.

Note: In the case of using Boot load (jumper) programming – close Boot jumper, follow instruction in LiteEdit and upload correct software.

2.2 General description

The key feature of InteliDrive Marine is its easy-to-use operation and installation. Predefined configurations for typical applications are available as well as user-defined configurations for special applications.

InteliDrive Marine is a comprehensive controller for single engines with extended support of electronic engines and plug-in modules.

InteliDrive Marine controllers are equipped with a powerful graphic display showing icons, symbols and bar-graphs for intuitive operation, which sets, together with high functionality, new standards in engine controls.

InteliDrive Marine provides gas engine support without ventilation.

Controller supports WebSupervisor system. This system enables engine fleet and assets management as well as pure monitoring. Visit www.comap-control.com and www.websupervisor.net for more details about WebSupervisor

The key features are:

- ▶ ECU support - for singlespeed and allspeed engines e.g. Cummins, Volvo, JohnDeer etc.
- ▶ Flexibility - with our extension modules e.g. IL-NT-AIO, IL-NT-BIO8 etc.

- ▶ Communication - via communication modules e.g. IL-NT-GPRS, IB-Lite, IL-NT-S-USB and PC tools WebServer, WebSupervisor, IntelliMonitor etc.
- ▶ Process logic - active control of engine, history log, configuration-no programming

2.3 Configurability and monitoring

InteliDrive Marine is used as configuration, monitoring and controlling tool LiteEdit software. For simple configuration, monitoring and controlling can be used IntelliMonitor.

InteliDrive Marine controller also supports remote monitoring and control via internet, AirGate or cellular network connection. For this remote control are used web tools WebSupervisor and WebServer.

2.3.1 Open connection from LiteEdit

PC tool LiteEdit is used for monitoring, programming and configuration of ID-FLX-Marine controllers.

1. Go to menu Connection and select the type of connection you desire.



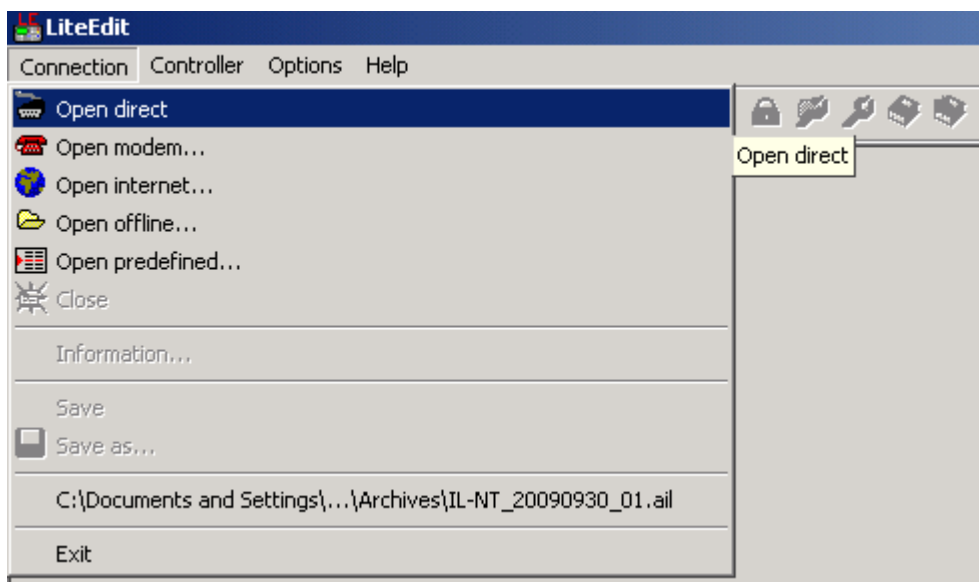


Image 2.1 LiteEdit - connection menu

2. Enter controller address and further information depending on the selected connection type.

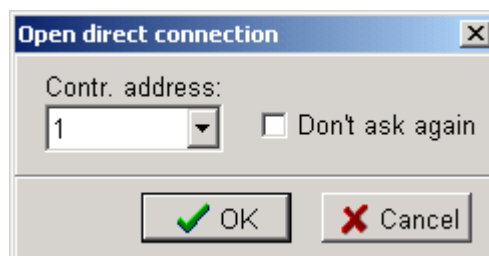

Note: For direct connection enter controller address

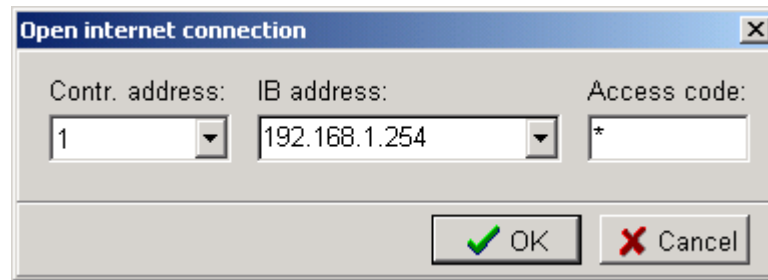

Note: For internet connection enter controller address, IP address of the IB-LITE Module fitted in the controller you want to reach, access code

- You will see the Control window and you can continue with configuration of setpoints, inputs, outputs etc.

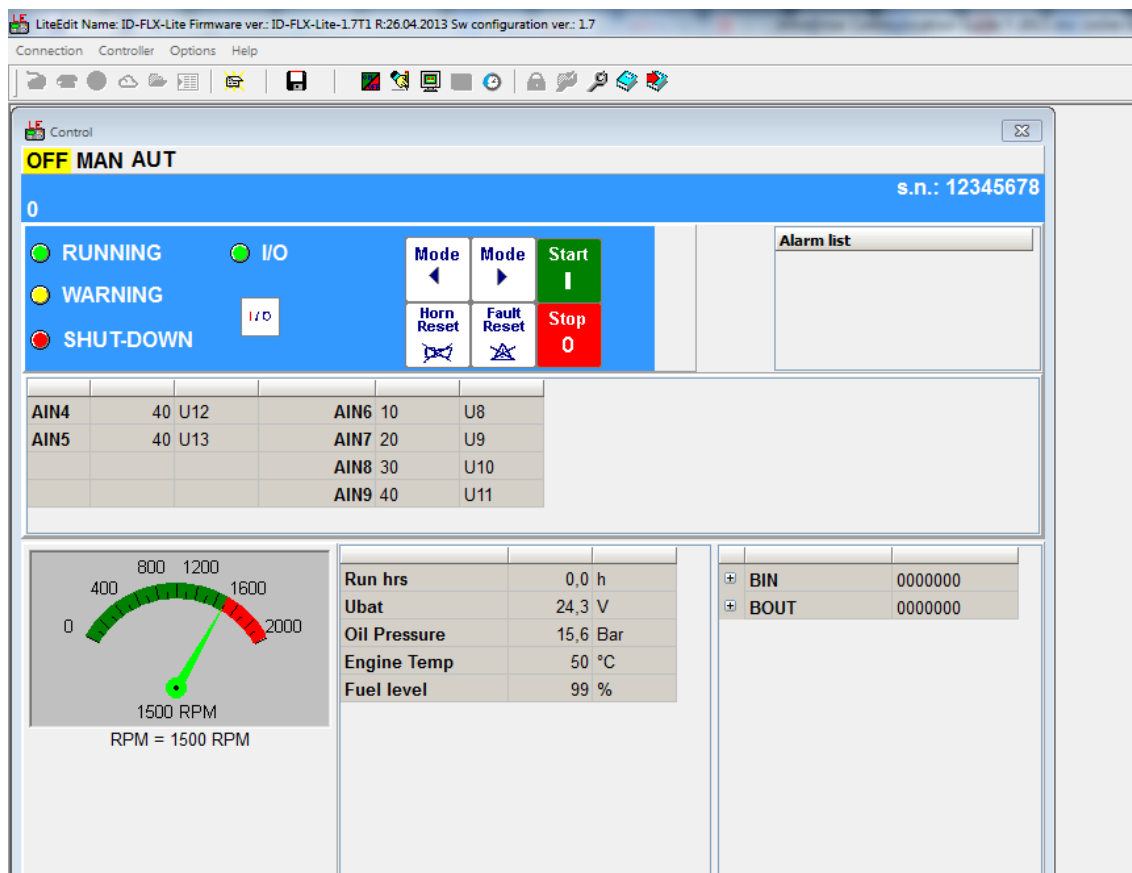


Image 2.2 LiteEdit control window

Note: For detail description of LiteEdit and IntelliMonitor PC tools see the LiteEdit Reference Guide, IntelliMonitor Reference Guide and IntelliDrive Communication Guide

2.3.2 Open connection from web browser

It is possible to connect from a web browser to IntelliDrive Marine controllers, mounted with IB-Lite module (or IB-NT with specific conditions) and connected to internet.

- Open web browser
- Enter IP address from controller **Comms Settings: IBLite IP Addr**
- Access verification page appears

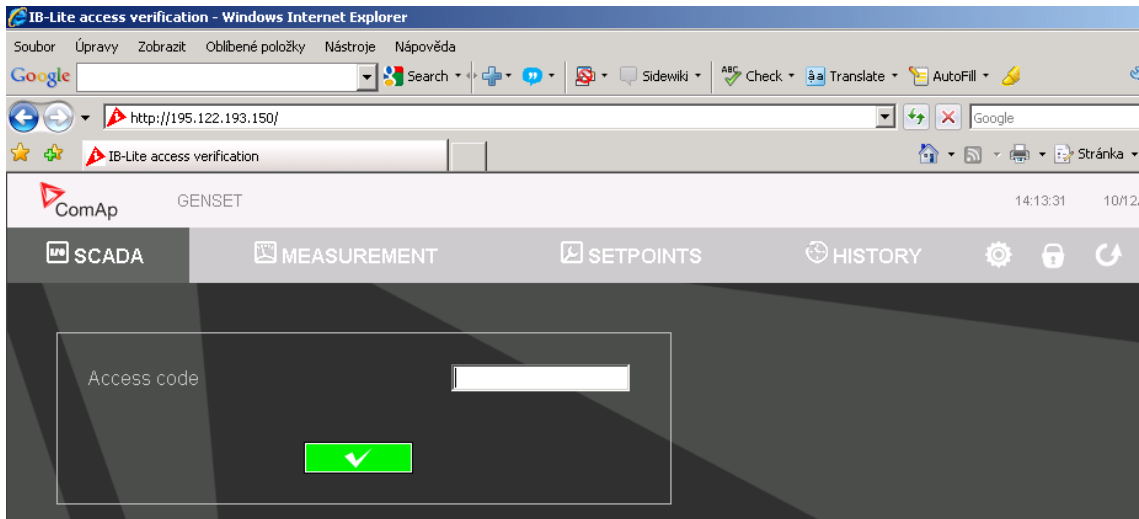


Image 2.3 Access verification page

4. Enter access code and Scada page appears

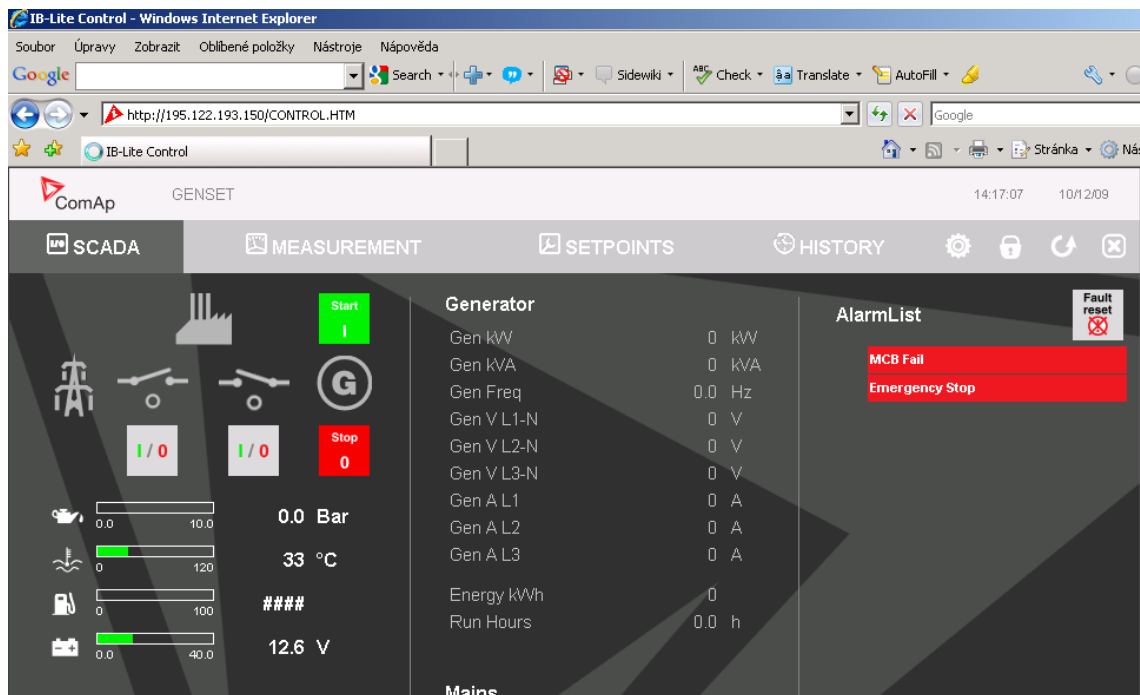


Image 2.4 Scada page

Note: You can try the WebServer from ComAp webpage. The access code is 0.

Note: WebSupervisor is possible to use as a control and monitor tool. For access is necessary to be registered. Connection setting and other information you can find in the WebSupervisor Reference Guide.

2.3.3 Open connection from WinScope

WinScope is powerful PC tool for observation of controller's states and measurements.

1. Go to menu **Connection** → **Open connection...** and select the type of connection you desire in Open connection window (Inteli controllers).


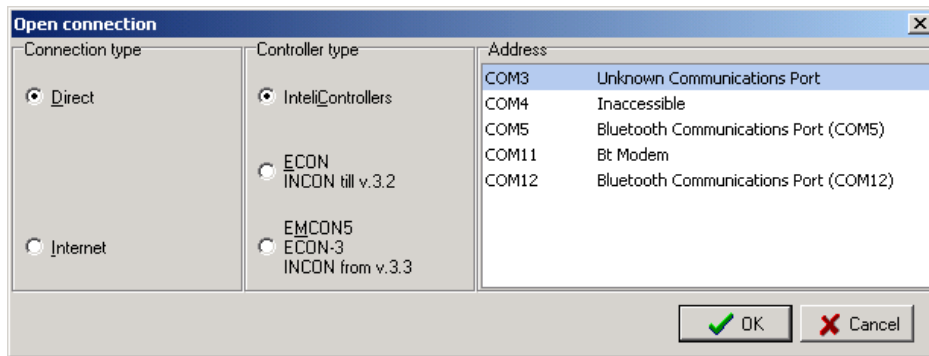


Image 2.5 WinScope - open connection window

2. Proceed with selection of channels etc. according to WinScope Reference Guide

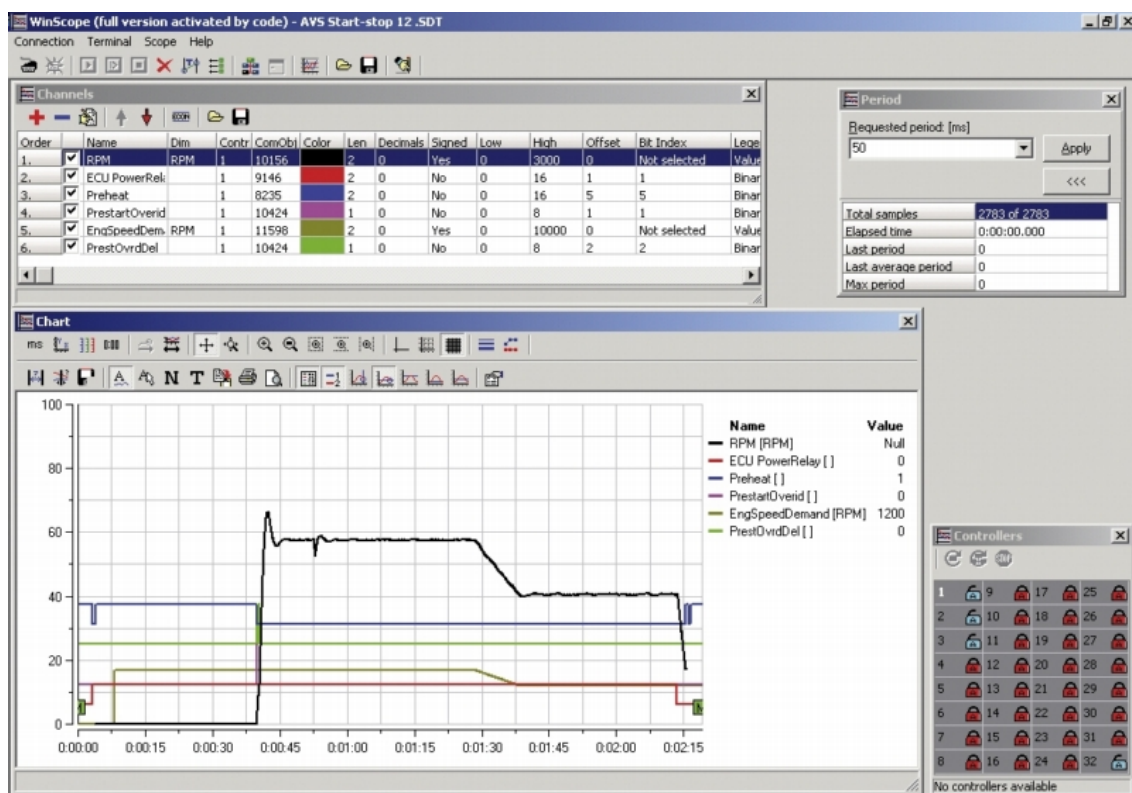

3 Applications overview

3.1 Single applications 15

6 back to Table of contents

3.1 Single applications

Basic wiring scheme for single engine, all engine data are transferred from ECU via CAN J1939 interface in example below.

Note: The extension IGL-RA15 modules can be connected to CAN bus together with ECU.

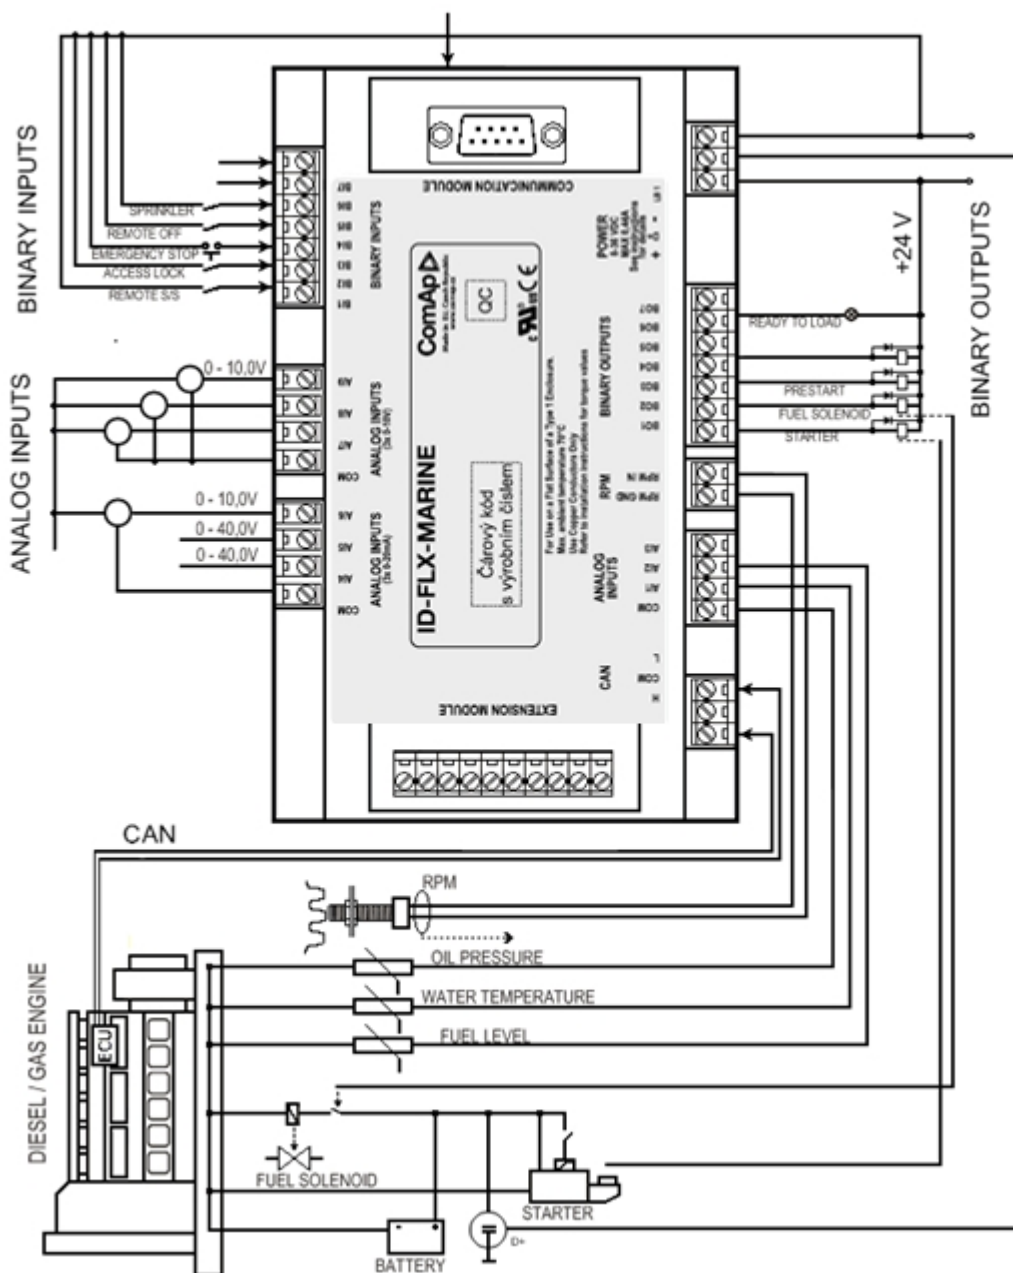


Image 3.1 Application description

4 Installation and wiring

4.1 Putting it into operation	16
4.2 Mounting	28
4.3 Package contents	28
4.4 Terminal diagram and dimension	29
4.5 Extension plug-in modules	31
4.6 Communication modules	35
4.7 Remote modules	39
4.8 Intel RPU	41
6 back to Table of contents	

4.1 Putting it into operation

4.1.1 How to install

To ensure proper function:

Wiring for binary inputs and analog inputs must not be run with power cables.

Analog and binary inputs should use shielded cables, especially when length >3m.

Note: During the configuration of controller or setpoints changes is required a password to the controller. The default password from ComAp is "0".

Grounding

To ensure proper function:

Use cable min. 2,5mm².

Brass M4x10 screw with star washer securing ring type grounding terminal shall be used.

The negative "-" terminal of the battery has to be properly grounded.

Switchboard and engine has to be grounded in common spot.

Use cable as short as possible to the grounding point.

Wiring

Tightening torque, allowable wire size and type, for the Field-Wiring Terminals:

Based on terminal type PA256:



Specified tightening torque 0.5Nm (4.4 In-lb) 2EDGK:



Specified tightening torque 0.4Nm (3.5 In-lb)

- ▶ For field type terminals:
 - Use only diameter 2.0-0.5mm (12-26AWG) conductor, rated for 75°C minimum.
- ▶ For Generator Voltage terminals
 - Use only diameter 2.0-0.5mm (12-26AWG) conductor, rated for 90°C minimum.
 - Use copper conductors only.

Power supply

Use minimally power supply cable of 1.5 mm².

IMPORTANT: Maximum continuous DC power supply voltage is 36VDC.


IMPORTANT: Maximum allowable DC power supply voltage is 39VDC.

The IntelliDrive Marine power supply terminals are protected against large pulse power disturbances. When there is a potential risk the controller being subjected to conditions outside its capabilities, an outside protection device should be used.

Note: The IntelliDrive Marine controller should be grounded properly in order to protect against lightning strikes!! The maximum allowable current through the controller's negative terminal is 4A (this is dependent on binary output load).

For the connections with 12VDC power supply, the IntelliDrive Marine includes internal capacitors that allow the controller to continue operation during cranking if the battery voltage dip occurs. If the voltage before dip is 12V, after 150ms the voltage recovers to 7V, the controller continues operating. During this voltage dip the controller screen backlight can turn off and on but the controller keeps operating.

It is possible to further support the controller by connecting the external capacitor or I-LBA module.

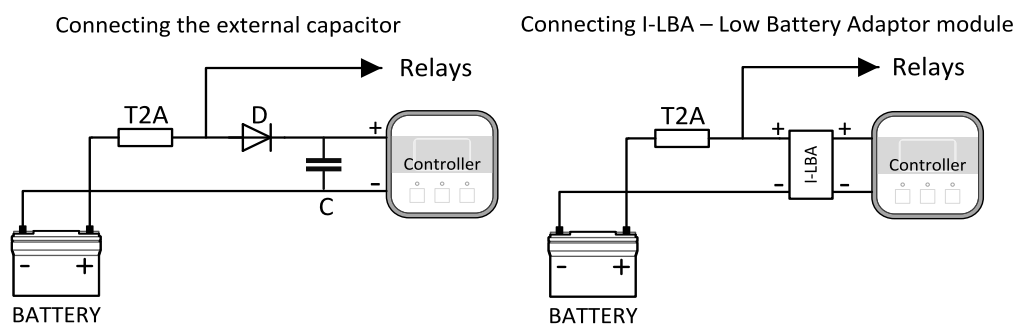

The capacitor size depends on required time. It shall be approximately thousands of uF (microFarads). The capacitor size should be 5000 uF to with stand 150 ms voltage dip under following conditions:

Voltage before dip is 12 V, after 150 ms the voltage recovers to minimum allowed voltage i.e. 7V

The I-LBA module ensures minimally 350 ms voltage dip under following conditions:


RS232 and other plug-in module is connected. Voltage before dip is 12 V and after 350 ms the voltage recovers to minimum allowed voltage 5 V. The I-LBA enables controller operation from 5 V (for 10 to 30 sec). The wiring resistance from battery should be up to 0.1 Ohm for I-LBA proper function.

Power supply fusing

A 1 A fuse should be connected in-line with the battery positive terminal to the controller and modules.


These items should never be connected directly to the starting battery.

Fuse value and type depends on number of connected devices and wire length. Recommended fuse (not fast) type - T1A. Not fast due to internal capacitors charging during power up.

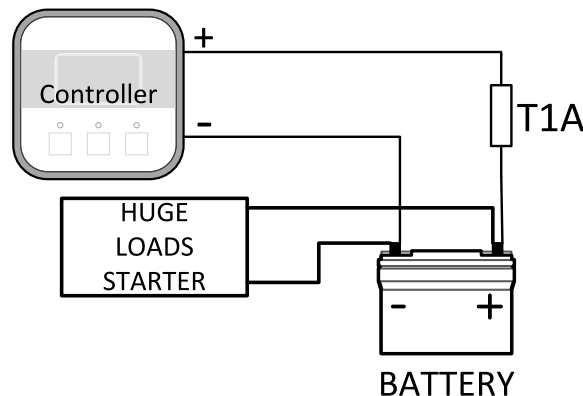

Binary output protections

Do not connect binary outputs directly to DC relays without protection diodes, even if they are not connected directly to controller outputs.

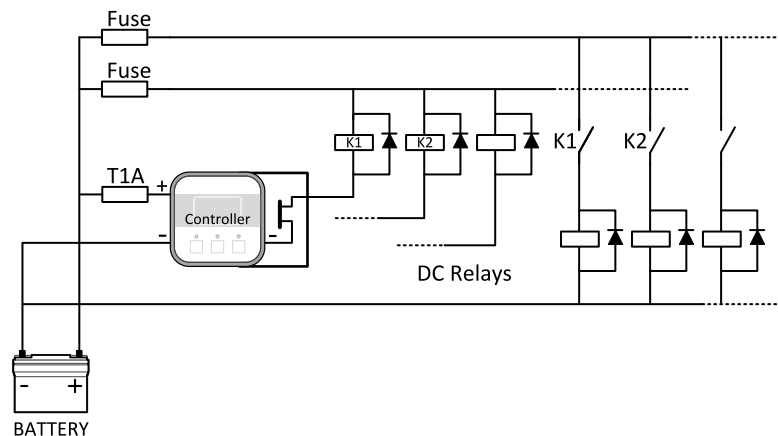

Magnetic pick-up


To ensure proper function:

Use a shielded cable

Be aware of interference signal from Speed governor, if one speed pick up is used.

If engine will not start:

- ▶ Check ground connection from pick-up to controllers, eventually disconnect ground connection to one of them
- ▶ Galvanic separate IntelliDrive Marine RPM input using ComAp separation transformer RPM-ISO (1:1)
- ▶ Use separate pick-up for Speed governor and IntelliDrive Marine

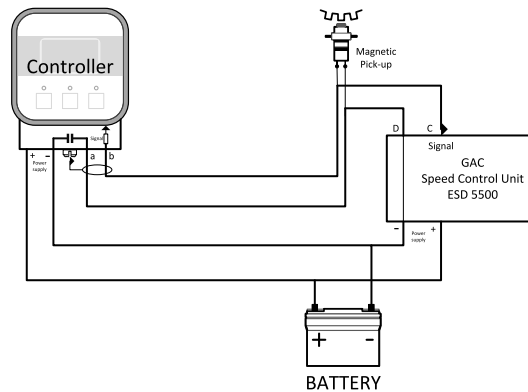

Note: If RPM > 2 then the controller is in the state Not ready and the engine will not be allowed to start.

4.1.2 Analog inputs

On the IntelliDrive Marine controller nine analog inputs are available. See the two tables here below with specific characteristics.

All properties mentioned here can be modified by LiteEdit PC tool only, in the window Modify


Table of controller analog inputs

Input	Range	Default use	Configurability of default use
AIN1	0 - 2.4 kΩ	Oil pressure	No
AIN2	0 - 2.4 kΩ	Engine temperature	Yes
AIN3	0 - 2.4 kΩ	Fuel level	Yes
AIN4	0 - 10 V	Not used	Yes
AIN5	0 - 10 V	Not used	Yes
AIN6	0 - 10 V	Not used	Yes
AIN7	0 -20 mA	Not used	Yes
AIN8	0 -20 mA	Not used	Yes
AIN9	0 -20 mA	Not used	Yes


Note: The nominal range of Analog inputs measuring resistivity is 0- 2,4 kOhm, nevertheless the input is able to measure up to 15 kOhm, but with lower precision.

Note: When Engine Control Unit is connected, it is possible to read IntelliDrive Marine Analog inputs values AIN1, 2, 3 from CAN bus (J1939).

 Table of analog inputs options

LiteEdit	Modify	Possibility
Type	Not used Alarm Monitoring	Analog input is not used Analog input is used for monitoring and protection Analog input is used only for monitoring
Name	... text Name in history	Up to 14 ASCII characters Up to 4 ASCII characters for the name used in history records
Config	Analog Binary Tri state ECU	Analog measuring in specified range. Binary: open/close - threshold 750 Ω (AIN1–AIN3), 2 VDC (AIN4–AIN6) or 7 mA (AIN7–AIN9) Three (Triple)-state: open/close - threshold 750 Ω (only AIN1-AIN3), failure <10 Ω or > 2400 Ω Only for AIN1, 2 values are read from ECU unit
Alarm properties	Direction	Under limit Under step. Sensor fail does not activate protection. Over limit Overstep. Sensor fail does not activate protection. UnderLimit+FIs Under step and Sensor fail activates protection. OverLimit+FIs Overstep and Sensor fail activates protection. Window prot. Combination of Under and Over protection at the same analog input
	Type	Sensor fail Warning Wm+Sd CoolDown
	Engine running only	Check box: Alarms are valid only for running engines, if box is checked
Sensor	Sensor name 	... text Resolution: number of decimal points Dimension: bar, %, °C, etc. Table and graph: customize curves
Contact type	NC NO	Valid only for binary and three-state inputs Valid only for binary and three-state inputs

User curves "Points" are adjustable in LiteEdit PC tool.

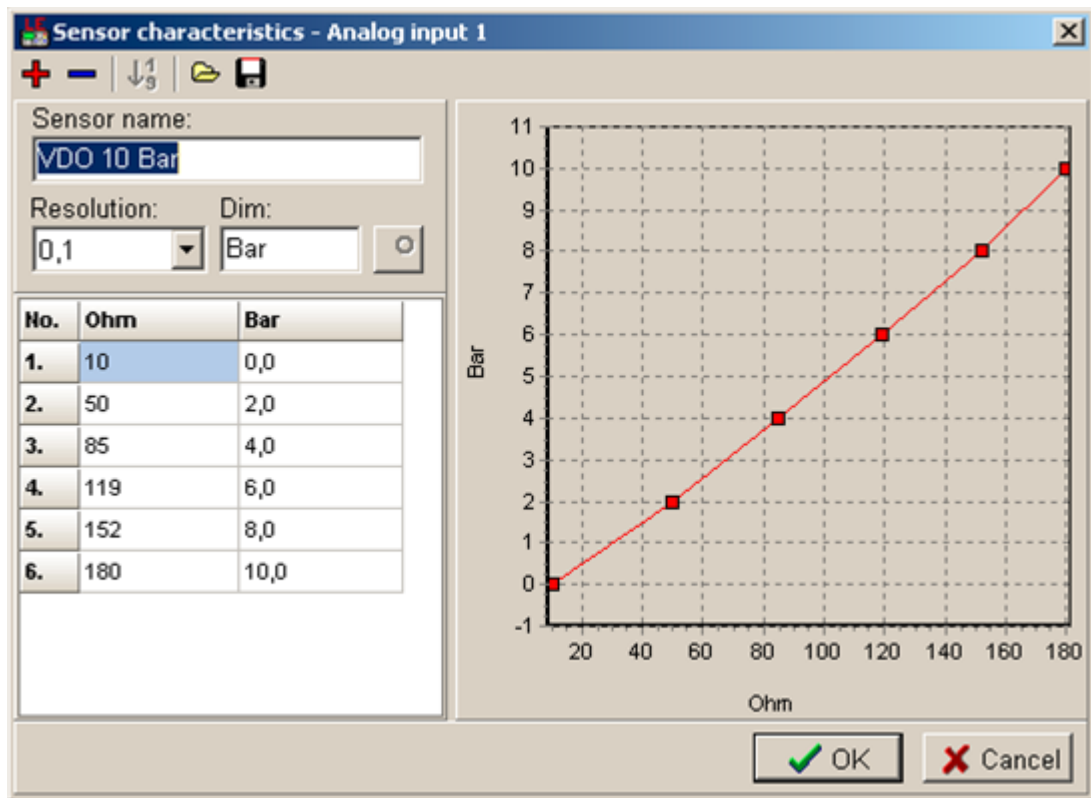

Analog inputs 1, 2 and 3 have separate set points for two levels alarm setting and delay for activation of alarm. Analog input 4-9 have special „window“ protection. It is possible to adjust Low and High level with alarm setting Wm and Sd for each of level. Two delay setpoints are adjustable for Low and High level. (See Practical example below)

Window protection is necessary to adjust in **Modify->Alarm properties->Direction**.

Analog input alarm levels and delay adjust in **Engine protect** group of Setpoints.

Note: In Alarm list and History is displayed only Wm and Sd for matching analog input. There isn't visible direction of protection Low or High.

Practical example of - Class C - Window protection :

Pressure sensor is configured on the analog input 6 and is placed on the intake pipe. There are needed two level protection. Low level protection against suction from the tank without liquid, that could destroy pump. High level protection against high liquid pressure in pipe, which could destroy filters against impurity installed between tank and pump.

AIN6 LowWm = 2bar

AIN6 LowSd = 1bar


AIN6 LowDel = 5s

AIN6 HighWm = 4bar

AIN6 HighSd = 5bar


AIN6 HighDel = 2s

Note: Class C protection is working and LowWm, LowSd, LowDel, HiWm, HiSd, HiDel setpoints are visible only when corresponding AIN is configured in Modify->Alarm properties-> Direction-> Window prot.

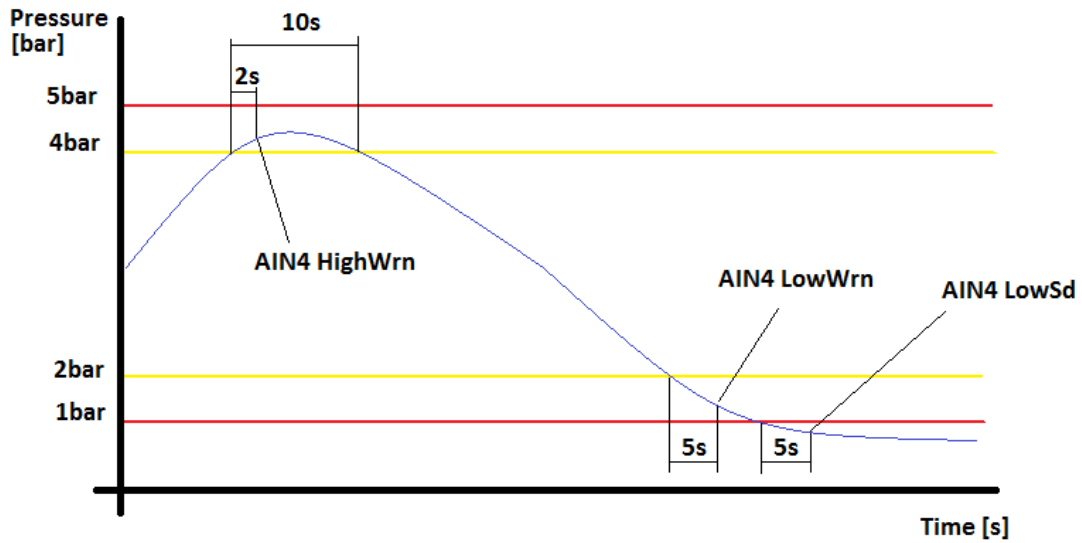

Connection of IntelliDrive Marine analog inputs

Standard connection of three resistive sensors to analog inputs.

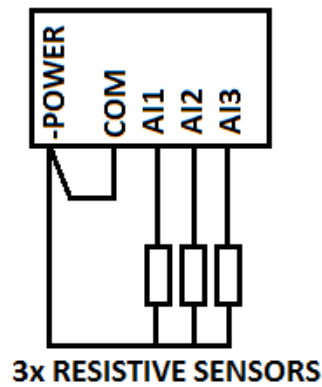


Mixed connection of IntelliDrive Marine analog inputs:

AIN1 – binary input

AIN2 – three state input

AIN3 – analog resistive input

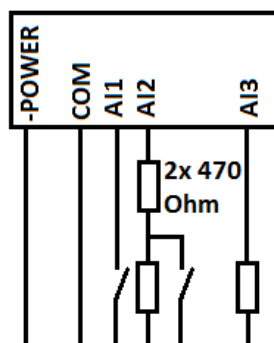

Analog inputs are designed for resistive sensors with resistance in range of 0Ω to 2,4kΩ.

To ensure a proper function use shielded cables, especially for length over >3m.

As binary input

Open, close state are detected, threshold level is 750Ω.

As three state input

Open, close and failure state are detected. Threshold level is 750Ω, failure is detected when circuit resistance is <10Ω or > 2400Ω.

Unused analog inputs

Configure Type = Not used

Current output transducers

InteliDrive Marine analog inputs are mainly designed for resistor sensors.

In special case transducers to 4-20mA output can be used for oil measuring (10.0Bar or 6.0Bar). Use predefined 4-20mA/100 or 4-20mA/60 sensors.

This method reduces the input resolution by less than 50%. Some types of transducers are not suitable for connection to InteliDrive Marine analog inputs because of influencing by InteliDrive Marine analog input.

Default current sensor characteristic

Use with external resistor 120 ohms

	4-20mA/100		0-20mA/100		0-20mA/(-20 - +120°C)
Ohm	Converted	Note 1	Note 2	Note 3	Note 4
120			0 mA	0%	-20°C
170	0	0%	4 mA	20%	8°C
200	13				22°C
230	25	25%	8 mA	40%	36°C
280	38				50°C
330	50	50%	12 mA	60%	64°C
390	63				78°C
460	75	75%	16 mA	80%	92°C
560	88				106°C
690	100	100%	20 mA	100%	120°C

Note 1 - % range for 4-20 mA input

Note 2 - range 0-20 mA

Note 3 - % range for 0-20 mA input

Note 4 - characteristic 0-20 mA / (-20 - +120 °C)

Analog input extension measurement (0 - 70V, 4 - 20mA)

On each analog input there is a possibility to connect voltage or current output sensor instead of resistive one. Recommended wiring connection for these measurements are bellow.

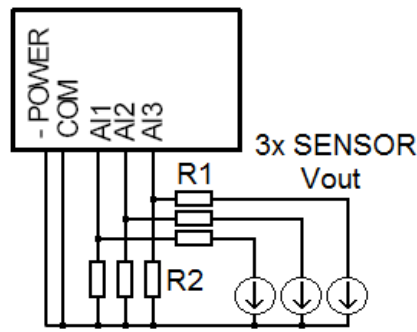


Image 4.1 Voltage output sensor - connection

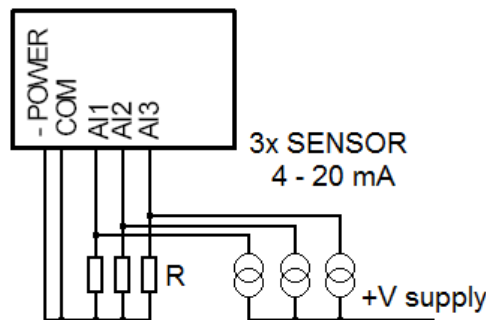


Image 4.2 Current output sensor - connection

Analog input	R1	R2	Curve
0 - 10V	150Ω [1%,0,5W]	100Ω [1%,0,5W]	AI 0-10V.CRV
0 - 30V	680Ω [5%,2W]	100Ω [1%,0,5W]	AI 0-30V.CRV
0 - 65V	1500Ω [5%,3W]	100Ω [1%,0,5W]	AI 0-65V.CRV
4 - 20mA	R = 160Ω [1%,0,5W]		AI 4-20mA.CRV

Table 4.1 Table with recommended values

IMPORTANT: Please note that external resistors disconnection, connection incorrect resistors or input voltage value during operation may cause an analog input destruction.

Practical example: VDO pressure sensor 0 – 6bar with linear voltage output 0 – 10V


Conversion table

Vout [V]	0	1	2	3	4	5	6	7	8	9	10
P [bar]	0	0,6	1,2	1,8	2,4	3	3,6	4,2	4,8	5,4	6

Modify one of analog input in LiteEdit configuration and load curve AI 0-10V.CRV


Then you can change resolution and measured value name witch is default displayed at V (volts).


For example if you have connected pressure sensor and his output voltage is 5V for pressure 3bar you can change value 'V' in column "Dim:" to 'Bar' and by sensor specification adjust all corresponding values in this column. In this case you can change the value at row 6. from 5 to 3

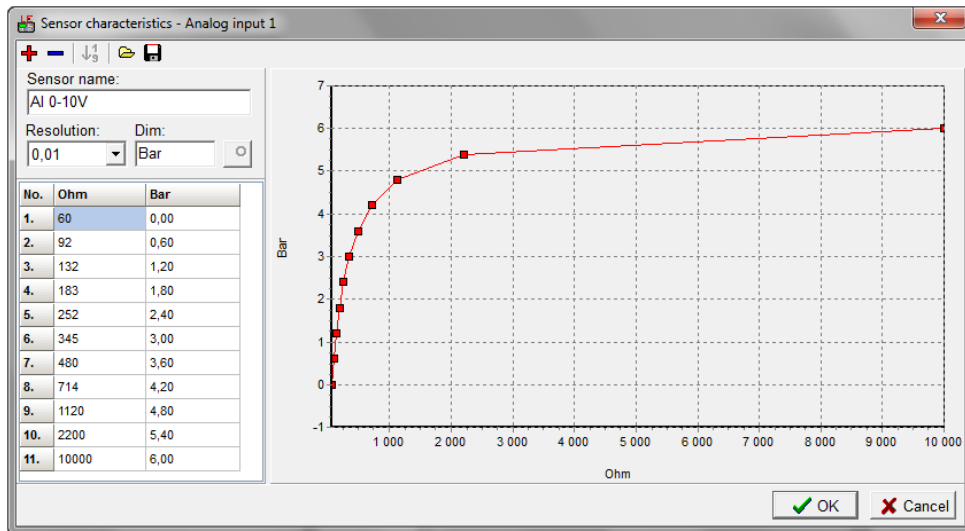

When you finish with adjusting the values click OK and Write to controller.

4.1.3 Binary inputs and outputs

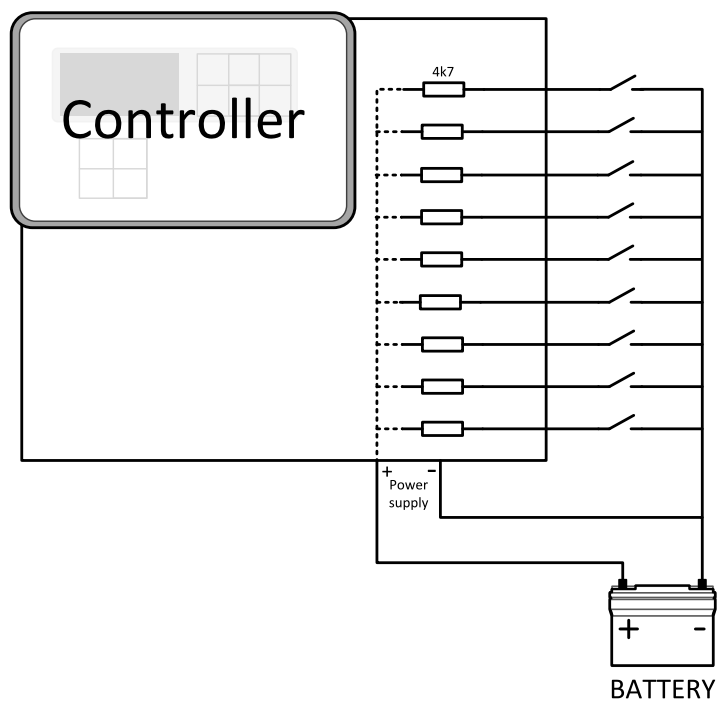

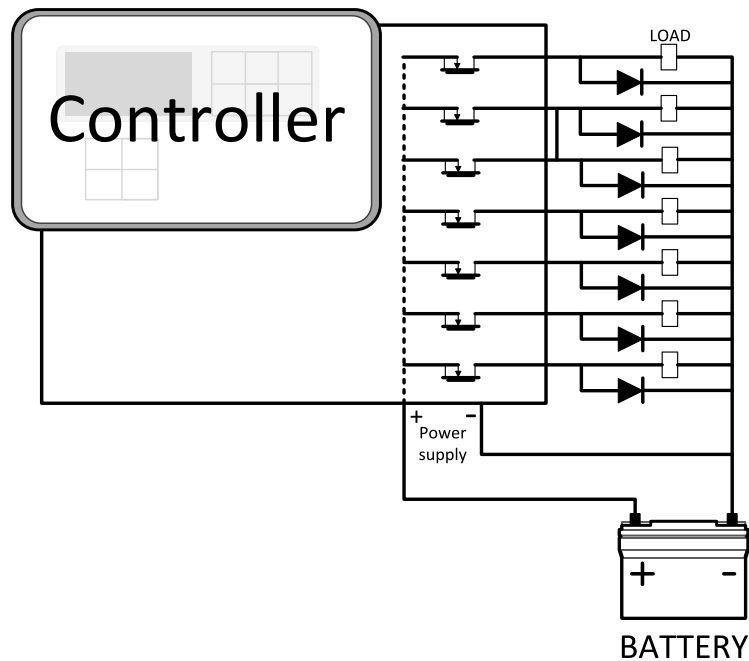







4.1.4 Analog outputs

First option is extension plug-in card IL-NT AOUT8. This card provides eight Pulse-With-Modulation (PWM) outputs. These are intended to drive VDO style analog gauges. This is to provide visual indication of typically ECU values without installing additional sensors on the engine. PWM signal emulates sensor which would be typically mounted on the engine.


Second option is extension plug-in card IL-NT-AIO. This card provides one current or voltage or PWM output. Any value from controller may be configured to the outputs. Use LiteEdit PC tool to configure corresponding sensor/gauge curve and value selection.

Default analog output curves

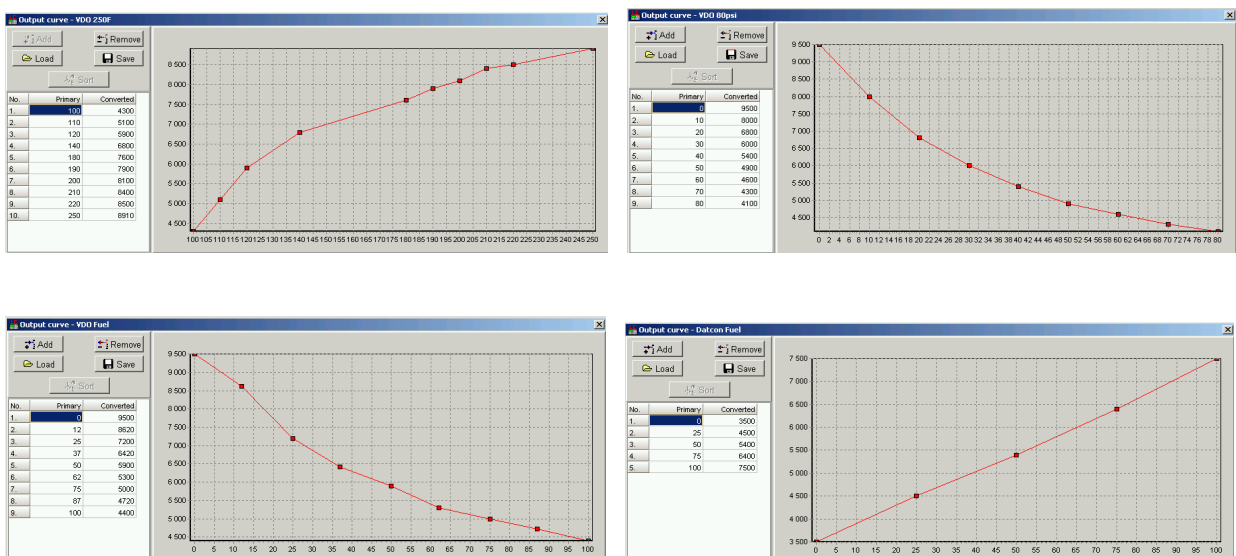

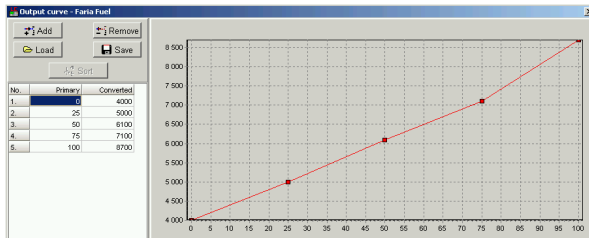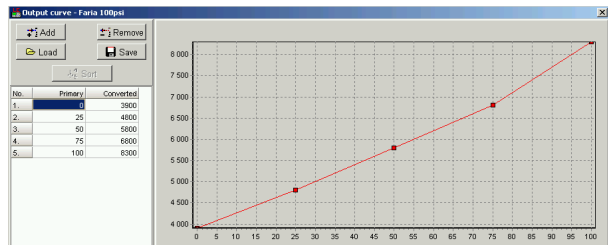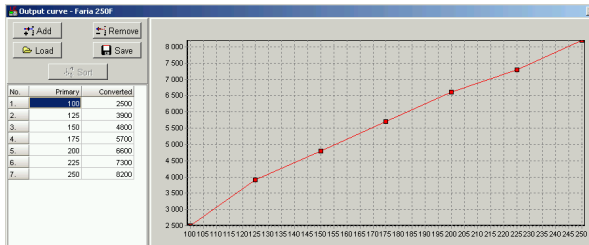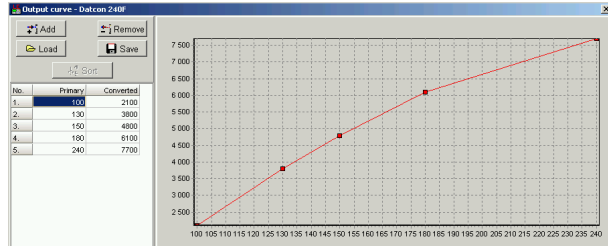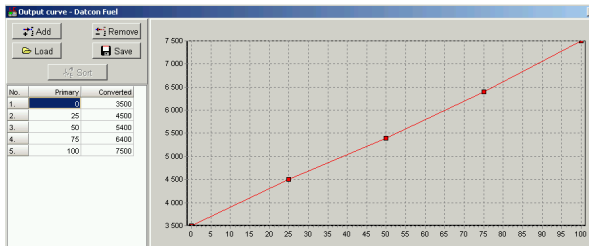

4.1.5 Remote modules - CAN bus connection

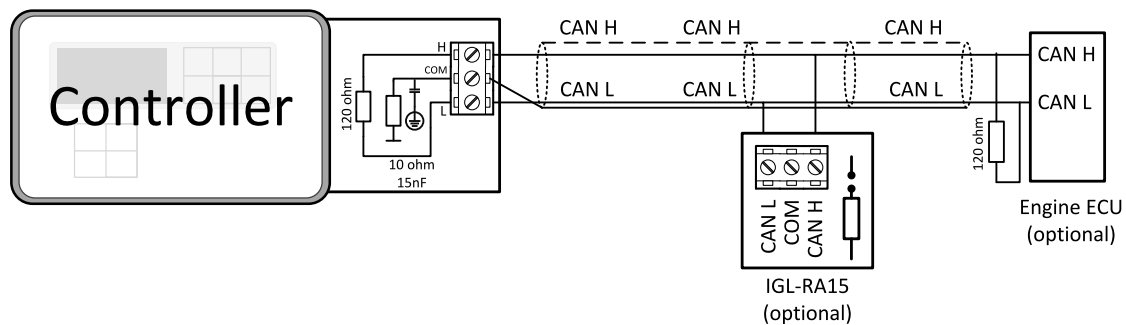

Connection rules

CAN bus line must be connected in series, from one unit to the next (no star, no cable stubs, no branches) both ends must be by the 120Ohm (internal or external) resistor terminated. Maximal CAN bus length is up to 200 meters.

For CAN data cables details see chapter Technical data - Communication interface.

CAN cable shielding is connected to IntelliDrive Marine COM terminal.

InteliDrive Marine contains internal fix 120Ohm resistor and must be located on the CAN bus end.

It is possible to connect only one IGL-RA15 to IntelliDrive Marine controller.



Use button in LiteEdit Modify window to activate CAN interface.

4.2 Mounting

The controller is used to be mounted onto the switchboard door. Requested cutout size is 172x112 mm. Use the screw holders delivered with the controller to fix the controller into the door as described on pictures below.

Recommended tightening torque is 0,15 – 0,2 Nm.



4.3 Package contents

InteliDrive Marine controller is delivered in the box as one set containing:

- ▶ ID-FLX-Lite controller programmed with default configuration
- ▶ 4x Fixing clips
- ▶ Complete connectors (female) set for controller wiring


4.3.1 Software package






ID-FLX-Marine is distributed as ID-FLX-Marine-x.y.iwe package and it is compatible with the PC tool LiteEdit x.y.z and ECU list-x.y, where x, y, z are numbers of software version. Find installation files on ComAp web. Version of published files on the webpage are compatible each other.

4.3.2 Components

Accessories	Description	Optional / Obligatory
ID-FLX-Marine	InteliDrive-Marine central unit	Obligatory
Communication plug-in		
IL-NT RS232	RS232 communication card	Optional plug-in
IL-NT 232/485	Combined communication card	Optional plug-in
IL-NT S-USB	USB communication card	Optional plug-in
IB-Lite	Ethernet/Internet interface	Optional plug-in
IL-NT-GPRS	GSM/GPRS modem	Optional plug-in
Extension plug-in		
IL-NT AOUT8	8 AOUT Gauge driver card	Optional plug-in
IL-NT AIO	4xAIN + 1x AOUT	Optional plug-in
IL-NT IO1	4xBIN + 4xAOUT	Optional plug-in
IL-NT BIO8	8x BIN or BOUT	Optional plug-in
External modules		
IL-NT RD	Remote display	Optional external
IGL-RA15	Remote annunciator	Optional external
IB-NT	Communication module (3G, Ethernet)	Optional external
I-RPU	Redundant Protection Unit	Optional external

4.4 Terminal diagram and dimension

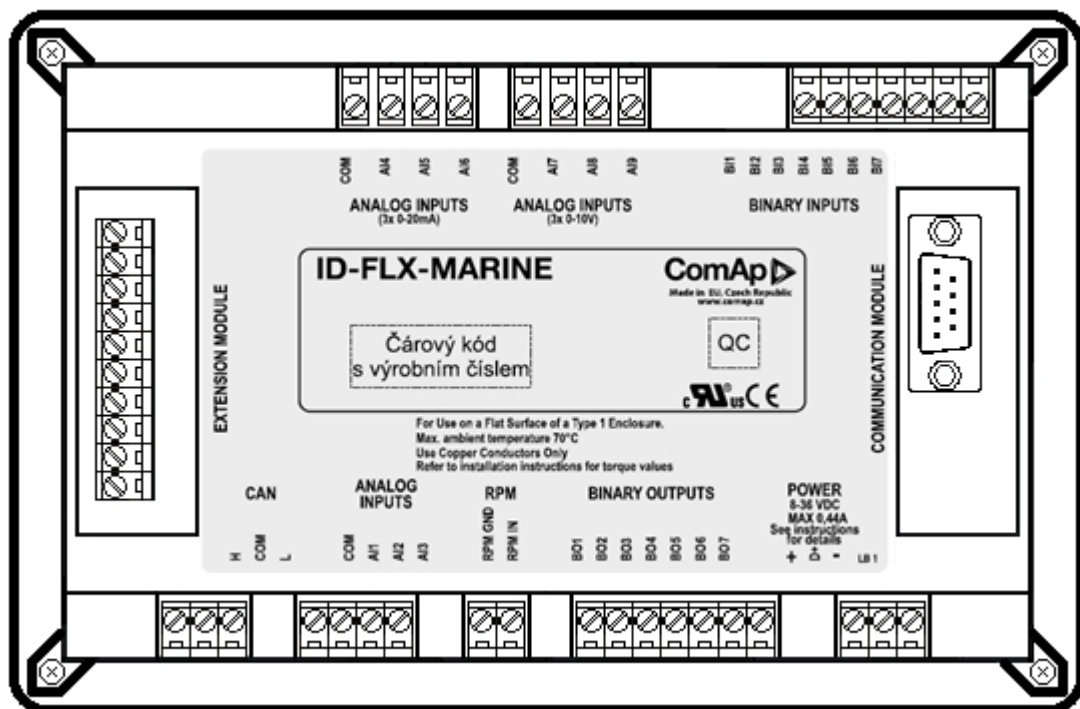

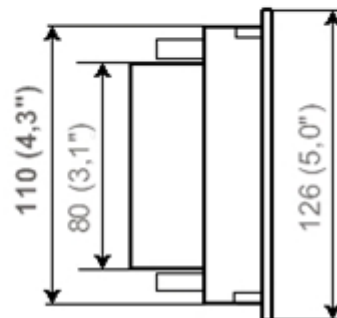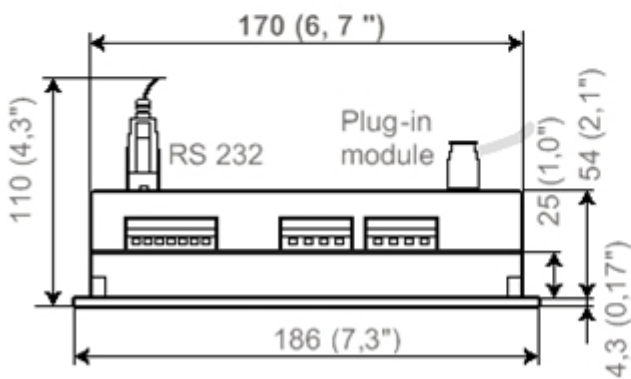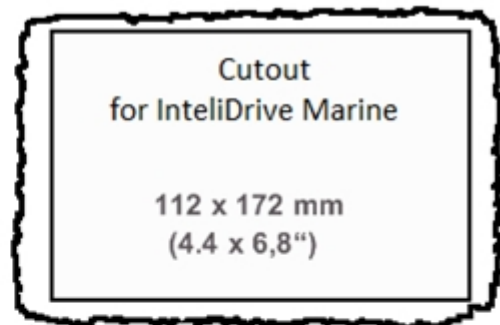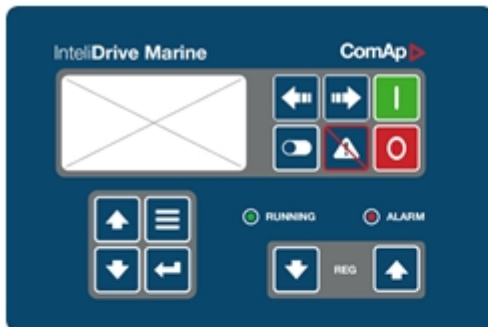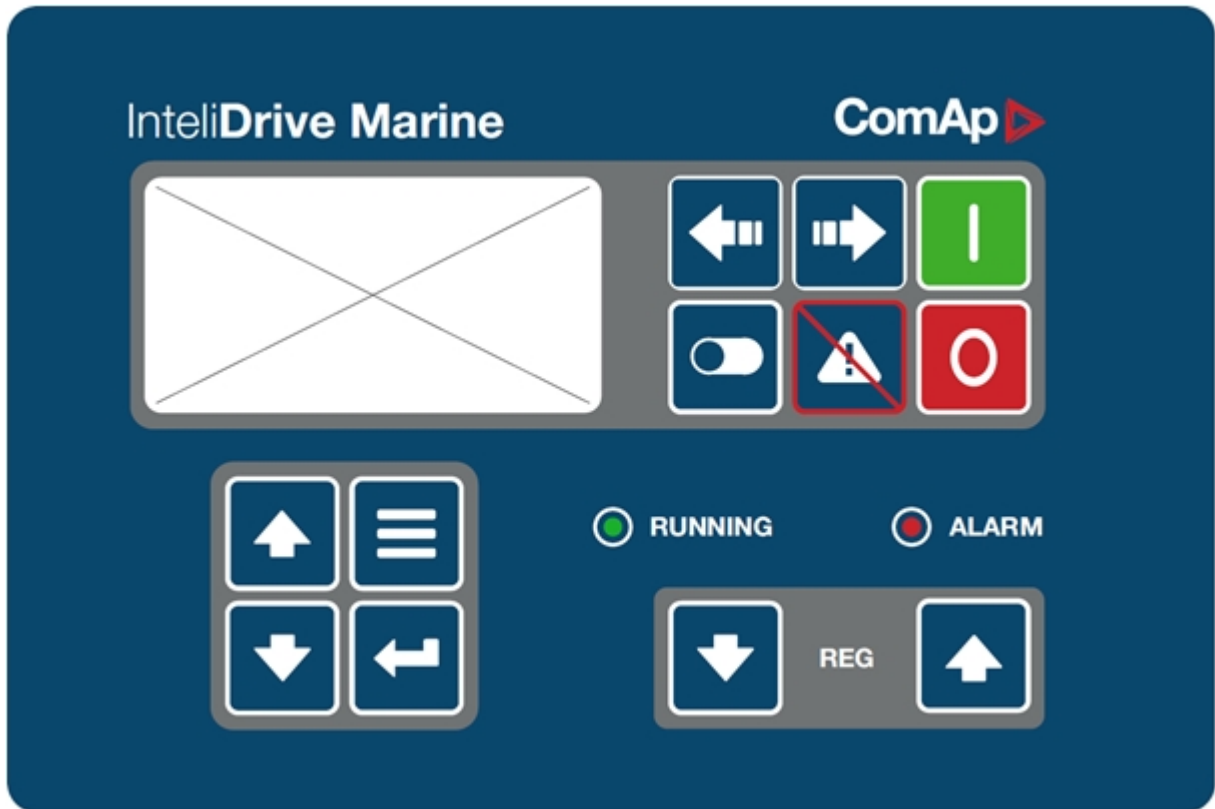


4.5 Extension plug-in modules

4.5.1 Extensions plug-in modules installation


To insert the module, you must open the cover first (use screwdriver to open) and then insert the module into slot. Once you have inserted it, the module will snap under plastic teeth. It is supposed to be installed permanently. Should you need to remove it, the safest way is to remove whole back cover and than remove module manually.




For configuration of extension plug-in modules go to LiteEdit and press  button in Modify configuration window.


4.5.2 IL-NT AOUT8

IL-NT AOUT8 is optional plug-in card. Through this card can the controller drive up to 8 VDO style industrial/automotive gauges. This is to provide visual indication of typically ECU values without installing additional sensors on the engine. PWM signal emulates sensor which would be typically mounted on the engine. Sensor/gauge curve and value are configured in LiteEdit PC tool. Any analog value from the controller may be configured to the outputs. All outputs operate as PWM signal at 1200Hz.

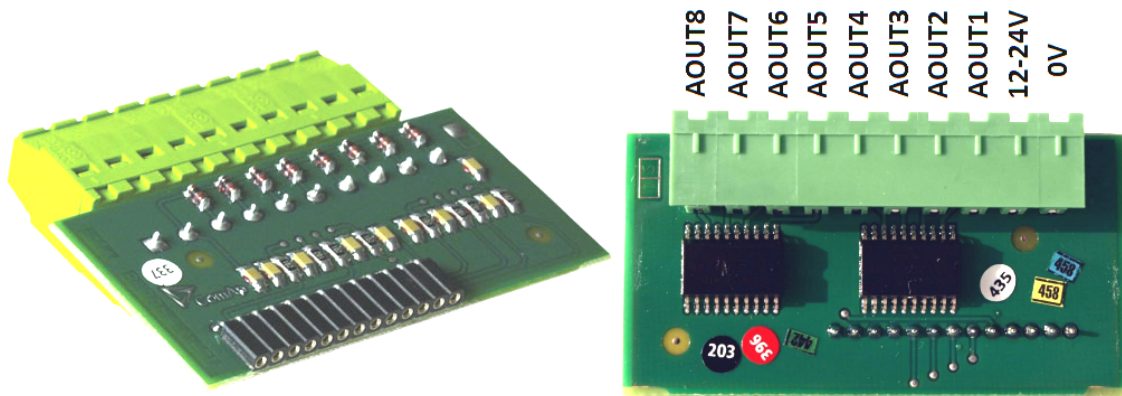


Examples of default analog output curves:

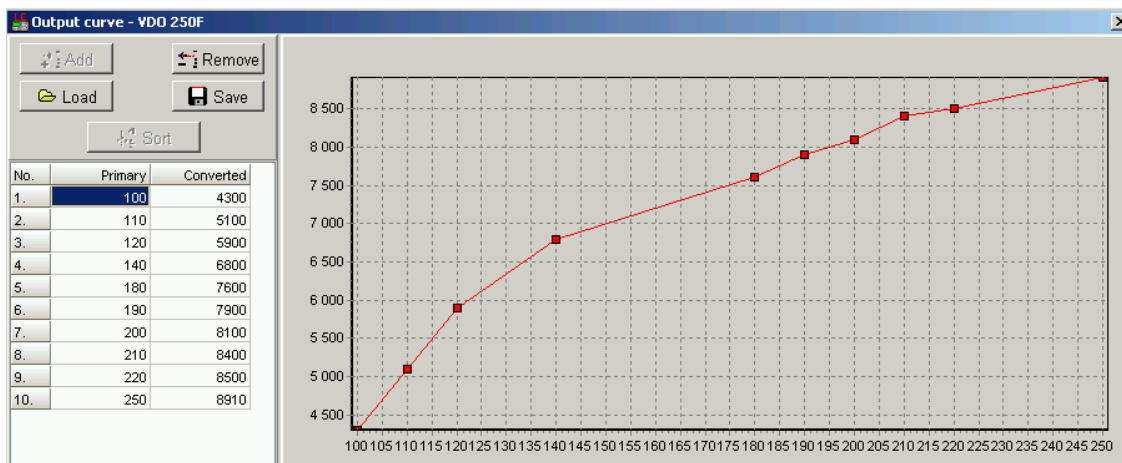

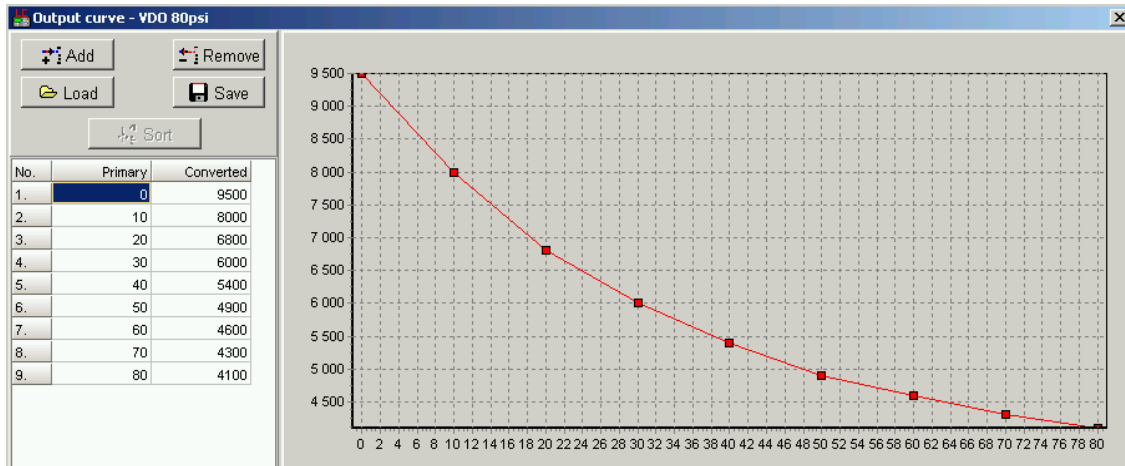


Example of wiring for Dacon gauges and IL-NT-AOUT8:

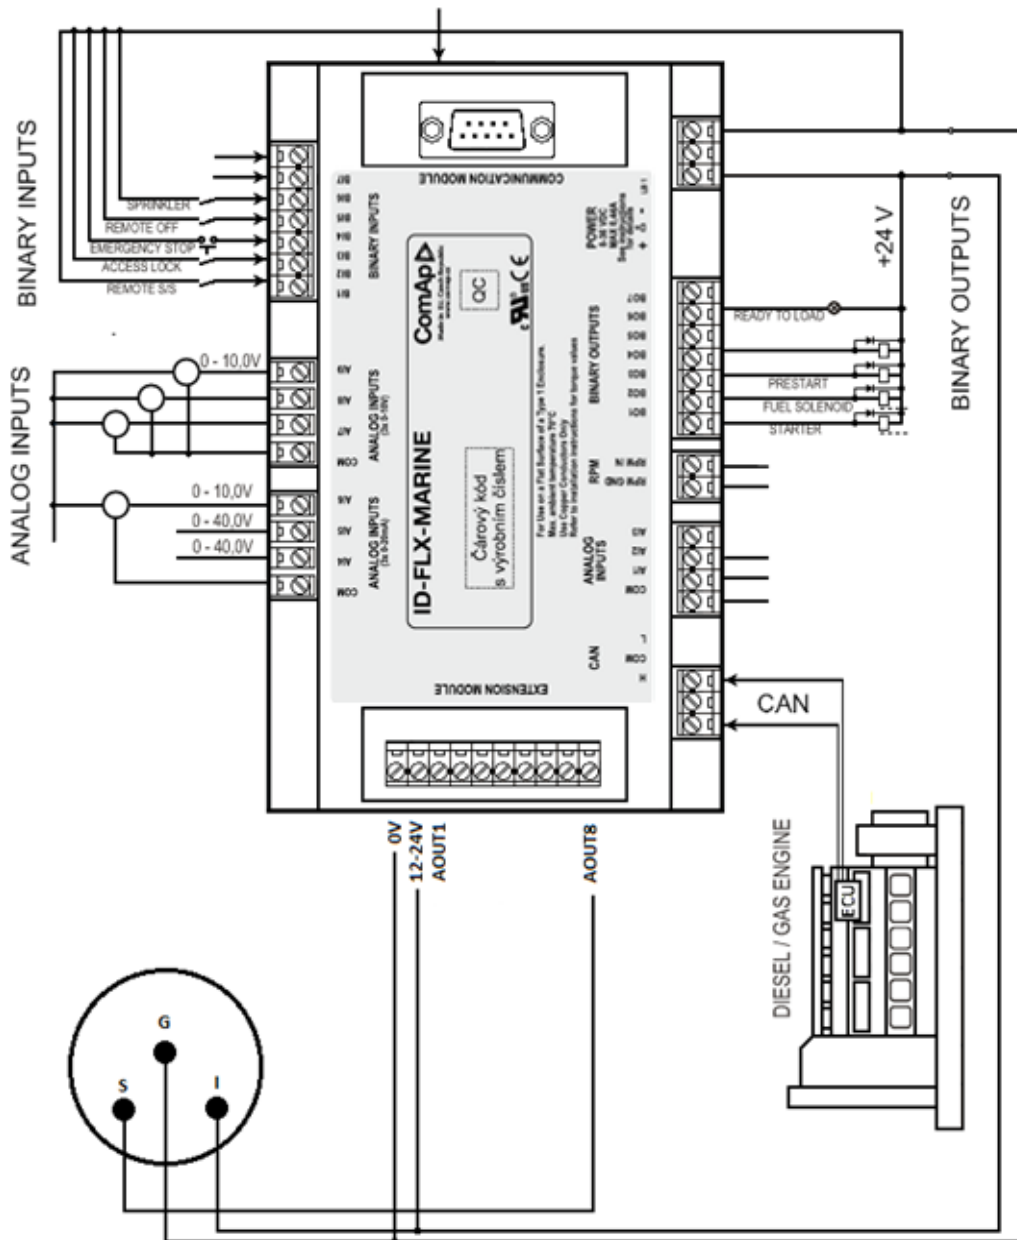


4.5.3 IL-NT AIO

IL-NT AIO is optional plug-in card. This card offers additional four analog inputs and one analog output. Analog inputs can be use for different types of sensor (resistive, current and voltage) and variable analog output, which can be used as PWM. Adjustment of extension plug-in modul is possible via LiteEdit too.

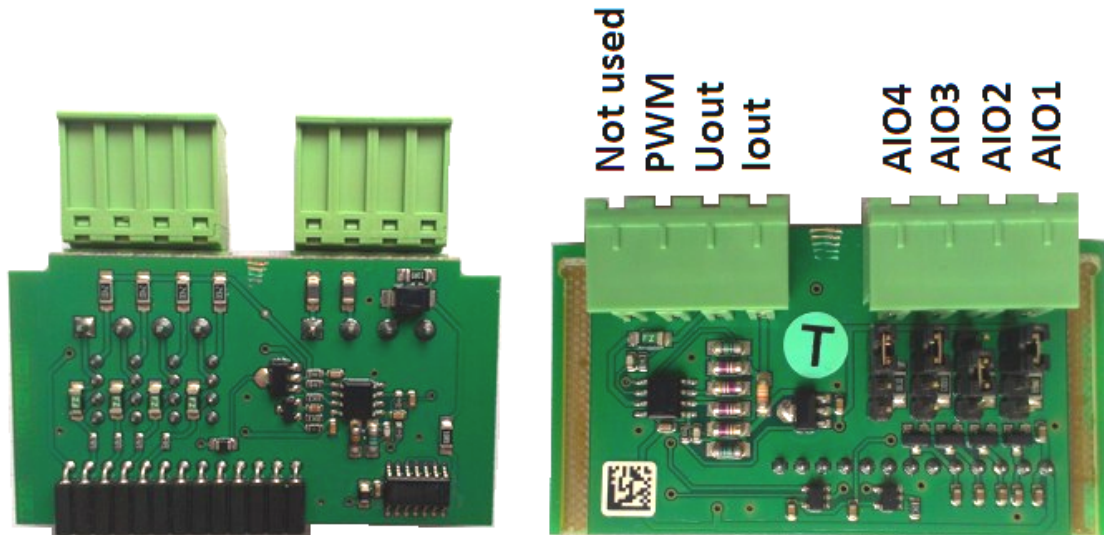


Type of analog input is selectable by jumper. Each analog input has own line of jumper position. The top position (closest to green conector on the pic above) is for resistive input, central position for voltage input and lowest position is for current input.

A11 - A14	2600 Ohm / 4V / 20 mA
Iout	0 - 20 mA (max 22mA) max 100 Ohm load
Uout	0 - 4,5V (max 10mA)
PWM	PWM 5V / 15mA / 500 Hz
Not used	Do not connect!

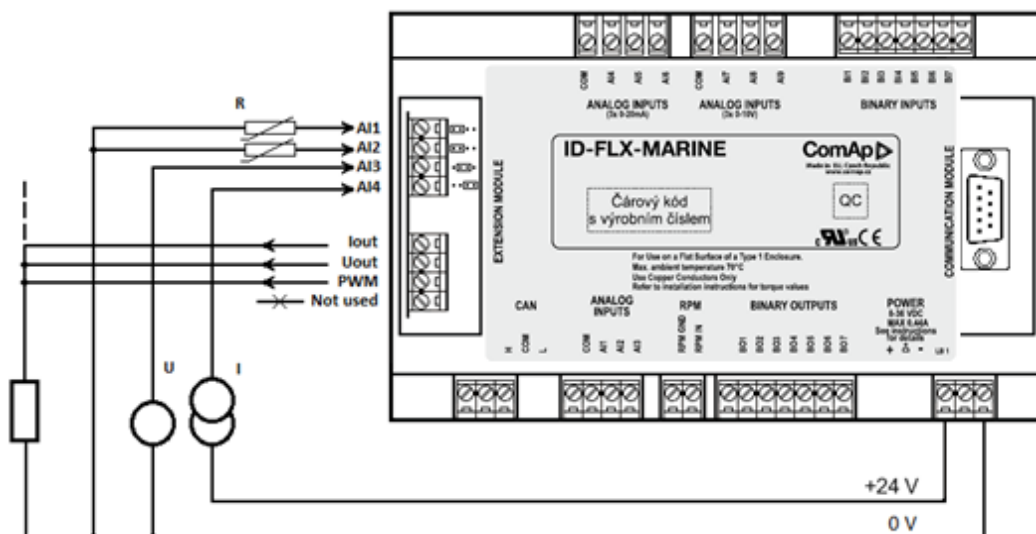


4.5.4 IL-NT IO1

IL-NT IO1 is optional plug-in card. Through this card controller can drive up to 4 proportional valves and to use 4 additional binary inputs. The 0V (GND) terminal is internally wired with battery minus internally, the 12-24V (+Ubat) terminal is wired to battery plus power supply of IntelliDrive Lite controller.

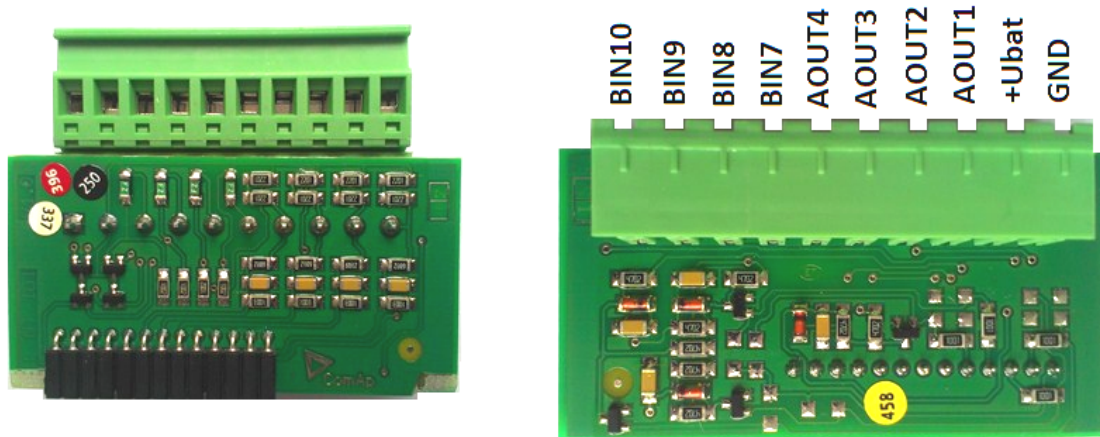



There should be, not more than 1V, lower voltage compare to adjusted % of +Ubat voltage.

Note: Analog output shorted to ground more than one second can damage the output circuit.

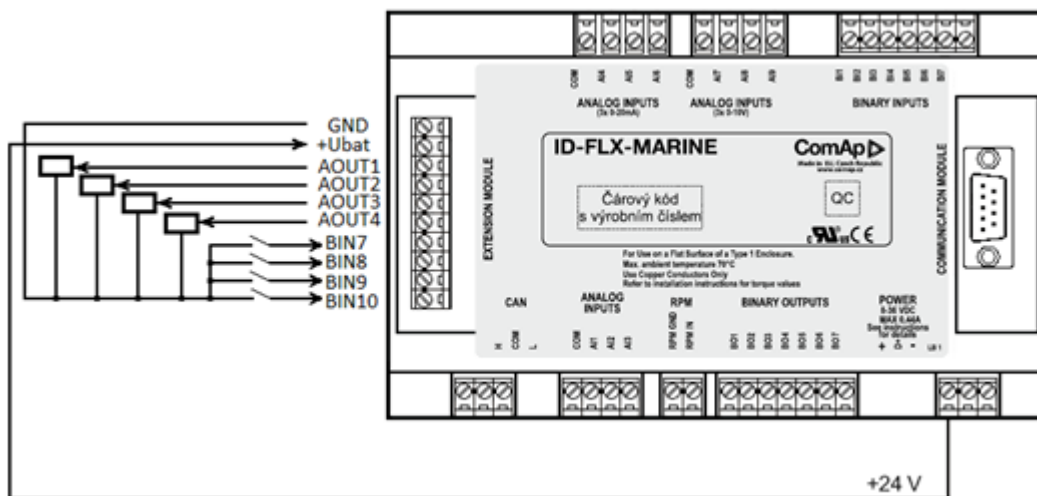

4.5.5 IL-NT BIO8


IL-NT BIO8 is optional plug-in card. Through this card controller can use up to 8 additional binary inputs or outputs. At least one Batt- terminal has to be connected to battery minus power supply of IntelliDrive controller, if at least one binary output is configured. In case more than 4 binary outputs are configured is necessary to connect both Batt- terminals.

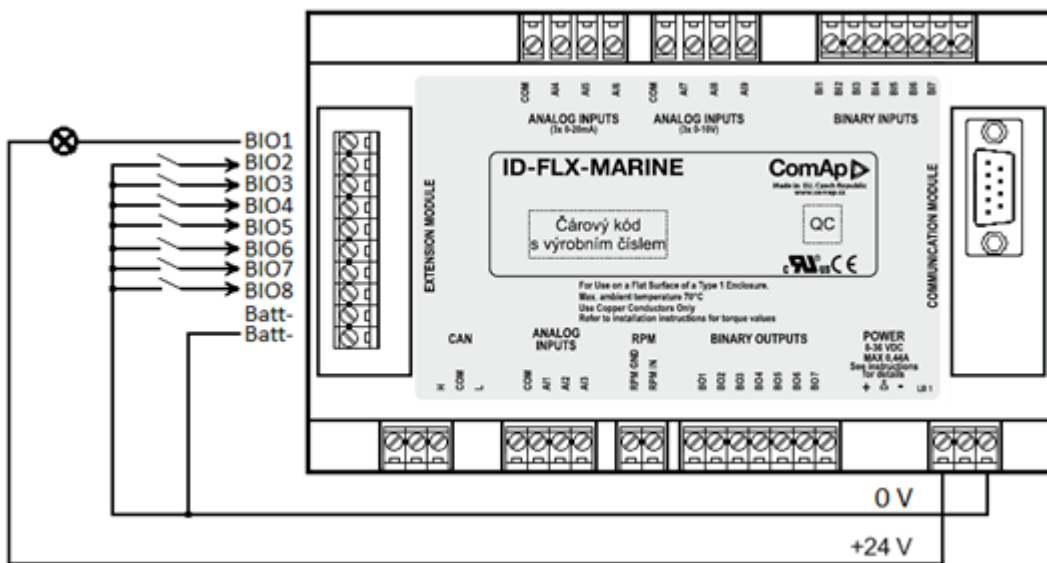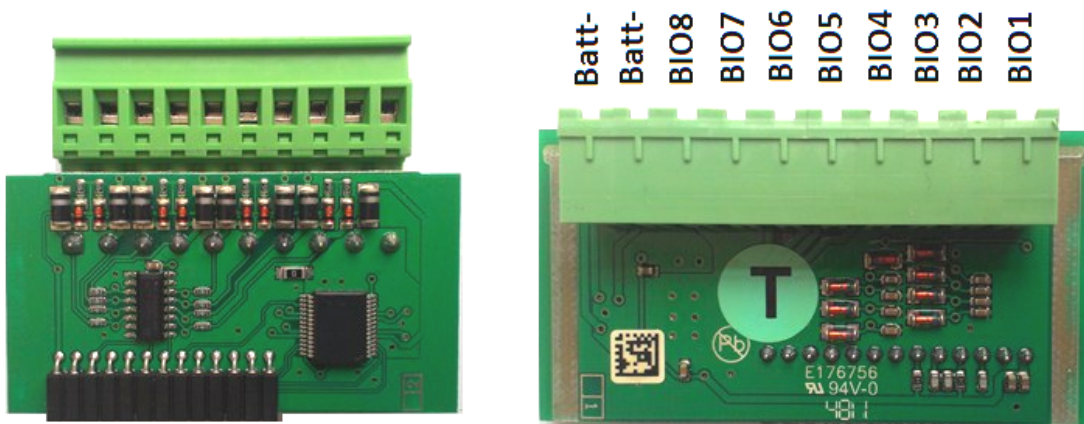

4.6 Communication modules

4.6.1 IL-NT RS232

IL-NT RS232 is optional plug-in card, which enables IntelliDrive Lite controller for RS232 serial communication. This is required for computer or ModBus connection. The card has to be inserted into the expansion “Communication module” slot back on the controller, similarly to extension modules.

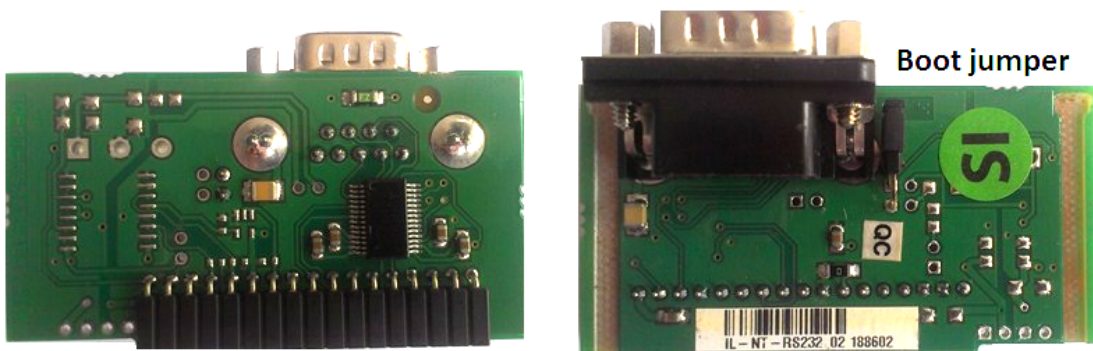


Note: Boot jumper programming – In case of interrupted programming or other software failure is possible to use the boot jumper programming to restore controller to working order. Connect the controller to PC, run LiteEdit and wait until connection bar at bottom turns red. Then run programming process via menu Controller -> Programming and cloning – Programming. Select correct firmware and confirm dialog. Then follow instructions in LiteEdit.

Note: Or follow video guide “Boot Jumper Programming” at www.comap-control.com

4.6.2 IL-NT RS232-485


IL-NT RS232-485 is optional plug-in card, which enables IntelliDrive Lite controller RS232 and RS485 serial communication. This is required for computer or Modbus connection. The IL-NT RS232-485 is a dual port module with RS232 and RS485 interfaces at independent COM channels. The RS232 is connected to COM1 and RS485 to COM2. Adjustment of communication type, baud rate etc. is via Comms Setting group of setpoint in LiteEdit or the controller screen.

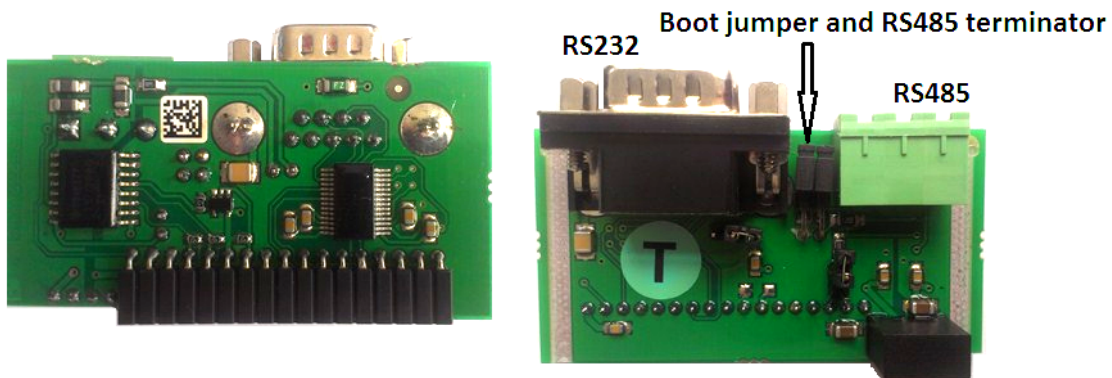

4.6.3 IL-NT S-USB

IL-NT S-USB is optional plug-in card to enable communication of IntelliDrive controller via USB port. This is required for computer or Modbus connection. This module contains USB slave port, which is connected internally to the COM1 of the controllers. It is designed as an easy removable service module.

This module requires a FTDI USB Serial converter driver installed in the PC. The driver creates a virtual serial port (COM) in the PC, which must be used in LiteEdit as communication port when a connection is being opened.

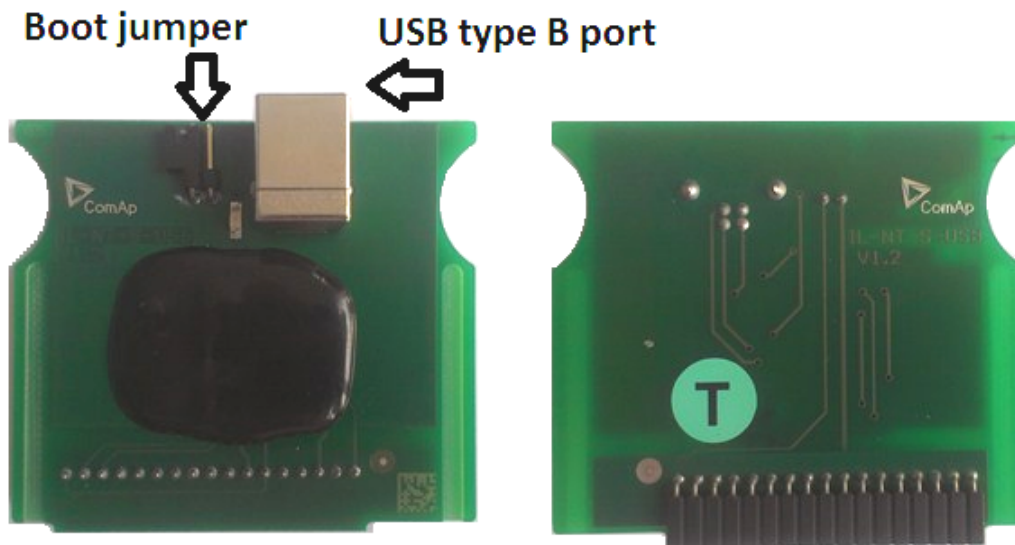

Note: The FTDI driver is installed together with LiteEdit.


Note: When the USB cable from the controller is plugged-in first time into different USB ports on the PC including USB hubs, it can be recognized as new hardware and the drivers are installed again with different number of the virtual serial port.

IMPORTANT: Use shielded USB cable only! (ComAp order code: USB-LINK CABLE 1.8m)

4.6.4 IB-Lite

IB-Lite is a optional plug-in card with Ethernet 10/100 Mbps interface in RJ45 connector. The card is internally connected to both COM1 and COM2 serial channels and provides an interface for connecting a PC with LiteEdit or IntelliMonitor through Ethernet network, for sending active e-mails and for integration of the controllers into a building management (Modbus/TCP protocol).

This card also enables to monitor and control the consumption engines over web browser from any location with internet access using appropriate security measures.

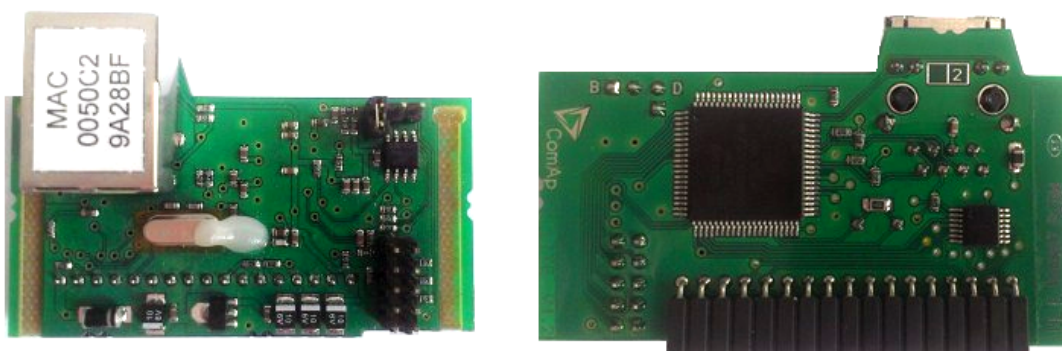

Note: Use Ethernet UTP cable with RJ45 connector for connection of the module into your ethernet network. The module can be also connected directly to a PC using cross-wired UTP cable.


Note: The module requires configuration settings before usage. See IB-Lite 1.x Reference Guide.

4.6.5 IL-NT GPRS

IL-NT GPRS is optional plug-in card, which works as GSM/GPRS modem which can work in two modes of operation based on settings in setpoint COM1 Mode.

- ▶ Settings DIRECT = module works in GPRS network and enables connection via AirGate to LiteEdit and WebSupervisor as well as sending SMS alarms.
- ▶ Settings MODEM = module works as standard GSM modem enabling CSD (Circuit Switch Data) connection to controller with LiteEdit or other ComAp PC SW and sending alarm SMSes.

Module is usually used for connection to remote monitoring and controlling system WebSupervisor www.websupervisor.net or to PC tools. Module is capable of sending alarm SMS based on settings in SMS/Email setpoint group.

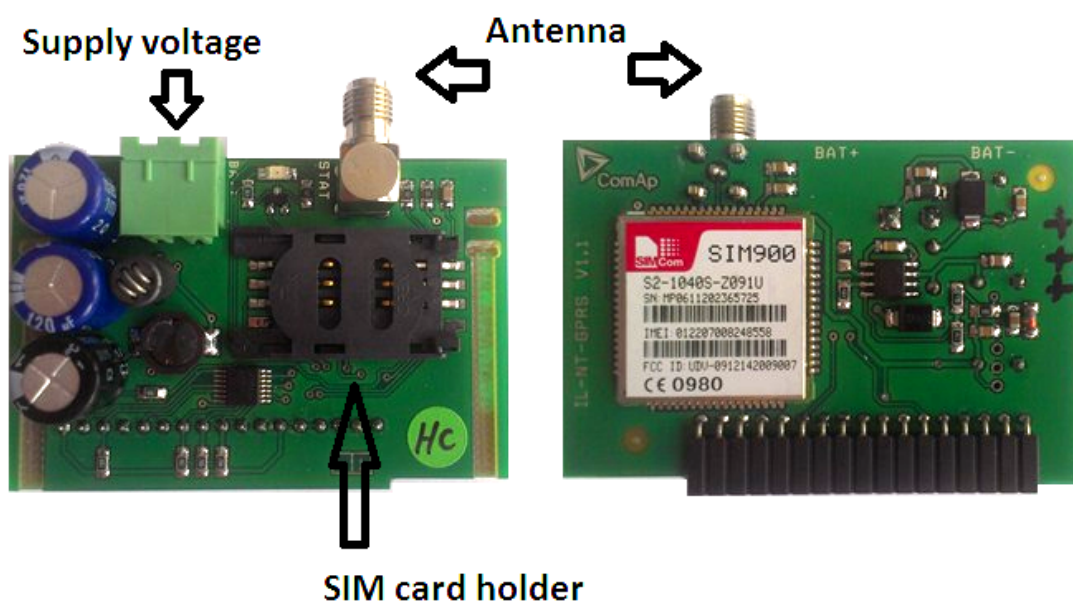

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to both controller and module. Power supply shall be switched on also is same time to both module and controller. Fail to follow these instructions (power supply active only in controller or only in module) can lead to module or controller failure!

IMPORTANT: GPRS and CSD connection is not suitable for firmware update process, kindly used wired connection instead like RS232, USB, RS485 or ethernet via IB-Lite!

Note: Quick guide how to start using this module is in chapter Remote Communication - Short guide how to start using IL-NT-GPRS module or on ComAp webpage <http://www.comap.cz/products/detail/IL-NT-GPRS>

Note: Use of this plug-in brings WSUP Locate function. This function allows monitoring actual engine position based on GSM signal information. The position is automatically updated and stored in WSV history. You can track the position of the engine in WebSupervisor even in history.

Note: Unlike GPS system, the function works indoor or wherever the GSM signal is. Precision of localization is not as precise as with GPS and depends on density of operator's GSM/BTS tower around the controller.

4.7 Remote modules

Remote modules allow monitoring and displaying of values and states away from main controller.

4.7.1 IL-NT RD (SW)

IL-NT RD is remote display software for a controller. Remote display provides the same control and monitoring functions as controller itself. Remote display for IntelliDrive controllers uses standard IntelliDrive Lite controller with Remote display software. No further programming of the display is required – unit is self configurable from the main controller.

All remote display's LEDs show the same state as corresponding LEDs on master controller. Front panel buttons on both controllers work in the same way. Engine can be controlled from remote display as well as from master controller. User can switch screens, set password, change setpoints and view history records.

All IL-NT RD screens Init, Measure, Setpoints and History display the same data like in the master controller.

Master device is always able to work without connected Remote display.

Interruption of the serial line between master device and Remote display has no effect to the master controller.

If the serial line between master device and remote display is interrupted, or communication cannot be established, remote display shows it's Init screen and message "Trying" and all LED's are off.

Once remote display finds compatible master it shows "Preparing" and downloads configuration table from master controller.

After the configuration from master is downloaded remote display jump to master controllers Init screen and all LEDs and blinking.

It is possible to switch to remote displays Init screen to check it's version and serial number of used controller and communication status by pressing PAGE button for 3 seconds

IMPORTANT: It is highly recommended to use the same type and model of controller for master and remote display. Only in such case is assured the proper function of all buttons, LED diods and display. Another combinations of HW types and models from Master controller and remote display are neither supported nor tested

IL-NT RD software installation

The IL-NT-RD remote display firmware is installed in the same way as any other IntelliDrive firmware using LiteEdit. Please see LiteEdit Reference guide for details about upgrading firmware. IL-NT-RD consists only firmware, not an archive.

However when there is IL-NT-RD firmware installed in the controller the procedure to install back the original standard firmware is following:

- ▶ Open any type of online connection.
- ▶ DDE server will try to open the connection, but it will fail and write red error message in the status bar.
- ▶ In this moment go to **CONTROLLER -> PROGRAMMING AND CLONING -> PROGRAMMING** and select **proper** firmware you want program to the controller. Choosing the wrong type of firmware may result in non-functional controller.
- ▶ Press "OK" button to programm the firmware to the controller.
- ▶ It may be required to switch off power supply of the controllers, close the boot jumper and switch on controller again. Follow the information windows accordingly.

- ▶ After programming is finished (it may be required to power off controller, open the boot jumper and power it on again) open configuration window and perform the configuration process manually. There is no compatibility of the configuration between different firmware versions.
- ▶ In some cases the "wrong setpoints" message can occur in the DDE server status line and controller is blocked showing "Init" state. Use CONTROLLER -> RESET FROM INIT STATE menu item to put the controller to normal operation. Be sure you have checked all setpoints before.

IMPORTANT: Check the statistic value "Engine hours" after firmware upgrade. Change of statistical values if necessary is possible only by LiteEdit software (password is required).

IL-NT-RD Wiring

IL-NT-RD can be connected to IntelliDrive Lite controller via RS232 or RS485 communication line. It is possible to connect only up to two remote displays to one master controller, if they are using different communication COMs. It is not supported to connect two or more remote displays to one communication line, eg. RS485. It is possible to monitor only one master controller from one remote display at the time.

Connection proces:

Remote display after power on automatically starts to search for any master controller connected. It starts to search on COM1 from master controllers address 1 to 32 and later on COM2 from address 1 to 32. Remote display tries two communication speeds 38400 bps and 56000bps.

During this process is displayed text "Detecting..." on screen and progress bar below counts from 0 to 100%. This process takes approx. 10-15 seconds. Than is 5 seconds pause and process continues again until compatible master controller is found.

Not supported types of controllers, not supported application, or controllers that are not properly communicating are skipped during the search.

Controller type selection:

IL-NT-RD automatically detects controller type.

Troubles with connection:

There are few reasons why remote display can not connect with master controller:

1. Not supported type of controller connected (Eg. IGS-NT, ID-DCU, IC-NT, IGS-CU, etc.)
2. Not supported firmware in master controller
3. Configuration table error in master controller
4. Wrong settings of setpoint COMx Mode in master controller
5. Wrong connection, wiring, communication fail

Communication lines:

It is connected with the controller via IL-NT-RS232 communication modules using RS232 line (up to 10m). Longer distances (up to 1200m) are possible using IL-NT-RS232-485 communication module or when RS232/RS485 converters are used.

It is possible to make a RS232 direct connection with IL-NT-RS232 module on one side and IL-NT-RS232-485 module on the other side.

4.7.2 IGL-RA15

The remote annunciator IGL-RA15 can be connected to the IntelliDrive unit via CAN bus. Any of the binary outputs can be configured (using LiteEdit) to each LED diode on the RA15. The module can be also enabled or disabled using LiteEdit.

If IGL-RA15 remote annunciator is not communicating with a controller via CAN bus, it activates a warning.

Note: See the documentation of IGL-RA15 for the technical description.



4.7.3 IB-NT

Internet bridge allows different type of communication and multiple controllers communication. Single IntelliDrive Lite controller is possible to connect via serial line RS232. For multiple controllers connection is necessary to use RS485 communication port.

IB-NT offers direct, internet, AirGate and cellular network type of communication.


Note: See the documentation of IB-NT for the detail description.



4.8 Intelli RPU


Intelli RPU (Redundant Protection Unit) is an extension module for Marine applications ensuring basic functionality in case of failure of the Main Unit (IntelliDrive Marine). It has features as Built-in self-diagnostics, Fuel solenoid and Stop solenoid control, Emergency stop and Overspeed protection with analog RPM setting.

The unit is not a full-featured replacement of IntelliDrive Marine unit, it is a module used for increasing reliability of the whole system.

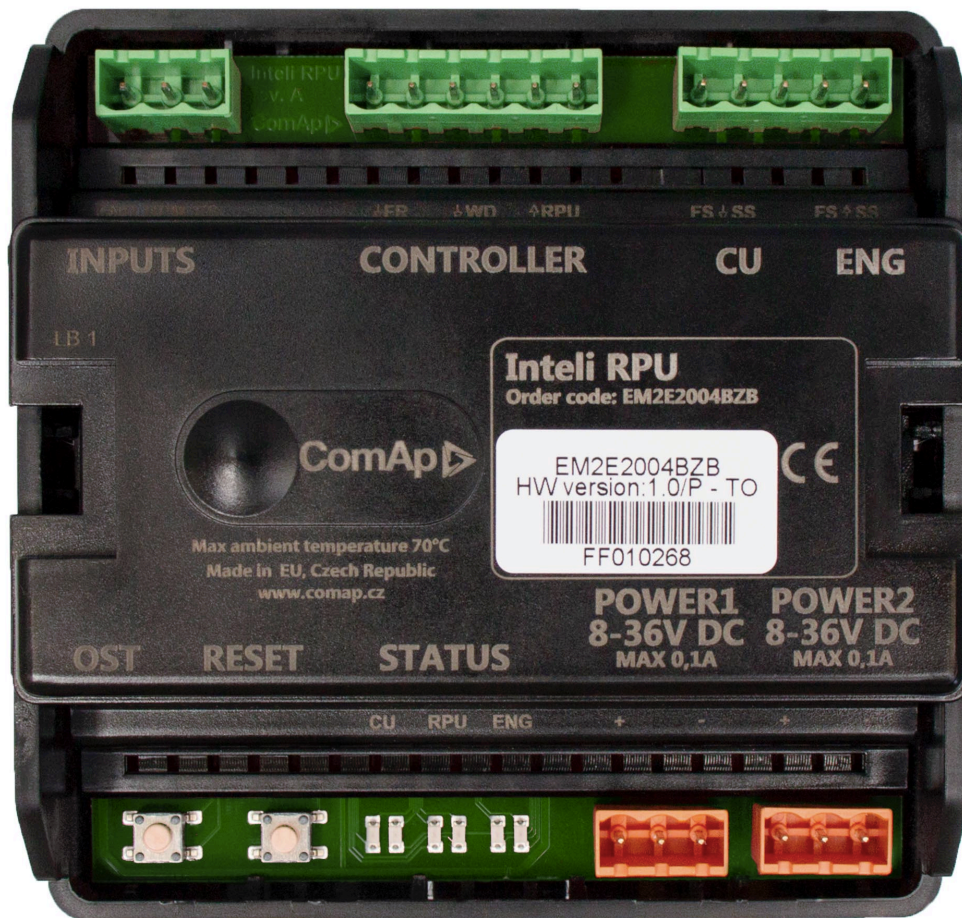


4.8.1 Installation and wiring

Dimensions

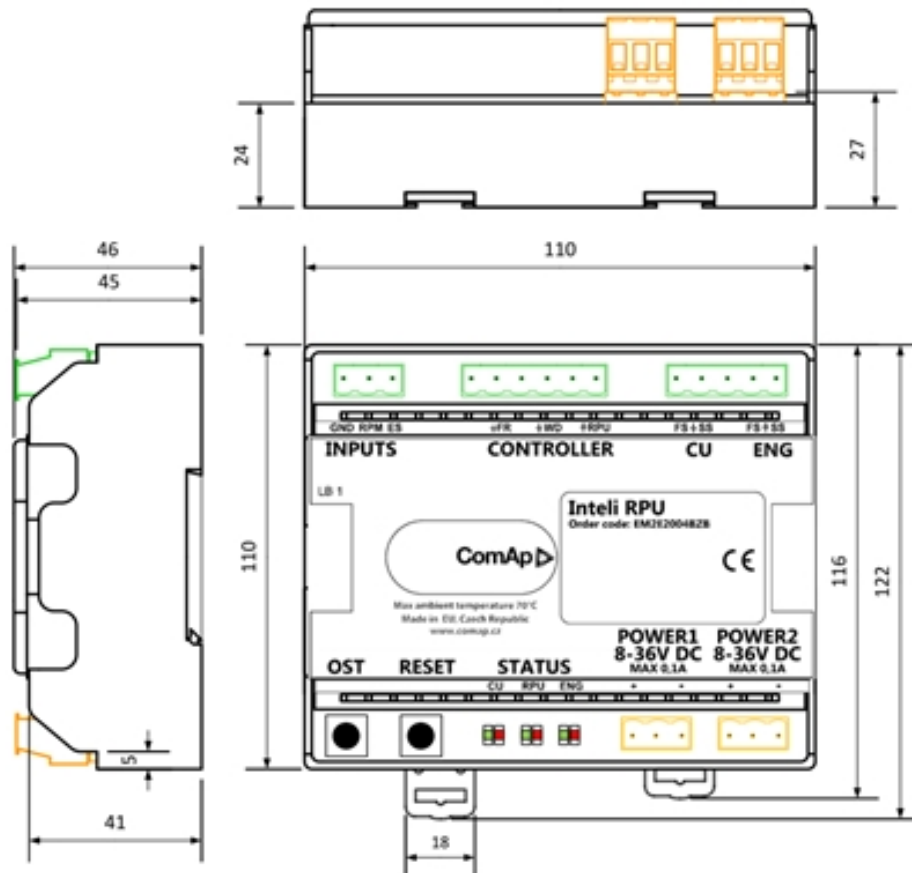

Terminals

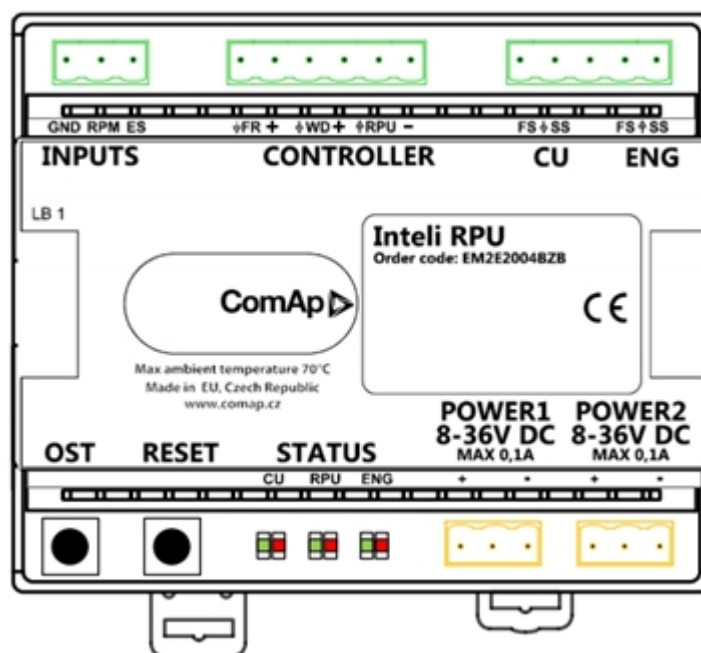

Input group	Caption	Description
INPUTS	RPM	Secondary RPM input
	ES	Emergency stop input, normally closed
CONTROLLER	FR	Fault Reset input from Controller, or external button. This input is used to switches control back to IntelliDrive Marine unit after its failure is fixed.
	WD	Isolated input for Watch dog signal, an alive indicator from IntelliDrive Marine unit to I-RPU. The IntelliDrive Marine unit's binary output is configured as CtrlHeartBeat and I-RPU uses it its alternation as alive indicator.
	RPU	Alive indication from I-RPU. Output is set to 1 if I-RPU is alive, 0 if in faulty state or power off IntelliDrive Marine unit's binary input 7 has Warning protection in default configuration to indicate the RPU failure.
CU	FS	Fuel solenoid input from IntelliDrive Marine unit. If the IntelliDrive Marine is operational the signal is bypassed through I-RPU.
	SS	Stop solenoid input from IntelliDrive Marine unit. If the IntelliDrive Marine is operational the signal is bypassed through I-RPU.
ENG	FS	Fuel solenoid output to ENG. Low side switch (controller switches output to negative power supply terminal). If IntelliDrive Marine is operational the signal is bypassed through I-RPU. If IntelliDrive Marine is not operational, the RPU is controlling the output.
	SS	Stop solenoid input from CU. Low side switch (controller switches output to negative power supply terminal). If IntelliDrive Marine is operational the signal is bypassed through I-RPU. If IntelliDrive Marine is not operational, the RPU is controlling the output.
-	POWER1	Primary battery
	POWER2	Secondary battery
	OST	Overspeed Test button – see description in Features part
	RESET	Hard reset of RPU button – see description in Features part
	STATUS	LED indicators


LED indicators

LEDs are used for indication of IntelliDrive Marine unit functionality

Group	LED colour	Description
CU	Green LED	Blinking when the IntelliDrive Marine is operational and the signals are bypassed from IntelliDrive Marine through RPU to engine
	Red LED	Lightening if IntelliDrive Marine has failed and the control signals are operated by RPU
	No LED lightening	if the RPU unit is not operational or connected to power supply

RPU	RPU LEDs are used for indication of RPU functionality	
	Green LED	Lightening when the RPU is operational
	Red LED	Lightening if the RPU has power but is NOT operational
	No LED Lightening if the RPU is NOT connected to power supply	
ENG	LEDs are used for indication in case the RPU is controlling the engine while IntelliDrive Marine failure	
	Green LED	Lightening when the engine can be started
	Red LED	Lightening when RPU is stopping the engine

Example of wiring

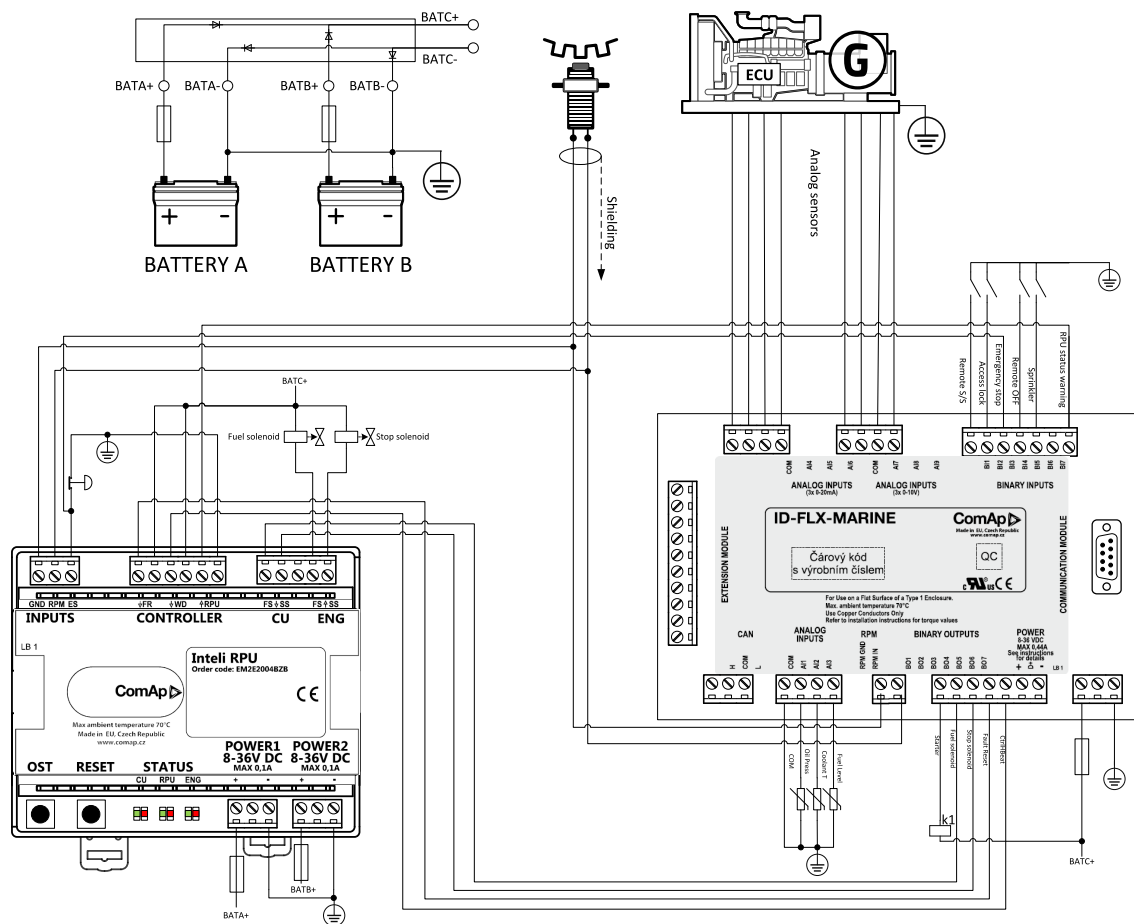

For correct functionality of Intelli RPU shall be connected

▶ Inputs

- Secondary RPM
- Emergency stop button

▶ Controller

- ↓FR (Fault reset) – binary output from IntelliDrive Marine unit configured as Fault Reset
- ↓WD (Watch Dog) – binary output from IntelliDrive Marine unit configured as CtrlHeartBeat
- ↑RPU – Binary input of IntelliDrive Marine unit with configured Warning protection to indicate RPU failure

- ▶ CU
 - ↓FS – Fuel Solenoid – binary output from IntelliDrive Marine unit configured as Fuel Solenoid
 - ↓SS – Stop Solenoid – binary output from IntelliDrive Marine unit configured as Stop Solenoid
- ▶ ENG
 - ↑FS – Fuel Solenoid
 - ↑SS – Fuel Solenoid
- ▶ POWER1 and POWER2
 - Two independent power supplies 8 .. 36 VDC

4.8.2 Features

Dual Power supply

The unit can be supplied from two independent power supplies which ensures RPUs functionality in case of one of the power supplies' failure.

Note: Both power supplies have to be in range of 8 .. 36 VDC. Maximal current for 8 VDC is 0,1 A.

Self diagnostic

The RPU unit self diagnostic feature based on Watch Dog to indicate failure or missing power of the RPU. Indication of RPU failure is done by:

- ▶ Binary output RPU which can be connected to binary input of IntelliDrive Marine unit and used for further signalisation
 - If the RPU unit is operational the output is active
 - In case of RPU failure the RPU output is not active
- ▶ Status LED - RPU
 - Lightening green when the RPU is operational
 - Lightening RED if IntelliDrive Marine unit has failed and the control signals are operated by RPU
 - NO LED is lightening if the RPU has no power

IntelliDrive Marine unit failure detection

Ctrl Heart Beat Binary Output from IntelliDrive Marine is connected to binary input WD of Inteli RPU

If the signal connected to WD is pulsing, the IntelliDrive Marine unit is considered as operational. In this case the RPU is not taking control, only bypassing the binary signals Fuel Solenoid and Stop Solenoid to the Engine.

If the signal connected to WD input is NOT pulsing, the IntelliDrive Marine unit is considered as NOT operational and the RPU takes over control over the engine.

RPU engine control while failure of IntelliDrive Marine unit

At the moment the RPU takes control over engine it keeps the outputs Fuel Solenoid and Stop Solenoid at their original levels before the time of failure of IntelliDrive Marine unit.

- ▶ The RPU stops the engine in case
 - Engine RPM exceeds configured Overspeed (Overspeed RPM configuration)
 - Emergency stop input is deactivated (active when conneted to bat-)
 - At this situation
 - Stop solenoid is switched to 1
 - Fuel solenoid switched to 0
 - Status red LED diode ENG is lightening
- ▶ The RPU allows new start of engine in case
 - Engine RPM = 0
 - Emergency stop input is active
 - 10 second delay has expired after the previous conditions were met
 - At this situation
 - Stop solenoid output is set to 0
 - Fuel solenoid output is set to 1
 - Status green LED diode ENG is lightening

Returning the control back from RPU to IntelliDrive Marine unit

When the IntelliDrive Marine unit is back in operation it is possible to switch back to its control by

- ▶ Pressing Fault Reset button on the IntelliDrive Marine unit – Fault reset Binary output or External switch has to be connected to FR input of Intel RPU.
- ▶ Pressing Reset button on Intel RPU

Overspeed test

By pressing OST button the RPU Overspeed Test is performed. The behavior is same as in case of a real issuing of overspeed protection. Engine is stopped as described in Feature “RPU engine control while failure of IntelliDrive Marine unit”.

Note: For the Overspeed Test the RPU has to be controlling the engine (IntelliDrive Marine has to be switched off) and the engine has to be running.

Note: Overspeed test is issued by setting the overspeed protection RPM to half of the value configured by dip switches.

4.8.3 Overspeed RPM configuration

Overspeed RPM protection is configured by switching dip switches SPEED PRESET and TIME BASE according to following instructions.

- ▶ Step 1

Use following formula to calculate value X:

$$X = (\text{RPMover} \times \text{Gear teeth}) / 60$$

- ▶ Step 2

According to value X calculated in step 1 select DIP TIME BASE configuration and value C to be used in step 3 from following table:

X range	C	Time base
2016 to 8128	32	0001
504 to 2032	8	0010
126 to 508 2 0100	2	0100
1 to 127	0,5	1000


► Step 3

Use following formula to calculate value N.

$$N = X/C + 1$$

Value N converted from Dec into Binary is final configuration of Speed Preset DIP switches.

Example of wiring

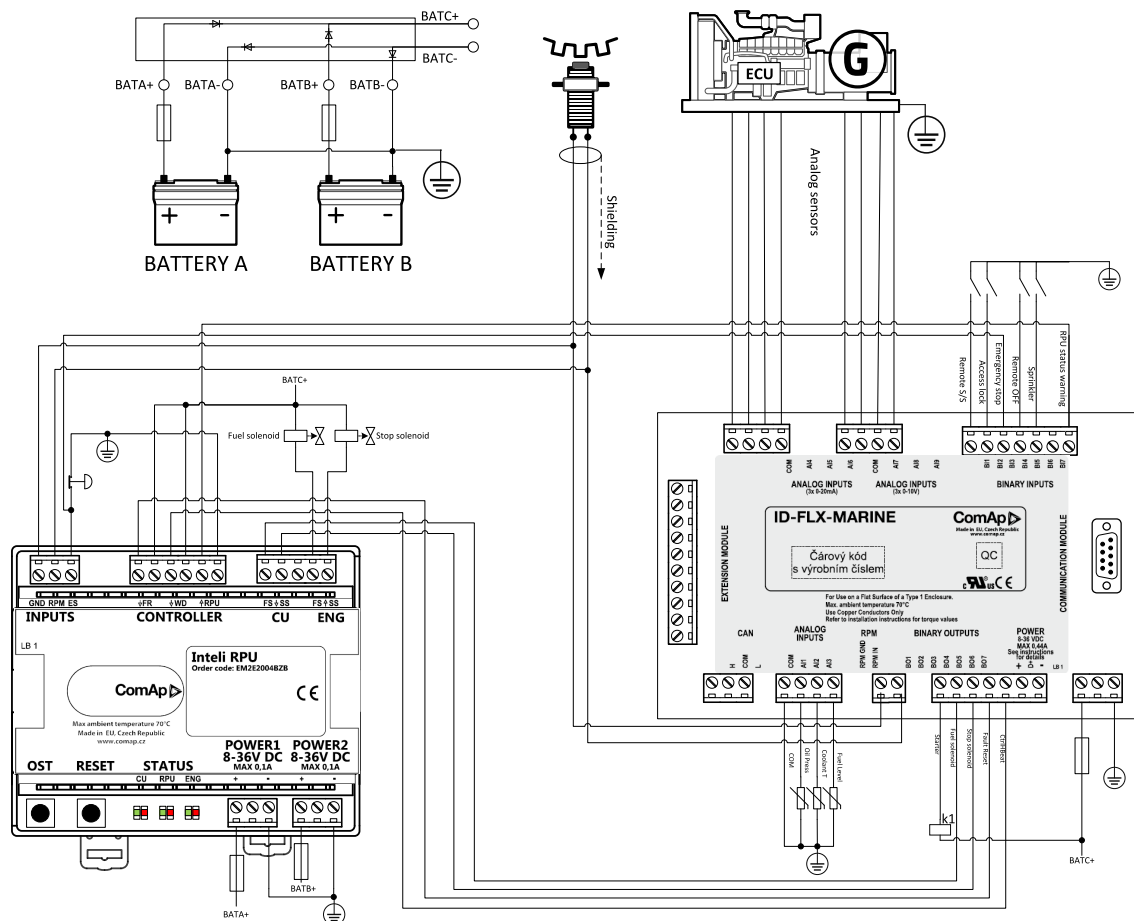

For correct functionality of Inteli RPU shall be connected

► Inputs

- Secondary RPM
- Emergency stop button

► Controller

- ↓FR (Fault reset) – binary output from InteliDrive Marine unit configured as Fault Reset
- ↓WD (Watch Dog) – binary output from InteliDrive Marine unit configured as CtrlHeartBeat


- ↑RPU – Binary input of IntelliDrive Marine unit with configured Warning protection to indicate RPU failure
- ▶ CU
 - ↓FS – Fuel Solenoid – binary output from IntelliDrive Marine unit configured as Fuel Solenoid
 - ↓SS – Stop Solenoid – binary output from IntelliDrive Marine unit configured as Stop Solenoid
- ▶ ENG
 - ↑FS – Fuel Solenoid
 - ↑SS – Fuel Solenoid
- ▶ POWER1 and POWER2
 - Two independent power supplies 8 .. 36 VDC









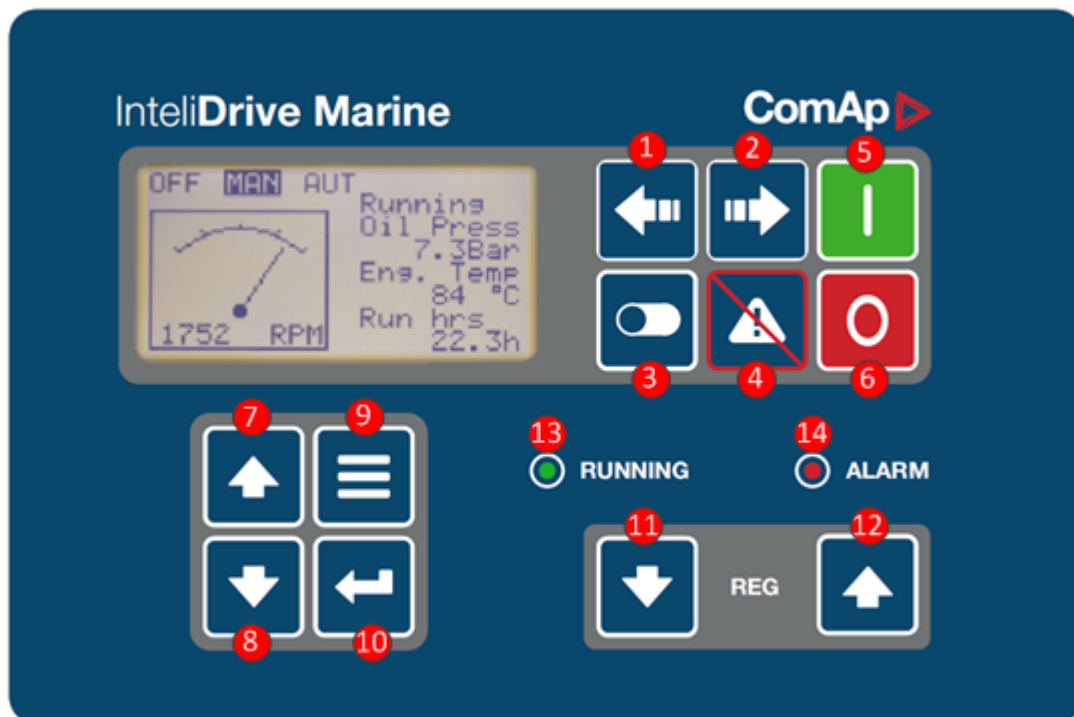

5 Controller setup





- 5.1 Front panel elements 50
- 5.2 Init screens 52
- 5.3 Display menus 53
- 5.4 How to select the engine mode? 53
- 5.5 How to view measured data? 53
- 5.6 How to view and edit setpoints? 53
- 5.7 How to find active alarms? 54
- 5.8 How to list History records? 55
- 5.9 MEASUREMENT screens description 56
- 5.10 Display screens and pages structure 59

6 back to Table of contents

5.1 Front panel elements



Position	Button	Description
1		<p>MODE LEFT button. Use this button to change the mode. The button works only if the main screen with the indicator of currently selected mode is displayed.</p> <p><i>Note: This button will not work if the controller mode is forced by one of binary inputs Remote OFF, Remote MAN, Remote AUT.</i></p>
2		<p>MODE RIGHT button. Use this button to change the mode. The button works only if the main screen with the indicator of currently selected mode is displayed.</p> <p><i>Note: This button will not work if the controller mode is forced by one of binary inputs Remote OFF, Remote MAN, Remote AUT.</i></p>
3		<p>TOGGLE button The function of the button can be selected by setpoint PanelButton in group Basic Settings.</p>
4		<p>FAULT RESET button. Use this button to acknowledge alarms and deactivate the horn output. Inactive alarms will disappear immediately and status of active alarms will be changed to "confirmed" so they will disappear as soon as their reasons dismiss.</p>
5		<p>START button. Works in MAN mode only. Press this button to initiate the start sequence of the engine.</p>
6		<p>STOP button. Works in MAN mode only. Press this button to initiate the stop sequence of the engine. Repeated pressing or holding the button for more than 2 s will cancel current phase of stop sequence (e. g. cooling) and next phase will continue.</p>
7		<p>SPEED DOWN button. Works in MAN mode only. Use this button for decreasing speed request to the engine. Short pressing changes the speed by 5 RPM/s during 0,6 s, after this period the speed change is according to setpoint Engine Params / Speed Ramp.</p>
8		<p>SPEED UP button. Works in MAN mode only. Use this button for increasing speed request to the engine. Short pressing changes the speed by 5 RPM/s during 0,6 s, after this period the speed change is according to setpoint Engine Params / Speed Ramp.</p>
9		<p>PAGE button. Use this button to switch over display pages. See Display Screens and Pages Structure chapter below this table for more details.</p>
10		<p>UP button. Use this button to move up \hat{A} or increase value of selected setpoint.</p>

11		DOWN button. Use this button to move down or decrease value of selected setpoint.
12		ENTER button. Use this button to finish editing a setpoint or moving right in the history page.
13		RUNNING LED
14		ALARM LED

5.2 Init screens

5.2.1 Init screen

This is a first screen after controller's start which is dedicated for information provided by customers such as contact numbers, service technician contact and customer message for end users of engine. Configuration of this screen is only done by LiteEdit PC tool.

Note: *Init (welcome) screen appears immediately after power on with ComAp default text. It is possible to modify it using LiteEdit – Configuration – Init button. There is space for 8 text lines per 21 ASCII characters each.*

5.2.2 Firmware screen

This screen contains information about controller's type, controller manufacturer ComAp, uploaded firmware, version of firmware, used application and branch. There is also information about currently configured electronic engine unit, respectively about ESF file. Details for recognition of configured electronic engine are in chapter ECU controlled engine support.

Note: *To see firmware information use panel buttons: hold ENTER and press PAGE. This procedure activates the panel LEDs test as well. The screen disappears itself after app 5 seconds.*

5.2.3 Languages screen

InteliDrive Marine controller offers configurable language support. On this screen is possible to switch between languages configured in controller. Second way, how to change language, is by binary input Lang Selection.

Note: *To switch to Language screen use panel buttons: hold ENTER and press PAGE twice. Press ENTER to leave this screen.*

5.2.4 User interface screen

InteliDrive Marine controller enables to choose the user interface as customer prefers.

There are two choices available: USER or ENGINEER interface

USER interface is simple menu displaying just measurement, alarm and init screens.

ENGINEER interface allow changing the controller's settings, reviewing the history, measurements and alarms. This mode is default.

This screen also contains Serial and Pwd. dec. (Password decode) numbers. These numbers you can use in case of forgotten passwords.


The last line on this screen signalize DiagData number. This number is giving specific diagnostics information in case the program is from some internal reason blocked.

Note: If the password for the controller is forgotten, then it is necessary to send Serial and Pwd. dec. numbers to technical support team. They are able to renew password for your controller.








Note: To switch to User interface screen use panel buttons: hold ENTER and press PAGE three times. Press ENTER to leave this screen.

5.3 Display menus

There are 3 display menus available: MEASUREMENT, ADJUSTMENT and HISTORY in Engineer interface and only MEASUREMENT in User interface.

Each menu consists of several screens. Press repeatedly  button to select requested menu.




5.3.1 Switching between User and Engineer menus

Hold  and then press  to activate info Firmware screen and the panel LED test. Within 5s press  to switch to Language selection screen and the second time  to switch to User interface selection. Use  and  to select appropriate interface and press .









 


5.4 How to select the engine mode?




Use  or  to select requested engine operation mode (OFF – MAN – AUT)

5.5 How to view measured data?




1. Use  repeatedly button to select the MEASUREMENT menu.
2. Use  and  to select the screen with requested data.

5.6 How to view and edit setpoints?

1. Use repeatedly  button to select the ADJUSTMENT menu.
2. Use  or  to select requested set points group.
3. Press  to confirm.
4. Use  or  to select requested set point.
5. Set points marked “*” are password protected.
6. Press  to edit.
7. Use  or  to modify the set point. When  or  is pressed for 2 sec, auto repeat function is activated.



8. Press  to confirm or  to leave without change.
9. Press  to leave selected set points group.

5.6.1 How to change the display contrast?

Press  and  or  at the same time to adjust the best display contrast

Note: Only in MEASUREMENT screen.



5.6.2 How to check software revision?

Hold  and then press . This activates the panel LED test and controller's display is switched to Firmware screen. On the display you can see (for 10 seconds) IntelliDrive Lite Firmware screen containing:

1. Controller name (see **Basic setting** group)
2. Firmware version ID-FLX-Lite-x.x
3. ESF: version of ESF file, if ECU is configured
4. SW version: the first is the firmware version number the second is configuration table number
5. Application: DCU
6. Branch: DCU

Note: Only in MEASUREMENT screen.






5.6.3 How to check serial number and choose interface?

Hold  and then three times press . On the display you can see IntelliDrive Marine User Interface screen containing:

1. User interface: can choose User (block adjustment function of controller) or Engineer interface
2. Serial: 8 character number
3. Pwd. dec: 10 character number
4. DiagData: 1 character number


Note: Only in MEASUREMENT screen.

5.6.4 How to change language?


Hold  and then two times press  to get to Languages selection screen. Use  or  to select desired language and press  to confirm selection.

5.7 How to find active alarms?

Active alarm list is the last screen in the MEASUREMENT menu.

Select MEASUREMENT menu. Press  you will see the list of all active alarms with the number of alarms at the top-right corner three state alarms are introduced:




Example	Description
*Wrn Water temp	Active not accepted alarm
Wrn water temp	Active accepted alarm
*Wrn Water temp	Inactive not accepted alarm
	Inactive accepted alarm

Press  accepts all alarms. Non-active alarms immediately disappear from the list.






Active alarm list appears on the screen when a new alarm comes up and Main MEASUREMENT screen is active.

Note: Alarm list does not activate when you are reviewing the values or setpoints.

The second alarm list for ECU alarms is also available. It is displayed one screen above the standard alarm list on the controller display or under the standard alarm list in Control window of LiteEdit. If an alarm appears in this alarm list, it is signaled in the standard alarm list and by exclamation mark on the main measure screen.


Control from the front panel	
	One screen up/down
	Cursor move within the ECU alarm list
	ECU fault code reset

5.8 How to list History records?

1. Use repeatedly  button to select the History menu.
2. Use  or  to select requested History line – see Reason, Date and Time.
3. Press  to go-on line to right – see recorded values.
4. Use repeatedly  button to go back to Measurement screen.

5.9 MEASUREMENT screens description

5.9.1 Main measure screen

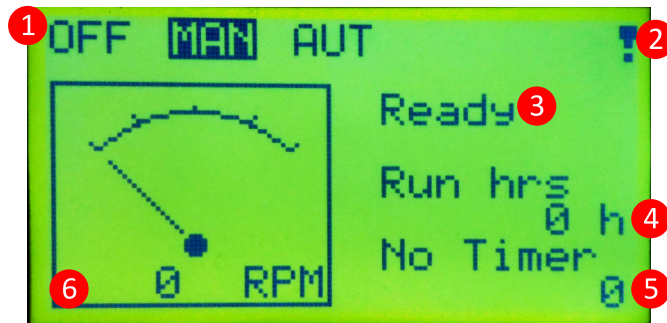

- 1 Operation mode of the engine
- 2 Indication: "L" = Access lock, "!" = active Alarm
- 3 Status of the engine
- 4 Run hrs - events counting Running hours of the engine
- 5 Timer - events counting time (e.g. prestart, cooling, etc.)
- 6 Engine RPM

5.9.2 IL-NT-AIO Analog inputs screens

- ▶ AI1 (AI1 bargraph with protection limits indication, displayed only if is configured)
- ▶ AI2 (AI2 bargraph with protection limits indication, displayed only if is configured)
- ▶ AI3 (AI3 bargraph with protection limits indication, displayed only if is configured)
- ▶ AI4 (AI4 bargraph with protection limits indication, displayed only if is configured)

Note: This screen is shown/hidden depending on whether the IL-NT-AIO is configured or not. Analog output AO1 is not displayed on any screen!

5.9.3 IntelliDrive Lite Analog inputs screens

- ▶ First screen:
 - Oil pressure (AI1 bargraph with protection limits indication)
 - Water temperature (AI2 bargraph with protection limits indication)
 - Fuel level (AI3 bargraph with protection limits indication)
 - Battery voltage (Power supply bargraph with protection limits indication)
- ▶ Second screen:
 - AIN4 (Displayed only if is configured)
 - AIN5 (Displayed only if is configured)

- AIN6 (Displayed only if is configured)
- ▶ Third screen: (Displayed only if is at least one of following AIN configured)
 - AIN7 (Displayed only if is configured)
 - AIN8 (Displayed only if is configured)
 - AIN9 (Displayed only if is configured)

5.9.4 IntelliDrive Marine Binary inputs

BI1 to BI7

5.9.5 IntelliDrive Marine Binary outputs

BO1 to BO7

5.9.6 IL-NT-BIO8 Binary inputs screen

- ▶ IN: BIO8 BI1 Alarm
- ▶ IN: BIO8 BI2 Alarm
- ▶ IN: BIO8 BI3 Alarm
- ▶ IN: BIO8 BI4 Alarm
- ▶ IN: BIO8 BI5 Alarm
- ▶ IN: BIO8 BI6 Alarm
- ▶ IN: BIO8 BI7 Alarm
- ▶ IN: BIO8 BI8 Alarm
- line is displayed on the following screen

Note: These screens are shown/hidden depending on whether the IL-NT-BIO8 is configured or not.

5.9.7 IL-NT-IO1 Binary inputs screen

- ▶ IN: BIO8 BI1 Alarm
- ▶ IN: BIO8 BI2 Alarm
- ▶ IN: BIO8 BI3 Alarm
- ▶ IN: BIO8 BI4 Alarm

Note: This screen is shown/hidden depending on whether the IL-NT-IO1 is configured or not. Analog outputs are not displayed on any screen!

5.9.8 ECU State

- ▶ ECU State
- ▶ ECU YellowLamp
- ▶ ECU RedLamp
- ▶ WaitToStart
- ▶ SpeedReq Abs
 - Required RPM of the engine

- ▶ SpeedReq Rel
 - %

Note: This screen is shown/hidden depending on whether the ECU is configured or not.

5.9.9 ECU Values

It depends on the ESF file which is configured. See practical example of the screen below for Caterpillar J1939 2.1.

Practical example:

- ▶ Fuel rate
 - L/h or gph
- ▶ CoolantTemp
 - °C or °F
- ▶ IntakeTemp
 - °C or °F
- ▶ Oil pressure
 - Bar or psi
- ▶ Boost pressure
 - Bar or psi
- ▶ Load
 - % (Percentual load at current speed)

Note: This screen is shown/hidden depending on whether the ECU is configured or not.

5.9.10 Statistic

- ▶ Number of starts
- ▶ E-Stop
 - Number of engine Emergency stops (without ShutDowns)
- ▶ ShutDown
 - Number of engine ShutDown stops (without Emergency stops)
- ▶ SpeedReq Abs
 - Required RPM of the engine
- ▶ LoadLimitAout
 - Output of Load limit loop – see **Load limit** setpoint group
- ▶ RPM-BI3
 - RPM detected and counted on the BI3 input

Note: Running time is displayed on the Main screen of measurements and is measured in complete minutes, displayed in complete hours. Values are stored in nonvolatile memory.

5.9.11 ECU AlarmList

Diagnostic messages are read from ECU and displayed in this second alarm list. For Standard J1939 engines SPN (Suspect Parameter Number), FMI (Failure Mode Identifier) and OC (Occurrence Counter) are shown together with verbal description if available.

Following image shows displaying of ECU alarms in the second alarm list. The additional information for the row selected by cursor is on the last row (SPN, OC and FMI codes).

If the verbal description of alarm is not available, the SPN (decimal and hexadecimal) is displayed.

EngOilPress WRN	
BoostPressFLS	
EngOilTem FLS	
629(275h) FLS	
Controller#1	
EngCoolTemp WRN	
<hr/>	
SPN:110 OC:7 FMI:3	

Note: For FMI = 0 and 1, WRN is displayed. For other FMI codes, FLS is displayed.

5.9.12 Alarm list

Alarm list displays active or inactive alarms occurred on IntelliDrive Lite unit. IntelliDrive Lite controller automatically switches to the Alarm list screen when any new Alarm appears, but from Main measure screen only. See chapter Alarm management.

5.10 Display screens and pages structure

Measurement screens:

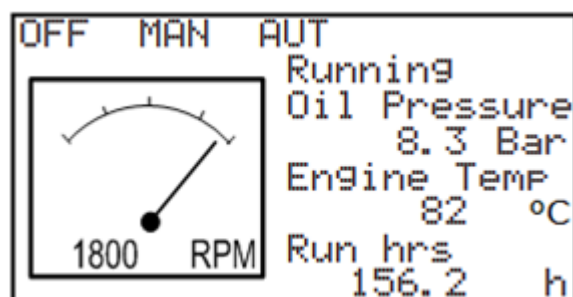


Image 5.1 Main values

AIN 1	10.0	Bar
AIN 2	67	BC
AIN 3	93	%
AIN 4	278	kPa
AIN 5	1320	kPa
AIN 6	43	L/s
AIN 7	156	L/s
AIN 8	1.0	L/s

Table 5.1 Analog values 1

AIN 9	456	kPa
Ubat	24.3	V
D+	5.7	V
BIN	10000	
BOUT	10110	
Running Timer	12.6	h
Timer text	Run Timer	
Timer val	150	s

Table 5.2 Analog values 2, binary inputs / outputs

SpeedReq Abs	800	RPM
Ubat	24.3	V
D+	5.7	V
Timer text	No timer	
Timer val	0	s
Running Timer	12.6	h
DPF1 Soot Load	25	%
DEF Level	40	%

Image 5.2 Engine values



GSM SignalLvl	51	%
		
GSM ErrorRate	0	
		
Modem Status:	Ready	
GSM DiagCode:	0	
AirGate ID:	979b0ad6	
AirGate Diag:	5	

Image 5.3 Remote communication values

Note: Displayed only if remote comm. Module is used


```

ECU AlarmList
>*ThrottlePos
  *EngOil Press
  *000589(00240h)
  *CrankcasePress
  *Fuel Temp
  *RatedEngSpeed
FC 51 UC 5 FMI 1
    
```

Image 5.4 ECU alarm list

Note: Displayed only if ECU is configured

```

Fuel Level          93    %
PumpSuction         278  kPa
PumpDischar        1320  kPa
PumpFlow            43   L/s

BIN                 10000
BOUT                11001
    
```

Image 5.5 Analog and binary inputs / outputs values

```

Run hrs            156.2  h
Num starts         168
NextServTim        26    h
Day Hours          5.5   h
DayCons            156   L
TripCons           256   L
Total 1            456789 -
    
```

Image 5.6 Statistics

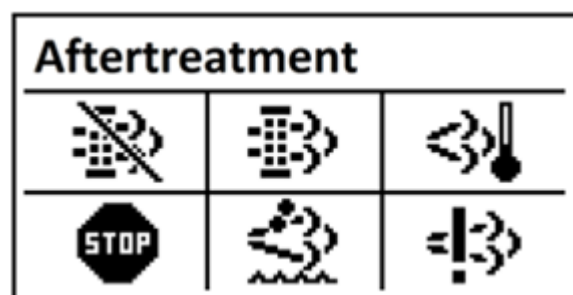


Image 5.7 Aftertreatment

Note: Displayed only if Tier 4 engine is connected

```
AlarmList          9
*Sd Engine Temp
*Wrn Engine Temp
*Wrn Fuel Level
*Sd Fuel Level
*Wrn Batt Volt
*Emergency Stop
*SprinklerActive
```

Image 5.8 Alarm list

Setpoints screen:

```
Password
Basic Settings
Comms Settings
Engine Params
Engine Protect
ATT Settings
Date/Time
```

Image 5.9 Setpoint groups

```
No. Reason
> 0 FlsFuel level
-1 FlsOil Pressure
-2 Remote Off set
-3 Emergency stop
-4 Switched On
-5 Sd Stop fail
14:10:42 27/11/2015
```

Image 5.10 History log

All values and parameters are available from PC tools LiteEdit and IntelliMonitor.

6 Communication

6.1 Direct cable connection	63
6.2 Remote connection	64
6.3 Modbus connection	65
6.4 ECU engine support	66
6.5 Choosing the ECU to configure	66
6.6 ECU Analog inputs	68
6.7 Tier4 final support	68

6 back to Table of contents

Note: Refer to *InteliCommunication Guide* for all additional information.

6.1 Direct cable connection

InteliDrive Marine can be connected directly with PC via optional communication plug-in modules IL-NT RS232, IL-NT RS232-485, IL-NT S-USB.

Use the standard serial/USB cable to connect PC with InteliDrive Marine. In the area with electromagnetic interference should be used shielded cables.

Note: Make sure the grounding system on controller and PC – COM port (negative of the PC DC supply) are identical – before the first direct connection. There must not be any voltage between these two points otherwise the internal reversible fuse in controller burns out. The simple solution is to assure, that the PC supply 240/20V is ground free (GND terminal is not connected).

The setpoint COM1 Mode or COM2 Mode (according to the interface used) must be set to DIRECT position for this kind of connection.

The communication speed of direct connection is up to 38400 bps, via USB it is up to 115200 bps.

Note: The RS485 communication line has to be terminated by 120 Ohm resistors on both ends. RS485 uses channel COM2 in InteliDrive controller.

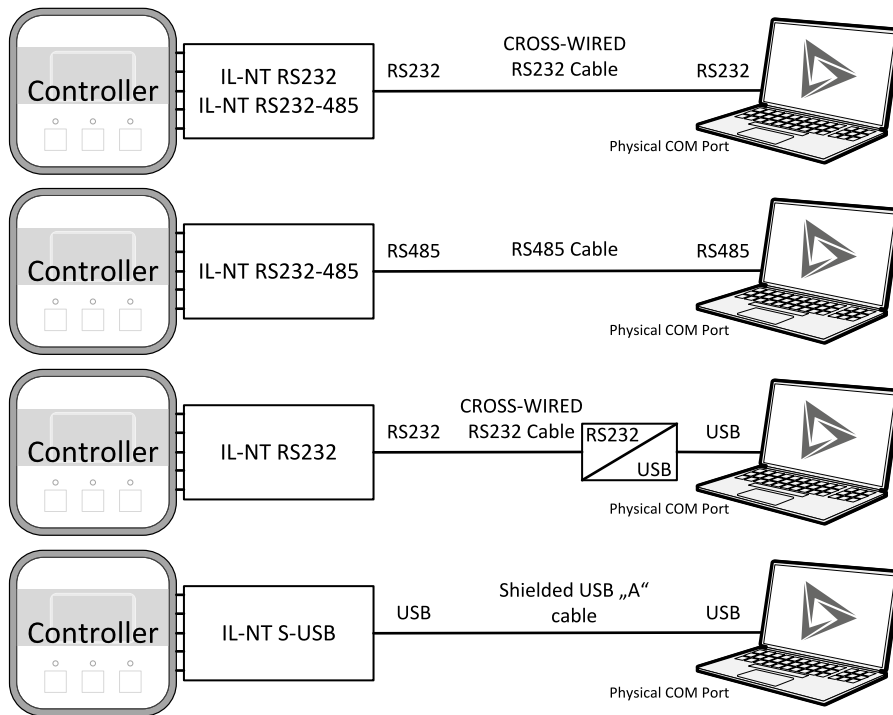


Image 6.1 Direct cable connection types

Note: It is possible to create multiple controller connection through RS485. Be aware of controller address collision. Manage address setting for each controller in setpoint Comms Setting: ControllerAddr

6.2 Remote connection

6.2.1 Internet connection

InteliDrive Marine controllers can be monitored from PC tools as LiteEdit or InteliMonitor over the Internet using Internet Bridge IB-NT connected to the controller via IL-NT RS232-485 port, via optional IB-Lite plug-in module or via IL-NT GPRS for cellular internet network. See **Group: Comms settings (page 121)**.

6.2.2 AirGate connection

InteliDrive Marine controllers can be monitored from PC tools as LiteEdit or InteliMonitor via AirGate. AirGate technology is for easy plug and play wireless communication. Common SIM card with GPRS service is suitable for this system. It overcomes problems with special SIM card (fixed and public IP) necessity, with firewalls and difficult communication settings. For AirGate connection is possible to use IB-NT, IB-Lite or IL-NT GPRS modules. For setting see the setpoints in group **Group: Comms settings (page 121)**.

6.2.3 Modem connection

PC can be connected to the controller also remotely via modems. Either an analog, GSM, ISDN or 3G modem must be connected to the RS232 interface. Setpoint **Group: Comms settings (page 121)**: COM1 Mode has to be set to MODEM.

Note: RF modem communication is also possible between controller and remote display.

Note: In case of controller and remote display RF modem should be connected with serial cable with only three connected pins Rx, Tx and GND. In other case could be blocked communication between modem and controller.

6.3 Modbus connection

Modbus protocol was implemented into the controllers to allow design of own supervision software ofr customer or to use ComAp SCADA software.

Note: To learn more about Modbus interface see the training videos on www.comap-control.com

6.3.1 Modbus step by step

Use LiteEdit: Controller->Generate Cfg image->Modbus registers command to get registers list.

- ▶ 9600 bps, 8 data bits, 1 stop bit, no parity
- ▶ Transfer mode RTU
- ▶ Function 3 (Read Multiply Registers) max length of block is 127 registers
- ▶ Function 6 (Write Single Register)
- ▶ Function 16 (Write Multiply Registers) max 16 registers
- ▶ The response to an incoming message is sent with minimum 4.096 ms delay after message reception

The complete description of Modbus communication protocol can be found in Modbus Protocol Reference Guide PI-MBUS-300 and Open Modbus Specification Release 1.0. Both documents are available from web site at <http://www.modicon.com/openmbus/>.

1. Connection	2. Setpoints	3. Communication
Direct RS232 Direct RS485 Remote modem Ethernet IB-NT Ethernet IB-Lite	Comms settings: COM1 Mode / COM2 Mode ModbusComSpeed	Request Response

Practical example:

Request: 01 03 00 35 00 03 15 C5	
01	= Controller address
03	= Modbus function code (Read Multiple Registers)
00 35	= Register address: Register number (40054) – 40001 = 53 DEC => 35 HEX IL-NT
	Register address: Register number (40061) – 40001 = 60 DEC => 3C HEX IC-NT


00 03	= Number of registers (40054 – Oil press, 40055 – Engine temp, 40056 – Fuel level)
	= 3 DEC => 03 HEX
C5 15	= CRC (write LSB MSB !)

Register(s)	Com.obj.	Name	Dim	Type	Len	Dec	Min	Max	Group
40051	8213	Battery volts	V	Integer	2	1	-	-	Controller
40052	10124	(N/A)							
40053	10603	D+	V	Integer	2	1	-	-	Controller
40054	8227	Oil Pressure	Bar	Integer	2	1	-	-	Controller
40055	8228	Engine Temp	°C	Integer	2	0	-	-	Controller
40056	8229	Fuel Level	%	Integer	2	0	-	-	Controller
40057	8978	IOM A11	U4	Integer	2	0	-	-	Extension

Image 6.2 Part of Cfg Image (Modbus Register ...)

Response: 01 03 06 00 27 00 2E 00 2B 35 64	
01	= Controller address
03	= Modbus function code (Read Multiple Registers)
06	= Length of read data in Bytes (in HEX)
00 27	= 27 HEX => 39 DEC => 3,9 Bar (Oil pressure is represented with 1 decimal in Bars)
00 2E	= 2E HEX => 46 DEC => 46°C (Engine temperature is represented with 0 decimals in °C)
00 2B	= 2B HEX => 43 DEC => 43% (Fuel level is represented with 0 decimals in %)
64 35	= CRC

6.4 ECU engine support

InteliDrive Marine firmware branch covers both standard and electronic controlled (monitored) engines. The appropriate engine/ECU type is selected in PC tool LiteEdit like other peripherals. Press the  button in LiteEdit configuration window Modify.


Note: Import latest ECU list – ECU list-x.x.iwe for update engine ECU specification. Select the proper esl file in LiteEdit->Options->ESL files - typically Allspeed.esl.

IMPORTANT: More information about ECU list packages, values, configuration and wiring recommendations can be found in Comap Electronic Engines Support manual.

The InteliDrive Marine controller always sends either speed request = 0 % or the IDLE command via J1939 in controller Idle state. In the MAN mode the Idle operation can be controlled by Nominal/Idle binary input.

6.5 Choosing the ECU to configure

According to the model of ECU, choose and configure the right ECU option. The configuration can be made in LiteEdit, the window Modify, icon ECU.

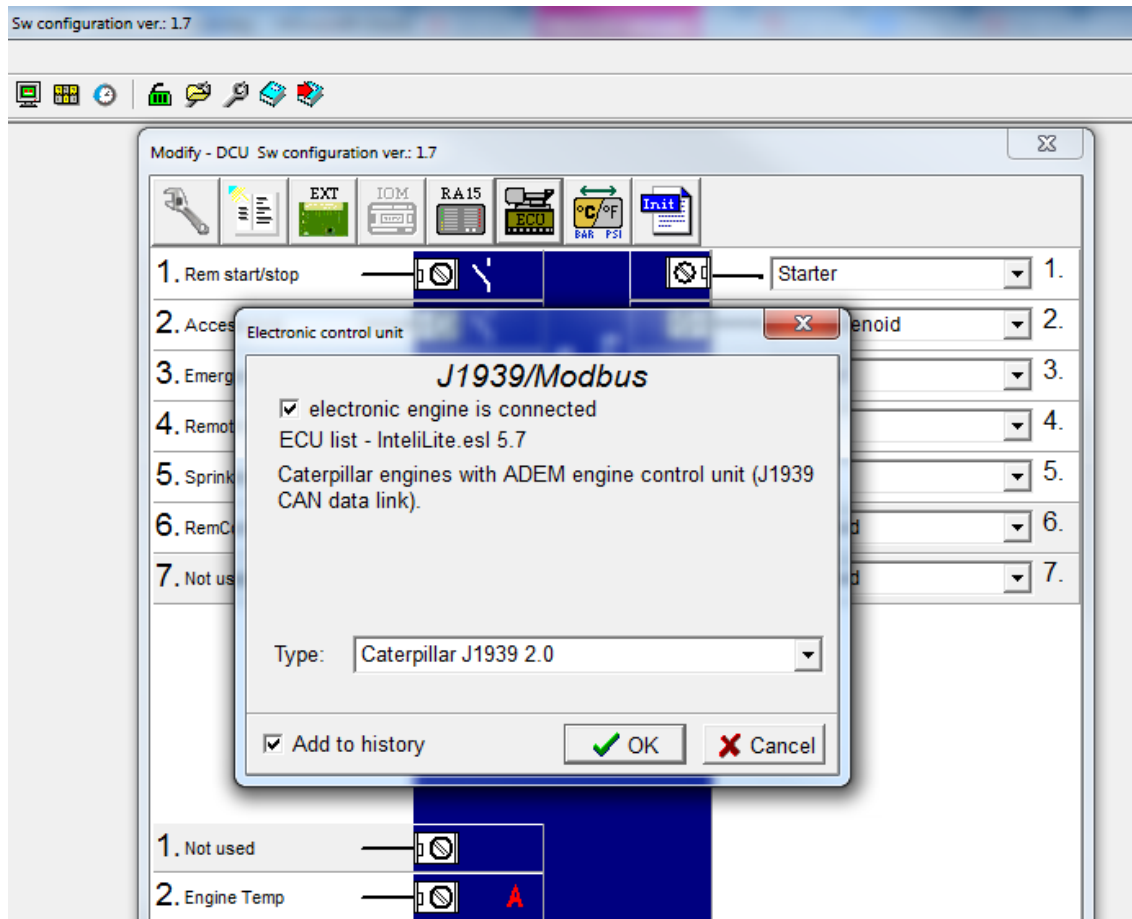

Note: If the connected engine is Cummins communicating via RS232, it is necessary to set the setpoint Basic settings: COM1 mode (or COM2 mode if IL-NT-RS232-485) = ECULINK.

Loss of communication causes shutdown of the running engine. On the contrary, the ECU can be switched off at quiescent engine that means not-communicating ECU is in that moment normal situation. All values from ECU shall show #####, but no alarm is displayed. The output ECU CommOK follows the real situation that means it is not active anytime when the ECU does not communicate.

The output ECU PwrRelay closes at the beginning of prestart and opens if the engine shall be stopped.

The engine is started via standard contact output or via CAN bus.

Practical examples of values read from ECU:

Value name	Short name	Dimension	Type	Frame name
EngOil Filter Diff.Press	OilDiffPres	bar	ANA	DD
Amber Warning Lamp	AmberWrmLamp	-	BIN	DM1
Malfunction Lamp	MalfunctLamp	-	BIN	DM1
Protect Lamp	ProtectLamp	-	BIN	DM1
Red Stop Lamp	RedStopLamp	-	BIN	DM1
Engine speed	RPM	RPM	ANA	EEC1
Engine Oil Pressure	EngOil Press	bar	ANA	EFLP1
Coolant Temp	Coolant Temp	°C	ANA	ET1

Total Engine Hours	EngineHours	h	ANA	HR
Boost Pressure	Boost Press	bar	ANA	IC
Intake Manifold Temp	Intake Temp	°C	ANA	IC

If Cummins-Modbus x.x option is selected, following values are read from Modbus Register Data (for QSX15, QSK45, QSK60):

Value name	Short name	Dimension	Type	Frame name
Red Shutdown Lamp	Red Lamp	-	BIN	10005
Yellow Warning Lamp	Yellow Lamp	-	BIN	10006
Engine Speed	RPM	RPM	ANA	30001
Coolant Temp	Coolant Temp	°C	ANA	30002
Oil Pressure (psig)	Oil Press	bar	ANA	30003
Oil Pressure (psia)	Oil Press	bar	ANA	30003
Running Time	Running Time	h	ANA	30008
Fuel Rate (UK)	Fuel	L/h	ANA	30018
Fuel Rate (US)	Fuel	L/h	ANA	30018
Intake Manifold Press	Intake Press	bar	ANA	30530
Intake Manifold Temp	Intake Temp	°C	ANA	30531

6.6 ECU Analog inputs

Reading of mentioned values from ECU enables to use analog inputs of the unit for other purposes, e.g. measuring, displaying and alarm activation related to various quantities. The configuration thus allows using nine analog inputs on the central unit and four analog inputs on plug-in module if connected.

If the engine without ECU is controlled by IntelliDrive Marine, the first analog input is permanently configured to Oil Pressure, other analog inputs remain freely configurable.

6.7 Tier4 final support


There was implemented support of Final Tier 4 (FT4) standard. Complete functionality is available only with configured ECU what support FT4. It requires min.:

- ▶ ECU List v6.3.0
- ▶ LiteEdit v5.2.0.

FT4 support includes:





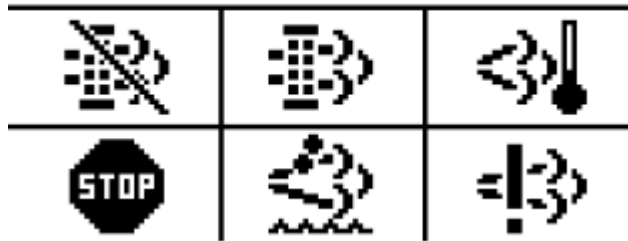

- ▶ New screen Aftertreatment
- ▶ The screen is visible only if configured ECU supports and transmits some FT4 messages. Activated FT4 icon is indicated by alarm Aftertreatment. When any new icon appears, the controller automatically switches to Aftertreatment screen.

Aftertreatment



Meaning of the pictograms:

Pictogram	Meaning	Description
	Diesel Particulate Filter Active Regeneration Inhibited Due to Inhibit Switch	Steady light - SPN 3703 = 01b
	Diesel Particulate Filter Lamp Command	Steady light - SPN 3697 = 001b Flash 1 Hz - SPN 3697 = 100b
	Soot level in the DPF indicates need for filter cleaning	Diagnostic Trouble Code: SPN = 3719, FMI = 15
	Soot level is "moderately high" and engine performance is reduced by ECU	Diagnostic Trouble Code: SPN = 3719, FMI = 16
	Soot level is extremely high and engine performance is reduced by ECU and ECU will perform a shutdown for engine protection	Diagnostic Trouble Code: SPN = 3719, FMI = 00
	Exhaust System High Temperature Lamp Command	Steady light - SPN 3698 = 001b
	Red Stop Lamp	Steady light- SPN 623 = 01b
	Flash Red Stop Lamp	Flash 1 Hz - SPN 3039 = 00b
	Amber Warning Lamp	Steady light - SPN 624 = 01b

	Flash Amber Warning Lamp	Flash 1 Hz - SPN 3040 = 00b Flash 2 Hz - SPN 3039 = 01b
	Fluid Tank Low Level Indicator (DEF Level Low)	Steady light - SPN 5245 = 001b Flash 1 Hz - SPN 5245 = 100b
	DEF tank has 0% measurable volume and machine performance is reduced	Diagnostic Trouble Code: SPN = 1761, FMI = 18
	DEF system has lost its prime and machine performance is reduced.	Diagnostic Trouble Code: SPN = 1761, FMI = 01
	Malfunction Indicator Lamp (indicates that the active trouble code is emission-related)	Steady light - SPN 1213 = 01b
	Flash Malfunction Indicator Lamp (indicates that the active trouble code is emission-related)	Flash 1 Hz - SPN 3038 = 00b Flash 2 Hz - SPN 3038 = 01b

► New screen with FT4 analog values

- Created new separated screen with all FT4 analog values:
 - DPF1 Soot Load
 - DPF1 Ash Load
 - DEF Level
- The screen is visible only if configured ECU supports and transmits some FT4 messages.

► Main screen includes FT4 values

- Controller main screen can display DPF1 Soot Level and DEF Level. Two analog values what are displayed on main screen can be set by parameters Main Screen 1 and Main Screen 2 (group Basic settings 2).

Parameter value:	1st value	2nd value
TIMERS	Run hrs	Timer
AIN6,7	AIN-6	AIN-7
ATT	DPF1 Soot Level	DEF Level

► New LBI Regen Inhibit, Regen Force, Lockout1 and Lockout2

- Created four new LBI:
 - Regen Inhibit – used for setting ECU value DPF Regeneration Inhibit Switch if parameter Regen Inhibit = BIN.
 - Regen Force – used for setting ECU value DPF Regeneration Force Switch if parameter Regen Force = BIN.
 - Lockout1 – used for setting proprietary John Deere message DPF Lockout
 - Lockout2 – used for setting proprietary John Deere message DPF Lockout.

▶ New setpoint group ATT Settings

- Created new setpoint group ATT Settings what includes two parameters:
 - Regen Inhibit – set ECU value Aftertreatment Regeneration Inhibit Switch (SPN 3695). There can be set:
 - OFF – automatic filter regeneration is enabled - SPN 3695 = 00b
 - ON – automatic filter regeneration is inhibited - SPN 3695 = 01b
 - BIN – value is set by LBI Regen Inhibit
 - Transmitted value is set by actual level of parameter ON/OFF or by level of LBI.
 - Regen Force – set ECU value Aftertreatment Regeneration Force Switch (SPN 3696). There can be set:
 - OFF – automatic filter regeneration is enabled
 - ON – automatic filter regeneration is inhibited
 - BIN – value is set by LBI Regen Force
 - Transmitted value is activated for 5 sec. by rising edge of parameter change OFF to ON or LBI.

▶ Support of proprietary John Deere CAN message

- Created proprietary John Deere CAN message DPF Lockout – PGN 61184, transmitted value:
 - ON = F2 31 FF FF CF FF FF FF
 - OFF = F2 31 FF FF DF FF FF FF
- Value is OFF if there isn't configured LBI ATT Lockout1 neither ATT Lockout2 or all configured LBI ATT Lockout are active.
- Value is ON if min. one of configured LBI ATT Lockout is inactive.

▶ New LBO for all FT4 icons

- Created new LBO what reflect all FT4 icons: DPF Inhibit, DPF Lamp, DPF Hest Lamp, DEF Level, Malfunction, Red Lamp Icon, Wrn Lamp Icon.

7 Troubleshooting

7.1 Alarm management 72
 7.2 HistoryFile 75
 6 back to Table of contents

7.1 Alarm management


Following alarms are available:

- ▶ Sensor fail
- ▶ Warning
- ▶ Cooldown
- ▶ Shut down

Note: Type of protection for binary and analog inputs is adjustable in PC tool LiteEdit. In window Modify after double click on input adjust Alarm type.

7.1.1 Sensor fail (Fls)

Sensor fail is detected when measured value is 6% out of selected sensor characteristic. Sensor fail is indicated by ##### symbol instead of measured value.

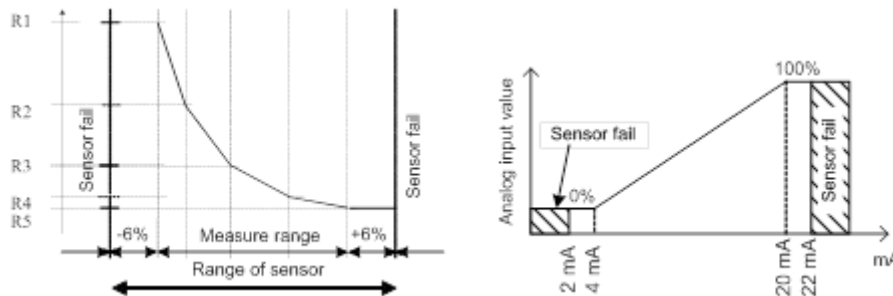

7.1.2 Warning (Wrn)

When warning comes up, only alarm outputs and common warning output are closed.

7.1.3 Cooldown (Cd)

When cooldown comes up, engine is stopped slowly over cooling state.

7.1.4 Shut down (Sd)

When the shutdown alarm comes up, IntelliDrive Marine opens all outputs e.g. FUEL SOLENOID, STARTER and PRESTART to stop the engine immediately. Alarm outputs and common shutdown output are closed. Active or not reset protection disables start.

Note: Engine running only alarms are activated after **Engine protect:** Eng prot del, after the engine RPM > **Engine params:** Starting RPM during the engine starting procedure.

Note: If LBI Sprinkler is active engine does not react on shutdown protection only for Emergency stop and Overspeed protection.

7.1.5 List of possible alarms

Events specification	Protection type	Information on binary output available (see List of LBO (page 226))	Description
Wrn Oil Press	WRN	YES	Oil pressure is smaller than Wrn Oil press setpoint.
Sd Oil Press	SD	YES	Oil pressure is smaller than Sd Oil press setpoint.
Sd NotOilPress	SD	YES	No information about the oil pressure from the binary oil pressure sensor.
Wrn Engine Temp	WRN	YES	Water temperature is greater than Wrn Water temp setpoint.
Sd Engine Temp	SD	YES	Water temperature is greater than Sd Water temp setpoint.
Wrn Fuel Level	WRN	YES	Fuel level is smaller than Wrn Fuel Level setpoint.
Sd Fuel Level	SD	YES	Fuel level is smaller than Sd Fuel Level setpoint.
Ubat	WRN	YES	Battery voltage is out of limits given by Batt overvolt and Batt undervolt setpoints.
Wrn AIN	WRN	YES	Warning alarm configurable on the input of the controller
Sd AIN	SD	YES	Shutdown alarm configurable on the input of the controller.
Wrn AIO	WRN	YES	Warning alarm configurable on the input of plug-in.
Sd AIO	SD	YES	Shutdown alarm configurable on the input of plug-in.

Events specification	Protection type	Information on binary output available (see List of LBO (page 226))	Description
Binary input	Configurable	YES	Configurable Warning/Shutdown alarms on the inputs of IntelliDrive Marine
Battery flat	SD	YES	If the controller switches off during starting sequence due to bad battery condition it doesn't try to start again and activates this protection.
Start failed	SD	YES	Engine start failed.
RPM meas fail	SD	NO	At least one running condition was detected (Poil>Starting POil or energized D+) and do not appear RPM>Starting RPM.
ParamFail	NONE	NO	Wrong checksum of parameters. Happens typically after downloading new firmware or changing of the parameter. The controller stays in INIT mode. Check all parameters, write at least one new parameter.
Overspeed	SD	YES	The protection comes active if the speed is greater than Overspeed setpoint.
Underspeed	SD	YES	During starting of the engine when the RPM reached the value of Starting RPM setpoint the starter is switched off and the speed of the engine can drop under Start RPM again. Then the Underspeed protection becomes active. Protection evaluation starts 5 seconds after reaching StartingRPM.
EmergencyStop	SD	NO	If the input Emergency stop is opened shutdown is immediately activated.
PickupFault	SD	NO	Failure of magnetic pick-up sensor for speed measurement.
Stop fail	SD	YES	Engine stop failed.
WrnServiceTime	WRN	NO	The period for servicing is set by the NextServTime setpoint. The protection comes active if the running hours of the engine reach this value.

Events specification	Protection type	Information on binary output available (see List of LBO (page 226))	Description
ChrgAlternFail	WRN	YES	Failure of alternator for charging the battery.
SprinklActive	WRN	NO	The protection is active if the output Sprinkler is closed.
Wrm RA15 fail	WRN	NO	Warning alarm in case of lost connection to IGL-RA15 module.
Wrm ECU Alarm	WRN	NO	ECU alarm list is not empty
Low BackupBatt	WRN	NO	RTC backup battery is flat

7.2 HistoryFile

InteliDrive Marine stores a record of each important event into the history file. The history file seats 255 records. When the history file is full, the oldest records are removed.

Note: To force history download in LiteEdit (direct, modem or internet) open History window and select History | Read history command.

7.2.1 RecordStructure

Abbreviation	Historical value
Num	Number of historical event
Reason	Event specification
Date	Date of historical event in format DD/MM/YY
Time	Time of historical event in format HH:MM:SS
RPM	Engine speed
RPM3	Engine speed detected on BI3
UBat	Battery voltage
OiP	InteliDrive Marine Analog input 1 value (default Oil pressure)
EngT	InteliDrive Marine Analog input 2 value (default Water temperature)
FLvl	InteliDrive Marine Analog input 3 value (default Fuel level)
AI4	InteliDrive Marine Analog input 4 value
AI5	InteliDrive Marine Analog input 5 value
AI6	InteliDrive Marine Analog input 6 value
AI7	InteliDrive Marine Analog input 7 value
AI8	InteliDrive Marine Analog input 8 value
AI9	InteliDrive Marine Analog input 9 value

AIM1	Plug-in Analog input 1 value
AIM2	Plug-in Analog input 2 value
AIM3	Plug-in Analog input 3 value
AIM4	Plug-in Analog input 4 value
BIN	Binary inputs IntelliDrive Marine
BIM	Binary inputs of plug-in
BOUT	Binary inputs IntelliDrive Marine
BOM	Binary outputs of plug-in
FC	ECU alarm Failure Code
FMI	ECU alarm Failure Mode Identifier

Note: The ECU values are not recorded to history.

7.2.2 Diagnostic Messages read from ECU

Diagnostic messages are read and displayed in extra ECU Alarm list. For Standard J1939 SPN (Suspect Parameter Number), FMI (Failure Mode Identifier) and OC (Occurrence Counter) are shown together with verbal description if available.

One SPN (Suspect Parameter Number) / FMI (Failure Mode Identify) couple describes one fail information. If FMI is equal to 0 or 1, WRN is displayed in the ECU Alarm list. For any other FMI values, FLS is displayed.

Detail SPM/FMI code specification see in:

- ▶ SAE Truck and Bus Control and Communications Network Standards Manual, SAE HS-1939 Publication
- ▶ Or refer to corresponding engine manufacturer's ECU error codes list.

7.2.3 List of ECU Diagnostic Codes

Faultcode	Diagnostic code	Faultcode	Diagnostic code	Faultcode	Diagnostic code
51	ThrottlePos	158	BattPotential	636	PositionSensor
91	AccelPedalPos	168	ElectricalPot	637	TimingSensor
94	FuelDelPress	172	AirInlet Temp	639	J1939 CAN Bus
97	WaterInFuelInd	174	Fuel Temperat	651	InjectorCyl#1
98	EngineOilLevel	175	EngOil Temp	652	InjectorCyl#2
100	EngOil Press	189	RatedEngSpeed	653	InjectorCyl#3
101	CrankcasePress	190	EngineSpeed	654	InjectorCyl#4
102	Boost Press	231	J1939 Datalink	655	InjectorCyl#5
105	Intake Temp	237	VIN	656	InjectorCyl#6
106	AirInletPress	515	EngDesOpSpeed	677	EngStartRelay
107	AirFiltDifPres	620	5V SupplyFail	898	RequestedSpeed
108	BarometricPres	626	PrehActuator	970	AuxEngSdSwitch
110	EngCool Temp	628	EMSProgFailure	971	EngDerateSwth
111	Coolant Level	629	Controller#1	1109	EngSdApproach
153	CrankcasePress	630	CalibrMemFail	1110	Engine Sd


Note: IntelliDrive Marine controller doesn't support J1587 diagnostic line on Volvo engines. This can cause in some cases a J1939 alarm message FC:000608 due to missing J1587 bus. Contact your Volvo distributor to update ECU firmware.

For Scania Fault codes (FC) are displayed. Following messages are available for particular groups of Fault codes:

Faultcode	Diagnostic code	Faultcode	Diagnostic code
0x1000	Overspeed	0x6702	AlternatorChrg
0x1100	EngSpdSensor1	0x6A00	ExhaustBrkAct
0x1200	EngSpdSensor2	0xB000	OilPressProt
0x2000	WtrTempSensor	0xB100	CoolantLevProt
0x2100	ChrgAirTmpSens	0xB200	OverheatCoolWt
0x2200	ChrgAirPrsSens	0xB300	EmergencyStop
0x2300	OilTempSensor	0xB501	CoolantLevel
0x2400	OilPressSensor	0xC000	PDEInjctorCyl1
0x2600	SensorSupply1	0xC100	PDEInjctorCyl2
0x2700	SensorSupply2	0xC200	PDEInjctorCyl3
0x2800	ExtrAnalogInp	0xC300	PDEInjctorCyl4
0x3200	BatteryVoltage	0xC400	PDEInjctorCyl5
0x3300	CAN msg not ok	0xC500	PDEInjctorCyl6
0x3403	CAN version	0xC600	PDEInjctorCyl7
0x4300	HWWatchdog	0xC700	PDEInjctorCyl8
0x6200	FanActuator	0xE200	OverheatProt
0x6400	WasteGateAct	0xE600	CoordEmergStop
0x6600	StarterActuatr		

7.2.4 Tier4 diagnostic codes

Aftertreatment

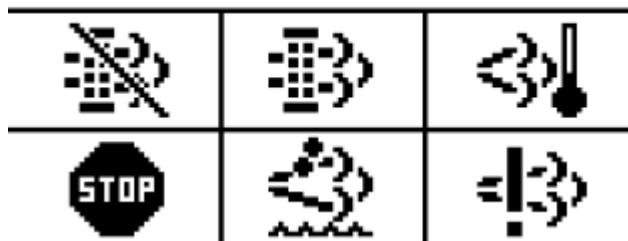

Meaning of the pictograms:

Pictogram	Meaning	Description
	Diesel Particulate Filter Active Regeneration Inhibited Due to Inhibit Switch	Steady light - SPN 3703 = 01b
	Diesel Particulate Filter Lamp Command	Steady light - SPN 3697 = 001b Flash 1 Hz - SPN 3697 = 100b

	Soot level in the DPF indicates need for filter cleaning	Diagnostic Trouble Code: SPN = 3719, FMI = 15
	Soot level is "moderately high" and engine performance is reduced by ECU	Diagnostic Trouble Code: SPN = 3719, FMI = 16
	Soot level is extremely high and engine performance is reduced by ECU and ECU will perform a shutdown for engine protection	Diagnostic Trouble Code: SPN = 3719, FMI = 00
	Exhaust System High Temperature Lamp Command	Steady light - SPN 3698 = 001b
	Red Stop Lamp	Steady light - SPN 623 = 01b
	Flash Red Stop Lamp	Flash 1 Hz - SPN 3039 = 00b
	Amber Warning Lamp	Steady light - SPN 624 = 01b
	Flash Amber Warning Lamp	Flash 1 Hz - SPN 3040 = 00b Flash 2 Hz - SPN 3039 = 01b
	Fluid Tank Low Level Indicator (DEF Level Low)	Steady light - SPN 5245 = 001b Flash 1 Hz - SPN 5245 = 100b
	DEF tank has 0% measurable volume and machine performance is reduced	Diagnostic Trouble Code: SPN = 1761, FMI = 18
	DEF system has lost its prime and machine performance is reduced.	Diagnostic Trouble Code: SPN = 1761, FMI = 01
	Malfunction Indicator Lamp (indicates that the active trouble code is emission-related)	Steady light - SPN 1213 = 01b
	Flash Malfunction Indicator Lamp (indicates that the active trouble code is emission-related)	Flash 1 Hz - SPN 3038 = 00b Flash 2 Hz - SPN 3038 = 01b

8 Technical data

8.1 Power supply	79
8.2 Operating conditions	80
8.3 Low Temperature modification	80
8.4 Dimensions and weight	80
8.5 Binary inputs and outputs	81
8.6 Analog inputs	81
8.7 Speed pick-up input	81
8.8 D+ function	82
8.9 CAN bus interface	82
8.10 IL-NT RS232 (Optional card)	82
8.11 IL-NT RS232-485 (optional card)	83
8.12 IL-NT S-USB (optional card)	83
8.13 IB-Lite (optional card)	83
8.14 IL-NT GPRS (optional card)	83
8.15 IL-NT AOUT8 (optional card)	83
8.16 IL-NT AIO (optional card)	84
8.17 IL-NT IO1 (optional card)	84
8.18 IL-NT BIO8 (optional card)	84
8.19 IGL-RA15 (optional Remote Annunciator)	85
8.20 Intel RPU (optional Redundant Protection Unit)	85

[6 back to Table of contents](#)

8.1 Power supply

Power supply range	8-36 VDC
Power supply drop-out immunity	100 ms from min. 10 V return to min. 8 V
Power consumption	40-440 mA depend on supply voltage and temperature
Consumption depends on supply voltage	0,104 A at 8 VDC
	0,080 A at 12 VDC
	0,051 A at 24 VDC
	0,044 A at 30 VDC
	0,040 A at 36 VDC
Battery voltage measurement tolerance	2 % at 24 V

Note: For the supply voltage less than 7 V the backlight of the display is switched off. Short-term voltage drops (e.g. during the engine cranking) do not affect the operation at all.

8.2 Operating conditions

Operating temperature IntelliDrive Marine	-20 +70°C
Operating temperature IntelliDrive Lite LT	-40 +70°C
Storage temperature	-30 +80°C
IP protection class	IP65
Humidity	95% without condensation
Standard conformity	
Low Voltage Directive	EN 61010-1:95 +A1:97
Electromagnetic Compatibility	EN 50081-1:94, EN 50081-2:96
	EN 50082-1:99, EN 50082-2:97
Vibration	5 - 25 Hz, $\pm 1,6$ mm
	25 - 100 Hz, a = 4 g
Shocks	a = 200 m/s ²

8.3 Low Temperature modification

LCD display limits range for controller operating temperature: from -20°C to +70°C, even if the other electronic components work in wider temperature range.

Internal preheating foil is mounted in IntelliDrive Lite LT to extend display operational temperature range.

Preheating starts at temperature below 5°C and preheating power depends on temperature and power supply voltage.

Preheating foil increases controller current consumption

Controller consumption at	No preheating	Preheating at ambient temperature		
		0 °C	-20 °C	-40 °C
12VDC	80 mA	+75 mA	+210 mA	+325 mA
24VDC	51 mA	+31 mA	+100 mA	+175 mA

8.4 Dimensions and weight

Dimensions	180x120x55mm
Weight	450g

8.5 Binary inputs and outputs

8.5.1 Binary inputs

Number of inputs	7
Input resistance	4,2 kOhm
Input range	0-36 VDC
Switching voltage level for close contact indication	0-2 V
Max voltage level for open contact indication	8-36 V

8.5.2 Binary open collector outputs

Number of outputs	7
Maximum current	0,5A
Maximum switching voltage	36VDC

8.6 Analog inputs

Not electrically separated	
Number of inputs	9 (3 resistive and 6 voltage)
Resolution	10 bits
Wiring selectable range	V, Ohm
Maximal resistance range	2400 Ohm
Maximal voltage range	10 V
Current range	0-20mA
Input impedance 180Ohm for mA measuring	
Input impedance > 100 kOhm for V measuring	
Resistance measurement tolerance	±2% ±2 Ohm out of measured value

8.7 Speed pick-up input

Type of sensor	magnetic pick-up (connection by shielded cable is recommended)
Minimum input voltage	2Vpk-pk (from 4Hz to 4kHz)
Maximum input voltage	50Veff
Minimum measured frequency	4Hz
Maximum measured frequency	10 kHz (min. input voltage 6Vpk-pk)
Frequency measurement tolerance	0,2%

8.8 D+ function

Max. D+ output current	300 mA
Guaranteed level for signal Charging OK	80% of supply voltage

8.9 CAN bus interface

Galvanically separated

Maximal CAN bus length	200m
Speed	250kBd
Nominal impedance	120Ohm
Cable type	twisted pair (shielded)

Following dynamic cable parameters are important especially for maximal 200 meters CAN bus length and 32 IS-COM units connected:

Nominal Velocity of Propagation	min. 75% (max. 4,4ns/m)
Wire crosscut	min. 0,25mm ²
Maximal attenuation (at 1 MHz)	2 dB / 100m

Recommended Industrial Automation & Process Control Cables:

BELDEN (see <http://www.belden.com>):

- ▶ 3082A DeviceBus for Allen-Bradley DeviceNet
- ▶ 3083A DeviceBus for Allen-Bradley DeviceNet
- ▶ 3086A DeviceBus for Honeywell SDS
- ▶ 3087A DeviceBus for Honeywell SDS
- ▶ 3084A DeviceBus for Allen-Bradley DeviceNet
- ▶ 3085A DeviceBus for Allen-Bradley DeviceNet
- ▶ 3105A Paired EIA Industrial RS485 cable

LAPP CABLE (see <http://www.lappcable.com>)

- ▶ Unitronic BUS DeviceNet Trunk Cable
- ▶ Unitronic BUS DeviceNet Drop Cable
- ▶ Unitronic BUS CAN
- ▶ Unitronic-FD BUS P CAN UL/CSA

8.10 IL-NT RS232 (Optional card)

Plug-in into IntelliDrive Lite controller COMMUNICATION MODULE port.

Maximal distance	10m
Speed	19.2kBd (STD) 9.6kBd (MODBUS)

Recommend external converter:

ADVANTECH – ADAM 4520: RS232 to RS422/485 converter, DIN rail, automatic RS485 bus supervision, no external data flow control signals, galvanic isolated.

Recommended internal converter:

ADVANTECH – PCL-745B or PCL745S : Dual port RS422/485 Interface card, automatic RS485 bus supervision, no external data flow control signals, galvanic isolated.

8.11 IL-NT RS232-485 (optional card)

Plug-in into IntelliDrive Lite controller COMMUNICATION MODULE port.

Maximal distance	10m (RS232), 1200m (RS485)
Maximum Speed	Up to 57.6 kBd (DIRECT), 38.4kBd Analog modem, 9.6 kBd digital modem, 57.6 kBd (MODBUS)

8.12 IL-NT S-USB (optional card)

Plug-in into IntelliDrive Marine controller COMMUNICATION MODULE port.

Maximal distance	5m
Maximum Speed	Up to 57.6 kBd (DIRECT), 38.4kBd Analog modem, 9.6 kBd digital modem, 57.6 kBd (MODBUS)

Use only shielded A-B USB cables up to 5m length.

Recommend USB cable: USB-LINK CABLE 1.8M - ComAp A-B USB cable.

8.13 IB-Lite (optional card)

Plug-in into IntelliDrive Lite controller COMMUNICATION MODULE port.

10/100 MBit ethernet interface in RJ45 socket.

8.14 IL-NT GPRS (optional card)

Plug-in into IntelliDrive Marine3 controller COMMUNICATION MODULE port.

GSM/GPRS modem	
Quad Band	850/900/1800/1900MHz
GPRS multi-slot	class 10
CSD communication	up to 14.4kbps
TCP/IP communication	over GPRS
Voltage supply	8-36VDC

8.15 IL-NT AOUT8 (optional card)

Plug-in into IntelliDrive Marine controller EXTENSION MODULE port.

Number of PWM outputs	8
PWM frequency	1200Hz
Maximum current	0,5A
Maximum switching voltage	36VDC
Output resistance	10hm
Resolution	10bits

8.16 IL-NT AIO (optional card)

Plug-in into IntelliDrive Marine controller EXTENSION MODULE port.

Resolution	10bits
Inputs	
Number of Analog inputs	4 (2400Ohm, 20mA, 4V)
Maximal resistance range	2400Ohm
Maximal voltage range	4V
Current range	0-20 mA
Input impedance (current)	180Ohm for mA measuring
Input impedance (voltage)	>68 kOhm for V measuring
Resistance measurement tolerance	±2% ±2 Ohm
Voltage measurement tolerance	±1% ±1mV
Current measurement tolerance	±2% ±0,2mA
Outputs	
Number of Analog outputs	1 (21mA, max.load 100Ohm; 4,6V, max.10mA;PWM 500Hz (5V / 10mA)
Voltage measurement tolerance	±1,5% ±10mV
Current measurement tolerance	±2% ±0,1mA

8.17 IL-NT IO1 (optional card)

Plug-in into IntelliDrive Marine controller EXTENSION MODULE port.

Number of Analog outputs	4
Analog output range	0 to +VBatt ±1V
Number of Binary inputs	4

8.18 IL-NT BIO8 (optional card)

Plug-in into IntelliDrive Marine controller EXTENSION MODULE port.

Number of Binary inputs/outputs	8 (configurable as input or output)
Maximal one Binary output current	0,4A
Maximal total current per module	2,5A

8.19 IGL-RA15 (optional Remote Annunciator)

8.19.1 Power supply

Voltage supply	8-36VDC
Consumption	0,35-0,1A (+1A max horn output), depends on supply voltage

8.19.2 Operating conditions

Operating temperature	-20 +70°C
Storage temperature	-30 +80°C
Protection front panel	IP65

8.19.3 Dimensions and weight

Dimensions	180x120x55mm
Weight	950g

8.19.4 Horn output

Maximum current	1A
Maximum switching voltage	36VDC

8.20 Intel RPU (optional Redundant Protection Unit)

8.20.1 Power supply

Voltage supply	8-36VDC
Consumption	0.1 A / 8 VDC 0.07 A / 12 VDC 0.04 A / 24 VDC 0.03 A / 36 VDC
Fusing	1 A

8.20.2 Operating conditions

Operating temperature	-40 +70°C
Storage temperature	-40 +80°C
Operating humidity	95 % without condensation
Vibration	2 - 25 Hz, ±1,6mm 25 - 100 Hz, a = 4 g
Shocks	a = 500 m/s ²

8.20.3 Dimensions

Dimensions	110x110x46mm
------------	--------------

8.20.4 Binary input ES

Number of inputs	1 non-isolated, (ESTOP dedicated)
Input range	0-36VDC
Close indication	Negative Power supply terminal
Emergency stop condition	Open contact

8.20.5 Binary input CU

Number of inputs	2 direct to binary outputs via relay
Input range	0-36VDC
Close/Open indication	N/A, wired directly to outputs via relay

8.20.6 Binary input CONTROLLER

Number of inputs	2 isolated
Input range	0-36VDC
Close/Open indication	Close indication when V > 3V Open indication when V < 3V

8.20.7 Binary output CONTROLLER

Number of outputs	2 isolated
Max current	10mA continuous
Type	OptoRelay

8.20.8 Binary outputs ENG

Number of outputs	2 Non-isolated
Max current	0,5 a continuous
Type	Low-side switch (controller switches output to negative power supply terminal)

8.20.9 Magnetic pick-up input

Voltage input range	4 Vpk-pk to 50 Vpk-pk (@4Hz to 1kHz)
	6 Vpk-pk to 50 Vpk-pk (@1kHz to 5kHz)
	10 Vpk-pk to 50 Vpk-pk (@5kHz to 10kHz)
Frequency input range	4 Hz to 10 kHz
Frequency measurement tolerance	0.2 % from range 10kHz

9 Function description



9.1 Engine operation states	88
9.2 OFF mode	88
9.3 MAN mode	88
9.4 AUT mode	91
9.5 Engine without pickup operation	91
9.6 Engine timer	91
9.7 Protections	92
9.8 Engine RPM control in MAN mode	93
9.9 AUT mode: Engine load limitation - overview	95
9.10 AUT mode: Engine regulation by RPM control - overview	101

[6 back to Table of contents](#)


9.1 Engine operation states


Engine State	Meaning
Init	Auto test during controller power on
Not ready	Engine is not ready to start
Prestart	Prestart sequence in process, Prestart output is closed
Cranking	Engine is cranking
Pause	Pause between start attempts
Starting	Starting RPM is reached, Idle RPM is not yet reached
Idle	Idle RPM is reached and the Idle timer is running
Running	Idle timer elapsed, Engine is running at nominal speed
Stop	Stop
Shutdown	Shut-down alarm activated
Ready	Engine is ready to run
Cooling	Engine is cooling before stop
EmergMan	Emergency Manual engine operation
AfterCool	Engine after cooling - Cooling Pump output is closed

9.2 OFF mode

No start of the engine is possible. Outputs STARTER and FUEL SOLENOID are not energized. No reaction if ,  buttons are pressed.

9.3 MAN mode

 - starts the engine.



 - stops the engine.

Note: The engine can run without load unlimited time.

Note: The controller does not automatically stop the running engine in MAN mode.

Note: The controller does not start the engine when binary input REM START/STOP is closed.

9.3.1 Start-stop sequence (simplified)

MODE = MAN (Engine start/stop request is given by pressing buttons  and )

MODE = AUT (Engine start/stop request is given by binary input REM START/STOP)

State	Condition of the transition	Action	Next state
Ready	Start request	PRESTART on Prestart time counter started	Prestart
	RPM > 2 or Oil pressure detected or D+ is active		Stop (Stop fail)
	OFF mode selected or Shut down alarm active		Not Ready
Not Ready	RPM < 2, Oil pressure not detected, D+ not Active, no shutdown alarm active, other than OFF mode selected		Ready
Prestart ¹	Prestart time elapsed	STARTER on FUEL SOLENOID on ² MaxCrank time counter started	Cranking
Cranking ¹	RPM > Start RPM AND BI: Nominal/Idle is active	STARTER off PRESTART off	Starting
	RPM > Start RPM AND BI: Nominal/Idle is not active	STARTER off PRESTART off READY TO LOAD on	Running
	D+ input activated for 1s or oil pressure detected	STARTER off PRESTART off	Cranking
	MaxCrank time	STARTER off	Crank pause

State	Condition of the transition	Action	Next state
	elapsed, 1st attempt	FUEL SOLENOID off STOP SOLENOID on CrankFail pause timer started	
	MaxCrank time elapsed, last attempt	STARTER off PRESTART off	Shutdown (Start fail)
Crank pause ¹	CrankFail pause elapsed	STARTER on FUEL SOLENOID on ² STOP SOLENOID off MaxCrank time counter started	Cranking
Starting ¹	BI: Nominal/Idle is active	FUEL SOLENOID on ² STOP SOLENOID off READY TO LOAD off	Idle
	RPM = 0 or any other shutdown condition	FUEL SOLENOID off STOP SOLENOID on	Shutdown
	60 sec. Elapsed	FUEL SOLENOID off STOP SOLENOID on	Shutdown (Start fail)
Idle ¹	BI: Nominal/Idle is active Idle timer Elapsed	FUEL SOLENOID on ² STOP SOLENOID off READY TO LOAD off	Running
	RPM = 0 or any other shutdown condition	FUEL SOLENOID off STOP SOLENOID on	Shutdown
Running	Stop request	READY TO LOAD off Cooling time timer started	Cooling
	BI: Nominal/Idle is active	FUEL SOLENOID on STOP SOLENOID off READY TO LOAD off	Running
	RPM = 0 or any other shutdown condition	FUEL SOLENOID off STOP SOLENOID on READY TO LOAD off	Shutdown
Cooling	Cooling time elapsed	FUEL SOLENOID off STOP SOLENOID on	Stop
	RPM = 0 or any other shutdown condition	FUEL SOLENOID off STOP SOLENOID on	Shutdown

State	Condition of the transition	Action	Next state
	Start request	READY TO LOAD on	Running
Stop	RPM = 0, Oil pressure not detected, D+ not active		Ready
	60 sec. Elapsed		Stop (Stop fail)

¹The start-up sequence can be interrupted in any time by coming stop request



²Fuel solenoid is switched on with advance of 1s fixed before starter motor is switched on.

Note: Threshold level for D+ input is 80% supply voltage; activation delay is 1s (to override short firings during cranking – for example in cold conditions).

Speed request:

Engine speed is constant or set manually using **Engine params** setpoints and Binary inputs.

9.4 AUT mode

The controller does not respond to ,  buttons. Engine start/stop request is given by binary input REM START/STOP.

Engine speed request is sourced from PI loop (see below function 3) in AUT mode.

PI loop and Hysteresis comparator functions can be used both for Engine Load Limitation or any other control function.

Speed request:

Engine speed is adjusted automatically by internal PID loops (when active) - **Regulator** setpoints group.

9.5 Engine without pickup operation

The RPM pickup input is ignored when **Engine params**: Gear teeth = 0. The engine running state is then detected based on **Engine params**: Starting POil or **Engine params**: D+ function = ENABLED.

Starting Poil signal can be analog or binary. Even the binary signal is to be connected to AIN1 input. In LiteEdit, window *Modify*, input *Oil Pressure*, check off the option *Binary*. The setpoint *Starting Poil* set to 1.

9.6 Engine timer

9.6.1 MAN mode

Set the **Engine params**: *Running Timer*. Start engine in MAN mode by START button. Engine stops itself after *Running Timer* is over. The STOP button cancels timer (forces cooling), the second STOP cancels cooling (forces engine stop). Engine stays running when *Running Timer* = 0.

9.6.2 AUT mode

Engine starts and runs all the time when the LBI Rem start/stop is closed. RemoteStart LBI starts the engine by rising edge, Remote Stop LBI stops the engine by rising edge. Running Timer has no function in AUT mode. To stop the engine the Rem start/stop has to be opened or controller switched to MAN. Panel STOP button has no effect when Rem start/stop is closed in AUT, but skip the timer and switch to cooling when Rem start/stop is opened.

Note: The controller also includes two identical timers with function for auto start and stop with different condition. Use Date/Time setpoints group. For explanation see chapter Setpoints.

	MAN mode		AUT mode	
	RunTimer = 0 = disabled	RunTimer > 0 = enabled	RunTimer = 0 = disabled	RunTimer > 0 = enabled
Rem s/s = ON	No function		Start and Run unlimited time	
Rem s/s = OFF			Cooling	Cooling after RunTimer is over
START	Engine runs unlimited time until STOP	Engine start-runs Run.time and then Cooling-Stop	No function	When Rem s/s = OFF only: Engine start-runs Run.time and then Cooling-Stop
STOP	Cooling		No function when Rem s/s = 1 Cancels timer when Rem s/s = 0	
2-nd STOP	Stop			

9.7 Protections

The controller protects the engine and the driven machine as well.

When an alarm occurs, these actions are taken: on the controller front side, the yellow or red LED starts to blink. The LBO Alarm is activated, which allows turning on another distant alarm light, horn or other device. Finally, the event of alarm is written into history.

The majority of possible faults are watched in three levels.

The alarm Warning (Wm, yellow color) signals that the watched value approaches the dangerous level.

The alarm ShutDown (Sd, red color). The main protected parameters are the minimal oil pressure, minimal and maximal speed, maximal cooling water temperature. The information about these analog values is brought into the controller through analog inputs (AIN) or, in the case of an electronic engine (engine equipped by ECU), by CAN bus.

The alarm CoolDown Cd, red color). Its configurable type of alarm, where isn't necessary immediately to stop the engine. E.g. because of low fuel level can be the engine switched by degrees over cooling time and idle speed.

Apart from here above mentioned "ready to wear" basic protections, the user can configure each analog or binary input as a protection. The configuration of binary inputs is done in LiteEdit, in the window Modify.

Note: Class B protection: for binary inputs configured as a protection, the individual delay can be set by the means of setpoints BIN1 Prot Del, BIN2 Prot Del, etc.

The configuration of the analog inputs can be done by a similar way, in LiteEdit, in the window Modify and in the group of setpoints Engine protect, where is possible to set the alarm levels by means of setpoints.

Note: Class C protection: the analog inputs AIN4, AIN5, AIN6 and AIN7 behave either “normally” or according to the class C definition according to the SP AINx Eval.


IMPORTANT: The LBI Prot Test blocks temporarily all the protections in order to perform tests etc.

Note: For other details about the protections, see the paragraphe Setpoints, Engine protect.

9.8 Engine RPM control in MAN mode

There are following options to setup and change the engine speed:

- ▶ Start to Nominal RPM and run at constant speed.
- ▶ Start to Idle speed and Automatically (Idle time) or manually by Binary input: Nominal/Idle
- ▶ ramp to Nominal (or preset) RPM.
- ▶ Switch the RPM in three steps by Binary inputs BI Speed Sel1, 2, 3.
- ▶ Ramp engine RPM Up/Down by Binary inputs BI Speed Up and Speed Down.
- ▶ Control engine RPM by Analog input - e.g. by potentiometer.

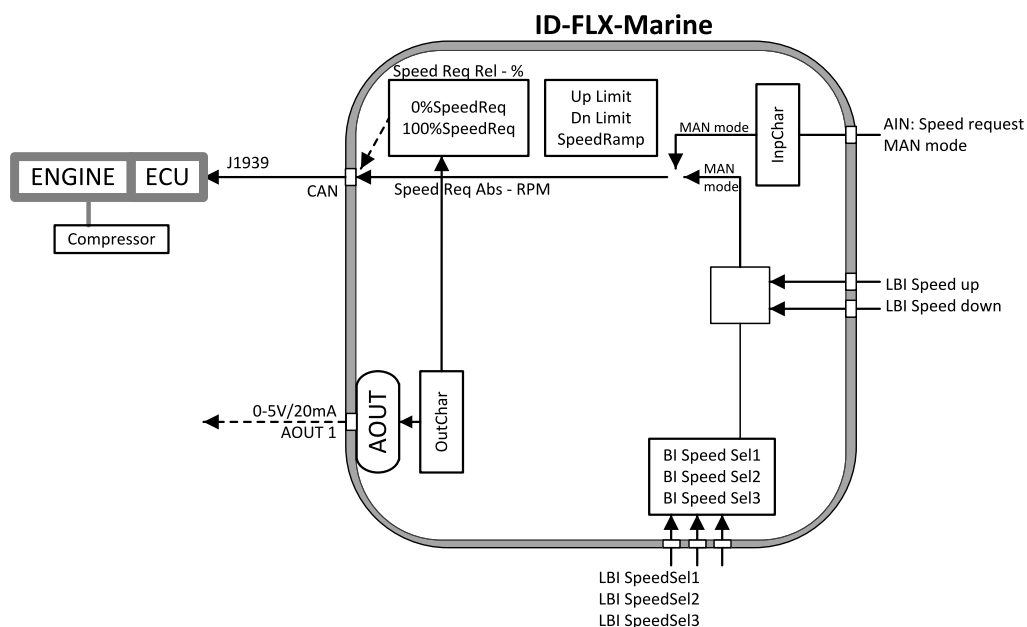

9.8.1 Engine RPM Idle - Nominal switching

Binary input Nominal/Idle switches RPM to **Engine params: Idle speed** when closed (in MAN mode only). Opened input ramps to **Engine params: ECU SpeedAdj**. No RPM control is active in engine Idle state.

9.8.2 Engine RPM two/three levels switching

Continuing example above closed BI Speed Sel1, 2, 3 ramps the Engine RPM to the selected setpoint level.
... i.e. switched/ramped to another three levels.

Note: Necessary condition: **Regulator:** LAI SpeedReq = OFF and controller MAN mode.

9.8.3 Engine RPM by Up/Down buttons settings



RPM adjusted in examples above can be changed by BI Speed Up / Speed Down when the Engine params: RetToSpeedAdj = DISABLED.

Note: Necessary condition: **Regulator:** LAI SpeedReq = OFF and controller MAN mode.


9.8.4 Engine RPM continuous change (using potentiometer)

Adjust **Regulator:** LAI SpeedReq = AI1-9 ... to corresponding controller or extension module analog input.

Configure this Analog input - sensor characteristic in RPM or Percentage (expected potentiometer resistance 2,5kOhm in example below). **Engine params:** Speed ramp setpoint is active.

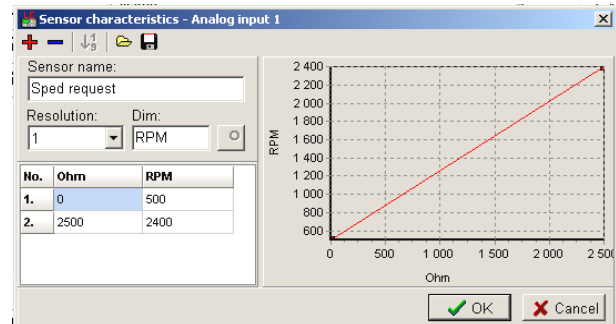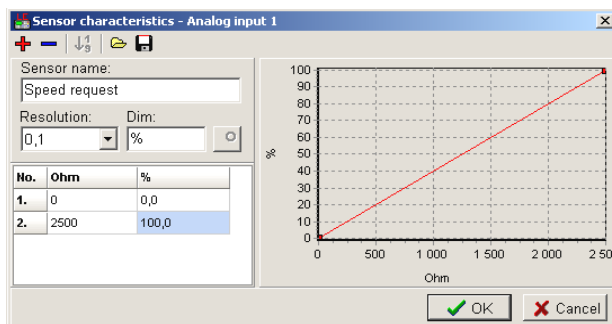

9.8.5 Speed request chart

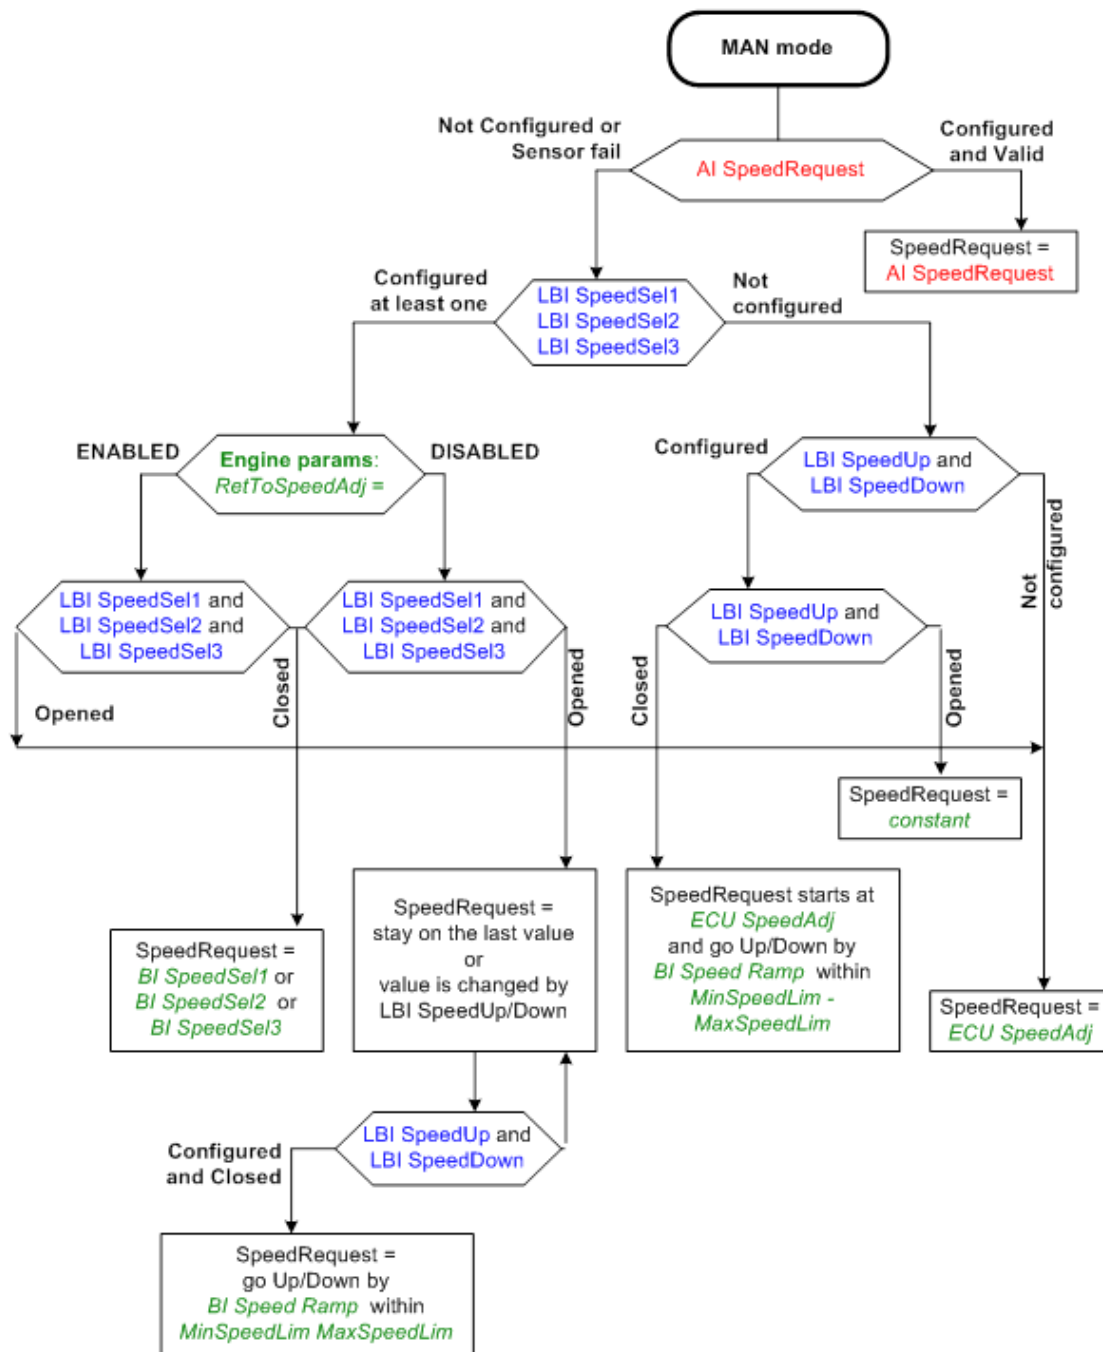

9.9 AUT mode: Engine load limitation - overview

Functions below can reduce the engine load when is over adjusted limit.


Two functions 1st PI loop and 2nd Comparator with Hysteresis (CMPH) are available and these functions are described below. The function setup is done by corresponding setpoints in **Load limit** group. This group has one PI loop and one CMPH. Both functions can use different inputs from ECU (Engine Load or RPM) or from pickup (RPM) or value from Analog input.

PI loop and Hysteresis comparator functions can be used for Engine Load Limitation or for any other control function.

IMPORTANT: Regulator is working permanently in AUT mode.

In table below see different operation conditions.

Condition	Analog output LoadLimitAnOut	Binary output Load switch
OFF mode	=0	=0
MAN mode	In operation	In operation
AUT mode	In operation	In operation
Running	In operation	In operation
Stop = Not Running	In operation	In operation
Sd protection	Load limit: Bias	
LBI L Reg Disable = 1	Load limit: Bias	

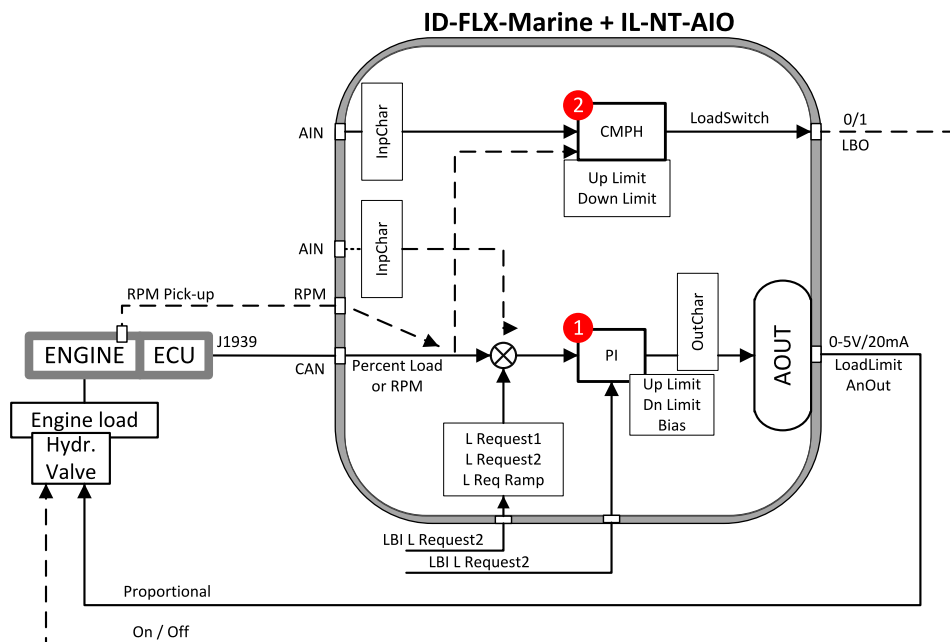

9.9.1 Functions 1 and 2

LBI	Active input:
LoadRequest2	Switch to Load Request 2
LoadRegDisable	Set PI Regulator output to constant P Bias Regulator is working when this LBI is not configured.
LBO	Function:
LoadSwitch	Load Comparator output (Up/Down Limit)
LAO	Function:
LoadLimitAOut	Analog output of Load Limitation PI control loop.

9.9.2 Functions 1 and 2 setpoints

Load limit	Values
Load Input	ECU: RPM, Load, CU: AI1-AI9, AIO: AI1-AI4
Load Bias	0 - 10000 [-]
LoadRequest 1	± 10000 [-]
LoadRequest 2	± 10000 [-]
LoadReq Ramp	1 - 10000Å [-]
LoadUpLimit	0 - 10000 [-]
LoadDnLimit	0 - 10000 [-]
Load Gain	0,0 ± 200,0%
Load Integral	0,0% - 100,0%
Load CMP Input	ECU: RPM, Load, CU: AI1-AI9, AIO: AI1-AI4
Load CMP Off	± 10000 [-]
Load CMP On	± 10000 [-]

Note: For more information see chapter Setpoints.

Functions 1 and 2 examples


- ▶ General PI control loop
- ▶ Engine Load limitation with analog output
- ▶ General comparator
- ▶ Engine Load limitation with On/Off output
- ▶ Speed switch

General PI control loop

Purpose: PI control of any value.

Description: PI detects the difference between actual and requested value and changes the output to keep the controlled value on the limit. Can be used PI in function 1 or 3

Function requires plug-in module with Analog output.

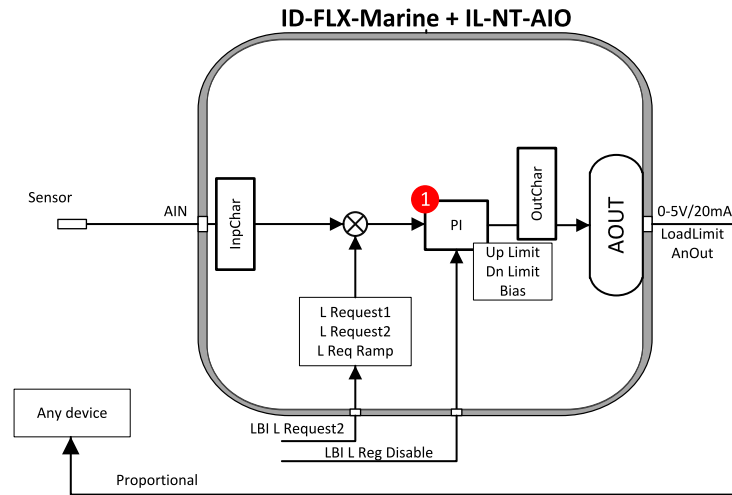


<p>Input</p>	<p>▶ Analog input:</p> <ul style="list-style-type: none"> ● CU: AI1-AI9 ● AIO: AI1-AI4 <p><u>PI function 1</u></p> <p>Binary input: LoadRequest2 (optional)</p> <p>Binary input: LoadRegDisable (optional)</p> <p><u>PI function 3</u></p> <p>Binary input: RegRequest2 (optional)</p> <p>Binary input: R Reg Disable (optional)</p>
<p>Output</p>	<p>Analog output: Load Limit (plug-in module)</p> <p>Analog output: ByRPMCtrlAout (plug-in module)</p>
<p>Setpoints</p>	<p>▶ Load limit:</p> <ul style="list-style-type: none"> ● Load Input = Load ● Load Bias ● Load Request 1 ● Load Request 2 ● Load ReqRamp ● Load UpLimit ● Load DownLimit ● Load Gain ● Load Integral <p>▶ Regulator:</p> <ul style="list-style-type: none"> ● Reg Input ● Reg Bias ● Request ● Request 2

	<ul style="list-style-type: none"> ● Reg Gain ● Reg Integral
--	--

Engine load limitation with analog output

Purpose: Protect the engine against overload by reducing the load.

Description: The engine load (e.g. feeder speed) is reduced when actual “Percentual load” (coming from ECU) is over the **Load limit**: LoadRequest1 (or LoadRequest2) setpoint. Load can be continuously reduced by Analog output or switched between two levels by Binary output to keep the Engine load on or below the limit.

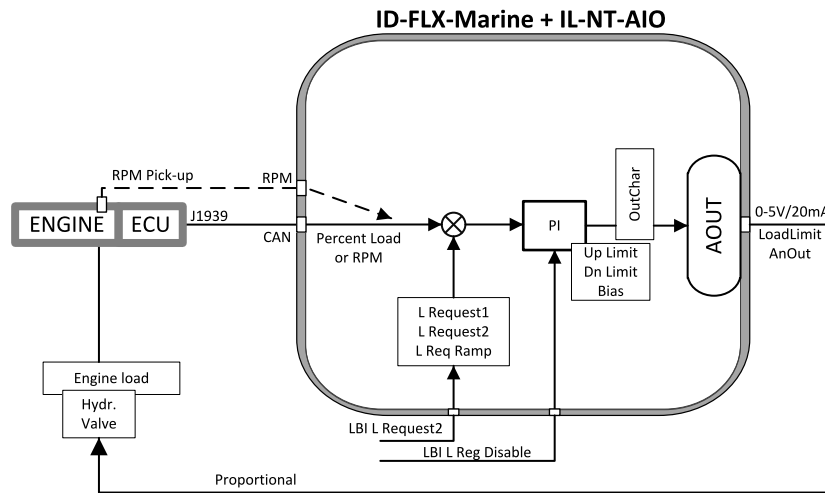


Input	J1939 - Actual Load in % Binary input: L Request 2 (optional) Binary input: Reg Disable (optional)
Output	Analog output: Load LimitAnOut (plug-in module) Note: LoadLimitAnOut range = 0 - 10000
Setpoints	<ul style="list-style-type: none"> ▶ Load limit: <ul style="list-style-type: none"> ● Load Input = Load ● Load Bias ● Load Request ● Load Request 2 ● Load ReqRamp ● Load UpLimit ● Load DownLimit ● Load Gain ● Load Integral

General comparator

Purpose: Switch on/off some device depends on analog value - e.g. temperature.

Description: The function activates/deactivates some device based e.g. on temperature.

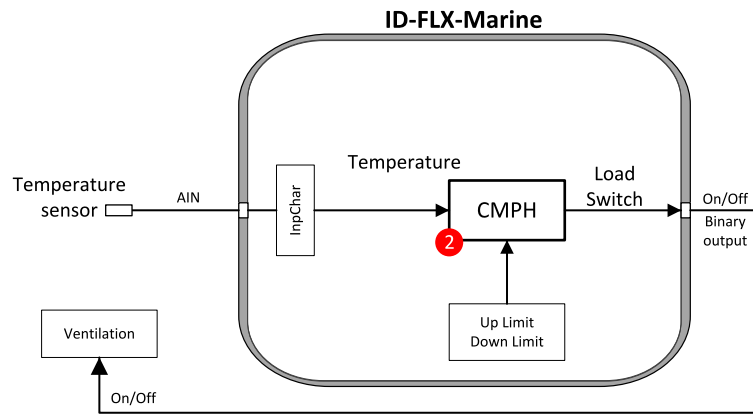


Input	<ul style="list-style-type: none"> ▶ Analog input: <ul style="list-style-type: none"> ● CU: AI1-AI9 ● AIO: AI1-AI4
Binary output	Load Switch
Setpoints	<ul style="list-style-type: none"> ▶ Load limit: <ul style="list-style-type: none"> ● Load CMP Input = AI1 ● Load CMP On = 90 ● Load CMP Off = 80

Engine load limitation with On/Off output


Purpose: Protect the engine against overload by reducing (switching On/Off) the load.

Description: CMPH (Comparator with Hysteresis) detect the RPM decrease below the Down limit, activates the Binary output Load switch that reduces (slow down feeder) the load. There are expected corresponding droop characteristics on the engine.

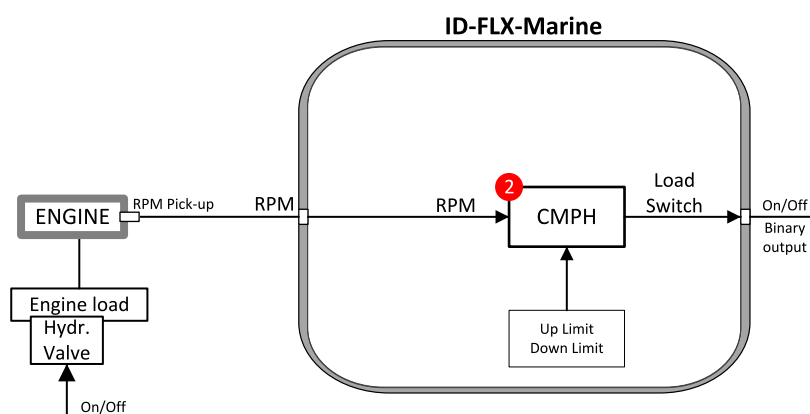

Input	RPM from pickup (or ECU)
Binary output	Load Switch
Setpoints	<ul style="list-style-type: none"> ▶ Load limit: <ul style="list-style-type: none"> ● Load CMP Input = RPM


	<ul style="list-style-type: none"> • Load CMP On = e.g. 2000 • Load CMP Off = e.g. 2200
--	---

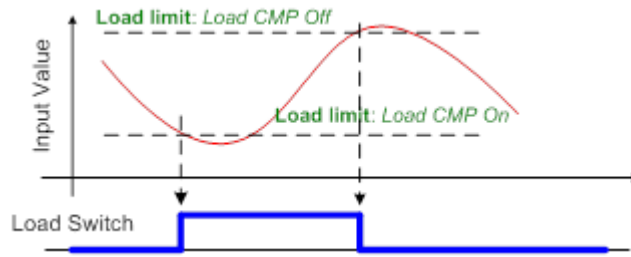

Speed switch

Purpose: Switch on/off some device depends on RPM level.

Description: Depends on setpoint settings the CMPH (Comparator with Hysteresis) activates/deactivates the Binary output Load switch that switch off some device when RPM is below adjusted limit.

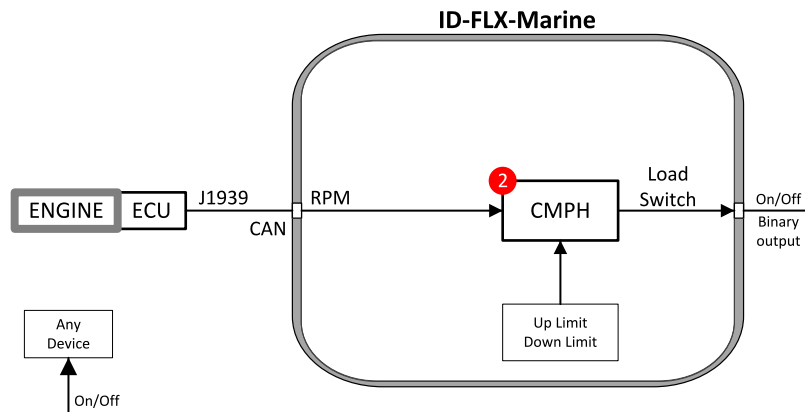

Input	Analog input
Binary output	Load Switch
Setpoints	<p>▶ Load limit:</p> <ul style="list-style-type: none"> • Load CMP Input = Actual Load • Load CMP On = 2000 • Load CMP Off = 2200

9.10 AUT mode: Engine regulation by RPM control - overview

Functions below can automatically change the engine RPM to keep value measured on controller (plug-in module) Analog input (e.g. Pressure) on adjusted level.


Functions 3 = PI loop and 4 = Comparator with Hysteresis (CMPH) are available. The function setup is done by corresponding setpoints in **Regulator** group. This group has one PI loop and one CMPH.

The PI function output is Speed request transmitted via J1939 or Analog output. Both functions can use controller or plug-in IL-NT-AIO module Analog inputs.


Note: In Regulator is input only from analog inputs or from RPM-BI3.

In table below see different operation conditions.

Condition	Speed request	Binary output SpeedSwitch
OFF mode	Engine params: Idle speed	=0
MAN mode	Manual	In operation
AUT mode	Automatic by PI loop	In operation
Stop = Not Running	Engine params: Idle speed	In operation
Sd protection	Engine params: Idle speed	In operation
LBI R Reg Disable = 1	Regulator: Reg Bias	In operation

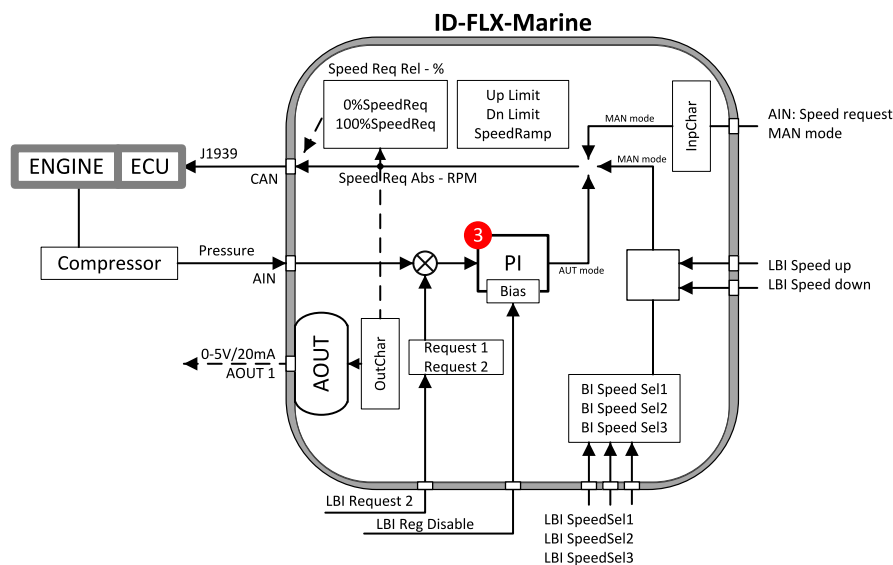

Following example changes the RPM between two levels based on pressure.

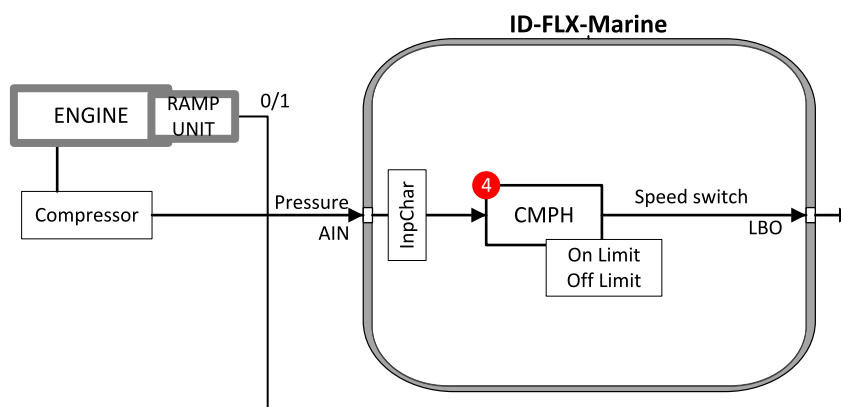

9.10.1 Functions 3 and 4

LBI	Active input:
RegRequest2	Switch to RegRequest 2
R Reg Disable	Set PI Regulator output to R Bias
LBO	Function:
Speed Switch	Regulator Comparator output

9.10.2 Functions 3 and 4 setpoints

Regulator	Values
LAI SpeedRequest	OFF CU: AI1-AI9 AIO: AI1-AI4
Reg Input	CU: AI1-AI9 AIO: AI1-AI4 RPM-BI3
Reg Bias	0 - 10000
Request1	±10000
Request2	±10000
Reg Gain	± 0,0 - 200,0%
Reg Integral	+ 0,0% - 100,0%
Reg CMP Input	CU: AI1-AI9 AIO: AI1-AI4 RPM-BI3
Reg CMP Off	± 10000 [-]
Reg CMP On	± 10000 [-]


Note: For more information see chapter Setpoints.

9.10.3 Functions 3 and 4 examples

- ▶ Pressure by RPM control via J1939
- ▶ Pressure by RPM control via analog output

Pressure by RPM control via J1939

Actual pressure is measured via Analog input, compared with Requested value and the PI (function 3) output controls the engine RPM via J1939.

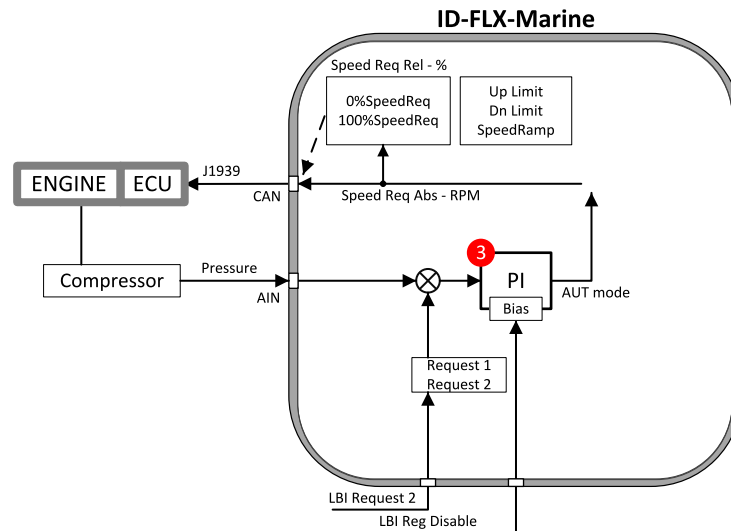


Input	Analog input	
	Binary input: Request 2 (optional)	
	Binary input: R Reg Disable (optional)	
Output	Analog output: Speed Request	
Setpoints	Regulator	Reg Input
		Reg Bias
		Request
		Request 2
		Reg Gain
	Reg Integral	
	Engine params	MinSpeedLim

Note: Take care if the Speed request in AUT mode is not limited by **Engine params**: Speed ramp.

Pressure by RPM control via Analog output

Actual pressure is measured via Analog input, compared with Requested value and the PI (function 3) output controls the engine RPM via Analog output.

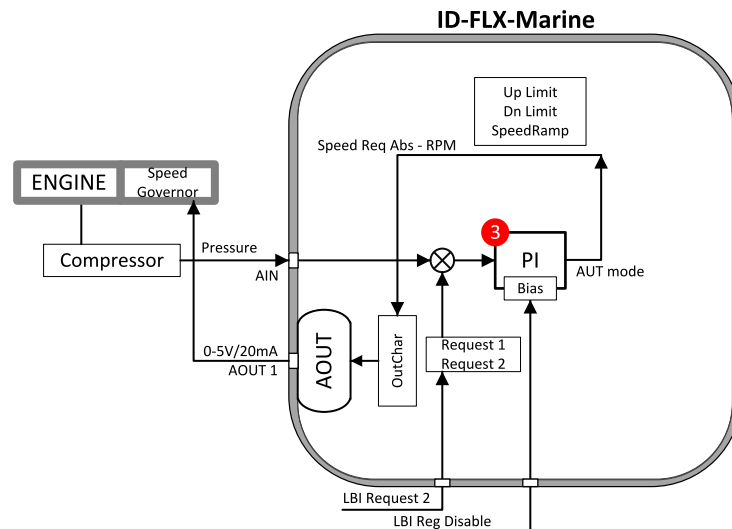

Input	Analog input	
	Binary input: Request 2 (optional)	
	Binary input: R Reg Disable (optional)	
Output	Analog output: Speed Request	
Setpoints	Regulator	Reg Input
		Reg Bias
		Request
		Request 2
		Reg Gain
		Reg Integral
	Engine params	MinSpeedLim
		MaxSpeedLim
		Speed Ramp


10 Appendix

10.1 Setpoints	106
10.2 Values	214
10.3 Binary input functions	215
10.4 Binary output functions	226

6 [back to Table of contents](#)

10.1 Setpoints

What setpoints are:

Configuration of Setpoints is possible through panel buttons as is described above or via ComAp PC tool LiteEdit, where the setting can be open by click on the icon 

10.1.1 List of setpoint groups

10.1.3 Group: Password	110
10.1.4 Group: ATT Settings	111
10.1.5 Group: Basic settings	112
10.1.6 Group: Comms settings	121
10.1.7 Group: Engine params	130
10.1.8 Group: Regulator	146
10.1.9 Group: Load limit	152
10.1.10 Group: Engine protect	157
10.1.11 Group: Date/Time	192
10.1.12 Group: Sensor spec	198
10.1.13 Group: AIO module	206
10.1.14 Group: SMS_E-Mail	211

For full list of setpoints go to the chapter **List of setpoints (page 107)**.

6 [back to Appendix](#)

10.1.2 List of setpoints

Group of setpoints:

Password

EnterPassword	110
ChangePassword	110

Group of setpoints:

Basic settings

Engine name	112
Gear teeth	112
RPM by W Terminal	113
Nominal RPM	113
Rem Start/Stop	120
Remote start	121
Remote stop	121

Group of setpoints:

Comms settings

ControllerAddr	122
COM1 Mode	122
COM2 Mode	123
ModemIniString	123
ModbusComSpeed	124
IBLite IP Addr	124
IBLite NetMask	124
IBLite GatelP	125
IBLite DHCP	125
ComAp Port	126
APN Name	126
APN UserName	126
APN UserPass	127
AirGate	127
AirGate IP	128
SMTP UserName	128
SMTP UserPass	129
SMTP Server IP	129

Contr MailBox	129
Time Zone	130
DNS IP Address	130

Group of setpoints:

Engine params

Starting RPM	131
Starting POil	131
Prestart time	132
Preglow time	132
CrnkFail pause	133
Crank attempts	133
Idle time	134
Idle speed	134
Cranking speed	135
Cooling speed	135
Cooling time	136
AfterCool time	136
Stop time	137
Fuel solenoid	137
FuelSol offset	138
D+ function	139
ECU Control	139
ECU SpeedAdj	140
RetToSpeedAdj	140
MinSpeedLim	141
MaxSpeedLim	141
BI Speed Sel 1	141
BI Speed Sel 2	142
BI Speed Sel 3	142
Speed Ramp	143
0%ofSpeedReq	144
100%ofSpeedReq	144
Conveyor horn	145
Running timer	145
FuelTankVolume	145
MaxFuelDrop	146

Group of setpoints:

Regulator

LAI SpdRequest	147
Reg Input	147
Reg Bias	148
Request 1	148
Request 2	148
Reg Gain	149
Reg Integral	150
Reg CMP Input	151
Reg CMP On	151
Reg CMP Off	152

Group of setpoints:

Load limit

Load input	153
Load Bias	153
LoadRequest 1	154
LoadRequest 2	154
LoadReq Ramp	154
LoadUpLimit	155
LoadDnLimit	155
Load Gain	155
Load Integral	156
Load CMP Input	156
Load CMP Off	156
Load CMP On	157

Group of setpoints:

Engine protect

Eng prot del	157
BIN6 delay	158
Horn timeout	158
StartOverspeed	159
Overspeed	159

Underspeed	160	AIN6 LowSd	178
Flow SwitchDel	161	AIN6 LowDel	178
UnderspeedSd	162	AIN6 HighWrm	178
AIN1 Level 1	164	AIN6 HighSd	179
AIN1 Level 2	164	AIN6 HighDel	179
AIN1 Del	165	AIN7 Level 1	179
AIN2 Level1	165	AIN7 Level 2	180
AIN2 Level 2	165	AIN7 Del	180
AIN2 Del	166	AIN7 Eval	181
AIN3 Level1	166	AIN7 LowWrm	181
AIN3 Level 2	166	AIN7 LowSd	182
AIN3 Del	167	AIN7 LowDel	182
Batt overvolt	167	AIN7 HighWrm	182
Batt undervolt	167	AIN7 HighSd	183
Batt volt del	168	AIN7 HighDel	183
AIN4 Level1	168	AIN8 Level 1	183
AIN4 Level 2	168	AIN8 Level 2	184
AIN4 Del	169	AIN8 Del	184
AIN4 Eval	169	AIN9 Level 1	184
AIN4 LowWrm	170	AIN9 Level 2	185
AIN4 LowSd	170	NextServTime	185
AIN4 LowDel	170	GearBoxRatio	186
AIN4 HighWrm	171	RPMdiff Sd	187
AIN4 HighSd	171	RPMdiff Wrm	187
AIN4 HighDel	171	RPMdiff delay	187
AIN5 Level 1	172	BIN1 Prot Del	188
AIN5 Level 2	172	BIN2 Prot Del	188
AIN5 Del	172	BIN3 Prot Del	189
AIN5 Eval	173	BIN4 Prot Del	189
AIN5 LowWrm	173	BIN5 Prot Del	190
AIN5 LowSd	174	BIN6 Prot Del	190
AIN5 LowDel	174	BIN7 Prot Del	191
AIN5 HighWrm	174	DEF Level Min	191
AIN5 HighSd	175		
AIN5 HighDel	175		
AIN6 Level 1	175		
AIN6 Level 2	176		
AIN6 Del	176		
AIN6 Eval	177		
AIN6 LowWrm	177		

Group of setpoints:

ATT settings

Regen Inhibit	111
Regen Force	111

Group of setpoints:

Date/Time

Time stamp per	192
SummerTimeMod	193
Time	193
Date	193
Timer1Function	194
Timer1Repeat	195
Timer1 ON time	195
Timer1Duration	196
Timer2Function	196
Timer2Repeat	197
Timer2OnTime	197
Timer2Duration	198

Group of setpoints:

Sensor spec

Calibr AI1	198
Calibr AI2	199
Calibr AI3	199
Calibr AI4	200
Calibr AI5	200
Calibr AI6	201
Calibr AI7	201
Calibr AI8	202
Calibr AI9	202
Calibr AIO1	203
Calibr AIO2	203
Calibr AIO3	203
Calibr AIO4	204
CounterConst 1,	
CounterConst 2	205
CounterMode 1,	
CounterMode 2	206

Group of setpoints:

AIO module

AnIInAIO1 lev1	206
----------------------	-----

AnlInAIO2 lev1	207
AnlInAIO3 lev1	207
AnlInAIO4 lev1	207
AnlInAIO1 lev2	208
AnlInAIO2 lev2	208
AnlInAIO3 lev2	208
AnlInAIO4 lev2	209
AnlInAIO1 del	209
AnlInAIO2 del	210
AnlInAIO3 del	210
AnlInAIO4 del	211

Group of setpoints:
SMS/E-mail

Yel Alarm Msg	212
Red Alarm Msg	212
TellNo/Addr Ch1	213
TellNo/Addr Ch2	213


10.1.3 Group: Password

EnterPassword

Setpoint group	Password	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Password is a four-digit number. Password enables change of relevant protected set points Use UP or DOWN keys to set and ENTER key to enter the password. There are 3 levels of passwords. Knowledge of higher password lets you to change setpoint protected by lower password.</p>			

6 [back to List of setpoints](#)

 ChangePassword

Setpoint group	Password	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Use UP or DOWN button to set and ENTER button to change the password.</p> <p>Can be used LiteEdit PC tool for changes of Password level in window Modify press button </p> <p>Password for each of three levels can be adjusted from the menu Controller->Change password.</p> <p>Note: At first the Password has to be entered before the new Password can be changed.</p>			

6 [back to List of setpoints](#)

10.1.4 Group: ATT Settings

Regen Inhibit

Setpoint group	ATT settings	Related FW	1.1.0
Range [units]	-		
Default value	OFF	Force value Alternative config	
Step	-		
Comm object	14520	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Sets ECU value Aftertreatment Regeneration Inhibit Switch (SPN 3695).			
OFF – automatic filter regeneration is enabled - SPN 3695 = 00b			
ON – automatic filter regeneration is inhibited - SPN 3695 = 01b			
BIN – value is set by LBI Regen Inhibit			

6 [back to List of setpoints](#)

Regen Force

Setpoint group	ATT settings	Related FW	1.1.0
Range [units]	-		
Default value	OFF	Force value Alternative config	
Step	-		
Comm object	14521	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Sets ECU value Aftertreatment Regeneration Force Switch (SPN 3696).			
OFF – automatic filter regeneration is enabled			
ON – automatic filter regeneration is inhibited			
BIN – value is set by LBI Regen Force			

6 [back to List of setpoints](#)

10.1.5 Group: Basic settings

Engine name

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	-		
Default value	InteliDrive-IPC	Force value Alternative config	
Step	-		
Comm object	8637	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
User defined name, used for engine – InteliDrive Marine identification at remote phone or mobile connection. Engine name is maximally 14 characters long and has to be entered using LiteEdit software.			

6 [back to List of setpoints](#)

Gear teeth

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	0-500		
Default value	120	Force value Alternative config	
Step	1		
Comm object	8252	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The number of teeth on the engine gear for the pick-up sensor. The setpoint is ignored when ECU is configured.			
<i>Note: The RPM pickup input is ignored when Engine params: Gear teeth = 0. The engine running state is then detected based on Engine params: Starting Oil or Engine params: D+ function = ENABLED.</i>			

6 [back to List of setpoints](#)

RPM by W Terminal

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	0.5 - 2		
Default value	1	Force value Alternative config	
Step	0.01		
Comm object	8420	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The constant of this setpoint multiplies the speed value obtained from the controller input RPM.			
<p>Note: The default value is and must be 1, when the classical pick-up speed sensor is used to measure the engine speed.</p>			
<p>Note: The setpoint is usefull when the engine does not have the speed sensor and the speed is measured by the W terminal of the charging alternator. The setpoint allows tuning the ratio between the frequency and the RPM value which can not to correspond to the entire values of teeth numbers (because of the different non-integral ratio of the engine and alternator pulleys).</p>			

6 [back to List of setpoints](#)

Nominal RPM

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	100 - 4000RPM		
Default value	2000	Force value Alternative config	
Step	1RPM		
Comm object	8253	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal engine speed, base fro overspeed protection and scale on RPM gauges			

6 [back to List of setpoints](#)

Gear Teeth BI3

Setpoint group	Basic setting2	Related FW	1.1.0
Range [units]	0 - 10		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11475	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>The second RPM (RPM-BI3 value) can be measured in limited frequency range 1 to 50Hz on Binary input 3. The RPM-BI3 value indicates RPM calculated from BI3 frequency and Basic settings: GearTeeth3 setpoint. The RPM-BI3 value =0 below 1Hz and =### over 50Hz.</p> <p>Configure BI Type = Not used and change the name according the function for RPM-BI3 measuring</p> <p>Note: <i>The RPM-BI3 measuring is switched off when Basic setting: GearTeethBI3 = 0. In this case BI3 operates as standard Binary input.</i></p>			


6 [back to List of setpoints](#)

RPM Source

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	PICKUP	Force value Alternative config	
Step	-		
Comm object	12142	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

Switch from where the RPM is measured. When source is Analog input the converted value is going to be in RPM range – see example below.

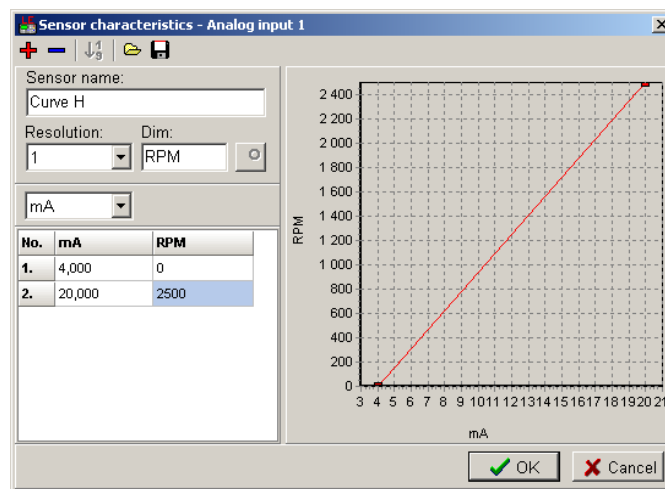

6 back to List of setpoints

Controller mode

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	OFF	Force value Alternative config	
Step	-		
Comm object	8315	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

Equivalent to Controller mode changes by or buttons.

Note: Controller Mode change can be separately password protected.

6 back to List of setpoints

FitResGoToMAN

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	DISABLED	Force value Alternative config	
Step	-		
Comm object	9983	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
DISABLED: Controller stays in AUT mode after Fault reset. Default state.			
ENABLED: Automatic switch from AUT to MAN mode after Fault reset to avoid automatic engine start. This function is active for Shut down protection only.			

6 [back to List of setpoints](#)

DispBackLightTO

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	0-60min		
Default value	15min	Force value Alternative config	
Step	1min		
Comm object	10121	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The display backlight is switched off after timeout.			
Default value: 0 means that the display lights all the time			

6 [back to List of setpoints](#)

I/O-R-Button

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	-		
Default value	SpeedUp	Force value Alternative config	
Step	-		
Comm object	12619	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
None: No function			
Speed Up: Works in MAN mode only. Use this button for increasing speed request to the engine. Short pressing changes the speed by 5 RPM/s during 0,6 s, after this period the speed change is according to setpoint Engine Params / Speed Ramp.			

6 [back to List of setpoints](#)

I/O-L-Button

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	SpeedDown	Force value Alternative config	
Step	-		
Comm object	14627	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
None: No function			
Speed Down: Works in MAN mode only. Use this button for decreasing speed request to the engine. Short pressing changes the speed by 5 RPM/s during 0,6 s, after this period the speed change is according to setpoint Engine Params / Speed Ramp.			

6 [back to List of setpoints](#)

Panel Button

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]			
Default value	Nom/Idle	Force value Alternative config	
Step			
Comm object	10588	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Adjust the function of front panel Toggle Button.			
<p>Nom/Idle: Nom/Idle: Switches between Nominal and Idle speed request. The function is allowed in MAN mode and in the status RUN only. After expiring of timer Idle time, Speed request is set by the setpoint ECU SpeedAdj. (i.e. not during IDLE speed warm-up run in Starting status). Activating of button changes speed request to Idle, deactivating back to Nominal</p> <p>N/I Init: The function switches between Nominal and Idle speed request as same as Nom/Idle, only difference is that after Idle time elapsing the Speed request remains in Idle (PanelButton is activated). The function is allowed in MAN mode and in the status RUN only. After expiring of timer Idle time the Speed request remains Idle (=PanelButton is activated at that moment).</p> <p>Note: When LBI Nominal/Idle is configured (to a physical binary input), it has priority and the switching between the nominal and the idle speed by I/O button is blocked.</p> <p>Conveyor: Initial condition: Running engine. Press I/O button activates BO Horn. After the horn signal, the BO Conveyor is activated.</p> <p>RegReqst: Switches between setpoints Request 1 and Request 2 as requested value input for regulator.</p> <p>R RegDis: In AUT mode, switching the I/O button allows or disable the PI regulation to work. When the regulation is blocked, the regulator analog output is set according to the constant Regulator: Reg bias.</p> <p>CloseLoad: When the engine is in the status Ready to Load, this option switches ON and OFF the LBO Close Load. When the engine is not in the status Ready to Load, the button has no influence.</p> <p>Note: The applications without the information about the speed can not reach the status Ready to Load and therefore, the load can not be switched by the I/O button. That's why, in the case of settings: SP Gear teeth = 0, SP RPM source = PickUp, no ECU, the condition sufficient for LBO Close Load activating by the I/O button is the Running state.</p> <p>Toggle: Switches ON and OFF the LBO Toggle, no other consequences.</p>			

6 back to List of setpoints

StopButton

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	15750	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>This setpoint is used to switch between standard function of setpoint and marine function, which includes protection against accidental pressing of the button by adding 1s delay.</p> <p>Standard: Stop button is activated immediately after its pressing. If the button is held for 2 seconds or by second pressing the cooling is skipped.</p>			

6 [back to List of setpoints](#)

RunHoursSource

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	AUTO	Force value Alternative config	
Step	-		
Comm object	13345	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>This setpoint is used for adjustment of RunHours source of the engine.</p> <p>ECU: RunHours are all the time read from ECU.</p> <p>INTERNAL: RunHours are counted from the inner counter of the controller.</p> <p>AUTO: If is coming from ECU rational value higher than 0, then the RunHours are taken from ECU, in second case are displayed internal hours from controller. Default state.</p>			
<p>IMPORTANT: Some types of ECUs reset RunHours counter to 0, if the supply was disconnected.</p>			

6 [back to List of setpoints](#)

Main Screen 1

Setpoint group	Basic Settings	Related FW	1.1.0
Range [units]	-		
Default value	AIN2	Force value Alternative config	
Step	-		
Comm object	13346	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Change the displayed value in first line of the main Measurement screen. AIN2: Displays value of Analog input 2. Default state. Soot Load: Displays value of DPf1 Soot Load received from ECU supporting Tier 4 Final.			

6 [back to List of setpoints](#)

Main Screen 2

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	-		
Default value	RunHrs	Force value Alternative config	
Step	-		
Comm object	14628	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Change the displayed value in first line of the main Measurement screen. RunHrs: Displays statistic value Run Hours. Default state. Soot Level: Value of DEF Level received from ECU supporting Tier 4 Final.			

6 [back to List of setpoints](#)

Rem Start/Stop

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	14659	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Enable or Disable function of LBI Rem Start/Stop			

6 [back to List of setpoints](#)

Remote start

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	14660	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Enable or Disable function of LBI RemoteStart			

6 [back to List of setpoints](#)

Remote stop

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	14661	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Enable or Disable function of LBI RemoteStop			

6 [back to List of setpoints](#)

10.1.6 Group: Comms settings

Note: Following setpoints are available from Controller and LiteEdit/InteliMonitor.

ControllerAddr

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	1 - 32		
Default value	1	Force value Alternative config	
Step	-		
Comm object	24537	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>It is controller's identification number. It is possible to set controller address different from the default value 1 so that more IntelliDrive Marine controllers can be interconnected (via RS485) and accessed e.g. from Modbus terminal.</p> <p>Note: When opening connection to the controller its address has to correspond with the setting in PC tool.</p>			

6 back to List of setpoints

COM1 Mode

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	DIRECT	Force value Alternative config	
Step	-		
Comm object	24522	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Communication protocol switches for the COM1 channel.</p> <p>DIRECT: LiteEdit communication protocol via direct cable or AirGate, WebSupervisor communication protocol via AirGate.</p> <p>MODEM: LiteEdit communication protocol via modem.</p> <p>MODBUS: Modbus protocol. See detailed description in IntelliDrive Communication Guide.</p> <p>ECU LINK: Protocol for communication with Cummins engines via Modbus.</p> <p>Note: For details on communication speed and other technical parameters please see chapter Technical Data.</p> <p>Note: For detailed description see chapter Modbus protocol.</p>			

6 back to List of setpoints

COM2 Mode

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	DIRECT	Force value Alternative config	
Step	-		
Comm object	24451	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Communication protocol switches for the COM2 channel, if dual communication module is plugged in.</p> <p>DIRECT: LiteEdit communication protocol via direct cable.</p> <p>MODBUS: Modbus protocol. See detailed description in IntelliDrive Communication Guide</p> <p>ECU LINK: Protocol for communication with Cummins engines via Modbus.</p> <p>Note: For details on communication speed and other technical parameters please see chapter <i>Technical Data</i>.</p> <p>Note: For detailed description see chapter <i>Modbus protocol</i>.</p>			

6 [back to List of setpoints](#)

ModemIniString

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	24436	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>In case that your modem needs additional initialization e.g. AT commands, it can be entered here. Otherwise leave this setpoint blank.</p>			

6 [back to List of setpoints](#)

ModbusComSpeed

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	9600bps	Force value Alternative config	
Step	-		
Comm object	24477	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
If the Modbus mode is selected on COM1 or COM2 channels, the Modbus communication speed in bps can be adjusted here.			
<p><i>Note: In case of ModBus/TCP communication via IB-Lite communication module is automatically adjusted COM1 Mode=DIRECT, COM2=MODBUS and ModbusComSpeed=57600. There isn't required any other additional setting (of course except IB-Lite setpoints, see below)</i></p>			

6 [back to List of setpoints](#)

IBLite IP Addr

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	192.168.1.254	Force value Alternative config	
Step	-		
Comm object	24376	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
IP address of IB-Lite module			

6 [back to List of setpoints](#)

IBLite NetMask

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	255.255.255.0	Force value Alternative config	
Step	-		
Comm object	24375	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
IB-Lite network mask			

6 [back to List of setpoints](#)

IBLite GateIP

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	192.168.1.1	Force value Alternative config	
Step	-		
Comm object	24373	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
IP address of gateway for IB-Lite			

6 [back to List of setpoints](#)

IBLite DHCP

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	24259	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Dynamic Host Configuration Protocol for IP address setting can be used or blocked.</p> <p>DISABLED: Block the function of DHCP, this option is worth, if you wanna adjust stable IP address e.g. for WebServer connection or IntelliMonitor PC tool.</p> <p>Note: Can occurred collision of IP addresses in local network with devices as printer, router etc.!</p> <p>ENABLED: Dynamically change IP address of the controller after each switch on of the controller. IP address collision protection. Default state.</p>			

6 [back to List of setpoints](#)

ComAp Port

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	23	Force value Alternative config	
Step	-		
Comm object	24374	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is for adjustment of port for ComAp communication over IB-Lite or IL-NT-GPRS module. Standard ComAp port is 23, what is default value of this setpoint.			

6 [back to List of setpoints](#)

APN Name

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	24363	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Name of APN access point for GPRS network			
<i>Note: This information shall provide your telecommunication operator.</i>			

6 [back to List of setpoints](#)

APN UserName

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	24361	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
User name for APN access point			
<i>Note: This information shall provide your telecommunication operator.</i>			

6 [back to List of setpoints](#)

APN UserPass

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	24360	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
User password for APN access point			
<i>Note: This information shall provide your telecommunication operator.</i>			

6 [back to List of setpoints](#)

AirGate

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	24365	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The option allows or blocks the function of AirGate. For AirGate function is necessary to use communication plug-in modules IB-Lite or IL-NT-GPRS or IntelliDrive Lite partly supports IB-NT too.			
DISABLED: Blocks the function of AirGate.			
ENABLED: Allows function of AirGate. Default state.			

6 [back to List of setpoints](#)

AirGate IP

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value	airgate.comap.cz	Force value Alternative config	
Step			
Comm object	24364	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
AirGate Address. The default address is „airgate.comap.cz“.			
<p>Note: To reduce the data traffic over cellulat network you can set in setpoint group „Comms Settings“ the parameter „AirGate IP“ = 80.95.108.26. This will save significant data amount needed for translation of Airgate server IP address. In case of changing the server IP address this settings has to be updated or returned to default „airgate.comap.cz“.</p>			
<p>IMPORTANT: All manipulations with IL-NT-GPRS module has to be done with DC power supply switched off. Module can be only powered while is plugged into the controller and together with controller!</p>			

6 [back to List of setpoints](#)

SMTP UserName

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object	24370	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
User name or name of e-mail account is used for verification of email sender on SMTP server. If parameter left empty, no verification is expected. It is working for IB-Lite only.			

6 [back to List of setpoints](#)

SMTP UserPass

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object	24360	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
User password of e-mail account is used for verification of e-mail sender on SMTP server. If parameter left empty, no verification is expected. It is working for IB-Lite only.			

6 [back to List of setpoints](#)

SMTP Server IP

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object	24368	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Adjust IP address of SMTP server. It is working for IB-Lite only.			

6 [back to List of setpoints](#)

Contr MailBox

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object	24367	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
E-mail address used as "Sender" of alarm e-mails from IB-Lite.			
<p>Note: If SMTP server requires verification of sender, e-mail address has to be registered to SMTP server and setpoints "SMTP UserName" and "SMTP UserPass" has to be set to correct values.</p>			

6 [back to List of setpoints](#)

Time Zone

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value	GMT+2:00	Force value Alternative config	
Step			
Comm object	24366	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
List of time zones used for time reference.			

6 [back to List of setpoints](#)

DNS IP Address

Setpoint group	Comms settings	Related FW	1.1.0
Range [units]			
Default value	8.8.8.8	Force value Alternative config	
Step			
Comm object	24362	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This is IP address of Domain Name Server.			

6 [back to List of setpoints](#)

10.1.7 Group: Engine params

Note: Following setpoints are available from Controller and LiteEdit/InteliMonitor.

Starting RPM

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	5 - 1500 [RPM]		
Default value	350	Force value Alternative config	
Step	1RPM		
Comm object	9095	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>“Firing” speed when IntelliDrive Marine controller stops cranking (starter goes OFF).</p> <p>Sd Underspeed protection is activated when RPM drops back below the Starting RPM for more than 5 second the engine starting procedure.</p> <p>RPM meas fail indication</p> <p>Can appears during "Cranking state" i.e. Starter (or J1939 Start command) is activated then one running condition was detected (D+ was activated or (POil > Starting POil) condition was filled) - i.e. Starter was switched off based on previous condition and within time (Cranking time and fix 5s) minimum RPM does not appear (RPM > Starting RPM), then is activated RPM meas fail.</p> <p><i>Note: Limit is ignored when Gear teeth = 0 i.e. in engine operation without speed pickup (running state is indicated from D+ or Starting POil.</i></p>			

6 [back to List of setpoints](#)

Starting POil

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 10 [Bar]		
Default value	4.5Bar	Force value Alternative config	
Step	0.1Bar		
Comm object	9681	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Controller stops cranking (starter goes OFF) when Oil Pressure (typically measured on AIN1) is over Starting POil.</p> <p><i>Note: Oil Pressure can be also measured on binary sensor. Then is necessary adjust AIN1 as Binary input and Starting POil=1.</i></p> <p><i>Note: There are three conditions for stop cranking: Starting RPM (just in case the Gear teeth > 0), StartingPOil and D+ (if enabled). Starter goes off when any of these conditions is valid.</i></p>			

6 [back to List of setpoints](#)

Prestart time

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	2s	Force value Alternative config	
Step	1s		
Comm object	8394	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Time of the PRESTART output closed prior to the engine start – i.e. before the binary outputs Fuel solenoid and Starter are closed and opens when Starting RPM speed is reached. Set to zero if you want to leave the output PRESTART opened.			

6 [back to List of setpoints](#)

Preglow time

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object	11836	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Time of the PREGLOW output closed prior to the engine start. Set to zero if you want to leave the output PREGLOW opened.			
<p>Note: Function with shorter period (Prestart time or Preglow time) starts later to finish both in the same time – when Starting RPM speed is reached.</p>			

6 [back to List of setpoints](#)

MaxCrank time

Setpoint group	Basic settings	Related FW	1.1.0
Range [units]	1 - 60 [s]		
Default value	5s	Force value Alternative config	
Step	1s		
Comm object	8256	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is giving maximum time limit of engine cranking.			

6 [back to List of setpoints](#)

CrnkFail pause

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	5 - 60 [s]		
Default value	8s	Force value Alternative config	
Step	1s		
Comm object	8257	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Pause between crank (engine start) attempts.			

6 [back to List of setpoints](#)

Crank attempts

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	1 - 10		
Default value	3	Force value Alternative config	
Step	1		
Comm object	8255	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Maximum number of crank (engine start) attempts.			

6 [back to List of setpoints](#)


Idle time

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	12	Force value Alternative config	
Step	1s		
Comm object	9097	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

Idle time delay starts when RPM exceeds Start RPM. Start fail is detected when during Idle state RPM decreases below 2.

During the Idle time timer running the binary output IDLE/NOMINAL is opened, when it expires the IDLE/NOMINAL output closes. Binary output IDLE/NOMINAL opens during Cooling period again.

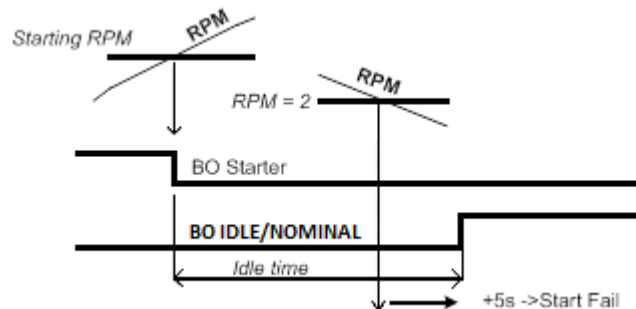

Note: Engine can be switched between Idle and Running state by Binary input Nominal/Idle in MAN mode.

6 back to List of setpoints

Idle speed

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	Starting RPM – MinSpeedLimit		
Default value	800RPM	Force value Alternative config	
Step	1RPM		
Comm object	9946	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

Speed request in engine Idle state i.e. after engine start or when switched to Idle in MAN mode by Binary input Nominal/Idle and after Engine ShutDown.

6 back to List of setpoints

Cranking speed

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	-		
Default value	IDLE	Force value Alternative config	
Step	-		
Comm object	11798	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>By this setpoint you can select value of speed request during cranking. After engine is started, speed request control will switch to Idle and follows standard procedure.</p> <p>IDLE: Speed request while cranking set to Idle.</p> <p>NOMINAL: Speed request during cranking set to Nominal.</p> <p>Default value: Idle</p>			

6 [back to List of setpoints](#)

Cooling speed

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	-		
Default value	IDLE	Force value Alternative config	
Step	-		
Comm object	10046	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Selects the function of the Binary output IDLE/NOMINAL during engine Cooling state</p> <p>IDLE: Cooling is executed at Idle speed.</p> <p>NOMINAL: Cooling is executed at Nominal speed. Default state.</p> <p>Note: Binary output IDLE/NOMINAL must be configured and connected to speed governor. Engine Idle speed must be adjusted on speed governor.</p>			

6 [back to List of setpoints](#)

Cooling time

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	30s	Force value Alternative config	
Step	1s		
Comm object	8258	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Run time of the unloaded engine to cool the engine before stop.			

[6 back to List of setpoints](#)

AfterCool time

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 3600 [V]		
Default value	180s	Force value Alternative config	
Step	1 s		
Comm object	8662	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Run time of engine after cooling pump. Binary output Cooling pump is closed when the engine starts and opens AfterCool time delayed after engine stops.			

[6 back to List of setpoints](#)

Stop time

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 240 [s]		
Default value	60s	Force value Alternative config	
Step	1s		
Comm object	9815	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Under normal conditions the engine must certainly stop within this period. The period starts by issuing stop command.			
<i>Note: Stop of engine is detected when all following conditions are met: RPM <2, Oil pressure < StartingPOil and D+ input isn't active.</i>			
<i>Note: Stop fail is detected if there is difference between those conditions.</i>			

[6 back to List of setpoints](#)

Fuel solenoid

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	-		
Default value	DIESEL	Force value Alternative config	
Step	-		
Comm object	9100	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Setpoint setting determines behavior of the Binary output FUEL SOLENOID.			
DIESEL: Output closes 1 sec before Binary output STARTER.			
The output opens if Emergency stop comes or Cooled engine is stopped and in pause between repeated starts.			
GAS: In this mode of operation the output closes to open the gas valve and enable the engine to start. The delay of Fuel solenoid output activation in relation to Starter output is defined by FuelSol offset. The output closes only if RPM > 30 (i.e. the starter motor is engaged).			
The output opens if there is any reason to stop the engine or in pause between repeated starts.			
<i>Note: In the case of gas engine, the underspeed protection cannot be blocked by the Sprinkler function.</i>			
<i>Note: For gas engines, it is strongly recommended to use the pick-up sensor, as non-zero RPM detection is required during the start procedure.</i>			

[6 back to List of setpoints](#)

FuelSol offset

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 30 [s]		
Default value	0.5s	Force value Alternative config	
Step	0.1s		
Comm object	10525	Related applications	
Config level	Standard		
Setpoint visibility	Always		


Description

This setpoint adjusts the Fuel solenoid output activation in relation to Starter output when Fuel solenoid = GAS. Setpoint values mean that fuel valve is opened after the Starter. FuelSol offset has effect for both Fuel solenoid = DIESEL or GAS.

Engine starting procedure when **Engine params: Fuel solenoid = GAS**



Note: A new feature has been added which prolongs the last cranking attempt by 25% of MaxCrank time with closed Fuel valve (Fuel Solenoid binary output) in order to ventilate the remaining gas, as is implemented in IG/IS-NT. This function is valid only when Engine params: Fuel solenoid = GAS

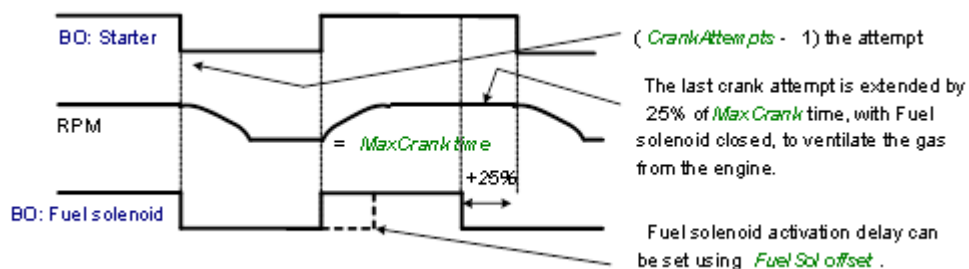

Note: Is modified functionality of the **Ignition** binary output. The Ignition binary output will close 1 second (fixed value) after activation of binary output Fuel solenoid (when Fuel solenoid = GAS setting is active). Generally, the output closes after reaching value of CrankRPM = 30RPM (fixed value). The output opens after stopping of the engine or during crank fail pauses among crank attempts.

6 back to List of setpoints

D+ function

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	-		
Default value	DISABLED	Force value Alternative config	
Step	-		
Comm object	9683	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>ENABLED: The D+ terminal is used for both functions - “running engine” detection and charge fail detection.</p> <p>CHRGFAIL: The D+ terminal is used for charge fail detection only.</p> <p>DISABLED: The D+ terminal is not used. Default state.</p> <p>Note: The magnetization current is provided independently on this setpoint value.</p> <p>Note: The D+ charge fail protection becomes active after Engine params: Idle time reaches zero.</p>			

[6 back to List of setpoints](#)

ECU Control

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	11086	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>The setpoint enables adjustment of the electronic engine control by following settings.</p> <p>ENABLED: There is a full available control of an electronic engine given by the setting of the ECU unit of the engine, i.e. Start request, Stop request, Speed request are enabled if available. Default state.</p> <p>DISABLED: Control of an electronic engine is fully blocked and the IntelliDrive Lite can only monitor the values of an electronic engine.</p>			

[6 back to List of setpoints](#)

ECU SpeedAdj

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	MinSpeedLim - MaxSpeedLim		
Default value	1500RPM	Force value Alternative config	
Step	1RPM		
Comm object	13095	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Enables to adjust engine speed in ECU via CAN bus. Speed request value after the Idle time is over and no other speed selection is activated.</p> <p>Speed request in % range is calculated using the setpoints 0%ofSpeedReq and 100%ofSpeedReq.</p>			

6 [back to List of setpoints](#)

RetToSpeedAdj

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	-		
Default value	DISABLED	Force value Alternative config	
Step	-		
Comm object	11838	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Selection among LBI Speed Sel1, 2, 3 behavior.</p> <p>DISABLED: Speed request is set by LBI Speed Sel1, 2, 3 (see appropriate setpoints) by rising edge (button, no switch) - i.e. Speed request stay constant after the input is opened and can be changed by BI Speed Up and Speed Down. Default state.</p> <p>ENABLED: Speed request goes to ECU SpeedAdj when the LBI Speed Sel1, 2, 3 are opened. Speed request can be changed by Binary inputs Speed Up and Speed Down when LBI Speed Sel1, 2, 3 are closed.</p>			

6 [back to List of setpoints](#)

MinSpeedLim

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	Starting RPM - MaxSpeedLim		
Default value	1200RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10096	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The setpoint presets the minimum engine speed in the “Running” operation state. Also see other conditions in the chapter below.			

6 [back to List of setpoints](#)

MaxSpeedLim

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	MinSpeedLim - 4000RPM		
Default value	2700RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10097	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The setpoint presets the maximum engine speed in the “Running” operation state. Also see other conditions in the chapter below.			

6 [back to List of setpoints](#)

BI Speed Sel 1

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	MinSpeedLim - MaxSpeedLim		
Default value	1250RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10099	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The setpoint presets the required engine speed during the ‘Speed Sel 1’ binary input is active. Function depends on RetToSpeedAdj setting.			

6 [back to List of setpoints](#)

BI Speed Sel 2

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	MinSpeedLim - MaxSpeedLim		
Default value	1300RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10523	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The setpoint presets the required engine speed during the 'Speed Sel 2' binary input is active. Function depends on RetToSpeedAdj setting.			

6 [back to List of setpoints](#)

BI Speed Sel 3

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	MinSpeedLim - MaxSpeedLim		
Default value	1450RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10524	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The setpoint presets the required engine speed during the 'Speed Sel 3' binary input is active. Function depends on RetToSpeedAdj setting.			
<p>Note: When none of the binary inputs: 'Speed Sel1', 'Speed Sel2' and 'Speed Sel3', 'Speed Up' and 'Speed Down' has not been configured then engine speed is given by the 'Engine params: ECU SpeedAdj' setpoint.</p>			

6 [back to List of setpoints](#)



Speed Ramp

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	1 - MaxSpeedLim		
Default value	50RPM	Force value Alternative config	
Step	1 RPM/s		
Comm object	10148	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

Any Speed request change is done via this Ramp function. The Ramp via Binary SpeedUp and SpeedDown inputs is dual rate, see below.

The Binary inputs SpeedUp and SpeedDown ramp function is for the 0.6s constant 5RPM/s. Does not depend on Engine params: Speed Ramp setting. This enables fine setting of Engine speed to specific value e.g. 1500 RPM.

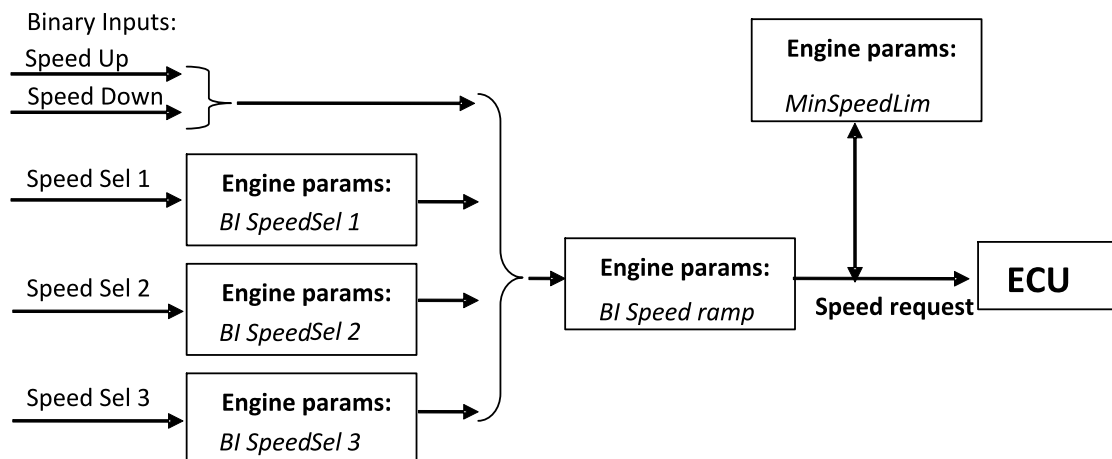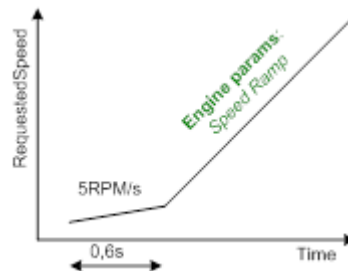

6 back to List of setpoints

0%ofSpeedReq

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 3000 [RPM]		
Default value	0RPM	Force value Alternative config	
Step	1 RPM		
Comm object	11125	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit for Speed Request transformation from RPM to % range for ECU engines using % format. See practical example below.			
Practical example:			
If ECU is configured, then on one of the measurement screen you can see two lines SpeedReq Abs and SpeedReq Rel.			
In default setting:			
0RPM = 0%			
800RPM = 33.3%			
2400RPM = 100%			
Different setting:			
800RPM = 0%			
1200RPM = 33.3%			
2400RPM = 100%			
It is possible easily configure own output curve and use it for analog output Speed Request.			

[6 back to List of setpoints](#)

100%ofSpeedReq

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 4000 [RPM]		
Default value	2400RPM	Force value Alternative config	
Step	1 RPM		
Comm object	11126	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit for Speed Request transformation from RPM to % range for ECU engines using % format.			

[6 back to List of setpoints](#)

Conveyor horn

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	7s	Force value Alternative config	
Step	1 s		
Comm object	11835	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Horn time before the conveyor output starts.			

6 [back to List of setpoints](#)

Running timer

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 1000 [min]		
Default value	0	Force value Alternative config	
Step	1min		
Comm object	11837	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Automatic engine stop in MAN mode, no function in AUT mode. Start engine in MAN mode by START button. Engine stops itself after Running Timer expires. Engine keeps running when Running Timer = 0.			

6 [back to List of setpoints](#)

FuelTankVolume

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 1000 [L]		
Default value	200L	Force value Alternative config	
Step	1 L		
Comm object	11103	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is describing volume of fuel tank for counting fuel consumption depending on Fuel level drop.			

6 [back to List of setpoints](#)

MaxFuelDrop

Setpoint group	Engine params	Related FW	1.1.0
Range [units]	0 - 50 [%]		
Default value	25	Force value	
		Alternative config	
Step	1		
Comm object	12373	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

This is setting protection against the fuel leakage or theft.

Function monitors the AIN3 Fuel level value in percentage scale without decimals. The alarm and history record "Wrm FuelTheft" is activated when Fuel level change is faster than setpoint limit. Function is switched off when Max Fuel Drop = 0 %/h.

The drop out limit on stopped engine is 5% to avoid unwanted Alarm activation due to AIN3: Fuel level fluctuations.


Active alarm "Wrm FuelTheft" can be sent via SMS and displayed by WebSupervisor (if used).

Note: Set 0 to disable Fuel Theft Protection function into MaxFuelDrop setpoint.

6 back to List of setpoints

10.1.8 Group: Regulator

Note: Following setpoints are available from Controller and LiteEdit/InteliMonitor.

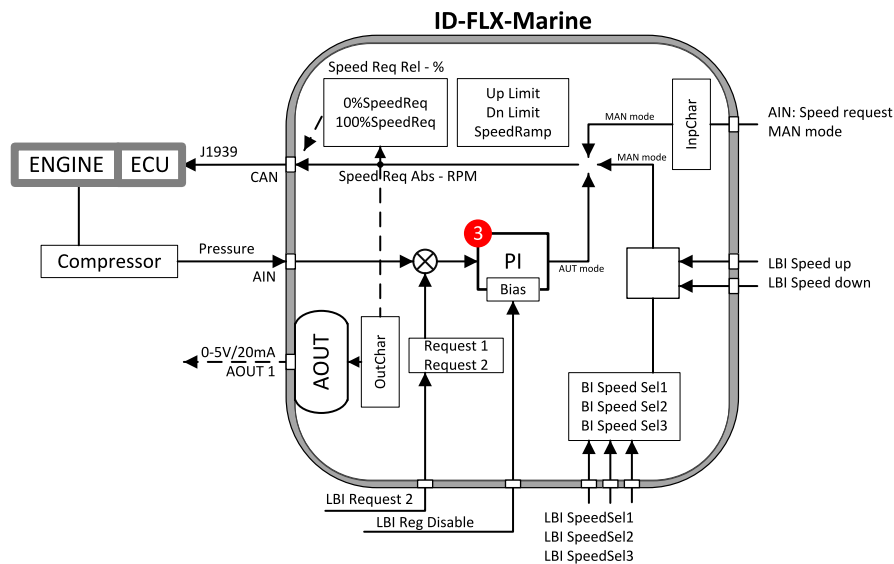

LAI SpdRequest

Setpoint group	Regulator	Related FW	1.1.0
Range [units]			
Default value	OFF	Force value Alternative config	
Step			
Comm object	11842	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Setpoint is determined for selection of analog input for Speed request in the controller's MAN mode.			
OFF: Speed request selection is done by binary inputs. Default state.			
CU: AI1-CU: AI9: Speed request via analog input of the controller only. Binary inputs are ignored.			
AIO :1-AIO4: Speed request via analog input of extension module IL-NT-AIO only. Binary inputs are ignored.			
Note: Analog speed request is ignored in AUT mode.			

[6 back to List of setpoints](#)

Reg Input

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-		
Default value	CU:AI1	Force value Alternative config	
Step	-		
Comm object	11843	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
PI loop analog input selection. Source can be adjusted from controller analog inputs or from extension module inputs. It is also possible to use Binary input 3 in function of RPM detection. The Speed request (regulator output) is assigned to Reg Bias value in the case of selected analog input sensor fail.			

[6 back to List of setpoints](#)

Reg Bias

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11848	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Constant PI regulator output when the LBI R Reg Disable = closed.			

6 [back to List of setpoints](#)

Request 1

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-10000 - +10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11844	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Regulator requested value.			

6 [back to List of setpoints](#)

Request 2

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-10000 - +10000 [V]		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11845	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Regulator requested value when LBI Request2 is active.			

6 [back to List of setpoints](#)

Reg Gain

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-200 - +200 [%]		
Default value	10	Force value Alternative config	
Step	0.1 %		
Comm object	11846	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is giving regulator gain factor. See Hint below.			

6 [back to List of setpoints](#)

Reg Integral

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	0 - +100 [%]		
Default value	10%	Force value Alternative config	
Step	0.1		
Comm object	11847	Related applications	
Config level	Standard		
Setpoint visibility	Always		


Description

This setpoint is giving regulator integration factor.


Note: IntelliDrive Lite controllers include PI loop for speed or analog output regulation. The requested value is given by setpoints Request 1, 2. This loop is working like Proportional-Integral regulation with setpoints Reg Gain and Reg Integral for each part and these parts affect each other.

Note: The controller output is given by: $\text{Reg Gain} * e(t) + \text{Reg Integral} * \int e(t) dt$,

Note: where $e(t)$ is deviation of actual value $e(t) = \text{Request 1, 2} - \text{Measured value}$.

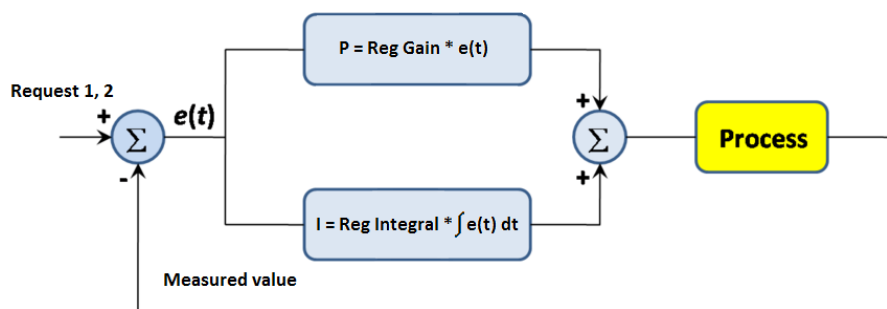

Here are two tuning parameters that can be adjusted Reg Gain and Reg Integral. These parameters interact each other, see the graphic below. Picture shows how differences in Gain and Integral can affect PI loop's responsiveness. The central pic is as base case with fast change with minimum oscillations to required level. Upper left graph shows high gain and low integral values, what produce large oscillation with slow smoothing. Opposite case is on the lower right graph, which shows low gain and high integral values. The response of the system is sluggish.

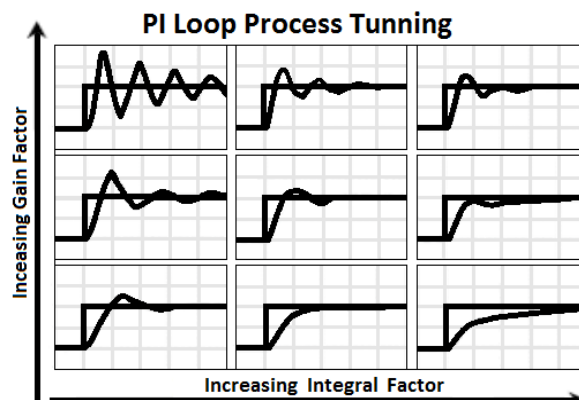

6 back to List of setpoints

Reg CMP Input

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-		
Default value	CU:AI1	Force value	
		Alternative config	
Step	-		
Comm object	11839	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>This is comparator with hysteresis analog input selection from controller analog inputs or from extension module inputs. It is also possible to use Binary input 3 in function of RPM detection.</p>			

6 back to List of setpoints

Reg CMP On

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-10000 - +10000		
Default value	0	Force value	
		Alternative config	
Step	1		
Comm object	11841	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit to close LBO SpeedSwitch.			

6 back to List of setpoints


Reg CMP Off

Setpoint group	Regulator	Related FW	1.1.0
Range [units]	-10000 - +10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11840	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit to open the LBO SpeedSwitch.			

6 back to List of setpoints

10.1.9 Group: Load limit

Note: Following setpoints are available from LiteEdit/InteliMonitor only.

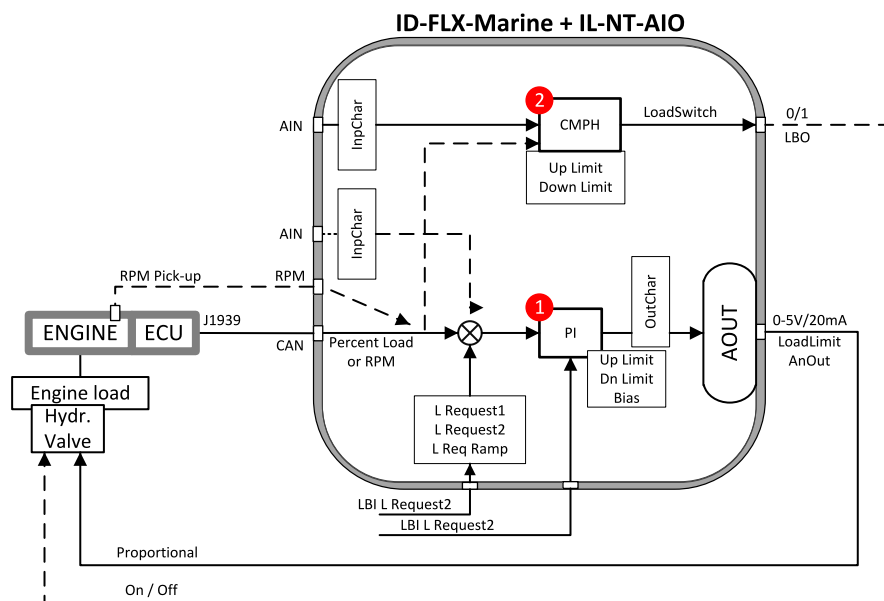

Load input

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-		
Default value	RPM	Force value Alternative config	
Step	-		
Comm object	11850	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is for Load limit PI loop analog input selection. Source can be adjusted from controller RPM pick-up, ECU, analog inputs or from extension module inputs			

6 [back to List of setpoints](#)

Load Bias

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11851	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Constant Load limit PI regulator output. Load Bias is activated when <ul style="list-style-type: none"> ▶ Engine Sd protection is activated ▶ LBI LoadRegDisable = closed ▶ Load input value is invalid (Sensor Fail) 			

6 [back to List of setpoints](#)

LoadRequest 1

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-10000 - +10000		
Default value	90	Force value Alternative config	
Step	1		
Comm object	11852	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Regulator requested value.			

6 [back to List of setpoints](#)

LoadRequest 2

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-10000 - +10000		
Default value	80	Force value Alternative config	
Step	1		
Comm object	11853	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Regulator requested value when LBI LoadRequest2 is active			

6 [back to List of setpoints](#)

LoadReq Ramp

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	1 - 10000 [1/s]		
Default value	1000	Force value Alternative config	
Step	1 1/s		
Comm object	11854	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Ramp when is switched between LoadRequest 1 and LoadRequest 2.			

6 [back to List of setpoints](#)

LoadUpLimit

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10000	Force value Alternative config	
Step	1		
Comm object	11855	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Load limit regulator PI output upper limit.			

6 [back to List of setpoints](#)

LoadDnLimit

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11855	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Load limit regulator PI output low limit.			

6 [back to List of setpoints](#)

Load Gain

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-200 - +200 [%]		
Default value	0	Force value Alternative config	
Step	0.1		
Comm object	11857	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This is setpoint is giving Load limit gain factor.			

6 [back to List of setpoints](#)

Load Integral

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	0 - +100 [%]		
Default value	0	Force value Alternative config	
Step	0.1		
Comm object	11858	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is giving Load limit integration factor.			

6 [back to List of setpoints](#)

Load CMP Input

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-		
Default value	RPM	Force value Alternative config	
Step	-		
Comm object	11859	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is for Load limit comparetor with hysteresis analog input selection. Source can be adjusted from controller RPM pick-up, ECU, analog inputs or from extension module inputs.			

6 [back to List of setpoints](#)

Load CMP Off

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-10000 - +10000 [V]		
Default value	95	Force value Alternative config	
Step	1		
Comm object	11860	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit to close LBO LoadSwitch			

6 [back to List of setpoints](#)

Load CMP On

Setpoint group	Load limit	Related FW	1.1.0
Range [units]	-10000 - +10000		
Default value	90	Force value Alternative config	
Step	1		
Comm object	11861	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit to open LBO LoadSwitch			

6 [back to List of setpoints](#)

10.1.10 Group: Engine protect

Note: Following setpoints are available from Controller and LiteEdit/InteliMonitor.

Eng prot del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 300 [s]		
Default value	5s	Force value Alternative config	
Step	1 s		
Comm object	8262	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
During the start of the engine, some engine protections have to be blocked (e.g. Oil pressure). The protections are unblocked after the Protection del time. The time starts after reaching Start RPM.			

6 [back to List of setpoints](#)

BIN6 delay

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 300 [s]		
Default value	1 s	Force value Alternative config	
Step	1 s		
Comm object	15741	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Specific protection delay is possible to use on Binary Input 6. Delay is active for Wm or Sd protection only - not for functions like Rem Start/Stop. Protection delay is active for both Binary input NO / NC configuration. BIN6 del starts after Eng prot del when BI6 protection is configured "Running only".			

6 [back to List of setpoints](#)

Horn timeout

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	8264	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Max time limit of horn sounding. Set to zero if you want to leave the output HORN open. Horn timeout starts again from the beginning if a new alarm appears before previous Horn timeout has elapsed.			

6 [back to List of setpoints](#)

StartOverspeed

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	50 - 150 [%]		
Default value	120%	Force value Alternative config	
Step	1 %		
Comm object	13340	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit for engine ShutDown overspeed protection. Protection is active during start process of the engine and Idle time.			
<p><i>Note: The engine can spasmodically reach higher than Overspeed level during start, but for normal running state would be this protection too high. This setpoint allows the overspeed protection during irregular starting condition.</i></p>			

6 [back to List of setpoints](#)

Overspeed

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	50 - 150 [%]		
Default value	115%	Force value Alternative config	
Step	1 % of nominal RPM		
Comm object	8263	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Limit for engine ShutDown overspeed protection.			

6 [back to List of setpoints](#)


Underspeed

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	Starting RPM - 100%		
Default value	25%	Force value Alternative config	
Step	1 % of nominal RPM		
Comm object	8260	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

Limit for Warning Underspeed protection. Active protection is indicated as “Wm Underspeed” in Alarm list. Under speed Warning protection is inactive 5s after RPM is over **Engine params: Starting RPM** and during the Idle time.

The “Ready to load” output is deactivated when Wm underspeed protection is active and needs the Fault reset for activation after RPM is over Underspeed limit.

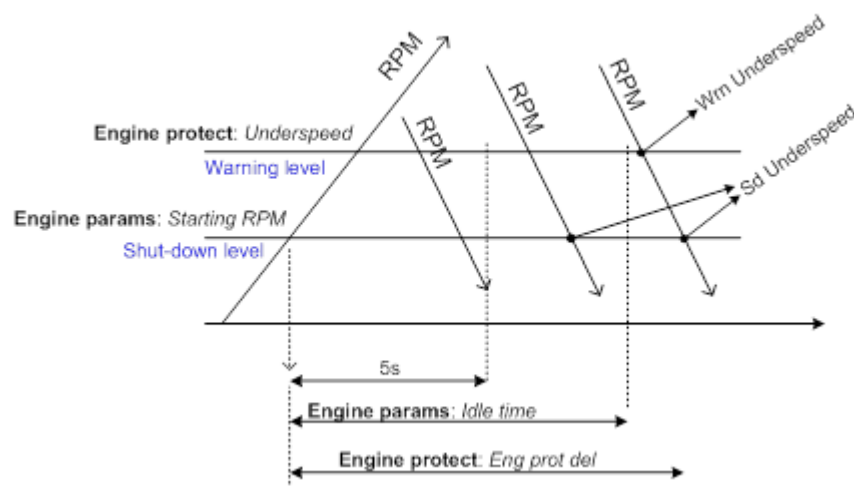

6 [back to List of setpoints](#)

Flow SwitchDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	5s	Force value Alternative config	
Step	1 s		
Comm object	12620	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Engine is switched to Cooling state when Binary input FlowSwitch is not closed within Flow SwitchDel after „Running“ (Ready to load) engine state activation.			

6 [back to List of setpoints](#)

UnderspeedSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-		
Default value	ENABLED	Force value Alternative config	
Step	-		
Comm object	11415	Related applications	
Config level	Standard		

Setpoint visibility	Always
----------------------------	--------

Description

DISABLED: Disables the Wm Underspeed protection when engine RPM drops below Engine protect: Underspeed and SdUnderspeed protection in case the engine RPM drops below the Engine params: Starting RPM.

ENABLED: Function as on the picture above. Default state.


Tables below describe Underspeed protection behavior depends on Underspeed Sd setpoint setting and RPM value.

Engine protect: Underspeed Sd = ENABLED

RPM <	Engine State	AlarmList	History	ReadyToLoad
Engine protect: Underspeed	Idle	-	-	Off
	Running	Wm Underspeed	-	On → Off
Engine param: Starting RPM	Idle	Sd Underspeed	Sd Underspeed	Off
	Running	Sd Underspeed	Sd Underspeed	Off

Engine protect: Underspeed Sd = DISABLED

RPM <	Engine State	AlarmList	History	ReadyToLoad
Engine protect: Underspeed	Idle	-	-	Off
	Running	-	-	On
Engine param: Starting RPM	Idle	-	-	Off
	Running	-	-	On
10 RPM	Idle	Sd Underspeed	Sd Underspeed	On → Off
10 RPM	Running	Wm Underspeed Sd Underspeed	Sd Underspeed	On → Off

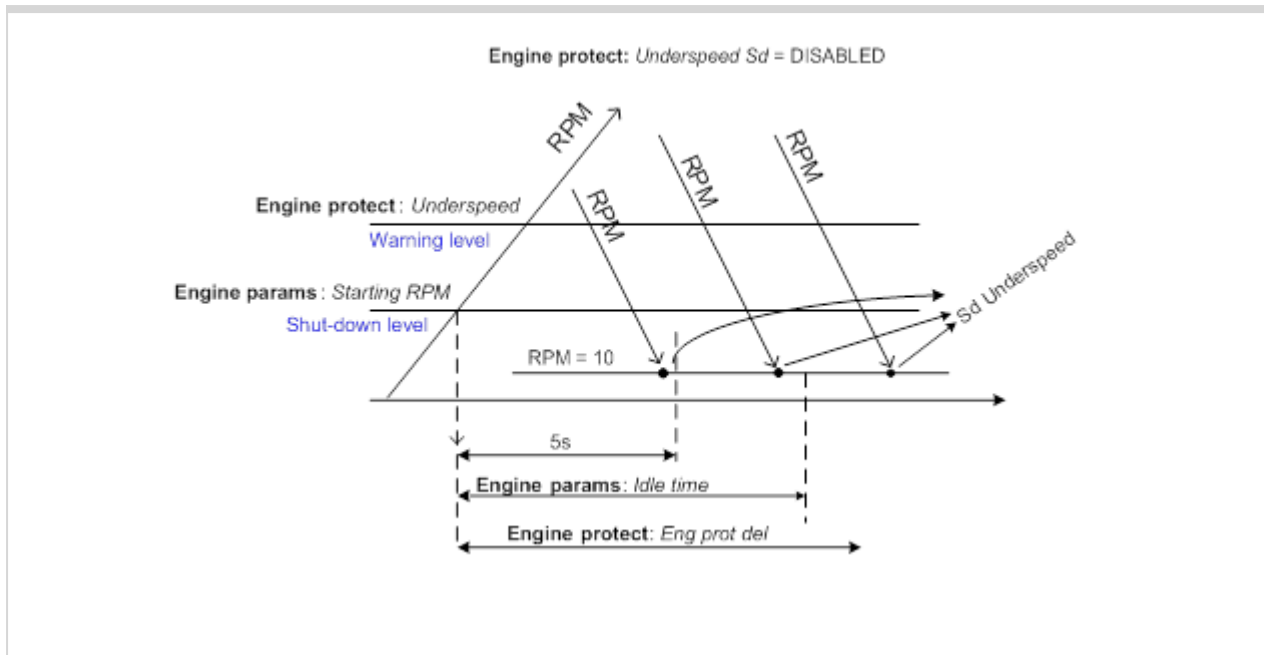

6 [back to List of setpoints](#)

AIN1 Level 1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-10 - +1000 [Bar]		
Default value	2Bar	Force value Alternative config	
Step	0.1 Bar		
Comm object	78123	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for ANALOG INPUT 1			

6 [back to List of setpoints](#)

AIN1 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-10 - +1000 [Bar]		
Default value	1Bar	Force value Alternative config	
Step	0.1 Bar		
Comm object	78123	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for ANALOG INPUT 1			

6 [back to List of setpoints](#)

AIN1 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 180 [s]		
Default value	3s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for ANALOG INPUT 1			
<i>Note: Analog input 1 is usually determined to Oil Pressure measurement and it is resistive type of input with range 0-2500Ohm.</i>			

[6 back to List of setpoints](#)

AIN2 Level1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-100 - 10000 [°C]		
Default value	80°C	Force value Alternative config	
Step	1 °C		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for ANALOG INPUT 2			

[6 back to List of setpoints](#)

AIN2 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-100 - 10000 [°C]		
Default value	90°C	Force value Alternative config	
Step	1 °C		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for ANALOG INPUT 2			

[6 back to List of setpoints](#)

AIN2 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 180 [s]		
Default value	5s	Force value Alternative config	
Step	1 s		
Comm object	78123	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for ANALOG INPUT 2 alarm.			
<i>Note: Analog input 2 is usually determined to Engine Temperature measurement and it is resistive type of input with range 0-2500Ohm.</i>			

[6 back to List of setpoints](#)

AIN3 Level1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-100 - +10000 [%]		
Default value	20%	Force value Alternative config	
Step	1 %		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for ANALOG INPUT 3			

[6 back to List of setpoints](#)

AIN3 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-100 - +10000 [%]		
Default value	10%	Force value Alternative config	
Step	1 %		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for ANALOG INPUT 3			

[6 back to List of setpoints](#)

AIN3 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 180 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for ANALOG INPUT 3			
<i>Note: Analog input 3 is usually determined to Fuel Level measurement and it is resistive type of input with range 0-2500Ohm.</i>			

6 [back to List of setpoints](#)

Batt overvolt

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	Batt undervolt - 40 [V]		
Default value	36V	Force value Alternative config	
Step	0.1 V		
Comm object	9587	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High battery voltage Warning limit			

6 [back to List of setpoints](#)

Batt undervolt

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	8 - Batt overvolt		
Default value	18V	Force value Alternative config	
Step	0.1 V		
Comm object	8387	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low battery voltage Warning limit.			

6 [back to List of setpoints](#)

Batt volt del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	5s	Force value Alternative config	
Step	1 s		
Comm object	8383	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for low and high battery voltage alarm.			

6 [back to List of setpoints](#)

AIN4 Level1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for AIN4			

6 [back to List of setpoints](#)

AIN4 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for AIN4			

6 [back to List of setpoints](#)

AIN4 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Wm/Sd AIN4 alarm.			

6 [back to List of setpoints](#)

AIN4 Eval

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>NORMAL: Protection behaves according to the standard configuration of Wm/Sd alarm in LiteEdit AINx configuration screen. Default state.</p> <p>CLASS C: The protection is type "Running only" and does not depend on Running only tick in LiteEdit AINx Alarm properties configuration window. Protection (Class C) is working after AINx Del or sooner when appropriate value increases over AINx Wm limit +3 seconds - after engine start. Warning/ShutdDown protection is activated with fix delay 0,5s.</p> <p>Note: Class C protection is working and corresponding setpoints are visible only when corresponding AIN is configured in Modify->Alarm properties-> Direction-> Window prot.</p>			

6 [back to List of setpoints](#)

AIN4 LowWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13365	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low Warning limit level for AIN4			

6 [back to List of setpoints](#)

AIN4 LowSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1 s		
Comm object	13366	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low ShutDown limit level for AIN4			

6 [back to List of setpoints](#)

AIN4 LowDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1 s		
Comm object	13367	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low level protection delay for Wrn and Sd of AIN4			

6 [back to List of setpoints](#)

AIN4 HighWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13368	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High Warning limit level for AIN4			

6 [back to List of setpoints](#)

AIN4 HighSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13369	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High ShutDown limit level for AIN4			

6 [back to List of setpoints](#)

AIN4 HighDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13370	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High level protection delay for Wm and Sd of AIN4			
<i>Note: Analog input 4 is fully configurable and it is voltage type of input with range 0-40V</i>			

6 [back to List of setpoints](#)

AIN5 Level 1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for AIN5			

6 [back to List of setpoints](#)

AIN5 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for AIN5			

6 [back to List of setpoints](#)

AIN5 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Wm/Sd AIN5 alarm.			

6 [back to List of setpoints](#)

AIN5 Eval

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>NORMAL: Protection behaves according to the standard configuration of Wrn/Sd alarm in LiteEdit AINx configuration screen. Default state.</p> <p>CLASS C: The protection is type "Running only" and does not depend on Running only tick in LiteEdit AINx Alarm properties configuration window. Protection (Class C) is working after AINx Del or sooner when appropriate value increases over AINx Wrn limit +3 seconds - after engine start. Warning/ShutdDown protection is activated with fix delay 0,5s.</p> <p>Note: Class C protection is working and corresponding setpoints are visible only when corresponding AIN is configured in Modify->Alarm properties-> Direction-> Window prot.</p>			

6 [back to List of setpoints](#)

AIN5 LowWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13353	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low Warning limit level for AIN5			

6 [back to List of setpoints](#)

AIN5 LowSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13354	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low ShutDown limit level for AIN5			

6 [back to List of setpoints](#)

AIN5 LowDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13355	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low level protection delay for Wrn and Sd of AIN5			

6 [back to List of setpoints](#)

AIN5 HighWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13356	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High Warning limit level for AIN5			

6 [back to List of setpoints](#)

AIN5 HighSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13357	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High ShutDown limit level for AIN5			

6 [back to List of setpoints](#)

AIN5 HighDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13358	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High level protection delay for Wm and Sd of AIN5			
<i>Note: Analog input 5 is fully configurable and it is voltage type of input with range 0-40V</i>			

6 [back to List of setpoints](#)

AIN6 Level 1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for AIN6			

6 [back to List of setpoints](#)

AIN6 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for AIN6			

[6 back to List of setpoints](#)

AIN6 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1s		
Comm object	9261	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Wm/Sd AIN6 alarm.			

[6 back to List of setpoints](#)

AIN6 Eval

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>NORMAL: Protection behaves according to the standard configuration of Wrn/Sd alarm in LiteEdit AINx configuration screen. Default state.</p> <p>CLASS C: The protection is type "Running only" and does not depend on Running only tick in LiteEdit AINx Alarm properties configuration window. Protection (Class C) is working after AINx Del or sooner when appropriate value increases over AINx Wrn limit +3 seconds - after engine start. Warning/ShutdDown protection is activated with fix delay 0,5s.</p> <p>Note: Class C protection is working and corresponding setpoints are visible only when corresponding AIN is configured in Modify->Alarm properties-> Direction-> Window prot.</p>			

6 [back to List of setpoints](#)

AIN6 LowWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000 [V]		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13359	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low Warning limit level for AIN6			

6 [back to List of setpoints](#)

AIN6 LowSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000 [V]		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13360	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low ShutDown limit level for AIN6			

6 [back to List of setpoints](#)

AIN6 LowDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13361	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low level protection delay for Wrn and Sd of AIN6			

6 [back to List of setpoints](#)

AIN6 HighWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13350	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High Warning limit level for AIN6			

6 [back to List of setpoints](#)

AIN6 HighSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000 [V]		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13351	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High ShutDown limit level for AIN6			

6 [back to List of setpoints](#)

AIN6 HighDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13352	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High level protection delay for Wm and Sd of AIN6			
<i>Note: Analog input 6 is fully configurable and it is voltage type of input with range 0-10V</i>			

6 [back to List of setpoints](#)

AIN7 Level 1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for AIN7			

6 [back to List of setpoints](#)

AIN7 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for AIN7			

[6 back to List of setpoints](#)

AIN7 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1s		
Comm object	9261	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Wm/Sd AIN7 alarm.			

[6 back to List of setpoints](#)

AIN7 Eval

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]			
Default value		Force value Alternative config	
Step			
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>NORMAL: Protection behaves according to the standard configuration of Wrn/Sd alarm in LiteEdit AINx configuration screen. Default state.</p> <p>CLASS C: The protection is type "Running only" and does not depend on Running only tick in LiteEdit AINx Alarm properties configuration window. Protection (Class C) is working after AINx Del or sooner when appropriate value increases over AINx Wrn limit +3 seconds - after engine start. Warning/ShutdDown protection is activated with fix delay 0,5s.</p> <p>Note: Class C protection is working and corresponding setpoints are visible only when corresponding AIN is configured in Modify->Alarm properties-> Direction-> Window prot.</p>			

6 [back to List of setpoints](#)

AIN7 LowWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000 [V]		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13359	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low Warning limit level for AIN7			

6 [back to List of setpoints](#)

AIN7 LowSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000 [V]		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13360	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low ShutDown limit level for AIN7			

6 [back to List of setpoints](#)

AIN7 LowDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13361	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Low level protection delay for Wrn and Sd of AIN7			

6 [back to List of setpoints](#)

AIN7 HighWrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object	13350	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High Warning limit level for AIN7			

6 [back to List of setpoints](#)

AIN7 HighSd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000 [V]		
Default value	10	Force value Alternative config	
Step	1		
Comm object	13351	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High ShutDown limit level for AIN7			

6 [back to List of setpoints](#)

AIN7 HighDel

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1 s		
Comm object	13352	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
High level protection delay for Wm and Sd of AIN7			
<i>Note: Analog input 6 is fully configurable and it is voltage type of input with range 0-10V</i>			

6 [back to List of setpoints](#)

AIN8 Level 1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for AIN8			

6 [back to List of setpoints](#)

AIN8 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for AIN8			

6 [back to List of setpoints](#)

AIN8 Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	10s	Force value Alternative config	
Step	1s		
Comm object	9261	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Wm/Sd AIN8 alarm.			
<p>Note: Analog input 8 is configurable with basic two levels protection and it is voltage type of input with range 0-10V.</p>			

6 [back to List of setpoints](#)

AIN9 Level 1

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	20	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning limit level for AIN9			

6 [back to List of setpoints](#)

AIN9 Level 2

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 10000		
Default value	10	Force value Alternative config	
Step	1		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Shutdown limit level for AIN9			

6 [back to List of setpoints](#)

NextServTime

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 65535 [h]		
Default value	10000	Force value Alternative config	
Step	1 h		
Comm object	9648	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Counting down when engine is running. Service time alarm appears if reaches zero. By setting the value of 65535h the count down is disabled.			
<p>Note: Set the NextServTime = 65535h to disable count down. The setpoint stays constant, but Statistics value (visible in LiteEdit) displays ##### invalid value.</p>			

6 [back to List of setpoints](#)



GearBoxRatio

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 5 [RPM]		
Default value	0RPM	Force value Alternative config	
Step	0.1 RPM		
Comm object	8708	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

There are two new protections related to RPM-BI3 where functions Engine protect: RPMdiff Sd, RPMdiff Wm limits depends on setting of GearBoxRatio:

- ▶ Separate RPM-BI3 underspeed Wm and Sd protection when Engine protect: GearBoxRatio = 0.0
- ▶ Difference check between RPM and RPM3 with calculation of gear-box ratio, when Engine protect: GearBoxRatio > 0.0. Protection is active when engine is Ready to load.

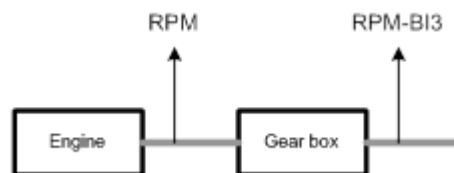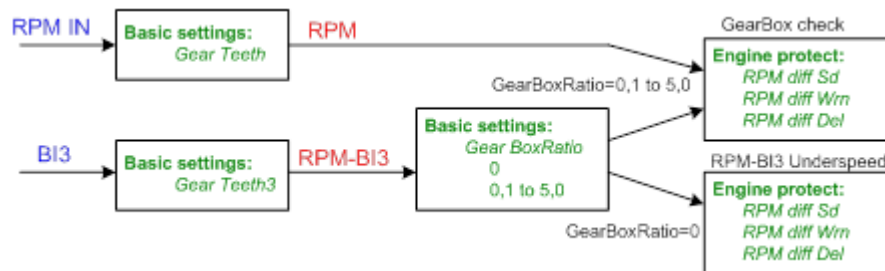

Note: The RPM-BI3 measuring and corresponding protections are switched off when Basic setting: GearTeethBI3 = 0. In this case BI3 operates as standard Binary input.

6 back to List of setpoints

RPMdiff Sd

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	1-1000 [RPM]		
Default value	1000RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10143	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
RPM-BI3 Sd underspeed protection limit or Sd difference limit between RPM-BI3 and RPM transferred via GearBoxRatio. See description in GearBoxRatio setpoint. In alarm list appears text Sd RPMdiff. Message: Wrn RPMdiff			

6 [back to List of setpoints](#)

RPMdiff Wrn

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	1 - 1000 [RPM]		
Default value	1000RPM	Force value Alternative config	
Step	1 RPM		
Comm object	10141	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
RPM-BI3 Wrn underspeed protection limit or Wrn difference limit between RPM-BI3 and RPM transferred via GearBoxRatio. See description in GearBoxRatio setpoint. In alarm list appears text Wrn RPMdiff. Message: Wrn RPMdiff			

6 [back to List of setpoints](#)

RPMdiff delay

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 600 [s]		
Default value	5s	Force value Alternative config	
Step	1 s		
Comm object	10150	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for RPMdiff protections above. See description in GearBoxRatio setpoint.			

6 [back to List of setpoints](#)

BIN1 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.			

6 [back to List of setpoints](#)

BIN2 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.			

6 [back to List of setpoints](#)

BIN3 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.			

6 [back to List of setpoints](#)

BIN4 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.			

6 [back to List of setpoints](#)

BIN5 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
<i>Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.</i>			

6 [back to List of setpoints](#)

BIN6 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
<i>Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.</i>			

6 [back to List of setpoints](#)

BIN7 Prot Del

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 3600 [s]		
Default value	0s	Force value Alternative config	
Step	1 s		
Comm object		Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Five setpoints are dedicated for separately adjustment of the delay for each of binary inputs according to the Class B protection standard.			
<i>Note: The corresponding BIN protection has to be configured as Running only in LiteEdit.</i>			

6 [back to List of setpoints](#)

DEF Level Min

Setpoint group	Engine protect	Related FW	1.1.0
Range [units]	0 - 150 [%]		
Default value	10%	Force value Alternative config	
Step	1 %		
Comm object	13178	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Diesel Exhaust Fluid level protection activates LBO DEF Tank Level when received level (J1939 - SCR - Selective Catalytic Reduction message) is below DEF Level Min for more than (fix) 3s delay. This function is active for IVECO NEF&&Cursor engine. LBO can be active for running engine only.			

6 [back to List of setpoints](#)

DEF Level Max

Setpoint group	Engine protect 2	Related FW	1.1.0
Range [units]	0 - 150 [%]		
Default value	90%	Force value Alternative config	
Step	1 %		
Comm object	13379	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Diesel Exhaust Fluid level protection deactivates LBO DEF Tank Level when received level (J1939 - SCR - Selective Catalytic Reduction message) is above DEF Level Max for more than (fix) 3s delay. This function is active for IVECO NEF&&Cursor engine.			
<i>Note: DEF Level is usual signage of Urea tank level, which is more often used in United States.</i>			

6 [back to List of setpoints](#)

10.1.11 Group: Date/Time

***Note:** Following setpoints are available from Controller and LiteEdit/InteliMonitor*

Time stamp per

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	0 - 200 [min]		
Default value	60min	Force value Alternative config	
Step	1 min		
Comm object	8979	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint is dedicated to adjustment of time interval for periodical history records.			

6 [back to List of setpoints](#)

SummerTimeMod

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	DISABLED	Force value Alternative config	
Step	-		
Comm object	8727	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
DISABLED: Automatic switching between summer and wintertime is disabled.			
WINTER (SUMMER): Automatic switching between summer and winter time is enabled and it is set to winter (summer) season.			
WINTER-S (SUMMER-S) : Modification for southern hemisphere.			

[6 back to List of setpoints](#)

Time

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	0:00:00	Force value Alternative config	
Step	-		
Comm object	24554	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Actual time.			

[6 back to List of setpoints](#)

Date

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	1.1.2006	Force value Alternative config	
Step	-		
Comm object	24553	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Actual date.			

[6 back to List of setpoints](#)

Timer1Function

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	No Func	Force value Alternative config	
Step	-		
Comm object	11660	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>No Func: Operates just corresponding LBO Timer1 according the Timer1 setting, see Timer1 repeat, Time1 ON time, Timer1Duration. Function operates in all OFF-MAN-AUT modes. Default state.</p> <p>AutoRun: Engine automatically starts and stops in AUT mode (similar to LBI Rem start/stop, the same record in the history) according the Timer1 setting.</p> <p>AutoRegCMP: Start and stop engine in AUT mode according to the LBO Speed switch - see Regulator: Reg CMP setpoints. The comparator function (output) works opposite when Regulator: Reg CMP On < Reg CMP Off. The Date/Time: Timer1 repeat, Timer1 ON time, Timer1Duration settings are not important in this case.</p> <p>AutoBatt: Engine starts when actual Battery voltage < Engine protect: Batt undervolt + Batt volt del and stays running for Date/Time: Timer1 Duration. Function operates in AUT mode.</p> <p>AutoStop: Engine is switched from AUT to MAN and stopped or stopped from MAN mode (like by STOP button) when engine runs longer then Date/Time: Timer1Duration on actual RPM less or equal Engine params: Idle speed + 5% (fix limit). Function is not active during engine start.</p>			

6 back to List of setpoints

Timer1Repeat

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	NONE	Force value Alternative config	
Step	-		
Comm object	10045	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>This setpoint defines Timer1 activation. Binary output Timer1 is internally linked with Rem Start/Stop binary input. Refer to binary inputs for details.</p> <p>NONE: Timer function is disabled. Default state.</p> <p>MONDAY, TUESDAY, WEDNESDAY, THURSDAY, WEDNESDAY, FRIDAY, SATURDAY, SUNDAY: Timer is activated on daily basis.</p> <p>MON-FRI, MON-SAT, SAT-SUN: Timer is activated on selected day interval.</p>			

6 [back to List of setpoints](#)

Timer1 ON time

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]			
Default value	5:00:00	Force value Alternative config	
Step			
Comm object	10042	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Display day time when Timer 1 output is activated.			

6 [back to List of setpoints](#)

Timer1Duration

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	1 - 1440 [min]		
Default value	5min	Force value Alternative config	
Step	1 min		
Comm object	10044	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Adjusts duration of Timer 1 output.			

6 [back to List of setpoints](#)

Timer2Function

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	No Func	Force value Alternative config	
Step	-		
Comm object	11661	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>No Func: Operates just corresponding LBO Timer2 according the Timer2 setting, see Timer2 repeat, Time2 ON time, Timer2Duration. Function operates in all OFF-MAN-AUT modes. Default state.</p> <p>AutoRun: Engine automatically starts and stops in AUT mode (similar to LBI Rem start/stop, the same record in the history) according the Timer2 setting.</p> <p>AutoRegCMP: Start and stop engine in AUT mode according to the LBO Speed switch - see Regulator: Reg CMP setpoints. The comparator function (output) works opposite when Regulator: Reg CMP On < Reg CMP Off. The Date/Time: Timer2 repeat, Timer2 ON time, Timer2Duration settings are not important in this case.</p> <p>AutoBatt: Engine starts when actual Battery voltage < Engine protect: Batt undervolt + Batt volt del and stays running for Date/Time: Timer2 Duration. Function operates in AUT mode.</p> <p>AutoStop: Engine is switched from AUT to MAN and stopped or stopped from MAN mode (like by STOP button) when engine runs longer then Date/Time: Timer2Duration on actual RPM less or equal Engine params: Idle speed + 5% (fix limit). Function is not active during engine start.</p>			

6 [back to List of setpoints](#)

Timer2Repeat

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	-		
Default value	NONE	Force value Alternative config	
Step	-		
Comm object	10202	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>This setpoint defines Timer2 activation. Binary output Timer2 is internally linked with Rem Start/Stop binary input. Refer to binary inputs for details.</p> <p>NONE: Timer function is disabled. Default state.</p> <p>MONDAY, TUESDAY, WEDNESDAY, THURSDAY, WEDNESDAY, FRIDAY, SATURDAY, SUNDAY: Timer is activated on daily basis.</p> <p>MON-FRI, MON-SAT, SAT-SUN: Timer is activated on selected day interval.</p>			

6 [back to List of setpoints](#)

Timer2OnTime

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]			
Default value	5.00:00	Force value Alternative config	
Step			
Comm object	10199	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Display day time when Timer 2 output is activated.			

6 [back to List of setpoints](#)

Timer2Duration

Setpoint group	Date/Time	Related FW	1.1.0
Range [units]	1 - 1440 [V]		
Default value	5min	Force value Alternative config	
Step	1 min		
Comm object	10201	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Adjusts duration of Timer 2 output.			

6 [back to List of setpoints](#)

10.1.12 Group: Sensor spec

Calibr AI1

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 BAR	Force value Alternative config	
Step	1		
Comm object	8431	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
Note: Calibration constants have to be adjusted when measured value is near the alarm level.			

6 [back to List of setpoints](#)

Calibr AI2

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 °C	Force value Alternative config	
Step	1		
Comm object	8407	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI3

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 %	Force value Alternative config	
Step	1		
Comm object	8467	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI4

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 U16	Force value Alternative config	
Step	1		
Comm object	11917	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI5

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 U17	Force value Alternative config	
Step	1		
Comm object	11918	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI6

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 U12	Force value Alternative config	
Step	1		
Comm object	11599	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI7

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 BAR	Force value Alternative config	
Step	1		
Comm object	8431	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI8

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 BAR	Force value Alternative config	
Step	1		
Comm object	8431	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AI9

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000 [V]		
Default value	0 BAR	Force value Alternative config	
Step	1		
Comm object	8431	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of IntelliDrive Marine analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Calibration constants have to be adjusted when measured value is near the alarm level.</i>			

6 [back to List of setpoints](#)

Calibr AIO1

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11919	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of plug-in analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			

6 [back to List of setpoints](#)

Calibr AIO2

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11920	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of plug-in analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			

6 [back to List of setpoints](#)

Calibr AIO3

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - +1000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	11921	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of plug-in analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			

6 [back to List of setpoints](#)

Calibr AIO4


Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-1000 - + 1000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13640	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrate the constant to adjust the measured value of plug-in analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			

6 [back to List of setpoints](#)

CounterConst 1, CounterConst 2

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	0.01 - 655.34	Force value Alternative config	
Default value	1		
Step	0.01		
Comm object	14281	Related applications	
Config level	Standard		
Setpoint visibility	Always		

Description

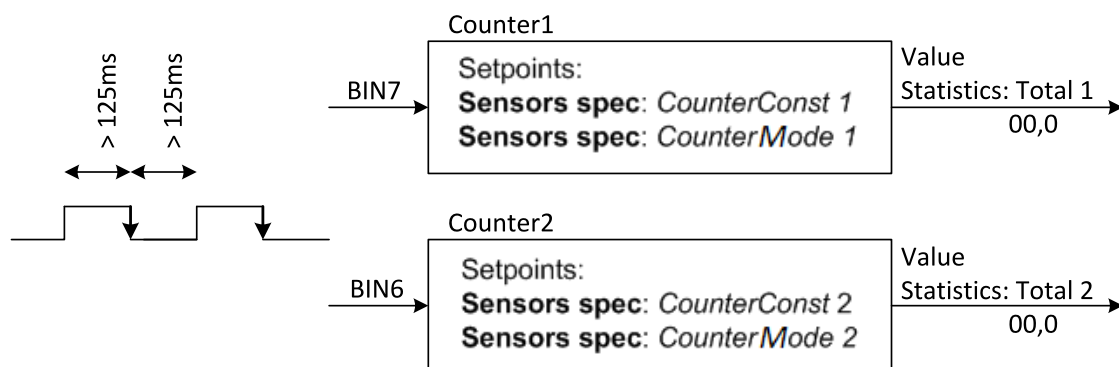

Counter 1 (fix linked to Binary physical input 6) and Counter 2 (fix linked to Binary physical input 7) counts pulses (falling edges). The counters function depends on Counter mode 1 and ... 2 setting and does not depend on BIN6, BIN7 inputs configuration. The maximal input frequency is limited up to 4Hz – i.e. the shortest input pulse is 125ms and gap 125ms (not shorter) to be each edge counted.

CounterConst 1, CounterConst 2 is conversion (multiplication) factor between number of counted pulses (edges) and output Statistics values Total 1 and Total 2. Values stay in memory even if controller is switched off. Both can be cleared or adjusted in LiteEdit like other Statistics values when level 3 password is set.

The Statistics value Total 1 and Total 2 range see in table below.

Note: The number of controller screen characters is limited – i.e. displays ????? when steps over range. The counter starts from zero again when maximum is reached.

Statistics value	Screen	From	To	Over
Total 1 or Total 2	Controller LiteEdit	0,0	9999999,9 429496729,4	????????? Continue from 0,0

6 back to List of setpoints

CounterMode 1, CounterMode 2

Setpoint group	Sensor spec	Related FW	1.1.0
Range [units]	-		
Default value	OFF	Force value Alternative config	
Step	-		
Comm object	14283	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Setting of Counter 1 and Counter 2 mode:			
Always: Corresponding counter counts pulses all time.			
Running: Corresponding counter counts pulses only when engine is running.			
OFF: Corresponding counter does not count pulses. Default settings.			
<p>Note: The Total 1 value is visible in LiteEdit – Values – Statistics. The Total 1 value disappears from controller screen when Counter mode 1 is switched OFF otherwise there is new screen between existing Statistics and Alarm list.</p>			

6 [back to List of setpoints](#)

10.1.13 Group: AIO module

AnInAIO1 lev1

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000 [V]		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13650	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 1 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO2 lev1

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000 [V]		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13651	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 2 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO3 lev1

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000 [V]		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13652	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 3 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO4 lev1

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000 [V]		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13653	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 4 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO1 lev2

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13654	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 1 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO2 lev2

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13655	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 2 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO3 lev2

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13656	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 3 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO4 lev2

Setpoint group	AIO module	Related FW	1.1.0
Range [units]	-100 - +10000		
Default value	0	Force value Alternative config	
Step	1		
Comm object	13657	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
The level for IL-NT-AIO plug-in card Analog input 1, 2, 3, 4 alarm detection.			

6 [back to List of setpoints](#)

AnInAIO1 del

Setpoint group	AIO module	Related FW	1.1.0										
Range [units]	0 - 180 [s]												
Default value	5s	Force value Alternative config											
Step	1 s												
Comm object	13658	Related applications											
Config level	Standard												
Setpoint visibility	Always												
Description													
Delay for IL-NT-AIO plug-in card Analog input 1 alarm.													
Note: Plug-in analog inputs protection alarms can be configured following way													
<table border="1"> <thead> <tr> <th>Configuration</th> <th>Protection</th> </tr> </thead> <tbody> <tr> <td>Under limit</td> <td>Protection is activated only when measured value is under measured level.</td> </tr> <tr> <td>Over limit</td> <td>Protection is activated only when measured value is over measured level.</td> </tr> <tr> <td>UnderLimit+fIs</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> <tr> <td>OverLimit+fIs</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> </tbody> </table>				Configuration	Protection	Under limit	Protection is activated only when measured value is under measured level.	Over limit	Protection is activated only when measured value is over measured level.	UnderLimit+fIs	Level 2 protection is activated by sensor fail too.	OverLimit+fIs	Level 2 protection is activated by sensor fail too.
Configuration	Protection												
Under limit	Protection is activated only when measured value is under measured level.												
Over limit	Protection is activated only when measured value is over measured level.												
UnderLimit+fIs	Level 2 protection is activated by sensor fail too.												
OverLimit+fIs	Level 2 protection is activated by sensor fail too.												

6 [back to List of setpoints](#)

AnInAIO2 del

Setpoint group	AIO module	Related FW	1.1.0										
Range [units]	0 - 180 [s]												
Default value	5s	Force value											
		Alternative config											
Step	1 s												
Comm object	13659	Related applications											
Config level	Standard												
Setpoint visibility	Always												
Description													
Delay for IL-NT-AIO plug-in card Analog input 2 alarm.													
<i>Note: Plug-in analog inputs protection alarms can be configured following way</i>													
<table border="1"> <thead> <tr> <th>Configuration</th> <th>Protection</th> </tr> </thead> <tbody> <tr> <td>Under limit</td> <td>Protection is activated only when measured value is under measured level.</td> </tr> <tr> <td>Over limit</td> <td>Protection is activated only when measured value is over measured level.</td> </tr> <tr> <td>UnderLimit+fIs</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> <tr> <td>OverLimit+fIs</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> </tbody> </table>				Configuration	Protection	Under limit	Protection is activated only when measured value is under measured level.	Over limit	Protection is activated only when measured value is over measured level.	UnderLimit+fIs	Level 2 protection is activated by sensor fail too.	OverLimit+fIs	Level 2 protection is activated by sensor fail too.
Configuration	Protection												
Under limit	Protection is activated only when measured value is under measured level.												
Over limit	Protection is activated only when measured value is over measured level.												
UnderLimit+fIs	Level 2 protection is activated by sensor fail too.												
OverLimit+fIs	Level 2 protection is activated by sensor fail too.												

6 [back to List of setpoints](#)

AnInAIO3 del

Setpoint group	AIO module	Related FW	1.1.0										
Range [units]	0 - 180 [s]												
Default value	5s	Force value											
		Alternative config											
Step	1 s												
Comm object	13660	Related applications											
Config level	Standard												
Setpoint visibility	Always												
Description													
Delay for IL-NT-AIO plug-in card Analog input 3 alarm.													
<i>Note: Plug-in analog inputs protection alarms can be configured following way</i>													
<table border="1"> <thead> <tr> <th>Configuration</th> <th>Protection</th> </tr> </thead> <tbody> <tr> <td>Under limit</td> <td>Protection is activated only when measured value is under measured level.</td> </tr> <tr> <td>Over limit</td> <td>Protection is activated only when measured value is over measured level.</td> </tr> <tr> <td>UnderLimit+fIs</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> <tr> <td>OverLimit+fIs</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> </tbody> </table>				Configuration	Protection	Under limit	Protection is activated only when measured value is under measured level.	Over limit	Protection is activated only when measured value is over measured level.	UnderLimit+fIs	Level 2 protection is activated by sensor fail too.	OverLimit+fIs	Level 2 protection is activated by sensor fail too.
Configuration	Protection												
Under limit	Protection is activated only when measured value is under measured level.												
Over limit	Protection is activated only when measured value is over measured level.												
UnderLimit+fIs	Level 2 protection is activated by sensor fail too.												
OverLimit+fIs	Level 2 protection is activated by sensor fail too.												

6 [back to List of setpoints](#)

AnInAIO4 del

Setpoint group	AIO module	Related FW	1.1.0										
Range [units]	0 - 180 [s]												
Default value	5s	Force value											
		Alternative config											
Step	1 s												
Comm object	13661	Related applications											
Config level	Standard												
Setpoint visibility	Always												
Description													
Delay for IL-NT-AIO plug-in card Analog input 4 alarm.													
Note: Plug-in analog inputs protection alarms can be configured following way													
<table border="1"> <thead> <tr> <th>Configuration</th> <th>Protection</th> </tr> </thead> <tbody> <tr> <td>Under limit</td> <td>Protection is activated only when measured value is under measured level.</td> </tr> <tr> <td>Over limit</td> <td>Protection is activated only when measured value is over measured level.</td> </tr> <tr> <td>UnderLimit+fls</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> <tr> <td>OverLimit+fls</td> <td>Level 2 protection is activated by sensor fail too.</td> </tr> </tbody> </table>				Configuration	Protection	Under limit	Protection is activated only when measured value is under measured level.	Over limit	Protection is activated only when measured value is over measured level.	UnderLimit+fls	Level 2 protection is activated by sensor fail too.	OverLimit+fls	Level 2 protection is activated by sensor fail too.
Configuration	Protection												
Under limit	Protection is activated only when measured value is under measured level.												
Over limit	Protection is activated only when measured value is over measured level.												
UnderLimit+fls	Level 2 protection is activated by sensor fail too.												
OverLimit+fls	Level 2 protection is activated by sensor fail too.												

6 [back to List of setpoints](#)

10.1.14 Group: SMS_E-Mail

Note: If a cellular network modem and/or internet bridge is connected to the controller, the controller can send SMS messages and/or emails in the moment when a new alarm appears in the Alarm list. The message will contain a copy of the Alarm list. To enable this function, you should select with setpoints *Yel Alarm Msg* and *Red Alarm Msg*, which levels of alarms shall be announced (red/yellow/both) and also enter valid cellular network phone number and/or e-mail address to the setpoints *TelNo/Addr Ch1* and *TelNo/Addr Ch2*. It is possible to put either number or e-mail to both setpoints.

Note: An internet module must be available for sending of e-mails. Similarly, a cellular network modem is necessary for sending of SMS.

Note: There are 5 attempts for any active call (SMS/E-Mail). Timeout for connection is 90 sec and after 120 sec controller starts the next attempt. During the time the IL-NT-GPRS is trying to send an active call type, incoming calls are blocked.

Yel Alarm Msg

Setpoint group	SMS/E-Mail	Related FW	1.1.0
Range [units]	-		
Default value	OFF	Force value Alternative config	
Step	-		
Comm object	8482	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Set this setpoint to YES if you want to get messages when a yellow (warning) alarm occurs.			
Note: The target address (cellular network phone number or e-mail address) must be set correctly to the setpoint(s) TelNo/Addr Ch1 resp. TelNo/Addr Ch2.			

6 [back to List of setpoints](#)

Red Alarm Msg

Setpoint group	SMS/E-Mail	Related FW	1.1.0
Range [units]	-		
Default value	OFF	Force value Alternative config	
Step	-		
Comm object	8484	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
Set this setpoint to YES if you want to get messages when a red (shutdown) alarm occurs.			
Note: The target address (cellular network phone number or e-mail address) must be set correctly to the setpoint(s) TelNo/Addr Ch1 resp. TelNo/Addr Ch2.			

6 [back to List of setpoints](#)

TelNo/Addr Ch1

Setpoint group	SMS/E-Mail	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	9597	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Enter either a valid cellular network phone number or e-mail address to this setpoint, where the alarm messages shall be sent. Type of active call is considered from the value of this parameter. If it consist „@“ it is supposed to be e-mail address and active e-mail is sent. If the value is number, without „@“, it is supposed to be the telephone number and active SMS is sent.</p> <p>IMPORTANT: These setpoints can be modified from PC only! For cellular network numbers use either national format (i.e. like number you will dial if you want to make a local call) or full international format with "+" character followed by international prefix at the beginning.</p>			


6 [back to List of setpoints](#)

TelNo/Addr Ch2

Setpoint group	SMS/E-Mail	Related FW	1.1.0
Range [units]	-		
Default value	-	Force value Alternative config	
Step	-		
Comm object	9598	Related applications	
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Enter either a valid cellular network phone number or e-mail address to this setpoint, where the alarm messages shall be sent. Type of active call is considered from the value of this parameter. If it consist „@“ it is supposed to be e-mail address and active e-mail is sent. If the value is number, without „@“, it is supposed to be the telephone number and active SMS is sent.</p> <p>IMPORTANT: These setpoints can be modified from PC only! For cellular network numbers use either national format (i.e. like number you will dial if you want to make a local call) or full international format with "+" character followed by international prefix at the beginning.</p>			

6 [back to List of setpoints](#)

10.2 Values

Values are displayed on the controller screen or are accessible via icon  in the LiteEdit PC tool.

See the table with all visible values in LiteEdit.

Note: Some engine values (*) are visible only if the ECU unit is configured.

Groups	Name	Note
Load limit	LoadLimitOut	
Engine values	RPM RPM-BI3 ECU State (*) ECU FreqSelect (*) SpeedReq Abs SpeedReq Rel (*) Engine Speed Fuel Rate (*) CoolantTemp (*) Intake Temp (*) Oil Press (*) Boost Press (*) Oil Temp (*) ECU-AIN 8 (*) ECU-AIN 9 (*) FuelUsed (*) DPF1 Soot Load (*) DPF1 Ash Load (*)	If ECU is not configured, then is displayed only RPM, RPM-BI3 and SpeedReq Abs
Statistic	Run hrs Num starts NextServTime E-Stop ShutDown DayCons TripCons	
Analog CU	Ubat D+ OilPressure Engine Temp Fuel level AIN4-AIN9	Analog inputs are shown depends on if they are configured or not

Binary I/O	BIN BOUT RemoteControl	Binary states are displayed and is possible to use extract menu button for more details
Date/Time	Time Date	
ID info	Engine state Timer text Timer val SW version Application SW branch PasswordDecode Running timer GSM SignalLvl GSM ErrorRate GSM DiagCode: AirGate Diag: AirGate ID: Modem Status:	
Iveco Values	DEF TankLevel DEF TankTemp DEF Quantity Catal UpTemp Catal DownTemp DEF Pressure Catalyst Level	Values read from specific type of ECU
AIO module	AnInAIO1-AnInAIO4	

6 back to Appendix

10.3 Binary input functions

Note: Any Binary input can be configured to any IntelliDrive Marine controller terminal or changed to different function by LiteEdit PC tool. There is adjustable delay when any binary input is configured as protection.

6 back to Appendix


10.3.1 Binary inputs IntelliDrive Marine - default configuration

B11	Rem start/stop
B12	Access lock
B13	Emergency stop
B14	Remote OFF
B15	Sprinkler
B16	RemControlLock
B17	Not used

10.3.2 Configuration of binary inputs

Each binary input can be configured in several ways. The settings can be made in the PC program LiteEdit, in window Modify. After choosing a concrete binary input, its window appears where the user can choose if the binary input will be used to protect (option Alarm) or control (option Control).

Binary Alarm configuration items – see the picture and the table with explanations.

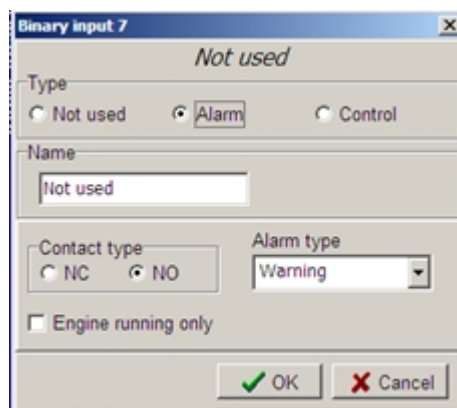

Name		14 characters ASCII string
Contact type	NC	Normally closed
	NO	Normally opened
Alarm type	Warning	
	Shut down	
Alarm active	All the time	
	Engine running only	

10.3.3 List of LBI

Not used	217
Rem start/stop	218
Rem start	218
Rem stop	218
Emergency stop	218
Sprinkler	218

Access lock	219
Remote OFF	219
Remote MAN	219
Remote AUT	219
RemControlLock	220
Emerg. manual	220
StartButton	220
StopButton	220
FaultResetButton	220
HornResButton	221
Nominal/Idle	221
Speed Up	221
Speed Down	221
Speed Sel1	222
Speed Sel2	222
Speed Sel3	222
Lang selection	222
Conveyor	223
LoadRequest2	223
LoadRegDisable	223
RegRequest2	223
R Reg Disable	223
Clear DayCons	224
Clear TripCons	224
Flow Switch	224
Prot Test	224
Regen Inhibit	225
Regen Force	225
ATT Lockout1	225
ATT Lockout2	225

6 back to Appendix

Not used

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	282		
Description			
Binary input has no function. Use this option when binary input is not connected.			

6 back to List of LBI

Rem start/stop

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	285		
Description			
Binary input is used for external request for engine start/stop in AUT mode only. When the input is closed the engine is started, when the input is opened the engine is stopped.			

6 [back to List of LBI](#)

Rem start

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	393		
Description			
Binary input is used for external request for engine start in AUT mode only.			

6 [back to List of LBI](#)

Rem stop

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	394		
Description			
Binary input is used for external request for engine stop in AUT mode only.			
<i>Note: Describe priority of the inputs!</i>			

6 [back to List of LBI](#)

Emergency stop

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	286		
Description			
If the input is opened, shut down is immediately activated. Input is inverted (normally closed) in default configuration.			
<i>Note: In case of controller hardware or software fail, safe stop of the engine doesn't have to be ensured. To back-up the Emergency stop function it is recommended to connect separate circuit for disconnection of Fuel solenoid and Starter signals.</i>			

6 [back to List of LBI](#)

Sprinkler

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	287		
Description			
If the input is closed all alarms are disabled except the binary input Emergency stop and "engine overspeed protection".			
<ul style="list-style-type: none"> ▶ All IntelliDrive Marine alarms are detected, ▶ IntelliDrive Marine front panel RED LED blinks or lights 			

- ▶ Alarm is recorded on the IntelliDrive Marine alarm list screen
- ▶ BUT engine remains running

Note: *Warning SprinklActive is indicated in the Alarm list if sprinkler mode active to inform the operator that the engine is not protected.*

6 [back to List of LBI](#)

Access lock

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	288		
Description			
If the input is closed, no setpoints can be adjusted from controller front panel and engine mode (OFF-MAN-AUT) cannot be changed.			
Note: <i>Access lock does not protect setpoints and mode changing from LiteEdit. To avoid unqualified changes the selected setpoints can be password protected.</i>			

6 [back to List of LBI](#)

Remote OFF

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	289		
Description			
If closed, IntelliDrive Marine is switched to OFF mode (there are three modes OFF-MAN-AUT). When opens controller is switched back to previous mode.			
Note: <i>This binary input should be connected to schedule timer switch, to avoid start of engine.</i>			

6 [back to List of LBI](#)

Remote MAN

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	290		
Description			
If the input is active, MAN mode is forced to the controller independently on the position of the MODE selector.			

6 [back to List of LBI](#)

Remote AUT

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	291		
Description			
If the input is active, AUT mode is forced to the controller independently on the position of the MODE selector. If another of remote inputs is active, then the Remote AUT input has the lowest priority.			

6 [back to List of LBI](#)

RemControlLock

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	294		
Description			
If the input is active, setpoints writing or command sending from the external terminal is disabled..			


6 [back to List of LBI](#)

Emerg. manual

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	295		
Description			
If the input is activated the controller behaves like when switched to OFF mode and opens all binary outputs. There is one exception – Stop solenoid doesn't activate on this transition. Detection of running engine and subsequent alarm message "Sd Stop fail" is blocked. The controller shows "Emerg Man" state and the engine can not be started. After the input is open again, the controller recovers to previous state and behaves according to the actual situation. Function is active in any controller mode.			


6 [back to List of LBI](#)

StartButton

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	296		
Description			
Binary input has the same function as  button on the IntelliDrive Marine front panel. It is active in MAN mode only.			

6 [back to List of LBI](#)

StopButton

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	297		
Description			
Binary input has the same function as  button on the IntelliDrive Marine front panel. It is active in MAN mode only.			

6 [back to List of LBI](#)

FaultResetButton

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	298		
Description			
Binary input has the same function as  button on the IntelliDrive Marine front panel.			

6 back to List of LBI

HornResButton

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	299		
Description			
Binary input has the same function as Horn reset button on the IntelliDrive Marine front panel.			

6 back to List of LBI

Nominal/Idle

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	304		
Description			
Input works in MAN mode only switching between running states Nominal/Idle. Active Nominal/Idle input activates binary output Idle/Nominal and sends Speed request = Engine params : Idle speed and/or active (binary) IDLE command to the ECU (e.g. to Volvo EMS).			
Eng.state	Sped request in MAN mode	Sped request in AUT mode	
Idle	Engine params: Idle speed	Engine params: Idle speed	
Running	Engine params: ECU SpeedAdj	... anything within Engine params: MinSpeedLim Engine params: MaxSpeedLim	
Active input opens the binary output DESCRIPTION (PAGE 233) during the engine running state. Ready to Load can be closed back (if other conditions are fulfilled – see the DESCRIPTION (PAGE 233) binary output description) if Nominal/Idle is opened.			

6 back to List of LBI

Speed Up

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	557		
Description			
If the input is active, the Speed Request may increase the engine speed value. The Speed Request value may also depend on the conditions which are described in the chapter below.			

6 back to List of LBI

Speed Down

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	558		
Description			
If the input is active, the Speed Request may decrease the engine speed value. The Speed Request value may also depend on the conditions which are described in the chapter below.			
Note: Speed Up/Down binary inputs are active only when Regulator: LAI SpdSelect = OFF .			

6 back to List of LBI

Speed Sel1

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	307		
Description			
If the input is active, the Speed request = Engine params: BI Speed Sel1 setpoint. The function is affected by Engine params: RetToSpeedAdj .			

6 [back to List of LBI](#)

Speed Sel2

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	308		
Description			
If the input is active, the Engine params: BI Speed Sel2 setpoint may give the engine speed value for Speed request to an ECU engine. The Speed Request value may also depend on the conditions which are described in the chapter below.			

6 [back to List of LBI](#)

Speed Sel3

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	309		
Description			
If the input is active, the Engine params: BI Speed Sel3 setpoint may give the engine speed value for Speed request to an ECU engine. The Speed Request value may also depend on the conditions which are described in the chapter below.			
<p>Note: Engine params: RetToSpeedAdj = DISABLED, Speed request is adjusted by BI Speed Sel1, 2, 3 edge (button press), i.e. input can be opened and Speed request stay constant.</p>			
<p>Note: Engine params: RetToSpeedAdj = ENABLED, Speed request is adjusted by BI Speed Sel1, 2, 3 level (switch), i.e. when input is opened Speed request go back to Engine params: ECU SpeedAdj level.</p>			
<p>Note: SpeedSel1, 2, 3 binary inputs are active only when Regulator: LAI SpdSelect = OFF.</p>			
<p>Note: When more binary inputs are active at the same time, e.g. all binary inputs: 'Speed Sel1', 'Speed Sel2', 'Speed Sel3' then requested speed is given by Engine params: BI Speed Sel 1 (lowest index) setpoint.</p>			


6 [back to List of LBI](#)

Lang selection

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	303		
Description			
Switch display texts between two languages.			

6 [back to List of LBI](#)

Conveyor

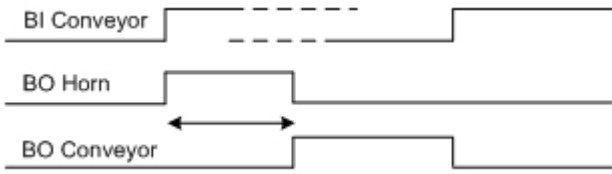Related FW	1.1.0	Related applications	AMF, MRS
Comm object	312		
Description			
Initial condition: Running engine.			
Rising edge BI Conveyor activates BO Horn for Engine params : <i>Conveyor horn</i> . And after horn is over activates the BO Conveyor.			
The second rising edge of BI Conveyor opens the BO Conveyor. BO Conveyor is deactivated in case of Sd protection.			
			

6 [back to List of LBI](#)

LoadRequest2

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	313		
Description			
Active input switches the Load limit request to Load limit : <i>LoadRequest2</i> setpoint.			

6 [back to List of LBI](#)

LoadRegDisable

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	314		
Description			
Active input disables the Load limit PI loop and switches analog output to constant Load limit : <i>Load bias</i> .			

6 [back to List of LBI](#)

RegRequest2

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	315		
Description			
Active input switches the Regulator limit request to Regulator : <i>Request2</i> setpoint.			

6 [back to List of LBI](#)

R Reg Disable

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	316		
Description			
Active input disables the Regulator PI loop and switches analog output to constant Regulator : <i>Reg bias</i> .			

6 [back to List of LBI](#)

Clear DayCons

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	220		
Description			
DayCons is the counter which cumulates the instantaneous consumption coming from ECU. It shows the total consumption since the counter reset. Counte reset happen at the midnight of the controller clocks. LBI Clear DayCons resets the counter DayCons.			
<p>Note: <i>The function works when the controller is connected to an ECU or in other case is consumption counted from the changes of analog input value Fuel rate and setpoint Engine params: FuelTankVolume.</i></p>			

6 [back to List of LBI](#)

Clear TripCons

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	221		
Description			
TripCon is the counter which cumulates the instantaneous consumption coming from ECU. It shows the total consumption since last reset by LBI Clear TripCon. This LBI resets the counter TripCons.			
<p>Note: <i>The function works when the controller is connected to an ECU or in other case is consumption counted from the changes of analog input value Fuel rate and setpoint Engine params: FuelTankVolume.</i></p>			

6 [back to List of LBI](#)


Flow Switch

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	398		
Description			
FlowSwitch is protection to stop the engine in case the water not flow. Function is active in MAN and AUT mode. Engine is switched to Cooling state when FlowSwitch is not closed within Engine protect: Flow SwitchDel after running (Ready to load) engine state activation. Function stops the engine in AUT mode with FlowSwitch indication in Alarm list and stays in AUT mode after Fault reset.			
Alarm list and History indication = "Cd Flow Switch" (CoolDown is third engine protection type in InteliDrive Marine).			
Machine state stays in Cooling even the LBI FLOW Switch is activated again during Cooling period.			

6 [back to List of LBI](#)

Prot Test

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	552		
Description			
When the new LBI Protection Test is activated (by rising edge), all Sd alarms are for 90s blocked. The exception is LBI Emergency stop and Overspeed protection.			

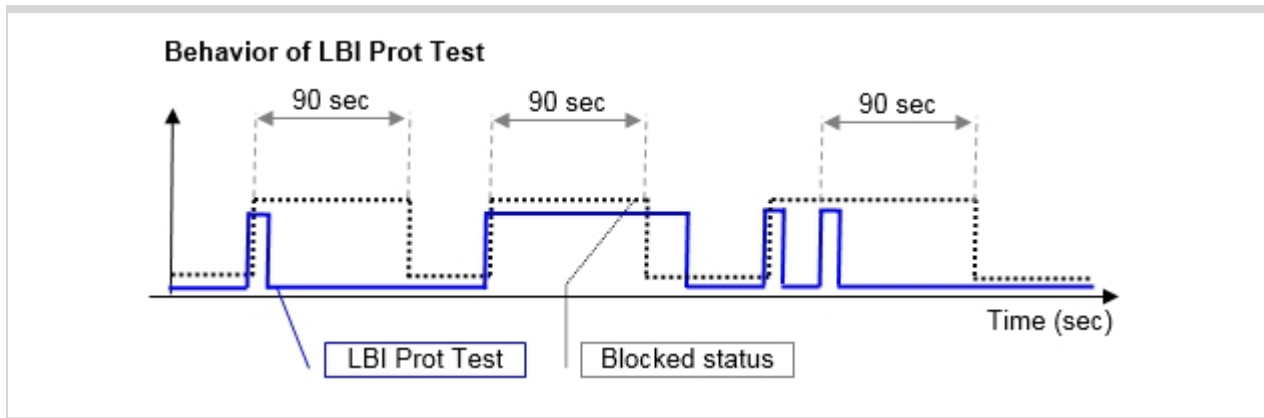

6 [back to List of LBI](#)

Regen Inhibit

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	395		
Description			
This LBI is used for setting ECU value DPF Regeneration Inhibit Switch if parameter Regen Inhibit = BIN.			

6 [back to List of LBI](#)

Regen Force

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	396		
Description			
This LBI is used for setting ECU value DPF Regeneration Force Switch if parameter Regen Force = BIN.			

6 [back to List of LBI](#)

ATT Lockout1

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	707		
Description			
This LBI is used for setting proprietary John Deere message DPF Lockout – see description in Tier 4 Final support.			

6 [back to List of LBI](#)

ATT Lockout2

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	708		
Description			
This LBI is used for setting proprietary John Deere message DPF Lockout – see description in Tier 4 Final support.			

6 [back to List of LBI](#)

10.4 Binary output functions

Note: Any Binary input can be configured to any IntelliDrive Marine controller terminal or changed to different function by LiteEdit PC tool. There is adjustable delay when any binary input is configured as protection.

6 back to Appendix

10.4.1 Binary outputs IntelliDrive Marine - default

BO1	Starter
BO2	Fuel solenoid
BO3	Prestart
BO4	Alarm
BO5	Horn
BO6	Not used
BO7	Not used

10.4.2 List of LBO

Configuration of binary outputs is feasible easily by combo box menu in the configuration window Modify.

Not used	229
Starter	229
Fuel solenoid	229
Stop solenoid	230
Stop Pulse	230
Ignition	230
Prestart	230
Preglow	231
Cooling pump	231
Idle/Nominal	231
Air valves	231
Alarm	232
Horn	232
Ready	232
Ready to load	233
Running	233
Cooling	233
Fault reset	233
ChrgAltemFail	233
Stop failed	234
Overspeed	234
Underspeed	234

Start failed	235
Battery flat	235
V batt failed	235
Common Wrn	235
Common Sd	236
Common Cd	236
Common Fls	236
Sd Oil Press	236
Wrn Oil Press	237
Sd Engine Temp	237
Wrn Engine Temp	237
Sd FuelLevel	237
Wrn FuelLevel	238
OFF mode	238
MAN mode	238
AUT mode	238
Service Time	238
DEF Tank Level	239
BI1 - stat	239
BI2 - stat	239
BI3 - stat	239
BI4 - stat	239
BI5 - stat	240
BI6 - stat	240
BI7 - stat	240
BI8 - stat	240
BI9 - stat	240
BI10 - stat	241
CtrlHeartBeat	241
BIO8 1 Status	241
BIO8 2 Status	241
BIO8 3 Status	242
BIO8 4 Status	242
BIO8 5 Status	242
BIO8 6 Status	242
BIO8 7 Status	243
BIO8 8 Status	243
Wrn AIN4	243
Wrn AIN5	243
Wrn AIN6	244

Wm AIN7	244
Wm AIN8	244
Wm AIN9	244
Sd AIN4	245
Sd AIN5	245
Sd AIN6	245
Sd AIN7	245
Sd AIN8	246
Sd AIN9	246
ECU CommOK	246
ECU CommError	246
ECU YellowLamp	247
ECU RedLamp	247
ECU PwrRelay	247
Timer1	247
Timer2	247
Glow plugs	248
Conveyor	248
SpeedSwitch	248
LoadSwitch	248
Close Load	248
Toggle	249
RemoteControl1	249
RemoteControl2	249
RemoteControl3	250
RemoteControl4	250
RemoteControl5	251
RemoteControl6	251
RemoteControl7	252
RemoteControl8	252
DPF Inhibit	252
DPF Lamp	253
DPF Hest Lamp	253
DEF Level	253
Malfunction	253
Red Lamp Icon	253
Wm Lamp Icon	253

6 back to Appendix

Not used

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	462		
Description			
Output has no function.			

6 [back to List of LBO](#)

Starter

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	463		
Description			
Closed relay energizes the starter of engine.			
<ul style="list-style-type: none"> ▶ The strating speed is reached or ▶ Maximum time of cranking is exceeded or ▶ Request to stop comes up 			

6 [back to List of LBO](#)

Fuel solenoid

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	464		
Description			
Closed output opens the fuel solenoid and enables the engine start.			
The output opens if:			
<ul style="list-style-type: none"> ▶ Emergency stop comes or ▶ Cooled engine is stopped or ▶ In pause between repeated starts 			
<p>Note: In case Inteli RPU module is used this output shall be connected to I-RPU input CU / FS.</p>			

6 [back to List of LBO](#)

Stop solenoid

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	465		
Description			
<p>The closed output energizes stop solenoid to stop the engine.</p> <p>The output is active at least for Stop time, if the stop lasts longer; it stays active until all symptoms say the engine is stopped.</p> <p>The engine is stopped if:</p> <ul style="list-style-type: none"> ▶ RPM < 2 and ▶ Oil pressure < Engine params: StartingPoil <p>Note: <i>The engine can be started anytime, if all symptoms say the engine is steady regardless of the fact the Stop solenoid can still be active (in that case it is deactivated before cranking).</i></p> <p>Note: <i>In case Intel RPU module is used this output shall be connected to I-RPU input CU / SS.</i></p>			

6 [back to List of LBO](#)

Stop Pulse

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	466		
Description			
<p>Output is active for 1 second after Stop solenoid output activation. This signal is sent to ECU in case of engine stop request.</p>			

6 [back to List of LBO](#)

Ignition

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	467		
Description			
<p>The output closes after reaching value of CrankRPM, fixed 30RPM. The output opens after stopping of the engine or in pause during repeated start.</p>			

6 [back to List of LBO](#)

Prestart

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	468		
Description			
<p>The output closes prior to the engine start (<i>Prestart</i>) and opens when <i>Starting RPM</i> speed is reached. During repeated crank attempts the output is closed too.</p> <p>The output could be used for pre-glow, pre-heat or prelubrication.</p>			

6 [back to List of LBO](#)

Preglow

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	574		
Description			
<p>The output closes prior to the engine start and opens when <i>Starting RPM</i> speed is reached. During repeated crank attempts the output is closed too.</p> <p>The output could be used for pre-glow or pre-heat.</p>			

6 [back to List of LBO](#)

Cooling pump

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	469		
Description			
<p>The output closes when engine starts and opens after Engine params: Description (page 136) after stop of the engine</p>			

6 [back to List of LBO](#)

Idle/Nominal

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	470		
Description			
<p>The output either follows the DESCRIPTION (PAGE 221) binary input or I/O button in MAN mode or follows the engine state in AUT mode:</p> <p>The output <i>Idle/Nominal</i> closes after the timer <i>Idle time</i> elapses. The <i>Idle time</i> counter starts to countdown when <i>Start speed</i> reached. The <i>Underspeed</i> protection is not evaluated during idle time. <i>Start fail</i> protection occurs if the RPM drop below 2RPM during idle state.</p> <p>Note: When <i>LBI Nominal/Idle</i> is configured (to a physical binary input), it has priority and the switching between the nominal and the idle speed by I/O button is blocked.</p>			


6 [back to List of LBO](#)

Air valves

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	471		
Description			
<p>Output closes together with Prestart and opens after the engine is stopped.</p> <p>Stopped engine conditions: RPM = 0, Engine params: Starting Poil, D+function (if enabled).</p>			

6 [back to List of LBO](#)

Alarm

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	472		
Description			
<p>The output closes if:</p> <ul style="list-style-type: none"> ▶ any warning or shutdown comes up or ▶ the engine malfunctions <p>The output opens if:</p> <ul style="list-style-type: none"> ▶  is pressed <p>The output closes again if a new fault comes up.</p>			

6 [back to List of LBO](#)

Horn

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	473		
Description			
<p>The output closes if:</p> <ul style="list-style-type: none"> ▶ any warning or shutdown comes up or ▶ the engine malfunctions <p>The output opens if:</p> <ul style="list-style-type: none"> ▶ FAULT RESET is pressed or ▶ HORN RESET is pressed or ▶ Max time of LBO HORN is exceeded (Horn timeout) <p>The output closes again if a new fault comes up.</p>			

6 [back to List of LBO](#)

Ready

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	482		
Description			
<p>The output is closed if following conditions are fulfilled:</p> <ul style="list-style-type: none"> ▶ Engine is not running and ▶ No Shut down or Slow stop alarm is active ▶ Controller is not in OFF mode 			

6 [back to List of LBO](#)

Ready to load

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	484		
Description			
The output is closed if engine is running and no alarm is active - it is possible to close load. The output opens when Wm Underspeed protection is active and during cooling state.			

6 [back to List of LBO](#)

Running

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	485		
Description			
Output closes if the engine is in Running state.			

6 [back to List of LBO](#)

Cooling

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	486		
Description			
The output closes when engine is in Cooling state.			


6 [back to List of LBO](#)

Fault reset

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	488		
Description			
One second pulse as echo for panel Fault reset button.			
<i>Note: In case Intel RPU module is used this output shall be connected to I-RPU input CONTROLLER / FR.</i>			


6 [back to List of LBO](#)

ChrgAlternFail

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	501		
Description			
Output closes if engine is running and D+ input not energized.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			
<i>Note: Threshold level for D+ input is 80% supply voltage.</i>			

6 [back to List of LBO](#)

Stop failed

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	512		
Description			
Output closes when the engine has to be stopped, but speed or oil pressure is detected. This protection goes active 60s after stop command.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 back to List of LBO

Overspeed

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	513		
Description			
Output closes if the engine over speed alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 back to List of LBO

Underspeed

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	514		
Description			
Output closes if the engine “Sd Underspeed” alarm activates i.e. when RPM is below the Engine params: Starting RPM limit.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 back to List of LBO

Start failed

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	515		
Description			
Output closes after the engine start-up fails.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Battery flat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	517		
Description			
Output closes when IntelliDrive Marine performs reset during start procedure (probably due to weak battery).			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

V batt failed

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	580		
Description			
Output closes when battery over/under voltage warning appears.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Common Wrn

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	518		
Description			
Output closes when any warning alarm appears.			
The output opens, if			
<ul style="list-style-type: none"> ▶ No warning alarm is active and ▶  is pressed 			


6 [back to List of LBO](#)

Common Sd

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	519		
Description			
Output closes when any shutdown alarm appears.			
The output opens, if			
<ul style="list-style-type: none"> ▶ No Sd alarm is active and ▶  is pressed 			


6 [back to List of LBO](#)

Common Cd

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	776		
Description			
Output closes when any cooldown alarm appears.			
The output opens, if			
<ul style="list-style-type: none"> ▶ No Cdalarm is active and ▶  is pressed 			


6 [back to List of LBO](#)

Common Fls

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	520		
Description			
Output closes when any sensor fail alarm appears.			
The output opens, if			
<ul style="list-style-type: none"> ▶ No warning alarm is active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd Oil Press

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	521		
Description			
Output closes if the oil pressure shutdown alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Wrn Oil Press

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	522		
Description			
Output closes if the oil pressure warning alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd Engine Temp

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	523		
Description			
Output closes if the water temperature shutdown alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Wrn Engine Temp

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	524		
Description			
Output closes if the water temperature warning alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd FuelLevel

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	525		
Description			
Output closes if the Fuel level shutdown alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 [back to List of LBO](#)

Wrn FuelLevel

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	526		
Description			
Output closes if the Fuel level warning alarm activates.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 back to List of LBO

OFF mode

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	497		
Description			
The output is closed, if OFF mode is selected.			

6 back to List of LBO

MAN mode

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	498		
Description			
The output is closed, if MAN mode is selected.			


6 back to List of LBO

AUT mode

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	499		
Description			
The output is closed, if AUT mode is selected.			

6 back to List of LBO

Service Time

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	495		
Description			
The output closes if the ServiceTime alarm activates. Service time is adjusted by setpoint Engine protect: NextServTime .			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 back to List of LBO

DEF Tank Level

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1161		
Description			
Output closes if the value DEF Tank Level drops under 10%, this level is adjustable in Engine protect: DEF Level Min.			
Output opens if the value DEF Tank Level exceeds 90%. This upper limit is adjusted in Engine protect: DEF Level Max.			
Note: This output is working only under condition ECU is configured and engine is in running state.			

6 [back to List of LBO](#)

B11 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	527		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B11 is assigned for controller binary inputs.			

6 [back to List of LBO](#)

B12 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	528		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B12 is assigned for controller binary inputs.			

6 [back to List of LBO](#)

B13 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	529		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B13 is assigned for controller binary inputs.			

6 [back to List of LBO](#)

B14 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	530		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B14 is assigned for controller binary inputs.			

6 [back to List of LBO](#)

B15 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	531		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B15 is assigned for controller binary inputs.			

6 [back to List of LBO](#)

B16 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	532		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B16 is assigned for controller binary inputs.			

6 [back to List of LBO](#)

B17 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	533		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B17 is assigned for IL-NT IO1 optional card.			

6 [back to List of LBO](#)

B18 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	586		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B18 is assigned for IL-NT IO1 optional card.			

6 [back to List of LBO](#)

B19 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	587		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. B19 is assigned for IL-NT IO1 optional card.			

6 [back to List of LBO](#)

BI10 - stat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	588		
Description			
In case the binary input is configured to any control function, the binary output depicts the state of the binary input. BI10 is assigned for IL-NT IO1 optional card.			

6 [back to List of LBO](#)

CtrlHeartBeat

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	496		
Description			
The output signalizes watchdog reset. In a healthy state it flashes at 500ms : 500ms rate. It stops flashing when the unit reset occurs and the new controller start-up fails.			
<i>Note: In case Intel RPU module is used this output shall be connected to I-RPU input CONTROLLER/WD.</i>			

6 [back to List of LBO](#)

BIO8 1 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	550		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			

6 [back to List of LBO](#)

BIO8 2 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	551		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			

6 [back to List of LBO](#)

BIO8 3 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	552		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			

6 [back to List of LBO](#)

BIO8 4 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	553		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			

6 [back to List of LBO](#)

BIO8 5 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	554		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			

6 [back to List of LBO](#)

BIO8 6 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	555		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			

6 [back to List of LBO](#)

BIO8 7 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	556		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			


6 [back to List of LBO](#)

BIO8 8 Status

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	557		
Description			
In case the assigned binary input of IL-NT BIO8 optional card is configured to any control function, the output propagates the state of the input.			
<i>Note: These binary outputs are possible to configure only if the IL-NT-BIO8 is configured.</i>			


6 [back to List of LBO](#)

Wrn AIN4

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1162		
Description			
Output closes if the warning alarm for AIN4 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Wrn AIN5

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1100		
Description			
Output closes if the warning alarm for AIN5 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Wrn AIN6

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1101		
Description			
Output closes if the warning alarm for AIN6 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Wrn AIN7

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1155		
Description			
Output closes if the warning alarm for AIN7 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 [back to List of LBO](#)

Wrn AIN8

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1156		
Description			
Output closes if the warning alarm for AIN8 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Wrn AIN9

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1157		
Description			
Output closes if the warning alarm for AIN9 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd AIN4

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1163		
Description			
Output closes if the warning alarm for AIN4 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd AIN5

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1106		
Description			
Output closes if the warning alarm for AIN5 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd AIN6

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1107		
Description			
Output closes if the warning alarm for AIN6 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd AIN7

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1158		
Description			
Output closes if the warning alarm for AIN7 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			


6 [back to List of LBO](#)

Sd AIN8

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1159		
Description			
Output closes if the warning alarm for AIN8 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 [back to List of LBO](#)

Sd AIN9

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1160		
Description			
Output closes if the warning alarm for AIN9 activate.			
The output opens, if			
<ul style="list-style-type: none"> ▶ alarm is not active and ▶  is pressed 			

6 [back to List of LBO](#)

ECU CommOK

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	558		
Description			
If the ECU is not communicating and all values from ECU show ##### the output is not active. If the ECU communicates the output is active.			

6 [back to List of LBO](#)

ECU CommError

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	559		
Description			
The output is an inversion of binary output <i>ECU CommOK</i> , i.e. the output is closed when ECU is not communicating and all values from ECU show #####.			

6 [back to List of LBO](#)

ECU YellowLamp

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	560		
Description			
The output copies warning information from ECU.			

6 [back to List of LBO](#)

ECU RedLamp

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	561		
Description			
The output copies shutdown information from ECU.			

6 [back to List of LBO](#)

ECU PwrRelay

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	562		
Description			
The output closes at the beginning of prestart and opens if the engine shall be stopped.			
<i>Note: ECU binary outputs are possible to configure only if ECU is configured.</i>			

6 [back to List of LBO](#)

Timer1

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	491		
Description			
Output activates when Timer1 is active. Simultaneously the engine is started when is in AUT mode.			

6 [back to List of LBO](#)

Timer2

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	492		
Description			
Output activates when Timer2 is active. Simultaneously the engine is started when is in AUT mode.			

6 [back to List of LBO](#)

Glow plugs

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	493		
Description			
The output closes prior to the engine start (<i>Prestart</i>) and opens when <i>Starting RPM</i> speed is reached. During repeated crank attempts the output is opened.			

6 back to List of LBO

Conveyor

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	589		
Description			
Binary output function of Conveyor. See Binary input Description (page 223).			

6 back to List of LBO

SpeedSwitch

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	590		
Description			
Binary output from Speed switch comparator – see Group: Regulator (page 146) setpoint group.			

6 back to List of LBO

LoadSwitch

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	591		
Description			
Binary output from Load switch comparator – see Group: Load limit (page 152) setpoint group.			

6 back to List of LBO

Close Load

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	755		
Description			
Output is controlled by panel 0/1 button when Basic settings: Panel Button = Close Load, engine is running and no Sd/Cd alarm is active. Close Load output is not closed in Idle and Cooling states and is disconnected when any Sd/Cd alarm is activated.			



6 back to List of LBO

Toggle

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	756		
Description			
Output is controlled by panel 0/1 button when Basic settings: Panel Button = Toggle. This setting changes the Toggle output without any relation to Engine state or Alarm activity even if in OFF mode.			



6 back to List of LBO

RemoteControl1

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	649		
Description			
Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or InteliMonitor by  button and it can be controlled via ModBus communication.			
			


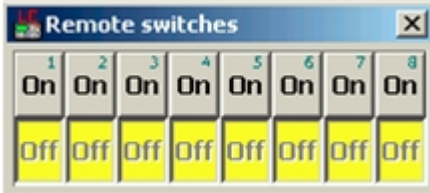
6 back to List of LBO

RemoteControl2

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	650		
Description			
Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or InteliMonitor by  button and it can be controlled via ModBus communication.			
			



6 back to List of LBO

RemoteControl3

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	651		
Description			
<p>Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or IntelliMonitor by  button and it can be controlled via ModBus communication.</p>			
			


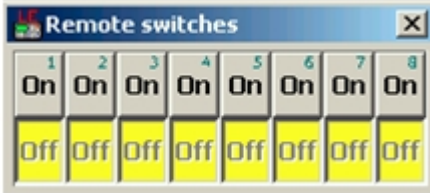
6 back to List of LBO

RemoteControl4

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	652		
Description			
<p>Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or IntelliMonitor by  button and it can be controlled via ModBus communication.</p>			
			



6 back to List of LBO

RemoteControl5

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	653		
Description			
<p>Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or IntelliMonitor by  button and it can be controlled via ModBus communication.</p>			
			


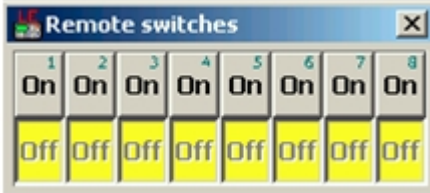
6 back to List of LBO

RemoteControl6

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	654		
Description			
<p>Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or IntelliMonitor by  button and it can be controlled via ModBus communication.</p>			
			



6 back to List of LBO

RemoteControl7

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	655		
Description			
<p>Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or IntelliMonitor by  button and it can be controlled via ModBus communication.</p>			
			

6 back to List of LBO

RemoteControl8

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	656		
Description			
<p>Allows configure Remote control switches to physical binary outputs. These switches are accessible from PC tools LiteEdit (see picture below) or IntelliMonitor by  button and it can be controlled via ModBus communication.</p>			
			

6 back to List of LBO

DPF Inhibit

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1446		
Description			
<p>This LBO is active if corresponding Tier 4 icon is lightening.</p>			

6 back to List of LBO

DPF Lamp

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1447		
Description			
This LBO is active if corresponding Tier 4 icon is lightening.			

6 [back to List of LBO](#)

DPF Hest Lamp

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1448		
Description			
This LBO is active if corresponding Tier 4 icon is lightening.			

6 [back to List of LBO](#)

DEF Level

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1449		
Description			
This LBO is active if corresponding Tier 4 icon is lightening.			

6 [back to List of LBO](#)

Malfunction

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1450		
Description			
This LBO is active if corresponding Tier 4 icon is lightening.			

6 [back to List of LBO](#)

Red Lamp Icon

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1451		
Description			
This LBO is active if corresponding Tier 4 icon is lightening.			

6 [back to List of LBO](#)

Wrn Lamp Icon

Related FW	1.1.0	Related applications	AMF, MRS
Comm object	1452		
Description			
This LBO is active if corresponding Tier 4 icon is lightening.			

6 [back to List of LBO](#)

11 Language support

InteliDrive Marine controllers support different languages. In default setting of controller are accessible two languages English, which isn't possible to remove and Chinese. It is possible to substitute Chinese language by next language via LiteEdit (see the table below). These languages can be modified via Translator tool in LiteEdit.

Following language code pages are supported:

Code page	Language	Windows code
0	West European languages	Windows 1252
134	Chinese	GB 2312
161	Greek	Windows 1253
162	Turkish	Windows 1254
177	Hebrew	Windows 1255
204	Russian	Windows 1251
238	East European languages	Windows 1250

6 [back to Table of contents](#)