

InteliLite AMF25

Controller for single gen-set applications

SW version 1.8.0

1 Document information	6
2 System overview	11
3 Applications overview	20
4 Installation and wiring	22
5 Controller setup	61
6 Communication	152
7 Technical data	179
8 Appendix	181

Table of contents

1 Document information	6
1.1 Clarification of notation	6
1.2 About this Global Guide	6
1.3 Legal notice	6
1.4 General warnings	8
1.4.1 Remote control and programing	8
1.4.2 SW and HW versions compatibility	8
1.4.3 Dangerous voltage	8
1.4.4 Adjust the setpoints	8
1.5 Certifications and standards	9
1.6 Document history	9
1.7 Symbols in this manual	10
2 System overview	11
2.1 General description	11
2.1.1 The key features of IntelliLite	11
2.2 True RMS measurement	11
2.3 Configurability and monitoring	11
2.3.1 Supported configuration and monitoring tools	12
2.3.2 Configuration parts	12
2.4 PC Tools	13
2.4.1 IntelliConfig	13
2.4.2 WebSupervisor	13
2.4.3 WinScope	14
2.5 Plug-in Modules	14
2.5.1 CM-Ethernet	14
2.5.2 CM-4G-GPS	15
2.5.3 CM-GPRS	15
2.5.4 CM-RS232-485	15
2.5.5 EM-BIO8-EFCP	16
2.6 CAN modules	16
2.6.1 Intelli IO8/8	16
2.6.2 Intelli AIN8	17
2.6.3 Intelli AIN8TC	17
2.6.4 Intelli AIO9/1	18
2.6.5 IGS-PTM	18
2.6.6 IGL-RA15	19

3 Applications overview	20
3.1 AMF - Automatic Mains Failure Start	20
3.2 MRS - Manual Remote Start	20
4 Installation and wiring	22
4.1 Package content	22
4.2 Controller installation	23
4.2.1 Dimensions	23
4.2.2 Mounting	23
4.3 Terminal Diagram	25
4.4 Recommended wiring	26
4.4.1 General	27
4.4.2 Grounding	27
4.4.3 Power supply	27
4.4.4 Measurement wiring	29
4.4.5 Magnetic pick-up	46
4.4.6 Binary inputs	47
4.4.7 Binary Outputs	48
4.4.8 Emergency stop	49
4.4.9 Analog inputs	49
4.4.10 CAN bus and RS485 wiring	54
4.4.11 USB	57
4.4.12 Example of AMF Wiring	57
4.4.13 Example of MRS Wiring	58
4.5 Plug-in module installation	58
4.5.1 Installation	58
4.6 Maintenance	60
4.6.1 Backup battery replacement	60
5 Controller setup	61
5.1 Default configuration	61
5.1.1 Binary inputs	61
5.1.2 Binary outputs	61
5.1.3 Analog inputs	62
5.2 Controller configuration and PC tools connection	62
5.2.1 USB	62
5.2.2 RS232/RS485	63
5.2.3 Ethernet	64
5.3 Operator Guide	69
5.3.1 Front panel elements	69

5.3.2 Display screens and pages structure	71
5.3.3 Browsing alarms	84
5.3.4 Password	85
5.3.5 Information screen	91
5.3.6 Language selection	92
5.3.7 Display contrast adjustment	93
5.4 Remote Display	93
5.4.1 General description	94
5.4.2 IL3-RD Firmware installation	94
5.4.3 Wiring	94
5.4.4 Interconnection variants	95
5.4.5 Connection process	96
5.4.6 Connection troubleshooting	96
5.4.7 Function description	96
5.4.8 Firmware compatibility	97
5.5 Functions	97
5.5.1 Start-stop sequence	98
5.5.2 AMF sequence	100
5.5.3 Operating Modes	100
5.5.4 Engine start	102
5.5.5 Stabilization	106
5.5.6 Connecting to load	106
5.5.7 MRS operation	106
5.5.8 AMF operation	106
5.5.9 Dual Operation	108
5.5.10 Engine cool down and stop	111
5.5.11 Alarm management	111
5.5.12 History log	117
5.5.13 Breaker control	119
5.5.14 Exercise timers	122
5.5.15 Rental Timers	128
5.5.16 Service timers	129
5.5.17 Analog switches	129
5.5.18 Additional running engine indications	131
5.5.19 Voltage phase sequence detection	131
5.5.20 Gen-set operation states	132
5.5.21 Sensor curves	134
5.5.22 PLC	136
5.5.23 Geo-fencing	143

5.5.24 Tier 4 Final	143
5.5.25 Alternate configuration	146
5.5.26 ECU Frequency selection	146
5.5.27 Cybernetic security	147
6 Communication	152
6.1 PC	152
6.1.1 Direct communication	152
6.1.2 Remote communication	154
6.2 Connection to 3rd party systems	165
6.2.1 SNMP	165
6.2.2 MODBUS-RTU, MODBUS/TCP	167
7 Technical data	179
8 Appendix	181
8.1 Controller objects	182
8.1.1 Setpoints	183
8.1.2 Values	472
8.1.3 Logical binary inputs	520
8.1.4 Logical binary outputs	564
8.1.5 Logical analog inputs	625
8.1.6 PLC	657
8.2 Alarms	670
8.2.1 Alarms level 1	670
8.2.2 Alarms level 2	696
8.2.3 Fail sensor and other types	715
8.3 Modules	717
8.3.1 Plug-In modules	718
8.3.2 CAN modules	733

1 Document information

1.1 Clarification of notation	6
1.2 About this Global Guide	6
1.3 Legal notice	6
1.4 General warnings	8
1.5 Certifications and standards	9
1.6 Document history	9
1.7 Symbols in this manual	10

 [back to Table of contents](#)

1.1 Clarification of notation

Note: This type of paragraph calls readers attention to a notice or related theme.

IMPORTANT: This type of paragraph highlights a procedure, adjustment etc., which can cause a damage or improper function of the equipment if not performed correctly and may not be clear at first sight.

Example: This type of paragraph contains information that is used to illustrate how a specific function works.

1.2 About this Global Guide

This manual contains important instructions for IntelliLite controllers family that shall be followed during installation and maintenance of the controllers.

This manual provides general information how to install and operate IntelliLite controllers.

This manual is dedicated for:

- ▶ Operators of gen-sets
- ▶ Gen-set control panel builders
- ▶ For everybody who is concerned with installation, operation and maintenance of the gen-set

1.3 Legal notice

This End User's Guide /Manual as part of the Documentation is an inseparable part of ComAp's Product and may be used exclusively according to the conditions defined in the "USER or Distributor LICENSE AGREEMENT CONDITIONS– COMAP CONTROL SYSTEMS SOFTWARE" (License Agreement) and in the "ComAp a.s. Standard Terms for sale of Products and provision of Services" (Standard Terms)

ComAp's License Agreement is governed by the Czech Authorship Act 121/2000 Col., by international treaties and by other relevant legal documents regulating protection of the intellectual properties (TRIPS).

The End User and/or ComAp's Distributor shall only be permitted to use this End User's Guide /Manual with ComAp Control System Registered Products. The Documentation is not intended and applicable for any other purpose.

ComAp reserves the right to update this End User's Guide /Manual at any time. ComAp does not assume any responsibility for its use outside of the scope of the Standard Terms and the License Agreement.

Licensed End User is entitled to make only necessary number of copies of the End User's Guide /Manual. Any translation of this End User's Guide /Manual without the prior written consent of ComAp is expressly prohibited!

Even if the prior written consent from ComAp is acquired, ComAp does not take any responsibility for the content and quality of any such translation. ComAp will deem a translation equal to this End User's Guide/Manual only if it agrees to verify such a translation. The terms and conditions of such verification must be included in the written consent.

For more details relating to the Ownership, Extent of Permitted Reproductions Term of Use of the Documentation and to the Confidentiality rules please review and comply with the ComAp's END USER or Distributor LICENSE AGREEMENT CONDITIONS– COMAP CONTROL SYSTEMS SOFTWARE and STANDARD TERMS FOR SALE OF PRODUCTS AND PROVISION OF SERVICES available on the www.comap-control.com.

Security Risk Disclaimer

Pay attention to the following recommendations and measures to increase the level of security of ComAp products and services.

Please note that possible cyber-attacks cannot be fully avoided by the below mentioned recommendations and set of measures already performed by ComAp, but by following them the cyber-attacks can be considerably reduced and thereby to reduce the risk of damage. ComAp does not take any responsibility for the actions of persons responsible for cyber-attacks, nor for any damage caused by the cyber-attack. However, ComAp is prepared to provide technical support to resolve problems arising from such actions, including but not limited to restoring settings prior to the cyber-attacks, backing up data, recommending other preventive measures against any further attacks.

Warning: Some forms of technical support may be provided against payment. There is no legal or factual entitlement for technical services provided in connection to resolving problems arising from cyber-attack or other unauthorized accesses to ComAp's Products or Services.

General security recommendations and set of measures

1. AccessCode

- Change the AccessCode BEFORE the device is connected to a network.
- Use a secure AccessCode – ideally a random string of 8 characters containing lowercase, uppercase letters and digits.
- For each device use a different AccessCode.

2. Password

- Change the password BEFORE the device enters a regular operation.
- Do not leave displays or PC tools unattended if an user, especially administrator, is logged in.

3. Controller Web interface

- The controller web interface at port TCP/80 is based on http, not https, and thus it is intended to be used only in closed private network infrastructures.
- Avoid exposing the port TCP/80 to the public Internet.

4. MODBUS/TCP

- The MODBUS/TCP protocol (port TCP/502) is an instrumentation protocol designed to exchange data between locally connected devices like sensors, I/O modules, controllers etc. From it's nature it does not contain any kind of security – neither encryption nor authentication. Thus it is intended to be used only in closed private network infrastructures.

- Avoid exposing the port TCP/502 to the public Internet.

5. SNMP

- The SNMP protocol (port UDP/161) version 1,2 is not encrypted. Thus it is intended to be used only in closed private network infrastructures.
- Avoid exposing the port UDP/161 to the public Internet.

Used Open Source Software: mBed-TLS

<https://www.mbed.com/en/development/software/mbed-tls/>

<http://www.apache.org/licenses/LICENSE-2.0>

Used Font: zpix-pixel-font

WEBLINK to the license conditions: <https://github.com/SolidZORO/zpix-pixel-font>

Copyright (c) [2019] [Jason Fung]

1.4 General warnings

1.4.1 Remote control and programming

Controller can be remotely controlled. In the event that maintenance of gen-set has to be done, or controller has to be programmed, check the following points to ensure that the engine cannot be started or any other parts of the system cannot be effected.

To be sure:

- ▶ Disconnect remote control
- ▶ Disconnect binary outputs

1.4.2 SW and HW versions compatibility

Be aware to use proper combination of SW and HW versions.

1.4.3 Dangerous voltage

In no case touch the terminals for voltage and current measurement!

Always connect grounding terminals!

In any case do not disconnect controller CT terminals!



1.4.4 Adjust the setpoints

All parameters are adjusted to their typical values. However the setpoints has to be checked and adjusted to their real values before the first starting of the gen-set.



IMPORTANT: Wrong adjustment of setpoints can destroy the gen-set.

Note: *The controller contains a large number of configurable setpoints, because of this it is impossible to describe all of its functions. Some functions can be changed or have different behavior in different SW versions. Always check the Global guide and New feature list for SW version which is used in controller. This manual only describes the product and is not guaranteed to be set for your application.*

IMPORTANT: Be aware that the binary outputs can change state during and after software reprogramming (before the controller is used again ensure that the proper configuration and setpoint settings are set in the controller).

The following instructions are for qualified personnel only. To avoid personal injury do not perform any action not specified in related guides for product.

1.5 Certifications and standards

<ul style="list-style-type: none"> ▶ EN 61000-6-2 ▶ EN 61000-6-4 ▶ EN 61010-1 ▶ EN 60068-2-1 (-20 °C/16 h for std, -40 °C/16 h for LT version) ▶ EN 60068-2-2 (70 °C/16 h) ▶ EN 60068-2-6 (2÷25 Hz / ±1,6 mm; 25÷100 Hz / 4,0 g) ▶ EN 60068-2-27 (a=500 m/s²; T=6 ms) ▶ EN 60068-2-30:2005 25/55°C, RH 95%, 48hours ▶ EN 60529 (front panel IP65, back side IP20) 	 
---	--

1.6 Document history

Revision number	Related sw. version	Date	Author
10	1.8.0	21.5.2019	Michal Slavata
9	1.7.0	22.8.2018	Michal Slavata
8	1.7.0	4.7.2018	Michal Slavata
7	1.6.0	28.2.2018	Michal Slavata
6	1.5.0	9.10.2017	Michal Slavata
5	1.3.2	24.5.2017	Michal Slavata
4	1.2.1	5.12.2016	Michal Slavata
3	1.1.0	23.5.2016	Michal Slavata
2	1.1.0	6.3.2016	Michal Slavata
1	1.0.0	15.7.2016	Michal Slavata

1.7 Symbols in this manual

	3 x Phases		Connector - male		Grounding		Resistor adjustable
	Active current sensor		Contact		GSM		Resistive sensor RPTC
	AirGate		Contactor		GSM modem		RS 232 male
	Alternating current		Controller simplified		IG-AVRi		RS 232 female
	Analog modem		Module simplified		IG-AVRi TRANS		Starter
	Battery		Current measuring		Jumper		Switch - manually operated
	Binary output		Current measuring		Load		Transformer
	Breaker contact		Diode		Mains		USB type B male
	Breaker contact		Ethernet male		Mains		USB type B female
	Breaker		Ethernet female		Mobile provider		Voltage measuring
	Breaker		Fuel solenoid		Passive current sensor		Wifi / WAN / LAN
	Capacitor		Fuse		Pick - up		back to Document information
	Coil		Fuse switch		Relay coil		
	Connector - female		Generator		Relay coil of slow-operating		
			Generator schematic		Resistor		

2 System overview

2.1 General description	11
2.2 True RMS measurement	11
2.3 Configurability and monitoring	11
2.4 PC Tools	13
2.5 Plug-in Modules	14
2.6 CAN modules	16

 [back to Table of contents](#)

2.1 General description

InteliLite Family controllers are comprehensive gen-set controllers for single gen-sets operating in stand-by (MRS) or back-up (AMF) applications. A modular construction allows upgrades to different levels of complexity in order to provide the best solution for various customer applications. The controllers are equipped with a powerful graphic display showing icons, symbols and bar graphs for intuitive operation, which, together with its high level of functionality, sets new standards in Gen-set controls.

2.1.1 The key features of InteliLite

- ▶ Easy-to-use operation and installation. The factory default configuration covers most applications
- ▶ Various customizations are possible thanks to its configurability
- ▶ Excellent remote communication capabilities
- ▶ High level of support for EFI engines (most world producers)
- ▶ High reliability

2.2 True RMS measurement

This controller measures AC values based on True RMS principle. This principle corresponds exactly to the physical definition of alternating voltage effective values. Under normal circumstances the mains voltage should have a pure sinusoidal waveform. However some nonlinear elements connected to the mains produce harmonic waveforms with frequencies of multiples of the basic mains frequency and this may result in deformation of the voltage waveforms. The True RMS measurement gives accurate readings of effective values not only for pure sinusoidal waveforms, but also for deformed waveforms.

2.3 Configurability and monitoring

One of the key features of the controller is the system's high level of adaptability to the needs of each individual application and wide possibilities for monitoring. This can be achieved by configuring and using the powerful PC/mobile tools.

2.3.1 Supported configuration and monitoring tools

- ▶ IntelliConfig - complete configuration and single gen-set monitoring
- ▶ WebSupervisor - web-based system for monitoring and controlling
 - WebSupervisor mobile - supporting application for smart-phones
- ▶ WinScope - special graphical monitoring software

Note: Use the IntelliConfig PC software to read, view and modify configuration from the controller or disk and write the new configuration to the controller or disk.

The firmware of controller contains a large number of binary inputs and outputs needed for all necessary functions available. However, not all functions are required at the same time on the same gen-set and also the controller hardware does not have so many input and output terminals. One of the main tasks of the configuration is mapping of “logical” firmware inputs and outputs to the “physical” hardware inputs and outputs.

2.3.2 Configuration parts

- ▶ Mapping of logical binary inputs (functions) or assigning alarms to physical binary input terminals
- ▶ Mapping of logical binary outputs (functions) to physical binary output terminals
- ▶ Assigning sensor characteristics (curves) and alarms to analog inputs
- ▶ Selection of peripheral modules, which are connected to the controller, and doing the same (as mentioned above) for them
- ▶ Selection of ECU type, if an ECU is connected
- ▶ Changing the language of the controller interface

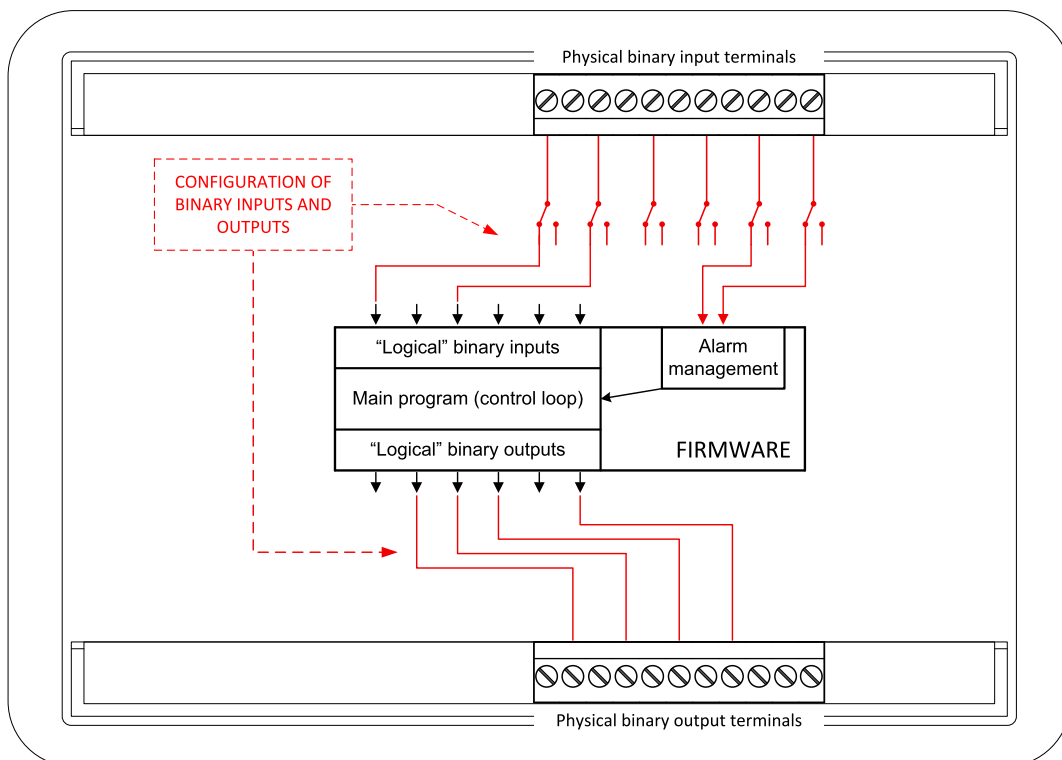


Image 3.1 Principle of binary inputs and outputs configuration

The controller is shipped with a default configuration, which should be suitable for most standard applications. This default configuration can be changed only by using a PC with the IntelliConfig software. See IntelliConfig documentation for details.

Once the configuration is modified, it can be saved to a file for later usage with another controller or for backup purposes. The file is called archive and has the file extension .ail3. An archive contains a full image of the controller at the time of saving (if the controller is online for the PC) except the firmware. Besides configuration it also contains current adjustment of all setpoints, all measured values, a copy of the history log and a copy of the alarm list.

The archive can be simply used for cloning controllers, i.e. preparing controllers with identical configuration and settings.


2.4 PC Tools

2.4.1 IntelliConfig

Configuration and monitoring tool for IntelliLite controllers. See more in IntelliConfig Reference Guide.

This tool provides the following functions:

- ▶ Direct or internet communication with the controller
- ▶ Offline or online controller configuration
- ▶ Controller firmware upgrade
- ▶ Reading/writing/adjustment of setpoints
- ▶ Reading of measured values
- ▶ Browsing of controller history records
- ▶ Exporting data into a XLS file
- ▶ Controller language translation

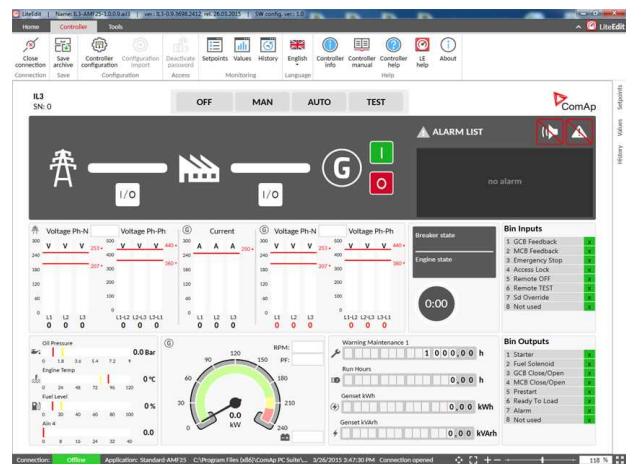


2.4.2 WebSupervisor

Web-based system for monitoring and controlling of controllers. See more at the WebSupervisor webpage.

This tool provides the following functions:

- ▶ Site and fleet monitoring
- ▶ Reading of measured values
- ▶ Browsing of controller history records
- ▶ On-line notification of alarms
- ▶ Email notification
- ▶ Also available as a smart-phone application

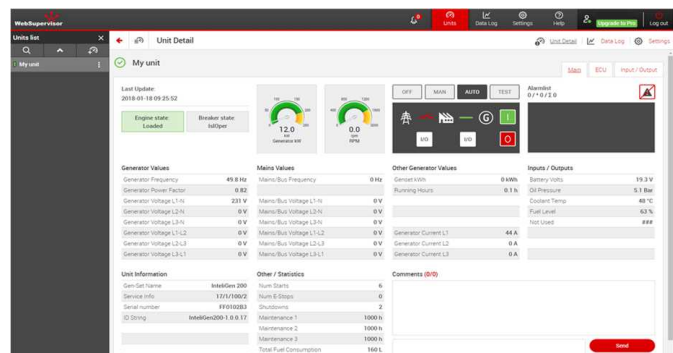

WebSupervisor available at: www.websupervisor.net

Demo account:

- ▶ Login: comaptest
- ▶ Password: ComAp123

2.4.3 WinScope

Special graphical controller monitoring software used mainly for commissioning and gen-set troubleshooting. See more in the WinScope Reference guide.

This tool provides the following functions:

- ▶ Monitoring and archiving of ComAp controller's parameters and values
- ▶ View of actual / historical trends in controller
- ▶ On-line change of controllers' parameters for easy regulator setup




2.5 Plug-in Modules

2.5.1 CM-Ethernet

Internet/Ethernet module including web server.

- ▶ 10/100 Mbit ethernet interface in RJ45 socket
- ▶ Web interface for monitoring and adjustment of the controller
- ▶ Direct IP and/or AirGate connection for remote access from IntelliConfig
- ▶ MODBUS/TCP and SNMP protocols for integration of the controller into building management systems or other remote monitoring purposes
- ▶ Sending of active emails
- ▶ Simply connection via AirGate

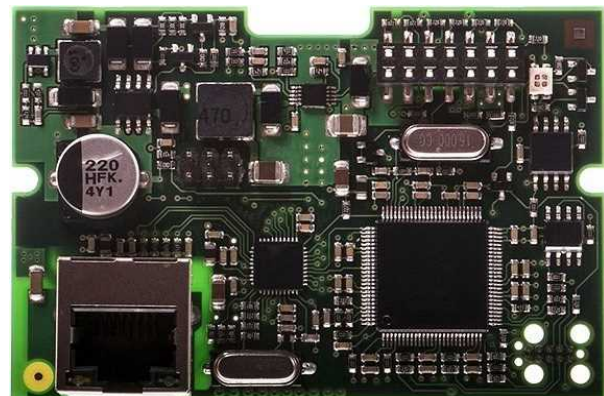

2.5.2 CM-4G-GPS

GSM/4G Internet module and GPS locator

- ▶ Wireless integrated solution
- ▶ Quick and easy installation
- ▶ Support of WebSupervisor
- ▶ Instant alarm SMS notification
- ▶ System control over SMS
- ▶ Quad Band GPRS/EDGE modem, 850/900/1800/1900 MHz, FDD LTE: Band 1, Band 2, Band 3, Band 4, Band 5, Band 7, Band 8, Band 20, all bands with diversity, WCDMA/HSDPA/HSUPA/HSPA+: Band 1, Band 2, Band 5, Band 8, all bands with diversity
- ▶ GPRS multi-slot class 10
- ▶ TCP/IP communication over GPRS



2.5.3 CM-GPRS

GSM/GPRS Internet module


- ▶ Wireless integrated solution
- ▶ Quick and easy installation
- ▶ Support of WebSupervisor
- ▶ Instant alarm SMS notification
- ▶ System control over SMS
- ▶ Quad Band GPRS/EDGE modem, 850/900/1800/1900 MHz
- ▶ GPRS multi-slot class 10
- ▶ TCP/IP communication over GPRS



2.5.4 CM-RS232-485

Communication module with two communication ports.


- ▶ RS232 and RS485 interface
- ▶ MODBUS
- ▶ Serial connection to IntelliConfig

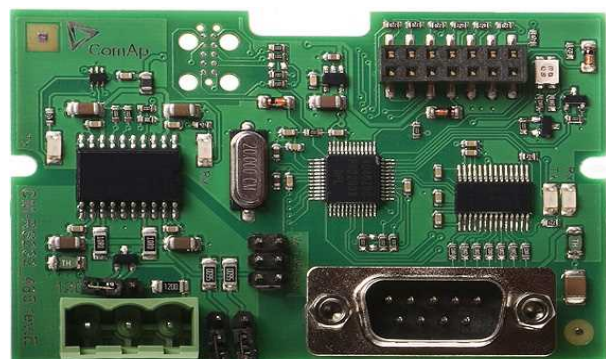

2.5.5 EM-BIO8-EFCP

Hybrid current input and binary input/output extension module.

- ▶ One additional AC current (CT) measuring for Earth Fault Current protection (EFCP)
- ▶ Wide range of measured current - one input for 1A and 1 input for 5A
- ▶ Up to 8 additional configurable binary inputs or outputs

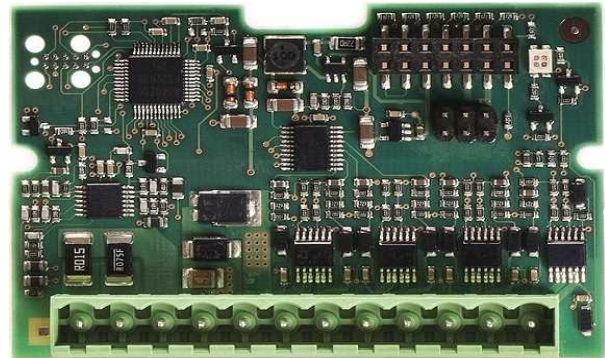

2.6 CAN modules

2.6.1 IntelI IO8/8

The unit offers the user the flexibility to configure the unit to have 8 binary inputs, 8 binary outputs, and 2 analog outputs, or 16 binary inputs, 0 binary outputs and 2 analog outputs via switches inside the controller.

Configuration 8/8

- ▶ 8 Binary inputs (options: pull up or pull down logic)
- ▶ 8 Binary outputs (options: Low side switch (LSS) or High side switch (HSS))
- ▶ 2 Analog outputs (options: voltage (0-10V), current (0-20mA) and PWM (5V, adjustable frequency 200Hz-2,4kHz))

Configuration 16/0

- ▶ 16 Binary inputs (options: pull up or pull down logic)
- ▶ 0 Binary outputs
- ▶ 2 Analog outputs (options: voltage (0-10V), current (0-20mA) and PWM (5V, adjustable frequency 200Hz-2,4kHz))



2.6.2 IntelI AIN8

The unit offers the user the flexibility to configure the unit to have 8 analog inputs.

Supported sensors:

- ▶ Resistor 3-wire input
 - Common resistor: 0-250Ω, 0-2400Ω, 0-10kΩ
 - Temperature sensor: Pt100, Pt1000, Ni100, Ni1000
- ▶ Current (active or passive sensors)
 - ±20mA, 0-20mA, 4-20mA
- ▶ Voltage
 - ±1V, 0-2,4V, 0-5V, 0-10V
 - Lambda probes
 - Thermocouples are not supported (the measuring loop was designed for lambda probes, what caused non-support of thermocouples)



2.6.3 IntelI AIN8TC

8 Analog Channels Module

- ▶ 8 analog input channels for measuring temperature by thermocouples



2.6.4 Intel AIO9/1

9 Analog Inputs and 1 Analog Output Module

- ▶ 4× differential voltage inputs for measurement in range of 0 - 65 V or -65 V – 0 V
- ▶ 4× shielded, galvanically separated ± 75 mV inputs
- ▶ Resistance analog input 0 – 2500 ohm
- ▶ One analog output



2.6.5 IGS-PTM

The unit offers the user the flexibility to configure the unit to have 8 binary inputs, 8 binary outputs, 4 analog inputs and 1 analog outputs.

- ▶ Configurable 8 binary and 4 analog inputs
- ▶ Configurable 8 binary and 1 analog output
- ▶ LEDs indicate the state of binary inputs/outputs
- ▶ Measures values from Pt100 and Ni100 sensors
- ▶ Analog inputs (resistance range 0-250 Ohms, voltage range 0-100mV, current range 0-20mA - selectable via jumper)
- ▶ UL certified



2.6.6 IGL-RA15

Remote annunciator.

- ▶ 15 programmable LEDs with configurable colors red-green-yellow
- ▶ Lamp test function with status LED
- ▶ Customizable labels
- ▶ Local horn output
- ▶ Maximal distance 200 m from the controller
- ▶ Up to 4 units can be connected to the controller
- ▶ UL certified



[▶ back to System overview](#)

3 Applications overview

3.1 AMF - Automatic Mains Failure Start 20
 3.2 MRS - Manual Remote Start 20

 [back to Table of contents](#)

3.1 AMF - Automatic Mains Failure Start

The typical scheme of Automatic Mains Failure Start application is shown below. The controller controls two breakers – a mains breaker and a generator breaker. Feedback from both breakers isn't necessary. IntelliLite controllers can also work without breaker feedbacks.

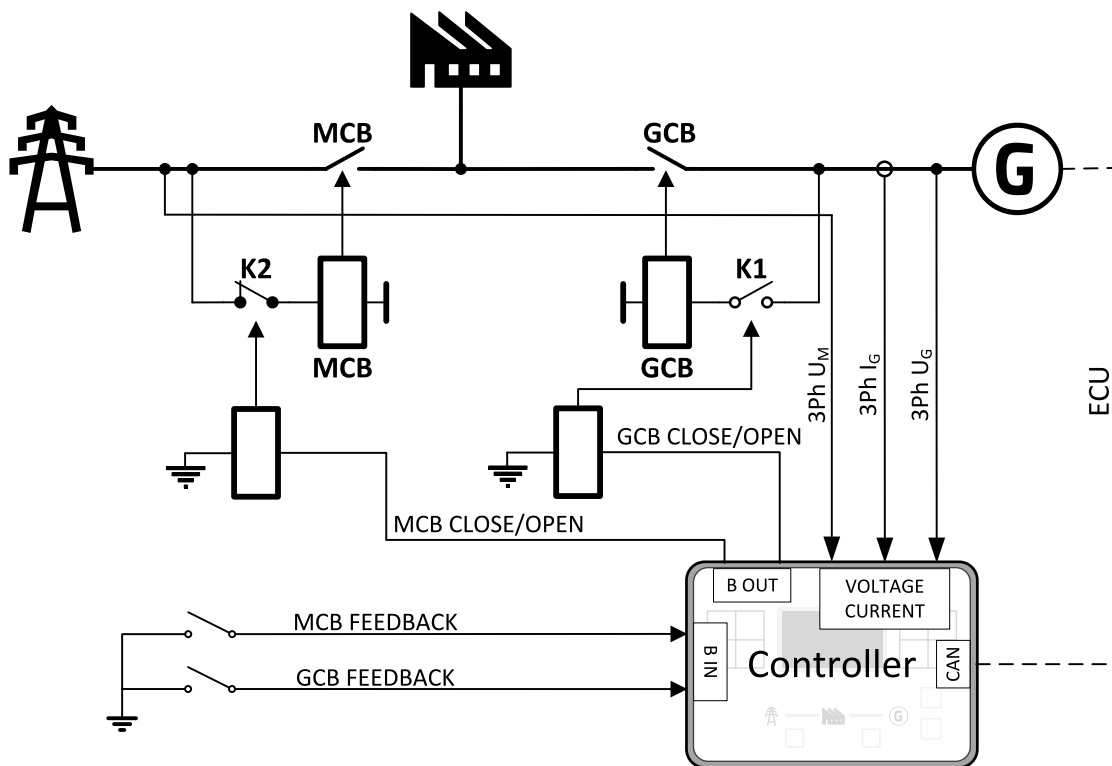


Image 4.1 AMF application overview

3.2 MRS - Manual Remote Start

The typical scheme of Manual Remote Start application is shown below. The controller controls one breaker – a generator breaker. Feedback from breaker isn't necessary. IntelliLite controllers can also work without breaker feedback.

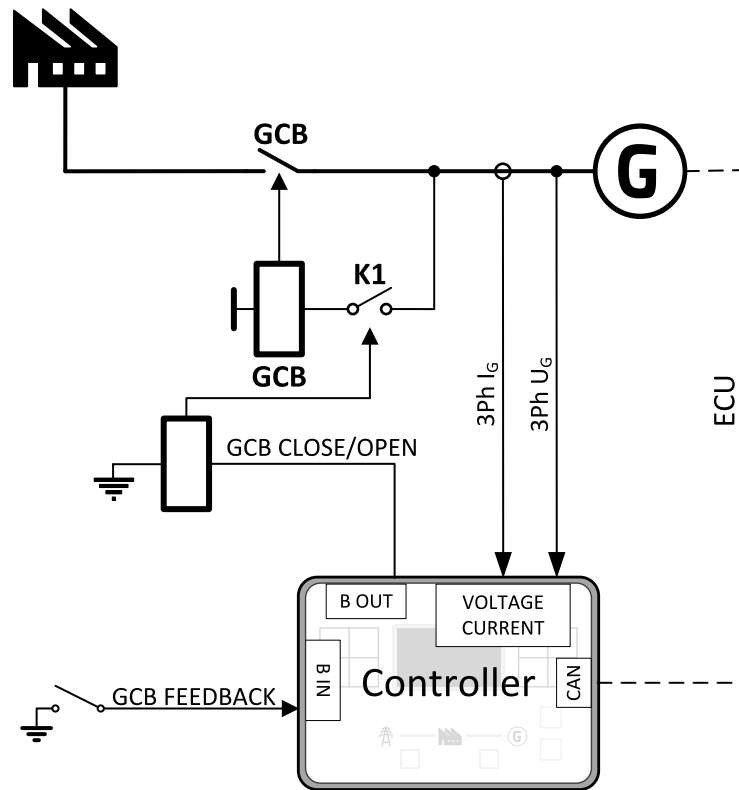


Image 4.2 MRS application overview

[back to Applications overview](#)

4 Installation and wiring

4.1 Package content	22
4.2 Controller installation	23
4.3 Terminal Diagram	25
4.4 Recommended wiring	26
4.5 Plug-in module installation	58
4.6 Maintenance	60

 [back to Table of contents](#)

4.1 Package content


The package contains:

- ▶ Controller
- ▶ Mounting holders
- ▶ Terminal blocks

Note: *The package does not contain a communication or extension modules. The required modules should be ordered separately.*

4.2 Controller installation


4.2.1 Dimensions

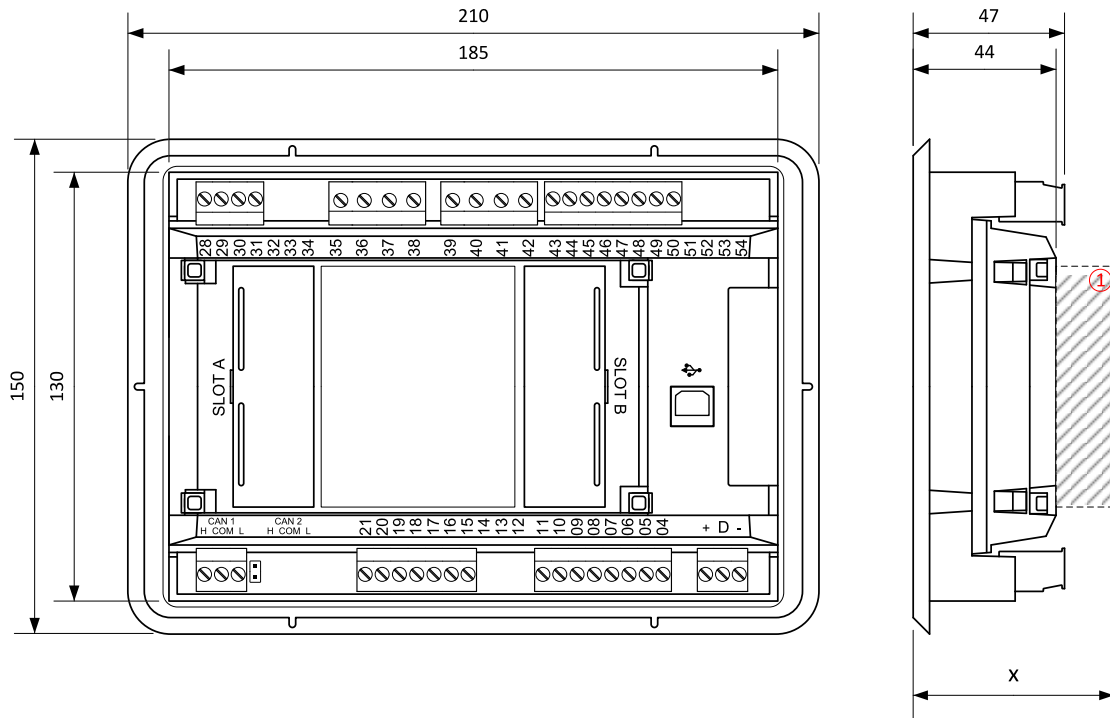

① Plug-in module

Note: Dimension *x* depends on plug-in module

Note: Dimensions are in millimeters.

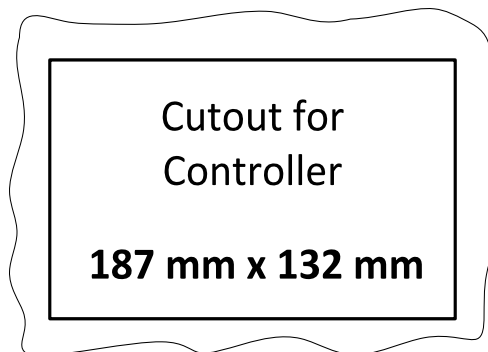


Note: Cutout is in millimeters.

4.2.2 Mounting

The controller is to be mounted onto the switchboard door. Requested cutout size is 187 x 132 mm. Use the screw holders delivered with the controller to fix the controller into the door as described on pictures below. Recommended torque for holders is 0.15 N·m.

Panel door mounting

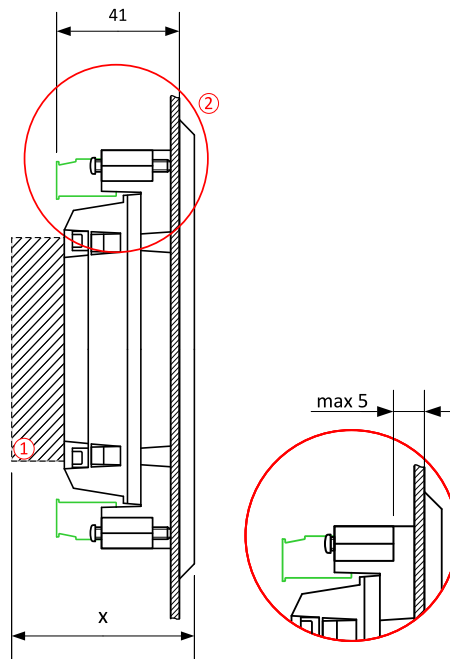

Note: Enclosure Type rating with mounting instruction - For use on a Flat surface of a type 1 enclosure.

4.3 Terminal Diagram

① GENERATOR CURRENT MEASUREMENT		② GENERATOR VOLTAGE MEASUREMENT		③ MAINS VOLTAGE MEASUREMENT		④ BINARY INPUTS	
T28	COM	T35	N	T39	N	T43	BIN1
T29	L1	T36	L1	T40	L1	T44	BIN2
T30	L2	T37	L2	T41	L2	T45	BIN3
T31	L3	T38	L3	T42	L3	T46	BIN4
						T47	BIN5
						T48	BIN6
						T49	BIN7
						T50	BIN8


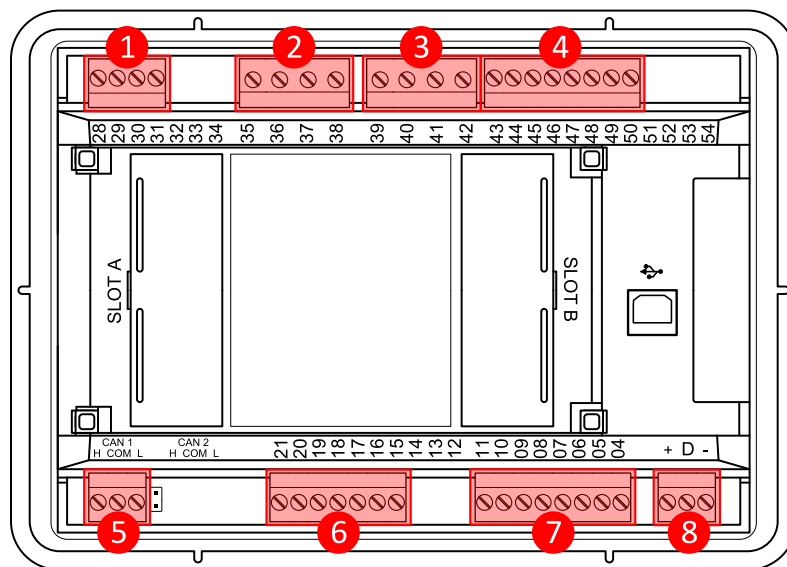


Image 5.1 Terminal diagram for IntelLite AMF25

⑤ CAN1		⑥ ANALOG INPUTS		⑦ BINARY OUTPUTS		⑧ POWER SUPPLY, D+	
T25	L	T15	RPM GND	T04	BOUT1	T01	BATT -
T26	COM	T16	RPM IN	T05	BOUT2	T02	D+
T27	H	T17	A COM	T06	BOUT3	T03	BATT +
		T18	A01	T07	BOUT4		
		T19	A02	T08	BOUT5		
		T20	A03	T09	BOUT6		
		T21	A04	T10	BOUT7		
				T11	BOUT8		

4.4 Recommended wiring

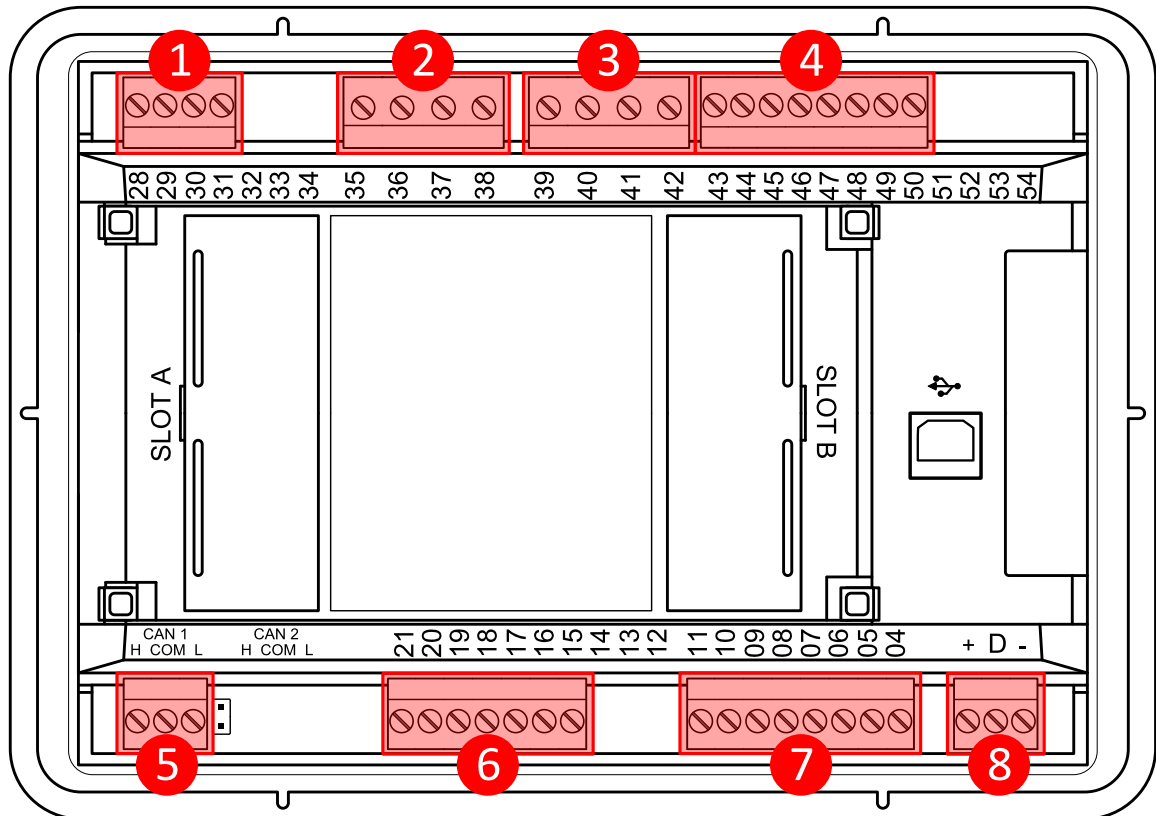

1	Current inputs	28 - 31	Current measurement wiring (page 30)
2	Generator voltage inputs	35 - 38	Voltage measurement AMF wiring (page 32) Voltage measurement MRS wiring (page 39)
3	Mains voltage inputs	39 - 42	Voltage measurement AMF wiring (page 32)
4	Binary inputs	43 - 50	Binary inputs (page 47)
5	CAN bus and RS485	H, COM, L	CAN bus and RS485 wiring (page 54)
6	Analog inputs	15 - 21	Analog inputs (page 49)
7	Binary outputs	04 - 11	Binary Outputs (page 48)
8	Power supply	"+", D, "-"	Power supply (page 27)
9	USB		USB (page 57)

Note: Wiring terminal markings to included tightening torque: 0,5 N-m (4,5 lb-in)., and wire size: 2 mm² (12-26AWG).

4.4.1 General

To ensure proper function:

- ▶ Use grounding terminals.
- ▶ Wiring for binary inputs and analog inputs must not be run with power cables.
- ▶ Analog and binary inputs should use shielded cables, especially when the length is more than 3 m.

Tightening torque, allowable wire size and type, for the Field-Wiring Terminals:	
For Mains(Bus) Voltage, Generator Voltage and Current terminals	
	<p>Specified tightening torque is 0,56 Nm (5,0 In-lbs)</p> <p>use only diameter 2,0 - 0,5 mm (12 - 26 AWG) conductor, rated for 90°C minimum.</p>
For other controller field wiring terminals	
	<p>Specified tightening torque 0,79 nm (7,0 In-lb)</p> <p>Use only diameter 2,0 - 0,5 mm (12 - 26 AWG) conductor, rated for 75°C minimum.</p>
	<p>use copper conductors only</p>

4.4.2 Grounding

The shortest possible length of wire should be used for controller grounding. Use cable min 2.5 mm².

The negative " - " battery terminal must be properly grounded.

Switchboard and engine must be grounded at common point. Use as short cable as possible to the grounding point.

4.4.3 Power supply

To ensure proper function:


- ▶ Use power supply cable min. 1.5 mm²

Maximum continuous DC power supply voltage is 36 V DC. The controller's power supply terminals are protected against large pulse power disturbances. When there is a potential risk of the controller being subjected to conditions outside its capabilities, an outside protection device should be used.

It is necessary to ensure that potential difference between generator current COM terminal and battery “ - ” terminal is maximally ± 2 V. Therefore is strongly recommended to interconnect these two terminals together.

Note: The controller should be grounded properly in order to protect against lightning strikes. The maximum allowable current through the controller’s negative terminal is 4 A (this is dependent on binary output load).

For the connections with 12 V DC power supply, the controller includes internal capacitors that allow the controller to continue in operation during cranking if the batter voltage dip occurs. If the voltage dip goes during cranking to 0 V and after 50 ms it recovers to 4 V, the controller continues operating. This cycle can repeat several times. During this voltage dip the controller screen backlight can turn off.

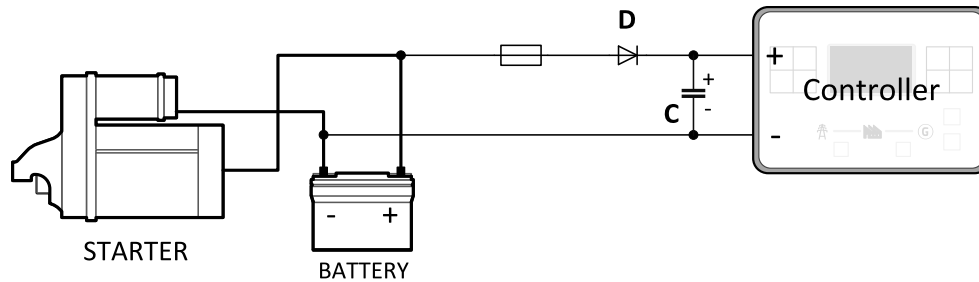

Note: Recommended fusing is 3 A fuse.

Note: In case of the dip to 0 V the high-side binary outputs will be temporarily switched off and after recovering to 4 V back on.

IMPORTANT: When the controller is power up only by USB and the USB is disconnected then the actual statistics can be lost.


Note: Suitable conductor protection shall be provided in accordance with NFPA 70, Article 240.

Note: Low voltage circuits (35 volts or less) shall be supplied from the engine starting battery or an isolated secondary circuit.

Note: It is also possible to further support the controller by connecting the external capacitor and separating diode. The capacitor size depends on required time. It shall be approximately thousands of μ F. The capacitor size should be 5 000 μ F to withstand 150 ms voltage dip under following conditions: Voltage before dip is 12 V, after 150 ms the voltage recovers to min. allowed voltage, i.e. 8 V.

Power supply fusing

A 3 A fuse should be connected in-line with the battery positive terminal to the controller and modules. These items should never be connected directly to the starting battery. Fuse value and type depends on number of connected devices and wire length. Recommended fuse (not fast) type - T3 A. Not fast due to internal capacitors charging during power up.

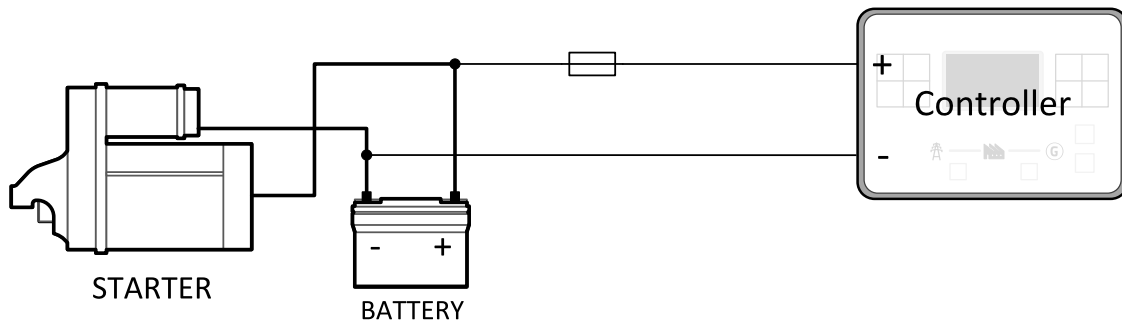

Note: Recommended fusing is 3 A fuse.

IMPORTANT: 3 A fuse is calculated without BOUT consumption nor extension modules. Real value of fuse depends on consumption of binary outputs and modules.

Example: Maximal consumption of binary outputs can be 22 A

- ▶ 2 x 10 A on high current outputs (for 10 seconds)
- ▶ 2 A on all others binary outputs

4.4.4 Measurement wiring

Use 1.5 mm² cables for voltage connection and 2.5 mm² for current transformers connection. Adjust Connection type (page 191), Nominal Voltage Ph-N (page 193), Nominal Voltage Ph-Ph (page 193), Nominal Current (page 190), PT Ratio (page 194), Vm PT Ratio (page 194) and CT Ratio (page 191) by appropriate setpoints in the Basic Settings group.

IMPORTANT: Risk of personal injury due to electric shock when manipulating voltage terminals under voltage. Be sure the terminals are not under voltage before touching them.

Do not open the secondary circuit of current transformers when the primary circuit is closed. Open the primary circuit first.

CT Location

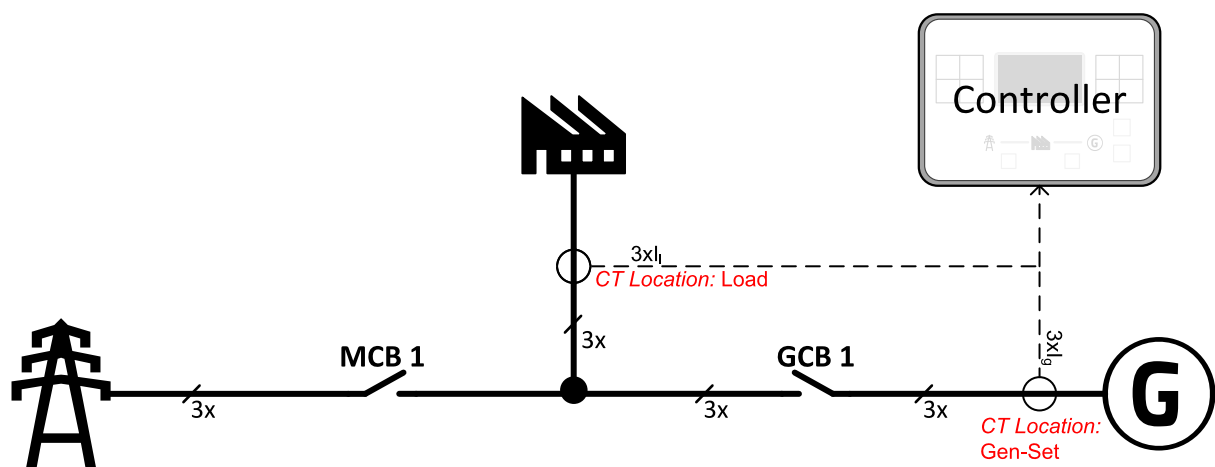


Image 5.2 CT Location

There are two options of CT location.

- a) Load

b) Gen-Set

Note: The current measurement protections are active only when the Gen-set is running.
If the CT Location is set to Load the **Short Circuit BOC** (page 241) protection is enabled only when GCB is closed.

Current measurement wiring

The number of CT's is automatically selected based on selected value of setpoint **Connection type** (page 191) [3Ph4Wire / High Leg D / 3Ph3Wire / Split Ph / Mono Ph].

Generator currents and power measurement is suppressed if current level is bellow <1 % of CT range.

To ensure proper function:

- ▶ Use cables of 2.5 mm²
- ▶ Use transformers to 5 A
- ▶ Connect CT according to following drawings:

3 phase application:

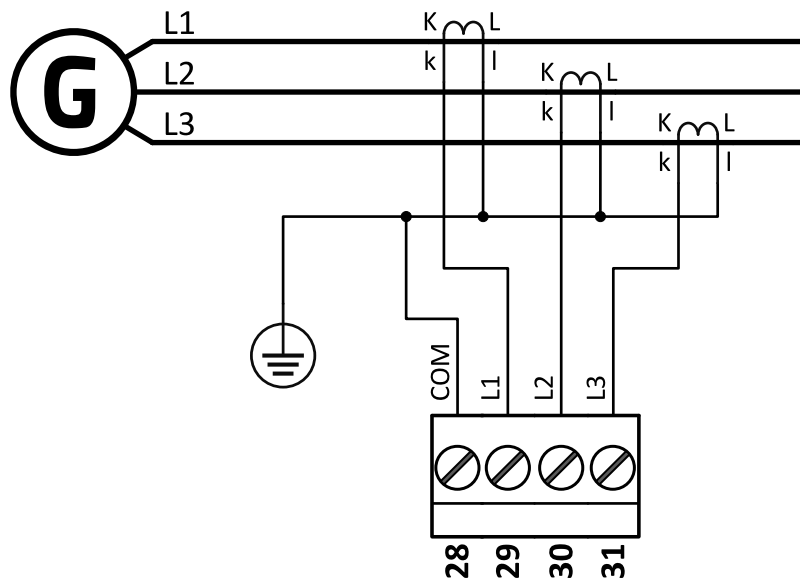


Image 5.3 3 phase application

IMPORTANT: It is necessary to ensure that potential difference between current COM terminal and power supply “-” terminal is maximally ± 2 V. There are 2 options how to ensure this:

- ▶ "Red" option - properly ground both terminals
- ▶ "Blue" option - interconnect these two terminals

Always apply only one option. Never realize both options on one installation.

Split phase application:

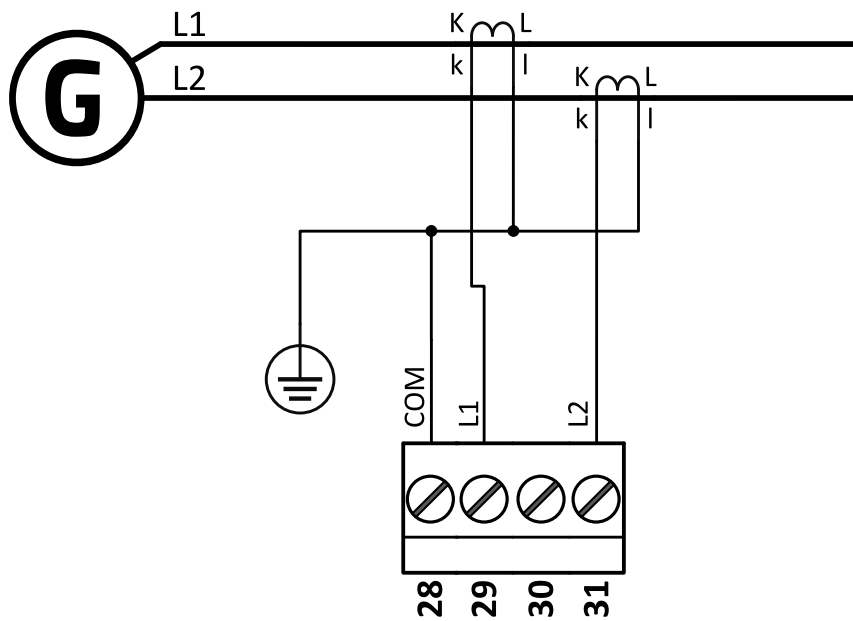


Image 5.4 Split phase application

IMPORTANT: The second phase of split phase connection is connected to the terminal, where is normally connected the third phase.

IMPORTANT: It is necessary to ensure that potential difference between current COM terminal and power supply “-” terminal is maximally ± 2 V. There are 2 options how to ensure this:

- ▶ "Red" option - properly ground both terminals
- ▶ "Blue" option - interconnect these two terminals

Always apply only one option. Never realize both options on one installation.

Mono phase application:

Connect CT according to following drawings. Terminals phase 2 and phase 3 are opened.

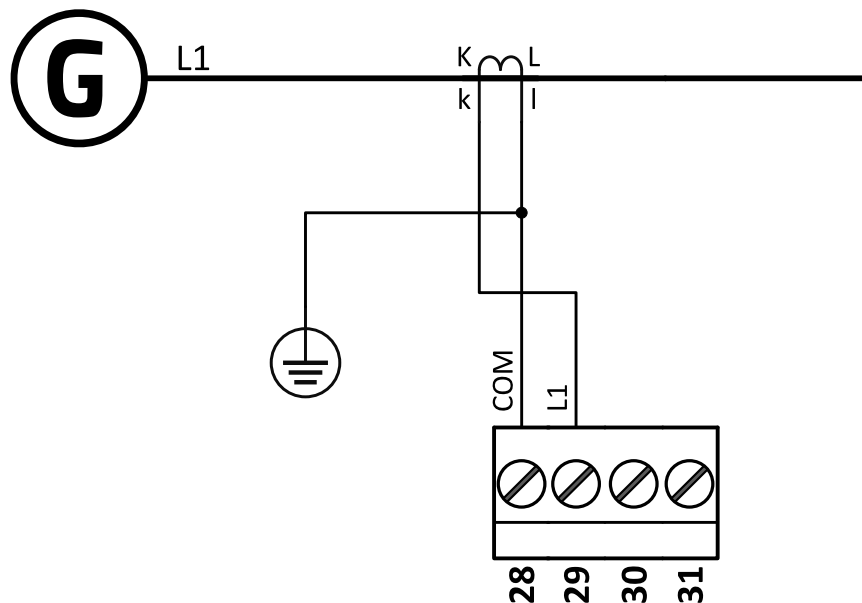


Image 5.5 Mono phase application

IMPORTANT: It is necessary to ensure that potential difference between current COM terminal and power supply “-” terminal is maximally ± 2 V. There are 2 options how to ensure this:

- ▶ "Red" option - properly ground both terminals
- ▶ "Blue" option - interconnect these two terminals

Always apply only one option. Never realize both options on one installation.

Voltage measurement AMF wiring

There are 4 voltage measurement Connection Type (setpoint **Connection type (page 191)** [3Ph4Wire / 3Ph3Wire / Split Ph / Mono Ph]) options, every type matches to corresponding generator connection type.

Note: For fusing of voltage measurement input use T1A or T2A fuse.

The generator protections are evaluated from different voltages based on **Connection type (page 191)** setting:

- ▶ 3Ph 4W – Ph-Ph voltage, Ph-N voltage
- ▶ 3Ph 3W – Ph-Ph voltage
- ▶ SpIPhL1L2 – Ph-N voltage
- ▶ SpIPhL1L3 – Ph-N voltage
- ▶ Mono Ph – Ph-N voltage

ConnectionType: 3 Phase 4 Wires

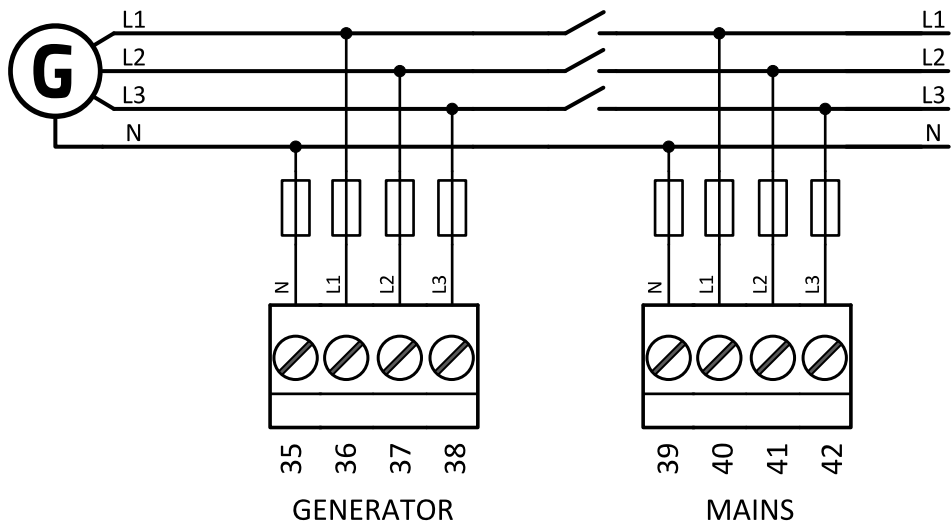


Image 5.6 3 phase application with neutral

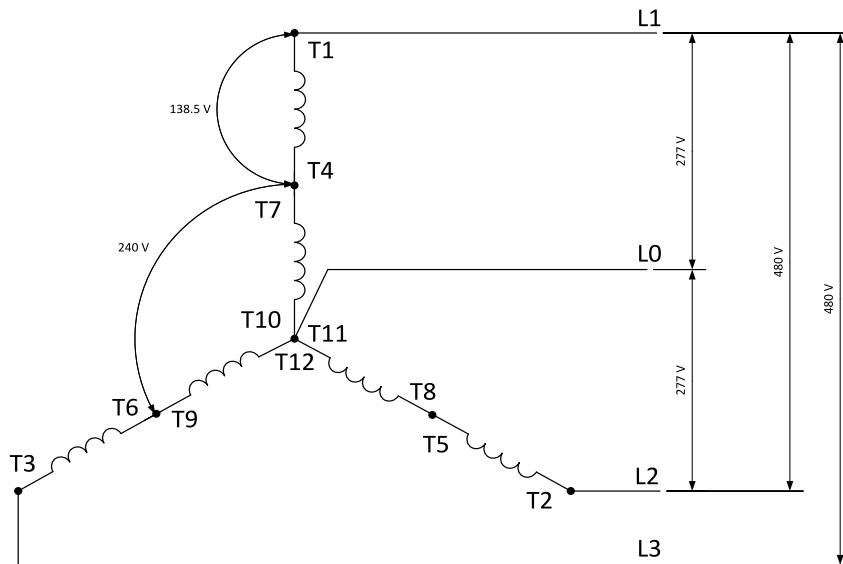


Image 5.7 Typical 3 Phase 4 Wires generator wiring

ConnectionType: High Leg D

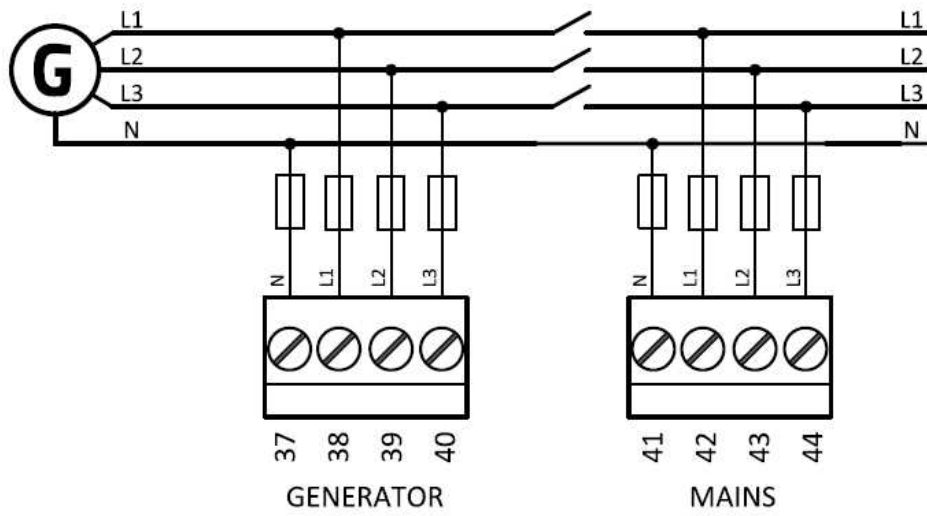


Image 5.8 High Leg Delta application

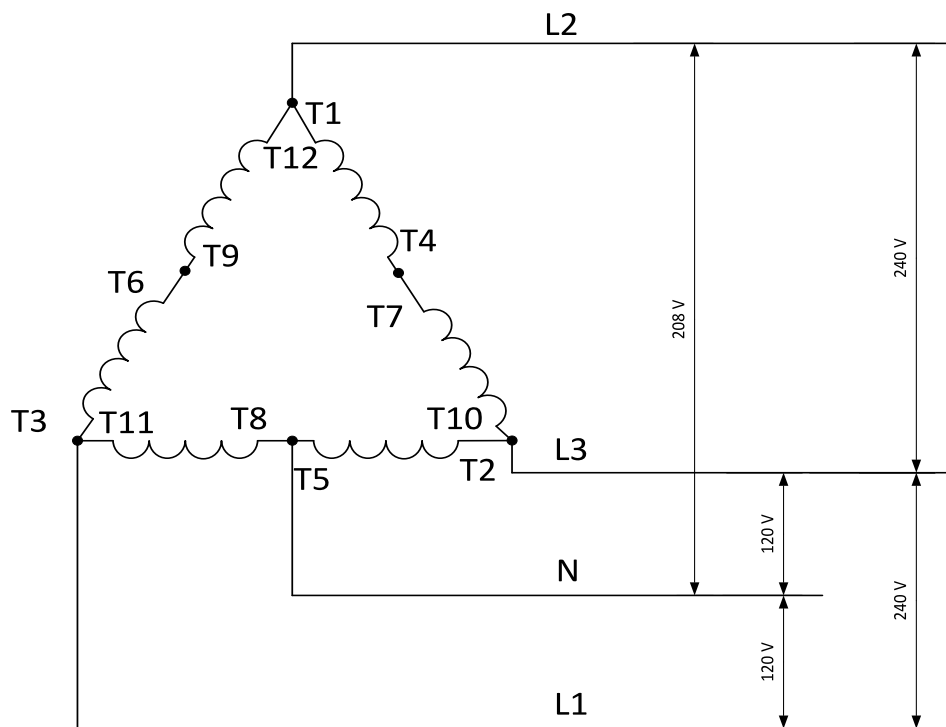


Table 5.1 Typical High Leg D generator wiring

ConnectionType: 3 Phase 3 Wires

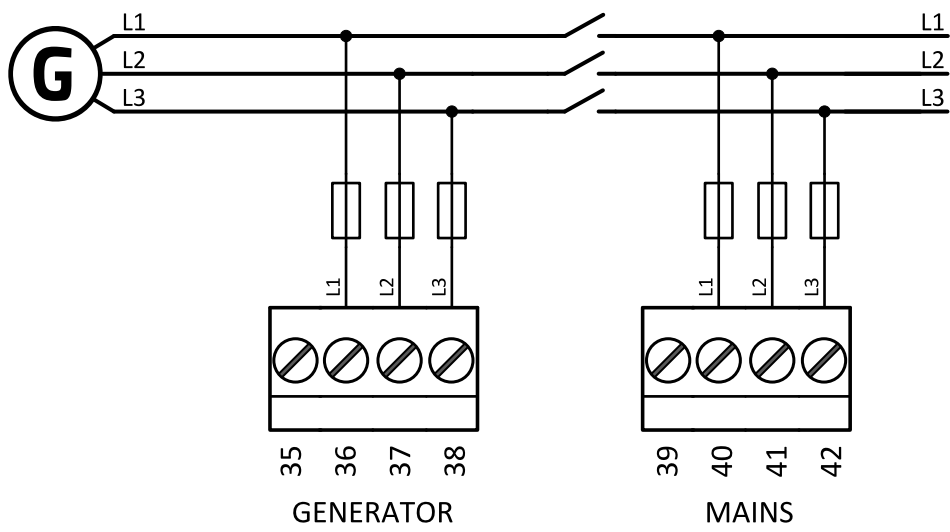


Image 5.9 3 phase application without neutral

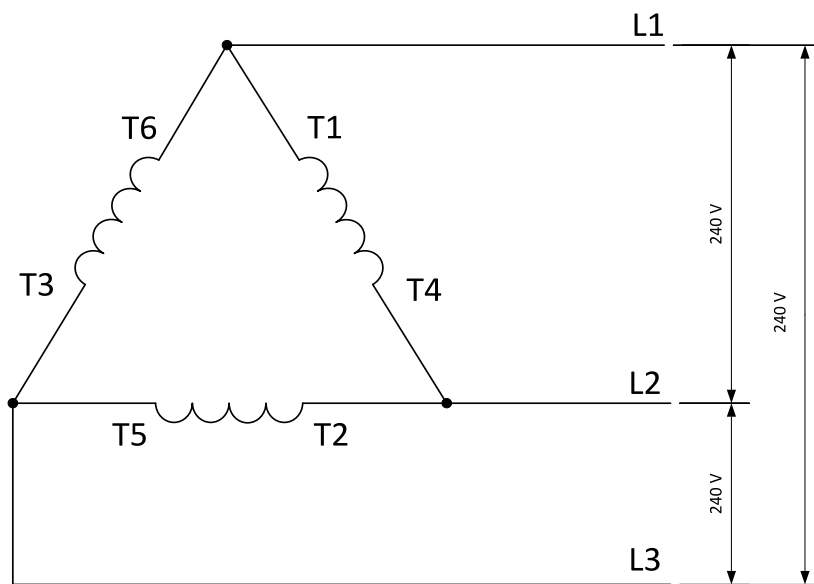


Image 5.10 Typical 3 Phase 3 Wires generator wiring

ConnectionType: SpIPhL1L2


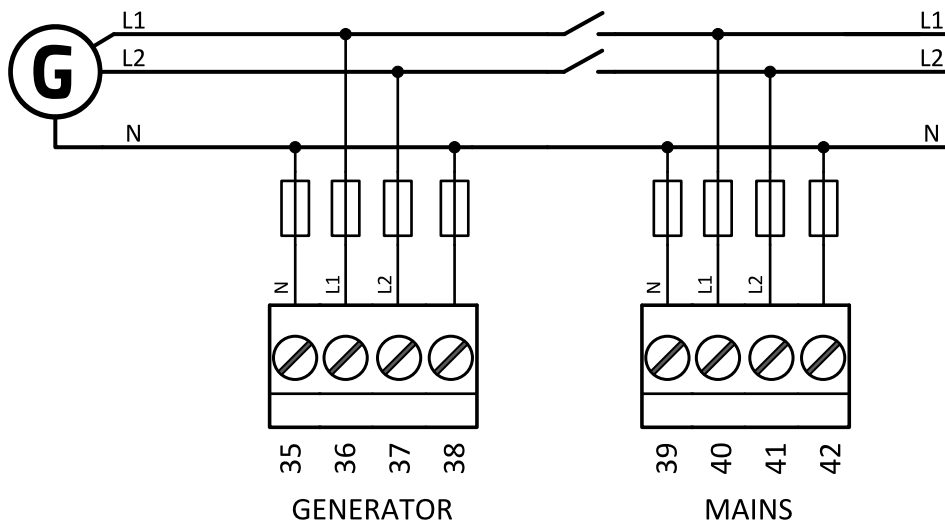


Image 5.11 Split phase L1L2 application

DOUBLE DELTA Connection

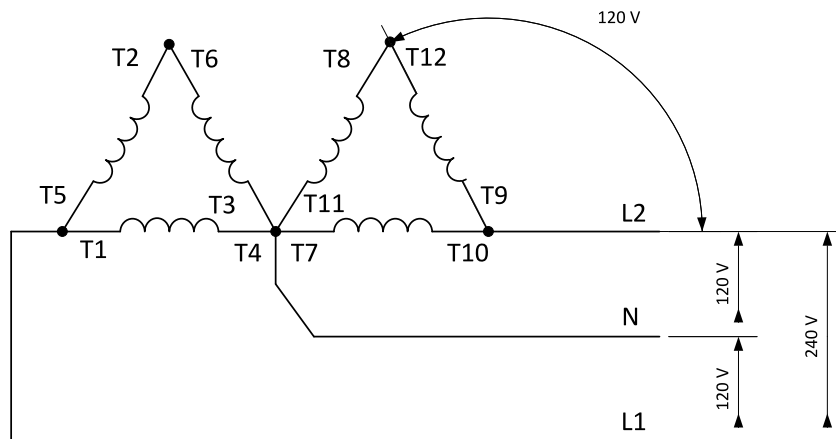

ZIG ZAG (DOG LEG) Connection

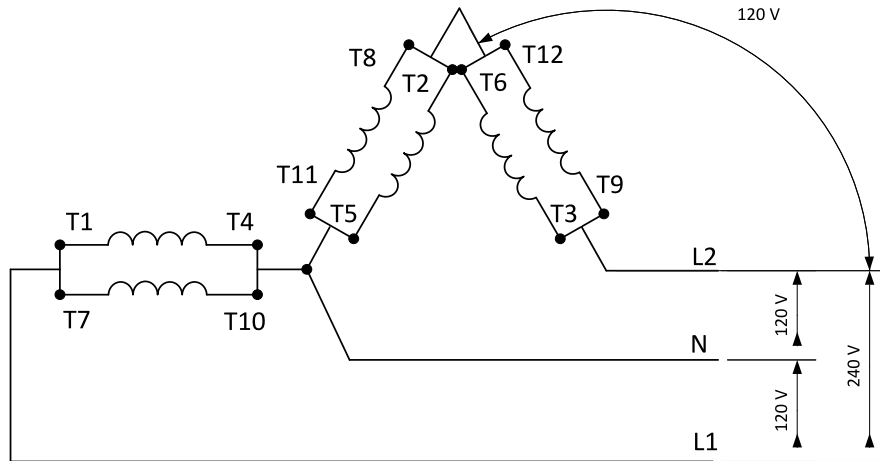


Image 5.12 Typical Split Phase generator wiring

ConnectionType: SpIPhL1L3


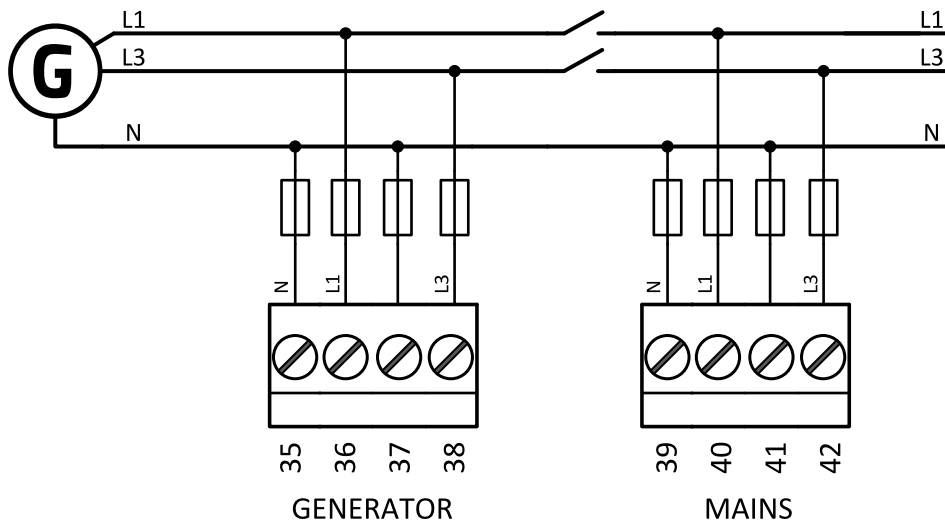


Image 5.13 Split phase L1L3 application

IMPORTANT: The second phase of split phase connection is connected to the terminal, where is usually connected the third phase.

DOUBLE DELTA Connection

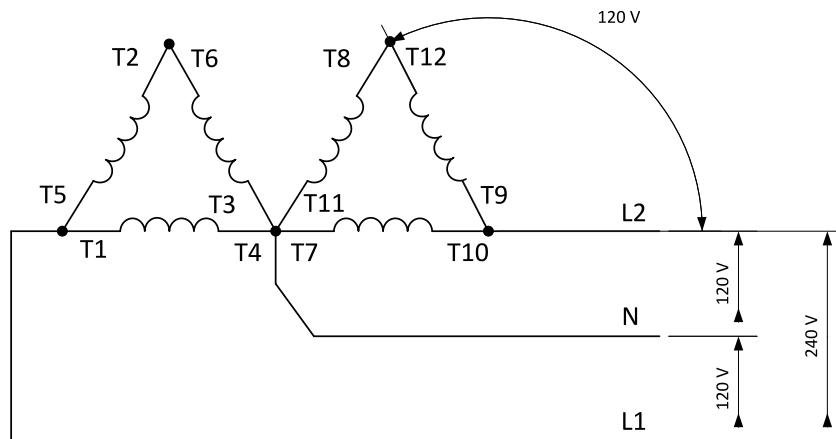

ZIG ZAG (DOG LEG) Connection

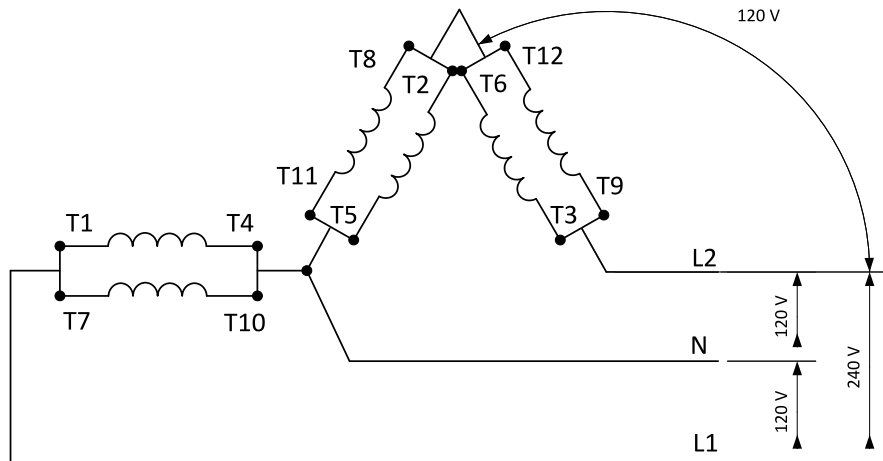


Image 5.14 Typical Split Phase generator wiring

ConnectionType: Mono Phase

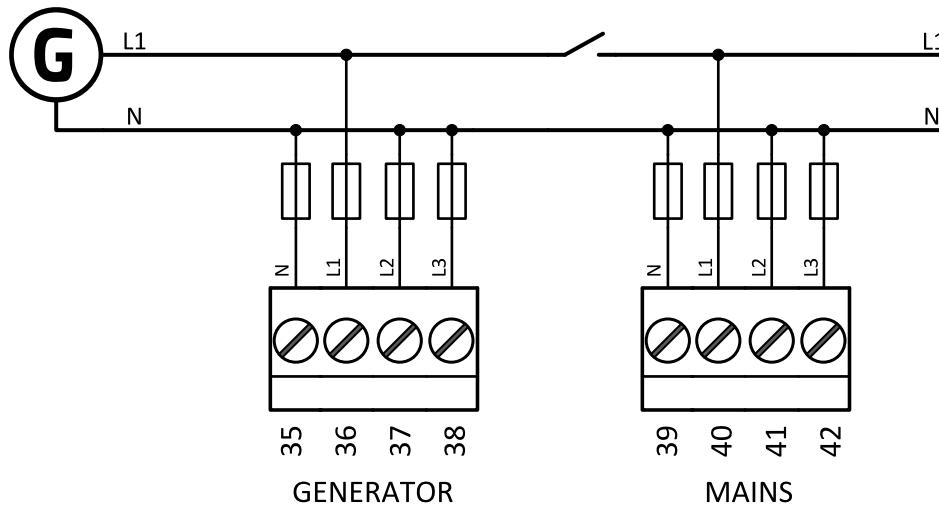


Image 5.15 Mono phase application

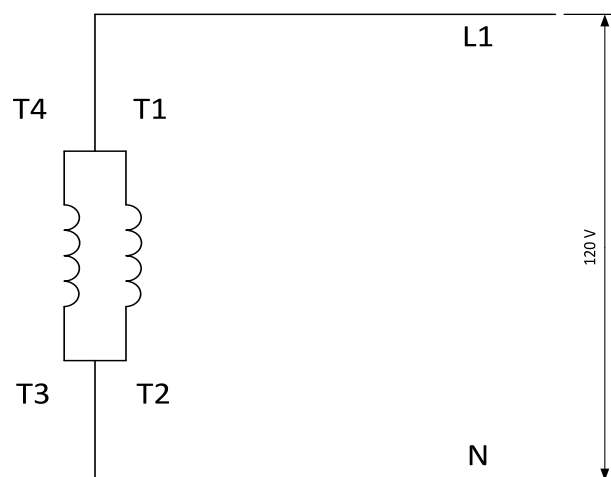


Image 5.16 Typical Mono Phase generator wiring

Voltage measurement MRS wiring

There are 4 voltage measurement Connection Type (setpoint **Connection type (page 191)** [3Ph4Wire / 3Ph3Wire / Split Ph / Mono Ph]) options, every type matches to corresponding generator connection type.

Note: For fusing of voltage measurement input use T1A or T2A fuse.

The generator protections are evaluated from different voltages based on **Connection type (page 191)** setting:

- ▶ 3Ph 4W – Ph-Ph voltage, Ph-N voltage
- ▶ 3Ph 3W – Ph-Ph voltage
- ▶ SplPhL1L2 – Ph-N voltage
- ▶ SplPhL1L3 – Ph-N voltage
- ▶ Mono Ph – Ph-N voltage

ConnectionType: 3 Phase 4 Wires

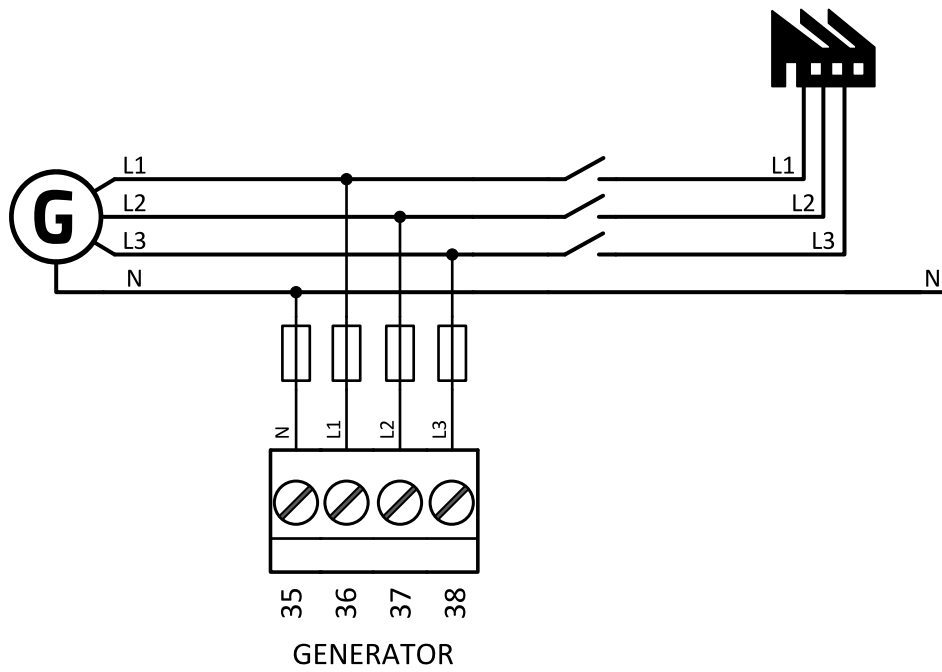


Image 5.17 3 phase application with neutral

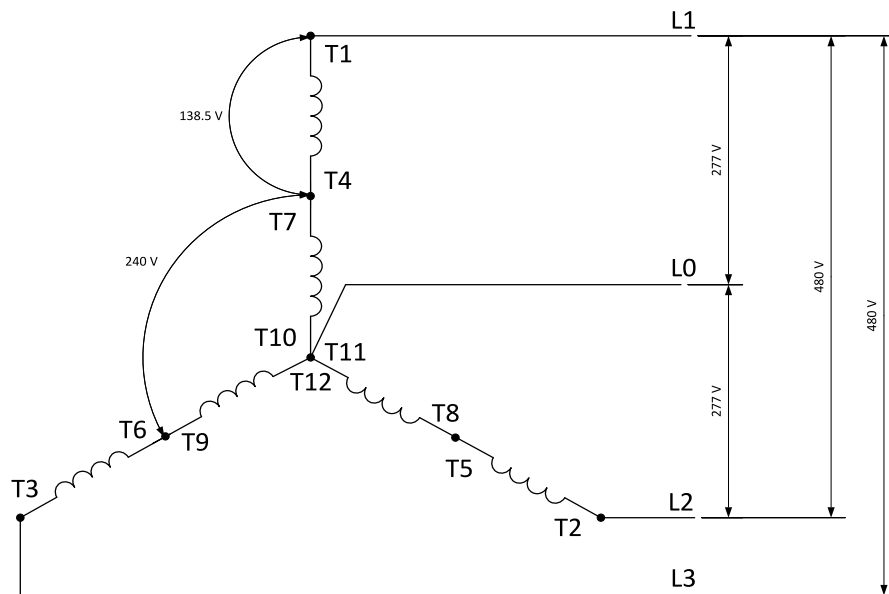


Image 5.18 Typical 3 Phase 4 Wires generator wiring

ConnectionType: High Leg D

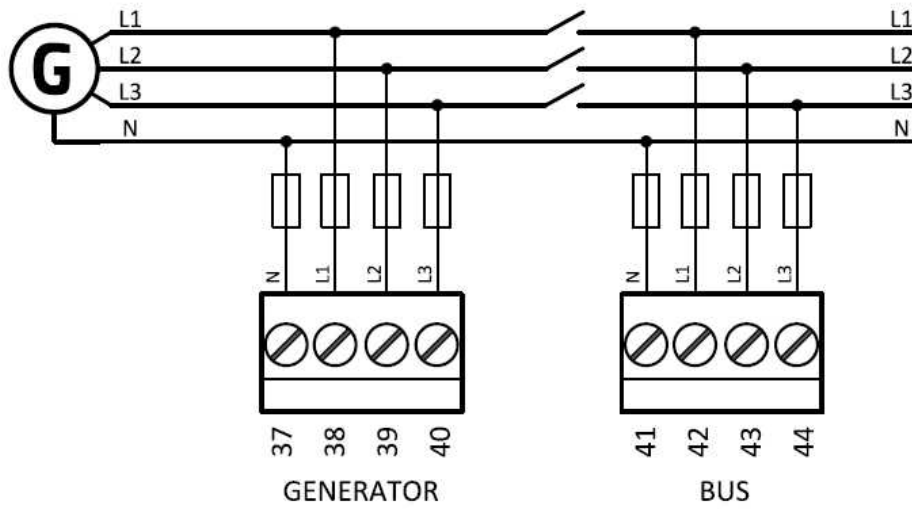


Image 5.19 High Leg Delta application

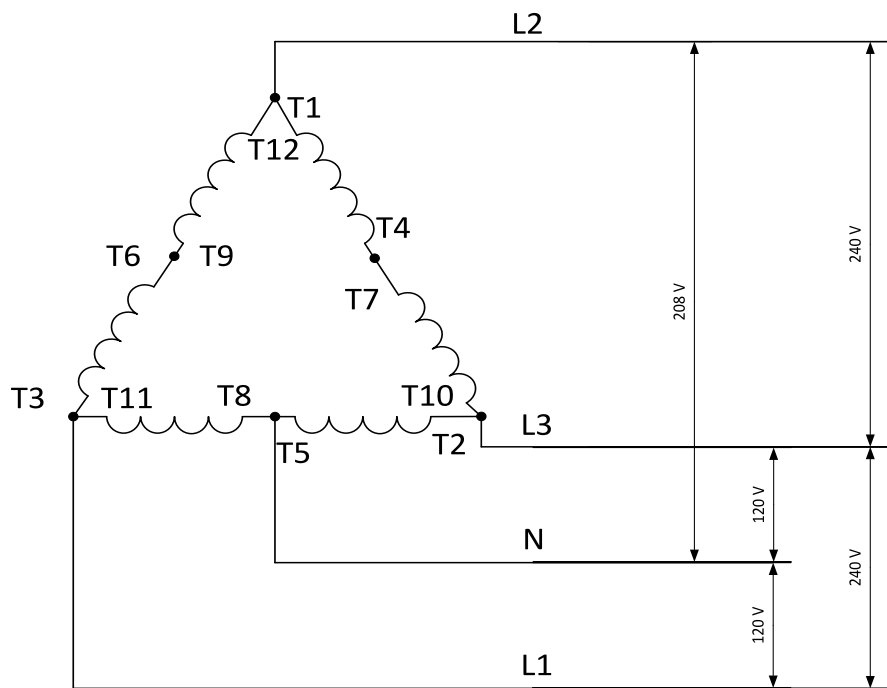


Image 5.20 Typical High Leg D generator wiring

ConnectionType: 3 Phase 3 Wires

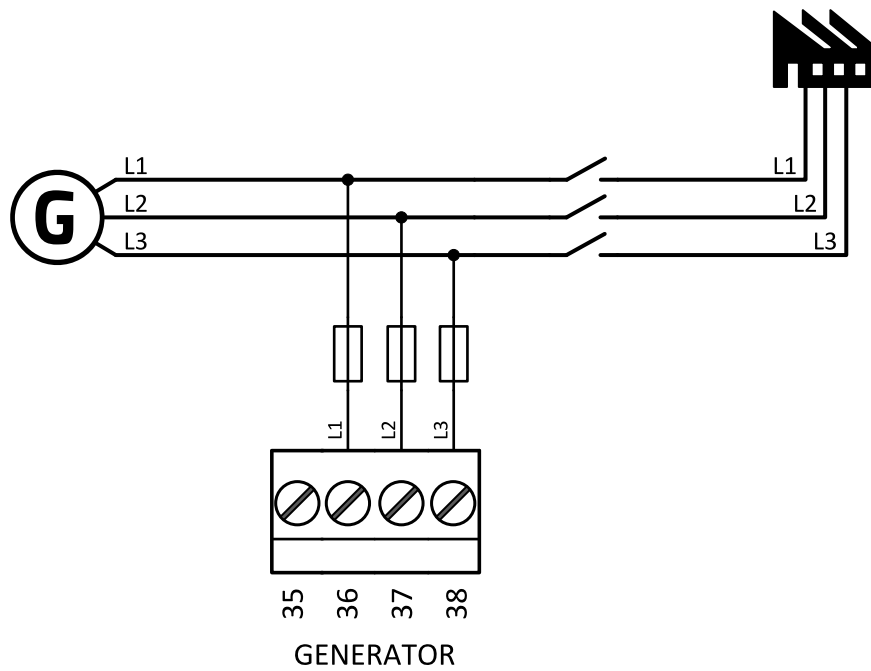


Image 5.21 3 phase application without neutral

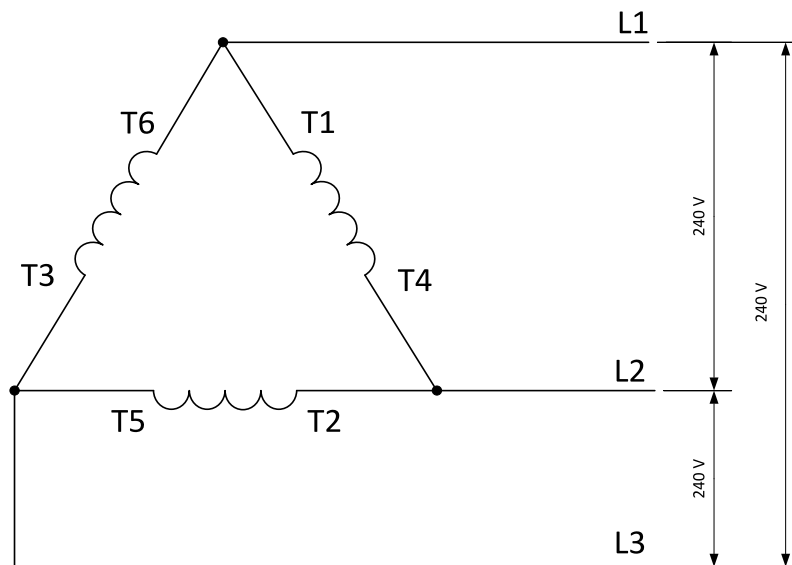


Image 5.22 Typical 3 Phase 3 Wires generator wiring

ConnectionType: SpIPhL1L2


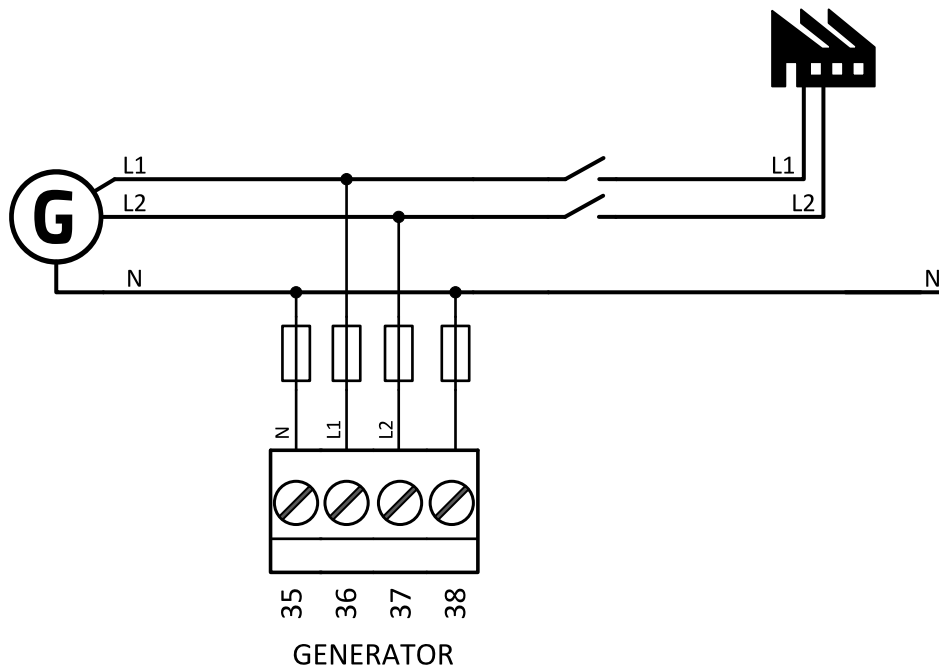


Image 5.23 Split phase L1L2 application

DOUBLE DELTA Connection

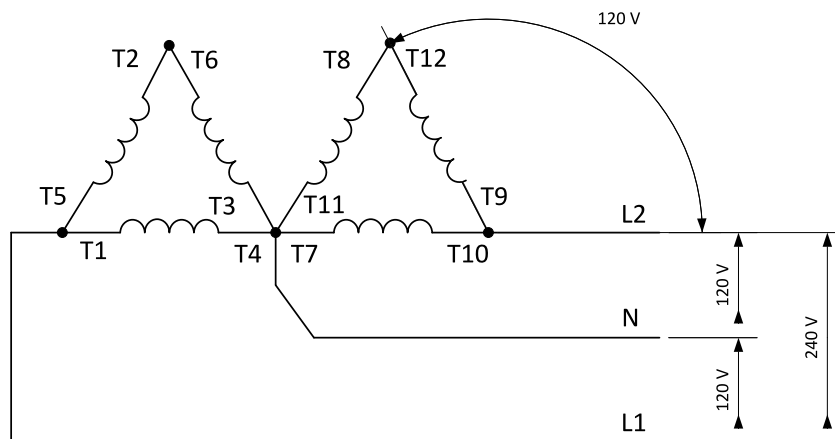

ZIG ZAG (DOG LEG) Connection

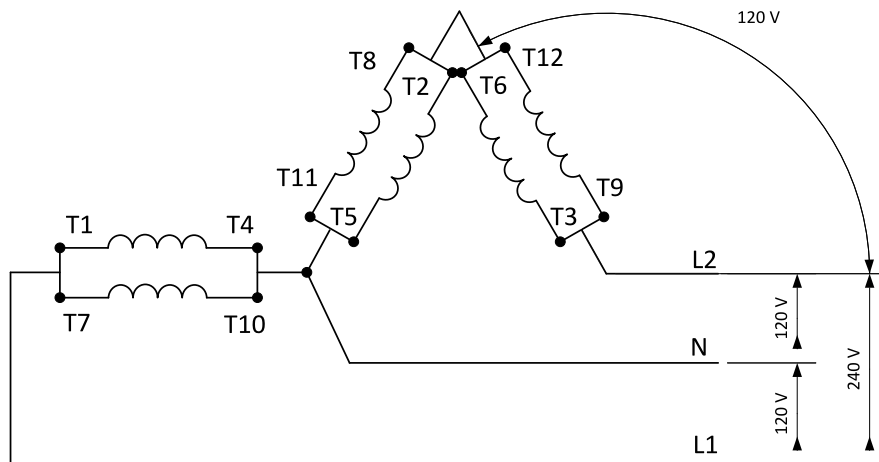


Image 5.24 Typical Split Phase generator wiring

ConnectionType: SpIPhL1L3


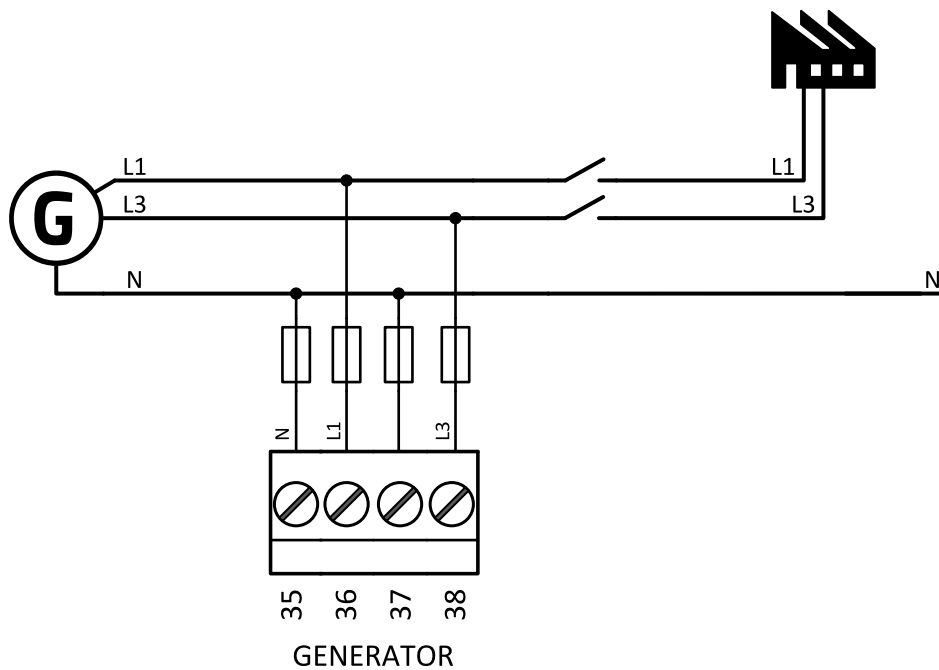


Image 5.25 Split phase L1L3 application

IMPORTANT: The second phase of split phase connection is connected to the terminal, where is usually connected the third phase.

DOUBLE DELTA Connection

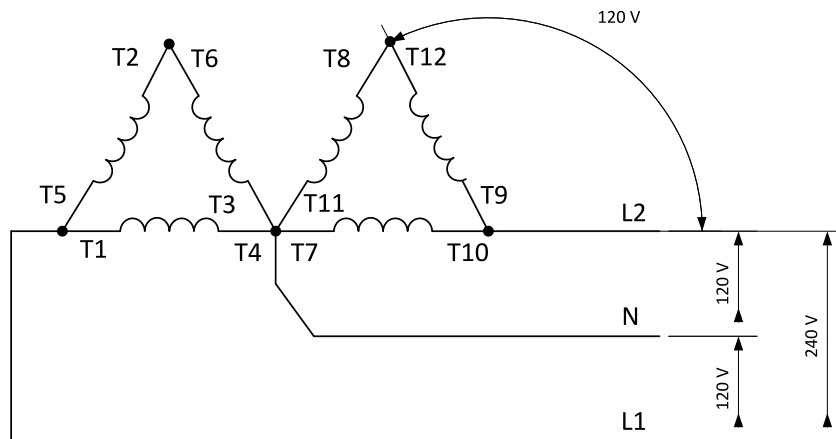

ZIG ZAG (DOG LEG) Connection

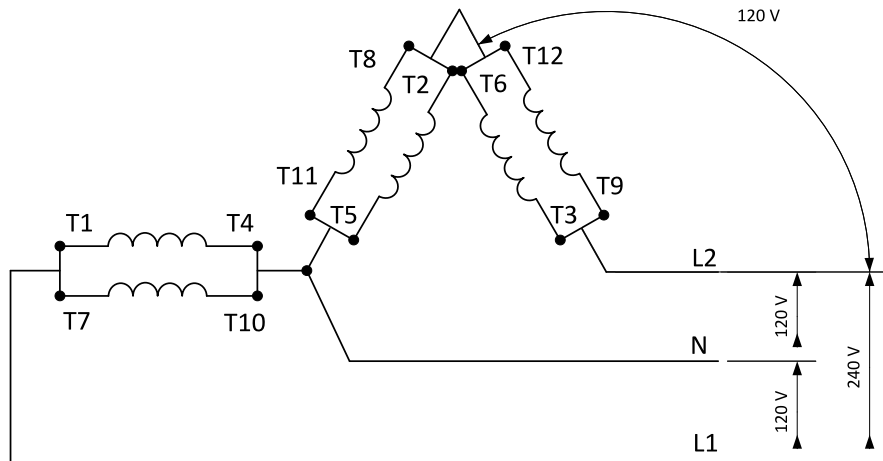


Image 5.26 Typical Split Phase generator wiring

ConnectionType: Mono Phase

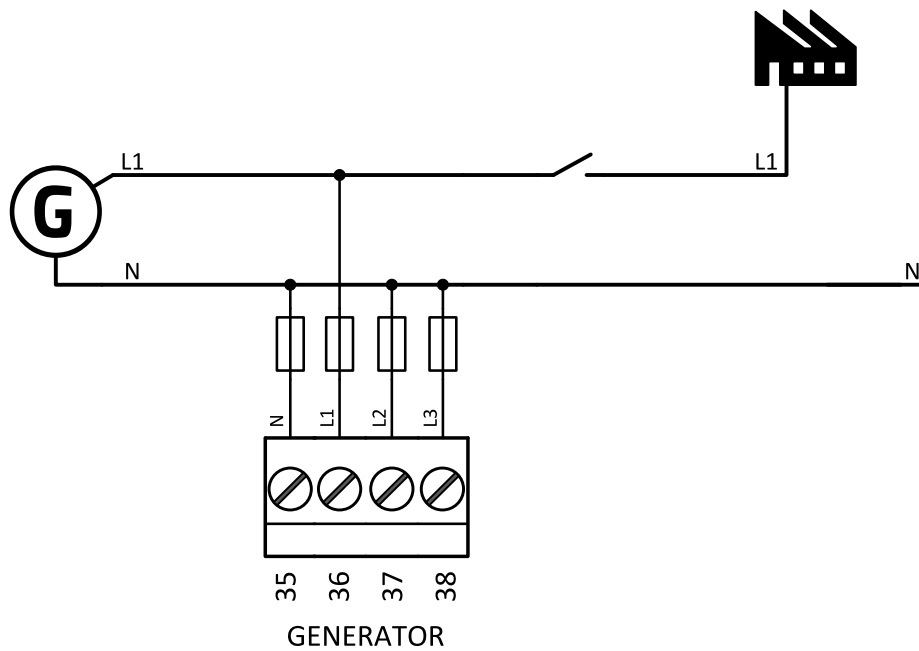


Image 5.27 Mono phase application


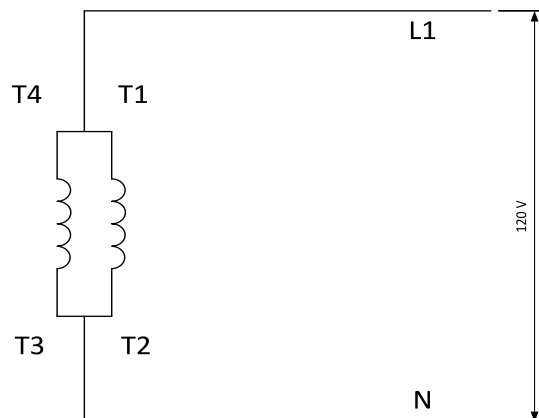


Image 5.28 Typical Mono Phase generator wiring

4.4.5 Magnetic pick-up

A magnetic speed sensor (pickup) is the most common method of engine speed measurement. To use this method, mount the pickup opposite to the engine flywheel, connect the cable to the controller as shown on the picture below and adjust the setpoint **Gear Teeth** (page 195) according to the number of teeth on the flywheel. For the details about the pick-up input parameters see **Technical data on page 179**

IMPORTANT: To ensure proper function use a shielded cable.

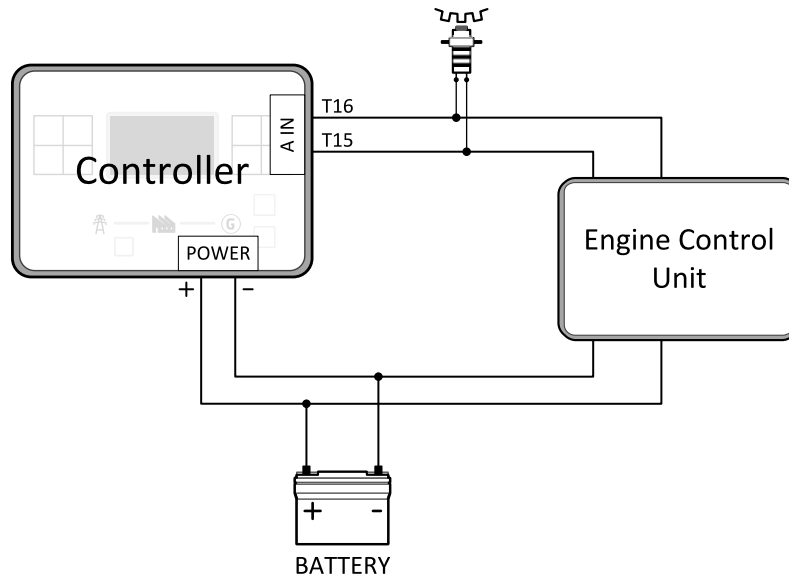

If engine will not start:

- ▶ Check ground connection from pick-up to controllers, eventually disconnect ground connection to one of them.

Note: In some cases the controller will measure a RPM value even though the gen-set is not running: RPM is measured from the generator voltage (Gear Teeth = 0). Controller is measuring some voltage value on input terminals due to open fusing. If $RPM > 0$ the controller will be put into a Not ready state and the engine will not be allowed to start.

4.4.6 Binary inputs

Use minimally 1 mm² cables for wiring of Binary inputs.

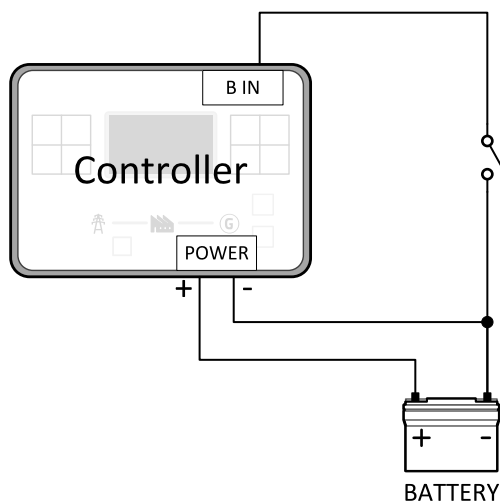



Image 5.29 Wiring binary inputs

Note: The name and function or alarm type for each binary input have to be assigned during the configuration.

4.4.7 Binary Outputs

Use min. 1 mm² cables for wiring of binary outputs. Use external relays as indicated on the schematic below for all outputs except those where low-current loads are connected (signalization etc...).


IMPORTANT: Use suppression diodes on all relays and other inductive loads!

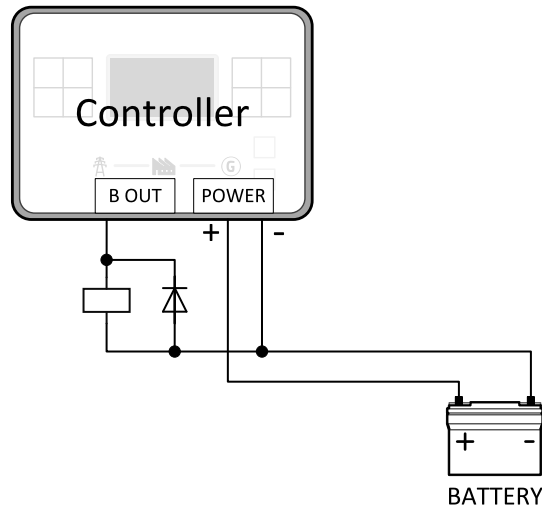

Note: Every single low current binary output can provide up to 0,5 A of steady current.

Note: Binary output 1 (terminal 4) and binary output 2 (terminal 5) are high current outputs (5 A for long term).

IMPORTANT: When operating temperature is higher than 60 °C it is strongly recommended to limit output current of high current binary outputs (terminal 4 and terminal 5) to 4 A (each).

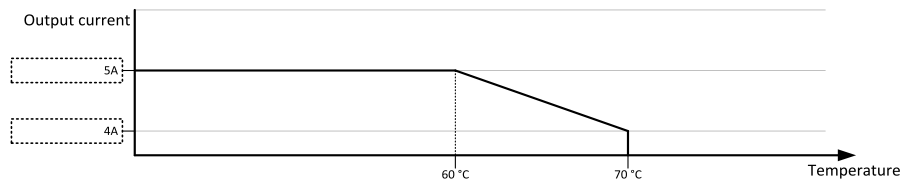

4.4.8 Emergency stop

The Emergency Stop function can be made in two ways:

- ▶ Connecting a normally closed “mushroom-type” button to the binary input . This is a purely software solution.
- ▶ A hard-wired solution, where the button also disconnects the power supply from the controller outputs.

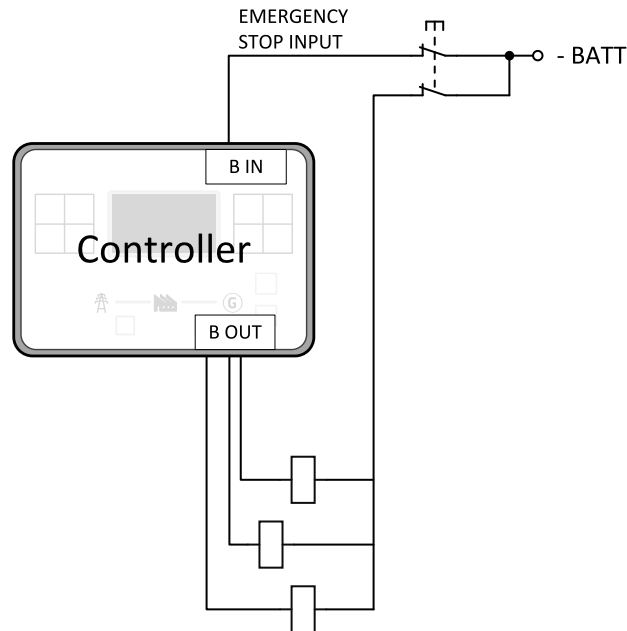


Image 5.30 Hard-wired emergency stop

IMPORTANT: Suppression diodes are not indicated, but required.

4.4.9 Analog inputs

The analog inputs are designed for resistive automotive type sensors like VDO or DATCON. The sensors are connected either by one wire (the second pole is the sensor body) or by two wires.

- ▶ In the case of grounded sensors, connect the AI COM terminal to the engine body as near to the sensors as possible.
- ▶ In the case of isolated sensors, connect the AI COM terminal to the negative power supply terminal of the controller as well as one pole of each sensor.

Analog inputs are typically used for: Oil Pressure, Coolant Temperature and Fuel Level. All of these parameters are connected with relevant protections.

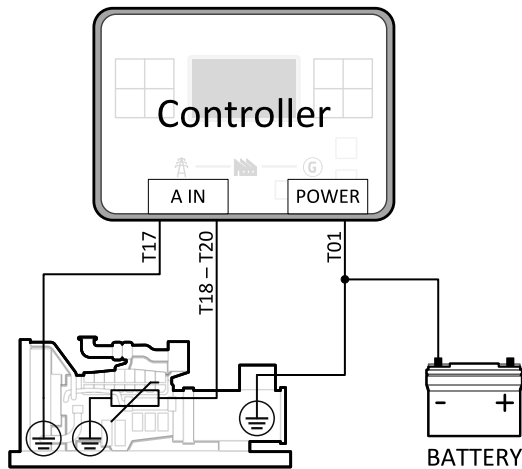


Image 5.31 Grounded sensors

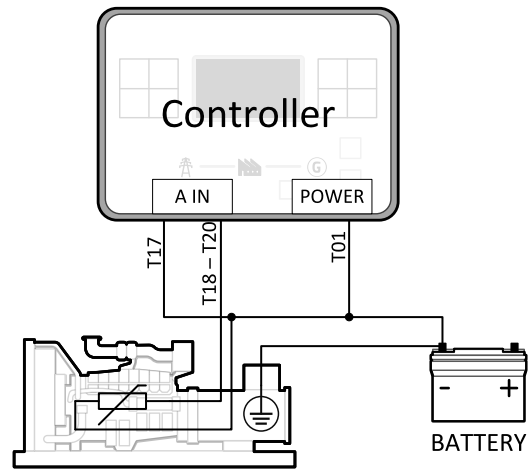


Image 5.32 Isolated sensors

Note: Schemes show only analog input connection overview, not actual wiring.

Note: The name, sensor characteristic and alarm types for each analog input have to be assigned during configuration.

Analog inputs with voltage & current sensors

On each analog input, there is a possibility to connect voltage or current output sensor instead of resistive one. Recommended wiring connection for these measurements and recommended curves are bellow.

Voltage sensors

Sensor's output range (V)	R1 (Ω)	R2 (Ω)
0 - 10	390	100
0 - 30	1500	100
0 - 70	3300	100

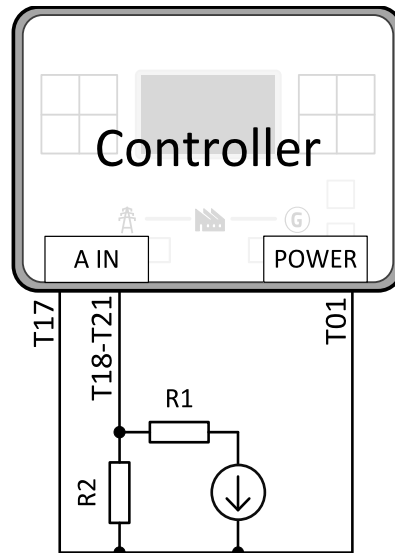


Image 5.33 Wiring of analog input with voltage sensor

Tables for HW versions 1.1 and lower.

0 - 10 V											
V	0	1	2	3	4	5	6	7	8	9	10
Ω	81	145	219	306	409	539	685	887	1125	1458	1933

0 - 30 V									
V	0	2	4	6	8	10	12	14	
Ω	95	134	177	223	274	330	395	465	
V	16	18	20	22	24	26	28	30	
Ω	543	633	735	853	993	1154	1350	1589	

0 - 70 V												
V	0	2	4	6	8	10	12	14	16	18	20	22
Ω	99	117	137	155	175	196	219	242	266	291	318	346
V	24	26	28	30	32	34	36	38	40	42	44	46
Ω	375	406	439	473	510	549	589	633	679	729	781	838
V	48	50	52	54	56	58	60	62	64	66	68	70
Ω	873	963	1033	1110	1193	1283	1383	1492	1612	1748	1896	2065

Tables for HW versions 1.2 and higher.

0 - 10 V											
V	0	1	2	3	4	5	6	7	8	9	10
Ω	80	98	119	143	172	208	251	306	378	474	611

0 - 30 V								
V	0	2	4	6	8	10	12	14
Ω	94	105	118	131	147	163	182	202
V	16	18	20	22	24	26	28	30
Ω	226	252	282	317	358	405	463	533

0 - 70 V												
V	0	2	4	6	8	10	12	14	16	18	20	22
Ω	97	102	108	114	120	126	133	140	147	154	162	170
V	24	26	28	30	32	34	36	38	40	42	44	46
Ω	179	188	198	208	219	231	243	256	269	284	300	316
V	48	50	52	54	56	58	60	62	64	66	68	70
Ω	334	354	375	398	422	449	479	511	547	587	631	681

Note: This is a conversion of voltage from voltage sensor to appropriate resistance value. Use resistance values in IntelliConfig to create your specific curve. These values should be used in "Ohm" column.

Current sensors

Sensor's output range (mA)	R (Ω)
0-20	100

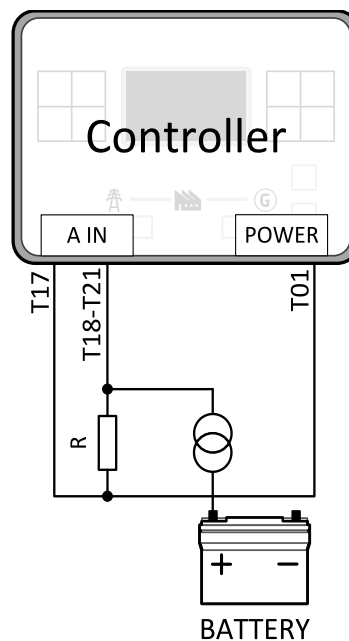


Image 5.34 Wiring of analog input with current sensor

Table for HW versions 1.1 and lower.

0 - 22 mA												
mA	0	1	2	3	4	5	6	7	8	9	10	11
Ω	100	131	164	200	238	280	325	374	427	485	550	621
mA	12	13	14	15	16	17	18	19	20	21	22	
Ω	700	788	887	1000	1128	1276	1450	1654	1900	2200	2575	

Table for HW versions 1.2 and higher.

0 - 22 mA												
mA	0	1	2	3	4	5	6	7	8	9	10	11
Ω	100	110	120	130	141	154	168	182	198	216	235	256
mA	12	13	14	15	16	17	18	19	20	21	22	
Ω	280	306	336	370	409	453	505	566	640	730	842	

Note: This is a conversion of current from current sensor to appropriate resistance value. Use resistance values in InteliConfig to create your specific curve. These values should be used in "Ohm" column.

Analog as binary or tristate inputs

Analog inputs can be used also as binary or tri-state, i.e. for contact sensors without or with circuit check. The threshold level is 750 Ω. In the case of tri-state, values lower than 10 Ω and values over 2400 Ω are evaluated as sensor failure (short or open circuit).

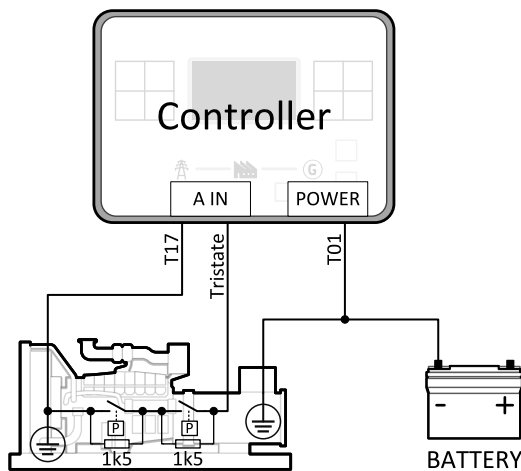


Image 5.35 Analog inputs as tristate

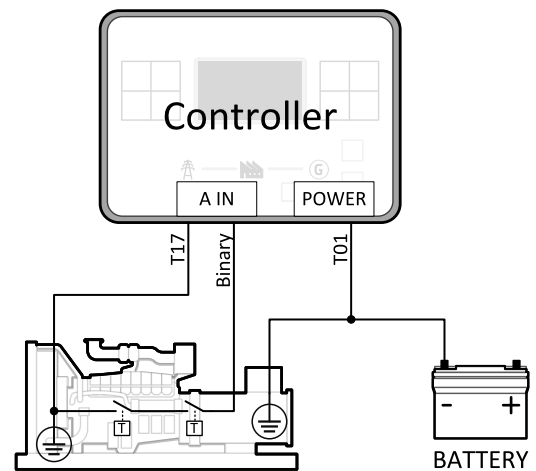


Image 5.36 Analog inputs as binary

Note: The name, sensor characteristic and alarm types for each analog input have to be assigned during configuration.

Note: Tristate and binary sensors are not suitable for Analog Switch functions.

4.4.10 CAN bus and RS485 wiring

CAN bus wiring

The wiring of the CAN bus should be provided in such a way that the following rules are observed:

- ▶ The maximum length of the CAN bus depends on the communication speed. For a speed of 250 kbps, which is used on the CAN1 bus (extension modules, ECU), the maximum length is 200 m.
- ▶ The bus must be wired in linear form with termination resistors at both ends. No nodes are allowed except on the controller terminals.
- ▶ Shielded cable¹ has to be used, shielding has to be connected to the terminal T01 (Grounding).
- ▶ External units can be connected on the CAN bus line in any order, but keeping line arrangement (no tails, no star) is necessary.
- ▶ The CAN bus has to be terminated by 120 Ohm resistors at both ends use a cable with following parameters:

Cable type	Shielded twisted pair
Impedance	120 Ω
Propagation velocity	≥ 75% (delay ≤ 4,4 ns/m)
Wire crosscut	≥ 0,25 mm ²
Attenuation (@1MHz)	≤ 2 dB/100 m

Note: Communication circuits shall be connected to communication circuits of Listed equipment.

Note: A termination resistor at the CAN (120 Ω) is already implemented on the PCB. For connecting, close the jumper near the appropriate CAN terminal.

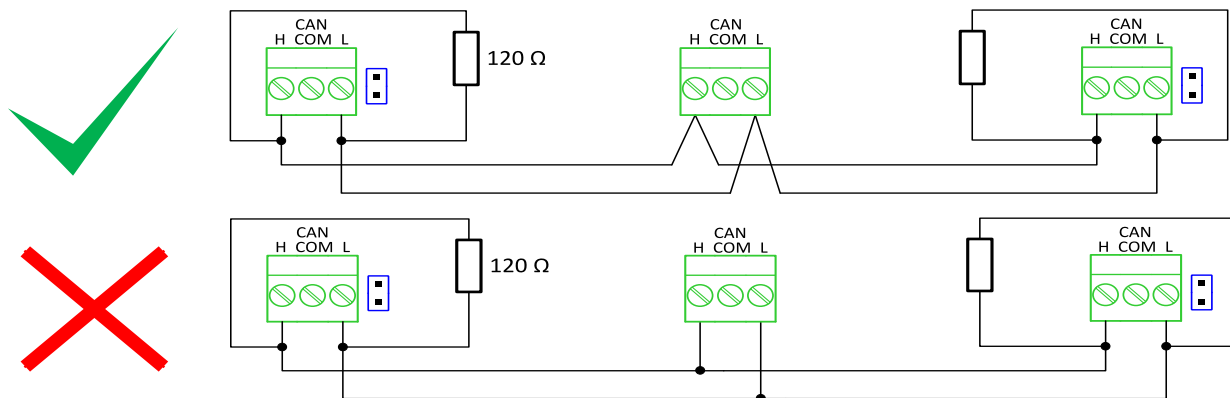


Image 5.37 CAN bus topology

¹Recommended data cables: BELDEN (<http://www.belden.com>) - for shorter distances: 3105A Paired - EIA Industrial RS-485 PLTC/CM (1x2 conductors); for longer distances: 3106A Paired - EIA Industrial RS-485 PLTC/CM (1x2+1 conductors)

- ▶ For shorter distances (connection within one building)

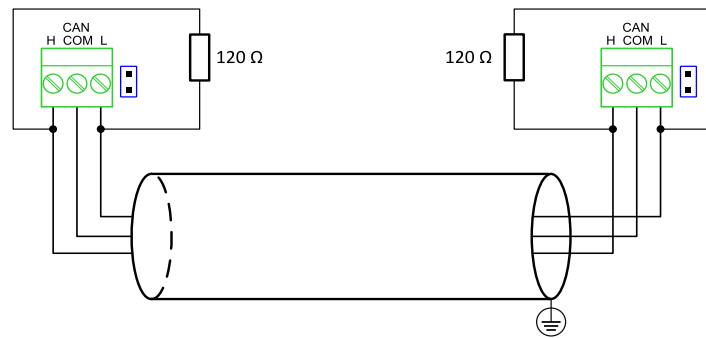


Image 5.38 CAN bus wiring for shorter distances

Note: Shielding shall be grounded at one end only. Shielding shall not be connected to CAN COM terminal

- ▶ For longer distances or in case of surge hazard (connection out of building, in case of storm etc.)

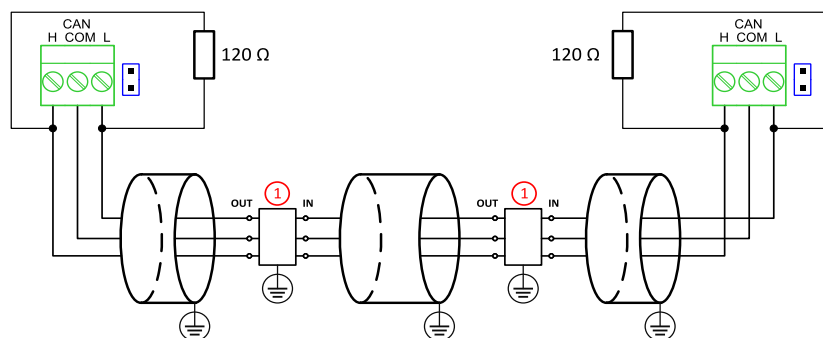


Image 5.39 CAN bus wiring for longer distances

① Recommended PT5-HF-12DC-ST¹

RS485 wiring

The wiring of the RS485 communication should be provided in such a way that the following rules are observed:

Note: A termination resistor at the RS485 (120Ω) is already implemented on the PCB. For connecting, close the jumper near the appropriate RS485 terminal.

- ▶ Standard maximum bus length is 1000 m.
- ▶ Shielded cable² has to be used, shielding has to be connected to the terminal T01 (Grounding).
- ▶ External units can be connected on the RS485 line in any order, but keeping line arrangement (no tails, no star) is necessary.
- ▶ The line has to be terminated by 120 Ohm resistors at both ends.

¹Protections recommended: Phoenix Contact (<http://www.phoenixcontact.com>): PT 5-HF-12DC-ST with PT2x2-BE (base element) or Saltek (<http://www.saltek.cz>): DM-012/2 R DJ

²Recommended data cables: BELDEN (<http://www.belden.com>) - for shorter distances: 3105A Paired - EIA Industrial RS-485 PLTC/CM (1x2 conductors); for longer distances: 3106A Paired - EIA Industrial RS-485 PLTC/CM (1x2+1 conductors)

- ▶ For shorter distances (connection within one building)

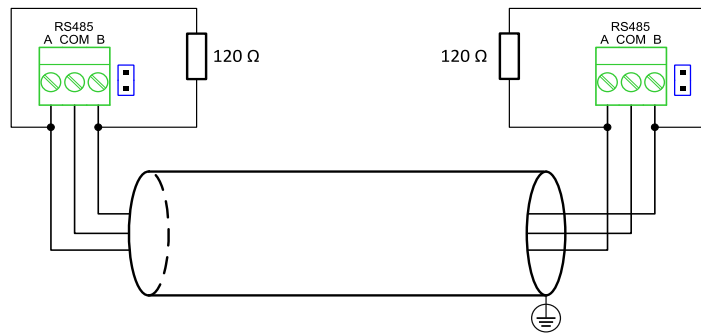


Image 5.40 RS485 wiring for shorter distances

- ▶ For longer distances or in case of surge hazard (connection out of building, in case of storm etc.)

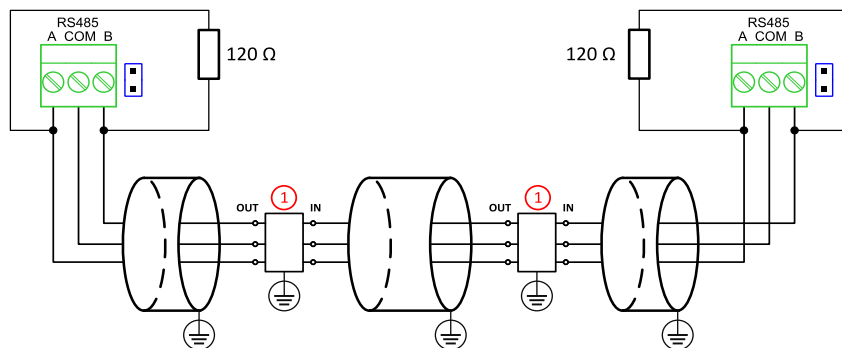


Image 5.41 RS485 wiring for longer distances

- ① Recommended PT5HF-5DC-ST¹

Note: Communication circuits shall be connected to communication circuits of Listed equipment.

¹Recommended protections: Phoenix Contact (<http://www.phoenixcontact.com>): PT 5-HF-5DC-ST with PT2x2-BE (base element)(or MT-RS485-TTL) or Saltek (<http://www.saltek.cz>): DM-006/2 R DJ

4.4.11 USB

This is required for computer connection. Use the shielded USB A-B cable.


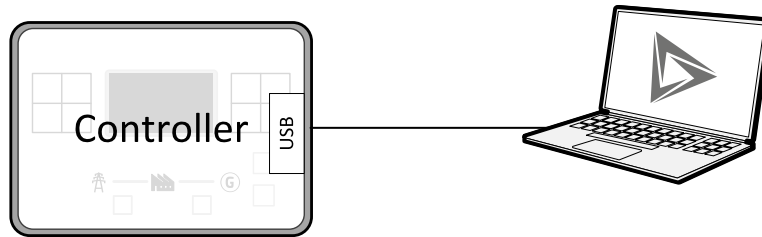


Image 5.42 USB connection


Controller can be also powered by USB (only for service purpose like a uploading firmware, change of configuration etc.).

IMPORTANT: Power supply by USB is only for service purpose. Binary inputs and outputs are in logical 0. Also plug-in modules are not working.

4.4.12 Example of AMF Wiring

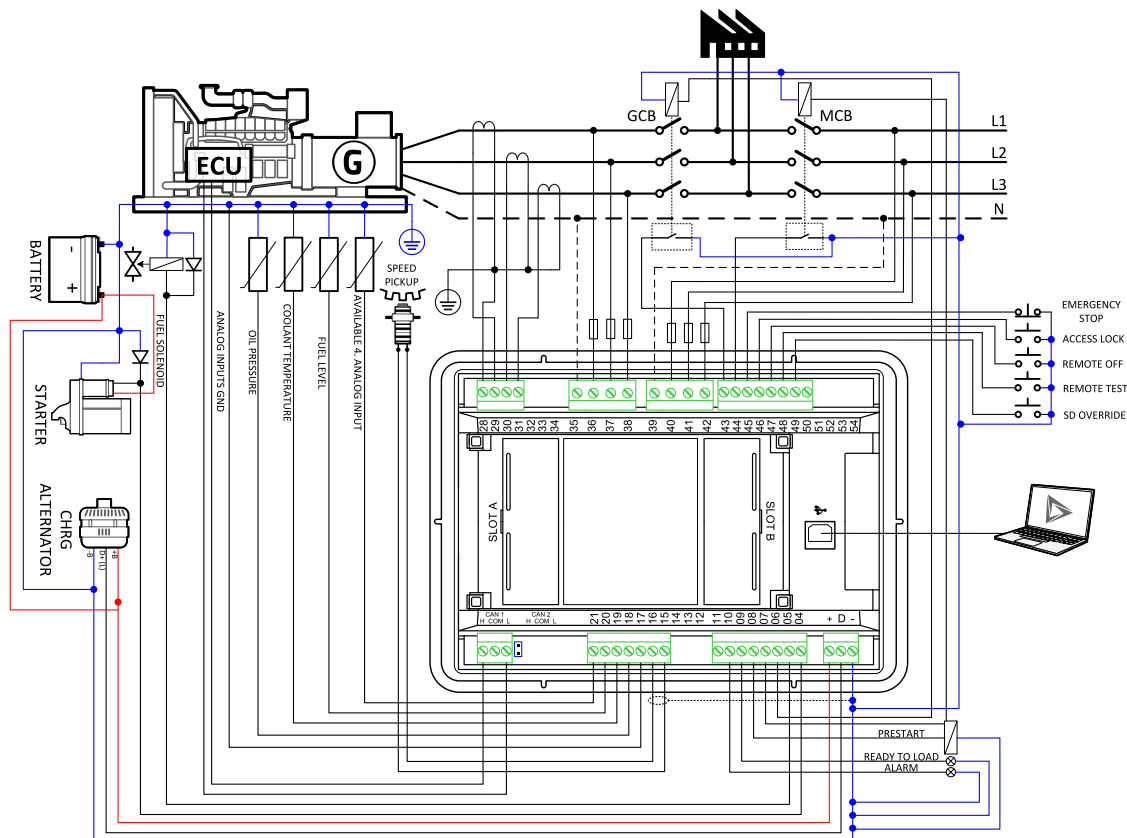

4.4.13 Example of MRS Wiring

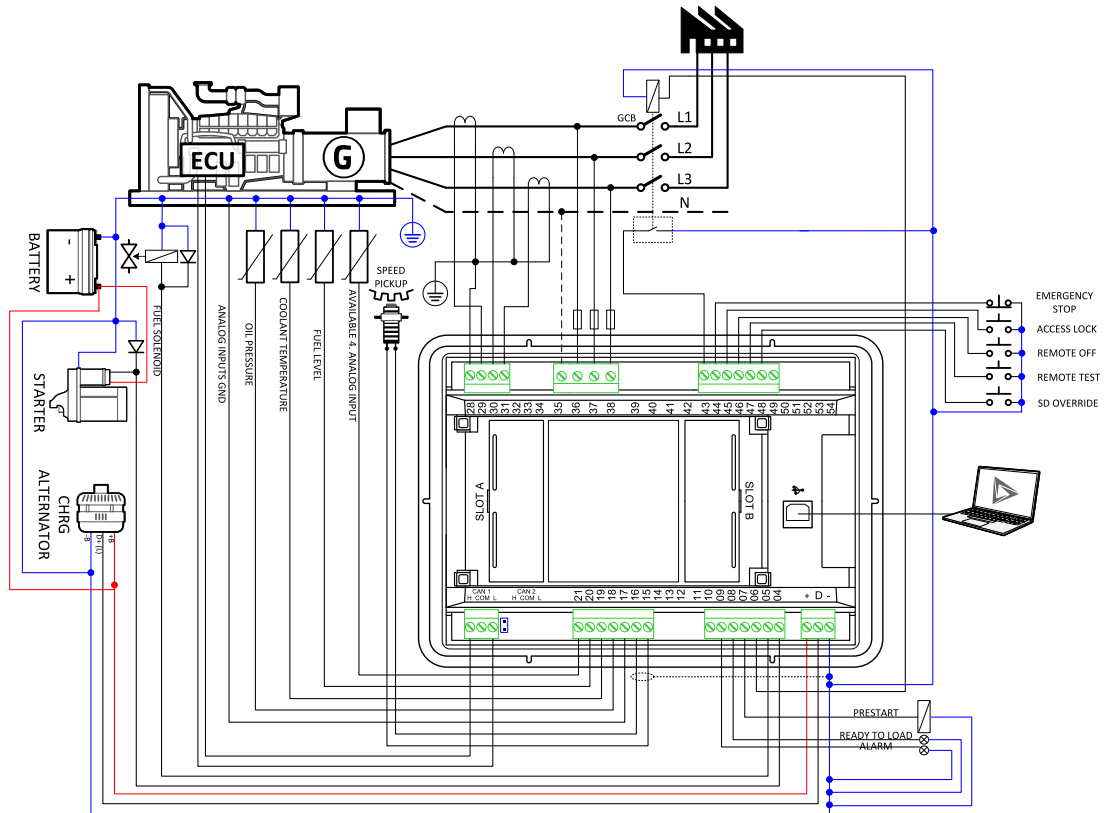


⏪ back to Recommended wiring


4.5 Plug-in module installation

4.5.1 Installation


Remove the back cover. To do this, press four holders which are located in corners.

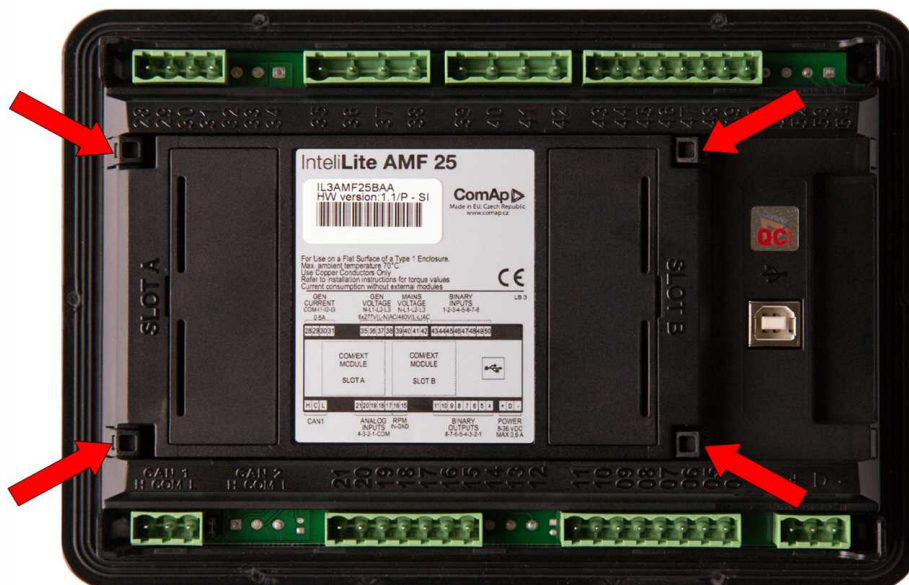

After removing back cover insert the plug-in module. Plug-in module has to be inserted under holders. Start with holders marked by symbol 1. On the controller are also arrows for better navigation. After inserting plug-in module under holders 1 press it down to holders marked by symbol 2 which locks the module.

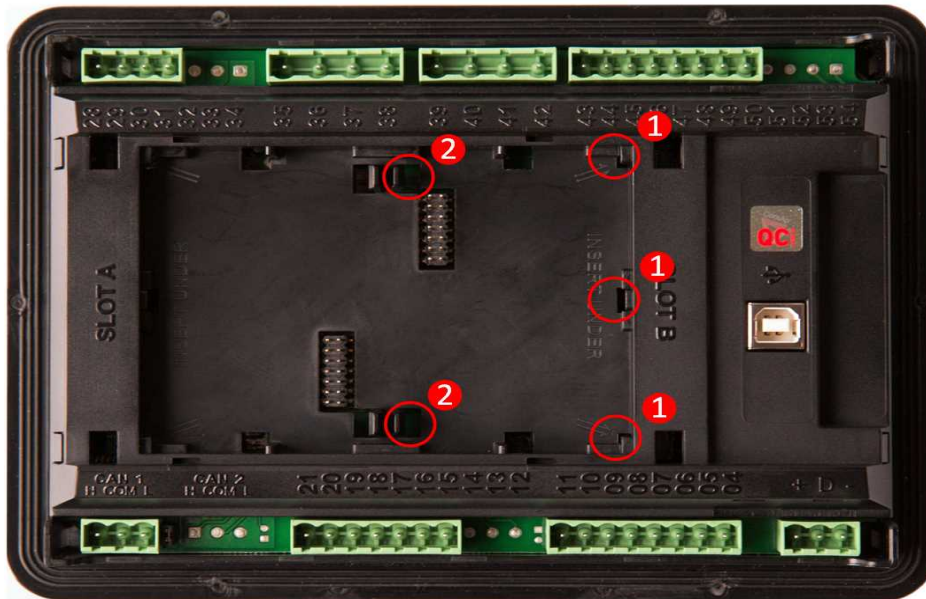

Insert the plug-in module under holders marked by symbol 1.

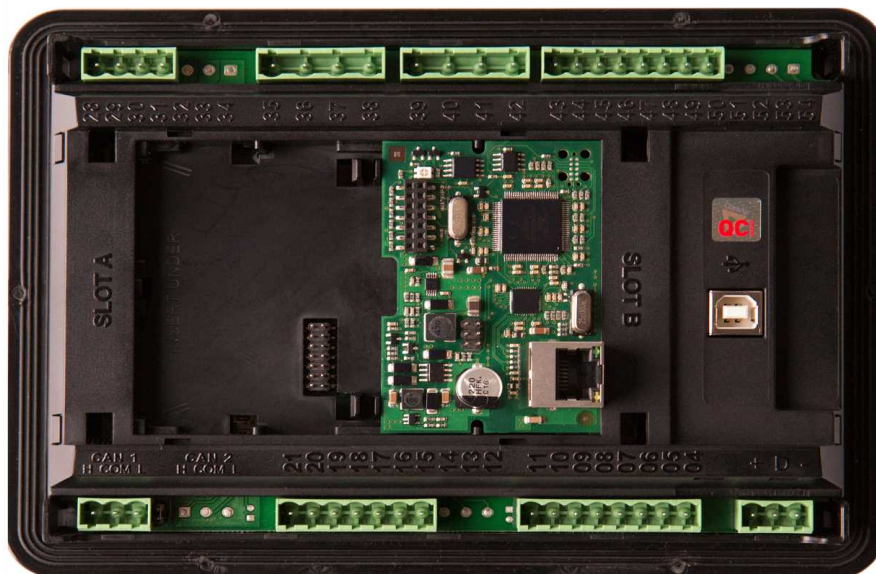

After locking the plug-in module into holders, place back the back cover (small cover for connectors has to be removed from back cover). Finally insert the small cover for connectors. Small covers are unique for each plug-in module.

4.6 Maintenance


4.6.1 Backup battery replacement

The internal backup battery lifetime is approx. 6 years. If replacement of backup batter is needed, follow these instructions:

- ▶ Connect the controller to a PC and save an archive for backup purposes (not necessary but recommended).
- ▶ Disconnect all terminals from the controller and remove the controller from the switchboard.
- ▶ Remove the back cover and all plug-in modules.
- ▶ Release the rear cover using a flat screwdriver or another suitable tool.



- ▶ The battery is located in a holder on the circuit board. Remove the old battery with a small sharp screwdriver and push with a finger the new battery into the holder.

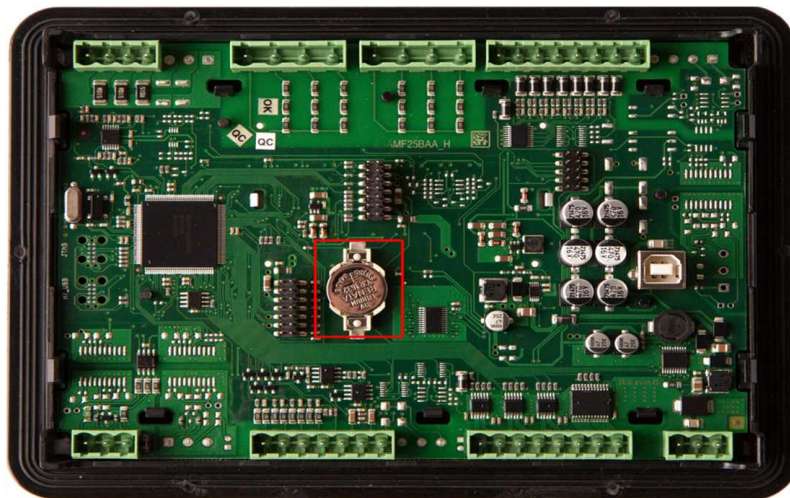

- ▶ Put the rear cover back. Use slight pressure to lock the snaps into the housing. Pay attention that the cover is in correct position and not upside down!
- ▶ Put back the plugin modules and back cover.
- ▶ Power the controller on, adjust date and time and check all setpoints.

🔍 **back to Installation and wiring**

5 Controller setup

5.1 Default configuration	61
5.2 Controller configuration and PC tools connection	62
5.3 Operator Guide	69
5.4 Remote Display	93
5.5 Functions	97

[🔍 back to Table of contents](#)

5.1 Default configuration

5.1.1 Binary inputs

Number	Description	Configured function
BIN1	Generator circuit breaker feedback	GCB FEEDBACK (PAGE 553)
BIN2	Mains circuit breaker feedback	MCB FEEDBACK (PAGE 557)
BIN3	Emergency stop button	EMERGENCY STOP (PAGE 551)
BIN4	Access lock keyswitch	ACCESS LOCK (PAGE 522)
BIN5	Switch controller to OFF mode	REMOTE OFF (PAGE 561)
BIN6	Switch controller to TEST mode	REMOTE TEST (PAGE 562)
BIN7	Suppression of alarms	SD OVERRIDE (PAGE 562)
BIN8	Free slot	NOT USED (PAGE 558)

5.1.2 Binary outputs

Number	Description	Function
BOUT1	Starter motor control	STARTER (PAGE 620)
BOUT2	Fuel solenoid valve	FUEL SOLENOID (PAGE 598)
BOUT3	Indication of breaker state	GCB CLOSE/OPEN (PAGE 600)
BOUT4	Indication of breaker state	MCB CLOSE/OPEN (PAGE 610)
BOUT5	Activation of any devices before start	PRESTART (PAGE 616)
BOUT6	Gen-set can be connected to load	READY TO LOAD (PAGE 618)
BOUT7	Indication of unconfirmed alarm	ALARM (PAGE 579)
BOUT8	Free slot	NOT USED (PAGE 616)

5.1.3 Analog inputs

Number	Configured sensor	Function
AIN1	VDO 10 Bar	OIL PRESSURE (PAGE 657)
AIN2	VDO40-120°C	COOLANT TEMP (PAGE 654)
AIN3	VDOLevel %	FUEL LEVEL (PAGE 655)
AIN4	None	NOT USED (PAGE 656)

5.2 Controller configuration and PC tools connection

5.2.1 USB	62
5.2.2 RS232/RS485	63
5.2.3 Ethernet	64

🔍 back to Controller setup

This chapter contains brief introduction into the specifics of firmware and archive upload and connection of various PC tools to the controller. If you require detailed information on each PC tool please use the included Help in those PC tools or download their Reference Guides.

5.2.1 USB

You may connect to the controller using the USB port. In this case standard USB A to B cable should be used.

Connection using IntelliConfig

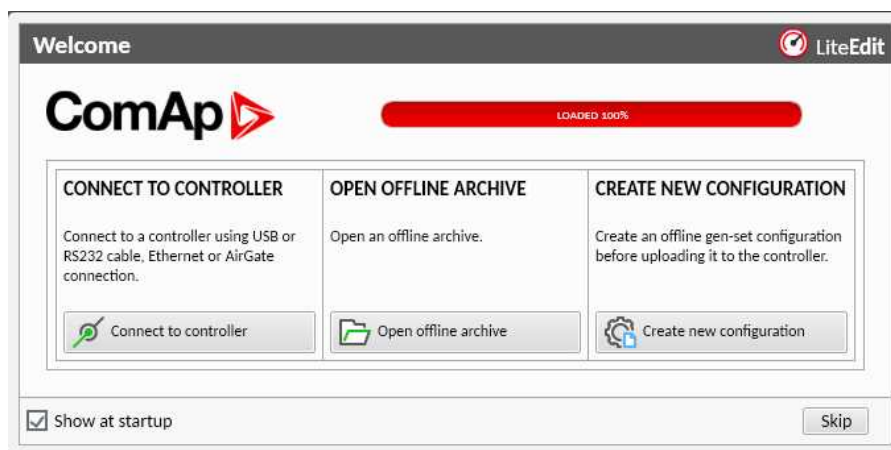


Image 6.1 First screen of IntelliConfig - select connect to controller



Image 6.2 Second screen of IntelliConfig - select detected controllers

Connection using WinScope

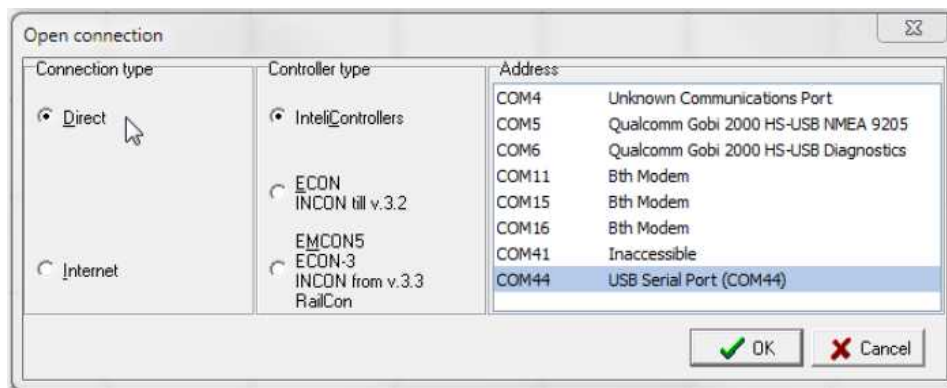


Image 6.3 WinScope screen - select direct connection

5.2.2 RS232/RS485

It is possible to connect to the controller using RS232 or RS485 direct connection (serial port or USB to RS232/RS485 converter may be used). The following settings need to be checked in the controller:

- ▶ **COM1 Mode (page 365) = Direct**
- ▶ has to be set to the same value as in the PC tool

Connection using IntelliConfig

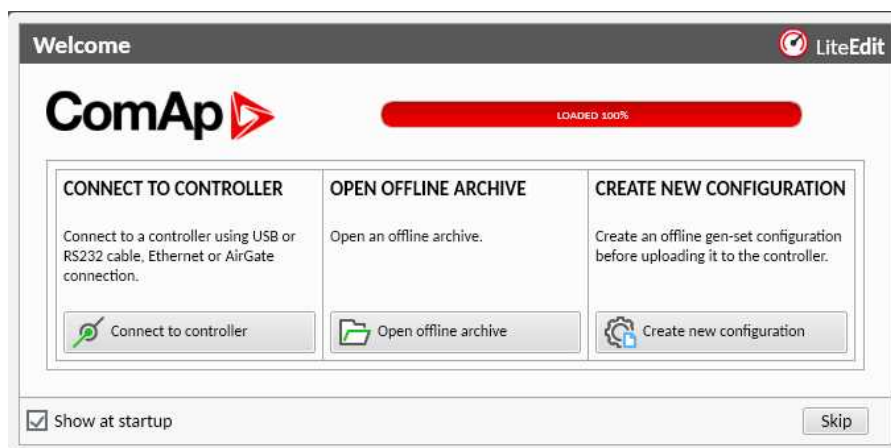


Image 6.4 First screen of IntelliConfig - select connect to controller

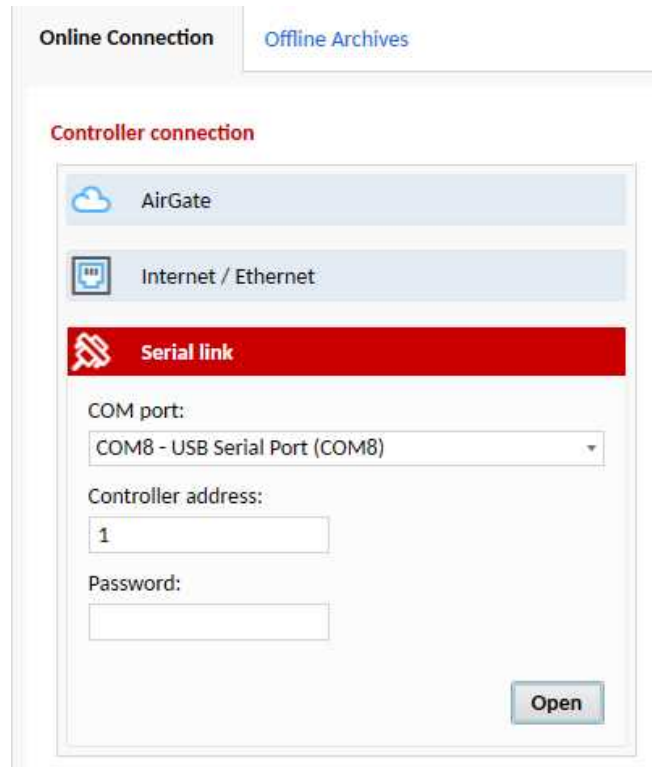


Image 6.5 Second screen of IntelIconfig - select Serial link

Connection using WinScope

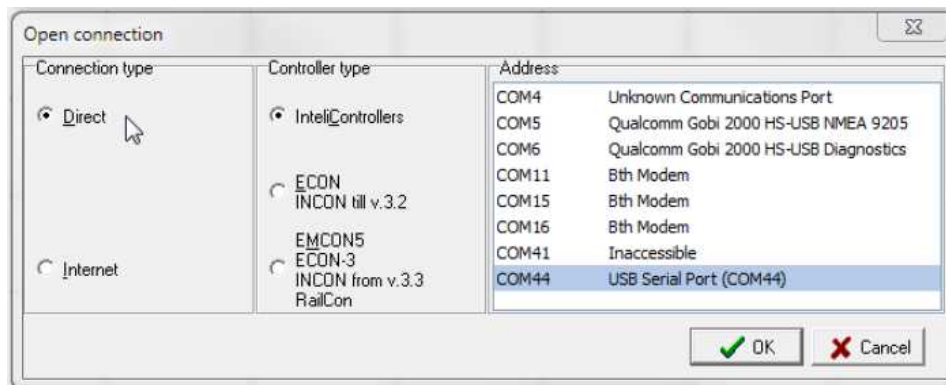


Image 6.6 WinScope screen - select direct connection

Note: Winscope supports only 19200, 38400, 57600 speeds.

5.2.3 Ethernet

It is possible to connect to the controller using ethernet port either directly or using ComAp's AirGate service.

Direct connection

When you use direct connection the controller needs to be reachable directly from the PC you use (i.e. one LAN or WAN without any firewalls and other points that may not allow the connection). The following settings need to be checked in the controller:

- ▶ **Controller Address (page 197)** has to be set to the same value as in the PC tool
- ▶ **IP Address Mode (page 399)** can be set to AUTOMATIC when there is DHCP service is available. Otherwise it needs to be set to FIXED
- ▶ **IP Address (page 399)** is either set automatically or it can be adjusted to a specific requested value
- ▶ **Subnet Mask (page 400)** is either set automatically or it can be adjusted to a specific requested
- ▶ **Gateway IP (page 400)** can be set here when it is used
- ▶ **ComAp TCP Port (page 405)** number is 23. Make sure that this port is open for communication in your network

Connection using IntelliConfig

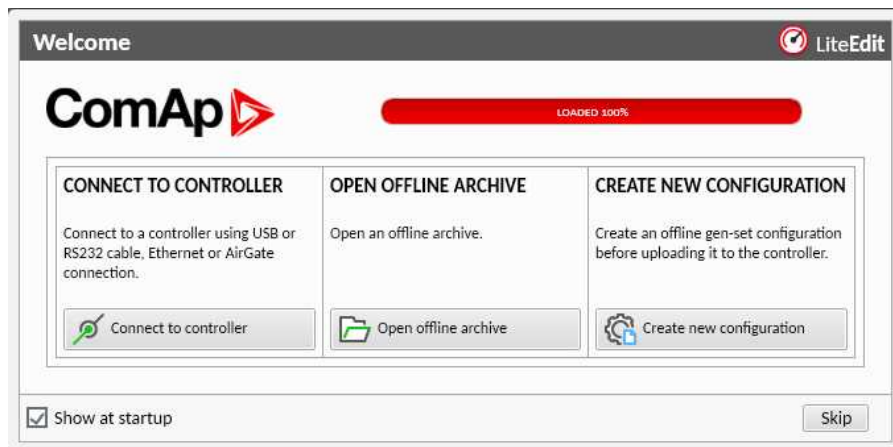


Image 6.7 First screen of IntelliConfig - select connect to controller

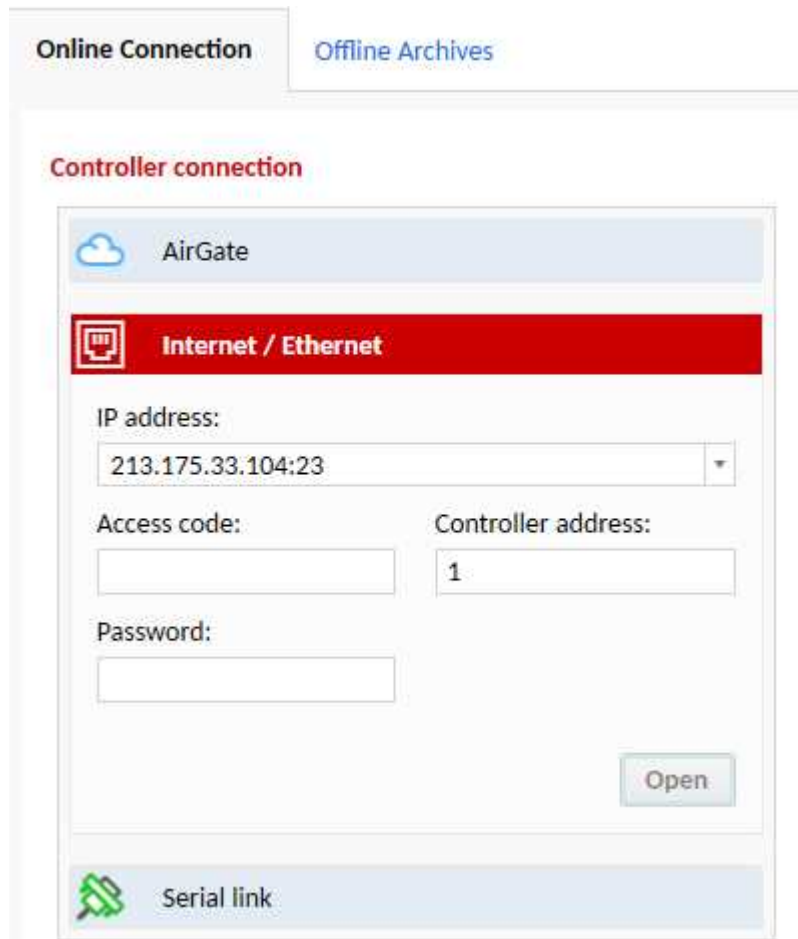


Image 6.8 Second screen of IntelIconfig - select Internet/Ethernet

Connection using WinScope

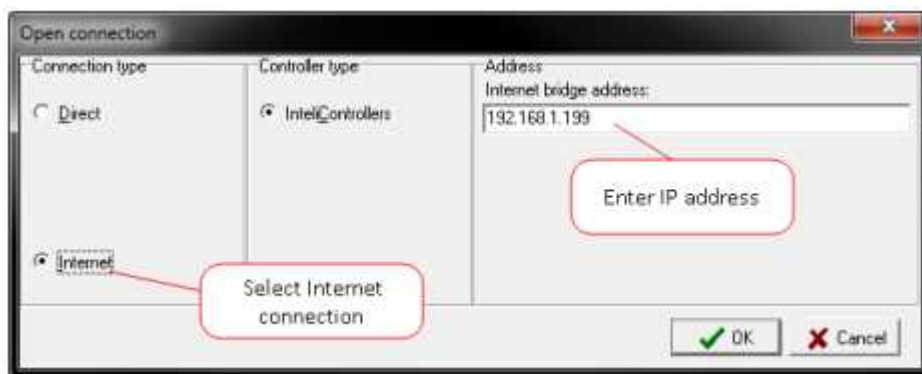


Image 6.9 WinScope screen

AirGate connection

You can use ComAp's AirGate service that allows you to connect to any controller via internet no matter what are the restrictions of the local network (if the controller can connect to the internet AirGate service will work). The following setpoints have to be adjusted:

- ▶ **Controller Address (page 197)** has to be set to the same value as in the PC tool
- ▶ **IP Address Mode (page 399)** can be set to AUTOMATIC when there is DHCP service is available. Otherwise it needs to be set to FIXED
- ▶ **IP Address (page 399)** is either set automatically or it can be adjusted to a specific requested value
- ▶ **Subnet Mask (page 400)** is either set automatically or it can be adjusted to a specific requested
- ▶ **Gateway IP (page 400)** can be set here when it is used
- ▶ **AirGate Connection (page 404)** has to be set to Enabled
- ▶ **AirGate Address (page 405)** currently there is one AirGate server running at URL airgate.comap.cz (enter this URL into the setpoint)

Connection using IntelliConfig

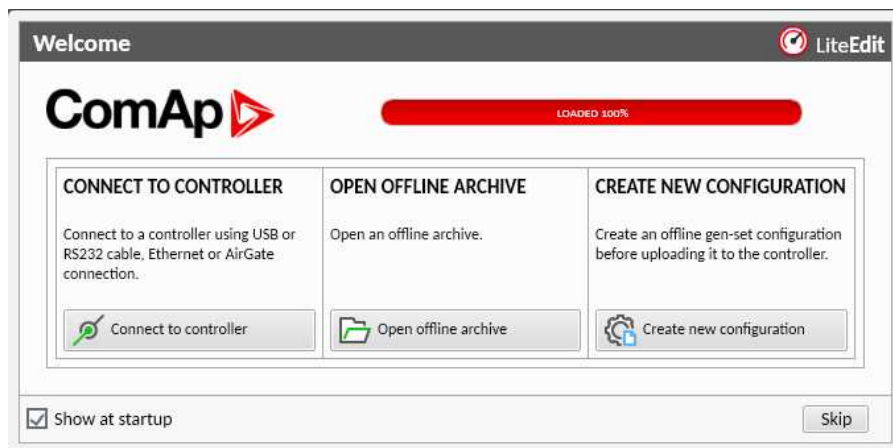


Image 6.10 First screen of IntelliConfig - select connect to controller



Image 6.11 Second screen of IntelIconfig - select AirGate

Connection using WinScope

WinScope doesn't support connection via AirGate.

5.3 Operator Guide

- 5.3.1 Front panel elements 69
- 5.3.2 Display screens and pages structure 71
- 5.3.3 Browsing alarms 84
- 5.3.4 Password 85
- 5.3.5 Information screen 91
- 5.3.6 Language selection 92
- 5.3.7 Display contrast adjustment 93

5.3.1 Front panel elements

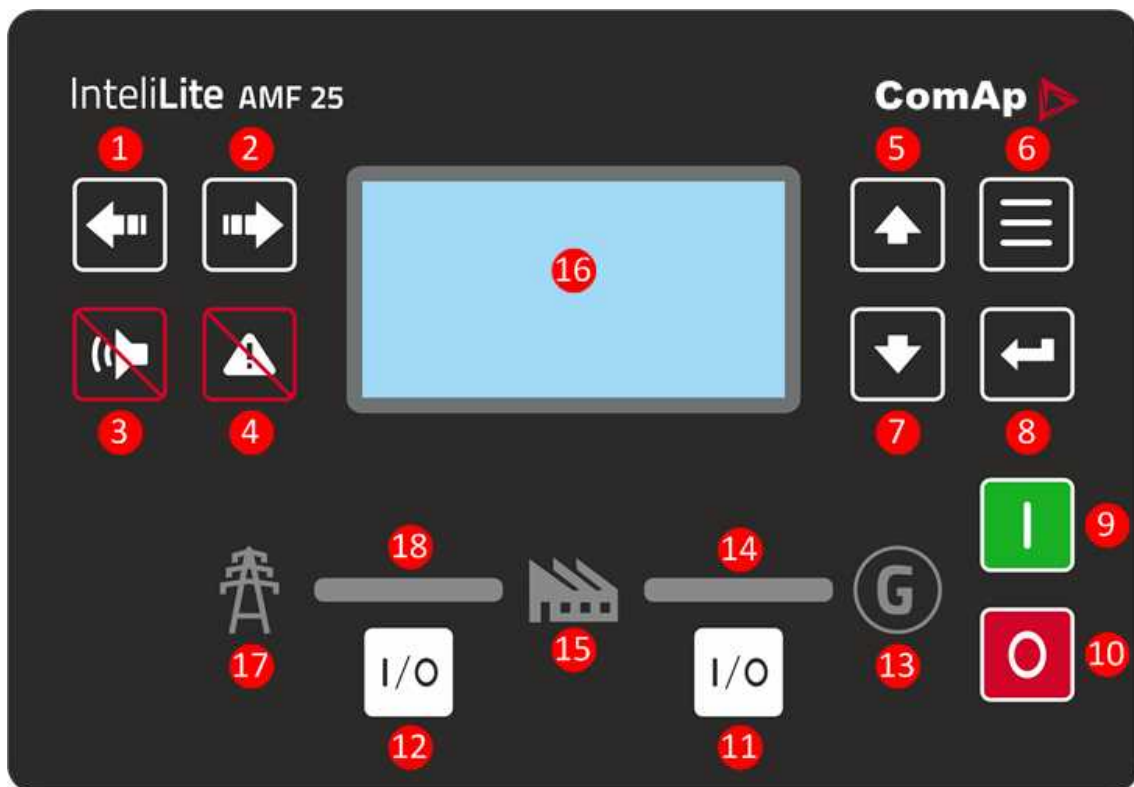














Image 6.12 Operator interface of AMF25

Control buttons		
Position	Picture	Description
1		LEFT button. Use this button to move left or to change the mode. The button can change the mode only if the main screen with the indicator of currently selected mode is displayed. <i>Note: This button will not change the mode if the controller mode is forced by one of binary inputs listed in the Reference Guide – “Operating modes” chapter.</i>
2		RIGHT button. Use this button to move right or to change the mode. The button can change the mode only if the main screen with the indicator of currently selected mode is displayed.

		<i>Note: This button will not change the mode if the controller mode is forced by one of binary inputs listed in the Reference Guide – “Operating modes” chapter.</i>
3		HORN RESET button. Use this button to deactivate the horn output without acknowledging the alarms.
4		FAULT RESET button. Use this button to acknowledge alarms and deactivate the horn output. Inactive alarms will disappear immediately and status of active alarms will be changed to "confirmed" so they will disappear as soon as their reasons dismiss.
5		UP button. Use this button to move up or increase value.
6		PAGE button. Use this button to switch over display pages.
7		DOWN button. Use this button to move down or decrease value.
8		ENTER button. Use this button to finish editing a setpoint or moving right in the history page.
9		START button. Works in MAN mode only. Press this button to initiate the start sequence of the engine.
10		STOP button. Works in MAN mode only. Press this button to initiate the stop sequence of the gen-set. Repeated pressing of button will cancel current phase of stop sequence (like cooling) and next phase will continue.
11		GCB button. Works in MAN and TEST modes only. Press this button to open or close the GCB.
12		MCB button. Works in MAN and TEST modes only. Press this button to open or close the MCB.
Indicators and others		
Position	Description	
13	GENERATOR status indicator. There are two states - Gen-set OK (indicator is green) and Gen-set failure (indicator is red). Green LED is on if the generator voltage is present and within limits. Red LED starts flashing when gen-set failure occurs. After FAULT RESET button is pressed, goes to steady light (if an alarm is still active) or is off (if no alarm is active).	
14	GCB ON . Green LEDs are on if GCB is closed and Gen-set is healthy. If Gen-set is not healthy and GCB is closed than middle LED is on. It is driven by GCB CLOSE/OPEN output or by GCB feedback signal.	
15	LOAD . Green LED is ON if load is supplied by mains or by generator. It means, that Gen-set or mains is OK and proper circuit breaker is closed.	


16	Graphic B/W display, 132x64 pixels.
17	MAINS status indicator. There are two states - Mains OK (indicator is green) and Mains failure (indicator is red). Green LED is on, if mains is present and within limits. Red LED starts blinking when the mains failure is detected and after the gen-set has started and connected to the load it lights permanently until the mains failure disappears.
18	MCB ON . Green LEDs are on if MCB is closed and Mains is healthy. If Mains is not healthy and MCB is closed than middle LED is on. It is driven by MCB CLOSE/OPEN output or by MCB feedback signal.

5.3.2 Display screens and pages structure

The displayed information is structured into "pages" and "screens". Use PAGE button to switch over the pages.

- ▶ The page Measurement consists of screens which display measured values like voltages, current, oil pressure etc., computed values like i.e. gen-set power, statistic data and the alarm list on the last screen.
- ▶ The page Setpoints contains all setpoints organized to groups and also a special group for entering password.
- ▶ The page History log shows the history log in the order that the last record is displayed first.



Main Screen

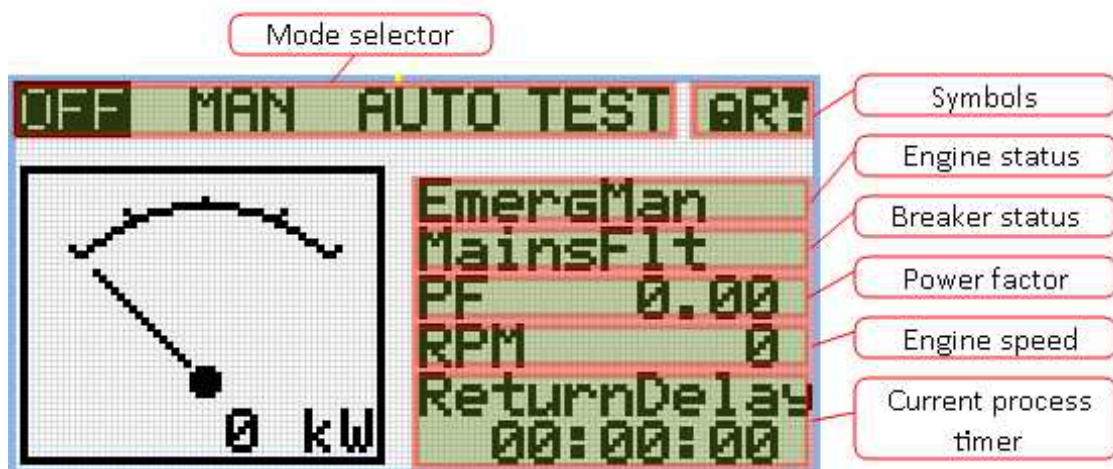



Symbols

- ▶ Padlock - active when LBI ACCESS LOCK is active
- ▶ R - active when there is active remote connection to controller
- ▶ Exclamation mark - active when there is any alarm in alarmlist

Measurement Screens

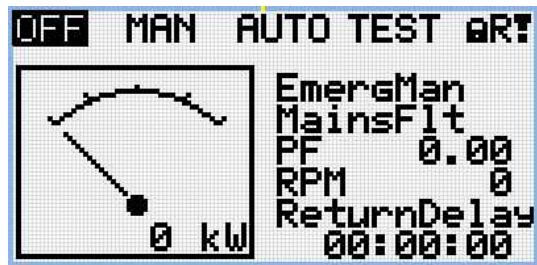


Note: Use Up and Down button to move between measurement pages.

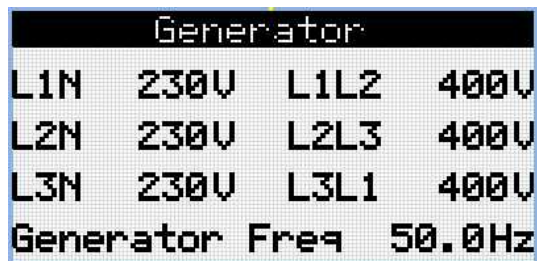

Note: Use Up and Down button to move between measurement pages.




Note: Use Up and Down button to move between measurement pages.

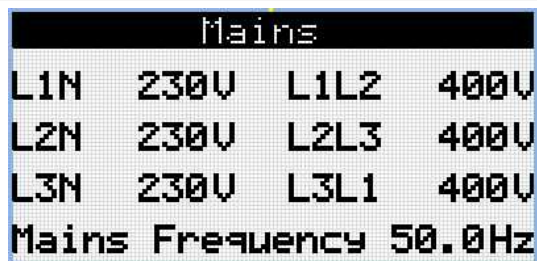

Note: Use Up and Down button to move between measurement pages.

```


Analog Inputs 1/2
Oil Pressure #####Bar
:
Coolant Temp ##### °C
:
Fuel Level #####%
:
    
```



Note: Use Up and Down button to move between measurement pages.

```

Analog Inputs 2/2
Not Used
:
BatteryVoltage 23.8V
:
    
```



Note: Use Up and Down button to move between measurement pages.

```

Binary Inputs 1/2
0000000
1 Input 0
2 Input 0
3 Input 0
4 Input 0
5 Input 0
    
```



Note: Use Up and Down button to move between measurement pages.

```


Binary Inputs 2/2
0000000
6 Input 0
7 Input 0
8 Input 0
    
```



Note: Use Up and Down button to move between measurement pages.


```

Binary Outputs 1/2
00000000
1 Output      0
2 Output      0
3 Output      0
4 Output      0
5 Output      0
    
```



Note: Use Up and Down button to move between measurement pages.

```


Binary Outputs 2/2
00000000
6 Output      0
7 Output      0
8 Output      0
    
```



Note: Use Up and Down button to move between measurement pages.

```

EM-BIOS-EFCP 1/2
00101010
Earth Fault  0.00A
-----
IN:  Input      1
     Not Used    0
OUT: Output     1
    
```



Note: Use Up and Down button to move between measurement pages.


```

EM-BIOS-EFCP 2/2
00101010
IN:  Input      0
OUT: Output     1
OUT: Output     0
OUT: Output     1
OUT: Output     0
    
```



Note: Use Up and Down button to move between measurement pages.

Gen-Set Power			
	kW	PF	kVA
L1	0	0.000	0
L2	0	0.000	0
L3	0	0.000	0
Σ	0	0.000	0

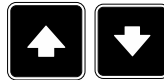

Note: Use Up and Down button to move between measurement pages.

ECU Values	
Fuel Rate	#####l/h
CoolantTemp	#####°C
IntakeTemp	#####°C
Oil Press	#####bar
Boost Press	#####bar
Load	#####%



Note: Use Up and Down button to move between measurement pages.

Statistics 1/3	
Genset kWh	0
Genset kVarh	0
Mains kWh	0
Mains kVarh	0
Run Hours	0
Num Starts	0




Note: Use Up and Down button to move between measurement pages.

Statistics 2/3	
Num E-Stops	0
Shutdowns	0
Maintenance 1	0
Maintenance 2	0
Maintenance 3	0
Rental Timer 1	0



Note: Use Up and Down button to move between measurement pages.

Statistics		3/3
Rental Timer 2		000
Ex. Timer 1	00:00:00	
Ex. Timer 2	00:00:00	



Note: Use Up and Down button to move between measurement pages.

CM-4G-GPS		1/2
Cell Signal Lev		93%
Cell ErrorRate		12%
Cell Status		/
Cell Diag Code		12
Operator	T-Mobile	CZ
Connection Type		4G



Note: Use Up and Down button to move between measurement pages.

CM-4G-GPS		2/2
Latitude		0.1234
Longitude		0.1234
Altitude		123m
HomePosDist		123km
Satelites		1



Note: Use Up and Down button to move between measurement pages.


CM-GPRS		
Cell Signal Lev		93%
Cell ErrorRate		12%
Cell Status		/
Cell Diag Code		12
Operator	T-Mobile	CZ



Note: Use Up and Down button to move between measurement pages.

```


CM-Ethernet
Current IP Address
    123.123.123.123
ETH Interface Status
    Connected
    
```



Note: Use Up and Down button to move between measurement pages.

```









AirGate
CM-4G-GPS
AirGate ID: ABABCABCAB
AirGate Diag: 0
CM-Ethernet
AirGate ID: ABABCABCAB
AirGate Diag: 0
    
```




Note: Use Up and Down button to move between measurement pages.
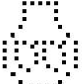
```

Aftertreatment
    
```




Note: Use Up and Down button to move between measurement pages.

```

Plug-in Modules
Slot A:Disabled
Module
Slot B:Disabled
Module
    
```



Note: Use Up and Down button to move between measurement pages.




Note: Use Up and Down button to move between measurement pages.


Note: From all of these pages it is possible to switch seamlessly to the setpoint group page by pressing Page button.

Note: There can be some additional screens and also some screens can be hidden. Screen's visibility depends on actual configuration (usage of extension or communication modules, ECU, etc.).

Setpoint Screens

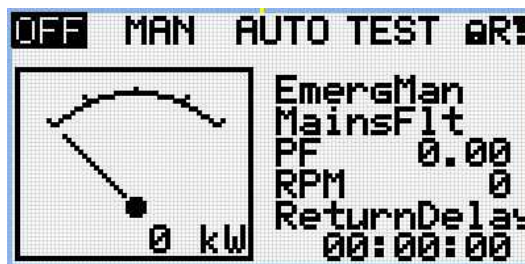


Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

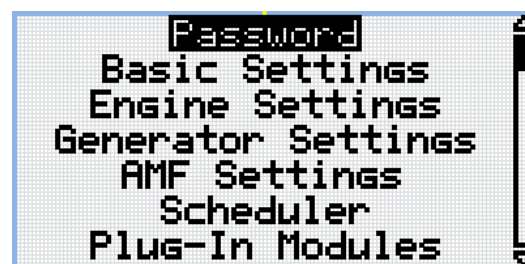

Note: Use Up and Down button to select required setpoint group.




Note: Use Enter button to enter selected setpoint group.

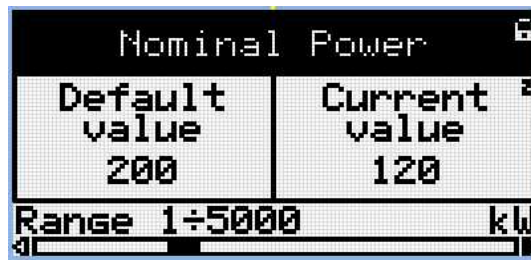

Note: Use Left and Right button to select required setpoint.



Note: Use Enter button to enter selected setpoint.

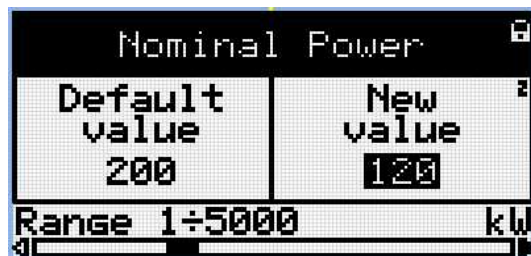

Note: Use Up and Down button to set required value of selected setpoint.




Note: Use Enter button to confirm adjusted value of setpoint.




Note: Use Page button to discard changes, to set setpoint to previous value and to return to the list of setpoints of selected group.

IMPORTANT: Cannot change setpoint? Setpoints marked with an padlock are password protected. Enter password as described in the chapter Password (page 85).

History Log

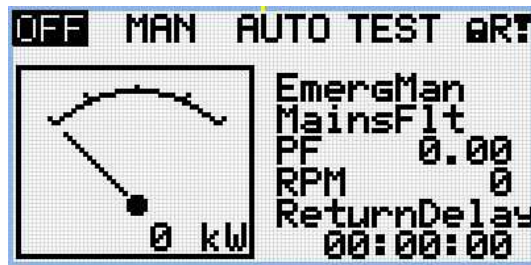

Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

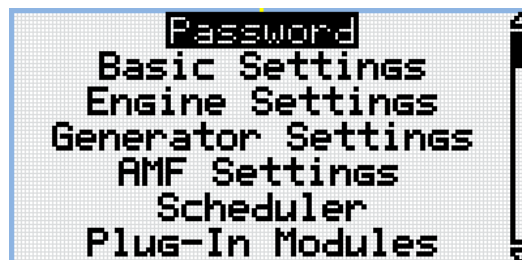


Note: From setpoint group page we can fluently go to the history log pages by pressing Page button.



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

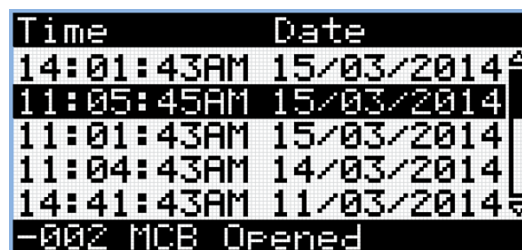

Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

RPM	Pwr	Q
1500	15.0	15.0
0	0.0	0.0
0	0.0	0.0
1500	15.0	15.0
1500	15.0	15.0
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

PF	LChr	GFra
0.75	C	50.0
0.00	C	0.0
0.00	C	0.0
0.73	C	50.0
0.74	C	50.0
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Ug1	Ug2	Ug3
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Ug12	Ug23	Ug31
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230
-002 MCB Opened		




Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

IL1	IL2	IL3
30	30	30
0	0	0
0	0	0
30	30	30
30	30	30

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Um1	Um2	Um3
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Um12	Um23	Um31
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

FC	FMI
0	0
0	0
0	0
0	0
0	0

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

MFrq	UBat	OilP
50.0	23.2	3.2
0.0	0.0	0.0
0.0	23.2	0.0
50.0	23.3	3.2
50.0	23.3	3.2



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

EngT	FLvl	Ain4
30.0	50	00.0
22.0	20	00.0
23.0	30	00.0
23.0	30	00.0
23.0	50	00.0



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

BIN	BOUT
01101000	11000011
11001001	01001010
01010100	01010100
11010000	01101000
11000011	01010100



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Mode
MAN
MAN
MAN
MAN
MAN



Note: Use Up and Down button to select required alarm reason.




Note: Use Enter button to move to the first page of history log.


IMPORTANT: The records are numbered in reverse order, i.e. the latest (newest) record is "0" and older records have "-1", "-2" etc.

Note: This is only basic history record. There can be some additional screens in case that in controller is extension module or ECU is configured. Also it depends on connection type.

5.3.3 Browsing alarms

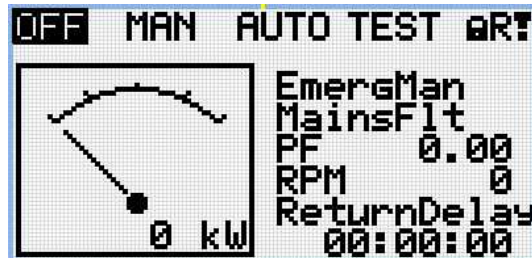

Note: Use Up button to move to alarmlist from main measurement screen.

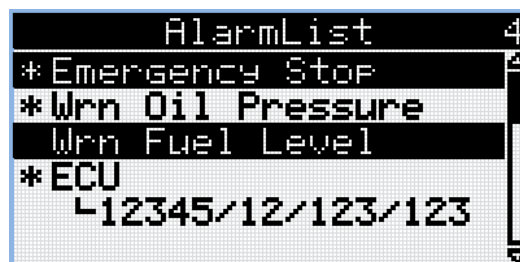


- ▶ Active alarms are displayed as white text on black background. It means the alarm is still active, i.e. the appropriate alarm conditions are still present.
- ▶ Inactive alarms are displayed as black text on white background. It means the alarm is no more active, i.e. the appropriate alarm conditions are gone.
- ▶ Not confirmed alarms are displayed with an asterisk. It means the alarm is still not acknowledged (confirmed).
- ▶ ECU alarms: SPN/FMI/OC/SC
 - SPN - Suspect parameter number
 - FMI - type of protection
 - OC - number of errors
 - SC - source of error




5.3.4 Password

Enter password

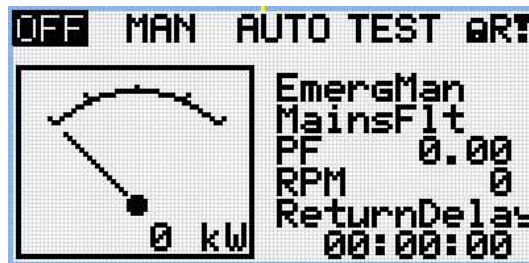


Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

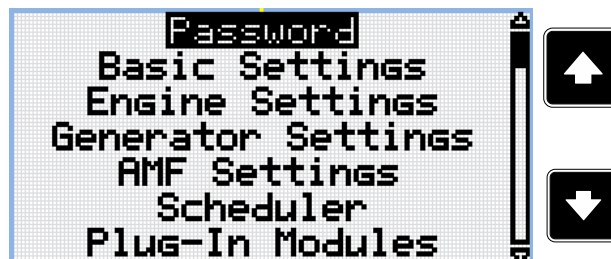

Note: Use Up and Down button to select setpoint group Password.



Note: Use Enter button to enter setpoint group Password.

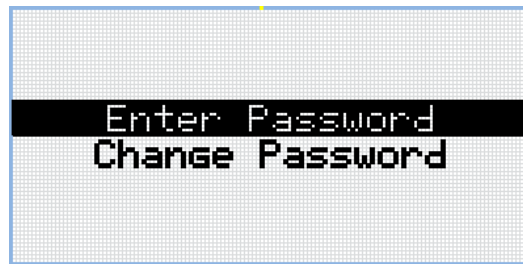

Note: Use Up and Down button to select Enter Password.



Note: Use Enter button to enter selected setpoint.



Note: Use Up and Down button to set required value of selected setpoint.



Note: Use Left and Right button to move between digits.




Note: Use Enter button to confirm the password or Page button to cancel entering the password.




Note: In case that invalid password is entered, the controller shows Invalid password screen. Use Page button to go back to menu.

Change password

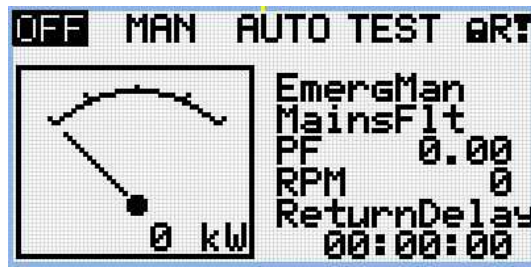

Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

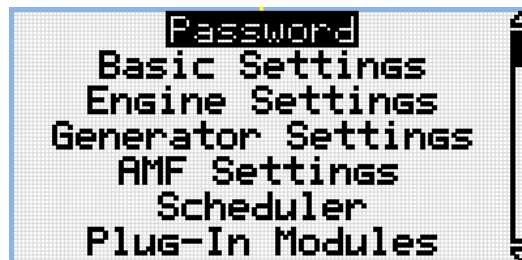

Note: Use Up and Down button to select setpoint group Password.




Note: Use Enter button to enter setpoint group Password.



Note: Use Up and Down button to select Change Password.



Note: Use Enter button to enter selected setpoint.

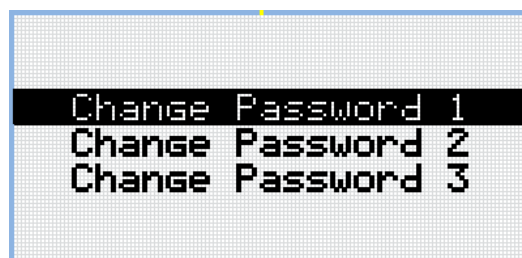

Note: Use Up and Down button to select required level of password.



Note: Use Enter button to enter selected setpoint.



Note: Use Up and Down button to set required value of password.




Note: Use Left and Right button to move between digits.



Note: After setting new password use Enter button to confirm adjusted password.



Note: Use Up and Down button to set required value of password again.



Note: Use Left and Right button to move between digits.




Note: After setting new password again use Enter button to confirm adjusted password or Page button to discard changes and to cancel changing password.




Note: Before changing the password controller has to be unlocked. In case that controller is locked, the controller shows Password required screen. In that case the password has to be entered before changing the password.

Log out from controller

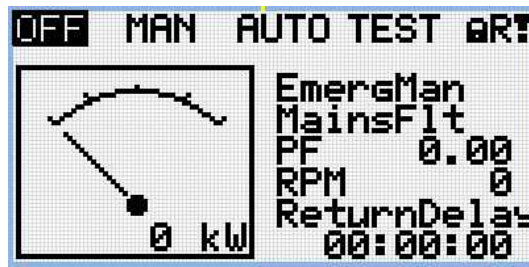


Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

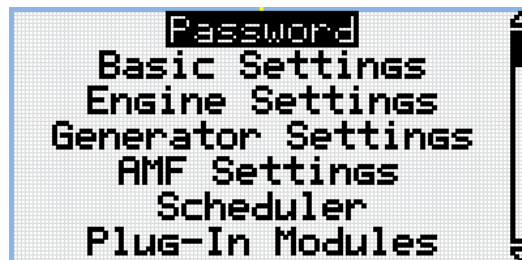

Note: Use Up and Down button to select setpoint group Password.



Note: Use Enter button to enter setpoint group Password.

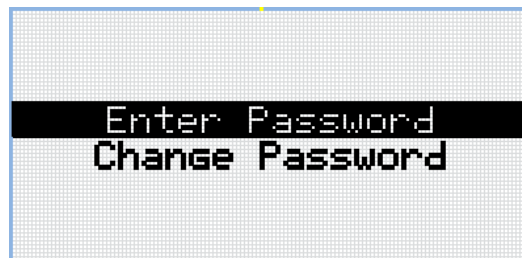

Note: Use Up and Down button to select Enter Password.



Note: Use Enter button to enter selected setpoint.



Note: Use Left and Right button to move between digits.

Note: Enter invalid password to log out from controller.



Note: In case that invalid password is entered, the controller shows Invalid password screen. Use Page button to go back to menu.

Lost Password


IMPORTANT: Display the information screen containing the serial number and password decode number as described in the chapter Information screen (page 91) and send them to your local distributor.

Password break protection


The controller password is protected against breaking by brute force. The protection works at every controller interface separately.

1. When an invalid password is entered 5 times after each other, independently on the time period elapsed between the attempts, the controller will be blocked after the 5th unsuccessful attempt for 1 minute at the particular interface.
2. While the controller is blocked it refuses any further attempts to enter password.
3. When unblocked again the controller accepts one attempt to enter password. If the password is incorrect again the controller will be blocked for 2 minutes.
4. Each further attempt to enter invalid password will double the blocking time, but maximum blocking time is 20 minutes.
5. When incorrect password is entered 100-times after each other the controller is blocked forever and the password reset procedure is required to unblock it.

5.3.5 Information screen

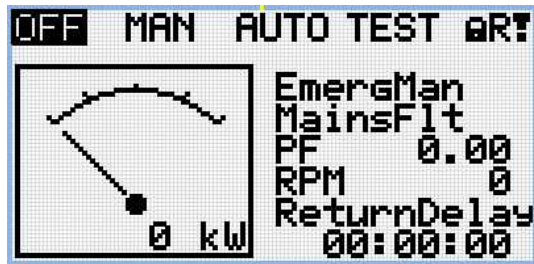


Note: On Main measurement screen press Enter and Page button together. Enter button has to be pressed first.

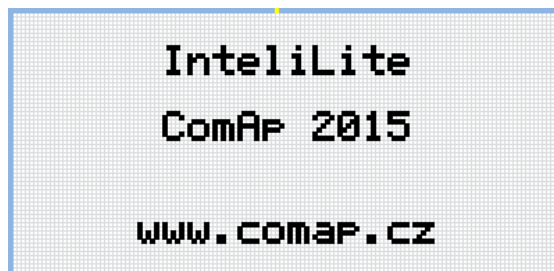

Note: Use Page button to move to the next page.




Note: Use Page button to move to the next page.

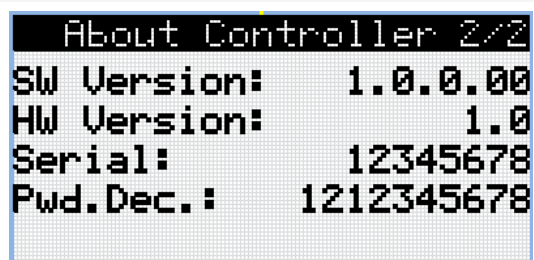


Note: Use Up button to move back to main measurement screen.

5.3.6 Language selection

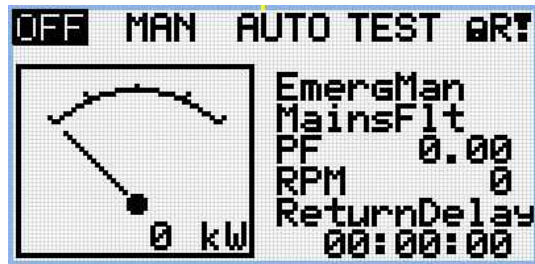


Note: On Main measurement screen press Enter and Page button together. Enter button has to be pressed first.

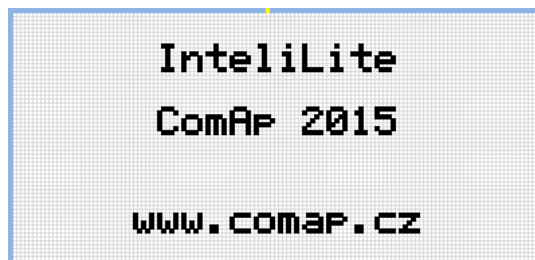

Note: Use Page button to move to the next page.



Note: Use Page button to move to the next page.

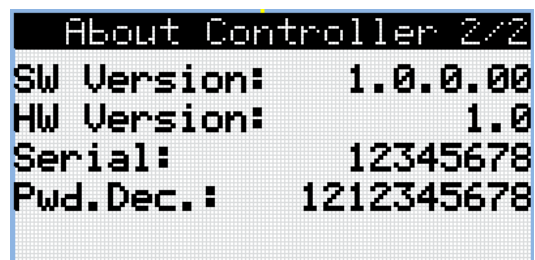

Note: Use Page button to move to the next page.




Note: Use Up and down button to select required language.





Note: Use Enter button to confirm selected language.

5.3.7 Display contrast adjustment

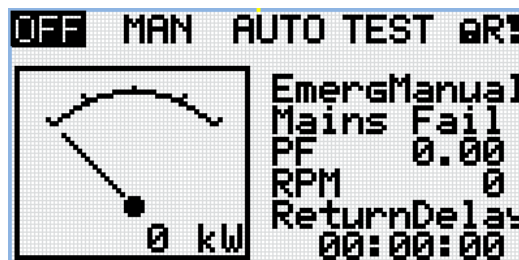

Note: On any measurement screen press Enter and Down button together for lower contrast.

Note: On any measurement screen press Enter and Up button together for higher contrast.

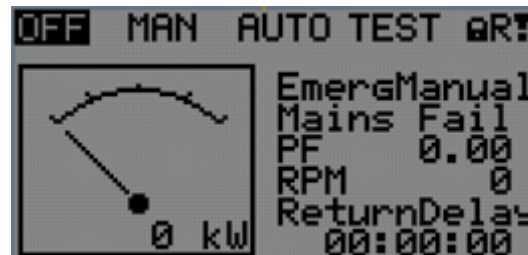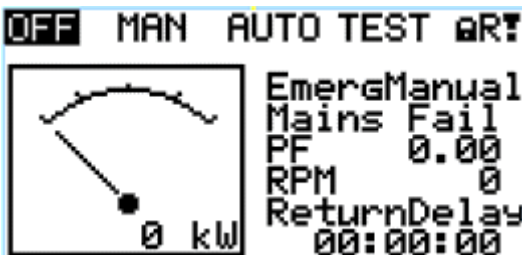

Note: After setting a contrast, no another action is needed.

 back to Controller setup

5.4 Remote Display

This chapter describes Remote display firmware IL3-RD, which is designed as a remote signaling and control software for IntelliLite family controllers. It is the optional software which is possible to upload into controller instead of standard controller's firmware.


5.4.1 General description

Remote display software works as “remote display and control” for the Master IntelliLite family controller. Gen-set can be controlled using Remote display and Master controller simultaneously and independently. All Remote display screens (Measurement screens, Setpoint screens and History Log) displays the same data as Master controller. Front panel buttons on both controllers work the same way. All remote display LEDs shows the same state as corresponding LEDs on Master controller.

5.4.2 IL3-RD Firmware installation

The IL3-RD Remote display firmware is installed in the same way as any other IntelliLite firmware using IntelliConfig PC tool. Reverting Remote display controller back to regular gen-set controller is carried out the same way.

Note: IntelliConfig shows the most compatible and the most recent firmware as default option. Thus, it is necessary use “More options” (...) button to pick IL3-RD firmware for uploading to controller. (See details on picture below.)

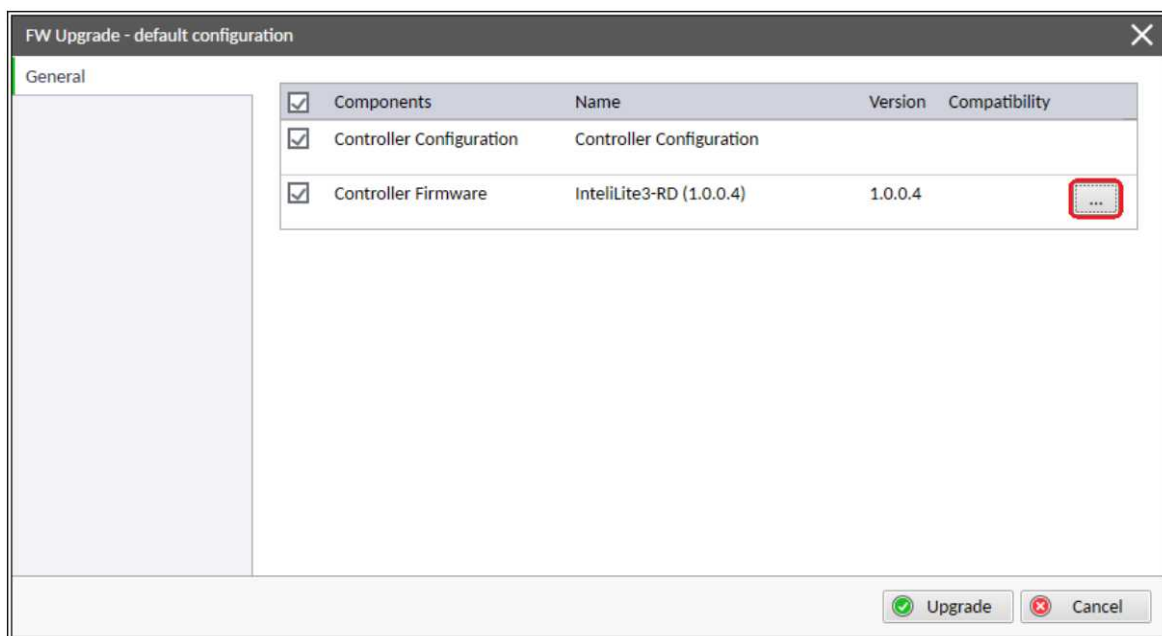

Note: IL3-RD consists firmware only, there is no archive included.

Note: When IL3-RD firmware is uploaded to controller there is only possible connect IntelliConfig using USB connection. IntelliConfig serves only for firmware update when connected to Remote display. There is no Master controller SCADA displayed, no possibility to adjust Setpoints, display Values etc.


Note: Please refer to IntelliConfig Global Guide for details about firmware uploading to controller.

5.4.3 Wiring

IL3-RD can be connected to IntelliLite family controller via external RS232 or RS485 communication line on CM-232-485 communication module. It is possible to connect only up to two Remote displays to one Master controller, if they are using different communication COMs. To connect two or more remote displays to one communication line (e.g. RS485) is not possible. Using one Remote display it is possible to monitor only one Master controller at the time.

5.4.4 Interconnection variants

RS232

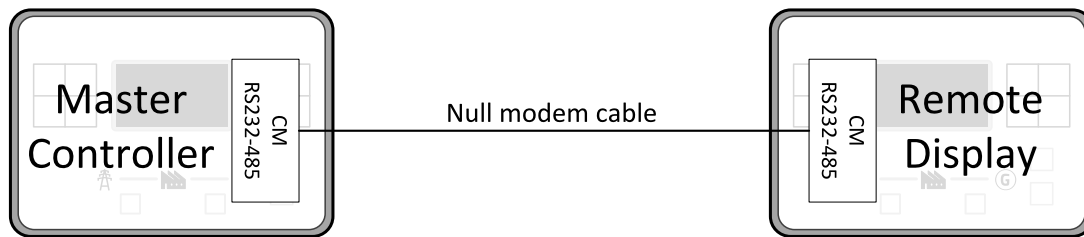


It is necessary to use CM-RS232-485 communication module on both Master controller and Remote display. COM 1 communication channel is used with these settings:

- ▶ COM 1 Mode: Direct
- ▶ COM 1 Communication Speed: 57600 or 115200 bps
- ▶ Controller Address: 1 – 32

The maximal distance between Master controller and Remote display is 10 m for RS-232 connection. It is recommended to use standard Null modem cable (crossover cable), although three wires (TxD, RxD, GND) RS-232 connection is enough for communication.

RS485

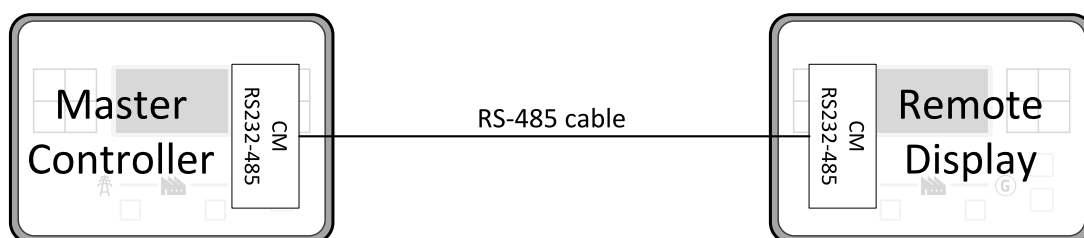


It is necessary to use CM-RS232-485 communication module on both Master controller and Remote display. COM 2 communication channel is used with these settings:

- ▶ COM 2 Mode: Direct
- ▶ COM 2 Communication Speed: 57600 or 115200 bps
- ▶ Controller Address: 1 – 32

The maximal distance between Master controller and Remote display is 1200 m for RS-485 connection. It is recommended to use shielded twisted-pair cables that comply with the EIA RS-485 standard to reduce interference and to achieve maximal distance.

RS232 + RS485

It is possible to combine two previous ways of interconnection and connect two Remote display to one Master controller concurrently. All the parameters and settings are the same as mentioned above.

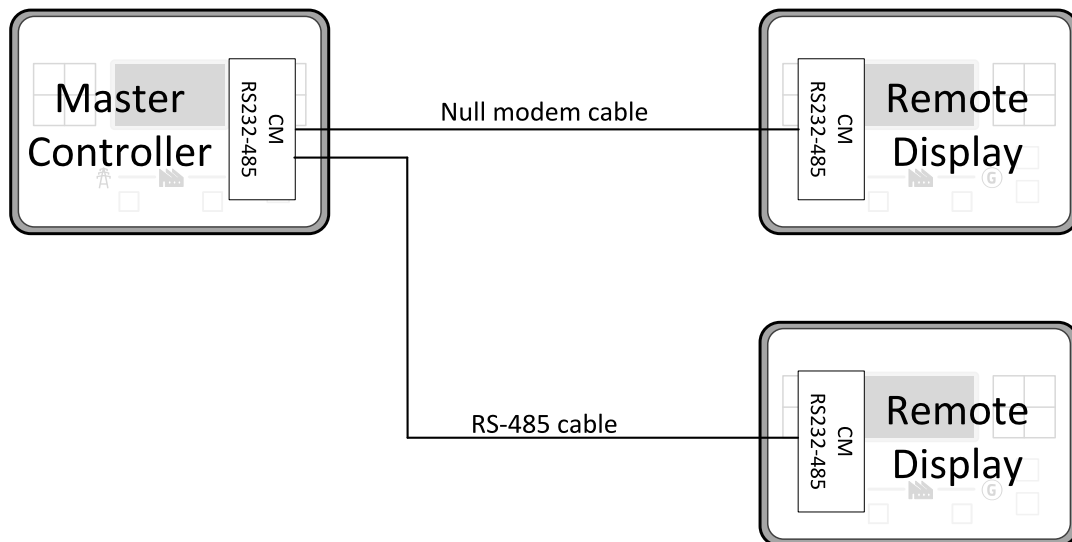

5.4.5 Connection process

Remote display after power on automatically tries connect to last known Master (if such configuration exist in Remote display). Otherwise Remote display starts to search for any Master controller connected. It starts to search on COM 2 (RS-485) using Master controller address 1 – 32 and continues with COM 1 (RS-232). Remote display tries two communication speeds 57600 bps and 115200 bps.

During this autodetection process the message “Trying to connect” is displayed on screen. This process takes approx. one minute.

When incompatible configuration type is found in detected controller, the message “Unknown cfg format COM x Addr yy” is displayed on screen for 5 seconds and detecting continues with next address in the range.

When detecting finishes with no compatible Master controller found, the message “No connection” is displayed on screen for 5 seconds and detecting process starts from the beginning and continues until compatible master controller is found.

Not supported types of controllers or controllers that are not properly communicating are skipped during the search.

5.4.6 Connection troubleshooting

There are few reasons why Remote display cannot connect to Master controller:

- ▶ Not supported type of Master controller is connected.
- ▶ Not supported firmware in Master controller.
- ▶ Configuration table error in Master controller.
- ▶ Wrong settings of setpoint COM x Mode in master controller.
- ▶ Wrong settings of setpoint COM x Communication Speed in master controller.
- ▶ Wrong connection, wiring, communication fail.

5.4.7 Function description

Remote display software works as “remote display and control” for the Master IntelliLite family controller. Gen-set can be controlled using Remote display and Master controller simultaneously and independently. All Remote display screens (Information screens, Measurement screens, Setpoint screens and History Log) displays the same data as Master controller. Front panel buttons on both controllers work the same way. All

remote display LEDs shows the same state as corresponding LEDs on Master controller. User can switch screens, enter or set password, adjust setpoints, change language, change Configuration Level, change display contrast and view history records.

Note: It is recommended to use the same type and model of controller for Master and for Remote display. Only in such case is assured the proper function of all buttons, LED diodes and display.

Example: When AMF controller HW type is used as a Master controller and MRS controller HW type is used for Remote display there is no possibility to control MCB in MAN mode as there is no MCB button on MRS controller. However, in general all this not recommended combinations works with similar to above mentioned limitation considered.

Master device is always able to work without connected Remote display. Disconnecting of the serial line between Master controller and Remote display has no effect to the Master controller.

When the serial line between Master controller and Remote display is disconnected, or communication cannot be established, Remote display shows it's own Init screen and message "Trying to connect" and all LEDs are off.

Once remote display finds compatible master it shows message "Cfg processing" and downloads configuration table from master controller. After the configuration from Master controller is downloaded Remote display is reinitiated, jump to master controllers Main measurement screen and regular operation is started.

It is possible to switch to Remote display's own Init screen to check IL3-RD FW version and serial number of used controller and communication status by press and hold Page button for more than 3 seconds.

5.4.8 Firmware compatibility

Remote display	InteliLite (all versions)	InteliLite 9	InteliGen 200
IL3-RD FW ver. 1.0.0	FW ver. 1.5.x	FW ver. 1.1.x	FW ver. 1.1.x
	FW ver. 1.6.x		FW ver. 1.2.x
	FW ver. 1.7.x		FW ver. 1.3.x
	FW ver. 1.8.x		

5.5 Functions

5.5.1 Start-stop sequence	98
5.5.2 AMF sequence	100
5.5.3 Operating Modes	100
5.5.4 Engine start	102
5.5.5 Stabilization	106
5.5.6 Connecting to load	106
5.5.7 MRS operation	106
5.5.8 AMF operation	106
5.5.9 Dual Operation	108
5.5.10 Engine cool down and stop	111
5.5.11 Alarm management	111
5.5.12 History log	117
5.5.13 Breaker control	119

5.5.14 Exercise timers	122
5.5.15 Rental Timers	128
5.5.16 Service timers	129
5.5.17 Analog switches	129
5.5.18 Additional running engine indications	131
5.5.19 Voltage phase sequence detection	131
5.5.20 Gen-set operation states	132
5.5.21 Sensor curves	134
5.5.22 PLC	136
5.5.23 Geo-fencing	143
5.5.24 Tier 4 Final	143
5.5.25 Alternate configuration	146
5.5.26 ECU Frequency selection	146
5.5.27 Cybernetic security	147

 **back to Controller setup**

5.5.1 Start-stop sequence

State	Condition of the transition	Action	Next state
Ready	Start request	PRESTART (PAGE 616) on Prestart Time (page 205) counter started	Prestart
	RPM > 2 or Oil pressure > Starting Oil Pressure (page 206) or Generator voltage > 10V or D+ voltage is higher than D+ Threshold (page 220)		Stop (Stop fail)
	OFF Mode selected or Shutdown alarm active		Not Ready
Not Ready	RPM < 2, Oil pressure not detected, Generator voltage < 10V, D+ not Active no shutdown alarm active, other than OFF Mode selected		Ready
Prestart	Prestart time elapsed	FUEL SOLENOID (PAGE 598) on, STARTER (PAGE 620) on, Maximum Cranking Time (page 204) counter started	Cranking
Cranking	RPM > Starting RPM	STARTER (PAGE 620) off, PRESTART (PAGE 616) off	Starting
	D+ input activated or oil pressure detected or Generator voltage > 25% Nominal voltage	STARTER (PAGE 620) off, PRESTART (PAGE 616) off	Cranking
	Maximum Cranking Time (page 204) , 1st attempt	STARTER (PAGE 620) off, FUEL SOLENOID (PAGE 598) off, STOP	Crank pause

		SOLENOID (PAGE 621) on, Cranking Fail Pause (page 204) timer started	
	Maximum Cranking Time (page 204) elapsed, last attempt	STARTER (PAGE 620) off, PRESTART (PAGE 616) off	Shutdown (Start fail)
Crank pause	Cranking Fail Pause (page 204) elapsed	STARTER (PAGE 620) on, FUEL SOLENOID (PAGE 598) on, STOP SOLENOID (PAGE 621) off, Maximum Cranking Time (page 204) counter started	Cranking
Starting	Idle Time (page 212) elapsed	Minimal Stabilization Time (page 214) and Maximal Stabilization Time (page 215) counter started	Running
	any shutdown condition	FUEL SOLENOID (PAGE 598) off, STOP SOLENOID (PAGE 621) on	Shutdown
	all cranking attempts elapsed	FUEL SOLENOID (PAGE 598) off, STOP SOLENOID (PAGE 621) on	Shutdown (Start fail)
Running	Stop request	READY TO LOAD (PAGE 618) off, Cooling Time (page 217) counter started	Cooling
	RPM = 0 or any other shutdown condition	READY TO LOAD (PAGE 618) off, FUEL SOLENOID (PAGE 598) off	Shutdown
	GCB CLOSE/OPEN (PAGE 600) closed		Loaded
Loaded	GCB CLOSE/OPEN (PAGE 600) opened		Running
	RPM = 0 or any other shutdown condition	FUEL SOLENOID (PAGE 598) off, STOP SOLENOID (PAGE 621) on, READY TO LOAD (PAGE 618) off,	Shutdown
Cooling	Cooling Time (page 217) elapsed	FUEL SOLENOID (PAGE 598) off, STOP SOLENOID (PAGE 621) on	Stop
	RPM = 0 or any other shutdown condition	FUEL SOLENOID (PAGE 598) off, STOP SOLENOID (PAGE 621) on	Shutdown
	Start request	READY TO LOAD (PAGE 618) on	Running
Stop	RPM = 0, Oil pressure not detected, Generator voltage < 10V, D+ not active		Ready
	If at least one of engine running indication is detected when Stop Time (page 217) elapsed.		Stop (Stop fail)

Note: If all generator parameters are OK and **Minimal Stabilization Time (page 214) elapsed**, indicates that GCB is possible to close. In AUTO Mode GCB is closed in this moment automatically.

Note: The start-up sequence can be interrupted in any time by stop request

5.5.2 AMF sequence



State	Condition of the transition	Action	Next state
Mains operation	Mains failed or MCB FEEDBACK (PAGE 557) dropout, MCB Opens On (page 261) = Mains Fail	MCB CLOSE/OPEN (PAGE 610) off, Emergency Start Delay (page 253) timer started	Mains failure
	Mains failed or MCB FEEDBACK (PAGE 557) dropout, MCB Opens On (page 261) = Gen Run	Emergency Start Delay (page 253) timer started	Mains failure
Mains failure	Mains voltage and frequency OK, MCB Opens On (page 261) = Mains Fail	After elapsing MCB Close Delay (page 255) MCB CLOSE/OPEN (PAGE 610) on	Mains operation
	Mains voltage and frequency OK, MCB Opens On (page 261) = Gen Run	None	Mains operation
	Emergency Start Delay (page 253) elapsed, MCB Opens On (page 261) = Mains Fail	Engine start sequence performed, then GCB CLOSE/OPEN (PAGE 600) on	Island operation
	Emergency Start Delay (page 253) elapsed, MCB Opens On (page 261) = Gen Run	Engine start sequence performed, then MCB CLOSE/OPEN (PAGE 610) off, time delay Transfer Delay (page 254) performed and GCB CLOSE/OPEN (PAGE 600) on	Island operation
Island operation	Mains voltage and frequency OK	Mains Return Delay (page 253) timer started	Mains return
Mains return	Mains failed		Island operation
	Mains Return Delay (page 253) elapsed	GCB CLOSE/OPEN (PAGE 600) off, then after Transfer Delay (page 254) MCB CLOSE/OPEN (PAGE 610) on and then engine stop sequence performed	Mains operation

Note: Mains failed means mains over/under -voltage, over/under -frequency, voltage asymmetry (preset delay must elapse)

Note: If during start-up sequence mains returns, then MCB is reclosed with delay **MCB Close Delay (page 255)**(if opened, depending on **MCB Opens On (page 261)** setpoint) and start-up sequence is interrupted.

Note: If mains fails during stop procedure (cooling) again, stop sequence is interrupted, MCB opened and GCB re-closed with **Transfer Delay (page 254)**.

5.5.3 Operating Modes

Selecting the operating mode is done through Left  and Right  buttons on the front panel or by changing the **Controller mode (page 196)** setpoint (from the front panel or remotely).

Note: If this setpoint is configured as password-protected, the correct password must be entered prior to attempting to change the mode.





Note: The mode cannot be changed if Access Lock input is active.

The following binary inputs can be used to force one respective operating mode independent of the mode setpoint selection:

- ▶ Remote OFF (page 561)
- ▶ Remote TEST (page 562)
- ▶ Remote MAN (page 560)
- ▶ Remote AUTO (page 560)



If the respective input is active the controller will change the mode to the respective position according to the active input. If multiple inputs are active, the mode will be changed according to priorities of the inputs. The priorities match the order in the list above. If all inputs are deactivated, the mode will return to the original position given by the setpoint.

OFF

No start of the gen-set is possible. Controller stays in Not ready status and cannot be started any way. The MCB is closed permanently (MCB Opens On (page 261) = GENRUN) or is open or closed according to whether the mains is present or not (MCB Opens On (page 261) = MAINSFAIL). No AMF function will be performed. The buttons MCB , GCB , Start  and Stop  including the appropriate binary inputs for external buttons are not active.

IMPORTANT: When engine is running, it is not possible to switch gen-set to OFF mode.

MAN

The engine can be started and stopped manually using the Start  and Stop  buttons (or external buttons wired to the appropriate binary inputs) in MAN mode. When the engine is running, GCB can be closed. Also MCB can be closed and opened manually using the MCB button, regardless of whether the mains are present or not. No auto start is performed.

Note: The controller provides interlock between GCB and MCB, it means it is never possible to close both CB together.

AUTO

The controller does not respond to buttons Start , Stop , MCB ON/OFF  and GCB ON/OFF . Engine start/stop request is evaluated from Mains failure/return.

Note: When the AMF function will start the engine than the engine will be running at least for the time which is defined in Mains Return Delay (page 253) setpoint, even if the mains would return in the meantime.

TEST

The gen-set will be started when the controller is put to TEST mode and will remain running unloaded. If a mains failure occurs, the MCB will be opened and after Transfer Delay (page 254) the GCB will be closed and the gen-set will supply the load. After the mains have recovered, the delay Mains Return Delay (page 253) will count down and if it elapses and the mains is still ok, the controller will transfer the load back to the mains after Transfer Delay (page 254) and the gen-set will remain running unloaded again until the mode is changed.

Remote test on load

When binary input is closed, the controller automatically transfers load from the mains to the gen-set. See LBI REM TEST ON LOAD (PAGE 562).

5.5.4 Engine start

Diesel engine

The setpoint **Fuel Solenoid** (page 203) has to be switched to the Diesel position.

- ▶ After the command for start is issued (pressing Start button in MAN mode, auto start condition is fulfilled in AUTO mode or controller is switched to TEST mode), outputs **PRESTART** (PAGE 616) and **GLOW PLUGS** (PAGE 605) are energized for time period given by the setpoints **Prestart Time** (page 205) and **Glow Plugs Time** (page 206).
- ▶ After **Prestart Time** (page 205) and **Glow Plugs Time** (page 206), the output **FUEL SOLENOID** (PAGE 598) is energized and after **Fuel Solenoid Lead** (page 212) the starter of motor is activated by energizing the output **STARTER** (PAGE 620).
- ▶ When one or more of following conditions are met, the starter output is de-energized:
 - The engine speed exceeds the value of **Starting RPM** (page 205), or
 - One of **Additional running engine indications** (page 131) signals becomes active.
- ▶ The controller remains in the Starting phase until the engine speed exceeds the value of **Starting RPM** (page 205), after that it is considered as started and the Idle period will follow.
- ▶ The maximum duration that the output **STARTER** (PAGE 620) is energized is determined by the setpoint **Maximum Cranking Time** (page 204). If the engine does not start within this period, the output **STARTER** (PAGE 620) is de-energized and a pause with length determined by **Cranking Fail Pause** (page 204) will follow. **PRESTART** (PAGE 616) and **GLOW PLUGS** (PAGE 605) outputs are active during the pause. After the pause has elapsed, the next start attempt is executed. The number of start attempts is given by the setpoint **Cranking Attempts** (page 203).
- ▶ Once the engine is started, the Idle period follows. The binary output **IDLE/NOMINAL** (PAGE 608) remains inactive (as it was during the start). The idle period duration is adjusted by the setpoint **Idle Time** (page 212).
- ▶ After the idle period has finished, the output **IDLE/NOMINAL** (PAGE 608) is activated and the start-up sequence is finished. The **Stabilization** (page 106) phase follows.

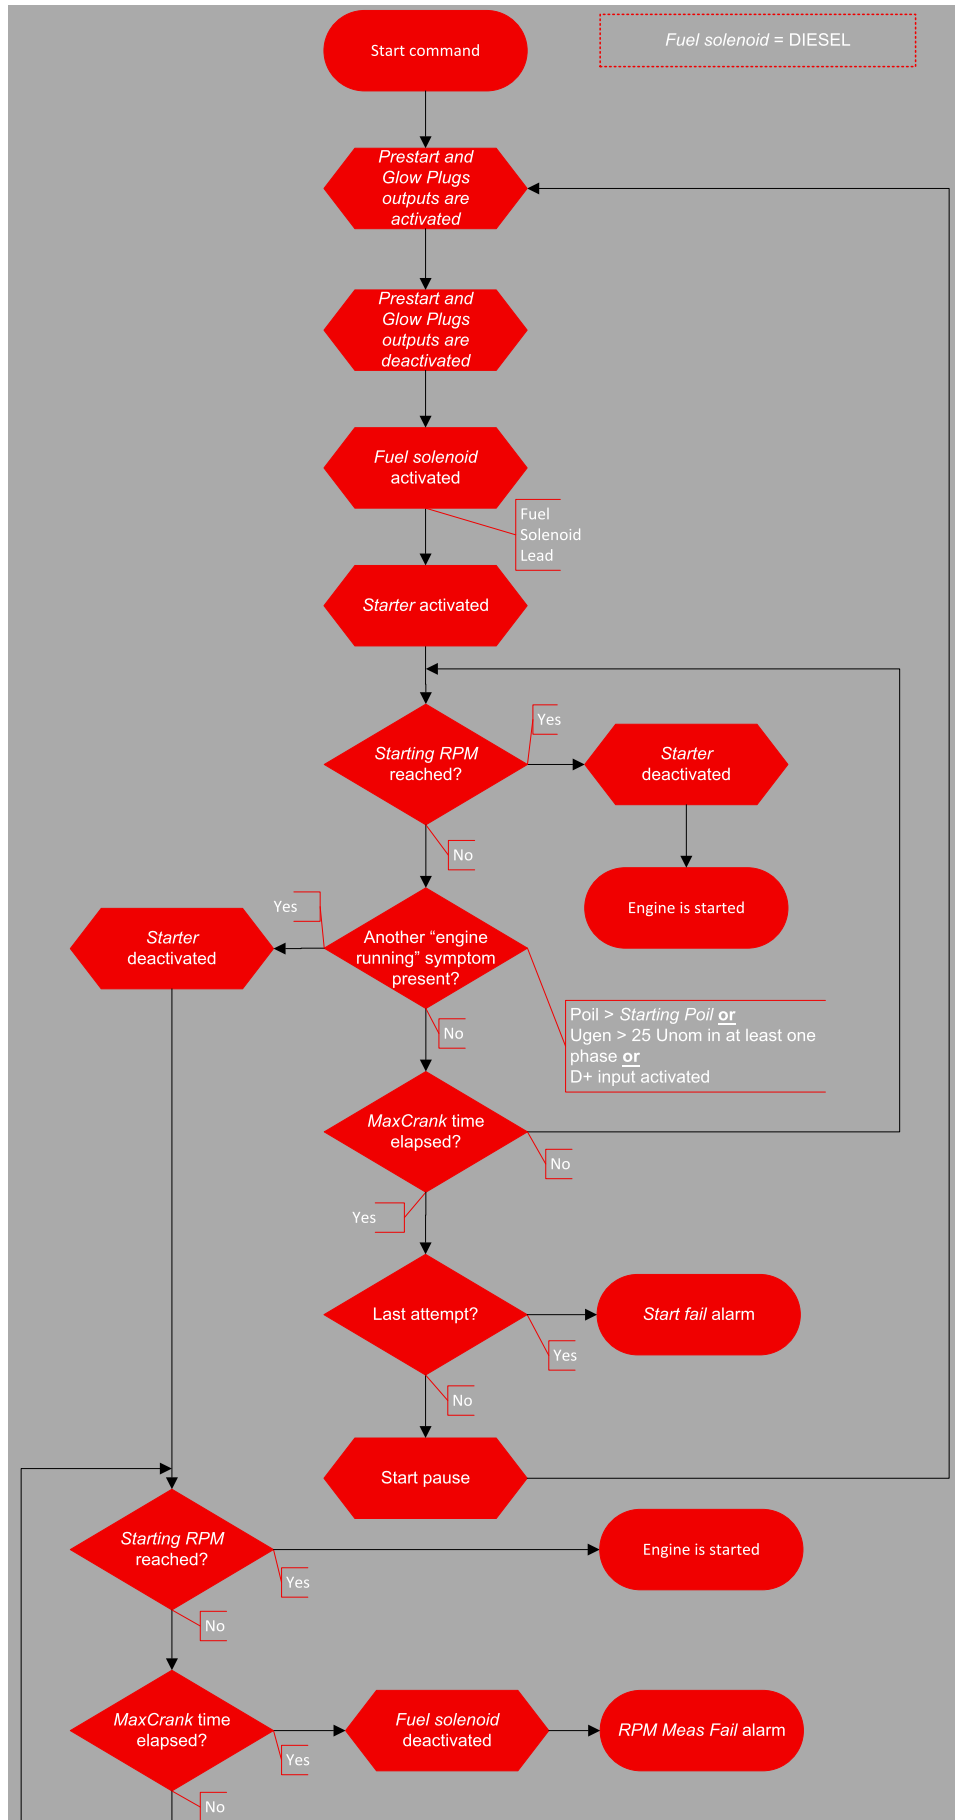


Image 6.13 Flowchart of start of diesel engine

GAS engine

The setpoint **Fuel Solenoid (page 203)** has to be switched to the Gas position.

- ▶ After the command for start is issued (pressing Start button in MAN mode, auto start condition is fulfilled in AUTO mode or controller is switched to TEST mode), outputs **PRESTART (PAGE 616)** and **GLOW PLUGS (PAGE 605)** are energized for time period given by the setpoints **Prestart Time (page 205)** and **Glow Plugs Time (page 206)**.
- ▶ After **Prestart Time (page 205)** and **Glow Plugs Time (page 206)**, starts countdown of **Sd Ventilation Time (page 216)**
- ▶ After **Sd Ventilation Time (page 216)**, the starter of engine is activated by energizing the output **STARTER (PAGE 620)**.
- ▶ When the engine speed exceeds 30RPM, the outputs **FUEL SOLENOID (PAGE 598)** and **IGNITION (PAGE 608)** are energized.
- ▶ When the engine speed exceeds value of **Starting RPM (page 205)**, the starter of engine is de-energized, the engine is considered as started and the Idle period will follow.

IMPORTANT: Additional running engine indications (page 131) signals are not evaluated during the start of a gas engine. The Pickup must be used in any case!

- ▶ The maximum duration that the output **STARTER (PAGE 620)** is energized is determined by the setpoint **Maximum Cranking Time (page 204)**. If the engine does not start within this period, outputs **STARTER (PAGE 620)** and **FUEL SOLENOID (PAGE 598)** are de-energized and a pause with length determined by **Cranking Fail Pause (page 204)** will follow. **PRESTART (PAGE 616)**, **GLOW PLUGS (PAGE 605)** and **IGNITION (PAGE 608)** outputs are active during the pause. After the pause has elapsed, the next start attempt is executed. The number of start attempts is given by the setpoint **Cranking Attempts (page 203)**.
- ▶ Once the engine is started, the Idle period follows. The binary output **IDLE/NOMINAL (PAGE 608)** remains inactive (as it was during the start). The idle period duration is adjusted by the setpoint **Idle Time (page 212)**.
- ▶ After the idle period has finished, the output **IDLE/NOMINAL (PAGE 608)** is activated and the start-up sequence is finished. The **Stabilization (page 106)** phase follows.

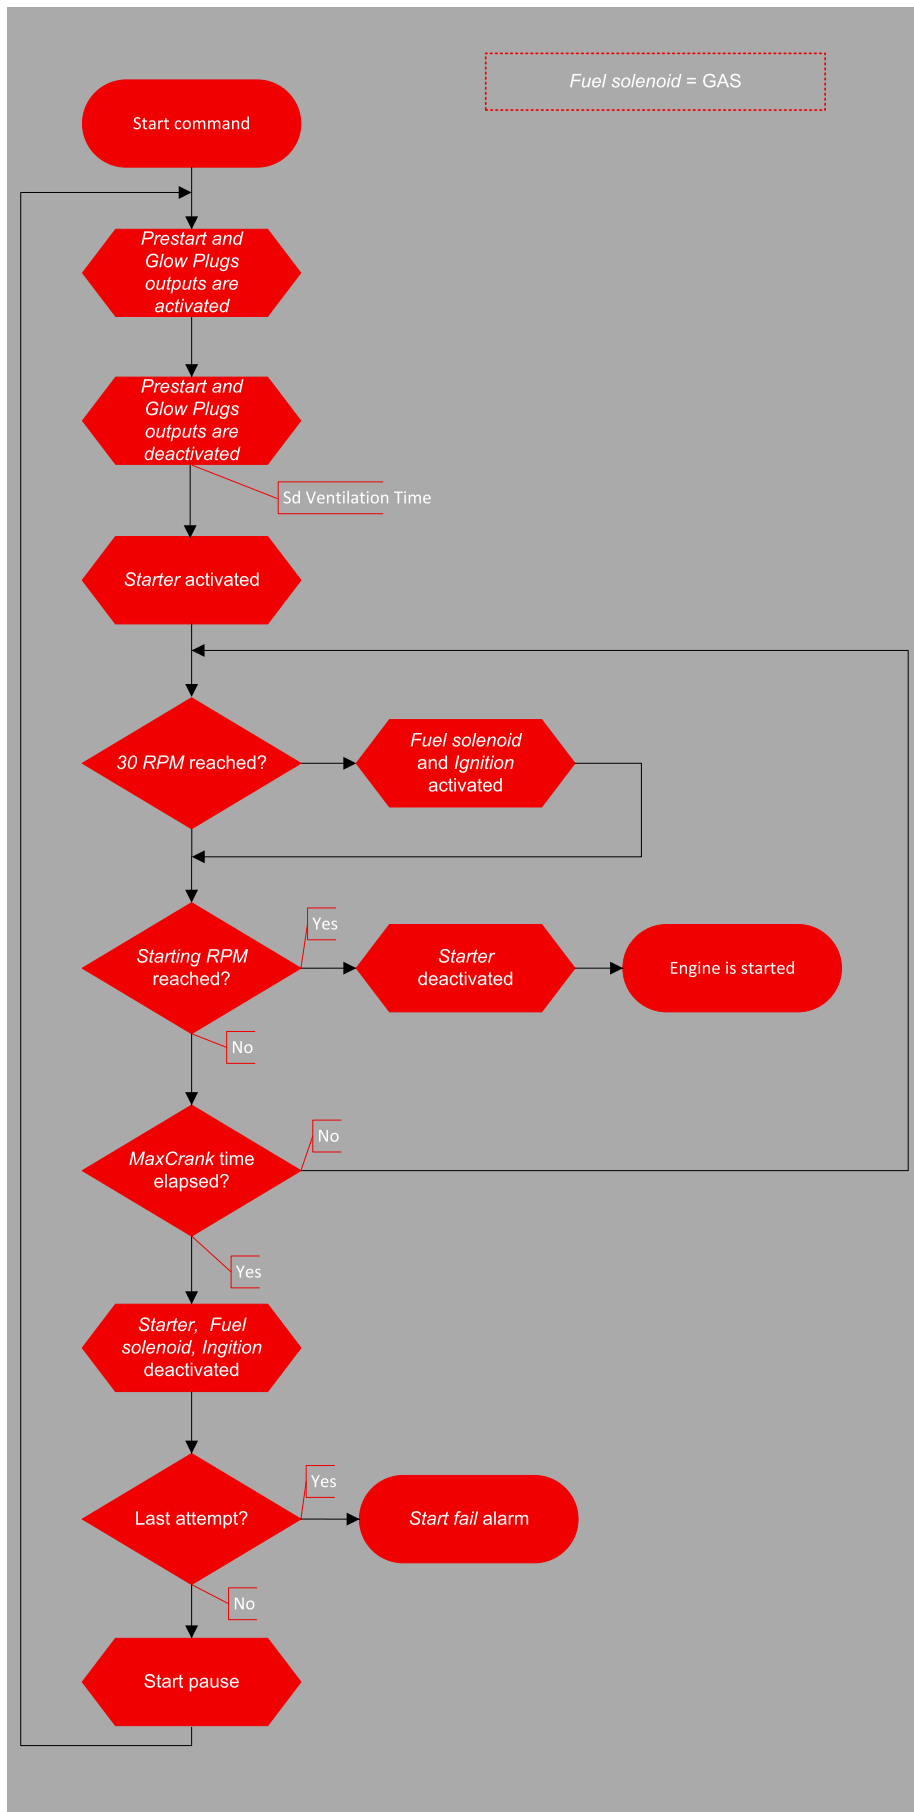


Image 6.14 Flowchart of start of gas engine

5.5.5 Stabilization

When the **Engine start (page 102)** sequence is finished, the gen-set goes into the stabilization phase. There are two timers (setpoints) in this phase:

- ▶ **Minimal Stabilization Time (page 214)** starts to count down just after the idle period has finished. Generator voltage and frequency are not checked (respective protections are not evaluated) and the GCB cannot be closed even if the generator voltage and frequency are within limits.
- ▶ **Maximal Stabilization Time (page 215)** starts to count down just after the idle period has finished. Generator voltage and frequency are not checked (respective protections are not evaluated) but, opposite to the previous timer, the GCB can be closed if generator voltage and frequency are within limits.

In situations where the GCB is closed automatically (AUTO, TEST modes), the closing of GCB will occur in the first moment when the generator voltage and frequency will get into limits and the **Minimal Stabilization Time (page 214)** has already elapsed.

In the event that the generator voltage or frequency are not within limits within the **Maximal Stabilization Time (page 215)** period, the appropriate protection(s) will be activated and the gen-set will be cooled down and stopped.

Note: The limits for the generator voltage and frequency are given by setpoints in the **Group: Generator settings (page 240)**.

Note: The value of the **Minimal Stabilization Time (page 214)** setpoint has to be lower than the value of **Maximal Stabilization Time (page 215)** setpoint.

5.5.6 Connecting to load

When the **Stabilization (page 106)** phase is finished, the gen-set can be connected to the load.

The command for connecting the gen-set to the load is issued either automatically (AUTO, TEST modes) or manually by pressing the GCB button. The following conditions must be valid:

- ▶ The gen-set is running and the **Minimal Stabilization Time (page 214)** timer has elapsed.
- ▶ The gen-set voltage and frequency are within limits.

5.5.7 MRS operation

The "MRS function" represents manual or remote start of gen-set. It is ideal for prime power applications.

The MRS procedure

When the start command is detected, the following steps are performed:

- ▶ The gen-set is started.
- ▶ GCB is closed and the gen-set begins to supply the load (in AUTO mode, otherwise GCB button has to be pressed)

When the stop command is detected, the following steps are performed:

- ▶ GCB is opened and the gen-set stops supply the load.
- ▶ After GCB is opened, the gen-set cools down and a stop.

5.5.8 AMF operation

The "AMF function" represents the automatic start in the event that the mains have failed and stop after the mains have been restored. The automatic start can be enabled or disabled by binary inputs **AMF START BLOCK**

(PAGE 523) or MAINS FAIL BLOCK (PAGE 556).

Note: The AMF function works only in AUTO mode.

Mains failure detection

The mains are considered as faulty when one or more of the following conditions are valid:

- ▶ The mains voltage is out of the limits given by the setpoints **Mains Undervoltage (page 256)** and **Mains Overvoltage (page 256)** for a time period longer than **Mains < > Voltage Delay (page 256)**.
- ▶ The mains voltage unbalance is out of limit given by setpoint **Mains Voltage Unbalance (page 257)** for a time period longer than **Mains Voltage Unbalance Delay (page 257)**.
- ▶ The mains frequency is out of the limits given by the setpoints **Mains Underfrequency (page 258)** and **Mains Overfrequency (page 257)** for a time period longer than **Mains < > Frequency Delay (page 258)**.
- ▶ The MCB close command was not successful and the alarm **Wrn MCB Fail (page 686)** was not reset.
- ▶ Phase rotation is incorrect.

Healthy mains detection

The mains are considered to be healthy when all of following conditions are valid:

- ▶ The mains voltage is within the limits given by the setpoints **Mains Undervoltage (page 256)** and **Mains Overvoltage (page 256)**.
- ▶ The mains voltage unbalance is within the limits given by the setpoint **Mains Voltage Unbalance (page 257)**.
- ▶ The mains frequency is within the limits given by the setpoints **Mains Underfrequency (page 258)** and **Mains Overfrequency (page 257)**.
- ▶ The alarm **Wrn MCB Fail (page 686)** is not active (if MCB feedback is active). This condition is not required if MCB is open (MCB feedback is inactive).
- ▶ Phase rotation is correct.

The AMF procedure

When the mains failure is detected, the following steps are performed:

- ▶ If the setpoint **MCB Opens On (page 261)** is set to Mains Fail, the MCB is opened
- ▶ The timer for automatic start of the gen-set **Emergency Start Delay (page 253)** begins to count down.
- ▶ After the timer has elapsed, the gen-set is started.

Note: The automatic start of the gen-set due to AMF function can be disabled by the binary inputs **AMF START BLOCK (PAGE 523)** or **MAINS FAIL BLOCK (PAGE 556)**.

- ▶ If the setpoint **MCB Opens On (page 261)** is set to Gen Run, the MCB is opened once the generator voltage is within limits (after **Minimal Stabilization Time (page 214)** elapses).

Note: If the mains are restored to health and the gen-set is still not connected to the load, the controller interrupts the startup process and closes back the MCB.

- ▶ After **Transfer Delay (page 254)** elapses, the GCB is closed and the gen-set begins to supply the load.
- ▶ After the mains restored to normal, the timer **Mains Return Delay (page 253)** begins to count down.
- ▶ Maximum time between closing of MCB and opening GCB is given by the setpoint **Transfer Delay (page 254)**. After GCB is opened, the gen-set cools down and a stop.

IMPORTANT: Controller has this behavior only in AUTO mode!

5.5.9 Dual Operation

Dual operation - AMF

Dual operation - AMF consists 2 gen-sets and 1 mains. Principle of dual operation is in switching the gen-sets in supplying of load when there is a mains fail or LBI REMOTE START/STOP (PAGE 561) is activated on Master controller. Each controller measures mains and its gen-set. Interlock between all breakers (GCB1, GCB2 and MCB) is required. If there is fail of one gen-set, second gen-set will take the load.

MCB control from both controllers is not required. Slave controller in Dual Operation doesn't control MCB (MCB Close/Open is in open position). However it is recommended to be prepare to control MCB also from slave controller - in case of fail of Dual Operation, both controllers are switch to normal AMF operation.

IMPORTANT: Dual operation works only in AUTO mode.

IMPORTANT: Dual operation is in fail also during process of adjustment of setpoints. In this moment slave still tries to control MCB.

IMPORTANT: Setpoint MCB Opens On (page 261) has to be set-up to Mains Fail option.

IMPORTANT: LBI MAINS FAIL BLOCK (PAGE 556) can cause fail of dual operation system. In case of different states of mains on master and slave controllers, alarm Dual Operation Different Mains (page 689) is activated and gen-sets are switched to normal operation.

Note: LBI AMF START BLOCK (PAGE 523) is evaluated on both controllers. When this LBI is activated, gen-set can't start in dual operation. Second gen-set (without active AMF START BLOCK (PAGE 523)) will start. Gen-sets are not swapping the load until this LBI is active. Behaviour is the same like with alarm of 2nd level.

Note: MCB Fail protection is not used in Slave controller during Dual Operation. MCB is controlled only via Master. Slave controller has MCB Close/Open in open position all the time during Dual Operation.

Start/stop events

Event	Dual AMF
Mains Fail	Evaluated by Master only
LBI REMOTE START/STOP (PAGE 561)	Evaluated by Master only

Dual operation - MRS

Dual operation MRS consists 2 gen-sets. Principle of dual operation is in switching the gen-sets in supplying of load when REMOTE START/STOP (PAGE 561) is activated on Master controller (on slave controller this LBI has no function in Dual Operation). Each controller measures its gen-set. Interlock between all breakers (GCB1 and GCB2) is required. If there is fail of one gen-set, second gen-set will take the load.

IMPORTANT: Dual operation works only in AUTO mode.

IMPORTANT: Dual operation is in fail also during process of adjustment of setpoints.

IMPORTANT: It is not possible to use Auto Run option in Exercise timers with dual operation.

Start/stop events

Event	Dual MRS
LBI REMOTE START/STOP (PAGE 561)	Evaluated by Master only

Communication

Communication is established on RS232 or RS485 communication line. Plug-in module CM-RS232-485 is required. Communication line is selected via setpoints **COM1 Mode (page 365)** or **COM2 Mode (page 366)**. There are options DualMaster and DualSlave. These options adjust, which communication line is selected and which role controller has in Dual Operation.

IMPORTANT: For correct communication it is necessary to have one Master and one Slave controller on the same communication line.

IMPORTANT: There are no shared setpoints. It is necessary to have the same settings of AMF setpoints and engine timers in both controllers.

In case of communication fail between controllers, alarm **Dual Operation Fail (page 690)** is activated. This alarm is activated on both controllers. Both controllers are switched to normal operation.

Adjustment of COM Modes

COM Mode in controller 1	COM Mode in controller 2	Behavior
Master	Slave	OK - normal dual operation function
Slave	Master	OK - normal dual operation function
Master	Master	There will be communication fail (it is necessary to have master and slave to establish communication line) - there will be active alarm Dual Operation Fail (page 690) . This alarm will be active on both controllers. Both controllers will be switched to normal operation.
Slave	Slave	There will be communication fail (it is necessary to have master and slave to establish communication line) - there will be active alarm Dual Operation Fail (page 690) . This alarm will be active on both controllers. Both controllers will be switched to normal operation.
Disabled	Master/Slave	There will be communication fail (it is necessary to have master and slave to establish communication line) - there will be active alarm Dual Operation Fail (page 690) . This alarm will be active on master/slave controller. Both controllers will be switched to normal operation.
Master/Slave	Disabled	There will be communication fail (it is necessary to have master and slave to establish communication line) - there will be active alarm Dual Operation Fail (page 690) . This alarm will be active on master/slave controller. Both controllers will be switched to normal operation.
Disabled	Disabled	Both controllers are in normal operation.

Switching of gen-sets

Switching of gen-sets is based on their **Running Hours (page 494)**. The time how long the gen-set is running is adjusted via setpoint **Running Hours Max Difference (page 261)**. When difference of **Running Hours (page 494)** between gen-sets is bigger than value adjusted in this setpoint, load is transferred from first gen-set to second gen-set. First gen-set is supplying the load until second gen-set is in running state. Then the GCB of first gen-set is opened. From this moment timer **Transfer Delay (page 254)** counts down. When it counts down, GCB of second gen-set can be closed.

Note: Value of **Running Hours (page 494)** can be modified by setpoint **Running Hours Base (page 262)**. This setpoint can add or remove additional running hours to value from statistics. This modified value of running hours is used in dual operation function.

Note: In case that both gen-sets have the same running hours, Master controller has higher priority.

Note: Switching of gen-sets can be inhibited by setpoint **Swap Gen-sets (page 262)** or by binary input **DUAL SWAP GEN-SETS (PAGE 549)**.

Note: Priority of gen-set can be changed by binary input **DUAL TOP PRIORITY (PAGE 549)**. In this case running hours values are not used to decide, which gen-set should start.

Dual operation adjustment

- ▶ Prepare two IntelLite AMF25 or two IntelLite MRS16 controllers with CM-RS232-485 modules
- ▶ Copy the identical configurations to both of them
- ▶ Use wiring with mechanical/electrical interlock between all breakers (mechanical interlock is preferred)
- ▶ Switch both controllers to OFF mode to prevent automatic or remote start
- ▶ Adjust setpoints **COM1 Mode (page 365)** or **COM2 Mode (page 366)** (depends on preferred communication line) to DualMaster on first controller and Dual Slave on second controller
- ▶ Interconnect communication terminals on CM-RS232-485 modules
- ▶ Adjust setpoint **MCB Opens On (page 261)** to Mains Fail option
- ▶ Adjust setpoint **Running Hours Max Difference (page 261)** on Master controller
- ▶ Adjust setpoints **Running Hours Base (page 262)** on both controllers if running hours change is needed for dual operation
- ▶ Adjust additional function of dual operation - **Master Error Protection (page 263)**, **Slave Error Protection (page 263)** and **Swap Gen-sets (page 262)** setpoints
- ▶ Change the mode of both controllers to AUTO
- ▶ System is now ready for dual operation function

Note: Breakers feedbacks are recommended, but not required.

Alarms related to dual operation:

- ▶ **Dual Operation Fail (page 690)**
- ▶ **Dual Operation Master Fail (page 690)**
- ▶ **Dual Operation Slave Fail (page 690)**
- ▶ **Dual Operation Different Mains (page 689)**
- ▶ **Dual Operation Different FW Version (page 689)**

5.5.10 Engine cool down and stop

The cool down phase follows after the stop command has been issued and the GCB has been opened.

- ▶ Duration of the cool down phase is determined by the setpoint **Cooling Time (page 217)**.
- ▶ Cooling is performed either at nominal speed (generator voltage and frequency protections are evaluated) or at idle speed (generator voltage and frequency protections are not evaluated). Selection of the speed is done by the setpoint **Cooling Speed (page 216)**.
- ▶ The cool down can be finished manually in MAN mode by pressing the STOP button.
- ▶ If a new start request comes, the cool down will be interrupted and the gen-set will go back to the stabilization phase. If the cooling was at nominal speed, the stabilization timers will not count down again so the GCB is ready to be closed (after 2 seconds delay).

When the cool down is finished, the output **FUEL SOLENOID (PAGE 598)** is de-energized and **STOP SOLENOID (PAGE 621)** is energized. The engine will stop within the time period determined by the setpoint **Stop Time (page 217)**. If the engine does not stop within this time, the alarm **Wrn Stop Fail (page 688)** will be issued.

The output **STOP SOLENOID (PAGE 621)** is energized until the engine is stopped, but at least for the duration of **Stop Time (page 217)**. If the **Stop Time (page 217)** has elapsed and the engine has still not stopped, the **STOP SOLENOID (PAGE 621)** is de-energized for 5 s and then energized again for **Stop Time (page 217)** and this repeats until the engine is stopped.

The output **Ignition (page 608)** is continuously energized until the engine is stopped.

Stopped gen-set evaluation

The gen-set is considered as stopped when all of following conditions are valid:

- ▶ The engine speed is lower than 2 RPM.
- ▶ The generator voltage in all phases is lower than 10 V.
- ▶ None of **Additional running engine indications (page 131)** signals is active.

5.5.11 Alarm management

The controller evaluates two levels of alarms. Level 1 – yellow alarm – is a pre-critical alarm that is only informative and does not take any action regarding gen-set control. Level 2 – red alarm – represents a critical situation, where an action must be taken to prevent damage of the gen-set or technology.

- ▶ One alarm of any type can be assigned to each binary input.
- ▶ Two alarms (one yellow and one red type) can be assigned to each analog input.
- ▶ There are also **Built-in alarms (page 115)** with fixed alarm types.
- ▶ Each alarm is written to the **Alarmlist (page 115)**.
- ▶ Each alarm causes a record to be written into the history log.
- ▶ Each alarm activates the Alarm and Horn output.
- ▶ Each alarm can cause sending of a SMS message or an email.

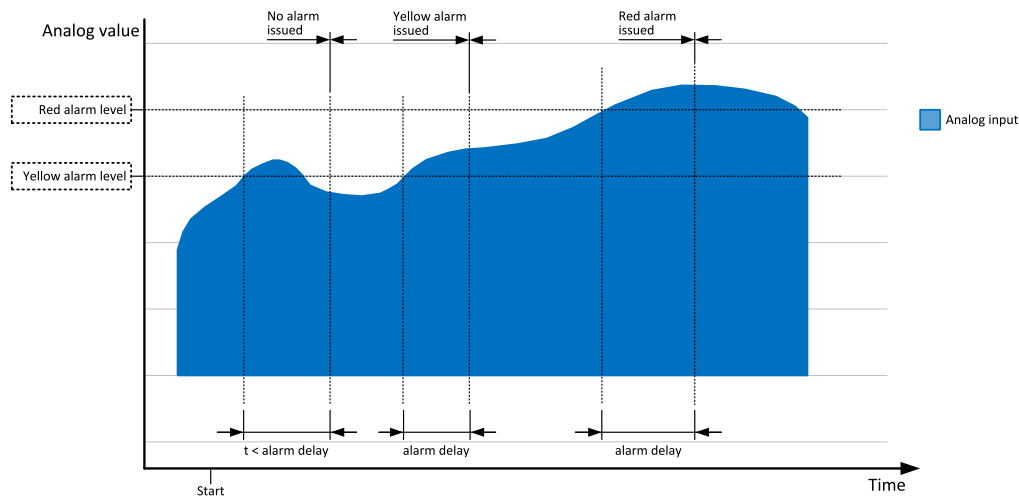


Image 6.15 Analog input alarm evaluation principle

Alarm handling

There are three different alarm categories regarding the period when the alarms are evaluated. The category is selectable for alarms assigned to binary/analog inputs and fixed for built-in alarms. The categories are the following:

- ▶ The alarm is evaluated all the time when the controller is switched on.
- ▶ The alarm is evaluated only when the engine is running. This type should be used for e.g. oil pressure. These alarms begin to be evaluated after the engine has been started with the delay given by the setpoint **Protection Hold Off (page 215)**.
- ▶ The alarm is evaluated only when the generator is excited. These alarms begin to be evaluated after the engine has been started and **Maximal Stabilization Time (page 215)** has elapsed or the GCB has been closed. They remain evaluated until cooling has finished. Only Generator under/overvoltage, Generator voltage unbalance and Generator under/overfrequency belong to this category. This category is not configurable to binary and analog input alarms.

If an alarm is being evaluated and the appropriate alarm condition is fulfilled, the delay of evaluation will start to run. The delay is adjustable by a setpoint (in the case of built-in alarms, analog input alarms) or is adjusted via configuration window in IntelliConfig (in the case of binary input alarms). If the conditions persist, the alarm will activate. The alarm will not activate if the condition is dismissed while the delay is still running.

After pressing the Fault reset button or activating the binary input **FAULT RESET BUTTON (PAGE 551)**, all active alarms change to confirmed state. Confirmed alarms will disappear from the Alarmlist as soon as the respective condition dismisses. If the condition is dismissed before acknowledging the alarm, the alarm will remain in the Alarmlist as Inactive.

Note: The input **SD OVERRIDE (PAGE 562)** can be used for temporary disabling of red alarms to shutdown the engine. This input may be used in situations where providing the power is extremely important – e.g. if the gen-set drives pumps for fire extinguishers (sprinklers).

Alarm states

An alarm can have following states:

- ▶ Active alarm: the alarm condition persists, alarm delay has elapsed.
- ▶ Inactive alarm: the alarm condition has disappeared, but the alarm has not been confirmed.
- ▶ Confirmed alarm: the alarm condition persists, but the alarm has already been confirmed.



Image 6.16 Alarm List

Alarm types - Level 1

The level 1 alarm indicates that a value or parameter is out of normal limits, but has still not reached critical level. This alarm does not cause any actions regarding the gen-set control.

Warning (Wrn)

The alarm appears in the Alarmlist and is recorded into the history log. Activates the output **AL COMMON WRN** (PAGE 571) as well as the standard alarm outputs (**HORN** (PAGE 607) and **ALARM** (PAGE 579)).

Alarm indication only

The alarm indication only alarm does not perform any actions regarding gen-set control. Alarm is only displayed in alarmlist.

History record only (HistRecOnl)

The event is recorded into the history. Standard alarm outputs (**HORN** (PAGE 607) and **ALARM** (PAGE 579)) are not activated.

Alarm types - Level 2

The level 2 level alarm indicates that a critical level of the respective value or parameter has been reached.

Note: It is not possible to start the engine if any red level protection is active or not confirmed.

IMPORTANT: The gen-set can start by itself after acknowledging the alarms if there is no longer an active red alarm and the controller is in **AUTO** or **TEST** mode!

Shutdown (Sd)

The alarm appears in the alarmlist and is recorded into the history log. It causes immediate stop of the Gen-set without cooling phase. Also GCB breaker is open. The gen-set cannot be started again while there is a

shutdown alarm in the alarmlist. Activates the output **AL COMMON SD** (PAGE 570) as well as the standard alarm outputs (**HORN** (PAGE 607) and **ALARM** (PAGE 579)).

Breaker open and cool down (BOC)

The event appears in the alarmlist and is recorded into the history log. It causes immediate opening of the GCB and then the standard stop sequence with cooling follows. The gen-set cannot be started again while there is a BOC alarm in the alarmlist. Activates the output **AL COMMON BOC** (PAGE 570) as well as the standard alarm outputs (**HORN** (PAGE 607) and **ALARM** (PAGE 579)).

Sensor fail detection (FLS)

If the measured resistance on an analog input exceeds the valid range, a sensor fail will be detected and a sensor fail message will appear in the **Alarmlist** (page 115). The valid range is defined by the most-left (RL) and most-right (RH) points of the sensor characteristic $\pm 12.5\%$ from RH-RL.

Note: Sometimes there can be problem with lower limit of valid range which can be counted as negative number. In this case the lower limit is set as one half of the RL point of the sensor curve characteristic.

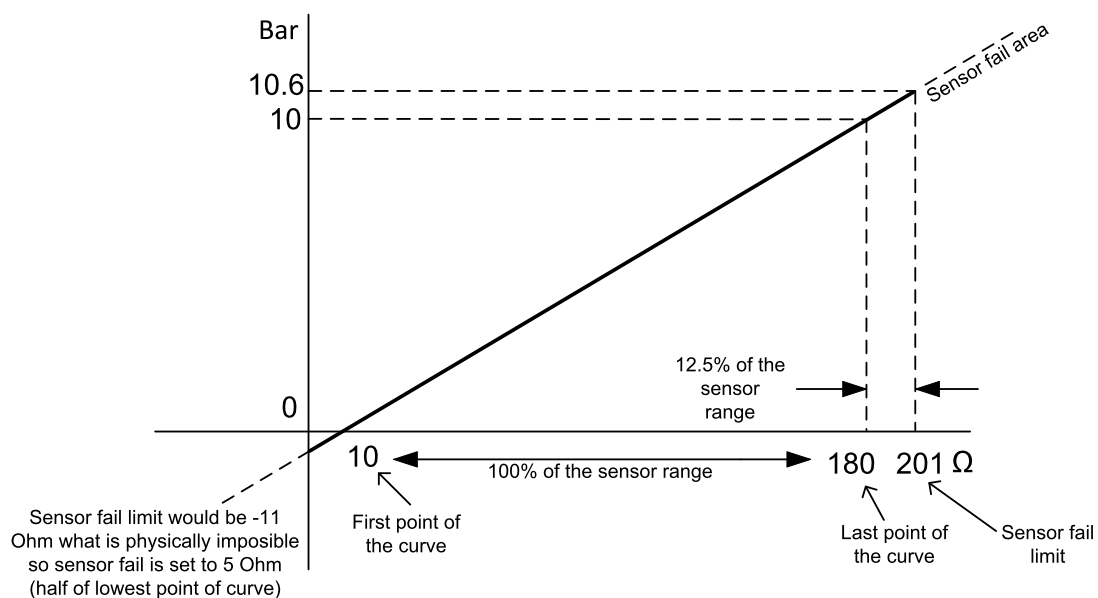


Image 6.17 Sensor fail detection principle

Remote alarm messaging

If communication plug-in module is connected to the controller, the controller can send SMS messages and emails at the moment when a new alarm appears in the **Alarmlist** (page 115) or new event is written in **History log** (page 117). The message will contain a copy of the **Alarmlist** (page 115) or reasons from **History log** (page 117). To enable this function, adjust setpoints **Event Message** (page 395), **Wrn Message** (page 396), **BOC Message** (page 396) and **Sd Messages** (page 396) to ON. Also enter a valid GSM phone number or email address to the setpoints **Telephone Number 1** (page 389), **Telephone Number 2** (page 389), **Telephone Number 3** (page 390), **Telephone Number 4** (page 390), **Email Address 1** (page 392) **Email Address 2** (page 393) **Email Address 3** (page 393), and **Email Address 4** (page 394).

The list of all supported terminals shows the table below:

Terminal	Event SMS	Warning SMS	BOC SMS	Shutdown SMS	Event email	Warning email	BOC email	Shutdown email
CM-RS232-485	no	no	no	no	no	no	no	no
CM-Ethernet	no	no	no	no	yes	yes	yes	yes
CM-GPRS	yes	yes	yes	yes	yes*	yes*	yes*	yes*
CM-4G-GPS	yes	yes	yes	yes	yes*	yes*	yes*	yes*

Note: * Only with enabled *Internet Connection* (page 380).

Alarmlist

Alarmlist is a container of active and inactive alarms. It will appear automatically on the controller display, if a new alarm occurs, or can be displayed manually from the display menu.

Active alarms are shown as inverted, not yet confirmed alarms are marked with asterisk before them.

Alarmlist contains three types of alarms:

- ▶ Controller built-in alarms
- ▶ User configured alarms on binary or analog inputs
- ▶ ECU alarms

Controller built-in alarms

An alarm message in the alarmlist begins with a prefix, which represents the alarm type (e.g. Wrn, Sd, BOC, MP, MPR). Then the alarm name follows. In some cases the prefix can be omitted.

User configured alarms

An alarm message in the alarmlist begins with a prefix, which represents the alarm type (e.g. Wrn, Sd, BOC). Alarm type is selected by user during the configuration of binary or analog input as alarm. Then the alarm name follows. Name is adjusted by user during the configuration of binary or analog input as alarm.

ECU alarms

The ECU alarms are received from the ECU. The alarms are represented by the Diagnostic Trouble Code, which contains information about the subsystem where the alarm occurred, the alarm type and the alarm occurrence counter.

The most common fault codes are translated into text form. Other fault codes are displayed as a numeric code and the engine fault codes list must be used to determine the reason.

Built-in alarms

Events specification	Protection type	Description
Analog Input 1 Wrn	WRN	Value measured on analog input 1 is </> than Analog Protection 1 Wrn (page 264) setpoint.
Analog Input 1 Sd	SD	Value measured on analog input 1 is </> than Analog Protection 1 Sd (page 264) setpoint.
Analog Input 2 Wrn	WRN	Value measured on analog input 2 is </> than Analog Protection 2 Wrn (page 266) setpoint.

Events specification	Protection type	Description
Analog Input 2 Sd	SD	Value measured on analog input 2 is \neq than Analog Protection 2 Sd (page 267) setpoint.
Analog Input 3 Wrn	WRN	Value measured on analog input 3 is \neq than Analog Protection 3 Wrn (page 269) setpoint.
Analog Input 3 Sd	SD	Value measured on analog input 3 is \neq than Analog Protection 3 Sd (page 270) setpoint.
Analog Input 4 Wrn	WRN	Value measured on analog input 4 is \neq than Analog Protection 4 Wrn (page 272) setpoint.
Analog Input 4 Sd	SD	Value measured on analog input 4 is \neq than Analog Protection 4 Sd (page 273) setpoint.
Wrn Battery Voltage	WRN	Battery voltage is out of limits given by Battery Undervoltage (page 234) and Battery Overvoltage (page 235) setpoints.
Binary input		Configurable Warning/BOC/Shutdown alarms on the binary inputs.
Sd Battery Flat	SD	If the controller switches off during starting sequence (STARTER (PAGE 620) output is active) it doesn't try to start again and activates this protection (controller assumes bad battery condition).
Sd Start Fail	SD	Gen-set start failed. All crank attempts were tried without success.
Parameters Fail	NONE	Wrong check-sum of parameters. Happens typically after downloading new firmware or changing of the parameter. The controller stays in INIT mode. Check all parameters, change value of at least one parameter.
Sd Gen Lx >V BOC Gen Lx <V (where x=1,2,3)	SD BOC	The generator voltage is out of limits given by Gen <V BOC and Gen >V Sd setpoints.
BOC Gen V Unbalance	BOC	The generator voltage is unbalanced more than the value of Voltage Unbalance BOC (page 245) setpoint.
BOC Gen >, <Frequency	BOC	The generator frequency is out of limits given by Generator Overfrequency BOC (page 246) and Generator Underfrequency BOC (page 247) setpoints.
BOC Current Unbalance	BOC	The generator current is unbalanced more than the value of Current Unbalance BOC (page 243) setpoint.
BOC Current IDMT	BOC	Generator current exceeds the limit for IDMT protection given by Nominal Current (page 190) and IDMT Overcurrent Delay (page 242) setpoints.
BOC Overload	BOC	The load is greater than the value given by Overload BOC (page 240) setpoint.
Sd Earth Fault	SD	This alarm is activated when Earth Fault value exceeds Earth Fault Sd (page 408) limit for at least Earth Fault Delay (page 407) period.
Sd Overspeed	SD	The protection comes active if the speed is greater than Overspeed Sd (page 221) setpoint.

Events specification	Protection type	Description
Sd Underspeed	SD	During starting of the engine when the RPM reach the value of Starting RPM (page 205) setpoint the starter is switched off and the speed of the engine can drop under Starting RPM (page 205) again. Then the Underspeed protection becomes active. Protection evaluation starts 5 seconds after reaching Starting RPM (page 205) .
Emergency Stop	SD	If the input Emergency Stop is opened shutdown is immediately activated.
GCB Fail	SD	Failure of generator circuit breaker.
MCB Fail	WRN	Failure of mains circuit breaker.
Sd RPM Measurement Fail	SD	Failure of magnetic pick-up sensor for speed measurement. This alarm appears, if starter was disengaged for other reason than overcrossing Starting RPM (page 205) (like oil pressure or D+) and at the end of timer Maximum Cranking Time (page 204) there are no RPMs > Starting RPM (page 205) detected.
Wrm Stop Fail	WRN	Gen-set stop failed. See description at Gen-set Operation States chapter.
Wrm Maintenance 1	WRN	The period for servicing is set by the Maintenance Timer 1 (page 233) setpoint. The protection comes if counter reaches zero.
Wrm Maintenance 2	WRN	The period for servicing is set by the Maintenance Timer 2 (page 234) setpoint. The protection comes if counter reaches zero.
Wrm Maintenance 3	WRN	The period for servicing is set by the Maintenance Timer 3 (page 234) setpoint. The protection comes if counter reaches zero.
Charge Alternator Fail	WRN	Failure of alternator for charging the battery.
Sd Override	WRN	The protection is active if the output Sd Override is closed.
Mains CCW Rot	WRN	Mains voltage phases are not wired correctly. MCB closing is prohibited by chontrroller.
Generator CCW Rot	WRN	Genset voltage phases are not wired correctly. GCB closing is prohibited by chontrroller.

Note: This table does not contain all alarms in controller. It is only list of the most common alarms.

5.5.12 History log

The history log is an area in the controller's non-volatile memory that records "snapshots" of the system at moments when important events occur. The history log is important especially for diagnostics of failures and problems. When the history file is full, the oldest records are removed.

Each record has the same structure and contains:

- The event which caused the record (e.g. "Overspeed alarm" or "GCB closed")
- The date and time when it was recorded
- All important data values like RPM, kW, voltages, etc. from the moment that the event occurred.

Record structure

Name	Abbreviation	Description
Number	No.	Row number (0 corresponds to the last record, -1 to the previous one, etc.)
Reason	Reason	Reason for history record (any event or alarm related to the gen-set)
Time	Time	Time
Date	Date	Date
RPM	RPM	Engine rotations per minute
Power	Pwr	Generator active power
Reactive power	Q	Generator reactive power
Power Factor	PF	Generator power factor
Load Character	LChr	Generator load character
Generator Frequency	Gfrq	Generator Frequency
Generator Voltage	Vg1	Generator voltage Ph1
Generator Voltage	Vg2	Generator voltage Ph2
Generator Voltage	Vg3	Generator voltage Ph3
Generator Voltage	Vg12	Generator voltage Ph12
Generator Voltage	Vg23	Generator voltage Ph23
Generator Voltage	Vg31	Generator voltage Ph31
Generator Current	Ig1	Generator current Ph1
Generator Current	Ig2	Generator current Ph2
Generator Current	Ig3	Generator current Ph3
Mains Voltage	Vm1	Mains voltage Ph1
Mains Voltage	Vm2	Mains voltage Ph2
Mains Voltage	Vm3	Mains voltage Ph3
Mains Voltage	Vm12	Mains voltage Ph12
Mains Voltage	Vm23	Mains voltage Ph23
Mains Voltage	Vm31	Mains voltage Ph31
Mains Frequency	Mfrq	Mains Frequency
Voltage Battery	VBat	Voltage of battery
Analog Input 1	Ain1	Analog input 1
Analog Input 2	Ain2	Analog input 2
Analog Input 3	Ain3	Analog input 3
Analog Input 4	Ain4	Analog input 4
Binary Inputs	BIN	Controller binary inputs
Binary Outputs	BOUT	Controller binary outputs
Controller Mode	Mode	Controller mode

Note: When some setpoint is changed, in history log is written its number of communication object.

5.5.13 Breaker control

The following power switches are controlled by the controller:

- ▶ The generator circuit breaker or contactor – GCB
- ▶ The Mains circuit breaker or contactor – MCB

It is possible to use either a motorized circuit breaker or contactor. Below is a list of available control outputs that should fit all types of contactors or breakers. The following rules must be kept to when designing the wiring of power switches:

- ▶ The control outputs must be configured and wiring of the power switches must be provided in such a way, that the controller has full control over the breakers – i.e. the controller can open and close the breaker at any time.
- ▶ The breaker must respond within max. 5 seconds to a close and open command. Special attention should be paid to opening of motorized circuit breakers, as it could take more than 5 seconds on some types. In such cases it is necessary to use an undervoltage coil for fast opening.
- ▶ After opening the breaker, there is internal delay for another closing of breaker. Delay is 6 seconds - 5 seconds for OFF coil and 1 second for UV coil. After these 6 seconds, breaker can be closed again. For opening of breaker there is no delay.

Breaker control outputs

Close/Open	An output for control of a contactor. Its state represents the breaker position requested by the controller. The breaker must react within 2 seconds to a close or open command, otherwise an alarm is issued.
ON coil	An output giving a 2 second pulse in the moment the breaker has to be closed. The output is intended for control of close coils of circuit breakers.
OFF coil	An output giving a pulse in the moment the breaker has to be opened. The pulse lasts until the feedback deactivates, but at least for 2 seconds. The output is intended for control of open coils of circuit breakers.
UV coil	The GCB UV coil output is active the whole time the gen-set is running (not in idle or cooling). The MCB UV coil output is active when the controller is switched on. The output is deactivated for at least 2 seconds in the moment the breaker has to be switched off. The output is intended for control of undervoltage coils of circuit breakers.

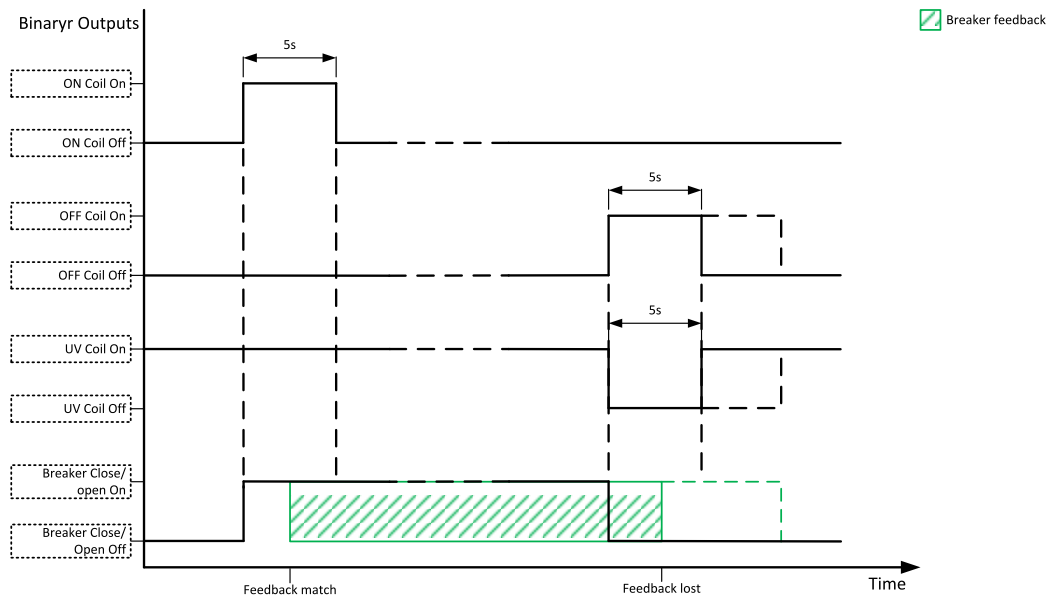


Image 6.18 Breaker control outputs

MCB special requirements

- ▶ If a contactor is used on the MCB position, it is recommended that the wiring be provided in such a way that the contactor will be normally closed and will open if the logical binary output **MCB CLOSE/OPEN** (PAGE 610) closes. This behavior is called “negative logic” and can be adjusted by the setpoint **MCB Logic** (page 259). The negative logic will prevent accidental opening of the MCB when the controller is switched off.
- ▶ If a contactor is used on the MCB position, it will open itself immediately after the mains have failed, because it will lose power for the coil. That is why the following adjustment is necessary to prevent triggering the **Wrn MCB Fail** (page 686) alarm: **MCB Opens On** (page 261) = Mains Fail, **Mains < > Voltage Delay** (page 256) ≤ 1.
- ▶ If a 230 V motor driven circuit breaker is used on the MCB position and an undervoltage coil is not fitted, it is not possible to open the breaker after the mains have failed, because there is no power for the motor drive until the gen-set is started and providing voltage. Adjusting the setpoint **MCB Opens On** (page 261) = Gen Run will prevent triggering the **Wrn MCB Fail** (page 686) alarm.

Breaker fail detection

Breaker fail detection is based on binary output breaker close/open comparing with binary input breaker feedback.

IMPORTANT: It is necessary to configure breaker feedback to use this function.

IMPORTANT: Also it is possible to use breakers without feedbacks. In this case there is no check of breaker real state.

There are three different time delays for breaker fail detection – see following diagrams.

When binary output breaker close/open is in steady state and breaker feedback is changed the breaker fail is detected immediately (no delay).

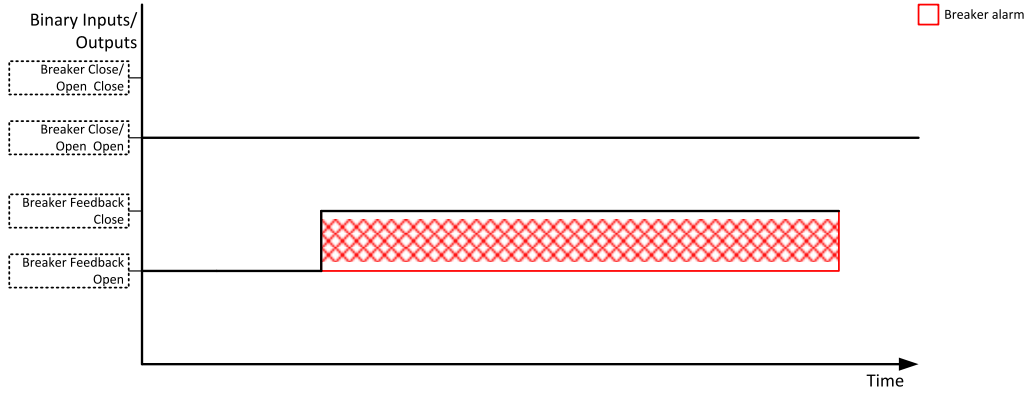


Image 6.19 Breaker fail - breaker close/open in steady position - open

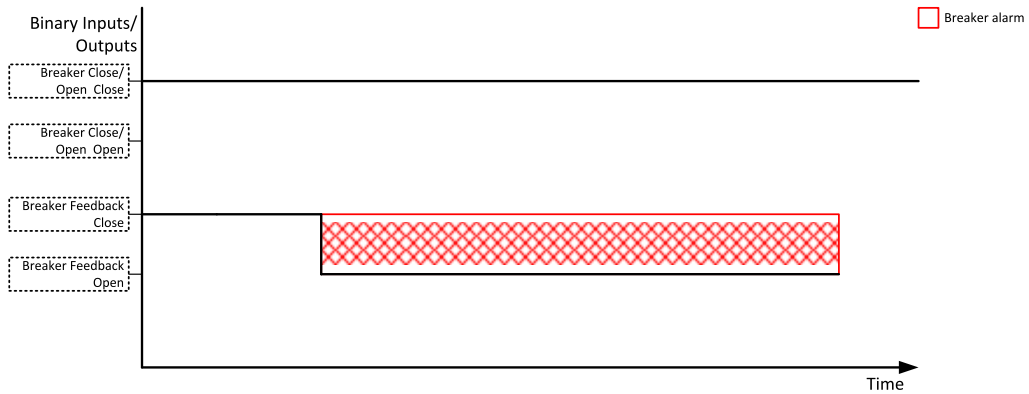


Image 6.20 Breaker fail - breaker close/open in steady position - close

When binary output breaker close/open opens there is 2 sec delay for breaker fail detection.

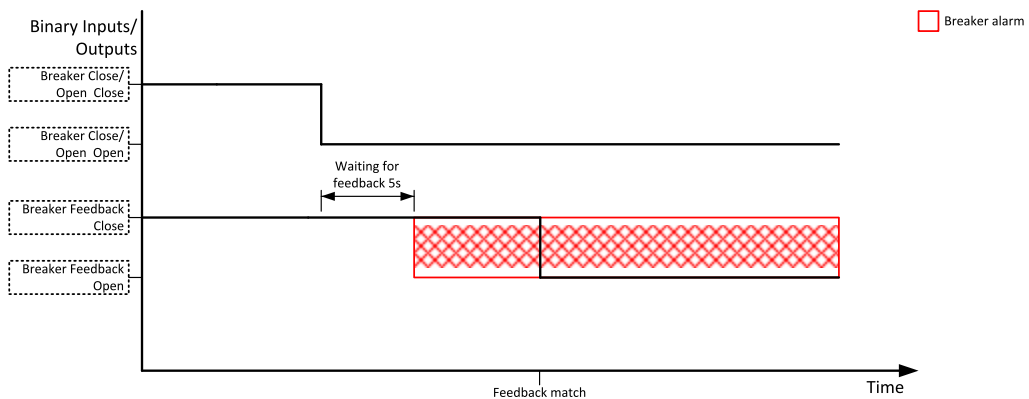


Image 6.21 Breaker fail - breaker close/open opens

When binary output breaker close/open closes there is 2 sec delay for breaker fail detection.

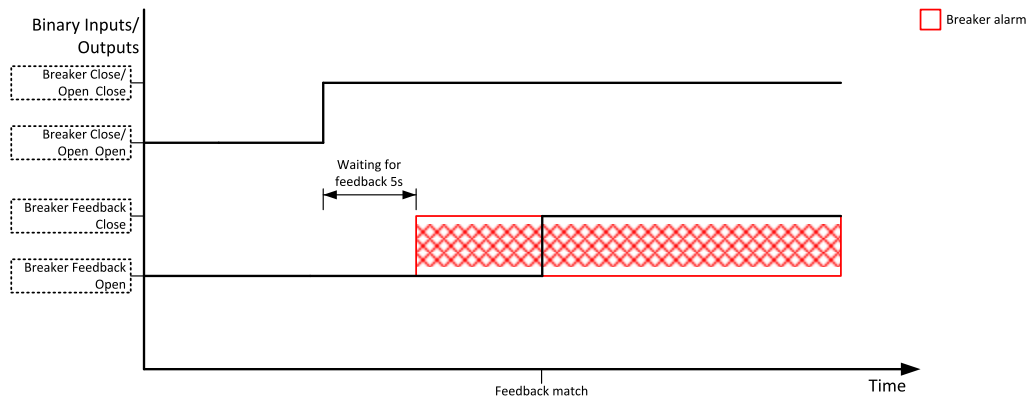


Image 6.22 Breaker fail - breaker close/open closes

5.5.14 Exercise timers

The exercise (general-purpose) timers in controller are intended for scheduling of any operations such as e.g. periodic tests of the gen-set, scheduled transfer of the load to the gen-set prior to an expected disconnection of the mains etc.

Related setpoints for timer 1 are:

- ▶ [Timer 1 Function \(page 325\)](#)
- ▶ [Timer 1 Repetition \(page 326\)](#)
- ▶ [Timer 1 First Occur. Date \(page 327\)](#)
- ▶ [Timer 1 First Occur. Time \(page 327\)](#)
- ▶ [Timer 1 Duration \(page 327\)](#)
- ▶ [Timer 1 Repeated \(page 328\)](#)
- ▶ [Timer 1 Repeat Day \(page 331\)](#)
- ▶ [Timer 1 Day \(page 330\)](#)
- ▶ [Timer 1 Repeated Day In Week \(page 331\)](#)
- ▶ [Timer 1 Repeat Day In Month \(page 331\)](#)
- ▶ [Timer 1 Repeat Week In Month \(page 332\)](#)
- ▶ [Timer 1 Refresh Period \(page 329\)](#)
- ▶ [Timer 1 Weekends \(page 330\)](#)

Related setpoints for timer 2 are:

- ▶ [Timer 2 Function \(page 332\)](#)
- ▶ [Timer 2 Repetition \(page 333\)](#)
- ▶ [Timer 2 First Occur. Date \(page 334\)](#)
- ▶ [Timer 2 First Occur. Time \(page 334\)](#)
- ▶ [Timer 2 Duration \(page 334\)](#)
- ▶ [Timer 2 Repeated \(page 335\)](#)
- ▶ [Timer 2 Repeat Day \(page 338\)](#)
- ▶ [Timer 2 Day \(page 337\)](#)
- ▶ [Timer 2 Repeated Day In Week \(page 338\)](#)
- ▶ [Timer 2 Repeat Day In Month \(page 338\)](#)
- ▶ [Timer 2 Repeat Week In Month \(page 339\)](#)
- ▶ [Timer 2 Refresh Period \(page 336\)](#)
- ▶ [Timer 2 Weekends \(page 337\)](#)

Available modes of each timer:

Once	This is a single shot mode. The timer will be activated only once at preset date/time for preset duration.
Daily	The timer is activated every "x-th" day. The day period "x" is adjustable. Weekends can be excluded. E.g. the timer can be adjusted to every 2nd day excluding Saturdays and Sundays.
Weekly	The timer is activated every "x-th" week on selected weekdays. The week period "x" is adjustable. E.g. the timer can be adjusted to every 2nd week on Monday and Friday.
Monthly	The timer is activated every "x-th" month on the selected day. The requested day can be selected either as "y-th" day in the month or as "y-th" weekday in the month. E.g. the timer can be adjusted to every 1st month on 1st Tuesday.
Short period	The timer is repeated with adjusted period (hh:mm). The timer duration is included in the period.

Once mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint *Timer 1 Function* (page 325).

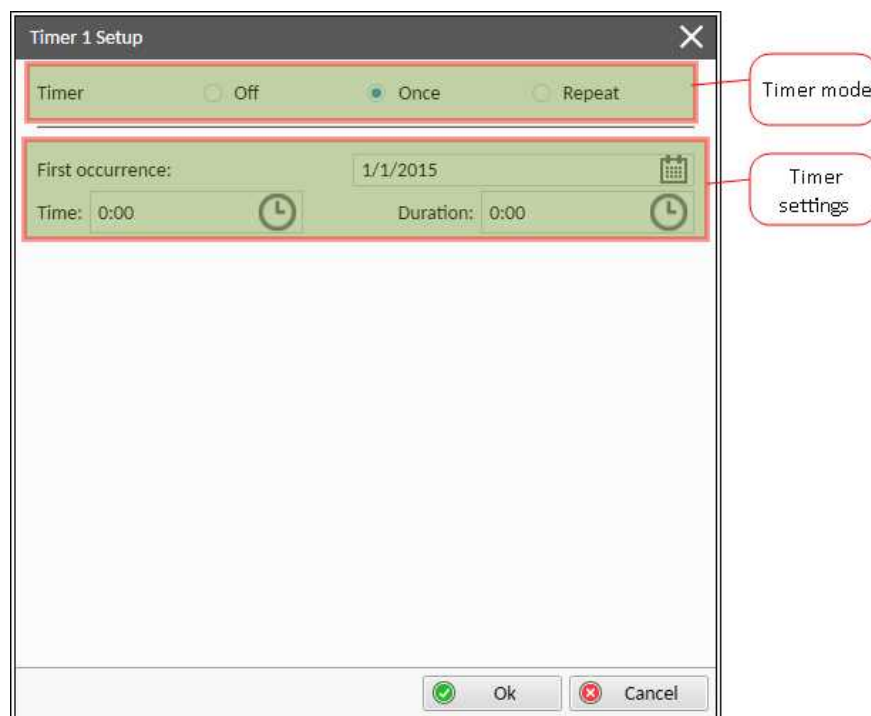


Image 6.23 Once mode - IntelliConfig

In timer mode select Once. In timer settings adjust date and time of occurrence of timer. Also adjust the duration of timer.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 325) setpoint. Than go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 326) setpoint select

Once mode. Then adjust **Timer 1 First Occur. Date** (page 327), **Timer 1 First Occur. Time** (page 327) and **Timer 1 Duration** (page 327).

Note: Use left and right buttons to move between timer setpoints.

Daily mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint **Timer 1 Function** (page 325).

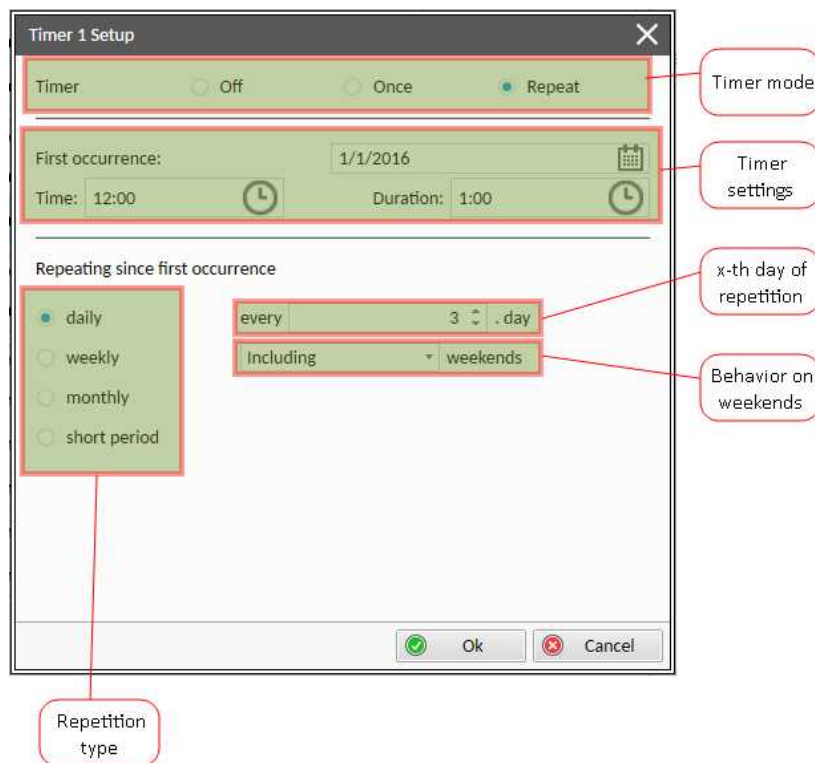


Image 6.24 Daily mode - IntelliConfig

In timer mode select Repeat. In repetition type select Daily. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the x-th day of repetition (**Timer 1 Refresh Period** (page 329)) and behavior of timer on weekends (**Timer 1 Weekends** (page 330)).

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 3rd day at 12:00 for 1 hour including weekends.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 325) setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 326) setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date** (page 327), **Timer 1 First Occur. Time** (page 327) and **Timer 1 Duration** (page 327). In setpoint **Timer 1 Repeated** (page 328) select Daily and adjust **Timer 1 Refresh Period** (page 329) (x-th day of repetition) and **Timer 1 Weekends** (page 330) (behavior of timer on weekends).

Note: Use left and right buttons to move between timer setpoints.

Weekly mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint *Timer 1 Function* (page 325).

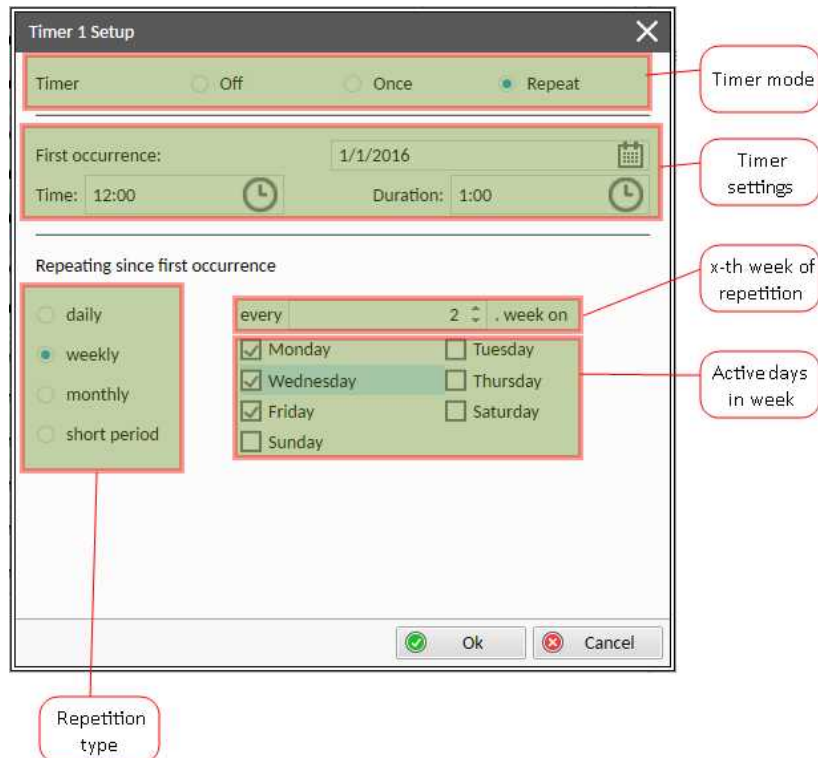


Image 6.25 Weekly mode - IntelliConfig

In timer mode select Repeat. In repetition type select Weekly. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the x-th week of repetition (**Timer 1 Refresh Period** (page 329)) and days when timer should be active (**Timer 1 Day** (page 330)).

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 2nd week on Monday, Wednesday and Friday at 12:00 for 1 hour.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 325) setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 326) setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date** (page 327), **Timer 1 First Occur. Time** (page 327) and **Timer 1 Duration** (page 327). In setpoint **Timer 1 Repeated** (page 328) select Weekly and adjust **Timer 1 Day** (page 330) (days when timer should be active) and **Timer 1 Refresh Period** (page 329) (x-th week of repetition).

Note: Use left and right buttons to move between timer setpoints.

Monthly mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint **Timer 1 Function (page 325)**.

There are two types of monthly repetition. First of them is based on repeating one day in month.

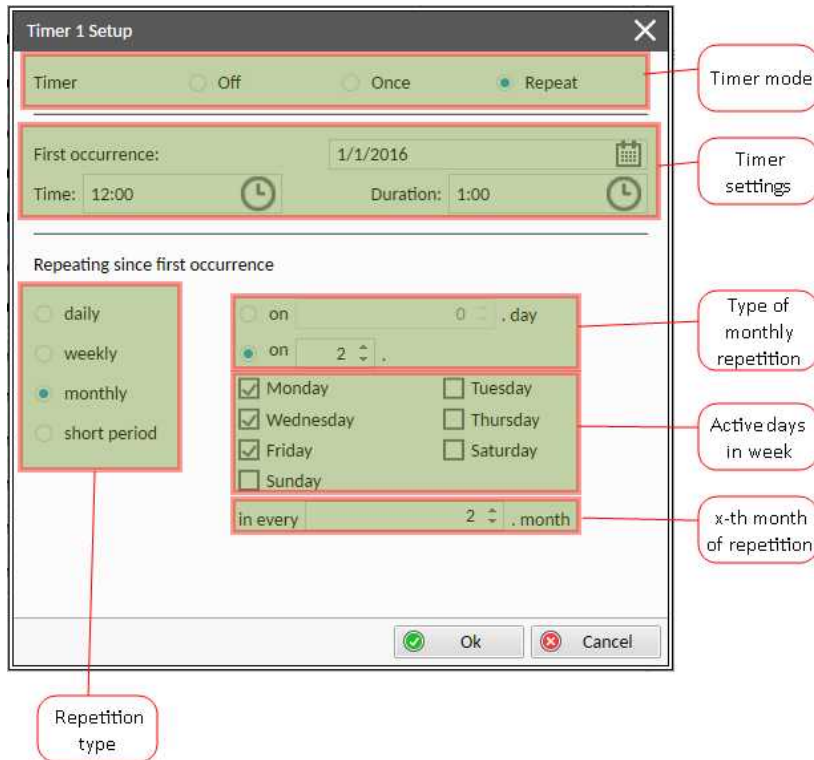


Image 6.26 Monthly mode - IntelConfig

In timer mode select Repeat. In repetition type select Monthly. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Than select the type of monthly repetition and the x-th day of repetition (**Timer 1 Repeat Day In Month (page 331)**). Than select the x-th month of repetition.

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 2nd day in 2nd month at 12:00 for 1 hour.

Second type of monthly repetition is based on repeating days in week in month.

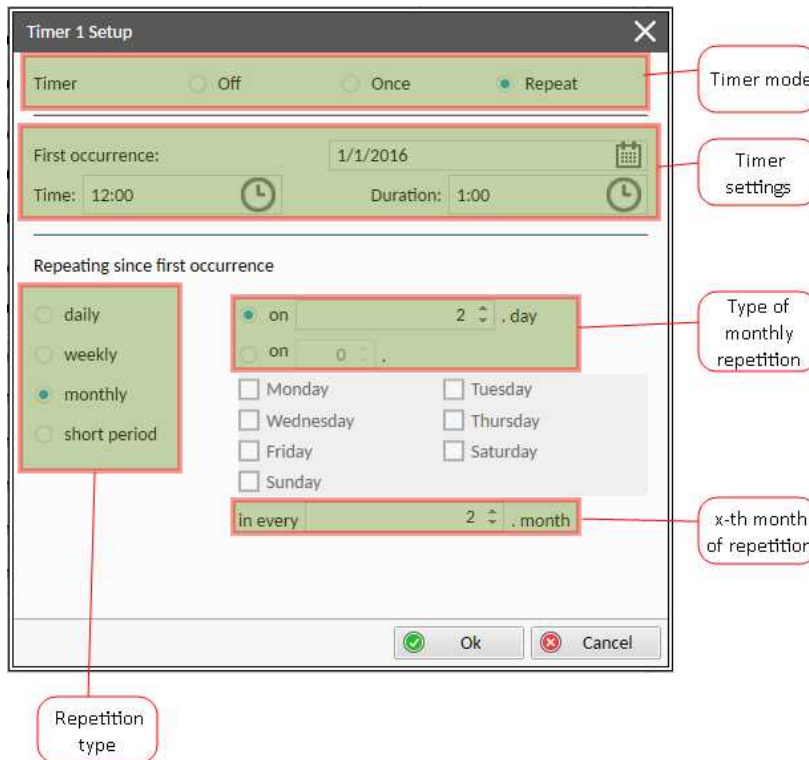


Image 6.27 Monthly mode - Intelliconfig

In timer mode select Repeat. In repetition type select Monthly. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the type of monthly repetition, the x-th week of repetition and days in week. Then select the x-th month of repetition.

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 2nd week in 2nd month on Monday, Wednesday and Friday at 12:00 for 1 hour.

Set-up via controller interface

There are two types of monthly repetition. First of them is based on repeating one day in month.

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function (page 325)** setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition (page 326)** setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date (page 327)**, **Timer 1 First Occur. Time (page 327)** and **Timer 1 Duration (page 327)**. In setpoint **Timer 1 Repeated (page 328)** select Monthly and adjust type of monthly repetition via **Timer 1 Repeat Day (page 331)**, **Timer 1 Refresh Period (page 329)** (x-th month of repetition) and **Timer 1 Repeat Day In Month (page 331)** (concrete day in repeated months).

Second type of monthly repetition is based on repeating days in week in month.

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function (page 325)** setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition (page 326)** setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date (page 327)**, **Timer 1 First Occur. Time (page 327)** and **Timer 1 Duration (page 327)**. In setpoint **Timer 1 Repeated (page 328)** select Monthly and adjust type of monthly repetition via **Timer 1 Repeat Day (page 331)**, **Timer 1 Refresh Period (page 329)** (x-th month of repetition), **Timer 1 Repeated Day In Week (page 331)** (days in week when timer is active) and **Timer 1 Repeat Week In Month (page 332)** (concrete week in repeated months).

Note: Use left and right buttons to move between timer setpoints.

Short period mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint *Timer 1 Function* (page 325).

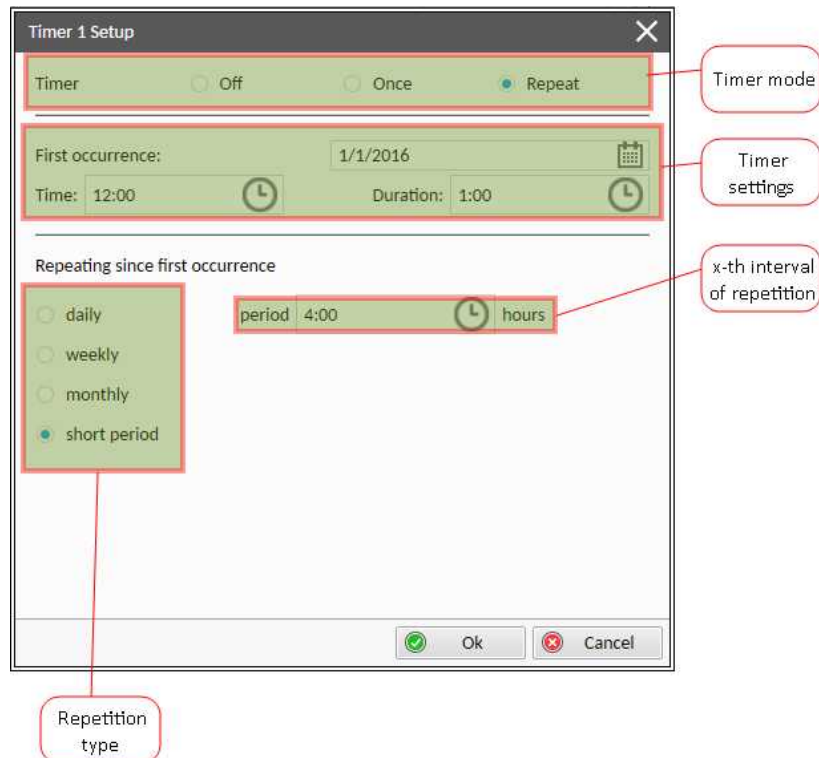


Image 6.28 Short period mode - IntelliConfig

In timer mode select Repeat. In repetition type select Short period. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the interval of repetition (shorter than 1 day).

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 4th hour for 1 hour.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 325) setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 326) setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date** (page 327), **Timer 1 First Occur. Time** (page 327) and **Timer 1 Duration** (page 327). In setpoint **Timer 1 Repeated** (page 328) select Short Period and adjust **Timer 1 Refresh Period** (page 329) (interval of repetition).

Note: Use left and right buttons to move between timer setpoints.

5.5.15 Rental Timers

In controller are two timers which are designed like rental timer. Rental timers will stop gen-set after their elapse.

How to set-up rental timer

This is a short guide for settings of rental timers. Please see following few steps how to set up rental timers:

- ▶ Choose the type of rental timer
 - **Rental Timer 1 (page 339)** (based on engine running hours)
 - **Rental Timer 2 (page 341)** (based on date)
- ▶ Adjust the length of chosen timer
- ▶ Adjust the warning for user **Rental Timer 1 Wrn (page 341)** or **Rental Timer 2 Wrn (page 343)**(warning will be displayed in alarmlist before elapsing of rental timer)
- ▶ Adjust **Rental Timer BOC (page 343)** - common for both timers (if engine is still running after rental timer counts down, this timer will starts count down and after elapse of timer the gen-set will be cooled down and stop)

5.5.16 Service timers

Running hours counters

Service timers are used as maintenance interval counters. Counters can be set by setpoints - **Maintenance Timer 1 (page 233)**, **Maintenance Timer 2 (page 234)** and **Maintenance Timer 3 (page 234)**. All of them work the same way - their values are decremented every hour when the gen-set is running.

Actual value of counters is located either as the same setpoints **Maintenance Timer 1 (page 233)**, **Maintenance Timer 2 (page 234)** and **Maintenance Timer 3 (page 234)** or as values **Maintenance 1 (page 492)**, **Maintenance 2 (page 492)** and **Maintenance 3 (page 493)**.

When the value of counter reaches 0, the alarm **Wrn Maintenance 1 (page 686)** or **Wrn Maintenance 2 (page 686)** or **Wrn Maintenance 3 (page 686)** is active until the respective counter is readjusted back to nonzero value.

Unused counter has to be adjusted to maximal value 10000 (Disabled).

5.5.17 Analog switches

There are logical analog function dedicated for analog switches. Each analog switch has setpoints for level ON and level OFF and logical binary output.

Analog switch	Setpoints	Binary output
AIN SWITCH 01 (PAGE 647)	Analog Switch 1 On (page 265) Analog Switch 1 Off (page 266)	AIN SWITCH01 (PAGE 579)
AIN SWITCH 02 (PAGE 647)	Analog Switch 2 On (page 268) Analog Switch 2 Off (page 269)	AIN SWITCH02 (PAGE 580)
AIN SWITCH 03 (PAGE 647)	Analog Switch 3 On (page 271) Analog Switch 3 Off (page 272)	AIN SWITCH03 (PAGE 580)
AIN SWITCH 04 (PAGE 648)	Analog Switch 4 On (page 274) Analog Switch 4 Off (page 275)	AIN SWITCH04 (PAGE 581)
AIN SWITCH 05 (PAGE 648)	Analog Switch 5 On (page 277) Analog Switch 5 Off (page 278)	AIN SWITCH05 (PAGE 581)

Analog switch	Setpoints	Binary output
AIN SWITCH 06 (PAGE 648)	Analog Switch 6 On (page 280) Analog Switch 6 Off (page 281)	AIN SWITCH06 (PAGE 582)
AIN SWITCH 07 (PAGE 649)	Analog Switch 7 On (page 283) Analog Switch 7 Off (page 284)	AIN SWITCH07 (PAGE 582)
AIN SWITCH 08 (PAGE 649)	Analog Switch 8 On (page 286) Analog Switch 8 Off (page 287)	AIN SWITCH08 (PAGE 583)
AIN SWITCH 09 (PAGE 649)	Analog Switch 9 On (page 289) Analog Switch 9 Off (page 290)	AIN SWITCH09 (PAGE 583)
AIN SWITCH 10 (PAGE 650)	Analog Switch 10 On (page 292) Analog Switch 10 Off (page 293)	AIN SWITCH10 (PAGE 584)
AIN SWITCH 11 (PAGE 650)	Analog Switch 11 On (page 295) Analog Switch 11 Off (page 296)	AIN SWITCH11 (PAGE 584)
AIN SWITCH 12 (PAGE 650)	Analog Switch 12 On (page 298) Analog Switch 12 Off (page 299)	AIN SWITCH12 (PAGE 585)
AIN SWITCH 13 (PAGE 651)	Analog Switch 13 On (page 301) Analog Switch 13 Off (page 302)	AIN SWITCH13 (PAGE 585)
AIN SWITCH 14 (PAGE 651)	Analog Switch 14 On (page 304) Analog Switch 14 Off (page 305)	AIN SWITCH14 (PAGE 586)
AIN SWITCH 15 (PAGE 651)	Analog Switch 15 On (page 307) Analog Switch 15 Off (page 308)	AIN SWITCH15 (PAGE 586)
AIN SWITCH 16 (PAGE 652)	Analog Switch 16 On (page 310) Analog Switch 16 Off (page 311)	AIN SWITCH16 (PAGE 587)
AIN SWITCH 17 (PAGE 652)	Analog Switch 17 On (page 313) Analog Switch 17 Off (page 314)	AIN SWITCH17 (PAGE 587)
AIN SWITCH 18 (PAGE 652)	Analog Switch 18 On (page 316) Analog Switch 18 Off (page 317)	AIN SWITCH18 (PAGE 588)
AIN SWITCH 19 (PAGE 653)	Analog Switch 19 On (page 319) Analog Switch 19 Off (page 320)	AIN SWITCH19 (PAGE 588)
AIN SWITCH 20 (PAGE 653)	Analog Switch 20 On (page 322) Analog Switch 20 Off (page 323)	AIN SWITCH20 (PAGE 589)

The behavior of the switch depends on the adjustment of the setpoints.

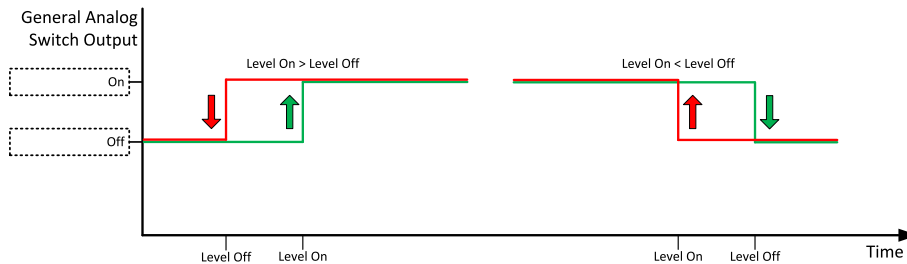


Image 6.29 Principle of analog switch

5.5.18 Additional running engine indications

It is helpful to have information other than speed (RPM), whether the engine is rotating or not, especially if RPM is measured from the generator frequency instead of magnetic pickup. The generator frequency measurement can be unreliable at very low speeds and/or may have a delayed reaction to sudden and big changes (i.e. in the moment that the engine has just started...).

The following conditions are evaluated as additional running engine indication:

- ▶ Voltage on the D+ input is higher than **D+ Threshold (page 220)** of battery voltage. Connect this input to the D+ (L) terminal of the charging alternator and enable the D+ function by the setpoint D+ Function. If D+ terminal is not available, leave the input unconnected and disable the function.
- ▶ The pickup is not used and frequency is not detected on the pickup input. Connect the pickup input to the W terminal of the charging alternator if you do not use pickup and the W terminal is available. If not, leave the input unconnected.
- ▶ Oil pressure > **Starting Oil Pressure (page 206)** setpoint. The oil pressure is evaluated from the analog input or from the ECU if an ECU is configured.
- ▶ Binary input **OIL PRESSURE (PAGE 558)** is in logical 0.
- ▶ At least one phase of generator voltage is >25% of nominal voltage.

These signals are used during start for powering down the starter motor even if still no RPM is measured and also during stop in order to evaluate if the engine is really stopped.

5.5.19 Voltage phase sequence detection

Controller detects phase sequence voltage terminals. This protection is important after controller installation to avoid wrong voltage phase connection. There is fix defined phase sequence in controller L1, L2, L3. When the phases are connected in different order (e.g. L1,L3,L2 or L2,L1,L3) following alarms are detected:

- ▶ **Generator CCW Rotation (page 693)**
- ▶ **Mains CCW Rotation (page 693)**

5.5.20 Gen-set operation states

Engine state machine

Init	Autotest during controller power on. Note: Sometimes controller stays in Init mode after FW upgrade. It means that there are new parameters which should be checked by user. It is possible to disable this control via IntelliConfig.
Not ready	Gen-set is not ready to start. Example: When shutdown alarm is active or unit is in OFF mode.
Prestart	Prestart sequence in process, PRESTART (PAGE 616) output is closed. Example: Usually used for preheating or processes executed prior gen-set start.
Cranking	Engine is cranking, STARTER (PAGE 620) output is closed
Pause	Pause between start attempts.
Starting	Starting speed is reached and the Idle timer is running.
Running	Gen-set is running at nominal speed.
Loaded	Gen-set is running at nominal speed and GCB CLOSE/OPEN (PAGE 600) is closed.
Stop	Stop. Example: Automatic or manual stop command was issued, engine is stopping.
Shutdown	Shut-down alarm activated.
Ready	Gen-set is ready to run.
Cooling	Gen-set is cooling before stop.
EmergMan	EMERGENCY MAN (PAGE 550) gen-set operation. Example: Used for bypass the controller and engine manual start.

Engine started conditions

- ▶ Engine speed (RPM) > **Starting RPM (page 205)** or
- ▶ Oil pressure > **Starting Oil Pressure (page 206)** or
- ▶ Binary input **OIL PRESSURE (PAGE 558)** is in logical 0 or
- ▶ D+ terminal active (reached **D+ Threshold (page 220)** of supply voltage) for minimum 1 s or
- ▶ Generator voltage > 25% of **Nominal Voltage Ph-N (page 193)** or **Nominal Voltage Ph-Ph (page 193)** (any phase)

Note: Any of these condition will disconnect starter of the engine, however for transition to next state RPM needs to be higher than **Starting RPM (page 205)**.

Engine running conditions

- ▶ Engine speed (RPM) > **Starting RPM (page 205)** or
- ▶ Oil pressure > **Starting Oil Pressure (page 206)** or
- ▶ Binary input **OIL PRESSURE (PAGE 558)** is in logical 0 or
- ▶ Generator voltage > 25% of **Nominal Voltage Ph-N (page 193)**

Still engine conditions

- ▶ Engine speed (RPM) < **Starting RPM (page 205)** or
- ▶ Oil pressure < **Starting Oil Pressure (page 206)** or
- ▶ Binary input **OIL PRESSURE (PAGE 558)** is in logical 1 or
- ▶ Generator voltage < 50 V (any phase)

Note: When the engine was running before and all above conditions are fulfilled, additional 2 s delay is necessary to confirm “still engine”.

When any engine running conditions are appeared on still engine than the **Wrm Stop Fail (page 688)** is activated with following delay:

- ▶ for generator voltage from 10 V to < 50 % of nominal voltage, Wrm Stop Fail has delay 1 s
- ▶ for generator voltage > 50 % of nominal voltage, Wrm Stop Fail has delay 200 ms
- ▶ Oil pressure > **Starting Oil Pressure (page 206)**, Wrm Stop Fail has delay 1 s
- ▶ Binary input **OIL PRESSURE (PAGE 558)** is in logical 0, Wrm Stop Fail has delay 1 s
- ▶ for detected RPM, there is no delay.

Stop engine conditions

If no engine running conditions are validated than the controller will wait extra 12 s before leaving the Machine state Stop and than it will release the **STOP SOLENOID (PAGE 621)** output.

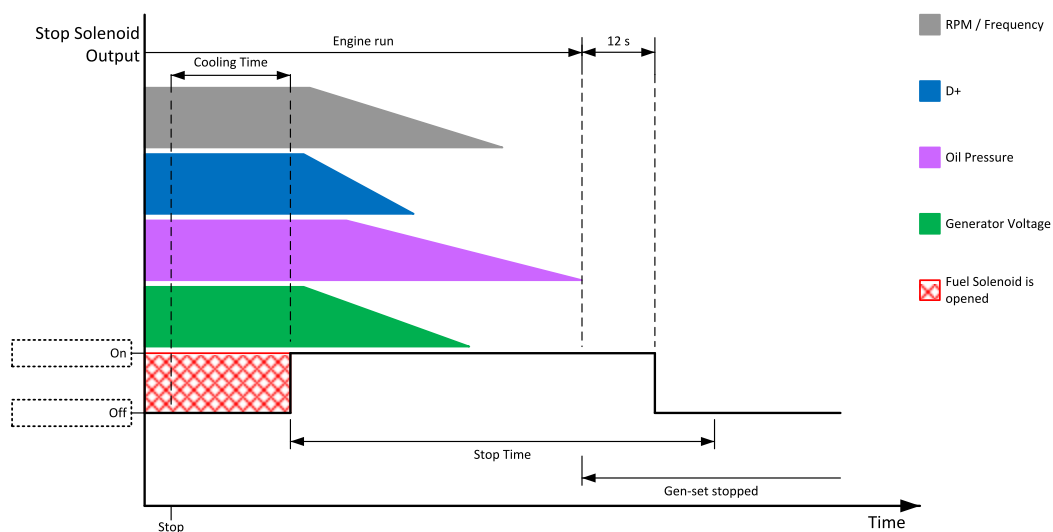


Image 6.30 Engine stops in **Stop Time (page 217)**

When the total time of stopping will exceed setpoint **Stop Time (page 217)** than the **Wrm Stop Fail (page 688)** and binary outputs are activated. The controller will continuously try to stop the engine.

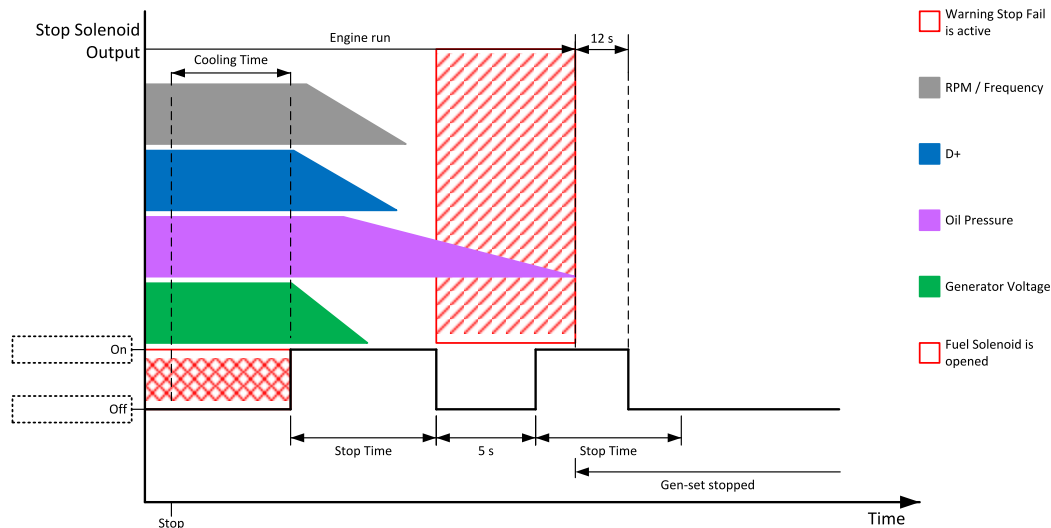


Image 6.31 Engine stops after first **Stop Time** (page 217)

Electric state machine

MainsOper	Mains is present and all its values are within limits. ■ Example: MCB is closed, GCB is opened
MainsFlt	Mains fails
IslOper	Island operation ■ Example: MCB is opened, GCB is closed
MainsRet	Mains recover
BrksOff	GCB, MCB opened

5.5.21 Sensor curves

Background of the sensor calibration

To correct measuring error of each analog input (pressure, temperature, level, etc.) calibrating constants should be set. Calibration is made by adding the value of setpoint **CU AIN1 Calibration** (page 349), or **CU AIN2 Calibration** (page 350), or **CU AIN3 Calibration** (page 350), or **CU AIN4 Calibration** (page 351) directly to the calculated value at analog input.

Note: The calibration must be done at the operational point of the analog input (e.g. 80°C, 4.0Bar etc..)

Default sensor curves

There are 16 default resistive curves available. The following table provides information on minimum/maximum values of respective sensors. Actual values especially of temperature curves may differ. Meaning is to prolong curve to the lower temperature values, so the cold engine will not raise alarm fail sensor.

Curve	Min [Ohm]	Max [Ohm]	Units
VDO 10 Bar 0-2400ohm	0	2400	Bar
VDO40-120°C0-2400ohm	0	2400	°C
VDOLevel%0-2400ohm	0	2400	%
General line 1	0	1000	ohm
General line 2	0	1000	ohm
General line 3	0	1000	ohm
General line 4	0	1000	ohm
General line 5	0	1000	ohm
General line 6	0	1000	ohm
General line 7	0	1000	ohm
General line 8	0	1000	ohm
General line 9	0	1000	ohm
General line 10	0	1000	ohm
General line 11	0	1000	ohm
General line 12	0	1000	ohm
General line 13	0	1000	ohm

Note: Curves can be modified via IntelliConfig. In IntelliConfig are also prepared some standard curves.

IMPORTANT: For right behavior of function, curve for this analog input has to be in percentage and setpoint Fuel Tank Volume (page 230) has to be adjusted correctly.

 [back to Functions](#)

5.5.22 PLC

PLC Editor is powerful tool which helps you to create your own PLC scheme. It has graphical interface to have user interface easy to use.

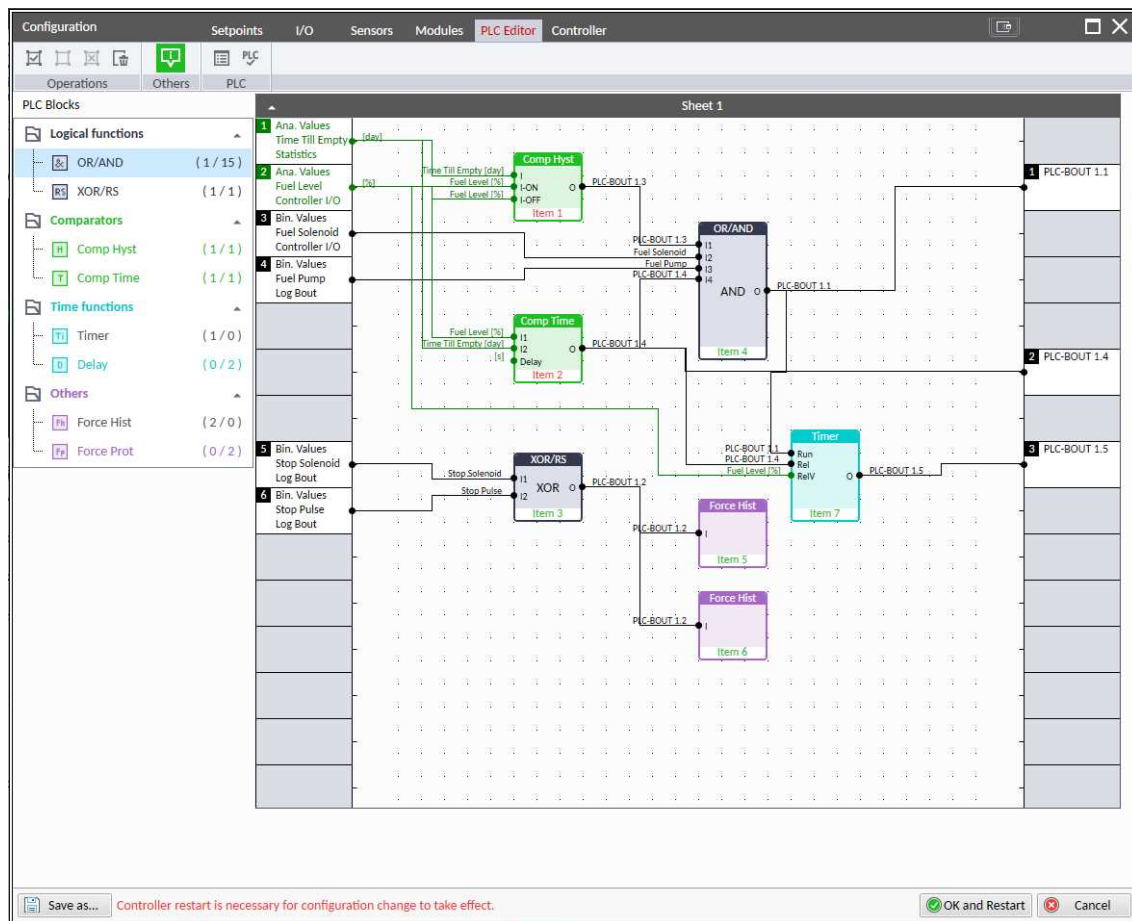


Image 6.32 PLC Editor main page

List of available PLC blocks

PLC block	Number of blocks
OR/AND	16
XOR/RS	2
Comparator with hysteresis (Comp Hyst)	2
Comparator with delay (Comp Time)	2
Timer	1
Delay	4
Force history record (Force Hist)	2
Force protection (Force Prot)	2

Working with the editor

If the currently opened archive does not contain any PLC program, then an empty drawing is created automatically when you select the PLC Editor. The procedure of creation of a PLC drawing (program) contains following essential steps:

- ▶ Adjust the sheet to your needs. See **Working with sheets (page 137)** for more information.
- ▶ Add PLC blocks into the sheets. See **Adding PLC blocks (page 137)** for more information.
- ▶ Define inputs and outputs of the PLC program. See **Define inputs and outputs (page 138)** for more information.
- ▶ Create connections between inputs, blocks and outputs. See **Creating wires (page 141)** for more information.
- ▶ Adjust properties of the blocks. See **List of PLC blocks (page 659)** for more information about blocks.

Working with sheets

Drag the sheet edges to re-size the sheet according to your needs.

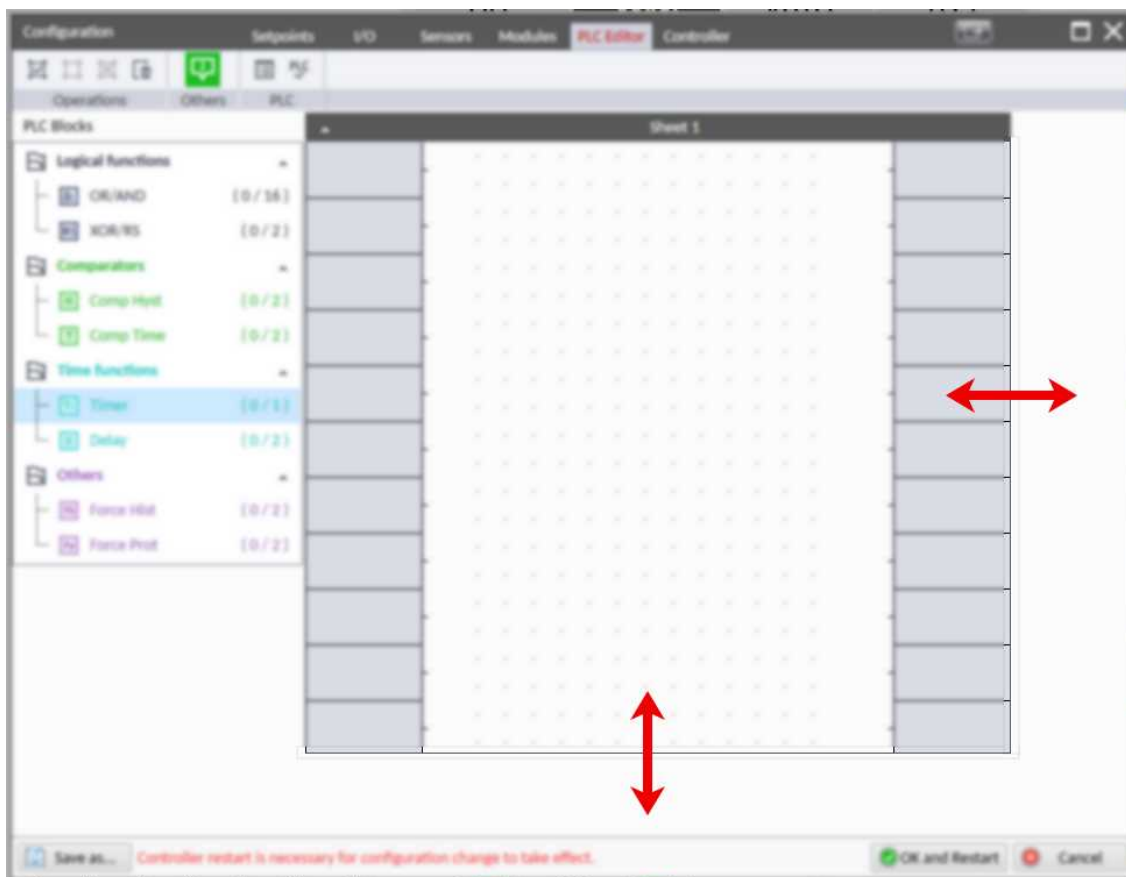


Image 6.33 Adjusting PLC sheet

Adding PLC blocks

Adding PLC block is simple and intuitive. Follow the procedure below to add PLC block.

- ▶ Select required block from the list of available PLC blocks at the left and drag it into the sheet.
- ▶ Double-click on the block and adjust properties of the block. See **List of PLC blocks (page 659)** for more information about blocks.

- ▶ Connect the block inputs and outputs by drawing wires in the sheet. See **Define inputs and outputs** (page 138) for more information. It is also possible to connected inputs and outputs via properties of selected PLC block.

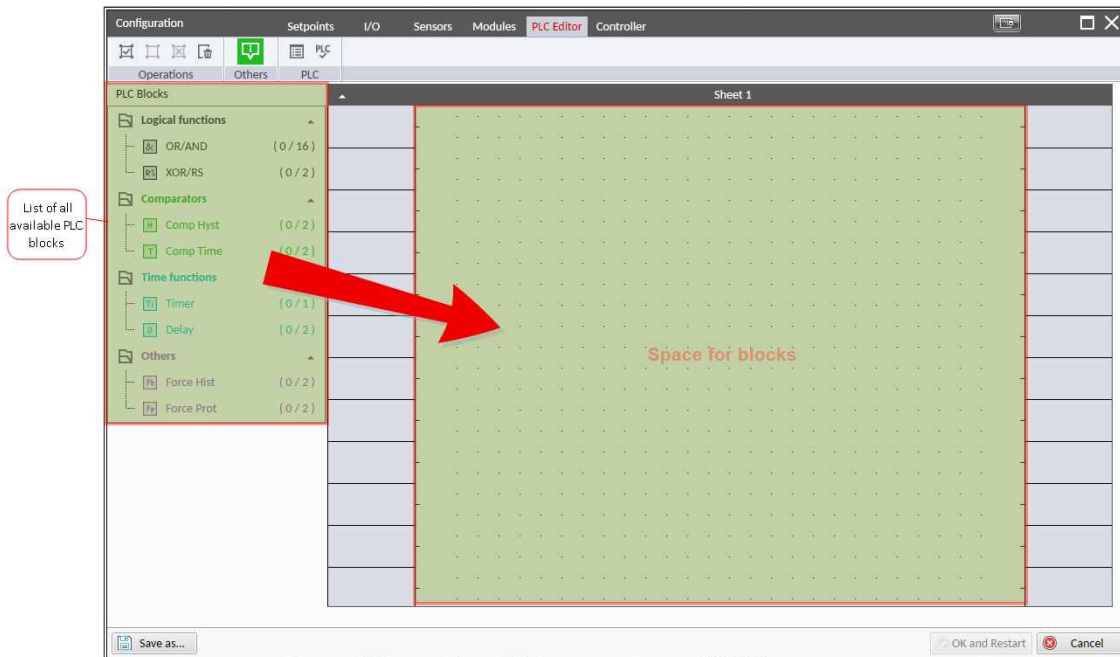


Image 6.34 Adding PLC blocks

Note: To delete PLC block just click on it and press delete button. Also delete selection function can by used.

Note: To see context help for selected PLC block just press F1 button.

Define inputs and outputs

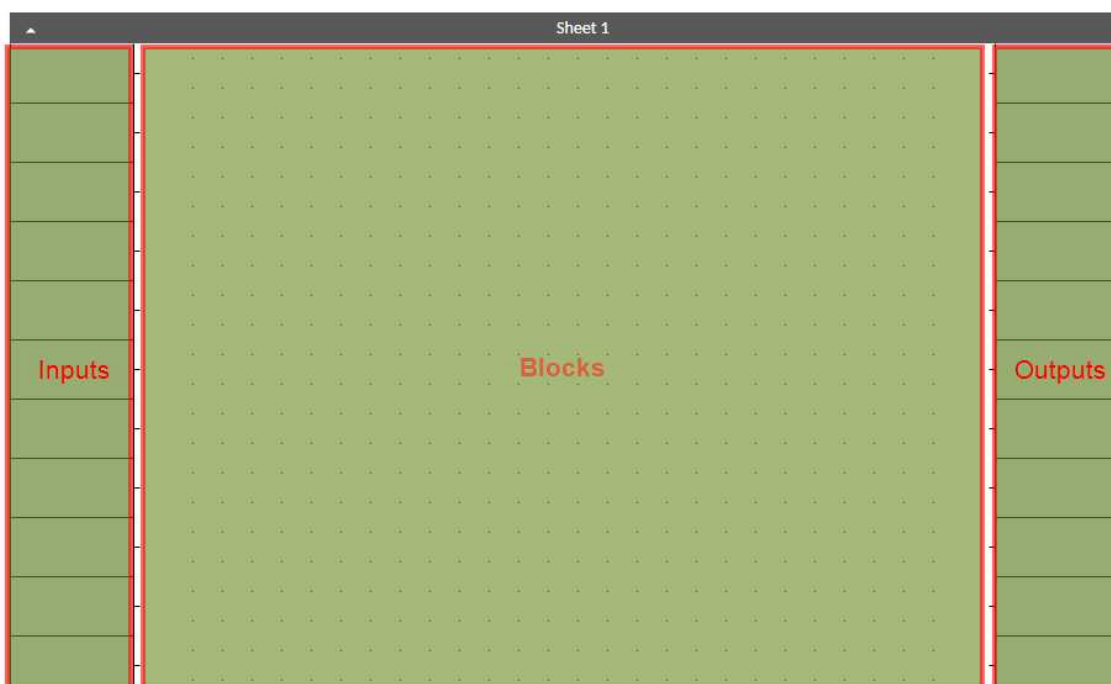


Image 6.35 Blank sheet of PLC editor

Inputs

Sheet inputs are located at the left side of a sheet. Follow the procedure below to add or edit an input.

- ▶ Double-click on a free input position or existing input to add new input or edit the existing one.
- ▶ Select the source for the input.
 - If you create a binary input, you can select a source from following categories:
 - Bin. Values - this category contains all binary values available in the controller as binary inputs, logical binary outputs etc.
 - PLC Outputs - this category contains all PLC blocks binary outputs available in the controller.
 - If you create an analog input, you can select a source from following categories:
 - Ana. Values - this category contains all analog values available in the controller as analog inputs, electrical values, values from ECU etc.
 - All Setpoints - this category contains all setpoints of the controller except the dedicated PLC setpoints. Names, resolutions and dimensions of these setpoints can not be modified.
 - PLC Setpoints - this category contains a group of setpoints which are dedicated for using in the PLC program. PLC setpoints can be renamed, their dimension, resolution and limits can be modified according to need of PLC blocks where they are used.

PLC Setpoint name:	Dimension:	Resolution:	Low limit:	High limit:	
<input type="text"/>	<input type="text"/>	<input type="text" value="1"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="button" value="Apply"/>

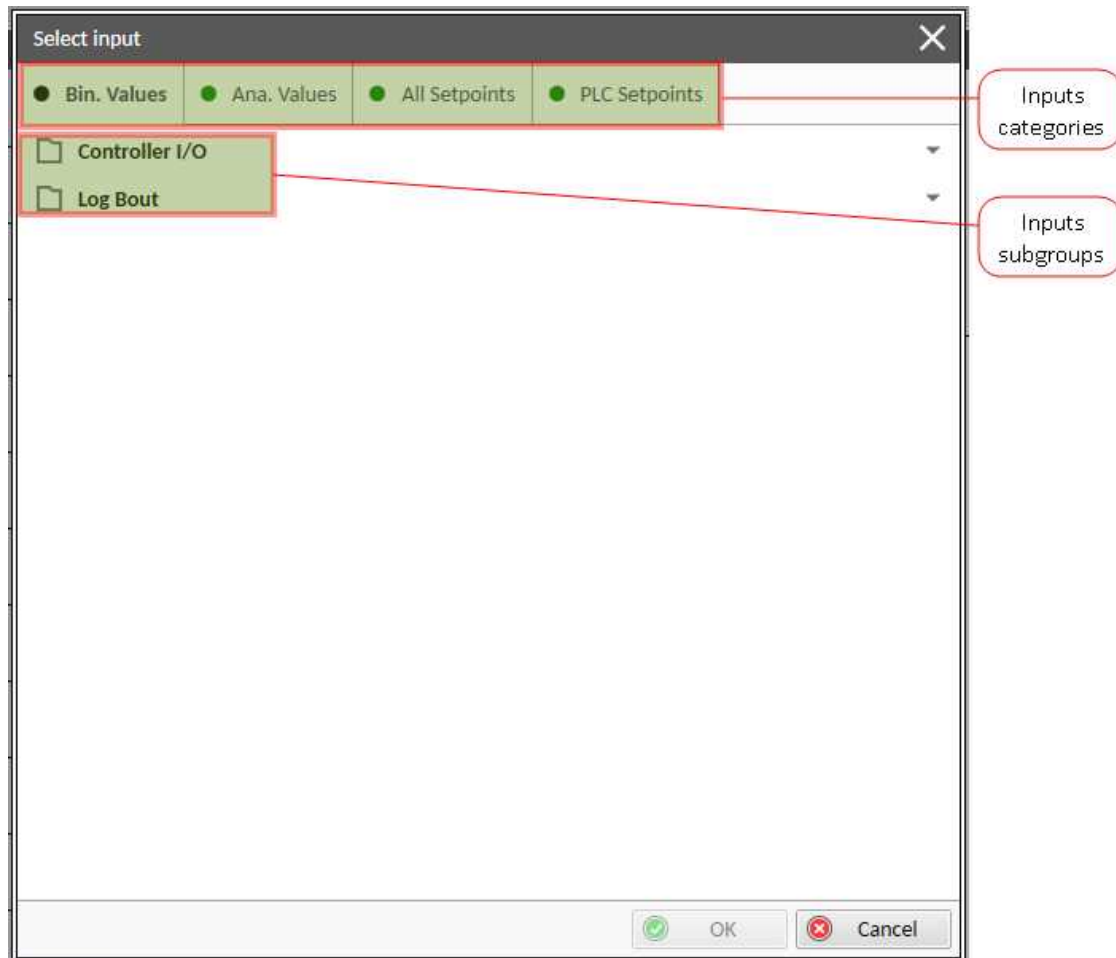


Image 6.36 PLC inputs

Outputs

Sheet outputs are located at the right side of a sheet. Follow the procedure below to add or edit an input.

- ▶ Doubleclick on a free output position to add new sheet output.
- ▶ Doubleclick on an already created output to configure the output onto a controller output terminal or a logical binary input (first of all some PLC block output has to be connected to this output to enable configuration of output).

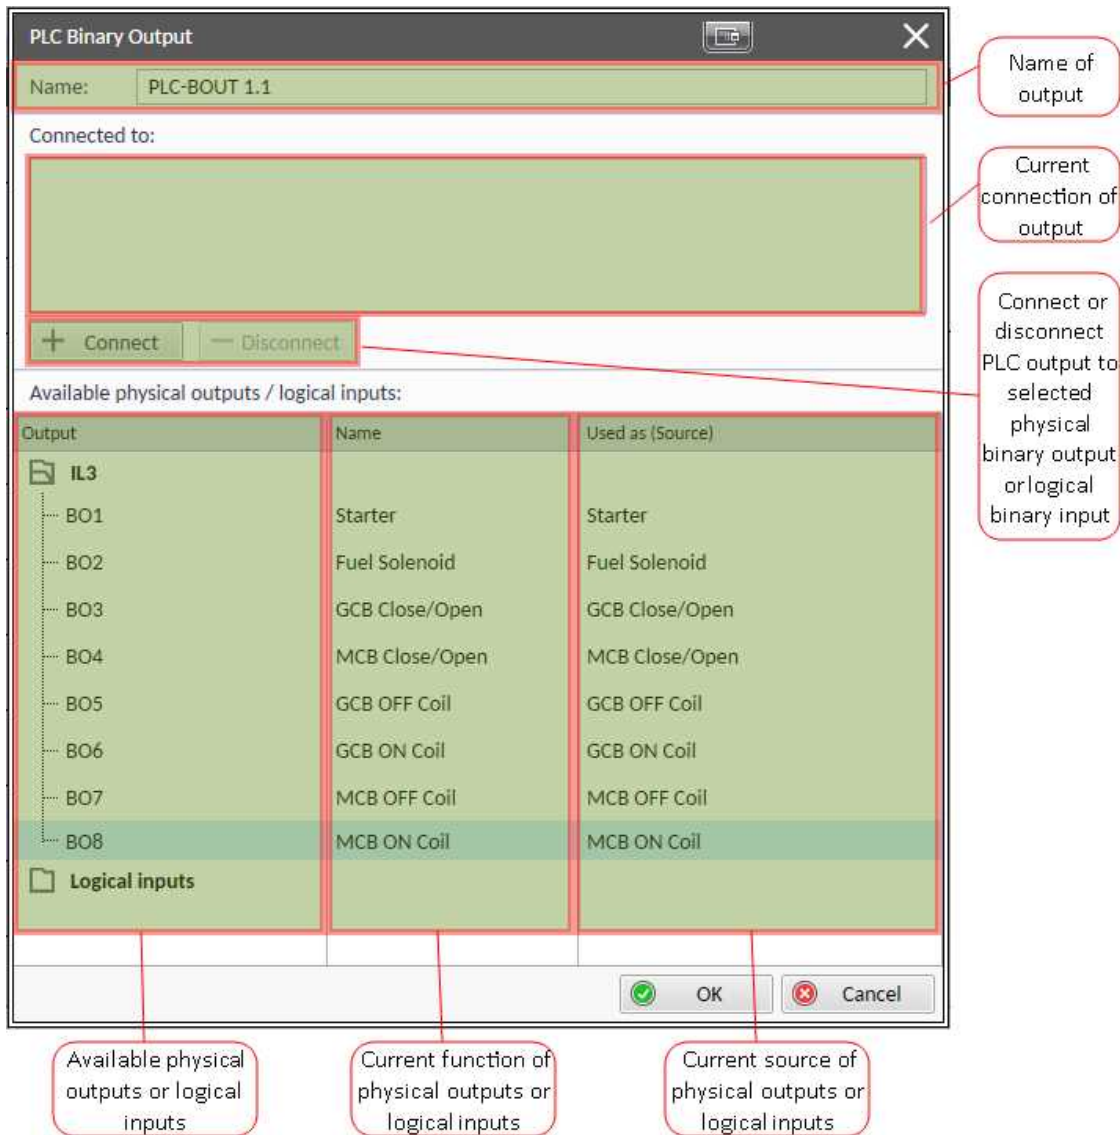


Image 6.37 PLC outputs

IMPORTANT: It is necessary to click on **Connect** button after selecting the output. Otherwise PLC output is not connected to output.

Creating wires

Wires can be create between PLC inputs and PLC blocks and between PLC blocks and PLC outputs.

IMPORTANT: Keep the order of starting and finishing connection points. Wires between inputs and blocks have to start from inputs. Wires between blocks and outputs have to start from blocks.

Follow the procedure below to create wire.

- ▶ Locate the mouse pointer over the starting point of the wire. If the area under the mouse pointer is a connection point, the pointer will change the color (fill of pointer will be white).
- ▶ Press and hold the left mouse button and drag the wire to the destination of required connection point. If you point over a valid connection point, the connection point will be marked with a red circle.
- ▶ Release the left mouse button to create a wire between the two points. The wire is routed automatically.

Note: It is possible to make connection only between the outputs and inputs with the same type of value (binary or analog). Binary values are marker by black pointer, analog values are marked with green pointer.

Note: To delete wire just click on it and press delete button. Also delete selection function can by used.

PLC logic execution rules

The PLC program is executed every 100 ms. The blocks are executed in order according to block numbers (item numbers), which are indicated in each block. The block numbers are assigned automatically according to position on sheet.



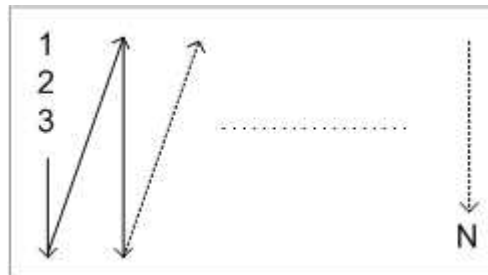


Image 6.38 PLC execution logic

IMPORTANT: Please always check that the blocks are ordered correctly, especially if you use direct feedbacks from outputs to inputs within one sheet. Wrong order may lead to incorrect results!!!

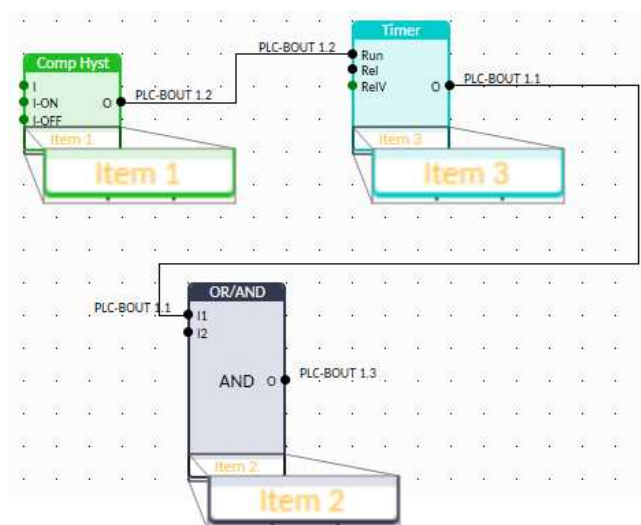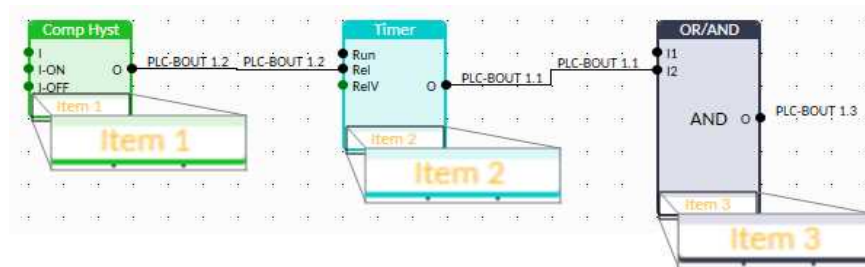

Other functions

Consistency check

Use this function to check if all inputs and outputs of PLC block are connected.

Delete whole content of sheet

Use this function to delete the whole content of sheet (including blocks, wires, inputs, outputs, etc...).

Hints

Use this function to enable or disable quick hints for blocks (controller help is not affected by this function).

PLC monitor

PLC monitor is a powerful tool for monitoring your PLC. Just click on PLC monitor button on main IntelliConfig page to see you PLC. Active inputs and outputs have blue color. Also wires with active signals have blue color.

IMPORTANT: It is not possible to edit PLC in PLC monitor tool.

5.5.23 Geo-fencing

Geo-fencing function is kind of protection that evaluates whether the actual GPS location is within predefined area and based on the evaluation takes an action (sends sms, stops engine, make history record etc.). Function is enabled by setpoint **Geo-Fencing (page 346)** or by logical binary input **GEO-FENCING ENABLED (PAGE 554)**.

Using IntelliConfig, it is possible to set two concentric geo-circles within which the unit is allowed to be located. Each geo-circle is defined as circular geographic area with centre (common for both geo-circles) named Home Position adjusted via setpoints **Home Latitude (page 344)** and **Home Longitude (page 344)** and radius named Fence Radius adjusted via setpoints **.Fence Radius 1 (page 345)** and **Fence Radius 2 (page 345)**.

Protections can be different for both circles. Protection are adjusted via setpoints **Fence 1 Protection (page 347)** and **Fence 2 Protection (page 348)**.

It is also possible to see the current position of the controller in WebSupervisor map view.

5.5.24 Tier 4 Final

Tier 4 Final support generally provides monitoring and control of after-treatment system installed on generators engine. The requirements are defined as:

- ▶ Providing After-Treatment status information by
 - displaying universal lamps (icons)
 - displaying analog and binary values
- ▶ Control of After-Treatment regeneration function by
 - transmitting commands to the ECU

Providing Aftertreatment status information

After-Treatment screen

This screen is shown with configured ECU which supports Tier 4 Final. After-Treatment screen is automatically shown, once any of selected lamps gets active or change status. Deactivating of the lamp will not trigger showing the screen. The screen is then shown until operator switch it to another one. Alarmlist screen has lower priority so even new alarm appears, After-treatment screen is still displayed. To avoid displaying blank screen,

inactive lamps are represented by "dotted" icons. For no active lamp the screen shows all dotted icons. Please see examples below:

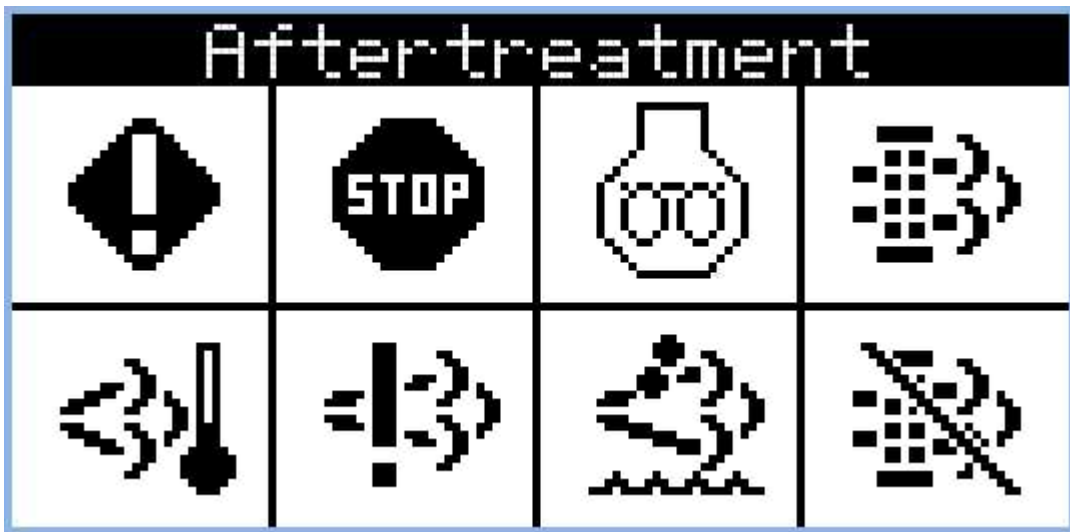


Image 6.39 Example of active Tier 4 Final screen

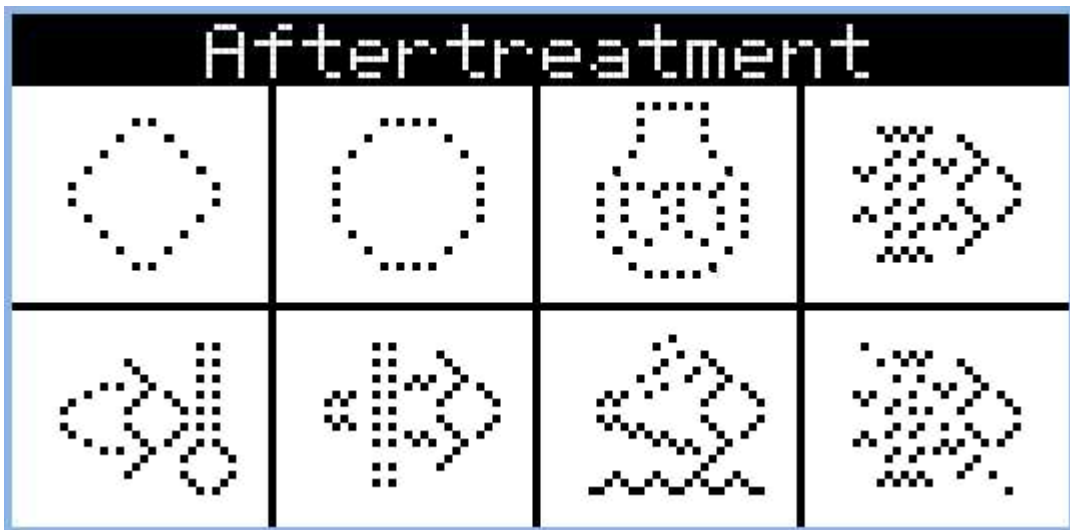


Image 6.40 Example of inactive Tier 4 Final screen

Universal lamps (icons)

Universal lamp icons are shown on the After-Treatment screen. Based on specific value read in specific frame with specific SPN is every lamp icon either:

- ▶ shown
- ▶ hidden
- ▶ blinking slow (1 Hz)
- ▶ blinking fast (2 Hz)

Note: Lamp icon blinking is defined as displaying active lamp icon and inverse colored active lamp icon in required frequency.

Lamp name	Active icon	Inactive icon	Notes
Amber warning lamp			Note: This value can light or blink on both frequencies.
Red stop lamp			Note: This value can light or blink on both frequencies.
Engine wait to start lamp			
DPF/SCR lamp command			Note: DPF = Diesel Particulate Filter; SCR = Selective Catalytic Reduction. This lamp also activates alarm After-Treatment (page 689).
Exhaust system high temperature lamp command			Note: This lamp also activates alarm After-Treatment (page 689).
Malfunction indicator lamp			Note: This value can light or blink on both frequencies. This lamp also activates alarm After-Treatment (page 689).
Fluid tank low level indicator			Note: This lamp also activates alarm After-Treatment (page 689).
DPF regeneration inhibited			Note: Indicates the state of diesel particulate filter active regeneration inhibition. This lamp also activates alarm After-Treatment (page 689).

Analog values

Supported analog values:

- ▶ DPF Ash Load (page 475)
- ▶ DPF Soot Load (page 475)
- ▶ DEF Level (page 475)

Control of After-Treatment regeneration function

User can force or inhibit regeneration process by activating appropriate binary inputs of the controller. Please see the list of binary inputs below:

- ▶ FORCE REGENERATION (PAGE 551)
- ▶ REGENERATION INHIB (PAGE 559)

5.5.25 Alternate configuration

In controller are 3 sets of configuration.

Configuration set 1	Configuration set 2	Configuration set 3
Nominal Power Split Phase 1 (page 355)	Nominal Power Split Phase 2 (page 359)	Nominal Power Split Phase 3 (page 363)
Nominal Power 1 (page 354)	Nominal Power 2 (page 358)	Nominal Power 3 (page 362)
Nominal RPM 1 (page 353)	Nominal RPM 2 (page 357)	Nominal RPM 3 (page 361)
Nominal Frequency 1 (page 353)	Nominal Frequency 2 (page 357)	Nominal Frequency 3 (page 361)
Nominal Voltage Ph-N 1 (page 353)	Nominal Voltage Ph-N 2 (page 357)	Nominal Voltage Ph-N 3 (page 361)
Nominal Voltage Ph-Ph 1 (page 354)	Nominal Voltage Ph-Ph 2 (page 358)	Nominal Voltage Ph-Ph 3 (page 362)
Nominal Current 1 (page 352)	Nominal Current 2 (page 356)	Nominal Current 3 (page 360)
Connection Type 1 (page 351)	Connection type 2 (page 355)	Connection type 3 (page 359)
ECU Speed Adjustment 1 (page 363)	ECU Speed Adjustment 2 (page 364)	ECU Speed Adjustment 3 (page 364)

Configuration sets can be changed via logical binary inputs **ALTERNATE CONFIG 2 (PAGE 522)** and **ALTERNATE CONFIG 3 (PAGE 522)**. Configuration set 1 is active when there is no input activated. In case that inputs **ALTERNATE CONFIG 2 (PAGE 522)** and **ALTERNATE CONFIG 3 (PAGE 522)** are active at the same time, the configuration set 3 is taken into account.

ALTERNATE CONFIG 2 (PAGE 522)	ALTERNATE CONFIG 3 (PAGE 522)	Active configuration set
0	0	1
1	0	2
0	1	3
1	1	3

5.5.26 ECU Frequency selection

Setpoint *ECU Freq Select* is no longer in use. However **ECU Frequency Select (page 478)** value was kept and the value can be calculated from **Nominal Frequency (page 194)** setpoint. Sequence for frequency change is executed automatically (engine must be in still condition and ECU is powered on – ECU Power Relay is not configured) in following 9 steps:

1. Starting of the engine is blocked (state: Not Ready)
2. Wait 100 ms
3. *ECU Stop Pulse* is set for 1000 ms (standard Stop Pulse duration)
4. Wait 3000 ms
5. Frequency selection is changed to a new value
6. Wait 2000 ms
7. *ECU Stop Pulse* is set for 1000 ms (standard Stop Pulse duration)
8. Wait 2000 ms
9. Come back from start blocking state

This sequence does not control LBO ECU POWER RELAY (PAGE 596) anyhow.

Note: If LBO ECU POWER RELAY (PAGE 596) is used, this change can be made only in prestart phase. So prestart has to be set up for enough long time.

5.5.27 Cybernetic security

The cybernetic security is formed by:

- ▶ Hardening the storage of a credentials
- ▶ Protection against a brute-force attack to the password
- ▶ Secure method to reset the password
- ▶ A new technology of encryption of the remote communication
- ▶ Web interface can be disabled

IMPORTANT: Due to this, we do not recommend performing a rollback from FW 1.8.0 to FW version 1.7.2 or older.

Hardening the storage of a credentials

The user credentials (passwords and access code) have been moved to a hardened storage to prevent the credentials to leak out of the hardware.

IMPORTANT: If a firmware rollback is inevitable, please keep in mind, when the firmware is first time updated to the new firmware (which uses hardened storage) a seamless transfer of the credentials into the hardened storage is performed. However, if the rollback to any previous firmware (which does not use hardened storage) is performed the credentials are NOT transferred back, so the previous firmware will not “see” any change of the credentials made through the new firmware. Moreover, as the transfer of the credentials into the hardened storage is performed only during very first update from an “old” to a “new” firmware, no change of the credentials performed in the “old” firmware after the rollback will be visible in the “new” firmware after a next update to the “new” firmware.

Protection against the brute force attack

Protection against the brute force will take a place when an invalid password is entered repeatedly.

- ▶ If the invalid password is entered 5 times, the controller gets blocked for entering password for a while.
- ▶ Each further entering of the invalid password cause the consequent blocking time is increased.
- ▶ If the invalid password is entered repeatedly the controller gets blocked for entering the password permanently and the password must be reset to a default value as described below.

Note: Blocking of the controller for entering the password have no influence to controller/genset operation

Note: Permanent blocking cannot occur accidentally, just by user mistake. It can be practically triggered only by a focused activity.

Resetting the administrator password

If the administrator password is lost or controller is permanently locked due to brute-force attack protection, proceed according to a procedure described below:

IMPORTANT: There is a backup e-mail address defined in the controller to which and only which ComAp will send the “password reset action code”. Please be sure, that you have adjusted this e-mail address correctly. Use InteliConfig to adjust the backup e-mail address



Change password

Administrator Password

Select User Level to change password
Administrator

New password

Repeat new password


Email address
john.unknown@company.com

This is a recovery e-mail address to which (and only which) ComAp will send action code needed to reset administrator password to default value. Please use a functional reliable address. E-mail address must be set to allow change of administrator password.
Warning: It is not possible to reset lost password without valid e-mail address entered.

Set to default Write Close

Reset password procedure

1. Connect IntelliConfig. You may connect remotely if you know Access Code.
2. Get the password reset request code and send it via e-mail to support@comap-control.com

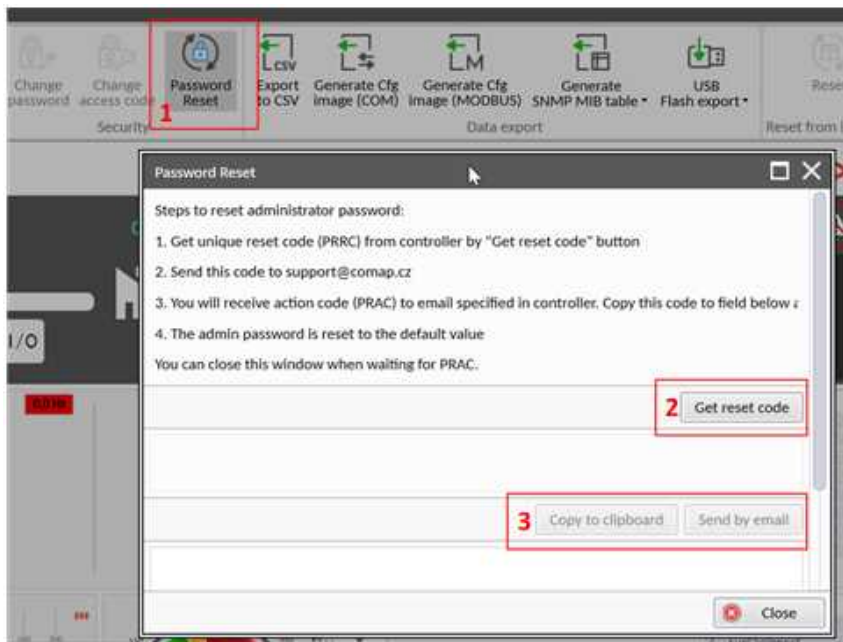

- Once you receive the reply from ComAp, copy the code from the e-mail (all characters inside the box as indicated below)



Dear customer,

ComAp has received your request for resetting the password in the controller IG500, serial number FF110336. Please perform following steps to finish the action.

- 1) Connect your PC application to the controller
- 2) Copy the action code stated below to the clipboard
- 3) Paste the clipboard content into the appropriate field in the PC application and press the "Reset" button. Password will be reset to the default value.
- 4) Adjust and remember new password

Code:

```
ADgjZi2EcREqKq7Dyw/K0eyEURVny3veXPVcsMuKZpw8hcImRqxyso7/LGec9y
QVthRMC53dZ2SLPHqa50qVdpjuNuzLImdK5iDA5J13VIH20rW8eInUxj3+qWPa
pADf7nPC9B+t40IXChFPns6Rd4ey1VeAbj+7aca9iyhGUK8cN5V0eFN7+byWND
c7nO+KPop1eoQCgRdMh8AiH60ut7ME2u+qU3FOMG165tmqFGXESCu3cQ+FcsF3
Sxs43QAnYw3sSRPZa57JStdEB3Nk13oonXh7Bv/gfwsUEjvII3s2WsbjQZ4x/a
XBQF+kp159usnz0oXaY+N8RTHd1ynEbyQ=
```

Please note following points:

- This code can be used only in the controller from which the corresponding request was generated.
- The code has no time-limited validity
- The code becomes invalid if someone enters valid administrator password into the controller
- The code becomes invalid if someone enters another (invalid) code three-times into the controller

Sincerely


ComAp technical support

If you know the controller mentioned above but have not submitted any request for password reset please contact ComAp technical support support@comap.cz.

If you do not recognize this activity at all you may ignore this e-mail.

This is an automatically generated e-mail. Please do not reply.

4. Paste the code into the password reset window

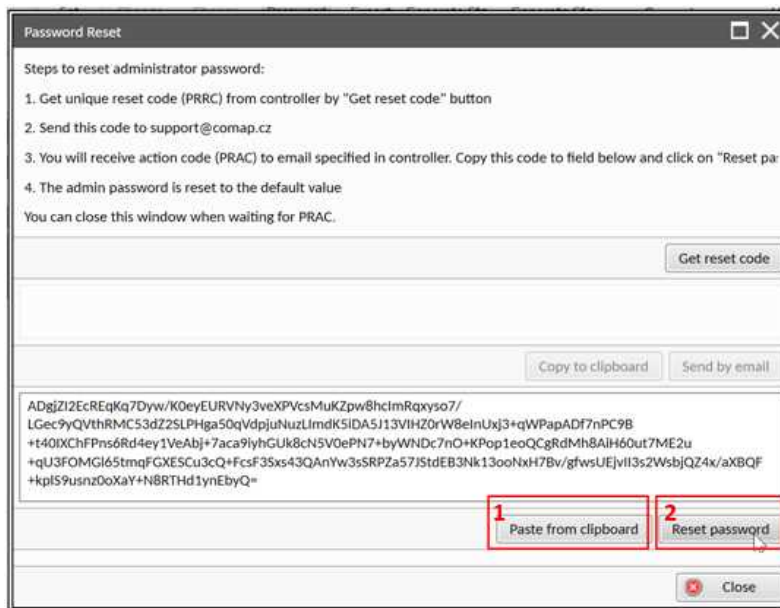

Encryption of the communication

New technology "CCS v.1" is used for an authentication and an encryption of the ComAp protocol via Internet/ethernet/AirGate. This technology is based on strong and proven cryptographic algorithms and has passed successfully penetration tests and cybersecurity audit.

Web interface can be disabled

A setpoint has been added to disable the CM-ETHERNET built-in web interface.

IMPORTANT: As the web interface is using HTTP protocol it is recommended to disable the web interface unless the controller is connected into a trusted secure network.

6 Communication

6.1 PC 152
 6.2 Connection to 3rd party systems 165

 [back to Table of contents](#)

6.1 PC

6.1.1 Direct communication 152
 6.1.2 Remote communication 154

6.1.1 Direct communication

A RS232, USB, RS485 or ethernet interface can be used for direct cable connection to a PC.

Connection via RS232

A plug-in communication module CM-RS232-485 is necessary for communication via RS232 connection. The module is plugged into the slot located on the rear side of the controller. To find more information about installation of the modules **see Plug-in module installation on page 58**.

RS232 interface uses **COM1 Mode (page 365)** port of the controller. Use a cross-wired serial communication cable with DB9 female connectors and signals Rx, Tx, GND.

Note: Also USB-RS232 convertor can be used.

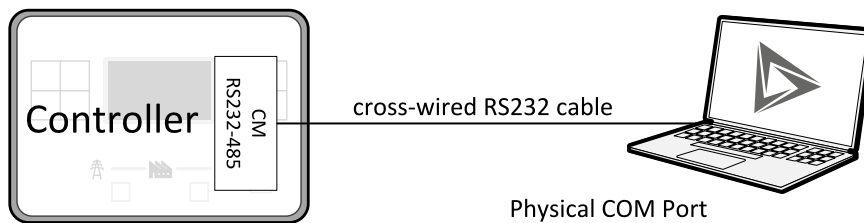


Image 7.1 Cross-wired RS232 cable is used

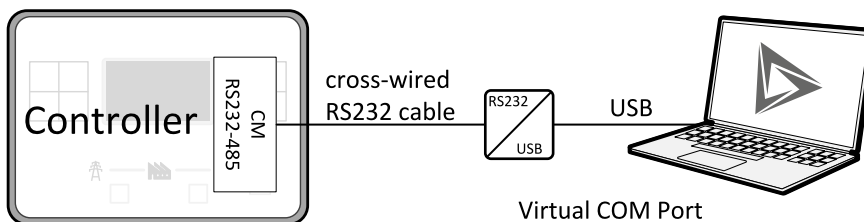


Image 7.2 Cross-wired RS232 cable and USB is used

Connection via RS485

A plug-in communication module CM-RS232-485 is necessary for communication via RS485 connection.

The module is plugged into the slot located on the rear side of the controller. To find more information about installation of the modules **see Plug-in module installation on page 58**.

RS485 interface uses **COM2 Mode (page 366)** port of the controller.

Note: Also USB-RS485 convertor can be used.

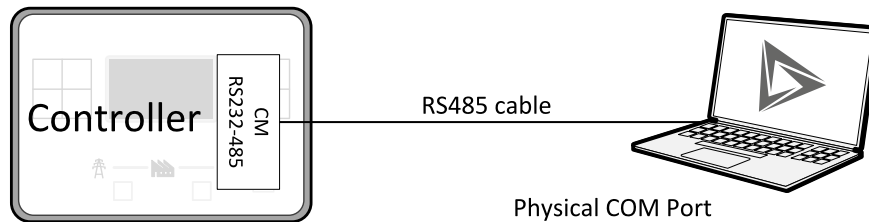


Image 7.3 Plug-in module CM RS232-485 is used

Connection via Ethernet

A plug-in communication module CM-Ethernet is necessary for ethernet connection.

The module is plugged into the slot located on the rear side of the controller. To find more information about installation of the modules **see Plug-in module installation on page 58**.

This connection type is used for communication with the controller from IntelliConfig or any other PC tool. This connection can be used regardless of AirGate is switched on or off. Only three remote clients can be connected at the same time (via AirGate only two remote clients at the same time).

To connect your PC tool to the controller use the INTERNET connection type and just put the CM-Ethernet IP address into the gen-set address box in the PC tool. If you do not use the default **ComAp TCP Port (page 405)** 23, then you also have to specify the port number using a colon.

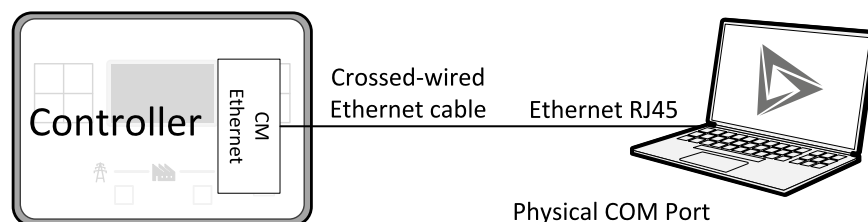


Image 7.4 Ethernet cable is used

Connection via USB

USB interface uses HID profile.

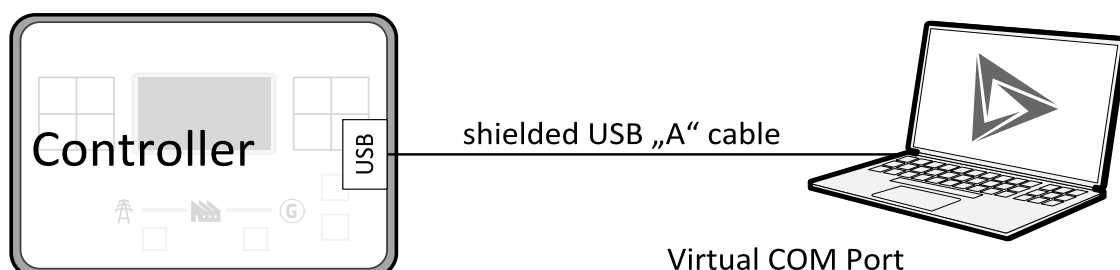


Image 7.5 Shielded USB type A cable is used

 back to Communication

6.1.2 Remote communication

A PC can be connected to the controller also remotely via CM-GPRS or CM-Ethernet plug-in module.

IMPORTANT: Factory default password and access code are "0". It is highly recommended to change these parameters.

Ethernet LAN connection

Direct IP LAN connection is intended to be used if the CM-Ethernet module is reachable from the client computer by specifying the IP address at which the module can be contacted.

- ▶ If direct IP connection is to be used within a local network the CM-Ethernet must have static IP address in the respective local network.

Note: *If you have troubles with setting up static and public IP address for direct connection from Internet use AirGate connection instead.*

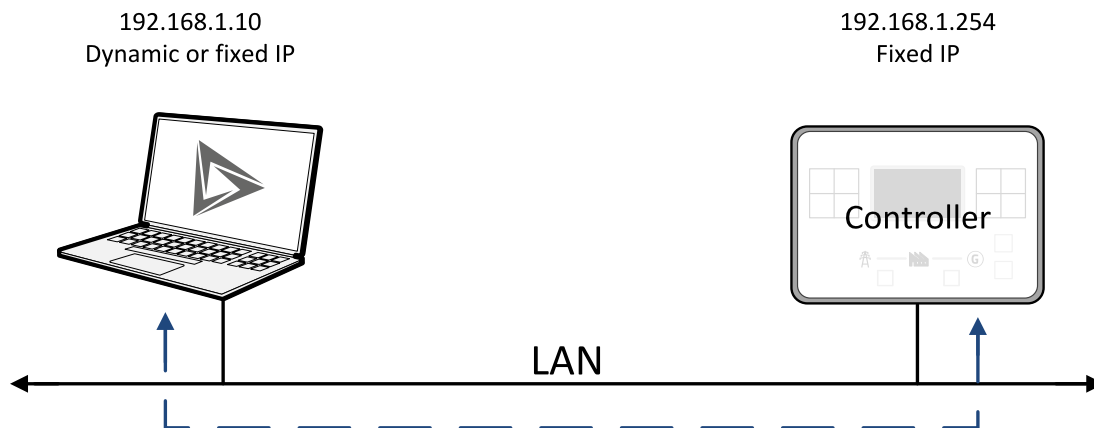


Image 7.6 Ethernet LAN connection

Setting-up static IP address

There are two basic ways to get the static IP address.

First way is to switch the CM-Ethernet to manual IP address mode. Adjust the setpoint **IP Address Mode** (page 399) to FIXED. In that case all setpoints of IP settings (**IP Address** (page 399), **Subnet Mask** (page 400), **Gateway IP** (page 400), **DNS IP Address 1** (page 401)) have to be adjusted manually. If this method is used several basic rules should be kept to avoid conflicts with the remaining network infrastructure:

- ▶ The static IP used in the controller must be selected in accordance with the local network in which CM-Ethernet is connected.
- ▶ The static IP used in the controller must be excluded from the pool of addresses which is assigned by DHCP server, which is in charge of the respective local network.
- ▶ The local infrastructure must generally allow using devices with manually assigned IP addresses.
- ▶ There must not be any other device using the same static IP address. This can be tested from a computer connected to the same network using "ping <required_ip_address>" command issued from the command line. The IP address is not occupied if there is not any response to the ping command.

Note: The list above contains only basic rules. Other specific restrictions/rules may take place depending on the local network security policy, technology used, topology etc.


Next way is to switch the CM-Ethernet to automatic IP address mode. Adjust the setpoint **IP Address Mode** (page 399) to AUTOMATIC. In that case all IP settings are assigned by DHCP server. Then configure the DHCP server to assign always the same IP address (i.e. static IP address) to the particular CM-Ethernet according to it's MAC address.

Internet connection

Public static IP

If public static IP connection is to be used from the Internet, the IP address, which is entered into the client computer, must be static and public in scope of the Internet.

- ▶ If CM-Ethernet is connected to Internet via a local ethernet network then in most cases port forwarding must be created from the public IP address of the network gateway to the local IP address of CM-Ethernet at the port specified for ComAp protocol. Different port numbers can be used to create multiple port forwarding rules in the same local network.

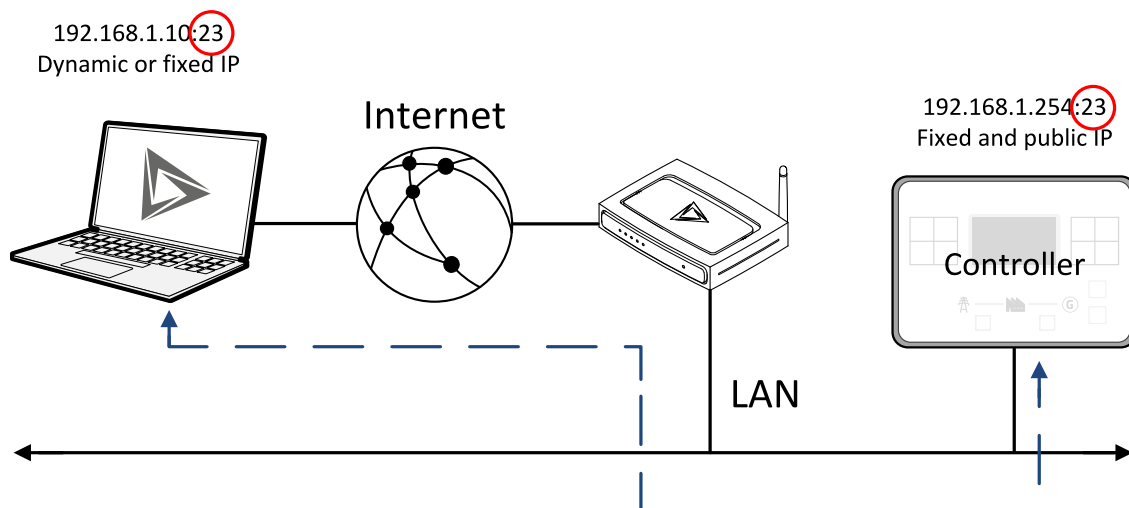

AirGate

This connection type is intended for remote connection from IntelliConfig, or any other ComAp PC tool over the Internet in situations, where obtaining fixed public IP address is not possible. Only two remote clients can be connected at the same time.

This connection type is active if AirGate connection is enabled. Setpoint **AirGate Address** (page 405) must contain AirGate server address. It can be entered in text form as well as numeric form. There is a public AirGate server available at address "airgate.comap.cz".

Once the controller is attached to the Internet and the AirGate server address is properly adjusted then the controller registers automatically to the server and an identification string AirGate ID is given to a controller, which is visible at the controller screen.

To connect your PC tool to the controller use the AirGate connection, put the the same AirGate address as in the controller into the AIRGATE ADDRESS field and use the AirGate ID displayed on the controller.

SMS

Event SMS

The IntelliLite controller equipped with the CM-GPRS or CM-4G-GPS communication module is able to send Event SMS according to the setting of setpoint:

- ▶ **Event Message (page 395)**

Note: Firstly setpoint Telephone Number 1 (page 389) has to be adjusted.

The following events can be received by mobile phone:

- ▶ Engine Start/Stop
 - Manual Start/Stop
 - Remote Start/Stop
 - AMF Start/Stop (as Automatic Mains Failure Start/Stop)
 - Test Start/Stop Gen-set
- ▶ Mains Fail
- ▶ Mains Returned
- ▶ Load on Mains
- ▶ Load on Gen-set
- ▶ Test On Load

Message structure:

- ▶ Genset Name (hh:mm:ss dd.mm.yyyy)
- ▶ hh:mm:ss Mains Fail
- ▶ hh:mm:ss AMF Start
- ▶ hh:mm:ss Load on Genset
- ▶ hh:mm:ss Mains Returned
- ▶ hh:mm:ss Load on Mains
- ▶ hh:mm:ss AMF Stop

Alarm SMS

The IntelliLite controller equipped with the CM-GPRS or CM-4G-GPS communication module is able to send Alarm SMS according to the setting of setpoints:

- ▶ **Wrn Message (page 396)**
- ▶ **Sd Messages (page 396)**
- ▶ **BOC Message (page 396)**

Note: Firstly setpoint Telephone Number 1 (page 389) has to be adjusted.

Message structure:

- ▶ Gen-set Name
- ▶ AL=(Alarm 1, Alarm 2, Alarm x)

Note: Asterisk means that alarm is unconfirmed and exclamation mark means that alarm is active.

SMS commands

To control the gen-set equipped with IntelliLite controller and CM-GPRS or CM-4G-GPS communication module (or modem) via SMS requests, send an SMS in the structure of:

xxxx, yyyy, zzzz, etc.

SMS send to the telephone number of the SIM card in your CM-GPRS module (or modem). Where the “#” mark means the controller access code, “xxxx” means the Command 1, “yyyy” is Command 2, “zzzz” is Command 3, etc.

Note: Access code is set up via IntelliConfig.

IMPORTANT: If wrong controller access code is set, then only help command is working.

start	Start the engine in MAN mode.
stop	Stop the engine in MAN mode.
fault reset	Acknowledging alarms and deactivating the horn output.
gcb close	Closing GCB in MAN and TEST mode.
gcb open	Opening GCB in MAN and TEST mode.
mcb close	Closing MCB in MAN and TEST mode
mcb open	Opening MCB in MAN and TEST mode
off	Switching to OFF mode.
man	Switching to MAN mode.
auto	Switching to AUTO mode.
test	Switching to TEST mode.
status	Get status information from controller unit.
help	Get a list of available SMS requests.

Note: Between commands are internal delays adjusted due to system requirements.

Example: When the controller, in AUTO mode, with a controller name of “IntelliLite-Test”, with the CM-GPRS module and access code “0” receives the SMS:

0 man, start, gcb close, gcb open, stop, auto

Controller mode will be changed to MANUAL mode. The engine will be started and GCB will close. Then GCB will open, the engine will stop and it will go into AUTO mode again.

The controller will send back the SMS (controller will respond to SMS after every command has been finished, not sooner.):

#IntelliLite-Test: <OK>,<OK>,<OK>,<OK>,<OK>,<OK>

The value <OK> or <ERROR> means if the command has been performed successfully or not.

Emails

Event Email

The IntelliLite controller equipped with the CM-Ethernet communication module is able to send Event Email according to the setting of setpoint:

► **Event Message (page 395)**

Note: Firstly setpoints *Email Address 1 (page 392)* and *SMTP Sender Address (page 386)* (for CM-GPRS) or *SMTP Sender Address (page 398)* (for CM-Ethernet) have to be adjusted.

Note: #*Summer Time Mode (page 324)* and *Time Zone (page 395)* have to be adjusted for correct time in emails.

Message structure:

Controller

Name: XXX

Serial number: XXX

SW branch: XXX

SW version: XXX

Application: XXX

Appl. version: XXX

Date: dd/mm/yyyy

Time: hh:mm:ss

Alarm list

Alarm 1

Alarm 2

Alarm 3

Events

hh:mm:ss Event 1

hh:mm:ss Event 2

hh:mm:ss Event 3

Alarm Email

The IntelliLite controller equipped with the CM-Ethernet communication module is able to send Alarm Emails according to the setting of setpoints:

- ▶ **Wrn Message (page 396)**
- ▶ **Sd Messages (page 396)**
- ▶ **BOC Message (page 396)**

Note: Firstly setpoints *Email Address 1 (page 392)* and *SMTP Sender Address (page 386)* (for CM-GPRS) or *SMTP Sender Address (page 398)* (for CM-Ethernet) have to be adjusted.

Note: *#Summer Time Mode (page 324)* and *Time Zone (page 395)* have to be adjusted for correct time in emails.

Message structure:

Controller

Name: XXX

Serial number: XXX

SW branch: XXX

SW version: XXX

Application: XXX

Appl. version: XXX

Date: dd/mm/yyyy

Time: hh:mm:ss

Alarm list

Alarm 1

Alarm 2

Alarm 3

History events

0 dd/mm/yyyy hh:mm:ss.0 Event 1

-1 dd/mm/yyyy hh:mm:ss.0 Event 2

-2 dd/mm/yyyy hh:mm:ss.0 Event 3

Note: Asterisk means that alarm is unconfirmed and exclamation mark means that alarm is active.

Web Server

IMPORTANT: The web interface is based on HTTP protocol and is intended to be used only in private networks. It is not recommended to expose the web interface to the public Internet.

The Web Server is designed for basic monitoring and adjustment of the controller using a web browser. Just put the controller IP address into the browser to display the main controller web page like <http://192.168.1.254>. You will be asked for the controller access code prior to entering the web pages.

IMPORTANT: Do not use the browser navigation buttons as "Back", "Forward" or "Reload". Use the links and the reload button located in the toolbar instead.

Note: Only two remote clients can be connected to the Web Server at one moment. If you close your web browser without disconnecting from the CM-Ethernet ("Exit" button at the web pages), the connection will be blocked for next 5 minutes.

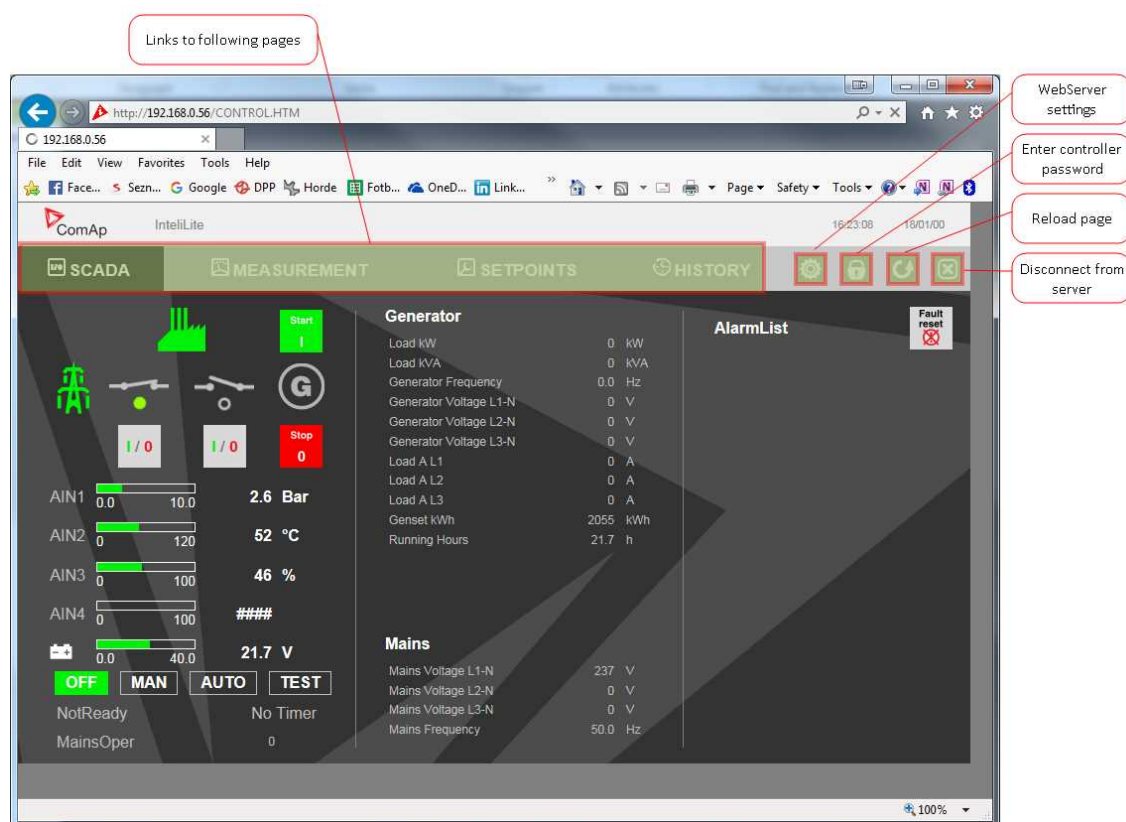


Image 7.7 Web Server main screen

Scada

Click to the SCADA link in the toolbar to display the scada page. The scada page is also the main page which is displayed by default if you just put the CM-Ethernet address into the browser (after entering the right access code).

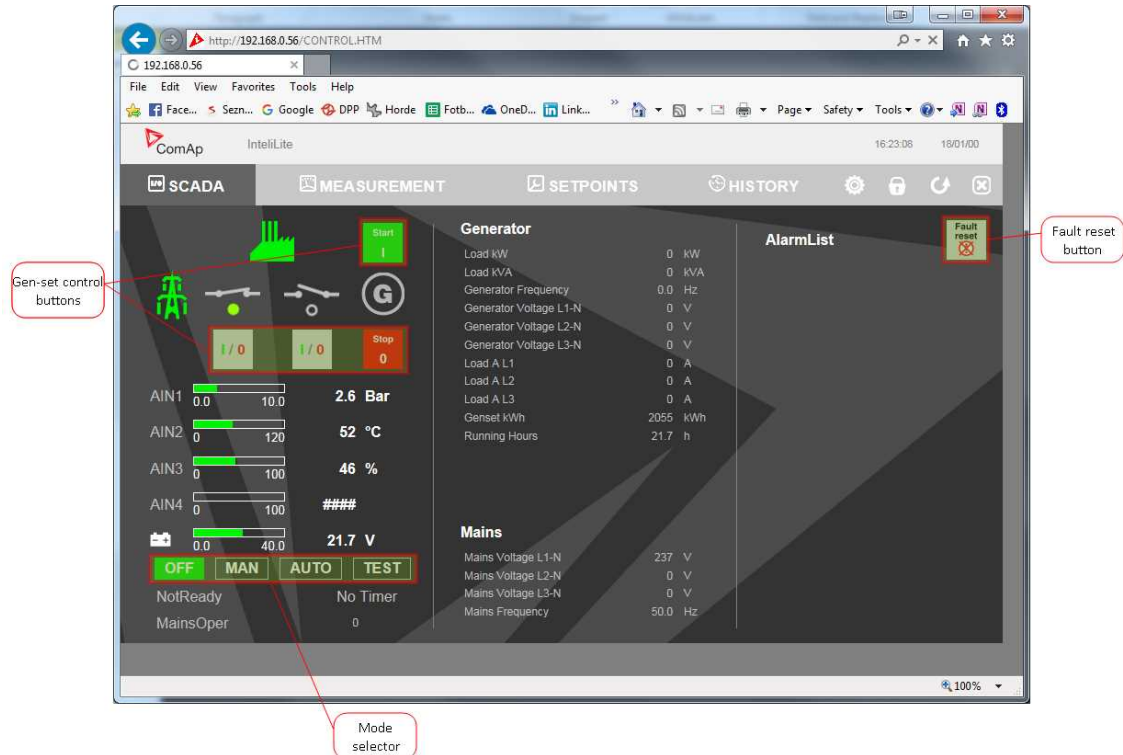


Image 7.8 Web Server - Scada screen

Measurement

Click to the MEASUREMENT link in the toolbar to display the measurement page. Then click to the required group name in the left box to display values of the group in the right box.

Note: The measurement page is automatically refreshed every 60 seconds (this time cannot be changed).

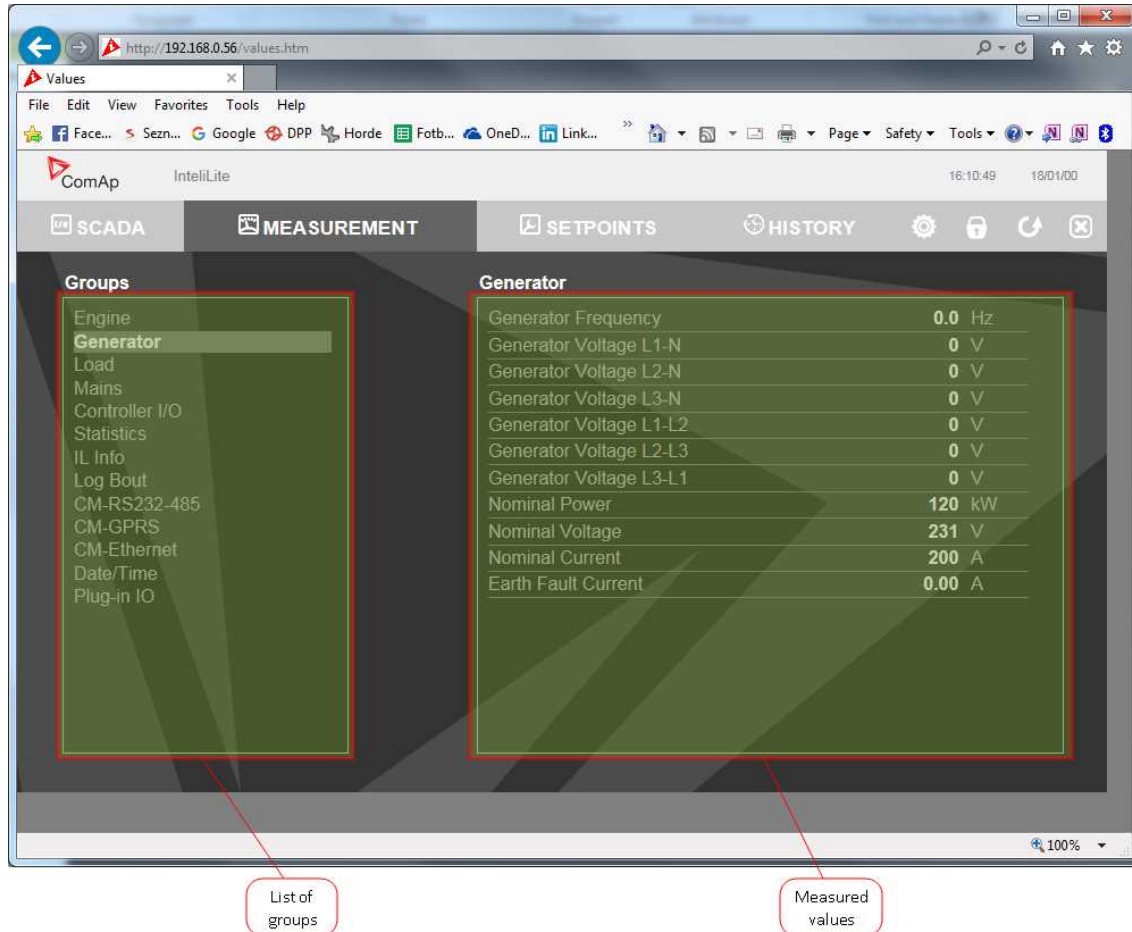


Image 7.9 Web Server - measurement screen

Setpoints

Click to the SETPOINTS link in the toolbar to display the setpoints page.

Click to the required group name in the left box to display setpoints of the group in the right box.

Click to the required setpoint name or value to change the value. If the respective setpoint is protected by password, which is indicated by a lock icon by the setpoint name, you have to click on the "Controller password" icon located in the toolbar and then enter valid password.

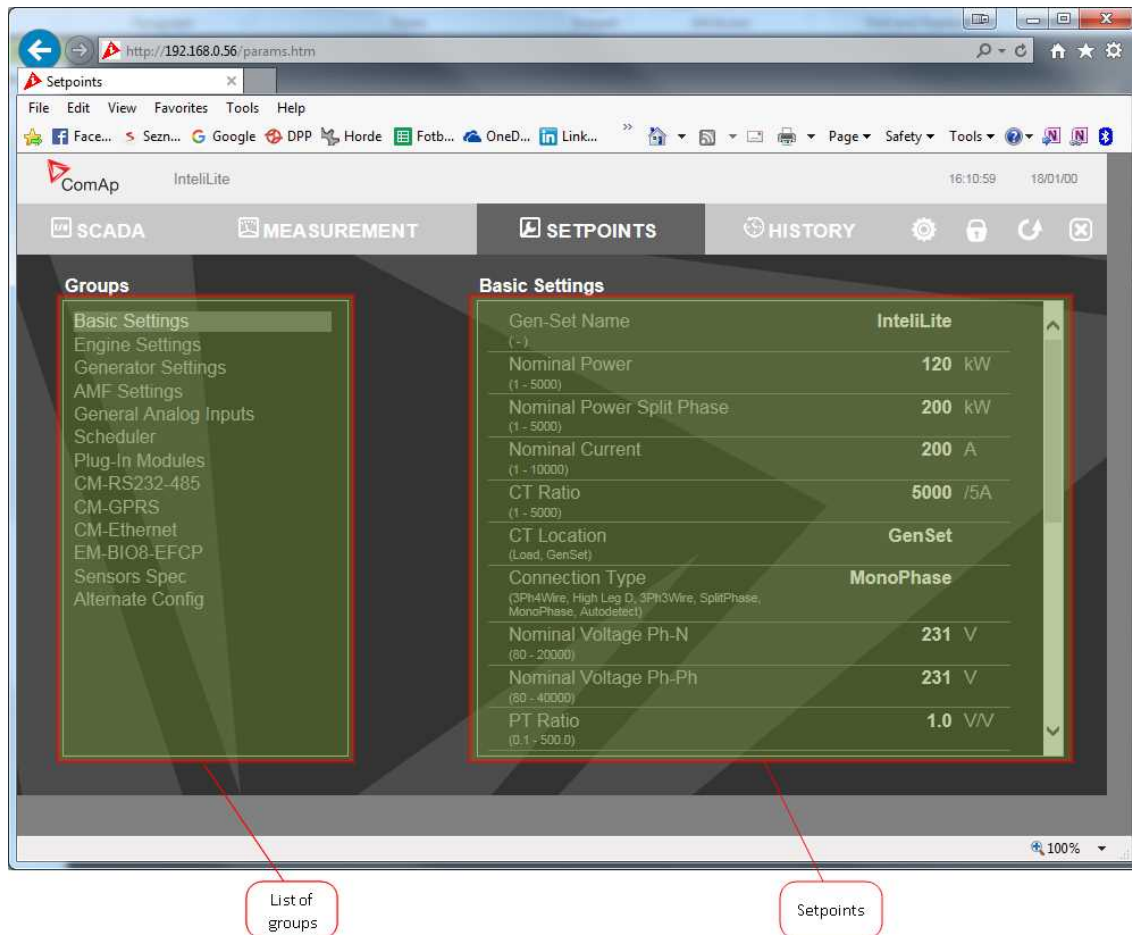


Image 7.10 Web Server - Setpoints screen

History

Click to the HISTORY link in the toolbar to display the history page.

Use the control buttons to move within the history file.

Note: The history page is automatically refreshed every 60 seconds. If a new record appears in the controller, the web page will not show it immediately as e.g. IntelliConfig.

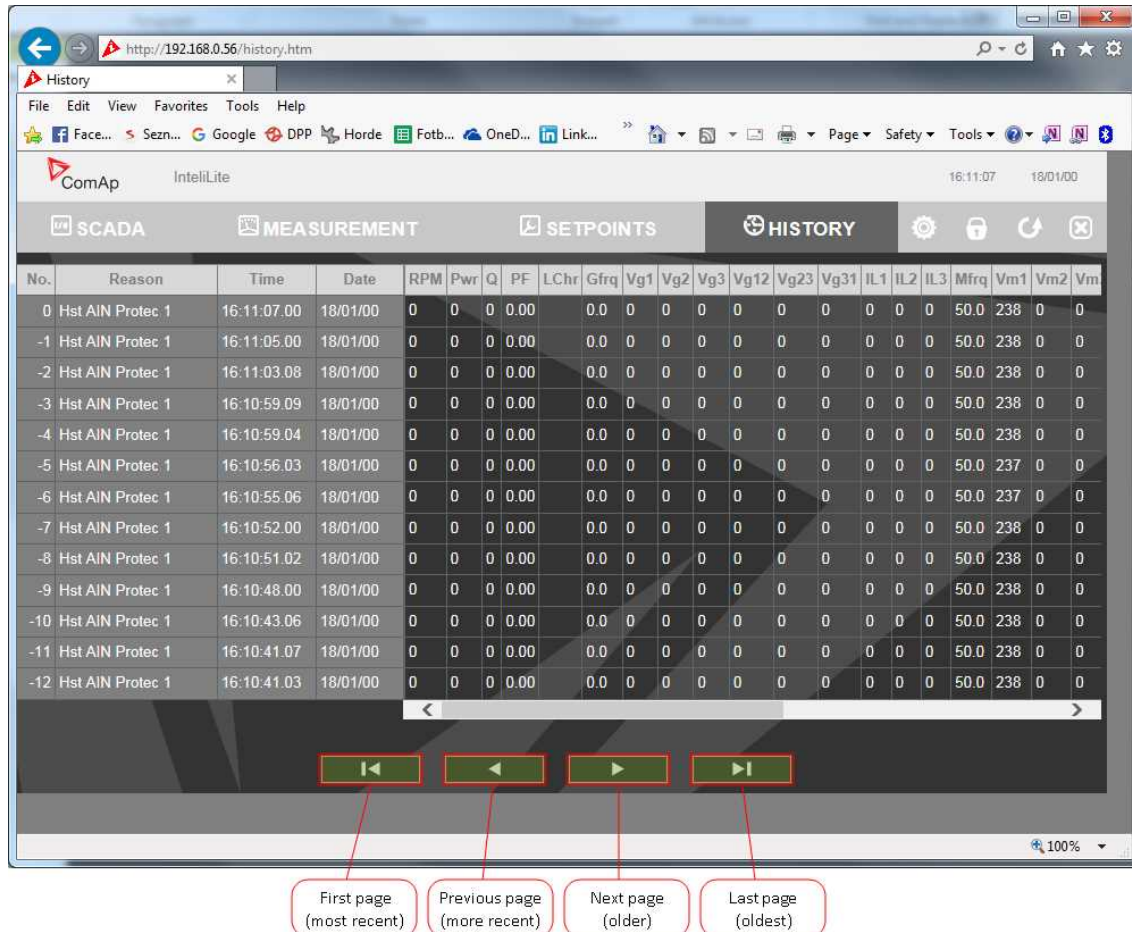


Image 7.11 Web Server - History screen

Web Server Adjustment

Click to the "Web Server settings" icon in the toolbar to display the settings page.

Select the controller language the web pages will appear in.

Select the rate of automatic refresh of the scada page.

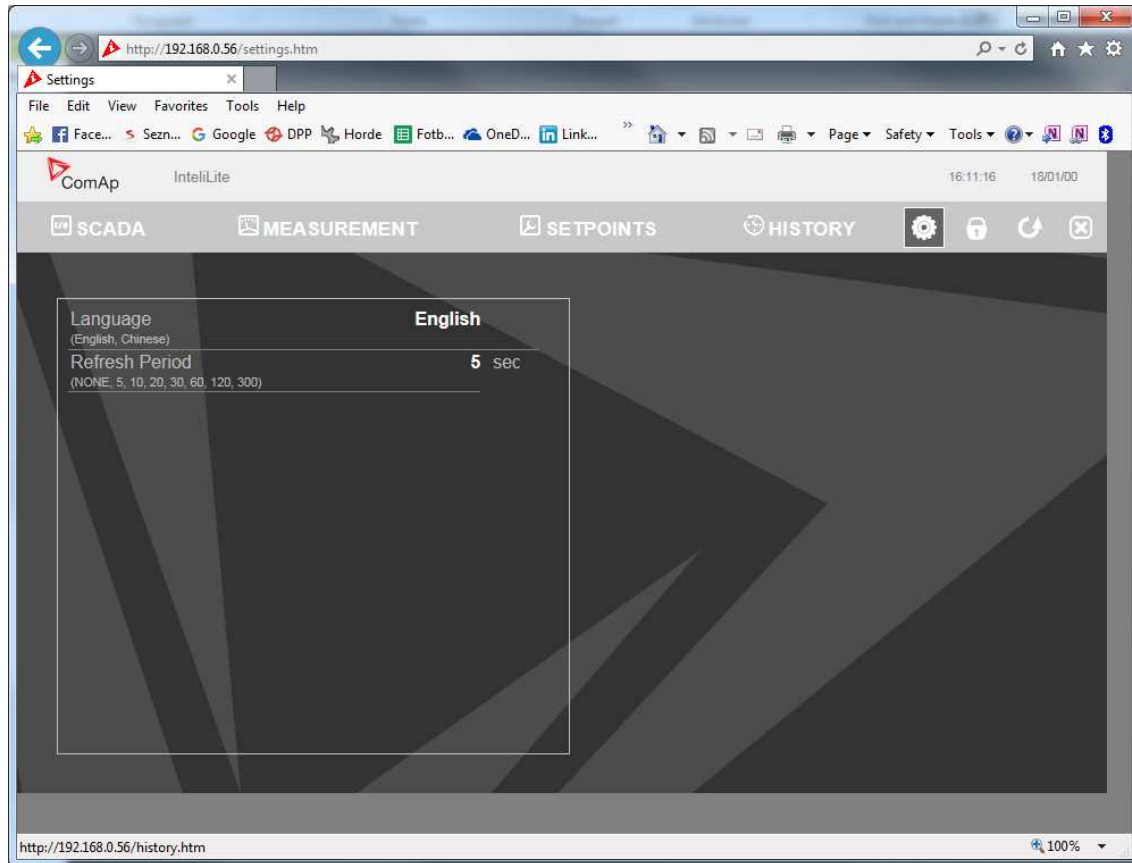


Image 7.12 Web Server - Adjustment screen

[back to Communication](#)

6.2 Connection to 3rd party systems

6.2.1 SNMP	165
6.2.2 MODBUS-RTU, MODBUS/TCP	167

[back to Communication](#)

6.2.1 SNMP

SNMP is an UDP-based client-server protocol used for providing data and events into a supervisory system (building management system). The controller plays the role of a „SNMP Agent“ while the supervisory system plays the role of a „SNMP Manager“.

- ▶ CM-Ethernet module is required for SNMP function
- ▶ Supported versions - SNMP v1 and SNMP v2c

The SNMP Agent function is to be enabled by the setpoint **SNMP Agent** (page 402) in the CM-Ethernet setpoint group. The setpoints **SNMP RD Community String** (page 402) and **SNMP WR Community String**

(page 403) in the same group can be used to customize the „community strings“ for the read and write operations which have function like „passwords“. All requests sent from the SNMP Manager have to contain community string which match with the community string adjusted in the controller otherwise the controller refuses the operation.

MIB table

The „MIB table“ (Management Information Base) is a table which gives to the Manager description of all objects provided by the Agent.

- ▶ The MIB table is specific for each controller type and configuration
- ▶ The MIB table is to be exported from the controller configuration using IntelliConfig
- ▶ Controllers with identical firmware and configuration share also identical MIB table, however if the configuration and/or firmware is not identical the MIB table is different and must be exported separately for each controller.

The root node of the MIB table of IntelliLite controller is enterprises.comapProjekt.il, which is 1.3.6.1.4.1.28634.14. Under this node there are following sub-nodes :

- ▶ Notifications group (SMI v2 only) contains definitions of all notification-type objects that the Agent may send to the Manager.
- ▶ GroupRdFix contains read-only objects that exist in all controller regardless of the firmware version/type and configuration.
- ▶ GroupRdCfg contains read-only objects that depend on the firmware version/type and configuration.
- ▶ GroupWrFix contains read-write objects that exist in all controller regardless of the firmware version/type and configuration.
- ▶ GroupWrCfg contains read-write objects that depend on the firmware version/type and configuration.
- ▶ GroupW contains write-only objects.
- ▶ NotificationData group contains objects that are accessible only as bindings of the notification messages.

SMI version

In IntelliConfig the MIB table may be exported in two different formats – SMI v1 and SMI v2. The format which shall be used for export depends on the SNMP Manager and SMI version that it does support.

Typically, SMI v1 is used for SNMP v1 and vice versa, but it is not a rule and SMI v2 may be also used for SNMP v1.

SNMP reserved objects

Name	OID	Access	Data type	Meaning
pfActionArgument	groupWrFix.24550	read,write	Gauge32	Writing: command argument Reading: command return value
pfActionCommand	groupW.24551	write	Integer32	Command code 1)
pfPassword	groupW.24524	write	Integer32	Password

1) For list of commands, arguments and description of the procedure of invoking commands see the description of the MODBUS protocol.

SNMP notifications

Except the request-response communication model, in which the communication is controlled by the Manager, there are also messages that the Agent sends without any requests. These messages are called „Notifications“ and inform the Manager about significant events occurred in the Agent.

The controller can send notifications to two different SNMP Managers (two different IP addresses). The addresses are to be adjusted in the CM-Ethernet setpoint group by the setpoints **SNMP Traps IP Address 1 (page 403)** and **SNMP Traps IP Address 2 (page 404)**. If the Manager address is not adjusted the particular notification channel is off. The controller will send the notifications in format adjusted by the setpoint **SNMP Trap Format**.

- ▶ Each notification (kind of event) is identified by an unique identifier (Trap ID in SNMPv1 or Notification OID in SNMPv2). This unique identifier gives the specific meaning to the notification message, e.g. Protection 1. level - Fuel Level - alarm activated.
- ▶ All possible notifications and their identifiers are listed in the MIB table.
- ▶ The notification message also contains controller name, serial number and textual description of the event.

6.2.2 MODBUS-RTU, MODBUS/TCP

MODBUS protocol is used for integration of the controller into a building management system or for remote monitoring via 3rd party monitoring tools.

- ▶ MODBUS-RTU can be used on serial interfaces (CM-RS232-485 module is required). The MODBUS-RTU server must be activated by switching the setpoint **COM1 Mode (page 365)** or **COM2 Mode (page 366)** into the Modbus position. The serial speed for MODBUS-RTU communication is to be adjusted by the setpoint **COM1 MODBUS Communication Speed (page 366)** or **COM2 MODBUS Communication Speed (page 367)**.
- ▶ MODBUS/TCP can be used on the ethernet interface (CM-Ethernet module is required). Up to 2 clients can be connected simultaneously. The MODBUS/TCP server must be activated by the setpoint **MODBUS Server (page 402)**.

MODBUS, MODBUS/TCP protocol can be used simultaneously with Web connection and direct ethernet/AirGate connection.

IMPORTANT: Do not write setpoint repeatedly(e.g. power control form a PLC repeated writing of baseload setpoint via Modbus). The setpoints are stored in EEPROM memory. which can be overwritten up to 10⁵ times without risk of damage or data loss, but may become damaged, when the allowed number of writing cycles is exceeded!

Note: Modbus-RTU serial communication mode is 8-N-1 - startbit 1, 8 data bits, no parity and 1 stopbit.

Address space

The object address space is separated into several areas as described in the table below. The actual mapping of specific controller data objects to specific MODBUS addresses, which depends on configuration, can be exported into a text file from the appropriate controller archive using IntelliConfig. There are several special registers with fixed meaning (reserved registers) which are listed in a separate table in this chapter.

MODBUS address	Meaning	Access	MODICON object type	MODBUS function
0000 .. 0999	Binary objects	Read only	Discrete Inputs	Read: 01, 02
1000 .. 2999	Values	Read only	Input Registers	Read: 03, 04
3000 .. 3999	Setpoints	Read/Write	Holding Registers	Read: 03, 04 Write: 06, 16
4200 .. 7167	Reserved registers	Read/Write, depends on each specific register	Input Registers Holding Registers	Read: 03, 04 Write: 06, 16

Mapping data types to registers

As there are multiple data types in the controller but only one data type in MODBUS (the register, which is 2 byte long), a mapping table is necessary to compose and decompose the MODBUS messages correctly.

Data type	Meaning	Number of registers	Data mapping
Integer8	1-byte signed integer	1	MSB = sign extension LSB = value
Unsigned8	1-byte unsigned integer	1	MSB = 0 LSB = value
Integer16	2-byte signed integer	1	MSB = value, MSB LSB = value, LSB
Unsigned16	2-byte unsigned integer	1	MSB = value, MSB LSB = value, LSB
Integer32	4-byte signed integer	2	MSB1 = value, byte 3 (MSB) LSB1 = value, byte 2 MSB2 = value, byte 1 LSB2 = value, byte 0 (LSB)
Unsigned32	4-byte unsigned integer	2	MSB1 = value, byte 3 (MSB) LSB1 = value, byte 2 MSB2 = value, byte 1 LSB2 = value, byte 0 (LSB)
Binary8	8-bit binary value	1	MSB = 0 LSB = value, bits 0-7
Binary16	16-bit binary value	1	MSB = value, bits 8-15 LSB = value, bits 0-7
Binary32	32-bit binary value	2	MSB1 = value, bits 24-31 LSB1 = value, bits 16-23 MSB2 = value, bits 8-15 LSB2 = value, bits 0-7
Char	1-byte ASCII character	1	MSB = 0

Data type	Meaning	Number of registers	Data mapping
			LSB = ASCII value of the character
StrList	Index into a list of strings	1	MSB = 0 LSB = index into the list
ShortStr	Zero-terminated string of max 15 ASCII characters.	8	MSB1 = ASCII value of the 1. character LSB1 = ASCII value of the 2. character MSB2 = ASCII value of the 3. character LSB2 = ASCII value of the 4. character ...
LongStr	Zero-terminated string of max 31 ASCII characters.	16	MSB1 = ASCII value of the 1. character LSB1 = ASCII value of the 2. character MSB2 = ASCII value of the 3. character LSB2 = ASCII value of the 4. character ...
Date	Date (dd-mm-yy)	2	MSB1 = BCD (dd) LSB1 = BCD (mm) MSB2 = BCD (yy) LSB2 = 0
Time	Time (hh-mm-ss)	2	MSB1 = BCD (hh) LSB1 = BCD (mm) MSB2 = BCD (ss) LSB2 = 0
Alarm	An item of the Alarmlist	27	MSB1 = reserved for future use LSB1 = reserved for future use MSB2 = Alarm level *) LSB2 = Alarm status **) MSB3 = alarm string ***) LSB3 = alarm string MSB4 = alarm string LSB5 = alarm string ...

*) 1 .. level 1 (yellow), 2 .. level 2 (red), 3 .. sensor fail

**) Bit0 – alarm is active, Bit1 – alarm is confirmed

***) String encoding is UTF-8

Error codes (exception codes)

Exception code is returned by the controller (server) if the query sent from the client could not be completed successfully.

The controller responds with the error codes in as follows:

- ▶ 01 – Illegal function is returned if an incompatible type of operation is applied for a specific object, e.g. if function 03 is applied to a binary object.
- ▶ 02 – illegal address is returned if the client tries to perform an operation with a object address that is not related to any existing object or that is located inside an object which is composed by multiple addresses (registers).
- ▶ 04 – device error is returned in all other erroneous situations. More detailed specification of the problem can be consequently obtained by reading the registers 4205 – 4206.

Reserved registers

There are several registers with specific meaning. These registers are available in all controllers regardless of the configuration.

Register addresses	Number of registers	Access	Data type	Meaning
4200 - 4201	2	read/write	Time	RTC Time in BCD code
4202 - 4203	2	read/write	Date	RTC Date in BCD code
4204	1	read/write	Unsigned8	Index of the language that is used for text data provided by MODBUS (e.g. alarmlist messages).
4205 - 4206	2	read	Unsigned32	Last application error. To be read after the device returns the exception code 04. It contains specific information about the error.
4207 - 4208	2	read/write	Unsigned32	Writing: command argument Reading: command return value
4209	1	write	Unsigned16	Command code
4010	1	-	-	Not implemented
4211	1	write	Unsigned16	Password
4212 - 4213	2	read	Unsigned32	Communication status
4214	1	read	Unsigned8	Number of items in the Alarmlist
4215 - 4241	27	read	Alarm	1. record in alarm list
4242 - 4268	27	read	Alarm	2. record in alarm list
4269 - 4295	27	read	Alarm	3. record in alarm list
4296 - 4322	27	read	Alarm	4. record in alarm list
4323 - 4349	27	read	Alarm	5. record in alarm list
4350 - 4376	27	read	Alarm	6. record in alarm list
4377 - 4403	27	read	Alarm	7. record in alarm list
4404 - 4430	27	read	Alarm	8. record in alarm list
4431 - 4457	27	read	Alarm	9. record in alarm list
4458 - 4484	27	read	Alarm	10. record in alarm list
4485 - 4511	27	read	Alarm	11. record in alarm list
4512 - 4538	27	read	Alarm	12. record in alarm list

Register addresses	Number of registers	Access	Data type	Meaning
4539 - 4565	27	read	Alarm	13. record in alarm list
4566 - 4592	27	read	Alarm	14. record in alarm list
4593 - 4619	27	read	Alarm	15. record in alarm list
4620 - 4646	27	read	Alarm	16. record in alarm list

List of commands and arguments

"Commands" are used to invoke a specific action in the controller via the communication channel. The list of available actions is in the table below. The general procedure of writing a command via MODBUS is as follows:

- (Optional) Write required level of password into the register 44212 (register address 4211). Use function 6. If the password is required or not depends on configuration of access rules. It can be adjusted/modified by IntelliConfig.
- Write the command argument into the registers 44208-44209 (register addresses 4207-4208). Use function 16.
- Write the command code into the register 44210 (register address 4209). Use function 6.
- (Optional) Read the command return value from the registers 44208-44209 (register addresses 4207-4208). Use function 3.
- If the command was executed the return value is as listed in the table. If the command was accepted but there was an error during execution the return value indicates the reason:
 - 0x00000001 – invalid argument
 - 0x00000002 – command refused (e.g. controller not in MAN, breaker can not be closed in the specific situation etc.)

Action	Command code	Argument	Return value
Engine start *)	0x01	0x01FE0000	0x000001FF
Engine stop *)	0x01	0x02FD0000	0x000002FE
Fault reset *)	0x01	0x08F70000	0x000008F8
Horn reset *)	0x01	0x04FB0000	0x000004FC
GCB toggle *)	0x02	0x11EE0000	0x000011EF
GCB on	0x02	0x11EF0000	0x000011F0
GCB off	0x02	0x11F00000	0x000011F1
MCB toggle *)	0x02	0x12ED0000	0x000012EE
MCB on	0x02	0x12EE0000	0x000012EF
MCB off	0x02	0x12EF0000	0x000012F0

*) This action is an equivalent of pressing the front panel button

MODBUS examples

Modbus RTU examples

- ▶ Reading of Battery voltage
 - Export table of values from IntelliConfig

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01053	8213	BatteryVoltage	V	Integer	2	1	0	400	Controller I/O

Request: (Numbers in Hex)									
01	03	04	1D	00	01	15	3C		
Controller address	Modbus function	Register address 041D _{hex} = 1053 _{dec}		Number of registers			CRC		

Response: (Numbers in Hex)									
01	03	02	00	F0	B8	00			
Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read		Data 00F0 _{hex} = 240 _{dec}			CRC		

We read value 240 from register 01053. From table of modbus registers we get dimension of read value and "Dec". Dec=1 means shift one decimal place to the right. So battery voltage is **24.0 V**.

- ▶ Reading Nominal power
 - Export table of values from IntelliConfig

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01228	9018	Nominal Power	kW	Integer	2	0	0	32767	Generator

Request: (Numbers in Hex)									
01	03	04	CC	00	01	45	05		
Controller address	Modbus function	Register address 04CC _{hex} = 1228 _{dec}		Number of registers			CRC		

Response: (Numbers in Hex)									
01	03	02	00	C8	B9	D2			
Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read		Data 00C8 _{hex} = 200 _{dec}			CRC		

Read nominal power is 200 kW.

► Reading all binary inputs as modbus register

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01068	8235	Binary Inputs		Binary#2	2	0	-	-	Controller I/O

Request: (Numbers in Hex)							
01	03	04	2C	00	01	44	F3
Controller address	Modbus function	Register address 042C _{hex} = 1068 _{dec}		Number of registers		CRC	

Response: (Numbers in Hex)							
01	03	02	00	12	38	49	
Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read	Data 0012 _{hex} = 00010010 _{bin}		CRC		

Binary inputs is 00010010. It means Binary input 2 and binary input 5 are active.

Note: You can use modbus function 4 instead of 3, rest of data remain same (CRC differs).

► Reading binary inputs as coil status.

Table: Binaries						
Allowed MODBUS functions: 01, 02						
Addresses Modbus Addr. Prot. Addr.	Source = Value = State	C.O.# State #	Name of Value Name of State	Bit #	Bit Name Activated by protection(s):	Group
00000	Value	8235	Binary Inputs	1	GCB Feedback	Controller I/O
00001	Value	8235	Binary Inputs	2	MCB Feedback	Controller I/O
00002	Value	8235	Binary Inputs	3	Emergency Stop	Controller I/O

We will read state of MCB Feedback binary input.

Request: (Numbers in Hex)							
01	01	00	01	00	01	AC	0A
Controller address	Modbus function	Register address 0001 _{hex} = 0001 _{dec}		Number of registers		CRC	

Response: (Numbers in Hex)					
01	01	01	01	90	48
Controller address	Modbus function	Length of data 01 _{hex} = 1 byte read		Data 01 _{hex} = active	CRC

The readed data is 01, it means this binary input is active.

Note: You can use modbus function 2 insted of 1, rest of data remains same (CRC differs).

► Starting the engine

Before starting engine you may need to write password. Depends on your settings in controller.

Table Reserved registers (page 170)

Register addresses	Number of registers	Access	Data type	Meaning
4207 - 4208	2	read/write	Unsigned32	Writing: command argument Reading: command return value
4209	1	write	Unsigned16	Command code

Table List of commands and arguments (page 171)

Action	Command code	Argument	Return value
Engine start	0x01	0x01FE0000	0x000001FF
Engine stop	0x01	0x02FD0000	0x000002FE

Request 1/2: (Numbers in Hex)

01	10	10	6F	00	03	06
Controller address	Modbus function 10 _{hex} = 16 _{dec}	Register address 106F _{hex} = 4207 _{dec}	Number of registers		Data length in bytes	

Request 2/2: (Numbers in Hex)

01	FE	00	00	00	01	68	0B
Argument				Command code		CRC	

Note: Command and argument may be written as one "packet" (function 16) or you can split it and write argument (function 16) and after that write command code (function 6).

► Password

This password is the same as in IntelliConfig or directly in controller.

Table **Reserved registers (page 170)**

Register addresses	Number of registers	Access	Data type	Meaning
4211	1	write	Unsigned16	Password

Note: Default password is "0".

In this example the password is "1234".

Request: (Numbers in Hex)							
01	06	10	73	04	D2	7C	D1
Controller address	Modbus function	Register address 1073 _{hex} = 4211 _{dec}		Password 04D2 _{hex} = 1234 _{dec}		CRC	

Response for success: (Numbers in Hex)							
01	06	10	73	00	00	7C	D1
Controller address	Modbus function	Register address 1073 _{hex} = 4211 _{dec}		Allways zero.		CRC	

Response for bad password: (Numbers in Hex)							
01	86	04			43	A3	
Controller address	Modbus exception for function 6.	04 – device error see Error codes (exception codes) on page 169			CRC		

► Nominal Power – writing

Table: Setpoints									
Allowed MODBUS functions: 03, 04, 06, 16									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
03008	8276	Nominal Power	kW	Unsigned	2	0	1	5000	Basic Settings

Request: (Numbers in Hex)									
01	06	0B	C0	00	64	8A	39		
Controller address	Modbus function	Register address		Data		CRC			
		0BC0 _{hex} = 3008 _{dec}		0064 _{hex} = 100 _{dec}					

Response: (Numbers in Hex)									
01	06	0B	C0	00	00	8B	D2		
Controller address	Modbus function	Register address		Allways zero		CRC			
		0BC0 _{hex} = 3008 _{dec}							

Written setpoint nominal power is 100 kW.

► CRC calculation

The check field allows the receiver to check the validity of the message. The check field value is the Cyclical Redundancy Check (CRC) based on the polynomial $x^{16}+x^{15}+x^2+1$. CRC is counted from all message bytes preceding the check field.

Online CRC calculator: <http://www.lammertbies.nl/comm/info/crc-calculation.html> Use CRC-16 (Modbus)

Write LSB first.

For writing nominal power 100 kW the CRC is calculated from this data: 01060BC00064_{hex}

Modbus TCP examples

▶ Reading of Battery voltage

- Export table of values from IntelliConfig

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01053	8213	BatteryVoltage	V	Integer	2	1	0	400	Controller I/O

Request: (Numbers in Hex)											
00	00	00	00	00	06	01	03	04	1D	00	01
transaction identifier (usually 0)	protocol identifier (usually 0)	Length of data bytes following		Controller address	Modbus function	Register address 041D _{hex} = 1053 _{dec}		Number of registers			

Request: (Numbers in Hex)											
00	00	00	00	00	06	01	03	04	1D	00	01
transaction identifier (usually 0)	protocol identifier (usually 0)	Length of data bytes following		Controller address	Modbus function	Register address 041D _{hex} = 1053 _{dec}		Number of registers			

Response: (Numbers in Hex)											
00	00	00	00	00	05	01	03	02	00	F0	
transaction identifier (usually 0)	protocol identifier (usually 0)	Length of data bytes following		Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read		Data 00F0 _{hex} = 240 _{dec}			

We read value 240 from register 01053. From table of modbus registers we get dimension of read value and "Dec". Dec=1 means shift one decimal place to the right. So battery voltage is **24.0 V**.

🔍 [back to Connection to 3rd party systems](#)

7 Technical data

Power supply

Power supply range	8-36 VDC
Power consumption	394 mA / 8 VDC
	255 mA / 12 VDC
	140 mA / 24 VDC
	97 mA / 36 VDC
RTC battery	Replaceable
Fusing	Power terminal max. 3 A
	E-Stop max. 12 A
Fusing E-Stop	12 A
Max. Power Dissipation	3.5 W

Operating conditions

Operating temperature	-20 °C to +70 °C
Operating temperature for Low Temp. version	-40 °C to +70 °C
Storage temperature	-30 °C to +80 °C
Protection degree (front panel)	IP 65
Operating humidity	95 % w/o condensation
Vibration	5-25 Hz, ± 1.6 mm
	25-100 Hz, a = 4 g
Shocks	a = 500 m/s ²
Surrounding air temperature rating 70°C	
Suitable for pollution degree 3	

D+ terminal

Max. output current	250 mA / 36 V
Charging fail threshold	Adjustable

Voltage measurement

Measurement inputs	3ph-n Gen voltage , 3ph-n Mains
Measurement range	277 V / 480 V AC (EU)
	346 V / 600 V AC (US/Canada)
Linear measurement and protection range	381 V / 660 V
Accuracy	1 %
Frequency range	40-70 Hz (accuracy 0.1 Hz)
Input impedance	0.72 MΩ ph-ph , 0.36 MΩ ph-n

Communications

USB port	non-isolated
CAN 1	CAN bus, 250 kbps, max 200 m, 120 Ω termination option, non-isolated

Current measurement

Measurement inputs	3ph Gen current
Measurement range	5 A
Max. allowed current	10 A
Accuracy	1.5 % for full temperature range (1 % from 0 °C to 50 °C)
Input impedance	< 0.1 Ω

Binary inputs

Number	8, non-isolated
Close/Open indication	0-2 VDC close contact 6-36 VDC open contact

Binary outputs

Low current	6 low current output, non-isolated 0.5 A switching to positive supply voltage, BATT+
High current	2 high current output, non-isolated 5 A (60 °C), 4 A (70 °C) switching to positive supply voltage, BATT+

Analog inputs

Number	4, non-isolated
Type	Resistive
Resolution	0.1 Ω
Range	0-2500 Ω
Input impedance	170 Ω
Accuracy	±2 % from value in range 0-2500 Ω
	±1.5 kΩ in range 2.5-15 kΩ

Magnetic pickup

Voltage input range	<p>4 Vpk-pk to 50 Vpk-pk in range 4 Hz to 1 kHz</p> <p>6 Vpk-pk to 50 Vpk-pk in range 1 kHz to 5 kHz</p> <p>10 Vpk-pk to 50 Vpk-pk in range 5 kHz to 10 kHz</p>
Frequency input range	4 Hz to 10 kHz
Frequency measurement tolerance	0.2 % from range 10 kHz

[◀ back to Table of contents](#)

8 Appendix

8.1 Controller objects	182
8.2 Alarms	670
8.3 Modules	717

 [back to Table of contents](#)

8.1 Controller objects

8.1.1 Setpoints	183
8.1.2 Values	472
8.1.3 Logical binary inputs	520
8.1.4 Logical binary outputs	564
8.1.5 Logical analog inputs	625
8.1.6 PLC	657

8.1.1 Setpoints

What setpoints are:

Setpoints are analog, binary or special data objects which are used for adjusting the controller to the specific environment. Setpoints are organized into groups according to their meaning. Setpoints can be adjusted from the controller front panel, PC, MODBUS, etc.

All setpoints can be protected by a password against unauthorized changes. Password protection can be assigned to the setpoints during the configuration procedure. See the chapter **Password (page 85)** in Operator guide for instructions on how to enter and modify a password.

IMPORTANT: Do not write setpoints repeatedly (e.g. power control from a PLC by repeated writing of baseload setpoint via Modbus). The setpoints are stored in EEPROM memory, which can be overwritten up to 10⁵ times without risk of damage or data loss, but it may become damaged, when the allowed number of writing cycles is exceeded.

List of setpoint groups

Group: Basic settings	189
Group: Engine settings	202
Group: Generator settings	240
Group: Protections	248
Group: AMF settings	253
Group: General Analog Inputs	264
Group: Scheduler	323
Group: Geo-Fencing	344
Group: Plug-In Modules	348
Group: CU AIN Calibration	349
Group: Alternate Config	351
Group: CM-RS232-485	365
Group: CM-GPRS	367
Group: CM-4G-GPS	380
Group: CM-Ethernet	392
Group: EM-BIO8-EFCP	406
Group: PLC	408

For full list of setpoints go to the chapter **List of setpoints (page 184)**.

List of setpoints

Basic settings

Gen-Set Name	189	Glow Plugs Time	206	ECU Coolant Temperature Wrm	225
Nominal Power Split		Idle RPM	206	ECU Coolant Temperature Sd	225
Phase	189	Choke Function	207	ECU Coolant Temperature Delay	226
Nominal Power	190	Choke Time	207	Temperature Switch On ..	226
Nominal Current	190	Choke Start Temp	208	Temperature Switch Off ..	227
CT Ratio	191	Choke Increment	209	Coolant Temperature Low Wrm	227
CT Location	191	Choke Voltage	210	Coolant Temperature Low Delay	228
Connection type	191	Choke Lead	211	Fuel Level Wrm	228
Nominal Voltage Ph-N ..	193	Fuel Solenoid Lead	212	Fuel Level Sd	228
Nominal Voltage Ph-Ph ..	193	Idle Time	212	Fuel Level Delay	229
PT Ratio	194	Minimal Stabilization Time	214	ECU Fuel Level Wrm	229
Vm PT Ratio	194	Maximal Stabilization Time	215	ECU Fuel Level Sd	229
Nominal Frequency	194	Protection Hold Off	215	ECU Fuel Level Delay	230
Gear Teeth	195	Sd Ventilation Time	216	Fuel Tank Volume	230
Nominal RPM	195	Cooling Speed	216	Maximal Fuel Drop	230
Controller mode	196	Cooling Time	217	Maximal Fuel Drop Delay ..	231
Power On Mode	196	Stop Time	217	Fuel Pump On	231
Operation Mode	197	After Cooling Time	218	Fuel Pump Off	232
Controller Address	197	D+ Function	218	Transfer Wrm Delay	233
Reset To Manual	198	D+ Treshold	220	Maintenance Timer 1	233
Backlight Timeout	198	D+ Delay	220	Maintenance Timer 2	234
Horn Timeout	199	D+ Alarm Type	220	Maintenance Timer 3	234
Zero Power Mode	199	Overspeed Sd	221	Battery Undervoltage	234
RunHoursSource	200	Underspeed Sd	221	Battery Overvoltage	235
Screen Filter	201	Overspeed Overshot	221	Battery <> Voltage Delay ..	235
Main Screen Line 1	202	Overspeed Overshot Period	222	Battery Charger Fail Delay	235
Main Screen Line 2	202	Oil Pressure Wrm	222	Conversion Coefficient Pulse 1	236
		Oil Pressure Sd	222	Conversion Coefficient Pulse 2	236
		Oil Pressure Delay	223	Power Switch On	236
		ECU Oil Pressure Wrm	223	Power Switch Off	237
		ECU Oil Pressure Sd	223	Ventilation Pulse Time	239
		ECU Oil Pressure Delay ..	224		
		Coolant Temperature Wrm	224		
		Coolant Temperature Sd ..	224		
		Coolant Temperature Delay	225		

Engine settings

Fuel Solenoid	203
Cranking Attempts	203
Maximum Cranking Time ..	204
Cranking Fail Pause	204
Prestart Time	205
Starting RPM	205
Starting Oil Pressure	206

ECU Speed Adjustment ...239

Generator settings

Overload BOC240

Overload Wrm240

Overload Delay240

Short Circuit BOC241

Short Circuit BOC Delay .241

IDMT Overcurrent Delay .242

Current Unbalance BOC .243

Current Unbalance BOC
Delay243

Generator Overvoltage Sd 243

Generator Overvoltage
Wrm244

Generator Undervoltage
BOC244

Generator Undervoltage
Wrm245

Generator <> Voltage
Delay245

Voltage Unbalance BOC .245
Voltage Unbalance BOC

Delay246

Generator Overfrequency
BOC246

Generator Overfrequency
Wrm246

Generator Underfrequency
BOC247

Generator Underfrequency
Wrm247

Generator <> Frequency
Delay247

Protections

Overload Protection248

Short Circuit Protection ...248

IDMT Overcurrent
Protection249

Current Unbalance
Protection249

Generator <> Voltage
Protection250

Voltage Unbalance
Protection250

Generator Frequency
Protection251

Underspeed Protection ...251

Overspeed Protection252

AMF settings

Emergency Start Delay ...253

Mains Return Delay253

Transfer Delay254

MCB Close Delay255

Mains Overvoltage256

Mains Undervoltage256

Mains < > Voltage Delay .256

Mains Voltage Unbalance 257

Mains Voltage Unbalance
Delay257

Mains Overfrequency257

Mains Underfrequency ...258

Mains < > Frequency
Delay258

Return From Island259

MCB Logic259

MCB Opens On261

Dual Operation

Running Hours Max
Difference261

Running Hours Base262

Swap Gen-sets262

Master Error Protection ...263

Slave Error Protection263

General Analog Inputs

Analog Protection 1 Wrm ..264

Analog Protection 1 Sd ...264

Analog Protection 1 Delay 265

Analog Switch 1 On265

Analog Switch 1 Off266

Analog Protection 2 Wrm ..266

Analog Protection 2 Sd ...267

Analog Protection 2 Delay 267

Analog Switch 2 On268

Analog Switch 2 Off269

Analog Protection 3 Wrm ..269

Analog Protection 3 Sd ...270

Analog Protection 3 Delay 270

Analog Switch 3 On271

Analog Switch 3 Off272

Analog Protection 4 Wrm ..272

Analog Protection 4 Sd ...273

Analog Protection 4 Delay 273

Analog Switch 4 On274

Analog Switch 4 Off275

Analog Protection 5 Wrm ..275

Analog Protection 5 Sd ...276

Analog Protection 5 Delay 276

Analog Switch 5 On277

Analog Switch 5 Off278

Analog Protection 6 Wrm ..278

Analog Protection 6 Sd ...279

Analog Protection 6 Delay 279

Analog Switch 6 On280

Analog Switch 6 Off281

Analog Protection 7 Wrm ..281

Analog Protection 7 Sd ...282

Analog Protection 7 Delay 282

Analog Switch 7 On283

Analog Switch 7 Off284

Analog Protection 8 Wrm ..284

Analog Protection 8 Sd ...285

Analog Protection 8 Delay 285

Analog Switch 8 On286

Analog Switch 8 Off287

Analog Protection 9 Wrm ..287

Analog Protection 9 Sd ...288

Analog Protection 9 Delay 288

Analog Switch 9 On289

Analog Switch 9 Off290	Analog Switch 16 On310	Timer 1 Weekends 330
Analog Protection 10 Wrm 290	Analog Switch 16 Off 311	Timer 1 Day330
Analog Protection 10 Sd . 291	Analog Protection 17 Wrm 311	Timer 1 Repeat Day331
Analog Protection 10	Analog Protection 17 Sd . 312	Timer 1 Repeated Day In
Delay291	Analog Protection 17	Week331
Analog Switch 10 On292	Delay312	Timer 1 Repeat Day In
Analog Switch 10 Off 293	Analog Switch 17 On313	Month 331
Analog Protection 11 Wrm 293	Analog Switch 17 Off 314	Timer 1 Repeat Week In
Analog Protection 11 Sd . 294	Analog Protection 18 Wrm 314	Month 332
Analog Protection 11	Analog Protection 18 Sd . 315	Timer 2 Function 332
Delay294	Analog Protection 18	Timer 2 Setup333
Analog Switch 11 On295	Delay315	Timer 2 Repetition333
Analog Switch 11 Off 296	Analog Switch 18 On316	Timer 2 First Occur. Date 334
Analog Protection 12 Wrm 296	Analog Switch 18 Off 317	Timer 2 First Occur. Time 334
Analog Protection 12 Sd . 297	Analog Protection 19 Wrm 317	Timer 2 Duration 334
Analog Protection 12	Analog Protection 19 Sd . 318	Timer 2 Repeated 335
Delay297	Analog Protection 19	Timer 2 Refresh Period ... 336
Analog Switch 12 On298	Delay318	Timer 2 Weekends 337
Analog Switch 12 Off 299	Analog Switch 19 On319	Timer 2 Day337
Analog Protection 13 Wrm 299	Analog Switch 19 Off 320	Timer 2 Repeat Day338
Analog Protection 13 Sd . 300	Analog Protection 20 Wrm 320	Timer 2 Repeated Day In
Analog Protection 13	Analog Protection 20 Sd . 321	Week338
Delay300	Analog Protection 20	Timer 2 Repeat Day In
Analog Switch 13 On301	Delay321	Month 338
Analog Switch 13 Off 302	Analog Switch 20 On322	Timer 2 Repeat Week In
Analog Protection 14 Wrm 302	Analog Switch 20 Off 323	Month 339
Analog Protection 14 Sd . 303		Rental Timer 1339
Analog Protection 14		Rental Timer 1 Wrm 341
Delay303		Rental Timer 2341
Analog Switch 14 On304		Rental Timer 2 Wrm 343
Analog Switch 14 Off 305		Rental Timer BOC 343
Analog Protection 15 Wrm 305		
Analog Protection 15 Sd . 306		
Analog Protection 15		
Delay306		
Analog Switch 15 On307		
Analog Switch 15 Off 308		
Analog Protection 16 Wrm 308		
Analog Protection 16 Sd . 309		
Analog Protection 16		
Delay309		

Scheduler

Time323
Date324
Time Stamp Period324
#Summer Time Mode324
Timer 1 Function 325
Timer 1 Setup326
Timer 1 Repetition326
Timer 1 First Occur. Date 327
Timer 1 First Occur. Time 327
Timer 1 Duration327
Timer 1 Repeated 328
Timer 1 Refresh Period ... 329

Geo-Fencing

Home Latitude344
Home Longitude344
Fence Radius 1345
Fence Radius 2345
Fence 1 Delay345
Fence 2 Delay346
Geo-Fencing346
Fence 1 Protection347

Fence 2 Protection348

Plug-In Modules

Slot A348

Slot B349

CU AIN Calibration

CU AIN1 Calibration349

CU AIN2 Calibration350

CU AIN3 Calibration350

CU AIN4 Calibration351

Alternate Config

Connection Type 1351

Nominal Current 1352

Nominal Frequency 1353

Nominal RPM 1353

Nominal Voltage Ph-N 1 ..353

Nominal Voltage Ph-Ph 1 ..354

Nominal Power 1354

Nominal Power Split

Phase 1355

Connection type 2355

Nominal Current 2356

Nominal Frequency 2357

Nominal RPM 2357

Nominal Voltage Ph-N 2 ..357

Nominal Voltage Ph-Ph 2 ..358

Nominal Power 2358

Nominal Power Split

Phase 2359

Connection type 3359

Nominal Current 3360

Nominal Frequency 3361

Nominal RPM 3361

Nominal Voltage Ph-N 3 ..361

Nominal Voltage Ph-Ph 3 ..362

Nominal Power 3362

Nominal Power Split

Phase 3363

ECU Speed Adjustment 1 363

ECU Speed Adjustment 2 364

ECU Speed Adjustment 3 364

Communication Modules

COM1 Mode365

COM1 Communication

Speed365

COM1 MODBUS

Communication Speed ...366

COM2 Mode366

COM2 Communication

Speed366

COM2 MODBUS

Communication Speed ...367

Internet Connection367

APN Name368

APN User Name368

APN User Password369

Email Address 1369

Email Address 2370

Email Address 3370

Email Address 4371

Message Language371

SMTP User Name372

SMTP User Password372

SMTP Server Address373

SMTP Sender Address ...373

Time Zone374

Event Message374

Wrn Message375

BOC Message375

Sd Messages375

Telephone Number 1376

Telephone Number 2376

Telephone Number 3377

Telephone Number 4377

DNS IP Address378

AirGate Connection378

AirGate Address379

ComAp TCP Port379

Internet Connection380

Required Connection Type380

APN Name381

APN User Name381

APN User Password382

Email Address 1382

Email Address 2383

Email Address 3383

Email Address 4384

Message Language384

SMTP User Name385

SMTP User Password385

SMTP Server Address386

SMTP Sender Address ...386

Time Zone387

Event Message387

Wrn Message388

BOC Message388

Sd Messages388

Telephone Number 1389

Telephone Number 2389

Telephone Number 3390

Telephone Number 4390

AirGate Connection391

AirGate Address391

ComAp TCP Port392

Email Address 1392

Email Address 2393

Email Address 3393

Email Address 4394

Message Language394

Time Zone395

Event Message395

Wrn Message396

BOC Message396

Sd Messages396

SMTP UserName397

SMTP User Password397

SMTP Server Address	398	PLC Setpoint 10	417	PLC Setpoint 50	457
SMTP Sender Address	398	PLC Setpoint 11	418	PLC Setpoint 51	458
IP Address Mode	399	PLC Setpoint 12	419	PLC Setpoint 52	459
IP Address	399	PLC Setpoint 13	420	PLC Setpoint 53	460
Subnet Mask	400	PLC Setpoint 14	421	PLC Setpoint 54	461
Gateway IP	400	PLC Setpoint 15	422	PLC Setpoint 55	462
DNS IP Address 1	401	PLC Setpoint 16	423	PLC Setpoint 56	463
DNS IP Address 2	401	PLC Setpoint 17	424	PLC Setpoint 57	464
MODBUS Server	402	PLC Setpoint 18	425	PLC Setpoint 58	465
SNMP Agent	402	PLC Setpoint 19	426	PLC Setpoint 59	466
SNMP RD Community String	402	PLC Setpoint 20	427	PLC Setpoint 60	467
SNMP WR Community String	403	PLC Setpoint 21	428	PLC Setpoint 61	468
SNMP Trap Format	403	PLC Setpoint 22	429	PLC Setpoint 62	469
SNMP Traps IP Address 1403		PLC Setpoint 23	430	PLC Setpoint 63	470
SNMP Traps IP Address 2404		PLC Setpoint 24	431	PLC Setpoint 64	471
AirGate Connection	404	PLC Setpoint 25	432		
AirGate Address	405	PLC Setpoint 26	433		
ComAp TCP Port	405	PLC Setpoint 27	434		
Web Interface	406	PLC Setpoint 28	435		
		PLC Setpoint 29	436		
		PLC Setpoint 30	437		
		PLC Setpoint 31	438		
		PLC Setpoint 32	439		
		PLC Setpoint 33	440		
		PLC Setpoint 34	441		
		PLC Setpoint 35	442		
		PLC Setpoint 36	443		
		PLC Setpoint 37	444		
		PLC Setpoint 38	445		
		PLC Setpoint 39	446		
		PLC Setpoint 40	447		
		PLC Setpoint 41	448		
		PLC Setpoint 42	449		
		PLC Setpoint 43	450		
		PLC Setpoint 44	451		
		PLC Setpoint 45	452		
		PLC Setpoint 46	453		
		PLC Setpoint 47	454		
		PLC Setpoint 48	455		
		PLC Setpoint 49	456		

Extension Modules

Earth Fault Current Protection	406
Earth Fault Delay	407
Earth Fault CT Input Range	407
Earth Fault CT Ratio	407
Earth Fault Sd	408

PLC


PLC Setpoint 1	408
PLC Setpoint 2	409
PLC Setpoint 3	410
PLC Setpoint 4	411
PLC Setpoint 5	412
PLC Setpoint 6	413
PLC Setpoint 7	414
PLC Setpoint 8	415
PLC Setpoint 9	416

Group: Basic settings

Subgroup: Name

Gen-Set Name

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	0 .. 15 characters [-]		
Default value	InteliLite	Alternative config	NO
Step	[-]		
Comm object	8637	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
User defined name, used for the controller identification at remote phone or mobile connection. Gen-Set Name is maximally 15 characters long and can be entered using IntelliConfig or from controller's configuration menu.			
<i>Note: If the Gen-Set Name is "TurboRunHours", the running hours will be counted faster - 1 minute in real will represent 1 hour.</i>			

 [back to List of setpoints](#)

Subgroup: Power settings

Nominal Power Split Phase

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	9977	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Nominal power of the gen-set for detected split-phase or mono phase connection. Generator Overload BOC (page 240) protection is based on this setpoint.			
<i>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Autodetect and Autodetect detects connection type as Monophase or Splitphase.</i>			
<i>Note: To lock this setpoint against editing you also have to lock setpoint Nominal Power Split Phase 1 (page 355), Nominal Power Split Phase 2 (page 359) and Nominal Power Split Phase 3 (page 363).</i>			

 [back to List of setpoints](#)

Nominal Power

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	8276	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal power of the gen-set. Generator Overload BOC (page 240) protection is based on this setpoint.			
<p>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to <i>Monophase or Splitphase or 3Ph3Wire or High Leg D or 3Ph4Wire</i> or when <i>Autodetect</i> detects connection type as <i>3Ph3Wire or High Leg D or 3Ph4Wire</i>.</p>			
<p>Note: To lock this setpoint against editing you also have to lock setpoint Nominal Power 1 (page 354), Nominal Power 2 (page 358) and Nominal Power 3 (page 362).</p>			

◀ back to List of setpoints

Subgroup: Current settings

Nominal Current

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 10 000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	8275	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191) .		
Description			
It is current limit for mains current protections and means maximal continuous mains current. Nominal Current can be different from mains rated current value.			
<p>Note: To lock this setpoint against editing you also have to lock setpoint Nominal Current 1 (page 352), Nominal Current 2 (page 356) and Nominal Current 3 (page 360).</p>			

◀ back to List of setpoints

CT Ratio

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [A/5A]		
Default value	2 000 A/5A	Alternative config	NO
Step	1 A/5A		
Comm object	8274	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Gen-set current transformers ratio.			
<i>Note: Generator currents and power measurement is suppressed if current level is below 1% of CT range.</i>			

🔍 back to List of setpoints

CT Location

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Load / Gen-set [-]		
Default value	Gen-set	Alternative config	NO
Step	[-]		
Comm object	11625	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Always		
Description			
Adjustment of location of current measurement.			
Load: Current CT's are physically placed on Load (typically between GCB and MCB).			
Gen-Set: Current CT's are physically placed on GenSet (typically before GCB).			
<i>Note: For more details about this function see chapter CT Location (page 29).</i>			

🔍 back to List of setpoints

Subgroup: Voltage settings

Connection type

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Mono Phase / SplPhL1L2 / SplPhL1L3/ 3Ph3Wire / High Leg D / 3Ph4Wire / Autodetect [-]		
Default value	3Ph4Wire	Alternative config	YES
Step	[-]		
Comm object	11628	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		

Description

Connection type:

Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)																
SpIPhL1L2	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)																
SpIPhL1L3	Double Delta connection Split Phase Two phase voltage measurement L1,L3 with 180° phase shift 2x CT (Current Transformer)																
3Ph3Wire	Ungrounded Delta connection Open Delta Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)																
High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)																
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)																
Autodetect	<table border="0"> <tr> <td>High Leg Delta</td> <td>L1 >=100V; L1 <=140V L2 >=140V L3 >=100V; L3 <=140V</td> </tr> <tr> <td>or</td> <td></td> </tr> <tr> <td>3PH3Wire or 3Ph4Wire</td> <td>L1 >=100V L2 >=100V L3 >=100V</td> </tr> <tr> <td>or</td> <td></td> </tr> <tr> <td>SpIPhL1L2</td> <td>L1 >=100V L2 >=100V L3 <= 20V</td> </tr> <tr> <td>or</td> <td></td> </tr> <tr> <td>SpIPhL1L3</td> <td>L1 >=100V L2 <= 20V</td> </tr> <tr> <td>or</td> <td></td> </tr> </table>	High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V L3 >=100V; L3 <=140V	or		3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V L3 >=100V	or		SpIPhL1L2	L1 >=100V L2 >=100V L3 <= 20V	or		SpIPhL1L3	L1 >=100V L2 <= 20V	or	
High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V L3 >=100V; L3 <=140V																
or																	
3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V L3 >=100V																
or																	
SpIPhL1L2	L1 >=100V L2 >=100V L3 <= 20V																
or																	
SpIPhL1L3	L1 >=100V L2 <= 20V																
or																	

Mono Phase	L3 >=100V
or	L1 >=100V
	L2 <= 20V
	L3 <= 20V
Voltage Autodetect shutdown	

Note: To lock this setpoint against editing you also have to lock setpoint **Connection Type 1** (page 351), **Connection type 2** (page 355) and **Connection type 3** (page 359).

⬅ back to List of setpoints

Nominal Voltage Ph-N

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 20 000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	8277	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191).		
Description			
Nominal voltage (phase to neutral).			
Note: To lock this setpoint against editing you also have to lock setpoint Nominal Voltage Ph-N 1 (page 353), Nominal Voltage Ph-N 2 (page 357) and Nominal Voltage Ph-N 3 (page 361).			

⬅ back to List of setpoints

Nominal Voltage Ph-Ph

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 40 000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	11657	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191).		
Description			
Nominal system voltage (phase to phase).			
Note: To lock this setpoint against editing you also have to lock setpoint Nominal Voltage Ph-Ph 1 (page 354), Nominal Voltage Ph-Ph 2 (page 358) and Nominal Voltage Ph-Ph 3 (page 362).			

⬅ back to List of setpoints

PT Ratio

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	0,1 .. 500,0 [V/V]		
Default value	1,0 V/V	Alternative config	NO
Step	0,1 V/V		
Comm object	9579	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Generator voltage potential transformers ratio. If no PTs are used, adjust the setpoint to 1.			

⬅ back to List of setpoints

Vm PT Ratio

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	0,1 .. 500,0 [V/V]		
Default value	1,0 V/V	Alternative config	NO
Step	0,1 V/V		
Comm object	9580	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Mains voltage potential transformers ratio. If no PTs are used, adjust the setpoint to 1.			

⬅ back to List of setpoints

Subgroup: Frequency settings

Nominal Frequency

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	8278	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal system frequency (usually 50 or 60 Hz).			
<p>Note: To lock this setpoint against editing you also have to lock setpoint Nominal Frequency 1 (page 353), Nominal Frequency 2 (page 357) and Nominal Frequency 3 (page 361).</p>			

⬅ back to List of setpoints

Gear Teeth

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	FGen->RPM / 1 .. 500 [-]		
Default value	120	Alternative config	NO
Step	1		
Comm object	8252	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
<p>Number of teeth on the engine flywheel where the pick-up is installed. Set to zero if no pick-up is used and the Engine speed will be counted from the generator frequency.</p> <p>Note: <i>If no pickup is used, the D+ or W terminal should be used to prevent possible overcranking, which can occur if at least 25% of nominal generator voltage is not present immediately after exceeding firing speed.</i></p>			

[back to List of setpoints](#)

Nominal RPM

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	100 .. 4 000 [RPM]		
Default value	1 500 RPM	Alternative config	YES
Step	1 RPM		
Comm object	8253	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
<p>Nominal engine speed (RPM - revolutions per minute).</p> <p>Note: <i>To lock this setpoint against editing you also have to lock setpoint Nominal RPM 1 (page 353), Nominal RPM 2 (page 357) and Nominal RPM 3 (page 361).</i></p>			

[back to List of setpoints](#)

Subgroup: Controller settings

Controller mode

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	OFF / MAN / AUTO / TEST [-]		
Default value	OFF	Alternative config	NO
Step	[-]		
Comm object	8315	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint can be used for changing the Controller mode remotely, e.g. via MODBUS. Use the mode selector on the main screen for changing the mode from the front panel. Use mode selector in the control window for changing the mode from IntelliConfig.			




[back to List of setpoints](#)

Power On Mode

Setpoint group	Basic settings	Related FW	1.8.0				
Range [units]	Previous / OFF [-]						
Default value	Previous	Alternative config	NO				
Step	[-]						
Comm object	13000	Related applications	AMF, MRS				
Config level	Advanced						
Setpoint visibility	Always						
Description							
This setpoint adjusts controller mode after power on of controller.							
<table border="1"> <tr> <td>Previous</td> <td>When controller is power on, than is switched into last mode before power off.</td> </tr> <tr> <td>OFF</td> <td>When controller is power on, than is switched into OFF mode.</td> </tr> </table>				Previous	When controller is power on, than is switched into last mode before power off.	OFF	When controller is power on, than is switched into OFF mode.
Previous	When controller is power on, than is switched into last mode before power off.						
OFF	When controller is power on, than is switched into OFF mode.						
<p>Note: Remote modes - In case that some LBI remote mode is activated during power on of controller than this LBI has higher priority than this setpoint - controller mode is forced into mode selected via LBI. After deactivation of LBI, controller is switched into value selected via setpoint Power On Mode</p>							

[back to List of setpoints](#)

Operation Mode

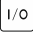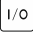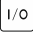Setpoint group	Basic settings	Related FW	1.8.0				
Range [units]	AMF / MRS [-]						
Default value	AMF	Alternative config	NO				
Step	[-]						
Comm object	12157	Related applications	AMF				
Config level	Advanced						
Setpoint visibility	Always						
Description							
Based on this setpoint is defined basic controller function.							
<table border="1"> <tr> <td>AMF</td> <td>Normal AMF operation</td> </tr> <tr> <td>MRS</td> <td>When MRS mode is selected the controller will not perform AMF functions anymore. MCB button  will be inactive and also mains measurement and protections will be disabled. The controller will keep TEST mode and the gen-set in AUTO mode will be able to start by REMOTE START/STOP (PAGE 561) binary input.</td> </tr> </table>				AMF	Normal AMF operation	MRS	When MRS mode is selected the controller will not perform AMF functions anymore. MCB button  will be inactive and also mains measurement and protections will be disabled. The controller will keep TEST mode and the gen-set in AUTO mode will be able to start by REMOTE START/STOP (PAGE 561) binary input.
AMF	Normal AMF operation						
MRS	When MRS mode is selected the controller will not perform AMF functions anymore. MCB button  will be inactive and also mains measurement and protections will be disabled. The controller will keep TEST mode and the gen-set in AUTO mode will be able to start by REMOTE START/STOP (PAGE 561) binary input.						

[back to List of setpoints](#)

Controller Address

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 32 [-]		
Default value	1	Alternative config	NO
Step	1		
Comm object	24537	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Controller identification number. It is possible to set controller address different from the default value (1) so that more IL controllers can be interconnected (via RS485) and accessed e.g. from MODBUS terminal.			
<p>Note: When opening connection to the controller it's address has to correspond with the setting in PC tool.</p>			
<p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Reset To Manual

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Disabled / Enabled [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	9983	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
<p>If this function is enabled, the controller will switch automatically to MAN mode when there is a red alarm in the alarm list and fault reset button is pressed. This is a safety function that prevents the gen-set starting again automatically in specific cases when fault reset button is pressed.</p> <p>Example: Controller is in AUTO mode and there is red inactive unconfirmed alarm and fault reset button is pressed, controller will start automatically.</p>			

[back to List of setpoints](#)

Backlight Timeout

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Disabled / 1 .. 255 [min]		
Default value	Disabled	Alternative config	NO
Step	1 min		
Comm object	10121	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
<p>The display backlight is switched off when this timer exceed. When setpoint is adjusted to disabled then the display will be backlighted all the time.</p>			


[back to List of setpoints](#)

Horn Timeout

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Disabled / 1 .. 599 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	8264	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Setting of horn behavior.			
Disabled	Disabling the Horn sounding function		
1 .. 599 [s]	Timeout for HORN (PAGE 607) binary output. The HORN (PAGE 607) output is opened when this timeout elapsed.		
<p>Note: Horn timeout starts again from the beginning if a new alarm appears before previous Horn timeout has elapsed.</p>			

🔍 back to List of setpoints

Zero Power Mode

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Disabled / 1 - 360 [min]		
Default value	Disabled	Alternative config	NO
Step	1 min		
Comm object	8548	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
The controller is switched to Zero Power Mode when there is no user interaction with the controller for the preset time period. Zero Power Mode is disabled in AMF automatic mode. For the controller wake up press button Start  or activate Binary Input 1. The controller will not switch to Zero Power Mode if generator is running. In Zero Power Mode binary outputs go to high impedance.			
<p>Note: Power consumption of controller in Zero Power Mode is 0 mA. Controller is internally disconnected from power supply.</p>			

🔍 back to List of setpoints

RunHoursSource

Setpoint group	Basic settings	Related FW	1.8.0						
Range [units]	AUTO/ECU/INTERNAL [-]								
Default value	AUTO	Alternative config	NO						
Step	[-]								
Comm object	13345	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint selects source of running hours									
<table border="1"> <tr> <td>AUTO</td> <td>If there is some ECU which send valid running hours, then this value is used. Otherwise value from internal counter is used.</td> </tr> <tr> <td>ECU</td> <td>Running hours are taken from ECU if ECU send valid data. It is not possible to set and reset this value in statistics.</td> </tr> <tr> <td>INTERNAL</td> <td>Running hours are taken from internal counter. It is possible to set and reset this value in statistics.</td> </tr> </table>				AUTO	If there is some ECU which send valid running hours, then this value is used. Otherwise value from internal counter is used.	ECU	Running hours are taken from ECU if ECU send valid data. It is not possible to set and reset this value in statistics.	INTERNAL	Running hours are taken from internal counter. It is possible to set and reset this value in statistics.
AUTO	If there is some ECU which send valid running hours, then this value is used. Otherwise value from internal counter is used.								
ECU	Running hours are taken from ECU if ECU send valid data. It is not possible to set and reset this value in statistics.								
INTERNAL	Running hours are taken from internal counter. It is possible to set and reset this value in statistics.								
<p>Note: <i>It is not necessary to restart controller when this setpoint is changed. Change of this setpoint should be applied immediately.</i></p>									

[⬅ back to List of setpoints](#)

Screen Filter

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Enable/Disabled [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	15889	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
<p>This setpoint enables/disables filter values on CU screen and PC tools. List of values which are filtered when filter is ON.</p> <ul style="list-style-type: none"> ▶ Generator Voltage L1-L2 ▶ Generator Voltage L2-L3 ▶ Generator Voltage L3-L1 ▶ Generator Voltage L1-N ▶ Generator Voltage L2-N ▶ Generator Voltage L3-N ▶ Generator Frequency ▶ Load kVA ▶ Load kVA L1 ▶ Load kVA L2 ▶ Load kVA L3 ▶ Load kVAr ▶ Load kVAr L1 ▶ Load kVAr L2 ▶ Load kVAr L3 ▶ Load kW ▶ Load kW L1 ▶ Load kW L2 ▶ Load kW L3 			

[◀ back to List of setpoints](#)

Subgroup: HMI Settings

Main Screen Line 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	RPM/PF/Run Hours/ATT/AIN1 [-]		
Default value	PF	Alternative config	NO
Step	[-]		
Comm object	13346	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts line 1 on Mains screen.			

[back to List of setpoints](#)

Main Screen Line 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	RPM/PF/Run Hours/ATT/AIN1 [-]		
Default value	RPM	Alternative config	NO
Step	[-]		
Comm object	14628	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts line 2 on Mains screen.			

[back to List of setpoints](#)

Group: Engine settings

Subgroup: Starting

Fuel Solenoid

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Diesel / Gas [-]		
Default value	Diesel	Alternative config	NO
Step	[-]		
Comm object	9100	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Determines behavior of the Binary output FUEL SOLENOID (PAGE 598)			
Diesel:	Output closes before binary output STARTER (PAGE 620) . Lead of output is adjusted via setpoint Fuel Solenoid Lead (page 212) . The output opens if Emergency Stop comes or gen-set is stopped and in pause between repeated starts.		
Gas: (Gaseous)	Output closes together with binary output IGNITION (PAGE 608) if RPM is over the 30 RPM (fixed value). Output opens after stop command or in pause between repeated start.		

[◀ back to List of setpoints](#)

Cranking Attempts

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	1 .. 10 [-]		
Default value	3	Alternative config	NO
Step	1		
Comm object	8255	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Maximal number of cranking attempts.			

[◀ back to List of setpoints](#)

Maximum Cranking Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	1 .. 255 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8256	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Maximum time limit of cranking time.			
<p>IMPORTANT: There is a protection against broken pinion on starter. In case that there are no RPM after 5 seconds of starting, cranking is interrupted and cranking fail pause follows.</p>			

[back to List of setpoints](#)

Cranking Fail Pause

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	5 .. 60 [s]		
Default value	8 s	Alternative config	NO
Step	1 s		
Comm object	8257	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Pause between Cranking Attempts (page 203) . PRESTART (PAGE 616) output is active in this pause until Cranking Fail Pause elapses.			

[back to List of setpoints](#)

Prestart Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 600 [s]		
Default value	2 s	Alternative config	NO
Step	1 s		
Comm object	8394	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		

Description

Time of closing of the **PRESTART (PAGE 616)** output prior to the engine start. Set to zero if you want to leave the output **PRESTART (PAGE 616)** open.

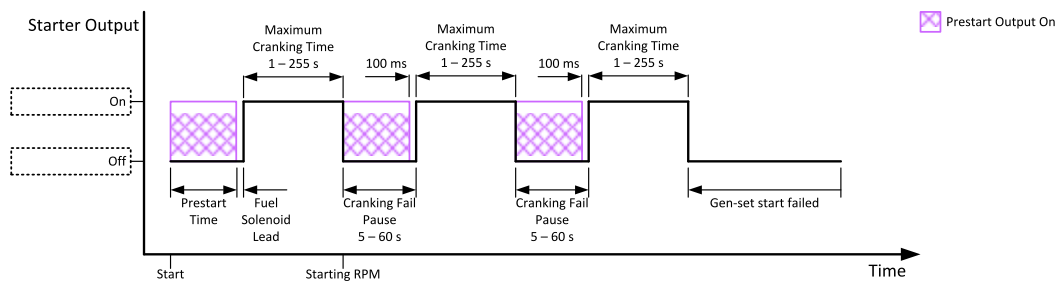


Image 9.1 Prestart Time

[back to List of setpoints](#)

Starting RPM

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	5 .. 50 [%]		
Default value	25%	Alternative config	NO
Step	1 % of Nominal RPM (page 195)		
Comm object	8254	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		

Description

This setpoint defines the “firing” speed level as percent value of the **Nominal RPM (page 195)**. If this level is exceeded the engine is considered as started.

[back to List of setpoints](#)

Starting Oil Pressure

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Disabled / 0,1 .. 10,0 [bar]		
Default value	4,5 bar	Alternative config	NO
Step	0,1 bar		
Comm object	9681	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Oil pressure limit for starting. The controller will stop cranking (STARTER (PAGE 620) goes OFF) if the oil pressure rises above this limit.			
Option Disabled - when this option is selected, Oil Pressure value (value from CU analog Oil Pressure, value from ECU analog Oil pressure and state of binary input Oil Pressure) is not used for disengagement of starter and for engine running evaluation.			
IMPORTANT: Value from analog input has higher priority than value from ECU.			

[back to List of setpoints](#)

Glow Plugs Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. Prestart Time (page 205) [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	14412	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint defines the time before starting when logical binary output GLOW PLUGS (PAGE 605) will be close.			

[back to List of setpoints](#)

Idle RPM

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	100 .. 4000 [RPM]		
Default value	900 RPM	Alternative config	NO
Step	1 RPM		
Comm object	9946	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts idle speed of engine.			

[back to List of setpoints](#)

Subgroup: Choke

Choke Function

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Disabled /Fixed Time / Temp Based [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	15717	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only when LBO CHOKE (PAGE 593) is configured.		
Description			
This setpoint defines choke function behavior.			
Disabled	Choke function is disabled and logical binary output CHOKE (PAGE 593) is activated under no circumstances.		
Fixed Time	Choke time is fixedly defined by Choke Time (page 207) setpoint.		
Temp Based	Choke time is calculated using actual engine (coolant) temperature. Setpoints Choke Start Temp (page 208) and Choke Increment (page 209) are taken into consideration.		

[back to List of setpoints](#)

Choke Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0–3600 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	13011	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only when LBO CHOKE (PAGE 593) is configured and setpoint Choke Function (page 207) = Fixed Time.		
Description			
Defines time logical binary output CHOKE (PAGE 593) is activated for when fixed time is used. When setpoint Choke Function (page 207) is set to <i>Temp Based</i> value, <i>Choke Time</i> value have no effect.			
<p>Note: If setpoint Choke Lead (page 211) is set to nonzero value, total time the CHOKE output is activated still matches value set by Choke Time setpoint. This mean Choke Time should be longer than Choke Lead to ensure expected Choke behavior.</p>			


[back to List of setpoints](#)

Choke Start Temp

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	-20,0 .. 80,0 [°C]		
Default value	0,0 °C	Alternative config	NO
Step	0,1 °C		
Comm object	15716	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only when LBO CHOKE (PAGE 593) is configured and setpoint Choke Function (page 207) = Temp Based.		

Description

This setpoint adjust the base temperature for Choke function. When temperature will be higher than this setpoint, Choke Time will be always 0. When temperature will be lower than this setpoint, Choke Time will be calculated by curve adjusted via setpoint **Choke Increment (page 209)**. When setpoint **Choke Function (page 207)** is set to *Fixed Time* value, setpoint *Choke Start Temp* has no effect.

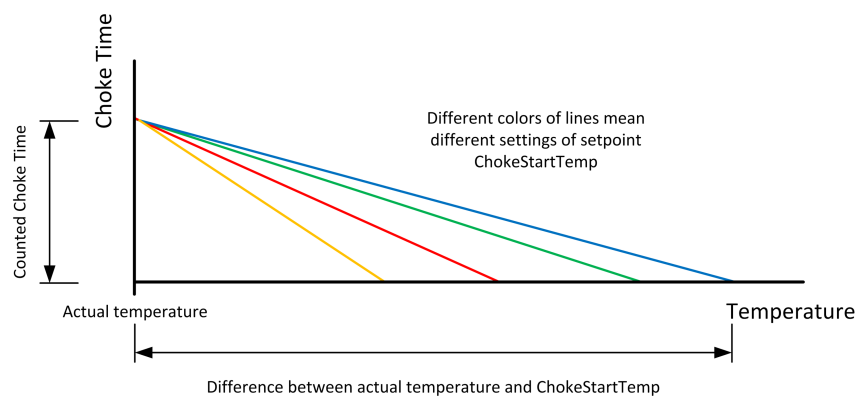


[back to List of setpoints](#)

Choke Increment

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0,00 .. 20,00 [s/°C]		
Default value	0,00 s/°C	Alternative config	NO
Step	0,01 s/°C		
Comm object	15715	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only when LBO CHOKE (PAGE 593) is configured and setpoint Choke Function (page 207) = Temp Based.		

Description

This setpoint adjust the maximal time of activation of binary output **CHOKE** (PAGE 593). Calculated time depends on engine (coolant) temperature. Setpoint adjust curve which is used for calculating actual Choke Time. When setpoint **Choke Function** (page 207) is set to *Fixed Time* value, setpoint *Choke Increment* has no effect.

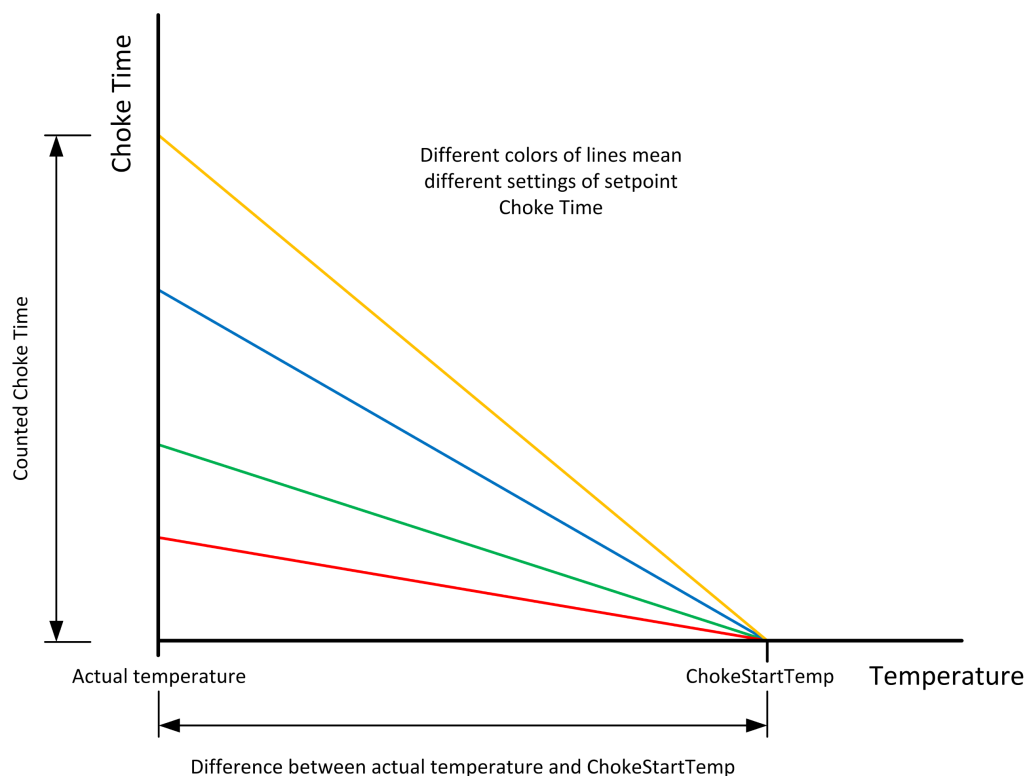

Note: If setpoint *Choke Lead* (page 211) is set to nonzero value, total time the *CHOKE* output is activated still matches calculated value (based on actual temperature and setpoints *Choke Increment* and *Choke Start Temp* (page 208)) This mean that adjusted parameters should ensure that calculated *Choke Time* will be longer than *Choke Lead* to ensure expected *Choke* behavior.


[back to List of setpoints](#)

Choke Voltage

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Disabled / 1–100 [%]		
Default value	Disabled	Alternative config	NO
Step	1 %		
Comm object	15718	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only when LBO CHOKE (PAGE 593) is configured.		

Description

This setpoint adjust threshold level for deactivation of **CHOKE (PAGE 593)** binary output. When generator voltage is higher than this level, then logical binary output CHOKE is deactivated. In multiphase system it is sufficient to deactivate CHOKE LBO when at least one voltage crosses this threshold. In case setpoint *Choke Voltage* is set to *Disabled* value, no voltage is taken into account and CHOKE LBO isn't deactivated on the voltage basis.

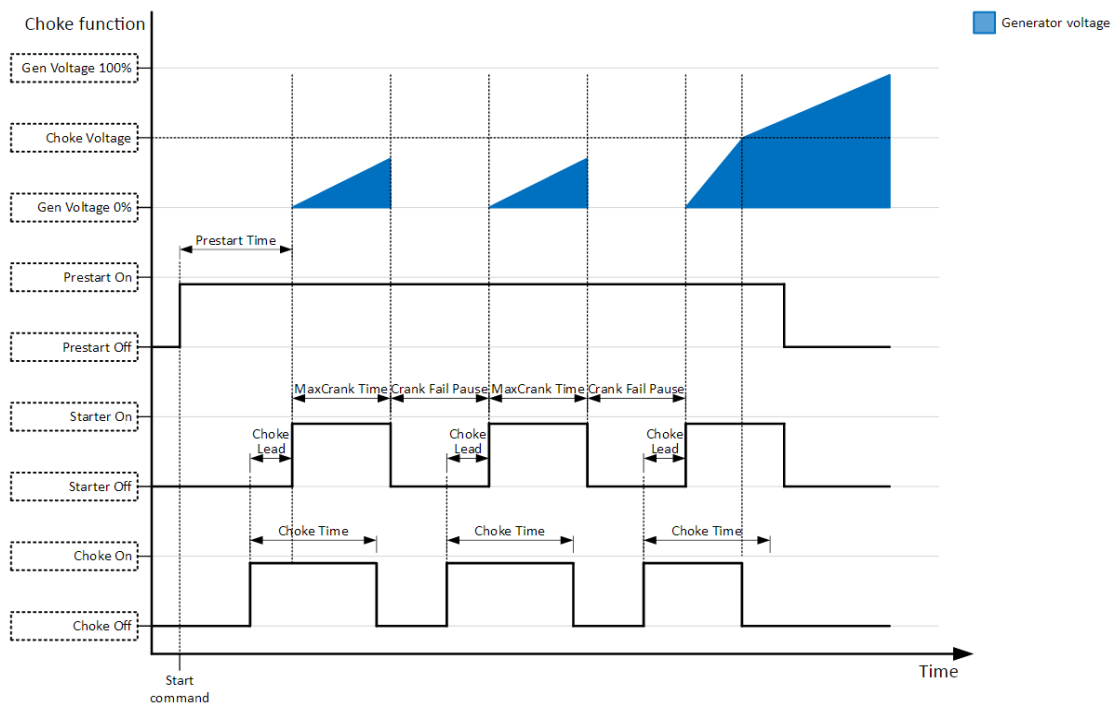

[back to List of setpoints](#)

Choke Lead

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. Prestart Time [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	15774	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only when LBO CHOKE (PAGE 593) is configured.		
Description			
<p>This setpoint adjust the lead of logical binary output CHOKE. CHOKE (PAGE 593) is activated before logical binary output STARTER (PAGE 620).</p> <p>Note: In case Choke Lead is longer than 8 s (cranking fail pause), Choke Lead will be limited to 8 s (cranking fail pause time). This limitation is applied only for cranking fail pause, Choke Lead in Prestart stays unchanged.</p>			

[◀ back to List of setpoints](#)

Subgroup: Starting Timers

Fuel Solenoid Lead

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0,0 .. 25,0 [s]		
Default value	0,5 s	Alternative config	NO
Step	0,1 s		
Comm object	10525	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		

Description

Delay between **FUEL SOLENOID (PAGE 598)** and **STARTER (PAGE 620)** logical binary inputs. **FUEL SOLENOID (PAGE 598)** is closed before **STARTER (PAGE 620)**. Lead time is adjusted via this setpoint.

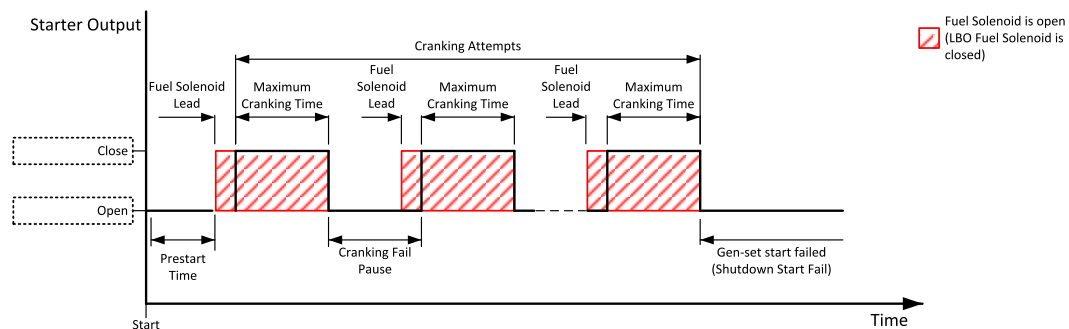


Image 9.2 Fuel Solenoid Lead

Note: LBO PRESTART (PAGE 616) goes to logical zero when Fuel Solenoid Lead goes to logical one.

Note: This setpoint is used only for diesel Fuel Solenoid (page 203)

[back to List of setpoints](#)

Idle Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 600 [s]		
Default value	12 s	Alternative config	NO
Step	1 s		
Comm object	9097	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		

Description

Idle Time delay starts when RPM exceeds **Starting RPM (page 205)**. Start fail is detected when during Idle state RPM decreases below 2 RPM.

The output **IDLE/NOMINAL (PAGE 608)** remains inactive during the idle period. Binary output Idle/Nominal opens during Cooling period again. This output can be used for switching the governor between idle and

nominal speed.

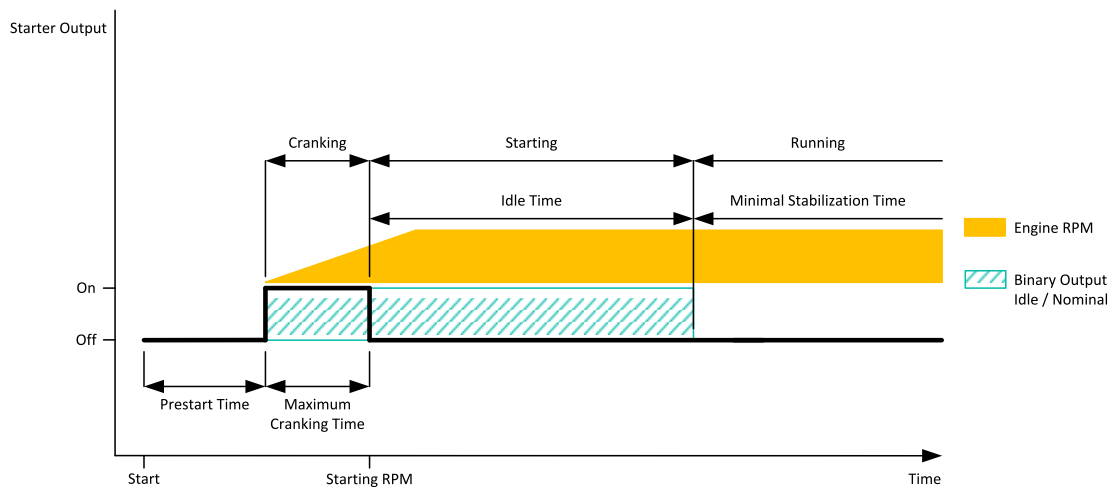


Image 9.3 Idle Time 1

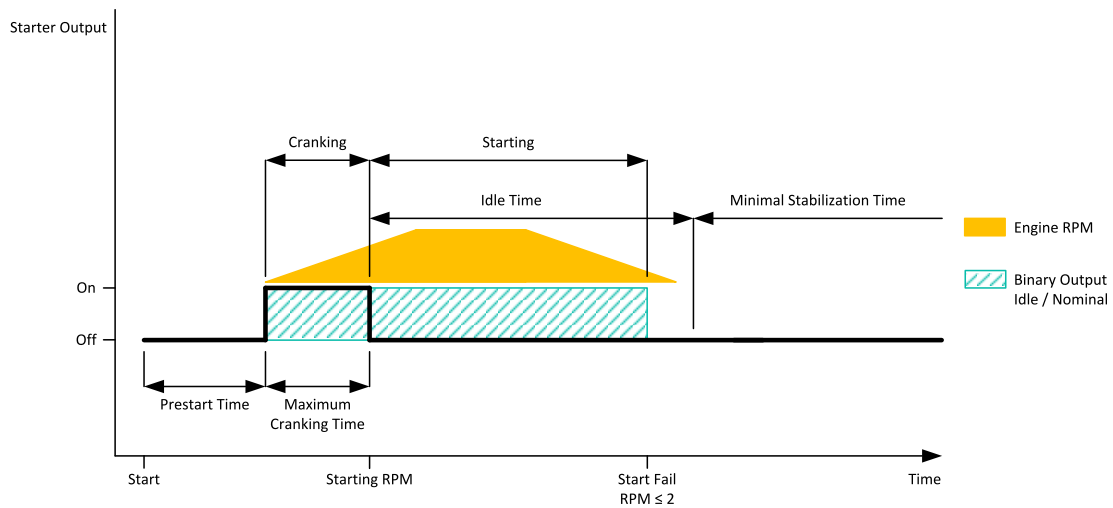


Image 9.4 Idle Time 2

[back to List of setpoints](#)

Minimal Stabilization Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	1 .. Maximal Stabilization Time (page 215) [s]		
Default value	2 s	Alternative config	NO
Step	1 s		
Comm object	8259	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		

Description

When the gen-set has been started and the idle timer has elapsed, the controller will wait for a period adjusted by this setpoint before closing GCB, even if the generator voltage and frequency are already in limits.

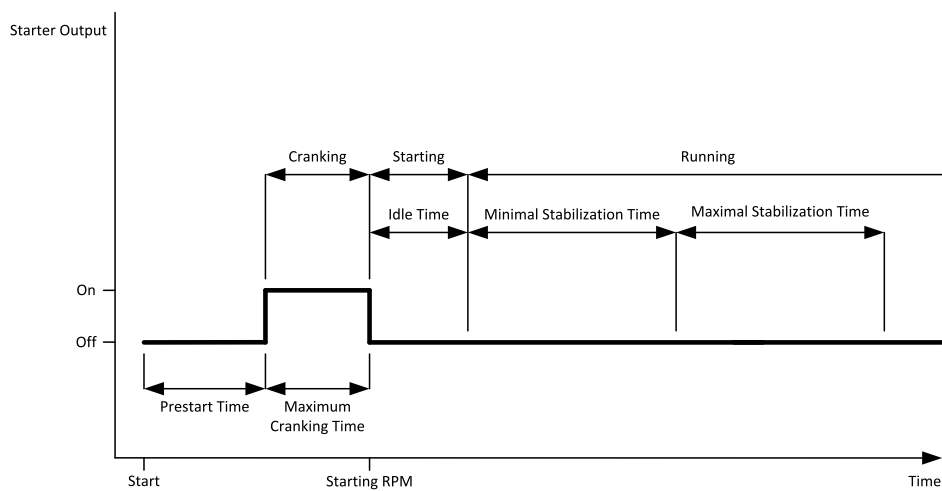


Image 9.5 Minimal Stabilization Time

[back to List of setpoints](#)

Maximal Stabilization Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Minimal Stabilization Time (page 214) .. 300 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	8313	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		

Description

When the gen-set has been started and the idle timer has elapsed, the generator voltage and frequency must get within limits within this period of time, otherwise an appropriate shutdown alarm (generator voltage and/or frequency) is issued.

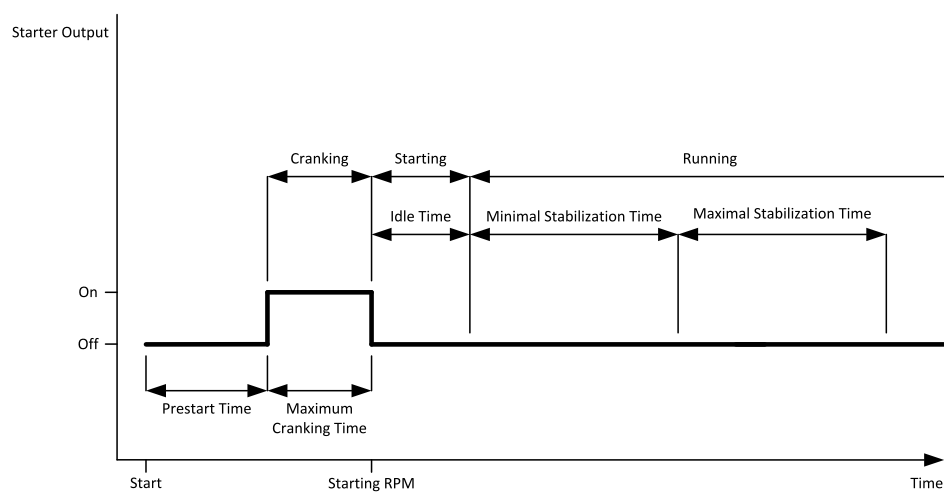


Image 9.6 Maximal Stabilization Time

[back to List of setpoints](#)

Protection Hold Off

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0,0 .. 300,0 [s]		
Default value	5,0 s	Alternative config	YES
Step	0,1 s		
Comm object	10023	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		

Description

During the start of the gen-set, some engine protections have to be blocked (e.g. Oil pressure). The protections are unblocked after the Protect Hold Off. The time starts after reaching Starting RPM.

[back to List of setpoints](#)

Sd Ventilation Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 60 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	9695	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
In case Fuel Solenoid (page 203) is set to GAS, the Sd Ventilation Time adjusts the time of the starter to be switched on for engine pre-ventilation in the case of a first start attempt after shutdown or controller switch-on.			

[back to List of setpoints](#)

Subgroup: Stopping

Cooling Speed

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Idle / Nominal [-]		
Default value	Nominal	Alternative config	NO
Step	[-]		
Comm object	10046	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Selects the function of the binary output IDLE/NOMINAL (PAGE 608) during engine cooling state.			
Idle	Cooling is executed at Idle speed and generator protections are switched off.		
Nominal	Cooling is executed at Nominal speed and generator protections are active.		
Note: When ECU is connected the predefined value 900 RPM for Idle speed is requested.			
Note: Binary output IDLE/NOMINAL (PAGE 608) must be configured and connected to speed governor. Engine Idle speed must be adjusted on speed governor.			

[back to List of setpoints](#)

Subgroup: Stopping Timers

Cooling Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 3 600 [s]		
Default value	30 s	Alternative config	NO
Step	1 s		
Comm object	8258	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Runtime of the unloaded gen-set to cool the engine before stop.			

🔍 back to List of setpoints

Stop Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 600 [s]		
Default value	60 s	Alternative config	NO
Step	1 s		
Comm object	9815	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		

Description

Under normal conditions the engine must certainly stop within this period after the **FUEL SOLENOID (PAGE 598)** has been de-energized and the **STOP SOLENOID (PAGE 621)** energized. The Stop Solenoid output is deactivated 12 s after last running engine indication went off.


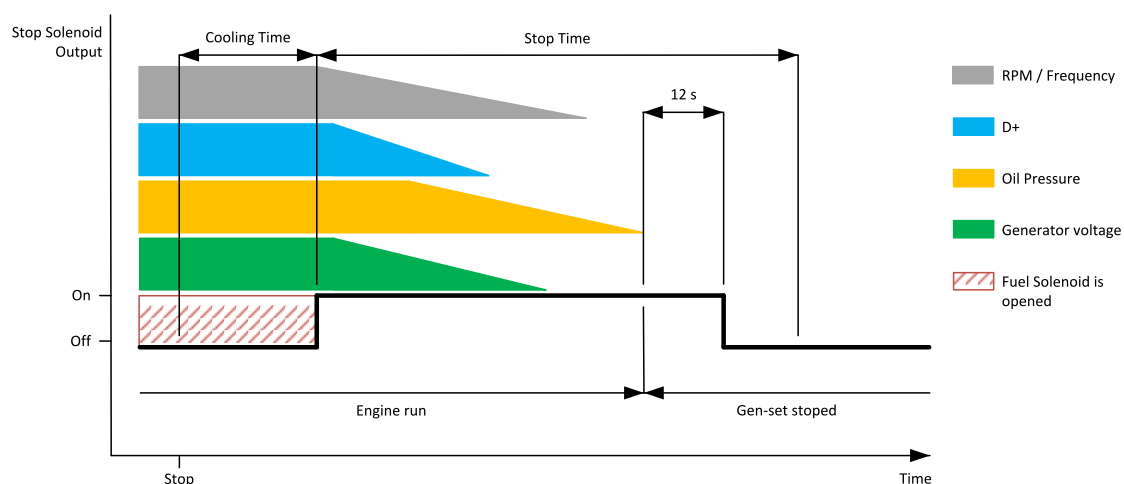


Image 9.7 Stop Time 1

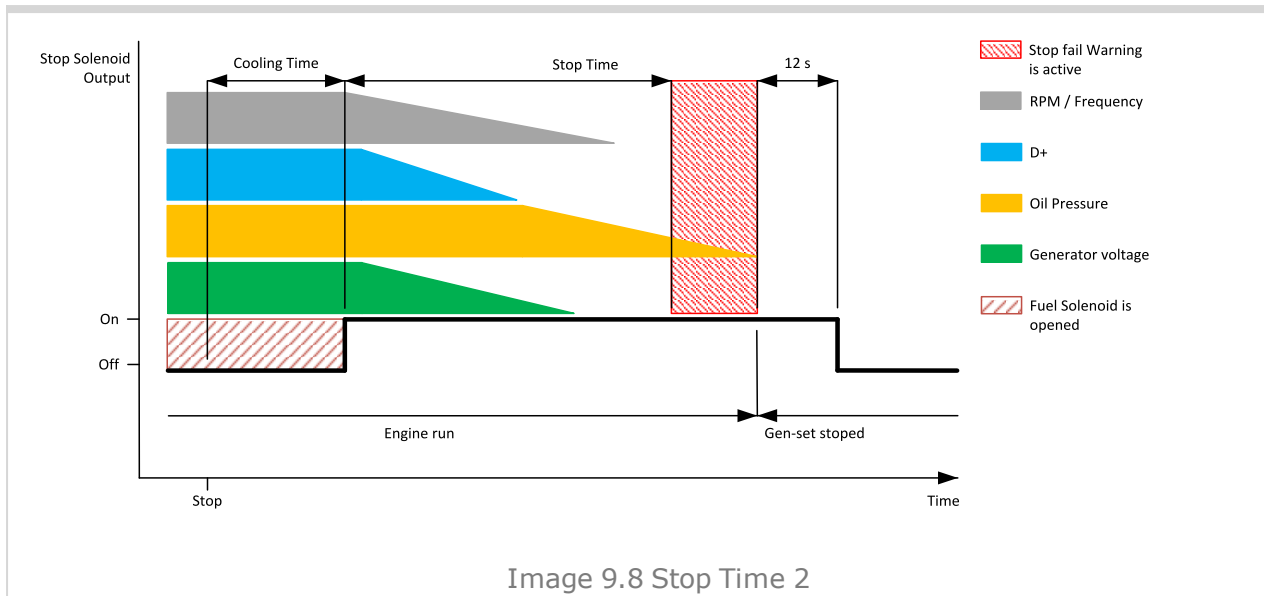

🔍 back to List of setpoints

After Cooling Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 3 600 [s]		
Default value	180 s	Alternative config	NO
Step	1 s		
Comm object	8662	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Runtime of engine after cooling pump. Binary output Cooling pump is closed when the engine starts and opens AfterCool time delayed after gen-set stops.			

🔍 back to List of setpoints

Subgroup: D+ Function

D+ Function

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Enabled / ChargeFail / Disabled [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	9683	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Behavior of D+ terminal.			
Enabled	The D+ terminal is used for both functions – “running engine” detection and charge fail		

detection.

ChargeFail

The D+ terminal is used for charge fail detection only

Disabled

The D+ terminal is not used.

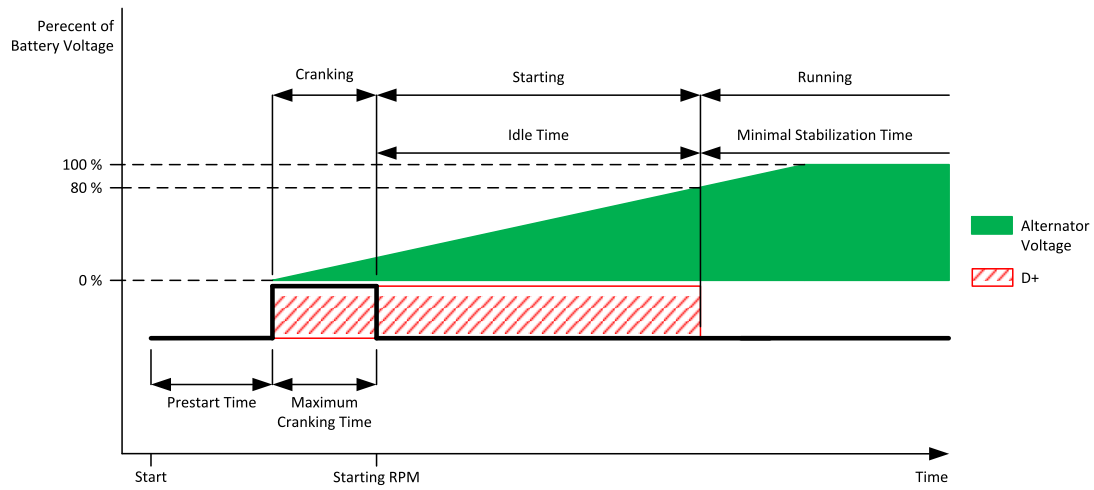


Image 9.9 D+ Function 1

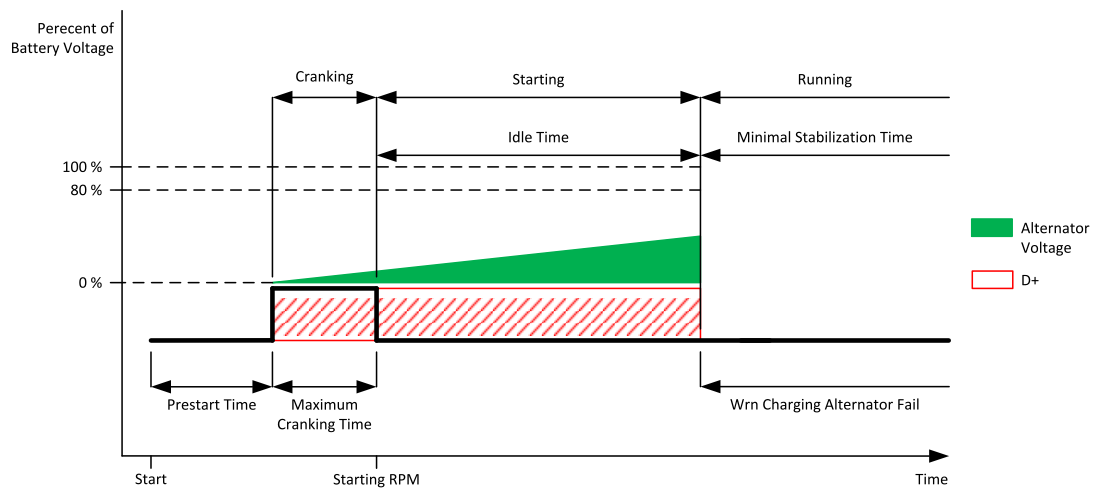


Image 9.10 D+ Function 2

[back to List of setpoints](#)

D+ Threshold

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0..100 [%]		
Default value	80 %	Alternative config	NO
Step	1 %		
Comm object	14959	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only if setpoint D+ Function (page 218) is not set to <i>Disabled</i> value.		
Description			
This setpoint adjusts threshold level for D+ function.			

[back to List of setpoints](#)

D+ Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	1..255 [s]		
Default value	1 s	Alternative config	NO
Step	1 s		
Comm object	14960	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only if setpoint D+ Function (page 218) is not set to <i>Disabled</i> value.		
Description			
This setpoint adjusts delay for D+ function. This delay is used for:			
<ul style="list-style-type: none"> ▶ Alarm Charging Alternator Fail. ▶ For engine running condition - disengagement of starter 			

[back to List of setpoints](#)

D+ Alarm Type

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	No Protec/Wrn/Sd [-]		
Default value	Wrn	Alternative config	NO
Step	[-]		
Comm object	15751	Related applications	MRS. AMF
Config level	Advanced		
Setpoint visibility	Only if setpoint D+ Function (page 218) is not set to <i>Disabled</i> value.		
Description			
This setpoint adjusts type of alarm Charging Alternator Fail.			

[back to List of setpoints](#)

Subgroup: Engine Protections

Overspeed Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Underspeed Sd (page 221) .. 200 [%]		
Default value	115%	Alternative config	NO
Step	1 % of Nominal RPM (page 195)		
Comm object	8263	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for over speed protection. Relative to the nominal speed.			

[back to List of setpoints](#)

Underspeed Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. Overspeed Sd (page 221) [%]		
Default value	25%	Alternative config	NO
Step	1 % of Nominal RPM (page 195)		
Comm object	8260	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for underspeed protection. Relative to the nominal speed.			

[back to List of setpoints](#)

Overspeed Overshot

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 50 [%]		
Default value	20%	Alternative config	NO
Step	1 % of Nominal RPM (page 195)		
Comm object	14107	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint rise the upper limit of overspeed protection for the time which is defined in setpoint Overspeed Overshot Period (page 222) . In this time the upper limit of protection is Overspeed Sd (page 221) + Overspeed Overshoot .			

[back to List of setpoints](#)

Overspeed Overshot Period

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 255 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	14108	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Overspeed Overshot (page 221)		
Description			
Time for which is Overspeed Overshot (page 221) active. The timer starts in the same time when starter starts.			
<i>Note: The setpoint is visible only, if Overspeed Overshot (page 221) is greater than 0.</i>			

[back to List of setpoints](#)

Oil Pressure Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	12895	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input OIL PRESSURE (PAGE 657) is configured		
Description			
Warning or history threshold level for OIL PRESSURE (PAGE 657) .			

[back to List of setpoints](#)

Oil Pressure Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	12779	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input OIL PRESSURE (PAGE 657) is configured		
Description			
Shutdown threshold level for OIL PRESSURE (PAGE 657) .			

[back to List of setpoints](#)

Oil Pressure Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	3 s	Alternative config	NO
Step	1 s		
Comm object	14341	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input OIL PRESSURE (PAGE 657) is configured or logical binary input OIL PRESSURE (PAGE 558) is configured		
Description			
Delay for OIL PRESSURE (PAGE 657) .			

[back to List of setpoints](#)

ECU Oil Pressure Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by ECU sensor curve		
Default value	the value is defined by ECU sensor curve	Alternative config	YES
Step	the step is defined by ECU sensor curve		
Comm object	14426	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Warning threshold level for Oil pressure which is send from ECU.			

[back to List of setpoints](#)

ECU Oil Pressure Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by ECU sensor curve		
Default value	the value is defined by ECU sensor curve	Alternative config	NO
Step	the step is defined by ECU sensor curve		
Comm object	14425	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Shutdown threshold level for Oil pressure which is send from ECU.			

[back to List of setpoints](#)

ECU Oil Pressure Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	3 s	Alternative config	NO
Step	1 s		
Comm object	14427	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Delay for Oil pressure which is send from ECU.			

[back to List of setpoints](#)

Coolant Temperature Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	12896	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input COOLANT TEMP (PAGE 654) is configured		
Description			
Warning or history threshold level for COOLANT TEMP (PAGE 654) .			

[back to List of setpoints](#)

Coolant Temperature Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	12780	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input COOLANT TEMP (PAGE 654) is configured		
Description			
Shutdown or BOC threshold level for COOLANT TEMP (PAGE 654) .			

[back to List of setpoints](#)

Coolant Temperature Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	14342	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input COOLANT TEMP (PAGE 654) is configured or logical binary input COOLANT TEMP (PAGE 548) is configured		
Description			
Delay for COOLANT TEMP (PAGE 654) .			

[back to List of setpoints](#)

ECU Coolant Temperature Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by ECU sensor curve		
Default value	the value is defined by ECU sensor curve	Alternative config	NO
Step	the step is defined by ECU sensor curve		
Comm object	14429	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Warning threshold level for Coolant temperature which is send from ECU.			

[back to List of setpoints](#)

ECU Coolant Temperature Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by ECU sensor curve		
Default value	the value is defined by ECU sensor curve	Alternative config	NO
Step	the step is defined by ECU sensor curve		
Comm object	14428	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Shutdown or BOC threshold level for Coolant temperature which is send from ECU.			

[back to List of setpoints](#)

ECU Coolant Temperature Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	14430	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Delay for Coolant temperature which is send from ECU.			

🔍 back to List of setpoints

Temperature Switch On

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is define by sensor curve (analog or ECU)		
Default value	the value is defined by sensor curve (analog or ECU)	Alternative config	NO
Step	the step is defined by sensor curve (analog or ECU)		
Comm object	8688	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output TEMPERATURE SWITCH (PAGE 623) is configured.		

Description

Threshold level for switching the binary output **TEMPERATURE SWITCH (PAGE 623)** on.

Note: Value from analog input has higher priority than ECU.

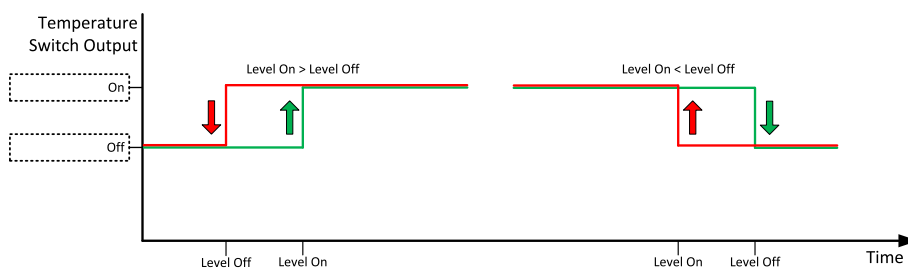


Image 9.11 Temperature Switch

🔍 back to List of setpoints

Temperature Switch Off

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is define by sensor curve (analog or ECU)		
Default value	the value is defined by sensor curve (analog or ECU)	Alternative config	NO
Step	the step is defined by sensor curve (analog or ECU)		
Comm object	8689	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output TEMPERATURE SWITCH (PAGE 623) is configured.		

Description

Threshold level for switching the binary output **TEMPERATURE SWITCH (PAGE 623)** off.

Note: Value from analog input has higher priority than ECU.

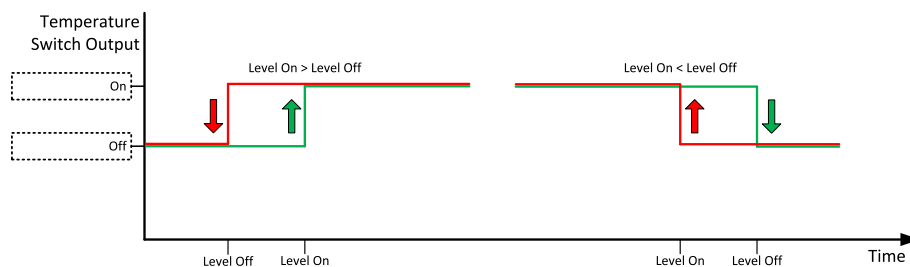


Image 9.12 Temperature Switch

[back to List of setpoints](#)

Coolant Temperature Low Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	YES
Step	the step is defined by analog sensor curve		
Comm object	9684	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical analog input COOLANT TEMP (PAGE 654) is configured		
Description			
Threshold level for lower limit of COOLANT TEMP (PAGE 654) .			

[back to List of setpoints](#)

Coolant Temperature Low Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	5 s	Alternative config	YES
Step	1 s		
Comm object	10270	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical analog input COOLANT TEMP (PAGE 654) is configured		
Description			
Delay for Coolant Temperature Low Wrn (page 227) .			

[back to List of setpoints](#)

Fuel Level Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	12897	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input FUEL LEVEL (PAGE 655) is configured		
Description			
Warning or history threshold level for FUEL LEVEL (PAGE 655) .			

[back to List of setpoints](#)

Fuel Level Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	12898	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input FUEL LEVEL (PAGE 655) is configured		
Description			
Shutdown or BOC threshold level for FUEL LEVEL (PAGE 655) .			

[back to List of setpoints](#)

Fuel Level Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	14343	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input FUEL LEVEL (PAGE 655) is configured or logical binary input FUEL LEVEL (PAGE 552) is configured		
Description			
Delay for FUEL LEVEL (PAGE 655) .			

[back to List of setpoints](#)

ECU Fuel Level Wrn

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by ECU sensor curve		
Default value	the value is defined by ECU sensor curve	Alternative config	NO
Step	the step is defined by ECU sensor curve		
Comm object	14432	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Warning threshold level for Fuel level which is send from ECU.			

[back to List of setpoints](#)

ECU Fuel Level Sd

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	the range is defined by ECU sensor curve		
Default value	the value is defined by ECU sensor curve	Alternative config	NO
Step	the step is defined by ECU sensor curve		
Comm object	14431	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Shutdown or BOC threshold level for Fuel level which is send from ECU.			

[back to List of setpoints](#)

ECU Fuel Level Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	14433	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if ECU is configured		
Description			
Delay for Fuel level which is send from ECU.			

[back to List of setpoints](#)

Fuel Tank Volume

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 10 000 [l]		
Default value	200 l	Alternative config	YES
Step	1 l		
Comm object	11103	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical analog input FUEL LEVEL (PAGE 655) is or ECU is configured		
Description			
Define a capacity of gen-set fuel tank.			

[back to List of setpoints](#)

Maximal Fuel Drop

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Disabled / 1 .. 50 [%/h]		
Default value	25 %/h	Alternative config	NO
Step	1%/h		
Comm object	12373	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Setpoint indicates the maximum allowable drop of fuel in fuel tank per running hour. When the engine is not running the maximal allowed fuel drop-off is preset to 5% of total tank volume per hour.			

[back to List of setpoints](#)

Maximal Fuel Drop Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 600 [s]		
Default value	5 s	Alternative config	NO
Step	s		
Comm object	14683	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
When the value of fuel drop per hour is higher than Maximal Fuel Drop (page 230) this delay starts count down. After count down of this delay alarm Wrn Fuel Theft (page 681) is activated.			

🔍 back to List of setpoints

Fuel Pump On

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. Fuel Pump Off (page 232) [%]		
Default value	20 %	Alternative config	NO
Step	1 %		
Comm object	10100	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical binary output FUEL PUMP (PAGE 598) is configured and logical binary input FUEL PUMP ON/OFF (PAGE 552) isn't configured		

Description

Threshold level for switching the binary output **FUEL PUMP (PAGE 598)** on.

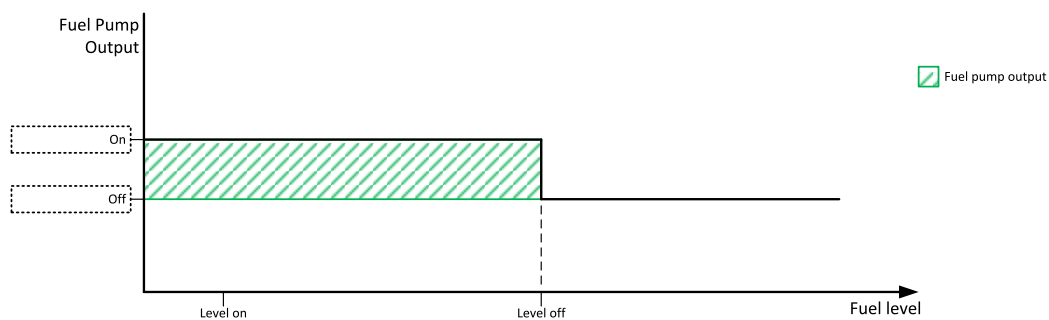


Image 9.13 Fuel Pump On

IMPORTANT: When binary input FUEL PUMP ON/OFF (PAGE 552) is configured then binary output FUEL PUMP (PAGE 598) is control by this binary input. Setpoints Fuel Pump On and Fuel Pump Off (page 232) are not evaluated!

Note: Value from analog input has higher priority than ECU.

Note: This setpoint is visible only if the logical binary output **FUEL PUMP (PAGE 598)** is configured.

🔍 back to List of setpoints

Fuel Pump Off

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Fuel Pump On (page 231) .. 100 [%]		
Default value	90 %	Alternative config	NO
Step	1 %		
Comm object	10101	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical binary output FUEL PUMP (PAGE 598) is configured and logical binary input FUEL PUMP ON/OFF (PAGE 552) isn't configured		

Description

Threshold level for switching the binary output **FUEL PUMP (PAGE 598)** off.

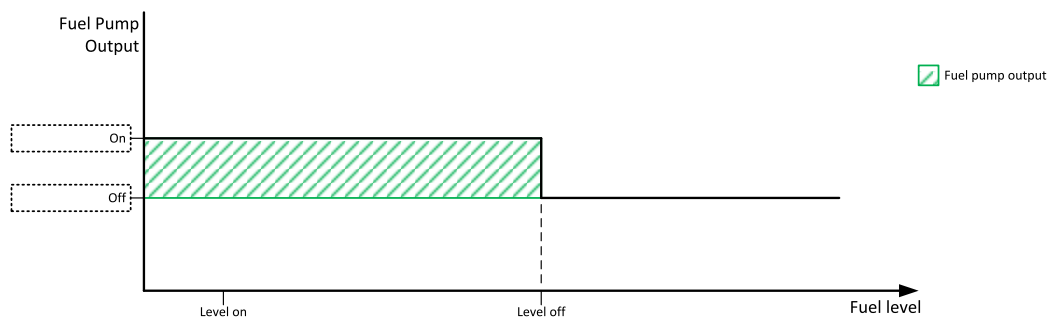


Image 9.14 Fuel Pump Off

IMPORTANT: When binary input **FUEL PUMP ON/OFF (PAGE 552)** is configured then binary output **FUEL PUMP (PAGE 598)** is control by this binary input. Setpoints **Fuel Pump On (page 231)** and **Fuel Pump Off** are not evaluated!

Note: Value from analog input has higher priority than ECU.

Note: This setpoint is visible only if the logical binary output **FUEL PUMP (PAGE 598)** is configured.

[back to List of setpoints](#)

Transfer Wrn Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Disabled / 1 .. 60 [s]		
Default value	30 s	Alternative config	YES
Step	1 s		
Comm object	10685	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical binary output FUEL PUMP (PAGE 598) is configured		
Description			
<p>If the controller does not see the fuel increase during fuel transfer within this time alarm Wrn Fuel Transfer Failed (page 696) will be displayed and the FUEL PUMP (PAGE 598) will be turned off. Alarm Wrn Fuel Transfer Failed (page 696) will be displayed but this alarm becomes immediately inactive and it will be possible to delete this message by the Fault reset button. If the fault is deleted the controller will initiate the transfer again.</p>			

[◀ back to List of setpoints](#)

Subgroup: Maintenance

Maintenance Timer 1

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	-10 000 ... 9 999 [h] / Disabled		
Default value	1 000 h	Alternative config	NO
Step	1 h		
Comm object	11616	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>Maintenance timer 1 counts down when engine is running. If reaches zero, an alarm appears, but the timer still counting down into negative values. When the value 10000 is set, than the Maintenance function is disabled and counter does not count. Counter value disappear from controllers statistics.</p>			

[◀ back to List of setpoints](#)

Maintenance Timer 2

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	-10 000 ... 9 999 [h] / Disabled		
Default value	1 000 h	Alternative config	NO
Step	1 h		
Comm object	11617	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Maintenance timer 2 counts down when engine is running. If reaches zero, an alarm appears, but the timer still counting down into negative values. When the value 10000 is set, than the Maintenance function is disabled and counter does not count. Counter value disappear from controllers statistics.			

[back to List of setpoints](#)

Maintenance Timer 3

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	-10 000 ... 9 999 [h] / Disabled		
Default value	1 000 h	Alternative config	NO
Step	1 h		
Comm object	11618	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Maintenance timer 3 counts down when engine is running. If reaches zero, an alarm appears, but the timer still counting down into negative values. When the value 10000 is set, than the Maintenance function is disabled and counter does not count. Counter value disappear from controllers statistics.			

[back to List of setpoints](#)

Subgroup: Battery Protections

Battery Undervoltage

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	8,0 V .. Battery Overvoltage (page 235) [V]		
Default value	18,0 V	Alternative config	NO
Step	0,1 V		
Comm object	8387	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning threshold for low battery voltage.			

[back to List of setpoints](#)

Battery Overvoltage

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	Battery Undervoltage (page 234) .. 40,0 [V]		
Default value	36,0 V	Alternative config	NO
Step	0,1 V		
Comm object	9587	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Warning threshold for high battery voltage.			

[back to List of setpoints](#)

Battery <> Voltage Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 600 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8383	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Battery Undervoltage (page 234) and Battery Overvoltage (page 235) protection.			

[back to List of setpoints](#)

Battery Charger Fail Delay

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 15 [min]		
Default value	5 min	Alternative config	NO
Step	1 min		
Comm object	11374	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned with LBI BATTERY CHARGER (PAGE 523)		
Description			
Delay for LBI BATTERY CHARGER (PAGE 523).			

[back to List of setpoints](#)

Subgroup: Pulse Counters

Conversion Coefficient Pulse 1

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 ... 1 000 [-]		
Default value	1	Alternative config	NO
Step	1		
Comm object	10994	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if LBI PULSE COUNTER 1 (PAGE 559) is configured		
Description			
<p>This setpoint adjusts the rate of increasing of the Pulse Counter 1 function. The module counts pulses at the input PULSE COUNTER 1 (PAGE 559) and if the input pulses counter reaches value given by this setpoint, the counter value Pulse Counter 1 (page 493) is increased by 1 and input pulses counter is reset to 0. Both counter value and input pulses counter are stored in the nonvolatile memory.</p>			

[◀ back to List of setpoints](#)

Conversion Coefficient Pulse 2

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 ... 1 000 [-]		
Default value	1	Alternative config	NO
Step	1		
Comm object	10995	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if LBI PULSE COUNTER 2 (PAGE 559) is configured		
Description			
<p>This setpoint adjusts the rate of increasing of the Pulse Counter 2 function. The module counts pulses at the input PULSE COUNTER 2 (PAGE 559) and if the input pulses counter reaches value given by this setpoint, the counter value Pulse Counter 2 (page 493) is increased by 0,1 and input pulses counter is reset to 0. Both counter value and input pulses counter are stored in the nonvolatile memory.</p>			

[◀ back to List of setpoints](#)

Subgroup: Power switch

Power Switch On

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 32 000 [kW]		
Default value	100 kW	Alternative config	NO
Step	1 kW		
Comm object	11658	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if the logical binary output POWER SWITCH (PAGE 616) is configured.		

Description

Threshold level for switching the binary output **POWER SWITCH (PAGE 616)** on.

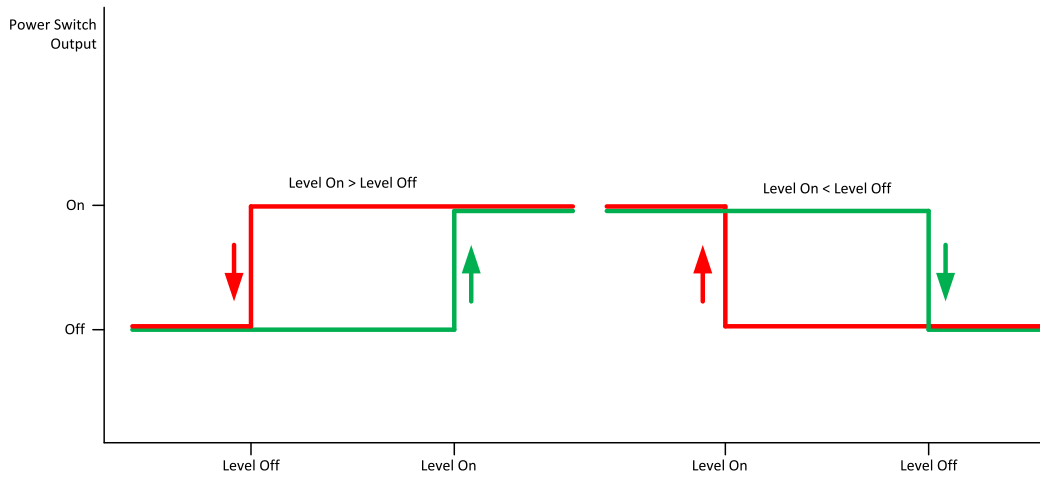


Image 9.15 Power Switch Level On < Level Off

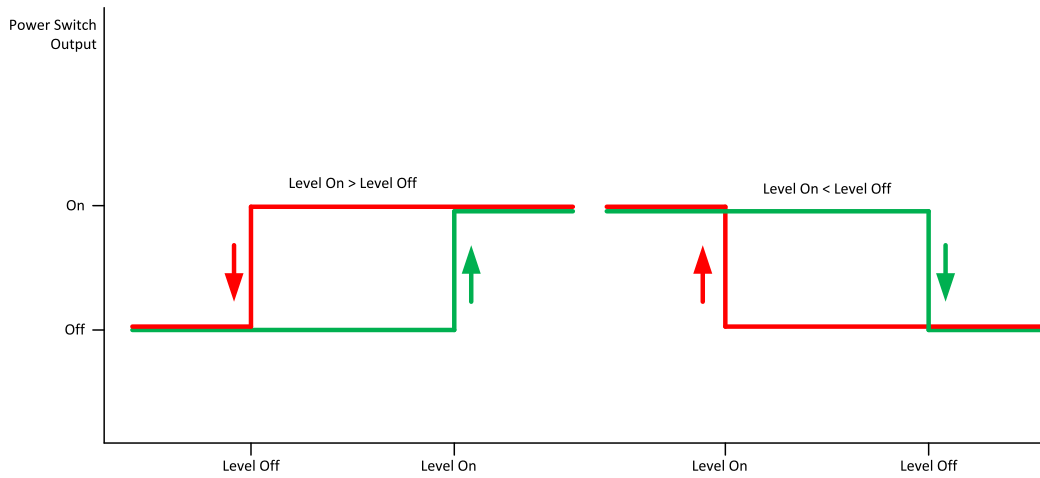


Image 9.16 Power Switch Level On > Level Off

[back to List of setpoints](#)

Power Switch Off

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 32 000 [kW]		
Default value	50 kW	Alternative config	NO
Step	1 kW		
Comm object	11659	Related applications	AMF, MRS

Config level	Advanced
Setpoint visibility	Visible only if the logical binary output POWER SWITCH (PAGE 616) is configured.
Description	

Threshold level for switching the binary output **POWER SWITCH (PAGE 616)** on.

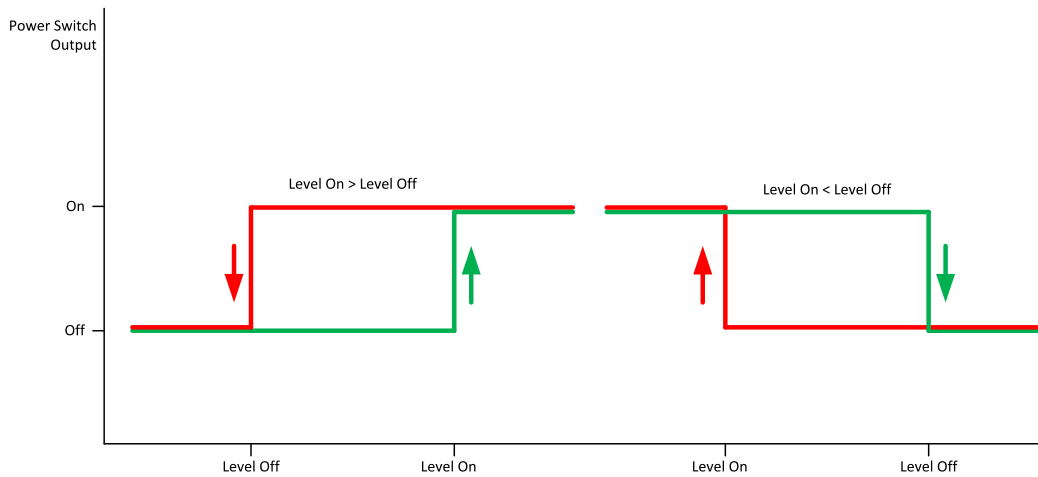


Image 9.17 Power Switch Level On < Level Off

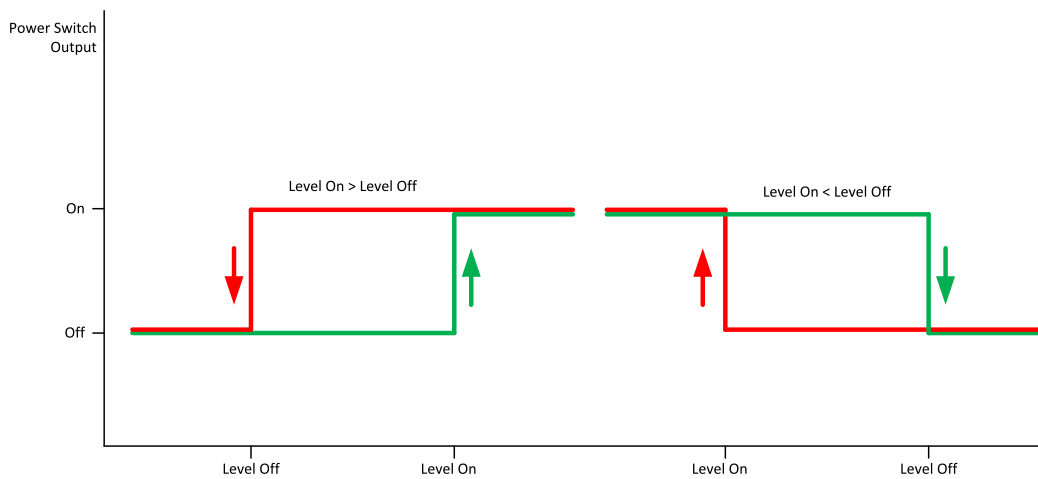


Image 9.18 Power Switch Level On > Level Off

[back to List of setpoints](#)

Subgroup: Ventilation

Ventilation Pulse Time

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0–3600 [s]		
Default value	30 s	Alternative config	NO
Step	1 s		
Comm object	15767	Related applications	MRS, AMF
Config level	Advanced		
Setpoint visibility	Only when logical binary output VENTILATION ON PULSE (PAGE 624) or VENTILATION OFF PULSE (PAGE 624) is configured.		
Description			
This setpoint defines duration of pulse generated on logical binary outputs VENTILATION ON PULSE (PAGE 624) or VENTILATION OFF PULSE (PAGE 624) at the moment when logical binary output VENTILATION (PAGE 624) is activated or deactivated respectively.			

[↶ back to List of setpoints](#)

Subgroup: ECU Settings

ECU Speed Adjustment

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	9948	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if ECU is configured		
Description			
Enables to adjust engine speed in ECU via CAN bus. Nominal speed corresponds to 50%. This setpoint should be used only for Volvo Penta and Scania engines. It has no effect on other engine brands.			
Note: To lock this setpoint against editing you also have to lock setpoint ECU Speed Adjustment 1 (page 363) , ECU Speed Adjustment 2 (page 364) and ECU Speed Adjustment 3 (page 364) .			

[↶ back to List of setpoints](#)

Group: Generator settings

Subgroup: Overload Protection

Overload BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Overload Wrn (page 240) .. 200 [%]		
Default value	120 %	Alternative config	NO
Step	1 % of Nominal Power (page 190)		
Comm object	8280	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold level for generator overload (in % of Nominal power) protection. Protection is BOC (Breaker Open and gen-set Cooldown).			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

[back to List of setpoints](#)

Overload Wrn

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0 .. Overload BOC (page 240) [%]		
Default value	120 %	Alternative config	NO
Step	1 % of Nominal Power (page 190)		
Comm object	9685	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold level for generator overload (in % of Nominal power) protection. This is only warning.			

[back to List of setpoints](#)

Overload Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	5,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8281	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Overload BOC (page 240) Overload BOC (page 240) and Overload Wrn (page 240) protection.			

[back to List of setpoints](#)

Subgroup: Current Protection

Short Circuit BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	100 .. 500 [%]		
Default value	250 %	Alternative config	NO
Step	1 % of Nominal Current (page 190)		
Comm object	8282	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
BOC occurs when generator current reaches this preset threshold.			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

[back to List of setpoints](#)

Short Circuit BOC Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,00 .. 10,00 [s]		
Default value	0,04 s	Alternative config	YES
Step	0,01 s		
Comm object	9991	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Delay for Short Circuit BOC (page 241) protection.			

[back to List of setpoints](#)

IDMT Overcurrent Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	1,0 .. 600,0 [s]		
Default value	4,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8283	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		

Description

IDMT curve shape selection. IDMT Overcurrent Delay is a reaction time of IDMT protection for 200% overcurrent $I_{gen} = 2 * \text{Nominal Current}$ (page 190)

IDMT is “very inverse” over current protection. Reaction time is not constant but depends on over current level according to the following formula:

$$\text{Reaction time} = \frac{\text{Overcurrent IDMT Delay} * \text{Nominal Current}}{I_{gen} * \text{Nominal Current}}$$

Note: Reaction time is limited to 3600 s = 60 minutes. IDMT protection is not active for Reaction time values longer than 60 minutes.

I_{gen} is maximal value of all measured phases of generator current.

Table 9.1 EXAMPLE of Reaction time for different over current levels

	Overcurrent IDMT Delay	Overcurrent		
		≤ 100 %	101 %	110 %
Reaction time	0,2 s	No action	20 s	2 s
	2 s	No action	200 s	20 s
	20 s	No action	2000 s	200 s

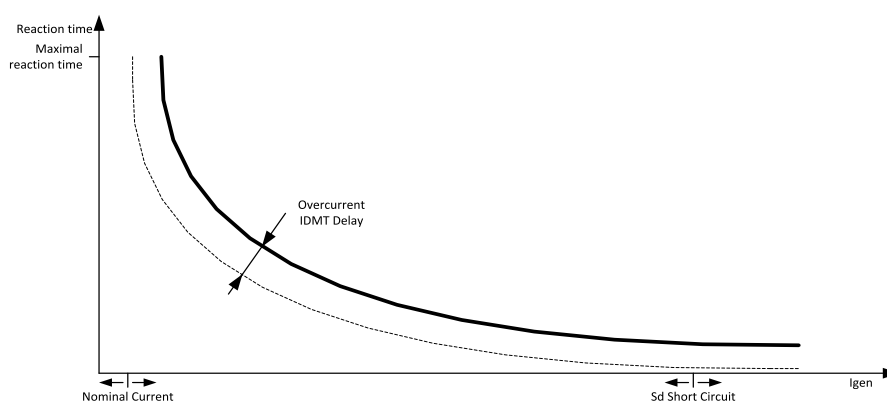


Image 9.19 IDMT Overcurrent Delay

[back to List of setpoints](#)

Current Unbalance BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	1 .. 200 [%] of Nominal Current (page 190)		
Default value	50 %	Alternative config	NO
Step	1 % of Nominal Current (page 190)		
Comm object	8284	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Threshold for generator current asymmetry (unbalance). Protection is BOC (Breaker Open and genset Cooldown).			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

⬅ back to List of setpoints

Current Unbalance BOC Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	5,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8285	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Delay for Current Unbalance BOC (page 243) protection.			

⬅ back to List of setpoints

Subgroup: Voltage Protection

Generator Overvoltage Sd

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Generator Overvoltage Wrn (page 244) .. 200 [%]		
Default value	110 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-N (page 193) or Nominal Voltage Ph-Ph (page 193)		
Comm object	8291	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator overvoltage protection. All three phases are checked. Maximum out of three is used.			
<i>Note: Phase to phase and phase to neutral voltages are used for this protection.</i>			

⬅ back to List of setpoints

Generator Overvoltage Wrn

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Generator Undervoltage Wrn (page 245) .. Generator Overvoltage Sd (page 243) [%]		
Default value	110 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-N (page 193) or Nominal Voltage Ph-Ph (page 193)		
Comm object	9686	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator overvoltage protection. All three phases are checked. Maximum out of three is used.			
<i>Note: Phase to phase and phase to neutral voltages are used for this protection.</i>			

[back to List of setpoints](#)

Generator Undervoltage BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0 .. Generator Undervoltage Wrn (page 245) [%]		
Default value	70 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-N (page 193) or Nominal Voltage Ph-Ph (page 193)		
Comm object	8293	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator undervoltage protection. All three phases are checked. Minimum out of three is used.			
<i>Note: Phase to phase and phase to neutral voltages are used for this protection.</i>			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

[back to List of setpoints](#)

Generator Undervoltage Wrn

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Generator Undervoltage BOC (page 244) .. Generator Overvoltage Wrn (page 244) [%]		
Default value	70 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-N (page 193) or Nominal Voltage Ph-Ph (page 193)		
Comm object	9687	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator undervoltage protection. All three phases are checked. Minimum out of three is used.			
<i>Note: Phase to phase and phase to neutral voltages are used for this protection.</i>			

[back to List of setpoints](#)

Generator <> Voltage Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	3,0 s	Alternative config	NO
Step	0,1 s		
Comm object	9103	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Generator Overvoltage Sd (page 243), Generator Overvoltage Wrn (page 244), Generator Undervoltage BOC (page 244) and Generator Undervoltage Wrn (page 245) protection.			

[back to List of setpoints](#)

Voltage Unbalance BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	1 .. 200 [%] of Nominal Voltage Ph-Ph (page 193)		
Default value	10 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 193)		
Comm object	8288	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Threshold for generator voltage unbalance alarm.			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

[back to List of setpoints](#)

Voltage Unbalance BOC Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	3,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8289	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Delay for Voltage Unbalance BOC (page 245) protection.			

[back to List of setpoints](#)

Subgroup: Frequency Protection

Generator Overfrequency BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Generator Overfrequency Wrn (page 246) .. 200,0 [%]		
Default value	110,0 %	Alternative config	NO
Step	0,1 % of Nominal Frequency (page 194)		
Comm object	8296	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator phase L1 overfrequency.			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

[back to List of setpoints](#)

Generator Overfrequency Wrn

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Generator Underfrequency Wrn (page 247) .. Generator Overfrequency BOC (page 246) [%]		
Default value	110,0 %	Alternative config	NO
Step	0,1 % of Nominal Frequency (page 194)		
Comm object	9688	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator phase L1 overfrequency.			

[back to List of setpoints](#)

Generator Underfrequency BOC

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,0 .. Generator Underfrequency Wrn (page 247) [%]		
Default value	85,0 %	Alternative config	NO
Step	0,1 % of Nominal Frequency (page 194)		
Comm object	8298	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator phase L1 underfrequency.			
<i>Note: When there is no control of breakers, the type of protection is Sd not BOC.</i>			

[back to List of setpoints](#)

Generator Underfrequency Wrn

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	Generator Underfrequency BOC (page 247) .. Generator Overfrequency Wrn (page 246) [%]		
Default value	85,0 %	Alternative config	NO
Step	0,1 % of Nominal Frequency (page 194)		
Comm object	9689	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Threshold for generator phase L1 underfrequency.			

[back to List of setpoints](#)

Generator <> Frequency Delay

Setpoint group	Generator settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	3,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8297	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Delay for Generator Overfrequency BOC (page 246), Generator Overfrequency Wrn (page 246), Generator Underfrequency Wrn (page 247) and Generator Underfrequency BOC (page 247) protection.			

[back to List of setpoints](#)

Group: Protections

Subgroup: Overload Protection

Overload Protection

Setpoint group	Protections	Related FW	1.8.0						
Range [units]	Enabled/Disabled/By LBI [-]								
Default value	Enabled	Alternative config	NO						
Step	[-]								
Comm object	15664	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint adjusts the behavior of generator Overload protection.									
<table border="1"> <tr> <td>Enabled:</td> <td>Protection is enabled. Behavior of protection is adjusted via setpoints Overload BOC (page 240), Overload Wrn (page 240) and Overload Delay (page 240).</td> </tr> <tr> <td>Disabled:</td> <td>Protection is disabled.</td> </tr> <tr> <td>By LBI:</td> <td>Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558).</td> </tr> </table>				Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Overload BOC (page 240) , Overload Wrn (page 240) and Overload Delay (page 240) .	Disabled:	Protection is disabled.	By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Overload BOC (page 240) , Overload Wrn (page 240) and Overload Delay (page 240) .								
Disabled:	Protection is disabled.								
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .								

[back to List of setpoints](#)

Subgroup: Current Protection

Short Circuit Protection

Setpoint group	Protections	Related FW	1.8.0						
Range [units]	Enabled / Disabled / By LBI [-]								
Default value	Enabled	Alternative config	NO						
Step	[-]								
Comm object	15665	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint adjusts the behavior of generator Short Circuit protection.									
<table border="1"> <tr> <td>Enabled:</td> <td>Protection is enabled. Behavior of protection is adjusted via setpoints Short Circuit BOC (page 241) and Short Circuit BOC Delay (page 241).</td> </tr> <tr> <td>Disabled:</td> <td>Protection is disabled.</td> </tr> <tr> <td>By LBI:</td> <td>Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558).</td> </tr> </table>				Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Short Circuit BOC (page 241) and Short Circuit BOC Delay (page 241) .	Disabled:	Protection is disabled.	By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Short Circuit BOC (page 241) and Short Circuit BOC Delay (page 241) .								
Disabled:	Protection is disabled.								
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .								

[back to List of setpoints](#)

IDMT Overcurrent Protection

Setpoint group	Protections	Related FW	1.8.0						
Range [units]	Enabled / Disabled / By LBI[-]								
Default value	Enabled	Alternative config	NO						
Step	[-]								
Comm object	15666	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint adjusts the behavior of generator IDMT Overcurrent protection.									
<table border="1"> <tr> <td>Enabled:</td> <td>Protection is enabled. Behavior of protection is adjusted via setpoint IDMT Overcurrent Delay (page 242).</td> </tr> <tr> <td>Disabled:</td> <td>Protection is disabled.</td> </tr> <tr> <td>By LBI:</td> <td>Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558).</td> </tr> </table>				Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint IDMT Overcurrent Delay (page 242) .	Disabled:	Protection is disabled.	By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint IDMT Overcurrent Delay (page 242) .								
Disabled:	Protection is disabled.								
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .								

[⬅ back to List of setpoints](#)

Current Unbalance Protection

Setpoint group	Protections	Related FW	1.8.0						
Range [units]	Enabled / Disabled / By LBI[-]								
Default value	Enabled	Alternative config	NO						
Step	[-]								
Comm object	15667	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint adjusts the behavior of generator Current Unbalance protection.									
<table border="1"> <tr> <td>Enabled:</td> <td>Protection is enabled. Behavior of protection is adjusted via setpoints Current Unbalance BOC (page 243) and Current Unbalance BOC Delay (page 243).</td> </tr> <tr> <td>Disabled:</td> <td>Protection is disabled.</td> </tr> <tr> <td>By LBI:</td> <td>Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558).</td> </tr> </table>				Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Current Unbalance BOC (page 243) and Current Unbalance BOC Delay (page 243) .	Disabled:	Protection is disabled.	By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Current Unbalance BOC (page 243) and Current Unbalance BOC Delay (page 243) .								
Disabled:	Protection is disabled.								
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .								

[⬅ back to List of setpoints](#)

Subgroup: Voltage Protection

Generator <> Voltage Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15668	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Generator <> Voltage protection. GCB closing is blocked, if the protection is disabled!			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Generator Overvoltage Sd (page 243) , Generator Overvoltage Wrn (page 244) , Generator Undervoltage BOC (page 244) , Generator Undervoltage Wrn (page 245) and Generator <> Voltage Delay (page 245) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .		

[back to List of setpoints](#)

Voltage Unbalance Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15669	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Voltage Unbalance protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Voltage Unbalance BOC (page 245) and Voltage Unbalance BOC Delay (page 246) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .		

[back to List of setpoints](#)

Subgroup: Frequency Protection

Generator Frequency Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15670	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Generator Frequency protection. GCB closing is blocked, if the protection is disabled!.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoints Generator Overfrequency BOC (page 246) , Generator Overfrequency Wrn (page 246) , Generator Underfrequency BOC (page 247) , Generator Underfrequency Wrn (page 247) , and Generator <> Frequency Delay (page 247) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .		

🔍 back to List of setpoints

Subgroup: Speed Protection

Underspeed Protection

Setpoint group	Protections	Related FW	1.8.0
Range [units]	Enabled / Disabled / By LBI [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	15671	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
This setpoint adjusts the behavior of generator Underspeed protection.			
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint Underspeed Sd (page 221) .		
Disabled:	Protection is disabled.		
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .		

🔍 back to List of setpoints

Overspeed Protection


Setpoint group	Protections	Related FW	1.8.0						
Range [units]	Enabled / Disabled / By LBI [-]								
Default value	Enabled	Alternative config	NO						
Step	[-]								
Comm object	15672	Related applications	AMF, MRS						
Config level	Advanced								
Setpoint visibility	Always								
Description									
This setpoint adjusts the behavior of generator Overspeed protection.									
<table border="1"> <tr> <td>Enabled:</td> <td>Protection is enabled. Behavior of protection is adjusted via setpoint Overspeed Sd (page 221).</td> </tr> <tr> <td>Disabled:</td> <td>Protection is disabled.</td> </tr> <tr> <td>By LBI:</td> <td>Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558).</td> </tr> </table>				Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint Overspeed Sd (page 221) .	Disabled:	Protection is disabled.	By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .
Enabled:	Protection is enabled. Behavior of protection is adjusted via setpoint Overspeed Sd (page 221) .								
Disabled:	Protection is disabled.								
By LBI:	Protection is enabled or disabled by the state of LBI PROTECTION ENABLE (PAGE 558) .								

[↶ back to List of setpoints](#)

Group: AMF settings

Subgroup: AMF Timers

Emergency Start Delay

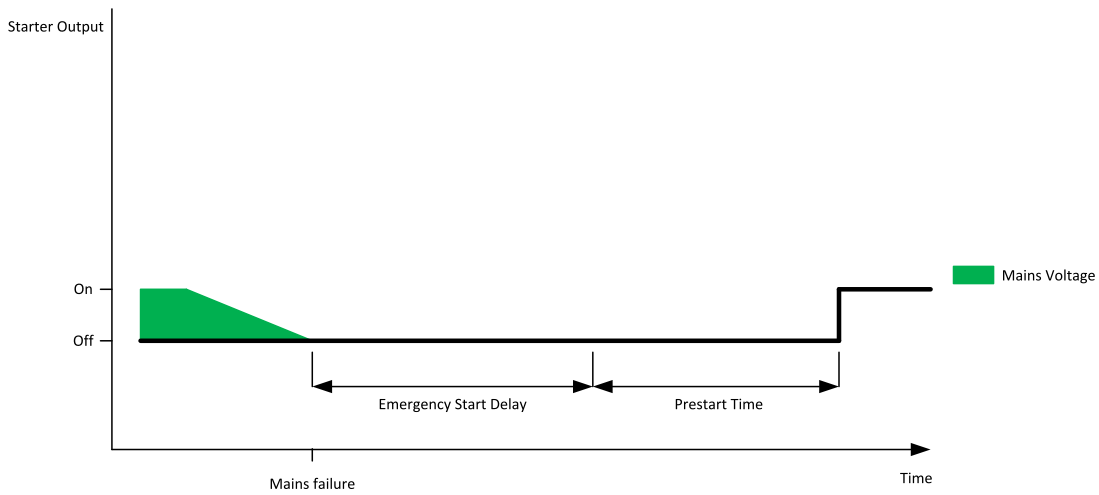Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	0 .. 6 000 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8301	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Delay after the mains failure to the start command of the gen-set.			
			
Image 9.20 Emergency Start Delay			

[back to List of setpoints](#)

Mains Return Delay

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	1 .. 3 600 [s]		
Default value	20 s	Alternative config	NO
Step	1 s		
Comm object	8302	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
This setpoint adjust the delay, how long mains has to be returned after mains fail to start load transfer to mains.			

[back to List of setpoints](#)

Transfer Delay

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	1,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8303	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		

Description

Delay after GCB opening to MCB closing during the return procedure. Delay after MCB opening to GCB closing if the setpoint **MCB Opens On (page 261)** is set to GENRUN.

The time charts below show recommended setting of Transfer Delay setpoint.

If the Transfer Delay setpoint is set shorter than the time required for opening of the circuit breaker, the controller closes **GCB CLOSE/OPEN (PAGE 600)** output straight away (100 ms) after the **MCB FEEDBACK (PAGE 557)** input deactivates.

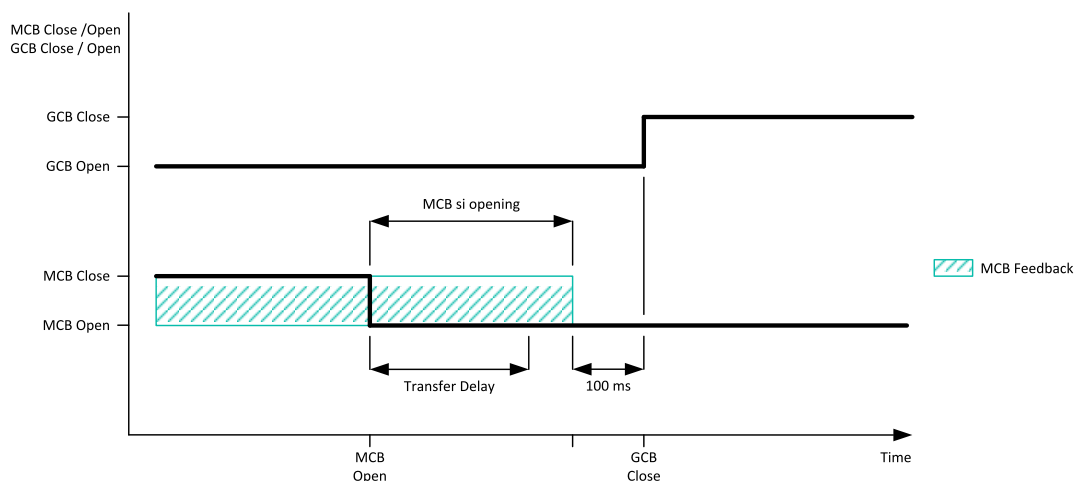


Image 9.21 Transfer Delay 1

If some delay between **MCB FEEDBACK (PAGE 557)** deactivation and closing of **GCB CLOSE/OPEN (PAGE 600)** output is required, then the Transfer Delay must be set to sum of "MCB opening" + "Delay" time.

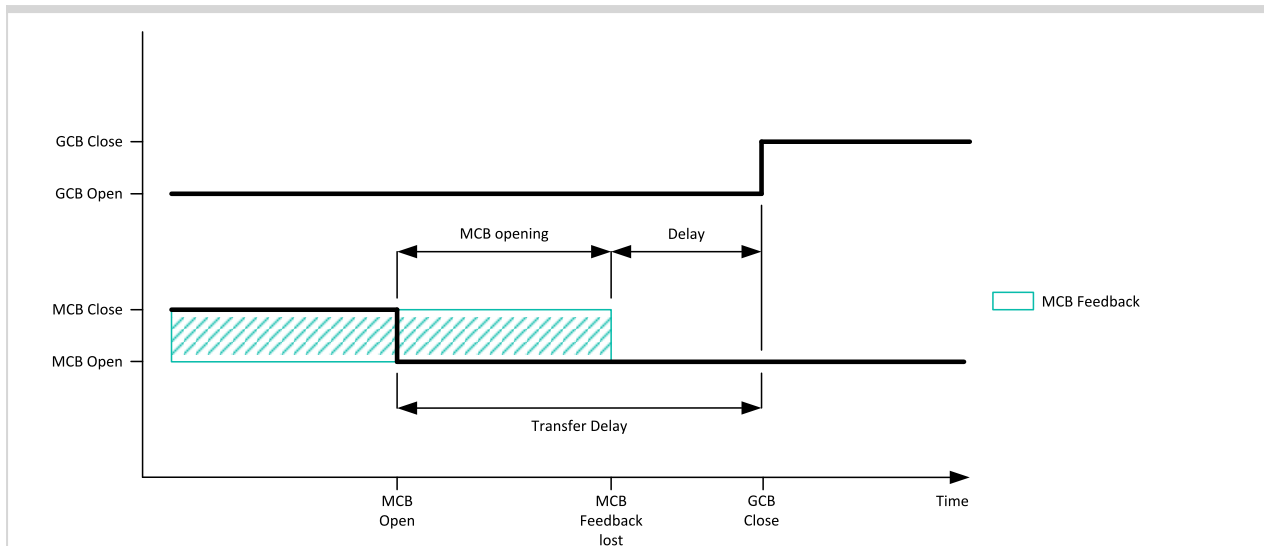


Image 9.22 Transfer Delay 2

This delay is also used in dual operation function. This delay is used when load from first gen-set is transferred to second gen-set. Delay starts to countdown when GCB of first gen-set is open. When this delay countdown, GCB of second gen-set is closed. This delay is important for correct function of external interlock.

[back to List of setpoints](#)

MCB Close Delay

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	1,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8389	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Delay after mains returns to MCB closing, if the gen-set is not running(e.g. is in start-up procedure)			

[back to List of setpoints](#)

Subgroup: AMF Voltage Conditions

Mains Overvoltage

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	Mains Undervoltage (page 256) .. 150 [%]		
Default value	110 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 193)		
Comm object	8305	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Threshold for mains overvoltage. All three phases are checked. Maximum out of three is used.			

[back to List of setpoints](#)

Mains Undervoltage

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	50 .. Mains Overvoltage (page 256) [%]		
Default value	60 %	Alternative config	YES
Step	1 % of Nominal Voltage Ph-Ph (page 193)		
Comm object	8307	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Threshold for mains undervoltage. All three phases are checked. Minimum voltage out of three phases is used.			

[back to List of setpoints](#)

Mains <> Voltage Delay

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	2,0 s	Alternative config	YES
Step	0,1 s		
Comm object	8306	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Delay for Mains Undervoltage (page 256) and Mains Overvoltage (page 256) protection.			

[back to List of setpoints](#)

Mains Voltage Unbalance

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	1 .. 150 [%] of Nominal Voltage Ph-Ph (page 193)		
Default value	10 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 193)		
Comm object	8446	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Threshold for mains voltage unbalance.			

[back to List of setpoints](#)

Mains Voltage Unbalance Delay

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	2,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8447	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Delay for Mains Voltage Unbalance (page 257) protection.			

[back to List of setpoints](#)

Subgroup: AMF Frequency Conditions

Mains Overfrequency

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	Mains Underfrequency (page 258) .. 150 [%]		
Default value	102,0 %	Alternative config	NO
Step	1,0 % of Nominal Frequency (page 194)		
Comm object	8310	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Threshold for mains overfrequency.			

[back to List of setpoints](#)

Mains Underfrequency

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	50 .. Mains Overfrequency (page 257) [%]		
Default value	98,0 %	Alternative config	NO
Step	1,0 % of Nominal Frequency (page 194)		
Comm object	8312	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Threshold for mains underfrequency.			

[back to List of setpoints](#)

Mains < > Frequency Delay

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	0,0 .. 600,0 [s]		
Default value	0,5 s	Alternative config	NO
Step	0,1 s		
Comm object	8311	Related applications	AMF
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Delay for Mains Underfrequency (page 258) and Mains Overfrequency (page 257) protection.			

[back to List of setpoints](#)

Subgroup: AMF Settings

Return From Island

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	Manual / Auto [-]		
Default value	Auto	Alternative config	NO
Step	[-]		
Comm object	9590	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Setpoint adjust the behavior of closing MCB when the mains returns.			
Manual	<p>Controller remains in AUT mode and the manual return to Mains is done via MCB button. Manual Restore (page 693) message is displayed in alarmlist to notify operator - it will disappear automatically after MCB close button is pushed.</p> <p>Note: Select <i>MANUAL</i> in case you need to manually control the moment when the load is transferred back to the mains.</p>		
Auto	No automatic mode change is performed.		

[⬅ back to List of setpoints](#)

MCB Logic

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	Close On / Close Off [-]		
Default value	Close Off	Alternative config	NO
Step	[-]		
Comm object	8444	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
The set point influences the behavior of the output MCB CLOSE/OPEN (PAGE 610) .			
Close On When the output MCB CLOSE/OPEN (PAGE 610) is closed – MCB should be closed.			
Close Off When the output MCB CLOSE/OPEN (PAGE 610) is closed – MCB should be opened.			

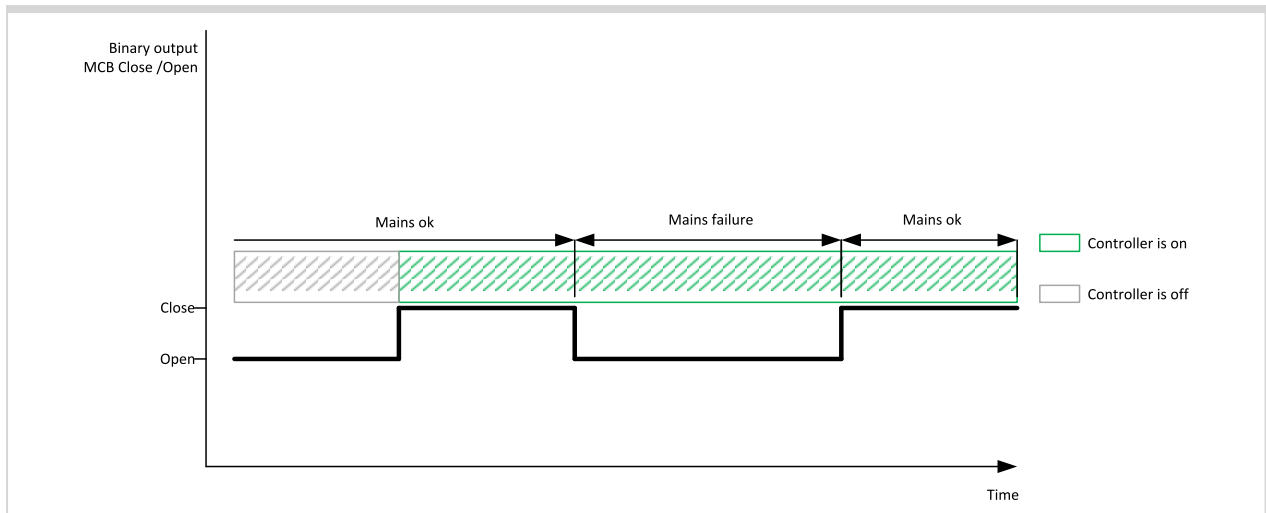


Image 9.23 MCB Logic 1

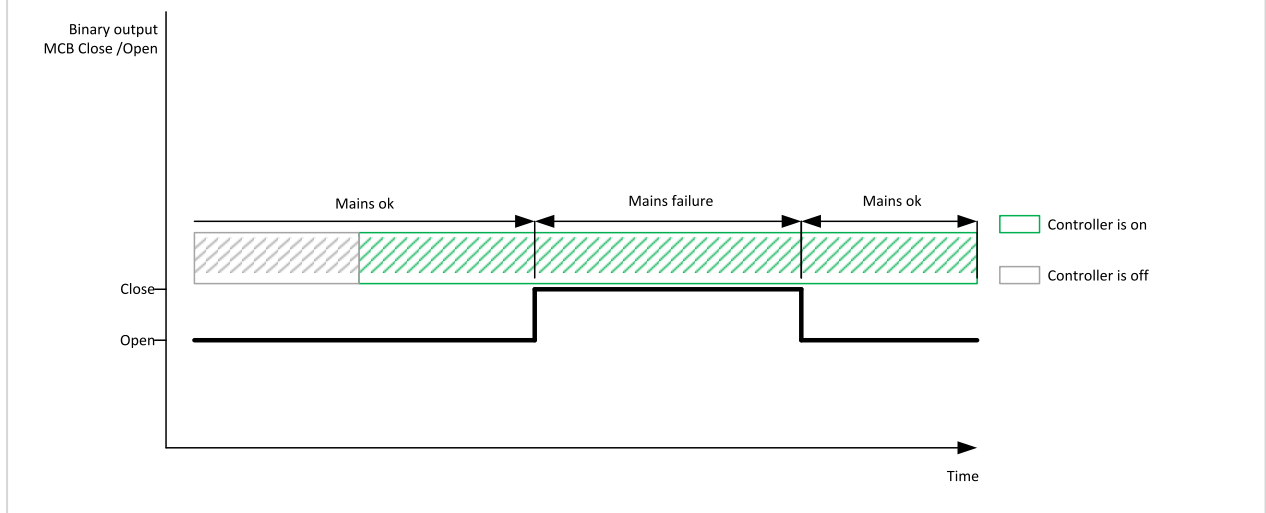


Image 9.24 MCB Logic 2

[back to List of setpoints](#)

MCB Opens On

Setpoint group	AMF settings	Related FW	1.8.0
Range [units]	Mains Fail / Gen Run [-]		
Default value	Gen Run	Alternative config	NO
Step	[-]		
Comm object	9850	Related applications	AMF
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Operation Mode (page 197)		
Description			
Setpoint adjust the behavior of opening MCB in AUTO mode when there is mains fail.			
<p>Mains Fail The command to open the MCB is given immediately after mains fail condition is evaluated. If the mains will return into parameters after MCB was opened and before GCB is closed, timer MCB Close Delay (page 255) is applied before MCB closing.</p> <p>Gen Run MCB will be opened when engine will be running and it will be possible to transfer load from Mains to gen-set (after stabilisation phase).</p>			
<p>Note: This option should be used for MCBs using 230V control and not equipped with the undervoltage coil.</p>			

🔍 back to List of setpoints

Group: Dual Operation

Subgroup: Dual Operation

Running Hours Max Difference

Setpoint group	Dual Operation	Related FW	1.8.0
Range [units]	0,1 .. 1000,0 [h]		
Default value	10 h	Alternative config	NO
Step	0,1 h		
Comm object	16039	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365) and COM2 Mode (page 366)		
Description			
This setpoint adjusts the maximal allowed difference of dual operation running hours between Master and Slave. When difference is higher, swap of load between controllers should be done.			

🔍 back to List of setpoints

Running Hours Base

Setpoint group	Dual Operation	Related FW	1.8.0
Range [units]	-10 000,0 .. 10 000,0 [h]		
Default value	0 h	Alternative config	NO
Step	0,1 h		
Comm object	16040	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365) and COM2 Mode (page 366)		
Description			
<p>This setpoint modifies the running hours of controller used in dual operation function. Negative value is decrement from running hours, positive value is increment to running hours.</p> <p>Example: Master controller has 1000 h. Slave controller has 100 h. Adjust setpoint of slave controller to 900 h to have both controllers on "0" running hours in dual operation.</p>			

[back to List of setpoints](#)

Swap Gen-sets

Setpoint group	Dual Operation	Related FW	1.8.0
Range [units]	Enabled / Disabled [-]		
Default value	Enabled h	Alternative config	NO
Step	[-]		
Comm object	16041	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365) and COM2 Mode (page 366)		
Description			
<p>This setpoint enables or disables swapping of gen-sets on load in dual operation.</p> <p>Enabled Master and Slave are swapped based on their actual running hours.</p> <p>Disabled Master and Slave are not swapped. Controller with lower running hours starts and then runs until mains returns or until controller shutdown - then second controller starts.</p>			

[back to List of setpoints](#)

Master Error Protection

Setpoint group	Dual Operation	Related FW	1.8.0
Range [units]	Monitoring / AL Indic / Wrn [-]		
Default value	AL Indic	Alternative config	NO
Step	[-]		
Comm object	16042	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365) and COM2 Mode (page 366)		
Description			
This setpoint adjust the type of protection for Dual Operation Master Fail (page 690) alarm.			

[◀ back to List of setpoints](#)

Slave Error Protection

Setpoint group	Dual Operation	Related FW	1.8.0
Range [units]	Monitoring / AL Indic / Wrn [-]		
Default value	AL Indic	Alternative config	NO
Step	[-]		
Comm object	16043	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365) and COM2 Mode (page 366)		
Description			
This setpoint adjust the type of protection for Dual Operation Slave Fail (page 690) alarm.			

[◀ back to List of setpoints](#)

Group: General Analog Inputs

General Analog Input 1

Analog Protection 1 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9259	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT01 (PAGE 627) is configured		
Description			
Warning or history threshold level for AIN PROT01 (PAGE 627) .			
<i>Note: These setpoints are used only if LAI AIN PROT01 (PAGE 627) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 1 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9260	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT01 (PAGE 627) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT01 (PAGE 627) .			
<i>Note: These setpoints are used only if LAI AIN PROT01 (PAGE 627) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 1 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9261	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT01 (PAGE 627) is configured		
Description			
Delay for AIN PROT01 (PAGE 627) .			
<i>Note: These setpoints are used only if LAI AIN PROT01 (PAGE 627) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 1 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11407	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH01 (PAGE 579) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH01 (PAGE 579) on. The value is measured from AIN SWITCH 01 (PAGE 647) analog input.			
Image 9.25 General analog input 1 switch			

[back to List of setpoints](#)

Analog Switch 1 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11410	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH01 (PAGE 579) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH01 (PAGE 579) off. The value is measured from AIN SWITCH 01 (PAGE 647) analog input.			
Image 9.26 General analog input 1 switch			

🔍 back to List of setpoints

General Analog Input 2

Analog Protection 2 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9262	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT02 (PAGE 628) is configured		
Description			
Warning or history threshold level for AIN PROT02 (PAGE 628) .			
<p>Note: These setpoints are used only if LAI AIN PROT02 (PAGE 628) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 2 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9263	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT02 (PAGE 628) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT02 (PAGE 628) .			
<i>Note: These setpoints are used only if LAI AIN PROT02 (PAGE 628) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 2 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9264	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT02 (PAGE 628) is configured		
Description			
Delay for AIN PROT02 (PAGE 628) .			
<i>Note: These setpoints are used only if LAI AIN PROT02 (PAGE 628) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 2 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11408	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH02 (PAGE 580) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 02 (PAGE 647)** on. The value is measured from **AIN SWITCH 02 (PAGE 647)** analog input.

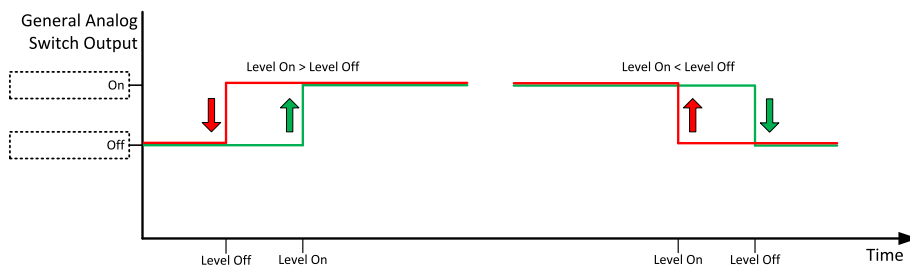


Image 9.27 General analog input 2 switch

[back to List of setpoints](#)

Analog Switch 2 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11411	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH02 (PAGE 580) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 02 (PAGE 647) off. The value is measured from AIN SWITCH 02 (PAGE 647) analog input.			
Image 9.28 General analog input 2 switch			

[back to List of setpoints](#)

General Analog Input 3

Analog Protection 3 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9265	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT03 (PAGE 629) is configured		
Description			
Warning or history threshold level for AIN PROT03 (PAGE 629) .			
<p>Note: These setpoints are used only if LAI AIN PROT03 (PAGE 629) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

[back to List of setpoints](#)

Analog Protection 3 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9266	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT03 (PAGE 629) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT03 (PAGE 629) .			
<i>Note: These setpoints are used only if LAI AIN PROT03 (PAGE 629) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 3 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9267	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT03 (PAGE 629) is configured		
Description			
Delay for AIN PROT03 (PAGE 629) .			
<i>Note: These setpoints are used only if LAI AIN PROT03 (PAGE 629) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 3 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11409	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH03 (PAGE 580) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 03 (PAGE 647)** on. The value is measured from **AIN SWITCH 03 (PAGE 647)** analog input.

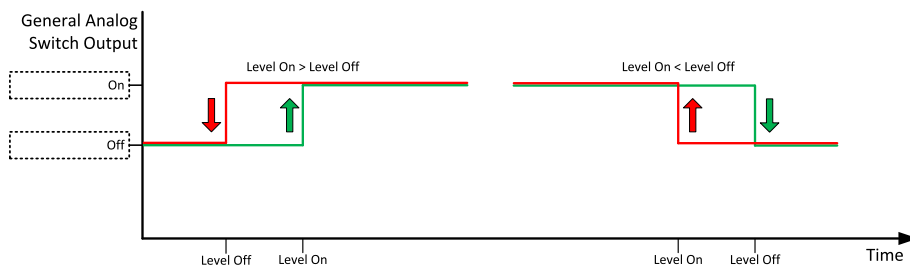


Image 9.29 General analog input 3 switch

[back to List of setpoints](#)

Analog Switch 3 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11412	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH03 (PAGE 580) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 03 (PAGE 647) off. The value is measured from AIN SWITCH 03 (PAGE 647) analog input.			
Image 9.30 General analog input 3 switch			

🔍 back to List of setpoints

General Analog Input 4

Analog Protection 4 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9268	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT04 (PAGE 630) is configured		
Description			
Warning or history threshold level for AIN PROT04 (PAGE 630) .			
<p>Note: These setpoints are used only if LAI AIN PROT04 (PAGE 630) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 4 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9269	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT04 (PAGE 630) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT04 (PAGE 630) .			
<i>Note: These setpoints are used only if LAI AIN PROT04 (PAGE 630) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[↶ back to List of setpoints](#)

Analog Protection 4 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9270	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT04 (PAGE 630) is configured		
Description			
Delay for AIN PROT04 (PAGE 630) .			
<i>Note: These setpoints are used only if LAI AIN PROT04 (PAGE 630) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[↶ back to List of setpoints](#)

Analog Switch 4 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14385	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 04 (PAGE 648)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

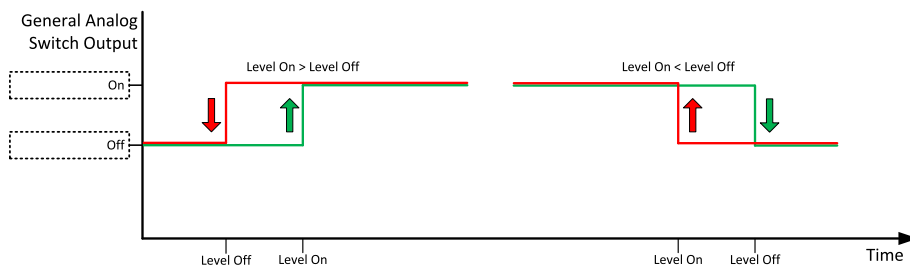


Image 9.31 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 4 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14386	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 04 (PAGE 648) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.32 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 5

Analog Protection 5 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9271	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT05 (PAGE 631) is configured		
Description			
Warning or history threshold level for AIN PROT05 (PAGE 631) .			
<p>Note: These setpoints are used only if LAI AIN PROT05 (PAGE 631) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

[back to List of setpoints](#)

Analog Protection 5 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9272	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT05 (PAGE 631) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT05 (PAGE 631) .			
<i>Note: These setpoints are used only if LAI AIN PROT05 (PAGE 631) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[↶ back to List of setpoints](#)

Analog Protection 5 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9273	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT05 (PAGE 631) is configured		
Description			
Delay for AIN PROT05 (PAGE 631) .			
<i>Note: These setpoints are used only if LAI AIN PROT05 (PAGE 631) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[↶ back to List of setpoints](#)

Analog Switch 5 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14963	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 05 (PAGE 648)** on. The value is measured from **AIN SWITCH 05 (PAGE 648)** analog input.

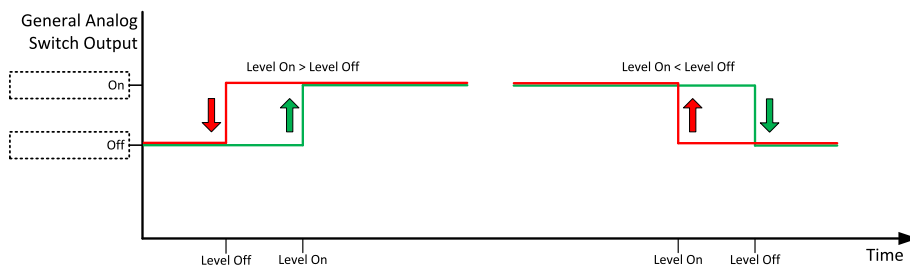


Image 9.33 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 5 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14979	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 05 (PAGE 648) off. The value is measured from AIN SWITCH 05 (PAGE 648) analog input.			
Image 9.34 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 6

Analog Protection 6 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9274	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT06 (PAGE 632) is configured		
Description			
Warning or history threshold level for AIN PROT06 (PAGE 632) .			
<p>Note: These setpoints are used only if LAI AIN PROT06 (PAGE 632) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 6 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9275	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT06 (PAGE 632) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT06 (PAGE 632) .			
<i>Note: These setpoints are used only if LAI AIN PROT06 (PAGE 632) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 6 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9276	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT06 (PAGE 632) is configured		
Description			
Delay for AIN PROT06 (PAGE 632) .			
<i>Note: These setpoints are used only if LAI AIN PROT06 (PAGE 632) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 6 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14964	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 06 (PAGE 648)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

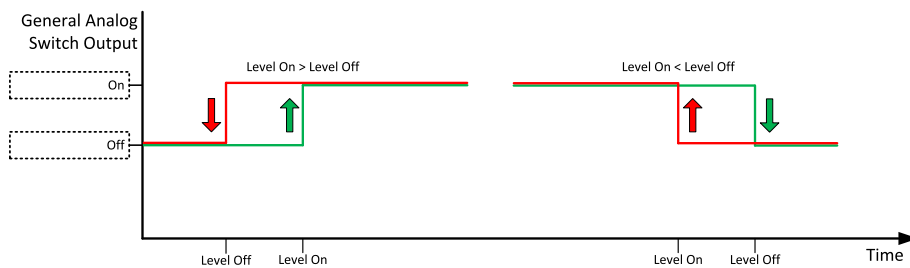


Image 9.35 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 6 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14980	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 06 (PAGE 648) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.36 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 7

Analog Protection 7 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9277	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT07 (PAGE 633) is configured		
Description			
Warning or history threshold level for AIN PROT07 (PAGE 633) .			
<p>Note: These setpoints are used only if LAI AIN PROT07 (PAGE 633) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 7 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9278	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT07 (PAGE 633) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT07 (PAGE 633) .			
<i>Note: These setpoints are used only if LAI AIN PROT07 (PAGE 633) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 7 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9279	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT07 (PAGE 633) is configured		
Description			
Delay for AIN PROT07 (PAGE 633) .			
<i>Note: These setpoints are used only if LAI AIN PROT07 (PAGE 633) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 7 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14965	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 07 (PAGE 649)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

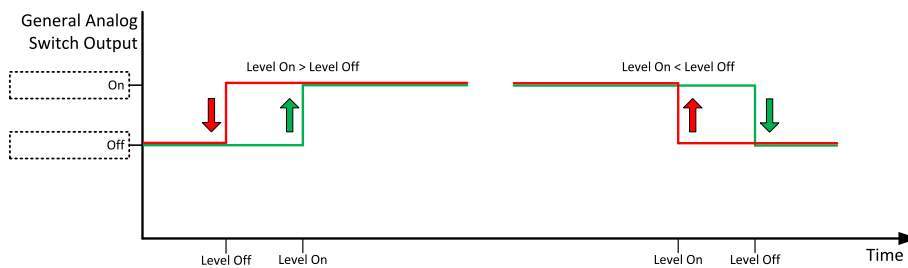


Image 9.37 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 7 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14981	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 07 (PAGE 649) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.38 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 8

Analog Protection 8 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9280	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT08 (PAGE 634) is configured		
Description			
Warning or history threshold level for AIN PROT08 (PAGE 634) .			
<p>Note: These setpoints are used only if LAI AIN PROT08 (PAGE 634) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

[back to List of setpoints](#)

Analog Protection 8 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9281	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT08 (PAGE 634) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT08 (PAGE 634) .			
<i>Note: These setpoints are used only if LAI AIN PROT08 (PAGE 634) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 8 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9282	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT08 (PAGE 634) is configured		
Description			
Delay for AIN PROT08 (PAGE 634) .			
<i>Note: These setpoints are used only if LAI AIN PROT08 (PAGE 634) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 8 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14966	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 08 (PAGE 649)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

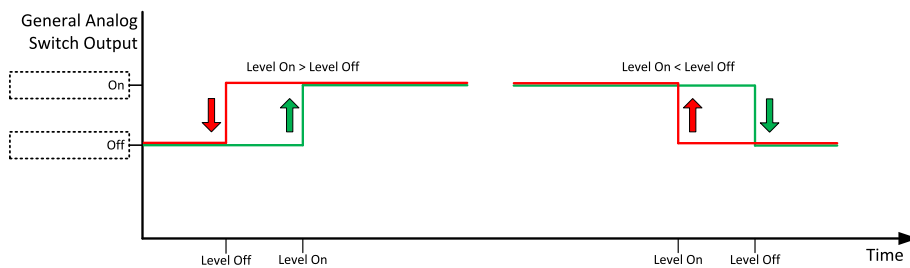


Image 9.39 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 8 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14982	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 08 (PAGE 649) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.40 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 9

Analog Protection 9 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9283	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT09 (PAGE 635) is configured		
Description			
Warning or history threshold level for AIN PROT09 (PAGE 635) .			
<p>Note: These setpoints are used only if LAI AIN PROT09 (PAGE 635) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 9 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9284	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT09 (PAGE 635) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT09 (PAGE 635).			
<p>Note: These setpoints are used only if LAI AIN PROT09 (PAGE 635) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 9 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9285	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT09 (PAGE 635) is configured		
Description			
Delay for AIN PROT09 (PAGE 635).			
<p>Note: These setpoints are used only if LAI AIN PROT09 (PAGE 635) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Switch 9 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14967	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 09 (PAGE 649)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

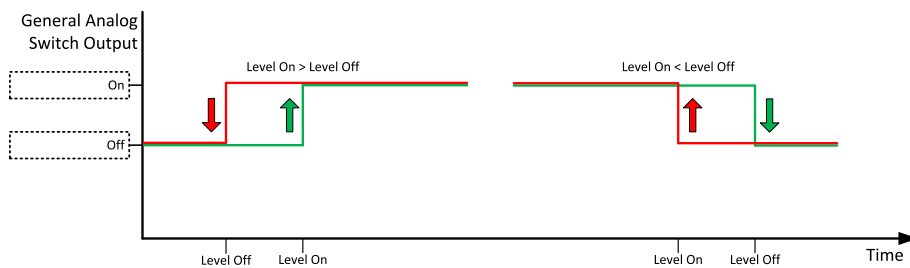


Image 9.41 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 9 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14983	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 09 (PAGE 649) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.42 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 10

Analog Protection 10 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9286	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT10 (PAGE 636) is configured		
Description			
Warning or history threshold level for AIN PROT10 (PAGE 636) .			
<p>Note: These setpoints are used only if LAI AIN PROT10 (PAGE 636) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 10 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9287	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT10 (PAGE 636) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT10 (PAGE 636) .			
<i>Note: These setpoints are used only if LAI AIN PROT10 (PAGE 636) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 10 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9288	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT10 (PAGE 636) is configured		
Description			
Delay for AIN PROT10 (PAGE 636) .			
<i>Note: These setpoints are used only if LAI AIN PROT10 (PAGE 636) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 10 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14968	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 10 (PAGE 650)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

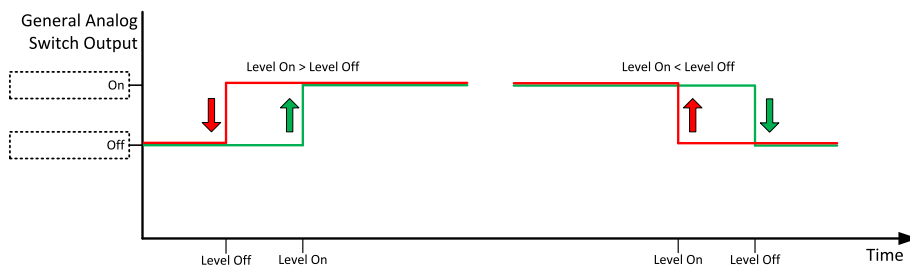


Image 9.43 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 10 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14984	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 10 (PAGE 650) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.44 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 11

Analog Protection 11 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9289	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT11 (PAGE 637) is configured		
Description			
Warning or history threshold level for AIN PROT11 (PAGE 637) .			
<p>Note: These setpoints are used only if LAI AIN PROT11 (PAGE 637) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

[back to List of setpoints](#)

Analog Protection 11 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9290	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT11 (PAGE 637) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT11 (PAGE 637).			
<p>Note: These setpoints are used only if LAI AIN PROT11 (PAGE 637) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 11 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9291	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT11 (PAGE 637) is configured		
Description			
Delay for AIN PROT11 (PAGE 637).			
<p>Note: These setpoints are used only if LAI AIN PROT11 (PAGE 637) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Switch 11 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14969	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 11 (PAGE 650)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

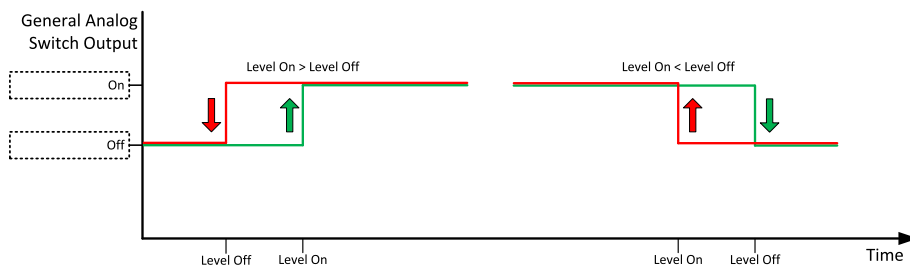


Image 9.45 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 11 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14985	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 11 (PAGE 650) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.46 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 12

Analog Protection 12 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9292	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT12 (PAGE 638) is configured		
Description			
Warning or history threshold level for AIN PROT12 (PAGE 638) .			
<p>Note: These setpoints are used only if LAI AIN PROT12 (PAGE 638) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 12 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9293	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT12 (PAGE 638) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT12 (PAGE 638) .			
<i>Note: These setpoints are used only if LAI AIN PROT12 (PAGE 638) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 12 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9294	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT12 (PAGE 638) is configured		
Description			
Delay for AIN PROT12 (PAGE 638) .			
<i>Note: These setpoints are used only if LAI AIN PROT12 (PAGE 638) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 12 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14970	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 12 (PAGE 650)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

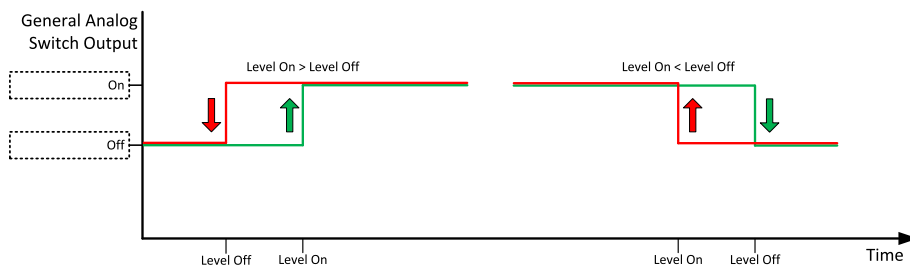


Image 9.47 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 12 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14986	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 12 (PAGE 650) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.48 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 13

Analog Protection 13 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9295	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT13 (PAGE 639) is configured		
Description			
Warning or history threshold level for AIN PROT13 (PAGE 639) .			
<p>Note: These setpoints are used only if LAI AIN PROT13 (PAGE 639) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 13 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9296	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT13 (PAGE 639) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT13 (PAGE 639) .			
<i>Note: These setpoints are used only if LAI AIN PROT13 (PAGE 639) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 13 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9297	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT13 (PAGE 639) is configured		
Description			
Delay for AIN PROT13 (PAGE 639) .			
<i>Note: These setpoints are used only if LAI AIN PROT13 (PAGE 639) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 13 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14971	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 13 (PAGE 651)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

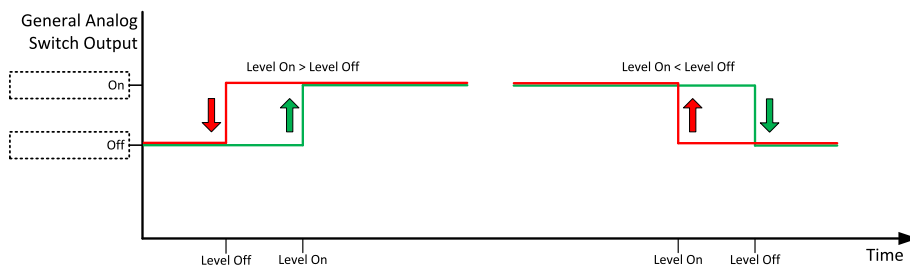


Image 9.49 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 13 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14987	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 13 (PAGE 651) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.50 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 14

Analog Protection 14 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9298	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT14 (PAGE 640) is configured		
Description			
Warning or history threshold level for AIN PROT14 (PAGE 640) .			
<p>Note: These setpoints are used only if LAI AIN PROT14 (PAGE 640) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 14 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9299	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT14 (PAGE 640) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT14 (PAGE 640) .			
<i>Note: These setpoints are used only if LAI AIN PROT14 (PAGE 640) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 14 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9300	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT14 (PAGE 640) is configured		
Description			
Delay for AIN PROT14 (PAGE 640) .			
<i>Note: These setpoints are used only if LAI AIN PROT14 (PAGE 640) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 14 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14972	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 14 (PAGE 651)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

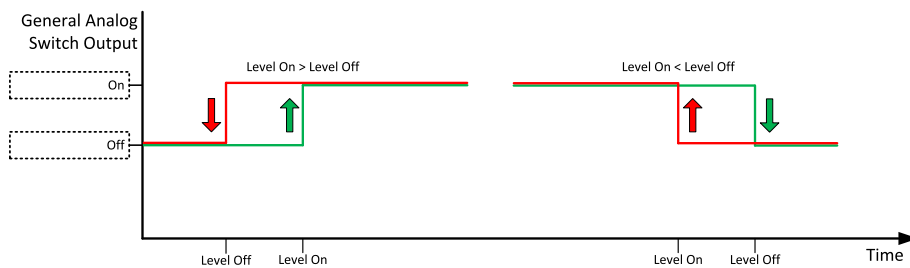


Image 9.51 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 14 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14988	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 14 (PAGE 651) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.52 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 15

Analog Protection 15 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9301	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT15 (PAGE 641) is configured		
Description			
Warning or history threshold level for AIN PROT15 (PAGE 641) .			
<p>Note: These setpoints are used only if LAI AIN PROT15 (PAGE 641) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

[back to List of setpoints](#)

Analog Protection 15 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9302	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT15 (PAGE 641) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT15 (PAGE 641) .			
<i>Note: These setpoints are used only if LAI AIN PROT15 (PAGE 641) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 15 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9303	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT15 (PAGE 641) is configured		
Description			
Delay for AIN PROT15 (PAGE 641) .			
<i>Note: These setpoints are used only if LAI AIN PROT15 (PAGE 641) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 15 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14973	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 15 (PAGE 651)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

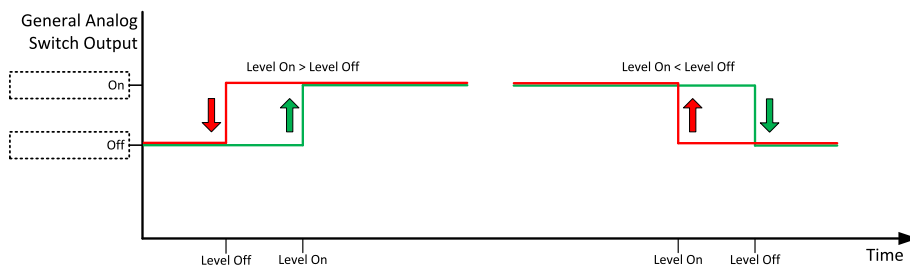


Image 9.53 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 15 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14989	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 15 (PAGE 651) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.54 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 16

Analog Protection 16 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9304	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT16 (PAGE 642) is configured		
Description			
Warning or history threshold level for AIN PROT16 (PAGE 642) .			
<p>Note: These setpoints are used only if LAI AIN PROT16 (PAGE 642) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 16 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9305	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT16 (PAGE 642) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT16 (PAGE 642) .			
<i>Note: These setpoints are used only if LAI AIN PROT16 (PAGE 642) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[↶ back to List of setpoints](#)

Analog Protection 16 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9306	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT16 (PAGE 642) is configured		
Description			
Delay for AIN PROT16 (PAGE 642) .			
<i>Note: These setpoints are used only if LAI AIN PROT16 (PAGE 642) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[↶ back to List of setpoints](#)

Analog Switch 16 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14974	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 16 (PAGE 652)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

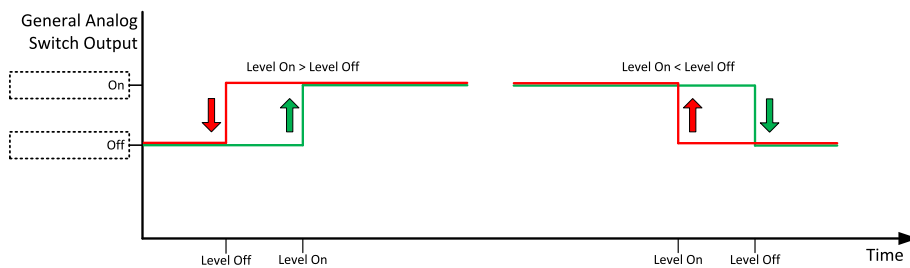


Image 9.55 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 16 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14990	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 16 (PAGE 652) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.56 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 17

Analog Protection 17 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9307	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT17 (PAGE 643) is configured		
Description			
Warning or history threshold level for AIN PROT17 (PAGE 643) .			
<p>Note: These setpoints are used only if LAI AIN PROT17 (PAGE 643) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 17 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9308	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT17 (PAGE 643) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT17 (PAGE 643) .			
<i>Note: These setpoints are used only if LAI AIN PROT17 (PAGE 643) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 17 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9309	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT17 (PAGE 643) is configured		
Description			
Delay for AIN PROT17 (PAGE 643) .			
<i>Note: These setpoints are used only if LAI AIN PROT17 (PAGE 643) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 17 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14975	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 17 (PAGE 652)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

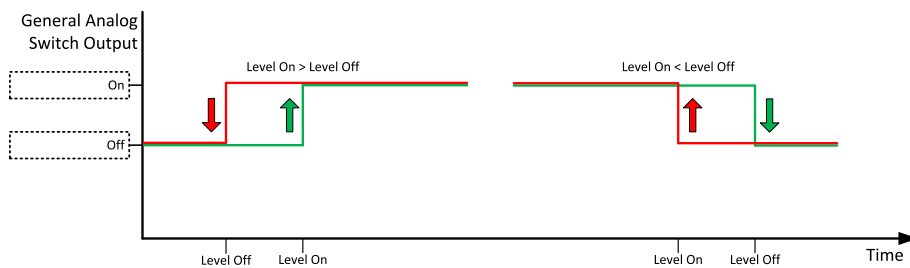


Image 9.57 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 17 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14991	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 17 (PAGE 652) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.58 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 18

Analog Protection 18 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9310	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT18 (PAGE 644) is configured		
Description			
Warning or history threshold level for AIN PROT18 (PAGE 644) .			
<p>Note: These setpoints are used only if LAI AIN PROT18 (PAGE 644) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 18 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9311	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT18 (PAGE 644) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT18 (PAGE 644) .			
<i>Note: These setpoints are used only if LAI AIN PROT18 (PAGE 644) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 18 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9312	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT18 (PAGE 644) is configured		
Description			
Delay for AIN PROT18 (PAGE 644) .			
<i>Note: These setpoints are used only if LAI AIN PROT18 (PAGE 644) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 18 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14976	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 18 (PAGE 652)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

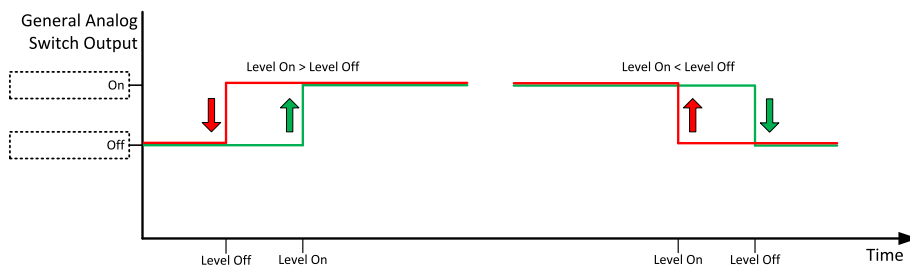


Image 9.59 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 18 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14992	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 18 (PAGE 652) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.60 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 19

Analog Protection 19 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9313	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT19 (PAGE 645) is configured		
Description			
Warning or history threshold level for AIN PROT19 (PAGE 645) .			
<p>Note: These setpoints are used only if LAI AIN PROT19 (PAGE 645) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 19 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9314	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT19 (PAGE 645) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT19 (PAGE 645) .			
<i>Note: These setpoints are used only if LAI AIN PROT19 (PAGE 645) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 19 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9315	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT19 (PAGE 645) is configured		
Description			
Delay for AIN PROT19 (PAGE 645) .			
<i>Note: These setpoints are used only if LAI AIN PROT19 (PAGE 645) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 19 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14977	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 19 (PAGE 653)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

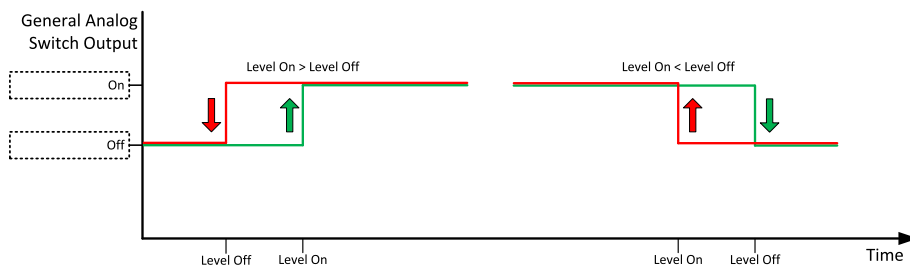


Image 9.61 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 19 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14993	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 19 (PAGE 653) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.62 General analog input 4 switch			

🔍 back to List of setpoints

General Analog Input 20

Analog Protection 20 Wrn

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9316	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT20 (PAGE 646) is configured		
Description			
Warning or history threshold level for AIN PROT20 (PAGE 646) .			
<p>Note: These setpoints are used only if LAI AIN PROT20 (PAGE 646) is adjusted to required protection type. Otherwise these setpoints are useless.</p>			

🔍 back to List of setpoints

Analog Protection 20 Sd

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9317	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT20 (PAGE 646) is configured		
Description			
Shutdown or BOC threshold level for AIN PROT20 (PAGE 646) .			
<i>Note: These setpoints are used only if LAI AIN PROT20 (PAGE 646) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Protection 20 Delay

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9318	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical analog input AIN PROT20 (PAGE 646) is configured		
Description			
Delay for AIN PROT20 (PAGE 646) .			
<i>Note: These setpoints are used only if LAI AIN PROT20 (PAGE 646) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

🔍 back to List of setpoints

Analog Switch 20 On

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14978	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		

Description

Threshold level for switching the binary output **AIN SWITCH 20 (PAGE 653)** on. The value is measured from **AIN SWITCH 04 (PAGE 648)** analog input.

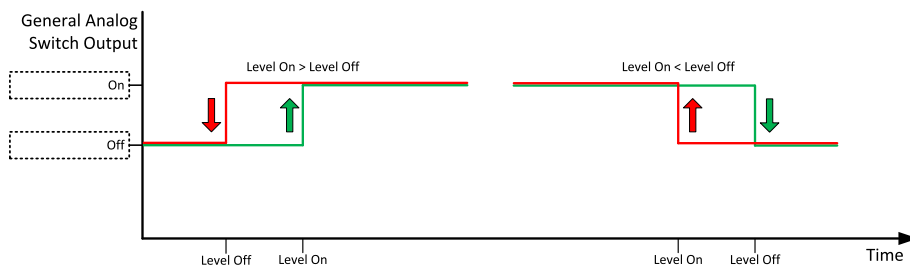


Image 9.63 General analog input 4 switch

[back to List of setpoints](#)

Analog Switch 20 Off

Setpoint group	General Analog Inputs	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14994	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Visible only if the logical binary output AIN SWITCH04 (PAGE 581) is configured		
Description			
Threshold level for switching the binary output AIN SWITCH 20 (PAGE 653) off. The value is measured from AIN SWITCH 04 (PAGE 648) analog input.			
Image 9.64 General analog input 4 switch			

[back to List of setpoints](#)

Group: Scheduler

Subgroup: Time & Date

Time

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	HH:MM:SS [-]		
Default value	0:0:0	Alternative config	NO
Step	[-]		
Comm object	24554	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Real time clock adjustment.			

[back to List of setpoints](#)

Date

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	DD/MM/YYYY [-]		
Default value	1.1.2015	Alternative config	NO
Step	[-]		
Comm object	24553	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Actual date adjustment.			

[back to List of setpoints](#)

Time Stamp Period

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	0 .. 240 [min]		
Default value	60 min	Alternative config	NO
Step	1 min		
Comm object	8979	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Time interval for periodic history records.			
<i>Note: History record is made only when engine is running.</i>			

[back to List of setpoints](#)

#Summer Time Mode

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Disabled / Winter / Summer / Winter - S / Summer - S [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	8727	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Behavior of switching between winter and summer time.			
Disable	Automatic switching between summer and wintertime is disabled.		
Winter (Summer)	Automatic switching between summer and wintertime is enabled and it is set to winter (summer) season.		
Winter - S (Summer - S)	Modification for southern hemisphere.		

[back to List of setpoints](#)

Subgroup: Timer 1

Timer 1 Function

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Disable / No Func / TEST / Test OnLd / MFail Blk / Mode OFF [-]		
Default value	Disable	Alternative config	NO
Step	[-]		
Comm object	15358	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
<p>It is possible to choose from following timer functions. Binary output EXERCISE TIMER 1 (PAGE 597) is always activated when Timer is active regardless of chosen timer function. Timer functions require controller running in AUTO mode.</p> <p>Timer 1 has higher priority over Timer 2. So if Timer 1 Function (page 325) is configured for OFF mode and Timer 2 Function (page 332) is over the same time configured for AUTO mode, controller will work in OFF mode.</p> <p>Controller activates timer whenever it is powered up even in period, where timer should be already running.</p> <p>Disable The Timer is disabled.</p> <p>No Func There is no any other function, only binary output of timer is activated.</p> <p>TEST When this option is chosen then the binary output of timer is internally connected to the binary input Remote TEST.</p> <p>TEST OnLd When this option is chosen then the binary output of timer is internally connected to the Remote TEST On Load binary input.</p> <p>MFail Blk When this option is chosen then the binary output of timer is internally connected to the Mains Fail Block binary input.</p> <p>Mode OFF When this option is chosen then the binary output of timer is internally connected to the Remote OFF binary input.</p>			

[◀ back to List of setpoints](#)

Timer 1 Setup

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	10969	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Related setpoints for timer 1 are:			
▶ Timer 1 Function (page 325)		▶ Timer 1 Day (page 330)	
▶ Timer 1 Repetition (page 326)		▶ Timer 1 Repeated Day In Week (page 331)	
▶ Timer 1 First Occur. Date (page 327)		▶ Timer 1 Repeat Day In Month (page 331)	
▶ Timer 1 First Occur. Time (page 327)		▶ Timer 1 Repeat Week In Month (page 332)	
▶ Timer 1 Duration (page 327)		▶ Timer 1 Refresh Period (page 329)	
▶ Timer 1 Repeated (page 328)		▶ Timer 1 Weekends (page 330)	
▶ Timer 1 Repeat Day (page 331)			

[◀ back to List of setpoints](#)

Timer 1 Repetition

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Off / Once / Repeated [-]		
Default value	Off	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Defines repetition of Timer 1 Function (page 325) .			
Off	Timer 1 Function (page 325) will not be activated.		
Once	Timer 1 Function (page 325) will be activated only one time.		
Repeated	Timer 1 Function (page 325) will be repeatedly activated.		

[◀ back to List of setpoints](#)

Timer 1 First Occur. Date

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[DD/MM/YYYY]		
Default value	01/01/2000	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Date of first occurrence of Timer 1 Function (page 325) .			

[back to List of setpoints](#)

Timer 1 First Occur. Time

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Time of first occurrence of Timer 1 Function (page 325) .			

[back to List of setpoints](#)

Timer 1 Duration

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Timer 1 Function (page 325) duration time.			

[back to List of setpoints](#)

Timer 1 Repeated

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Daily / Weekly / Monthly / Short Period [-]		
Default value	Daily	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Repeated interval of Timer 1 Function (page 325) .			
Daily	Timer 1 Function (page 325) is repeated every day.		
Weekly	Timer 1 Function (page 325) is repeated every week in chosen days.		
Monthly	Timer 1 Function (page 325) is repeated in chosen day every month or in chosen days of chosen week of month		
Short Period	Timer 1 Function (page 325) is repeated in adjusted period.		

[◀ back to List of setpoints](#)

Timer 1 Refresh Period

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Refresh period of Timer 1 Function (page 325) . Meaning of this setpoint depends on type of repetition adjusted in Timer 1 Repeated (page 328) .			
Daily	<p>Range [units]: 1 .. 1000 [day]. This setpoint adjust that every X day the timer will be activated.</p> <p>Example: If you have daily repetition and you set this setpoint to 2, then every second day from first occurrence of Timer 1 Function (page 325), the Timer 1 Function (page 325) will be activated.</p>		
Weekly	<p>Range [units]: 1 .. 60 [week]. This setpoint adjust that every X week the timer will be activated.</p> <p>Example: If you have weekly repetition and you set this setpoint to 2, then every second week from first occurrence of Timer 1 Function (page 325), the Timer 1 Function (page 325) will be activated in selected days adjusted by Timer 1 Day (page 330).</p>		
Monthly	<p>Range [units]: 1 .. 12 [month]. This setpoint adjust that every X month the timer will be activated.</p> <p>Example: If you have monthly repetition and you set this setpoint to 2, then every second month from first occurrence of Timer 1 Function (page 325), the Timer 1 Function (page 325) will be activated in selected day of month adjusted by Timer 1 Repeat Day In Month (page 331) or in selected days of week of month adjusted by Timer 1 Day (page 330) and Timer 1 Repeat Week In Month (page 332).</p>		
Short Period	<p>Range [units]: [HH:MM]. This setpoint adjust that every X short period the timer will be activated.</p> <p>Example: If you have short period repetition and you set this setpoint to 2, then every second minute from first occurrence of Timer 1 Function (page 325), the Timer 1 Function (page 325) will be activated.</p>		

 [back to List of setpoints](#)

Timer 1 Weekends

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Including / Skip / Postpone [-]		
Default value	Including	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Behavior of Timer 1 Function (page 325) on weekends.			
Including	Timer 1 Function (page 325) counter is running on the weekends and Timer 1 Function (page 325) can be active.		
Skip	Timer 1 Function (page 325) counter is running on the weekends but Timer 1 Function (page 325) isn't active.		
Postpone	Timer 1 Function (page 325) counter isn't running on the weekends and Timer 1 Function (page 325) isn't active. If the activation of timer is counted on the weekend, than timer will be activated after weekend. Another activation of timer is counted from original date of first occurrence date.		

[◀ back to List of setpoints](#)

Timer 1 Day

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Use this setpoint to include or exclude individual days of week. To select the day use Up and Down buttons. To change the value of day use Enter button.			

[◀ back to List of setpoints](#)

Timer 1 Repeat Day

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Repeated Day / Repeated Day In Week [-]		
Default value	Repeated Day	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Use this setpoint to adjust behavior of monthly repetition of the Timer 1 Function (page 325) .			
Repeated Day Chose one day in month when Timer 1 Function (page 325) will be activated.			
Repeated Day In Week Chose days in one week when Timer 1 Function (page 325) will be activated.			

🔍 back to List of setpoints

Timer 1 Repeated Day In Week

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Use this setpoint to select the day of week when timer will be activated.			
<i>Note: More day can be selected. Timer will be activated on the day which happened like the first.</i>			

🔍 List of setpoints (page 184)

Timer 1 Repeat Day In Month

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	1..31 [day]		
Default value	0	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
Use this setpoint to chose the day in month when the Timer 1 Function (page 325) will be activated.			

🔍 back to List of setpoints

Timer 1 Repeat Week In Month

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	1 .. 5 [week]		
Default value	1 week	Alternative config	NO
Step	1 week		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 1 Function (page 325)		
Description			
This setpoint adjust the week of month in which the Timer 1 Function (page 325) will be activated.			

[back to List of setpoints](#)

Subgroup: Timer 2

Timer 2 Function

Setpoint group	Scheduler	Related FW	1.8.0												
Range [units]	Disable / No Func / TEST / Test OnLd / MFail Blk / Mode OFF [-]														
Default value	No Func	Alternative config	NO												
Step	[-]														
Comm object	15359	Related applications	AMF, MRS												
Config level	Standard														
Setpoint visibility	Always														
Description															
<p>It is possible to choose from following Timer functions. Binary output EXERCISE TIMER 2 (PAGE 597) is always activated when Timer is active regardless of chosen timer function. Timer functions require controller running in AUTO mode.</p> <p>Timer 1 has higher priority over Timer 2. So if Timer 1 Function (page 325) is configured for OFF mode and Timer 2 Function (page 332) is over the same time configured for AUTO mode, controller will work in OFF mode.</p> <p>Controller activates timer whenever it is powered up even in period, where timer should be already running.</p> <table border="0"> <tr> <td>Disable</td> <td>The Timer is disabled.</td> </tr> <tr> <td>No Func</td> <td>There is no any other function, only binary output of timer is activated.</td> </tr> <tr> <td>TEST</td> <td>When this option is chosen then the binary output of timer is internally connected to the binary input Remote TEST.</td> </tr> <tr> <td>TEST OnLd</td> <td>When this option is chosen then the binary output of timer is internally connected to the Remote TEST On Load binary input.</td> </tr> <tr> <td>MFail Blk</td> <td>When this option is chosen then the binary output of timer is internally connected to the Mains Fail Block binary input.</td> </tr> <tr> <td>Mode OFF</td> <td>When this option is chosen then the binary output of timer is internally connected to the Remote OFF binary input.</td> </tr> </table>				Disable	The Timer is disabled.	No Func	There is no any other function, only binary output of timer is activated.	TEST	When this option is chosen then the binary output of timer is internally connected to the binary input Remote TEST.	TEST OnLd	When this option is chosen then the binary output of timer is internally connected to the Remote TEST On Load binary input.	MFail Blk	When this option is chosen then the binary output of timer is internally connected to the Mains Fail Block binary input.	Mode OFF	When this option is chosen then the binary output of timer is internally connected to the Remote OFF binary input.
Disable	The Timer is disabled.														
No Func	There is no any other function, only binary output of timer is activated.														
TEST	When this option is chosen then the binary output of timer is internally connected to the binary input Remote TEST.														
TEST OnLd	When this option is chosen then the binary output of timer is internally connected to the Remote TEST On Load binary input.														
MFail Blk	When this option is chosen then the binary output of timer is internally connected to the Mains Fail Block binary input.														
Mode OFF	When this option is chosen then the binary output of timer is internally connected to the Remote OFF binary input.														

[back to List of setpoints](#)

Timer 2 Setup

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	10970	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Related setpoints for timer 2 are:			
▶ Timer 2 Function (page 332)		▶ Timer 2 Day (page 337)	
▶ Timer 2 Repetition (page 333)		▶ Timer 2 Repeated Day In Week (page 338)	
▶ Timer 2 First Occur. Date (page 334)		▶ Timer 2 Repeat Day In Month (page 338)	
▶ Timer 2 First Occur. Time (page 334)		▶ Timer 2 Repeat Week In Month (page 339)	
▶ Timer 2 Duration (page 334)		▶ Timer 2 Refresh Period (page 336)	
▶ Timer 2 Repeated (page 335)		▶ Timer 2 Weekends (page 337)	
▶ Timer 2 Repeat Day (page 338)			

[◀ back to List of setpoints](#)

Timer 2 Repetition

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Off / Once / Repeated [-]		
Default value	Off	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Defines repetition of Timer 2 Function (page 332) .			
Off	Timer 2 Function (page 332) will not be activated.		
Once	Timer 2 Function (page 332) will be activated only one time.		
Repeated	Timer 2 Function (page 332) will be repeatedly activated.		

[◀ List of setpoints \(page 184\)](#)

Timer 2 First Occur. Date

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[DD/MM/YYYY]		
Default value	01/01/2000	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Date of first occurrence of Timer 2 Function (page 332) .			

[back to List of setpoints](#)

Timer 2 First Occur. Time

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Time of first occurrence of Timer 2 Function (page 332) .			

[back to List of setpoints](#)

Timer 2 Duration

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Timer 2 Function (page 332) duration time.			

[back to List of setpoints](#)

Timer 2 Repeated

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Daily / Weekly / Monthly / Short Period [-]		
Default value	Daily	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Repeated interval of Timer 2 Function (page 332) .			
Daily	Timer 2 Function (page 332) is repeated every day.		
Weekly	Timer 2 Function (page 332) is repeated every week in chosen days.		
Monthly	Timer 2 Function (page 332) is repeated in chosen day every month or in chosen days of chosen week of month		
Short Period	Timer 2 Function (page 332) is repeated in adjusted period.		

 [List of setpoints \(page 184\)](#)

Timer 2 Refresh Period

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Refresh period of Timer 2 Function (page 332) . Meaning of this setpoint depends on type of repetition adjusted in Timer 2 Repeated (page 335) .			
Daily	<p>Range [units]: 1 .. 1000 [day]. This setpoint adjust that every X day the timer will be activated.</p> <p>Example: If you have daily repetition and you set this setpoint to 2, then every second day from first occurrence of Timer 2 Function (page 332), the Timer 2 Function (page 332) will be activated.</p>		
Weekly	<p>Range [units]: 1 .. 60 [week]. This setpoint adjust that every X week the timer will be activated.</p> <p>Example: If you have weekly repetition and you set this setpoint to 2, then every second week from first occurrence of Timer 2 Function (page 332), the Timer 2 Function (page 332) will be activated in selected days adjusted by Timer 2 Day (page 337).</p>		
Monthly	<p>Range [units]: 1 .. 12 [month]. This setpoint adjust that every X month the timer will be activated.</p> <p>Example: If you have monthly repetition and you set this setpoint to 2, then every second month from first occurrence of Timer 2 Function (page 332), the Timer 2 Function (page 332) will be activated in selected day of month adjusted by Timer 2 Repeat Day In Month (page 338) or in selected days of week of month adjusted by Timer 2 Day (page 337) and Timer 2 Repeat Week In Month (page 339).</p>		
Short Period	<p>Range [units]: [HH:MM]. This setpoint adjust that every X short period the timer will be activated.</p> <p>Example: If you have short period repetition and you set this setpoint to 2, then every second minute from first occurrence of Timer 2 Function (page 332), the Timer 2 Function (page 332) will be activated.</p>		

 [back to List of setpoints](#)

Timer 2 Weekends

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Including / Skip / Postpone [-]		
Default value	Including	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Behavior of Timer 2 Function (page 332) on weekends.			
Including	Timer 2 Function (page 332) counter is running on the weekends and Timer 2 Function (page 332) can be active.		
Skip	Timer 2 Function (page 332) counter is running on the weekends but Timer 2 Function (page 332) isn't active.		
Postpone	Timer 2 Function (page 332) counter isn't running on the weekends and Timer 2 Function (page 332) isn't active. If the activation of timer is counted on the weekend, than timer will be activated after weekend. Another activation of timer is counted from original date of first occurrence date.		

[◀ back to List of setpoints](#)

Timer 2 Day

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Use this setpoint to include or exclude individual days of week. To select the day use Up and Down buttons. To change the value of day use Enter button.			

[◀ back to List of setpoints](#)

Timer 2 Repeat Day

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Repeated Day / Repeated Day In Week [-]		
Default value	Repeated Day	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Use this setpoint to adjust behavior of monthly repetition of the Timer 2 Function (page 332) .			
Repeated Day Chose one day in month when Timer 2 Function (page 332) will be activated.			
Repeated Day In Week Chose days in one week when Timer 2 Function (page 332) will be activated.			

🔍 back to List of setpoints

Timer 2 Repeated Day In Week

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Use this setpoint to select the day of week when timer will be activated.			
<i>Note: More day can be selected. Timer will be activated on the day which happened like the first.</i>			

🔍 List of setpoints (page 184)

Timer 2 Repeat Day In Month

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	1..31 [day]		
Default value	0	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
Use this setpoint to chose the day in month when the Timer 2 Function (page 332) will be activated.			

🔍 back to List of setpoints



Timer 2 Repeat Week In Month

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	1 .. 5 [week]		
Default value	1 week	Alternative config	NO
Step	1 week		
Comm object	0	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Timer 2 Function (page 332)		
Description			
This setpoint adjust the week of month in which the Timer 2 Function (page 332) will be activated.			

🔍 back to List of setpoints

Subgroup: Rental Timers

Rental Timer 1

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Disabled / 1 .. 8 760 [h]		
Default value	Disabled	Alternative config	NO
Step	1 h		
Comm object	14326	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Another engine start is not allowed when this timer elapsed. This timer is based on engine running hours. The alarm Rental Timer 1 Elapsed (page 678) will be recorded in alarm list and the binary output AL RENTAL TIMER 1 (PAGE 577) will close.			
<p>IMPORTANT: To reset Rental Timer 1 (page 339) we have to set up Rental Timer 1 (page 339) again. It means go to setpoint group Scheduler and to the setpoint Rental Timer 1 (page 339). Then press enter button , change the value if it is necessary and press enter button  again.</p>			
When the Rental Timer 1 (page 339) elapsed during engine run the gen-set will not stop immediately. The adjustable Rental Timer BOC (page 343) timer will start in this moment. The engine will be cooled and stopped when the Rental Timer BOC (page 343) time elapsed.			

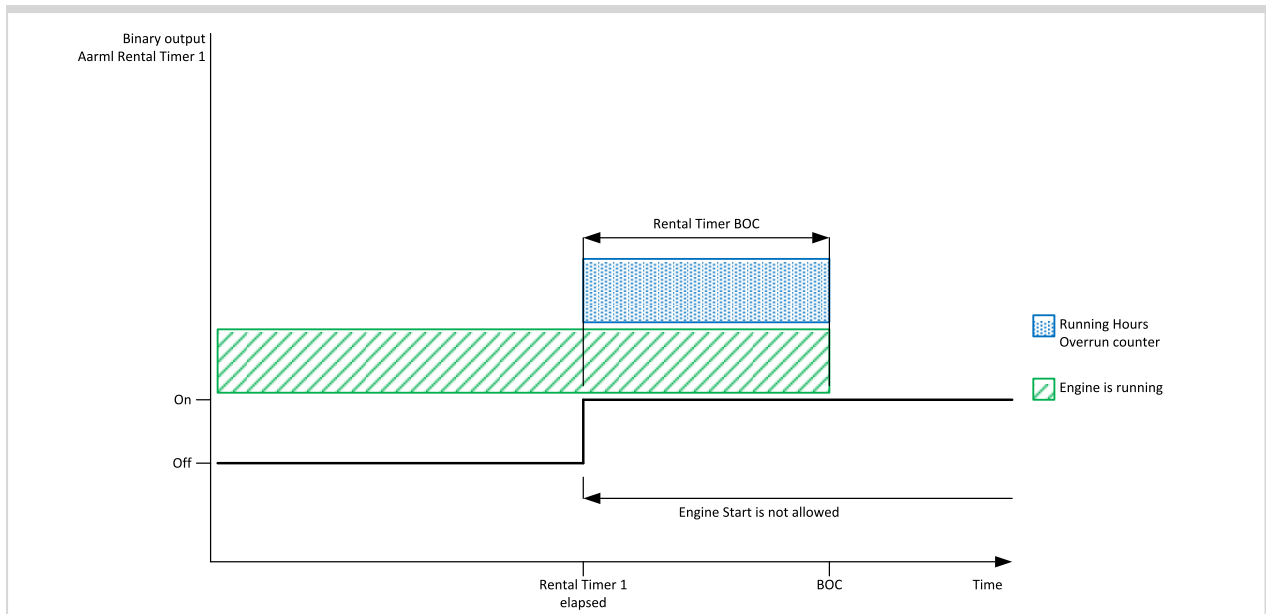



Image 9.65 Rental Timer 1

The Running Hours Overrun counter will start increment when the engine is continue running after the **Rental Timer 1 (page 339)** elapsed.

Note: *There is no priority between Rental Timer 1 and Rental Timer 2. The sooner timer will activated the Rental Timer BOC (page 343) protection.*

 [back to List of setpoints](#)

Rental Timer 1 Wrn

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Disabled / 1.. Rental Timer 1 (page 339) [h]		
Default value	Disabled	Alternative config	NO
Step	1 h		
Comm object	14332	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Rental Timer 1 (page 339)		

Description

Alarm **Wrn Rental Timer 1 (page 688)** comes up after xx running hours from adjusting the **Rental Timer 1 (page 339)**. Hours are adjusted by this setpoint.

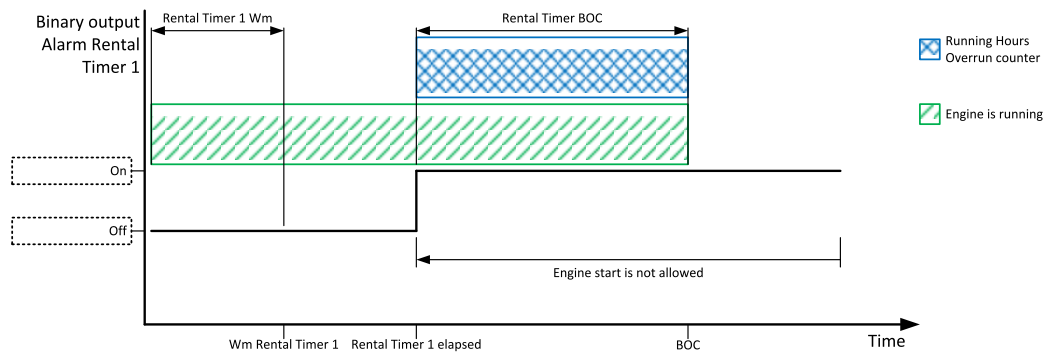


Image 9.66 Rental Timer 1 Wrn



🔍 back to List of setpoints

Rental Timer 2

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	[DD/MM/YYYY]		
Default value	01/01/2015	Alternative config	NO
Step	1 day		
Comm object	14367	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		

Description

Another engine start is not allowed when this timer elapsed. This timer is based on date. At the midnight of the last day the alarm **Rental Timer 2 Elapsed (page 678)** will be recorded in alarm list and the binary output **AL RENTAL TIMER 2 (PAGE 578)** will close.

IMPORTANT: To reset Rental Timer 2 (page 341) we have to set up Rental Timer 2 (page 341) again. It means go to setpoint group Scheduler and to the setpoint Rental Timer 2 (page 341). Then press enter button , change the value if it is necessary and press enter button  again.

IMPORTANT: To disable Rental Timer 2 (page 341) set date to 01/01/2015.

When the **Rental Timer 2** (page 341) elapsed during engine run the gen-set will not stop immediately. The adjustable **Rental Timer BOC** (page 343) timer will start in this moment. The engine will be cooled and stopped when the **Rental Timer BOC** (page 343) time elapsed.

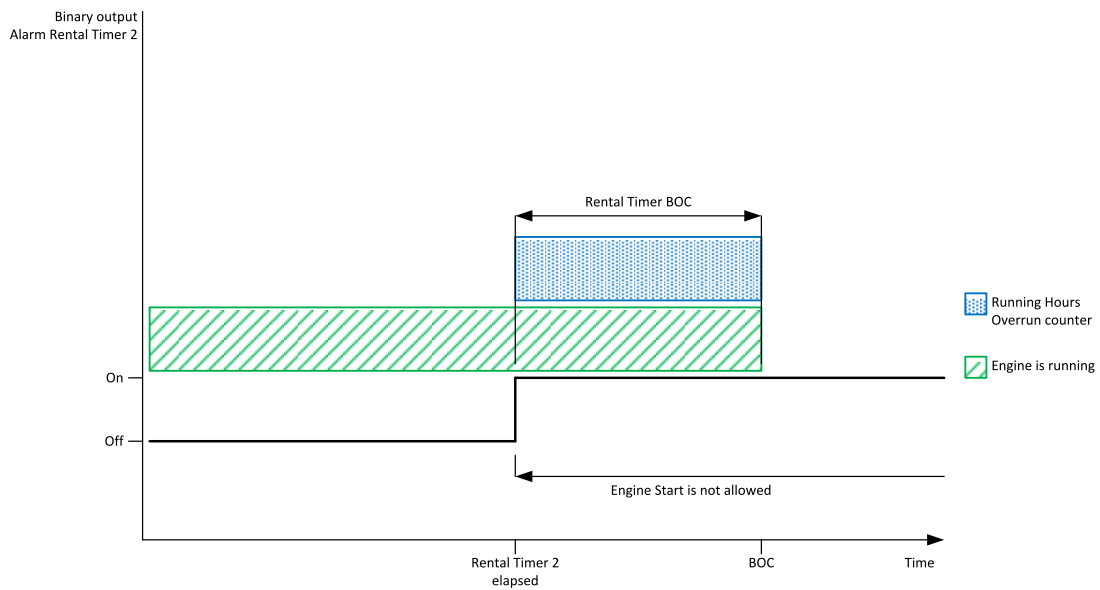


Image 9.67 Rental Timer 2

The Running Hours Overrun counter will start increment when the engine is continue running after the **Rental Timer 2** (page 341) elapsed.

Note: *There is no priority between Rental Timer 1 and Rental Timer 2. The sooner timer will activated the Rental Timer BOC (page 343) protection.*

 [back to List of setpoints](#)

Rental Timer 2 Wrn

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Disabled / 01/01/2015 .. Rental Timer 2 (page 341) [DD/MM/YYYY]		
Default value	01/01/2015	Alternative config	NO
Step	1 day		
Comm object	14368	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoint Rental Timer 2 (page 341)		
Description			
Alarm Wrn Rental Timer 2 (page 688) comes up xx days before the Rental Timer 2 (page 341) . Days are adjusted by this setpoint.			
Image 9.68 Rental Timer 2 Wrn			

[back to List of setpoints](#)

Rental Timer BOC

Setpoint group	Scheduler	Related FW	1.8.0
Range [units]	Disabled / 1 .. 210 [h]		
Default value	24 h	Alternative config	NO
Step	1 h		
Comm object	14334	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Conditioned by the setpoints Rental Timer 1 (page 339) and Rental Timer 2 (page 341)		
Description			
This timer will start after Rental Timer 1 (page 339) or Rental Timer 2 (page 341) elapsed in case that the engine is still running. When this timer elapsed the engine is cooled and stopped.			

[back to List of setpoints](#)

Group: Geo-Fencing

Home Latitude

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	-90,0000..90,0000 [°]		
Default value	0,0000 °	Alternative config	NO
Step	0,0001 °		
Comm object	14606	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint adjust latitude of "home" position. Home is position where gen-set should runs. Positions on north hemisphere have positive value, position on south hemisphere have negative value.</p> <p>Note: This value with Home Longitude (page 344) are used for counting Fence Radius 1 (page 345) and Fence Radius 2 (page 345).</p> <p>Note: This value can be also obtained automatically via logical binary input GEO HOME POSITION (PAGE 553). In case of activation of this binary input for at least 2 seconds, setpoint will be adjusted automatically from actual coordinates from GPS signal.</p>			

[back to List of setpoints](#)

Home Longitude

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	-180,0000..180,0000 [°]		
Default value	0,0000 °	Alternative config	NO
Step	0,0001 °		
Comm object	14607	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint adjust longitude of "home" position. Home is position where gen-set should runs. Positions on east hemisphere have positive value, position on west hemisphere have negative value.</p> <p>Note: This value with Home Latitude (page 344) are used for counting Fence Radius 1 (page 345) and Fence Radius 2 (page 345).</p> <p>Note: This value can be also obtained automatically via logical binary input GEO HOME POSITION (PAGE 553). In case of activation of this binary input for at least 2 seconds, setpoint will be adjusted automatically from actual coordinates from GPS signal.</p>			

[back to List of setpoints](#)

Fence Radius 1

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	0,0..99,9 [km]		
Default value	0,0 km	Alternative config	NO
Step	0,1 km		
Comm object	11677	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Radius for circle area 1. When the gen-set leaves this area, Fence 1 Protection (page 347) is activated after Fence 1 Delay (page 345) .			
<i>Note: The center of this circle area is defined by "Home" position - setpoints Home Longitude (page 344) and Home Latitude (page 344).</i>			

🔍 back to List of setpoints

Fence Radius 2

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	0,0..99,9 [km]		
Default value	0,0 km	Alternative config	NO
Step	0,1 km		
Comm object	14608	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Radius for circle area 2. When the gen-set leaves this area, Fence 2 Protection (page 348) is activated after Fence 2 Delay (page 346) .			
<i>Note: The center of this circle area is defined by "Home" position - setpoints Home Longitude (page 344) and Home Latitude (page 344).</i>			

🔍 back to List of setpoints

Fence 1 Delay

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	0..3600 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	11682	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Delay for Fence 1 Protection (page 347) .			

🔍 back to List of setpoints

Fence 2 Delay

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	0..3600 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	14609	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Delay for Fence 2 Protection (page 348).			

[back to List of setpoints](#)

Geo-Fencing

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	Disabled / Enabled / LBI Enable [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	11681	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables geo-fencing function.			
Disabled	Fence 1 Protection (page 347) and Fence 2 Protection (page 348) are disabled.		
Enabled	Fence 1 Protection (page 347) and Fence 2 Protection (page 348) are enabled.		
LBI Enable	Fence 1 Protection (page 347) and Fence 2 Protection (page 348) are enabled only when logical binary input .GEO-FENCING ENABLED (PAGE 554) is active.		

[back to List of setpoints](#)

Fence 1 Protection

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	HistRecOnl / Wrm / Sd / BOC[-]		
Default value	HistRecOnl	Alternative config	NO
Step	[-]		
Comm object	14610	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Protection type for geo-fencing 1 protection. Fence of circle area is adjusted by setpoint Fence Radius 1 (page 345). Delay for protection is adjusted by setpoint Fence 1 Delay (page 345).			
Protection types			
HistRecOnl	Position of gen-set is only measured and displayed on the LCD screen but not used for protection. History record is made if position is out of Fence Radius 1 (page 345).		
Wrm	Position of gen-set is used for warning protection only. Protection is activated when position of the gen-set is out of Fence Radius 1 (page 345).		
Sd	Position of gen-set is used for shutdown protection. Protection is activated when position of the gen-set is out of Fence Radius 1 (page 345).		
BOC	Position of gen-set is used for BOC (Breaker Open and Cooling) protection. Protection is activated when position of the gen-set is out of Fence Radius 1 (page 345).		
Note: Protection is activated also when GPS signal is lost for Fence 1 Delay (page 345).			

 [back to List of setpoints](#)

Fence 2 Protection

Setpoint group	Geo-Fencing	Related FW	1.8.0
Range [units]	HistRecOnl / Wrm / Sd / BOC[-]		
Default value	HistRecOnl	Alternative config	NO
Step	[-]		
Comm object	14611	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Protection type for geo-fencing 2 protection. Fence of circle area is adjusted by setpoint Fence Radius 2 (page 345). Delay for protection is adjusted by setpoint Fence 2 Delay (page 346).			
Protection types			
HistRecOnl	Position of gen-set is only measured and displayed on the LCD screen but not used for protection. History record is made if position is out of Fence Radius 2 (page 345).		
Wrm	Position of gen-set is used for warning protection only. Protection is activated when position of the gen-set is out of Fence Radius 2 (page 345).		
Sd	Position of gen-set is used for shutdown protection. Protection is activated when position of the gen-set is out of Fence Radius 2 (page 345).		
BOC	Position of gen-set is used for BOC (Breaker Open and Cooling) protection. Protection is activated when position of the gen-set is out of Fence Radius 2 (page 345).		
Note: Protection is activated also when GPS signal is lost for Fence 2 Delay (page 346).			

[back to List of setpoints](#)

Group: Plug-In Modules

Slot A

Setpoint group	Plug-In Modules	Related FW	1.8.0
Range [units]	ENABLED / DISABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24280	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint enable or disable module in slot A.			

[back to List of setpoints](#)

Slot B

Setpoint group	Plug-In Modules	Related FW	1.8.0
Range [units]	ENABLED / DISABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24279	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
This setpoint enable or disable module in slot B.			

[back to List of setpoints](#)

Group: CU AIN Calibration

Subgroup: Analog Input 1

CU AIN1 Calibration

Setpoint group	CU AIN Calibration	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	0 (number of decimal is given by sensor curve)	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	8431	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrating constant to adjust the measured value of controller analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
Note: Unit is adjusted via IntelliConfig in configuration of analog input 1.			

[back to List of setpoints](#)

Subgroup: Analog Input 2

CU AIN2 Calibration

Setpoint group	CU AIN Calibration	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	0 (number of decimal is given by sensor curve)	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	8407	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrating constant to adjust the measured value of controller analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
Note: Unit is adjusted via IntelliConfig in configuration of analog input 2.			

[back to List of setpoints](#)

Subgroup: Analog Input 3

CU AIN3 Calibration

Setpoint group	CU AIN Calibration	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	0 (number of decimal is given by sensor curve)	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	8467	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrating constant to adjust the measured value of controller analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
Note: Unit is adjusted via IntelliConfig in configuration of analog input 3.			

[back to List of setpoints](#)

Subgroup: Analog Input 4

CU AIN4 Calibration

Setpoint group	CU AIN Calibration	Related FW	1.8.0
Range [units]	the range is defined by analog sensor curve		
Default value	0 (number of decimal is given by sensor curve)	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	8793	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Calibrating constant to adjust the measured value of controller analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.			
<i>Note: Unit is adjusted via IntelliConfig in configuration of analog input 4.</i>			

🔍 back to List of setpoints

Group: Alternate Config

Subgroup: Basic settings

Connection Type 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Monophase / Splitphase / 3Ph3Wire / High Leg D / 3Ph4Wire / Autodetect [-]		
Default value	3Ph4Wire	Alternative config	YES
Step	[-]		
Comm object	12058	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Connection type:			
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)		
Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)		
3Ph3Wire	Ungrounded Delta connection Open Delta Ungrounded Wye Corner-Grounded Delta		

	Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)																
High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)																
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)																
Autodetect	<table border="0"> <tr> <td>High Leg Delta</td> <td>L1 >=100V; L1 <=140V L2 >=140V</td> </tr> <tr> <td>or</td> <td>L3 >=100V; L3 <=140V</td> </tr> <tr> <td>3PH3Wire or 3Ph4Wire</td> <td>L1 >=100V L2 >=100V</td> </tr> <tr> <td>or</td> <td>L3 >=100V</td> </tr> <tr> <td>Split Phase</td> <td>L1 >=100V L2 <= 20V</td> </tr> <tr> <td>or</td> <td>L3 >=100V</td> </tr> <tr> <td>Mono Phase</td> <td>L1 >=100V L2 <= 20V</td> </tr> <tr> <td>or</td> <td>L3 <= 20V</td> </tr> </table> <p>Voltage Autodetect shutdown</p>	High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V	or	L3 >=100V; L3 <=140V	3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V	or	L3 >=100V	Split Phase	L1 >=100V L2 <= 20V	or	L3 >=100V	Mono Phase	L1 >=100V L2 <= 20V	or	L3 <= 20V
High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V																
or	L3 >=100V; L3 <=140V																
3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V																
or	L3 >=100V																
Split Phase	L1 >=100V L2 <= 20V																
or	L3 >=100V																
Mono Phase	L1 >=100V L2 <= 20V																
or	L3 <= 20V																

Note: This value is used when binary input **ALTERNATE CONFIG 2** (PAGE 522) is active.

⬅ back to List of setpoints

Nominal Current 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 10 000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	12049	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
It is current limit for generator current protections and means maximal continuous generator current. Nominal Current can be different from generator rated current value.			
Note: This value is used when any other alternate configuration is not active.			

⬅ back to List of setpoints

Nominal Frequency 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	9913	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal system frequency (usually 50 or 60 Hz).			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Nominal RPM 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	100 .. 4000 [RPM]		
Default value	1 500 RPM	Alternative config	YES
Step	1 RPM		
Comm object	9915	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Nominal engine speed (RPM - revolutions per minute).			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Nominal Voltage Ph-N 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 20000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	12052	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection Type 1 (page 351) .		
Description			
Nominal system voltage (phase to neutral).			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 40000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	12055	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection Type 1 (page 351) .		
Description			
Nominal system voltage (phase to phase).			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Nominal Power 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	12046	Related applications	AMF, MRS,
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal power of the gen-set. Generator Overload BOC (page 240) protection is based on this setpoint.			
<i>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Monophase or Splitphase or 3Ph3Wire or High Leg D or 3Ph4Wire or when Autodetect detects connection type as 3Ph3Wire or High Leg D or 3Ph4Wire.</i>			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Nominal Power Split Phase 1

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	15771	Related applications	AMF, MRS,
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Nominal power of the gen-set for detected split-phase or mono phase connection. Generator Overload BOC (page 240) protection is based on this setpoint.			
<i>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Autodetect and Autodetect detects connection type as Monophase or Splitphase.</i>			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

🔍 back to List of setpoints

Connection type 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Monophase / Splitphase / 3Ph3Wire / High Leg D / 3Ph4Wire / Autodetect [-]		
Default value	3Ph4Wire	Alternative config	YES
Step	[-]		
Comm object	12059	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Connection type:			
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)		
Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)		
3Ph3Wire	Ungrounded Delta connection Open Delta Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)		

High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)																
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)																
Autodetect	<table border="0"> <tr> <td>High Leg Delta</td> <td>L1 >=100V; L1 <=140V L2 >=140V L3 >=100V; L3 <=140V</td> </tr> <tr> <td>or</td> <td></td> </tr> <tr> <td>3PH3Wire or 3Ph4Wire</td> <td>L1 >=100V L2 >=100V L3 >=100V</td> </tr> <tr> <td>or</td> <td></td> </tr> <tr> <td>Split Phase</td> <td>L1 >=100V L2 <= 20V L3 >=100V</td> </tr> <tr> <td>or</td> <td></td> </tr> <tr> <td>Mono Phase</td> <td>L1 >=100V L2 <= 20V L3 <= 20V</td> </tr> <tr> <td>or</td> <td></td> </tr> </table> <p>Voltage Autodetect shutdown</p>	High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V L3 >=100V; L3 <=140V	or		3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V L3 >=100V	or		Split Phase	L1 >=100V L2 <= 20V L3 >=100V	or		Mono Phase	L1 >=100V L2 <= 20V L3 <= 20V	or	
High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V L3 >=100V; L3 <=140V																
or																	
3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V L3 >=100V																
or																	
Split Phase	L1 >=100V L2 <= 20V L3 >=100V																
or																	
Mono Phase	L1 >=100V L2 <= 20V L3 <= 20V																
or																	

Note: This value is used when binary input **ALTERNATE CONFIG 2** (PAGE 522) is active.

🔍 back to List of setpoints

Nominal Current 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 10000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	12050	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
It is current limit for generator current protections and means maximal continuous generator current. Nominal Current can be different from generator rated current value.			
Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.			

🔍 back to List of setpoints

Nominal Frequency 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	9914	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal system frequency (usually 50 or 60 Hz).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal RPM 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	100 .. 4000 [RPM]		
Default value	1 500 RPM	Alternative config	YES
Step	1 RPM		
Comm object	9916	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Nominal engine speed (RPM - revolutions per minute).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Voltage Ph-N 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 20000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	12053	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type 2 (page 355) .		
Description			
Nominal system voltage (phase to neutral).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 40000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	12056	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type 2 (page 355) .		
Description			
Nominal system voltage (phase to phase).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Power 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	12047	Related applications	AMF, MRS,
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal power of the gen-set. Generator Overload BOC (page 240) protection is based on this setpoint.			
<i>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Monophase or Splitphase or 3Ph3Wire or High Leg D or 3Ph4Wire or when Autodetect detects connection type as 3Ph3Wire or High Leg D or 3Ph4Wire.</i>			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Power Split Phase 2

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	15772	Related applications	AMF, MRS,
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Nominal power of the gen-set for detected split-phase or mono phase connection. Generator Overload BOC (page 240) protection is based on this setpoint.			
<p>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Autodetect and Autodetect detects connection type as Monophase or Splitphase.</p>			
<p>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</p>			

🔍 back to List of setpoints

Connection type 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	Monophase / Splitphase / 3Ph3Wire / High Leg D / 3Ph4Wire / Autodetect [-]		
Default value	3Ph4Wire	Alternative config	YES
Step	[-]		
Comm object	12060	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Connection type:			
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)		
Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)		
3Ph3Wire	Ungrounded Delta connection Open Delta Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)		

High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)																
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)																
Autodetect	<table border="0"> <tr> <td>High Leg Delta</td> <td>L1 >=100V; L1 <=140V L2 >=140V</td> </tr> <tr> <td>or</td> <td>L3 >=100V; L3 <=140V</td> </tr> <tr> <td>3PH3Wire or 3Ph4Wire</td> <td>L1 >=100V L2 >=100V</td> </tr> <tr> <td>or</td> <td>L3 >=100V</td> </tr> <tr> <td>Split Phase</td> <td>L1 >=100V L2 <= 20V</td> </tr> <tr> <td>or</td> <td>L3 >=100V</td> </tr> <tr> <td>Mono Phase</td> <td>L1 >=100V L2 <= 20V</td> </tr> <tr> <td>or</td> <td>L3 <= 20V</td> </tr> </table> <p>Voltage Autodetect shutdown</p>	High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V	or	L3 >=100V; L3 <=140V	3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V	or	L3 >=100V	Split Phase	L1 >=100V L2 <= 20V	or	L3 >=100V	Mono Phase	L1 >=100V L2 <= 20V	or	L3 <= 20V
High Leg Delta	L1 >=100V; L1 <=140V L2 >=140V																
or	L3 >=100V; L3 <=140V																
3PH3Wire or 3Ph4Wire	L1 >=100V L2 >=100V																
or	L3 >=100V																
Split Phase	L1 >=100V L2 <= 20V																
or	L3 >=100V																
Mono Phase	L1 >=100V L2 <= 20V																
or	L3 <= 20V																

Note: This value is used when binary input **ALTERNATE CONFIG 2** (PAGE 522) is active.

🔍 back to List of setpoints

Nominal Current 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 10 000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	12051	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
It is current limit for generator current protections and means maximal continuous generator current. Nominal Current can be different from generator rated current value.			
Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.			

🔍 back to List of setpoints

Nominal Frequency 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	15197	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal system frequency (usually 50 or 60 Hz).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal RPM 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	100 .. 4 000 [RPM]		
Default value	1 500 RPM	Alternative config	YES
Step	1 RPM		
Comm object	15196	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Always		
Description			
Nominal engine speed (RPM - revolutions per minute).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Voltage Ph-N 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 20 000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	12054	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type 3 (page 359) .		
Description			
Nominal system voltage (phase to neutral).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	80 .. 40 000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	12057	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type 3 (page 359) .		
Description			
Nominal system voltage (phase to phase).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Power 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	12048	Related applications	AMF, MRS,
Config level	Standard		
Setpoint visibility	Always		
Description			
Nominal power of the gen-set. Generator Overload BOC (page 240) protection is based on this setpoint.			
<i>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Monophase or Splitphase or 3Ph3Wire or High Leg D or 3Ph4Wire or when Autodetect detects connection type as 3Ph3Wire or High Leg D or 3Ph4Wire.</i>			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Nominal Power Split Phase 3

Setpoint group	Basic settings	Related FW	1.8.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	15773	Related applications	AMF, MRS,
Config level	Standard		
Setpoint visibility	Conditioned by the setpoint Connection type (page 191)		
Description			
Nominal power of the gen-set for detected split-phase or mono phase connection. Generator Overload BOC (page 240) protection is based on this setpoint.			
<i>Note: This setpoint is used when setpoint Connection type (page 191) is adjusted to Autodetect and Autodetect detects connection type as Monophase or Splitphase.</i>			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

🔍 back to List of setpoints

Subgroup: Engine settings

ECU Speed Adjustment 1

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	14337	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if ECU is configured		
Description			
Enables to adjust engine speed in ECU via CAN bus. Nominal speed corresponds to 50%. This setpoint should be used only for Volvo Penta and Scania engines. It has no effect on other engine brands.			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

🔍 back to List of setpoints

ECU Speed Adjustment 2

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	14338	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if ECU is configured		
Description			
Enables to adjust engine speed in ECU via CAN bus. Nominal speed corresponds to 50%. This setpoint should be used only for Volvo Penta and Scania engines. It has no effect on other engine brands.			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

ECU Speed Adjustment 3

Setpoint group	Engine settings	Related FW	1.8.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	15199	Related applications	AMF, MRS
Config level	Advanced		
Setpoint visibility	Visible only if ECU is configured		
Description			
Enables to adjust engine speed in ECU via CAN bus. Nominal speed corresponds to 50%. This setpoint should be used only for Volvo Penta and Scania engines. It has no effect on other engine brands.			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 522) is active.</i>			

[back to List of setpoints](#)

Group: CM-RS232-485

COM1 Mode

Setpoint group	CM-RS232-485	Related FW	1.8.0
Range [units]	Direct / MODBUS / DualSlave / Dual Master [-]		
Default value	Direct	Alternative config	NO
Step	[-]		
Comm object	24522	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Communication protocol switch for the COM1 channel.			
Direct	InteliConfig communication protocol via serial cable.		
MODBUS	MODBUS protocol.		
DualSlave	Dual operation protocol - slave function		
DualMaster	Dual operation protocol - master function		

[back to List of setpoints](#)

COM1 Communication Speed

Setpoint group	CM-RS232-485	Related FW	1.8.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200[bps]		
Default value	57600 bps	Alternative config	NO
Step	[-]		
Comm object	24341	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365)		
Description			
If the direct mode is selected on COM1 channel, the direct communication speed of controller part of line can be adjusted here. Speed of second part of line has to be adjusted to the same value.			
Note: Winscope supports only 19200, 38400, 57600 speeds.			

[List of setpoints \(page 184\)](#)

COM1 MODBUS Communication Speed

Setpoint group	CM-RS232-485	Related FW	1.8.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200 [bps]		
Default value	9600 bps	Alternative config	NO
Step	[-]		
Comm object	24477	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM1 Mode (page 365)		
Description			
If the MODBUS mode is selected on COM1 channel, the MODBUS communication speed can be adjusted here.			

🔍 [List of setpoints \(page 184\)](#)

COM2 Mode

Setpoint group	CM-RS232-485	Related FW	1.8.0
Range [units]	Direct / MODBUS / DualSlave / Dual Master [-]		
Default value	Direct	Alternative config	NO
Step	[-]		
Comm object	24451	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Communication protocol switch for the COM2 channel.			
Direct	InteliConfig communication protocol via serial cable.		
MODBUS	MODBUS protocol.		
DualSlave	Dual operation protocol - slave function		
DualMaster	Dual operation protocol - master function		

🔍 [back to List of setpoints](#)

COM2 Communication Speed

Setpoint group	CM-RS232-485	Related FW	1.8.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200[bps]		
Default value	57600 bps	Alternative config	NO
Step	[-]		
Comm object	24340	Related applications	AMF, MRS
Config level	Standard		

Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM2 Mode (page 366)
Description	
If the direct mode is selected on COM2 channel, the direct communication speed of controller part of line can be adjusted here. Speed of second part of line has to be adjusted to the same value.	
<i>Note: Winscope supports only 19200, 38400, 57600 speeds.</i>	

🔍 List of setpoints (page 184)

COM2 MODBUS Communication Speed

Setpoint group	CM-RS232-485	Related FW	1.8.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200 [bps]		
Default value	9600 bps	Alternative config	NO
Step	[-]		
Comm object	24420	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint COM2 Mode (page 366)		
Description			
If the MODBUS mode is selected on COM2 channel, the MODBUS communication speed can be adjusted here.			

🔍 List of setpoints (page 184)

Group: CM-GPRS

Internet Connection

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	Email+SMS / SMS Only [-]		
Default value	Email+SMS	Alternative config	NO
Step	[-]		
Comm object	24315	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint adjust the communication mode of module.			
Email+SMS	Controller is connected to the Internet and is able to send e-mails as well as SMS. The controller is also accessible via AirGate. Internet-enabled SIM card must be used. Also APN Name (page 381) has to be adjusted.		
SMS Only	Only SMS are sent. Internet-enabled SIM card is not required.		
IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.			

[List of setpoints \(page 184\)](#)

APN Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24363	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
APN (Access Point Name) of the GPRS/4G network, provided by GSM operator.			

[back to List of setpoints](#)

APN User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24361	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
User name for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[back to List of setpoints](#)

APN User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24360	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
User password for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[⬅ back to List of setpoints](#)

Email Address 1

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24298	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[⬅ back to List of setpoints](#)

Email Address 2

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24297	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 3

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24145	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 4

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24144	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

⬅ back to List of setpoints

Message Language

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	[-]		
Default value	English	Alternative config	NO
Step	[-]		
Comm object	24299	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Use this setpoint to set the language of SMS and e-mail.			
<i>Note: Numbers correspond with languages in language list. See the chapter for Language selection (page 92) more information.</i>			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

⬅ back to List of setpoints

SMTP User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24313	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
Use this setpoint to enter the username for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[▲ back to List of setpoints](#)

SMTP User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24312	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
Use this setpoint to enter the password for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[▲ back to List of setpoints](#)

SMTP Server Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	airgate.comap.cz:9925	Alternative config	NO
Step	[-]		
Comm object	24311	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
<p>This setpoint is used for entering the domain name (e.g. smtp.yourprovider.com) or IP address (e.g. 74.125.39.109) or number of port (with colon like a first mark) of the SMTP server. Ask your internet provider or IT manager for this information.</p> <p>Note: You may use also any public SMTP server which does not require connection over SSL/TLS channels. If the device is connected to AirGate the AirGate SMTP server at "airgate.comap.cz" may be used. Ports 25 and 9925 are supported. After controller connects to AirGate for the first time (or with new public IP address), it may not be able to send emails for first 5-10 minutes.</p>			

◀ back to List of setpoints

SMTP Sender Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24310	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
<p>Enter an existing email address into this setpoint. This address will be used as sender address in active e-mails that will be sent from the controller.</p> <p>Note: It is not needed to enter an existing email address, nevertheless valid email format needs to be followed.</p> <p>IMPORTANT: This item is obligatory when emails are configured.</p>			

◀ back to List of setpoints

Time Zone

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	GMT-12:00 .. GMT+13:00 [hours]		
Default value	GMT+1:00 hour	Alternative config	NO
Step	[-]		
Comm object	24366	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint is used to select the time zone where the controller is located. See your computer time zone setting (click on the time indicator located in the rightmost position of the Windows task bar) if you are not sure about your time zone.</p> <p>Note: If the time zone is not selected properly the active e-mails may contain incorrect information about sending time, which may result in confusion when the respective problem actually occurred.</p> <p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Event Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10926	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint enables or disables Event Messages.</p> <p>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Wrn Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8482	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables Wrn Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

BOC Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10566	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables BOC Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Sd Messages

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8484	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables Sd Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Telephone Number 1

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24296	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[back to List of setpoints](#)

Telephone Number 2

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24295	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[back to List of setpoints](#)

Telephone Number 3

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24143	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[◀ back to List of setpoints](#)

Telephone Number 4

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24142	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[◀ back to List of setpoints](#)

DNS IP Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24314	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
The setpoint is used to adjust the domain name server (DNS), which is needed to translate domain names in email addresses and server names into correct IP addresses.			

🔍 [List of setpoints \(page 184\)](#)

AirGate Connection

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24273	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
This setpoint enable or disable AirGate connection via CM-GPRS or via CM-4G-GPS.			
DISABLED: Only SMS are sent. Internet-enabled SIM card is not required. AirGate is not used.			
ENABLED This mode uses the "AirGate" service. Internet-enabled SIM card must be used. The AirGate server address is adjusted by the setpoint AirGate Address (page 405) .			
<div style="border: 1px solid black; padding: 5px; background-color: #f0f0f0;"> <p>IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.</p> </div>			

🔍 [back to List of setpoints](#)

AirGate Address

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	[-]		
Default value	airgate.comap.cz	Alternative config	NO
Step	[-]		
Comm object	24364	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
This setpoint is used for entering the domain name or IP address of the AirGate server. Use the free AirGate server provided by ComAp at airgate.comap.cz.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

ComAp TCP Port

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0 .. 65 535[-]		
Default value	23	Alternative config	NO
Step	[-]		
Comm object	24374	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
This setpoint is used to adjust the port number, which is used for Ethernet connection to a PC with any of ComAp PC program (i.e. IntelliConfig). This setpoint should be adjusted to 23, which is the default port used by all ComAp PC programs. A different value should be used only in special situations as e.g. sharing one public IP address among many controllers or to overcome a firewall restrictions.			
IMPORTANT: If AirGate is used, this setpoint has to be adjusted to 23.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Group: CM-4G-GPS

Internet Connection

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	Email+SMS / SMS Only [-]		
Default value	Email+SMS	Alternative config	NO
Step	[-]		
Comm object	24315	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint adjust the communication mode of module.			
Email+SMS	Controller is connected to the Internet and is able to send e-mails as well as SMS. The controller is also accessible via AirGate. Internet-enabled SIM card must be used. Also APN Name (page 381) has to be adjusted.		
SMS Only	Only SMS are sent. Internet-enabled SIM card is not required.		
IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.			

[List of setpoints \(page 184\)](#)

Required Connection Type

Setpoint group	CM-4G-GPS	Related FW	1.8.0
Range [units]	2G/3G/4G/Automatic [-]		
Default value	Automatic	Alternative config	NO
Step	[-]		
Comm object	24132	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint adjusts preferred connection type of CM-4G-GPS module.			

[back to List of setpoints](#)

APN Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24363	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
APN (Access Point Name) of the GPRS/4G network, provided by GSM operator.			

[back to List of setpoints](#)

APN User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24361	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
User name for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[back to List of setpoints](#)

APN User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24360	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
User password for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[↶ back to List of setpoints](#)

Email Address 1

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24298	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
Note: <i>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[↶ back to List of setpoints](#)

Email Address 2

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24297	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 3

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24145	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 4

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24144	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

 [back to List of setpoints](#)

Message Language

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	[-]		
Default value	English	Alternative config	NO
Step	[-]		
Comm object	24299	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Use this setpoint to set the language of SMS and e-mail.			
<i>Note: Numbers correspond with languages in language list. See the chapter for Language selection (page 92) more information.</i>			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

 [back to List of setpoints](#)

SMTP User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24313	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
Use this setpoint to enter the username for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[▲ back to List of setpoints](#)

SMTP User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24312	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
Use this setpoint to enter the password for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[▲ back to List of setpoints](#)

SMTP Server Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	airgate.comap.cz:9925	Alternative config	NO
Step	[-]		
Comm object	24311	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
<p>This setpoint is used for entering the domain name (e.g. smtp.yourprovider.com) or IP address (e.g. 74.125.39.109) or number of port (with colon like a first mark) of the SMTP server. Ask your internet provider or IT manager for this information.</p> <p>Note: You may use also any public SMTP server which does not require connection over SSL/TLS channels. If the device is connected to AirGate the AirGate SMTP server at "airgate.comap.cz" may be used. Ports 25 and 9925 are supported. After controller connects to AirGate for the first time (or with new public IP address), it may not be able to send emails for first 5-10 minutes.</p>			

🔍 back to List of setpoints

SMTP Sender Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24310	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
<p>Enter an existing email address into this setpoint. This address will be used as sender address in active e-mails that will be sent from the controller.</p> <p>Note: It is not needed to enter an existing email address, nevertheless valid email format needs to be followed.</p> <p>IMPORTANT: This item is obligatory when emails are configured.</p>			

🔍 back to List of setpoints

Time Zone

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	GMT-12:00 .. GMT+13:00 [hours]		
Default value	GMT+1:00 hour	Alternative config	NO
Step	[-]		
Comm object	24366	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint is used to select the time zone where the controller is located. See your computer time zone setting (click on the time indicator located in the rightmost position of the Windows task bar) if you are not sure about your time zone.</p> <p>Note: <i>If the time zone is not selected properly the active e-mails may contain incorrect information about sending time, which may result in confusion when the respective problem actually occurred.</i></p> <p>Note: <i>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[⬅ back to List of setpoints](#)

Event Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10926	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint enables or disables Event Messages.</p> <p>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[⬅ back to List of setpoints](#)

Wrn Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8482	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables Wrn Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

BOC Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10566	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables BOC Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Sd Messages

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8484	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables Sd Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Telephone Number 1

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24296	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[◀ back to List of setpoints](#)

Telephone Number 2

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24295	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[◀ back to List of setpoints](#)

Telephone Number 3

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24143	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;"> IMPORTANT: Telephone number has to be entered without spaces. </div>			

[back to List of setpoints](#)

Telephone Number 4

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24142	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;"> IMPORTANT: Telephone number has to be entered without spaces. </div>			

[back to List of setpoints](#)

AirGate Connection

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	1.8.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24273	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380)		
Description			
<p>This setpoint enable or disable AirGate connection via CM-GPRS or via CM-4G-GPS.</p> <p>DISABLED: Only SMS are sent. Internet-enabled SIM card is not required. AirGate is not used.</p> <p>ENABLED This mode uses the “AirGate” service. Internet-enabled SIM card must be used. The AirGate server address is adjusted by the setpoint AirGate Address (page 405).</p>			
<p>IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.</p>			

🔍 back to List of setpoints

AirGate Address

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	[-]		
Default value	airgate.comap.cz	Alternative config	NO
Step	[-]		
Comm object	24364	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
<p>This setpoint is used for entering the domain name or IP address of the AirGate server. Use the free AirGate server provided by ComAp at airgate.comap.cz.</p>			
<p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

🔍 back to List of setpoints

ComAp TCP Port

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0 .. 65 535[-]		
Default value	23	Alternative config	NO
Step	[-]		
Comm object	24374	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
<p>This setpoint is used to adjust the port number, which is used for Ethernet connection to a PC with any of ComAp PC program (i.e. IntelliConfig). This setpoint should be adjusted to 23, which is the default port used by all ComAp PC programs. A different value should be used only in special situations as e.g. sharing one public IP address among many controllers or to overcome a firewall restrictions.</p> <p>IMPORTANT: If AirGate is used, this setpoint has to be adjusted to 23.</p> <p><i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[back to List of setpoints](#)

Group: CM-Ethernet

Email Address 1

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24298	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
<p>Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.</p> <p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Email Address 2

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24297	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 3

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24145	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 4

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24144	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS and CM-4G-GPS modules)		
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

 [back to List of setpoints](#)

Message Language

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	[-]		
Default value	English	Alternative config	NO
Step	[-]		
Comm object	24299	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Use this setpoint to set the language of SMS and e-mail.			
<i>Note: Numbers correspond with languages in language list. See the chapter for Language selection (page 92) more information.</i>			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

 [back to List of setpoints](#)

Time Zone

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	GMT-12:00 .. GMT+13:00 [hours]		
Default value	GMT+1:00 hour	Alternative config	NO
Step	[-]		
Comm object	24366	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint is used to select the time zone where the controller is located. See your computer time zone setting (click on the time indicator located in the rightmost position of the Windows task bar) if you are not sure about your time zone.</p> <p>Note: If the time zone is not selected properly the active e-mails may contain incorrect information about sending time, which may result in confusion when the respective problem actually occurred.</p> <p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Event Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10926	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint enables or disables Event Messages.</p> <p>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Wrn Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8482	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables Wrn Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

BOC Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10566	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables BOC Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

Sd Messages

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8484	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint enables or disables Sd Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

SMTP UserName

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24370	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Use this setpoint to enter the username for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[◀ back to List of setpoints](#)

SMTP User Password

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24369	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Use this setpoint to enter the password for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[◀ back to List of setpoints](#)

SMTP Server Address

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	airgate.comap.cz:9925	Alternative config	NO
Step	[-]		
Comm object	24368	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>This setpoint is used for entering the domain name (e.g. smtp.yourprovider.com) or IP address (e.g. 74.125.39.109) or number of port (with colon like a first mark) of the SMTP server. Ask your internet provider or IT manager for this information.</p> <p>Note: You may use also any public SMTP server which does not require connection over SSL/TLS channels. If the device is connected to AirGate the AirGate SMTP server at "airgate.comap.cz" may be used. Ports 25 and 9925 are supported. After controller connects to AirGate for the first time (or with new public IP address), it may not be able to send emails for first 5-10 minutes.</p>			

[back to List of setpoints](#)

SMTP Sender Address

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24367	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>Enter an existing email address into this setpoint. This address will be used as sender address in active e-mails that will be sent from the controller.</p> <p>Note: It is not needed to enter an existing email address, nevertheless valid email format needs to be followed.</p> <p>IMPORTANT: This item is obligatory when emails are configured.</p>			

[back to List of setpoints](#)

IP Address Mode

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	FIXED / AUTOMATIC [-]		
Default value	AUTOMATIC	Alternative config	NO
Step	[-]		
Comm object	24259	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>The setpoint is used to select the method how the ethernet connection is adjusted.</p> <p>DISABLED: The Ethernet connection is fixed by means of the setpoints <u>IP Addr</u>, <u>NetMask</u>, <u>GateIP</u>, <u>DNS IP Address</u>.</p> <p>This method should be used for a classic Ethernet or internet connection. When this type of connection opens, the controller is specified by its IP address. This means that it would be inconvenient if the IP address were not fixed (static).</p> <p>ENABLED: The Ethernet connection setting is obtained automatically from the DHCP server. The obtained settings are then copied to the related setpoints. If the process of obtaining the settings from the DHCP server is not successful, the value <i>000.000.000.000</i> is copied to the setpoint IP address and the module continues to try to obtain the settings.</p>			

[back to List of setpoints](#)

IP Address

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	192.168.1.254	Alternative config	NO
Step	[-]		
Comm object	24376	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint IP Address Mode (page 399)		
Description			
<p>The setpoint is used to set the address when you are in static mode.</p> <p>If IP Address Mode (page 399) is FIXED this setpoint is used to adjust the IP address of the ethernet interface of the controller. Ask your IT specialist for help with this setting.</p> <p>If IP Address Mode (page 399) is AUTOMATIC this setpoint is inactive. The IP address is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

Subnet Mask

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	255.255.255.0	Alternative config	NO
Step	[-]		
Comm object	24375	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint IP Address Mode (page 399)		
Description			
<p>The setpoint is used to select the method how the Subnet Mask is adjusted.</p> <p>If IP Address Mode (page 399) is FIXED this setpoint is used to adjust the Subnet Mask. Ask your IT specialist for help with this setting.</p> <p>If IP Address Mode (page 399) is AUTOMATIC this setpoint is inactive. The Subnet Mask is assigned by the DHCP server.</p>			

[◀ back to List of setpoints](#)

Gateway IP

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	192.168.1.1	Alternative config	NO
Step	[-]		
Comm object	24373	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint IP Address Mode (page 399)		
Description			
<p>The setpoint is used to select the method how the Gateway IP is adjusted.</p> <p>If IP Address Mode (page 399) is DISABLE this setpoint is used to adjust the IP address of the gateway of the network segment where the controller is connected.</p> <p>If IP Address Mode (page 399) is ENABLED this setpoint is used to display the gateway IP address which has been assigned by the DHCP server.</p> <p>A gateway is a device which connects the respective segment with the other segments and/or Internet.</p>			

[◀ back to List of setpoints](#)

DNS IP Address 1

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	8.8.8.8	Alternative config	NO
Step	[-]		
Comm object	24362	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>The setpoint is used to select the method how the DNS Address 1 is adjusted.</p> <p>If IP Address Mode (page 399) is FIXED this setpoint is used to adjust the domain name server (DNS), which is needed to translate domain names in email addresses and server names into correct IP addresses.</p> <p>If IP Address Mode (page 399) is AUTOMATIC this setpoint is inactive. The DNS server IP address is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

DNS IP Address 2

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	8.8.8.8	Alternative config	NO
Step	[-]		
Comm object	24331	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
<p>The setpoint is used to select the method how the DNS Address 2 is adjusted.</p> <p>If IP Address Mode (page 399) is FIXED this setpoint is used to adjust the domain name server (DNS), which is needed to translate domain names in email addresses and server names into correct IP addresses.</p> <p>If IP Address Mode (page 399) is AUTOMATIC this setpoint is inactive. The DNS server IP address is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

MODBUS Server

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	DISABLED / ENABLED [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	24337	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enable or disable MODBUS communication via ethernet interface.			

[◀ back to List of setpoints](#)

SNMP Agent

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	DISABLED / ENABLED [-]		
Default value	DISABLED	Alternative config	NO
Step	[-]		
Comm object	24336	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Enable or disable SNMP v1 Agent.			

[◀ back to List of setpoints](#)

SNMP RD Community String

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	public	Alternative config	NO
Step	[-]		
Comm object	24335	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint SNMP Agent (page 402)		
Description			
SNMP Community String only for reading.			

[◀ back to List of setpoints](#)

SNMP WR Community String

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	0..31 characters [-]		
Default value	private	Alternative config	NO
Step	[-]		
Comm object	24334	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint SNMP Agent (page 402)		
Description			
SNMP Community String for writing and reading.			

[back to List of setpoints](#)

SNMP Trap Format

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	SNMPv1 Trap / SNMPv2 Not / SNMPv2 Inf [-]		
Default value	SNMP v1 Trap	Alternative config	NO
Step	[-]		
Comm object	24136	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint adjusts type of SNMP traps.			

[back to List of setpoints](#)

SNMP Traps IP Address 1

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	DISABLED	Alternative config	NO
Step	[-]		
Comm object	24294	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
IP address 1 for receiving SNMP Traps. Leave this setpoint blank if SNMP traps should not be send.			

[back to List of setpoints](#)

SNMP Traps IP Address 2

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Valid IP address [-]		
Default value	DISABLED	Alternative config	NO
Step	[-]		
Comm object	24293	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
IP address 2 for receiving SNMP Traps. Leave this setpoint blank if SNMP traps should not be send.			

[back to List of setpoints](#)

AirGate Connection

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24365	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint selects the Ethernet connection mode.			
DISABLED:	This is a standard mode in which the controller listens to the incoming traffic and answers the TCP/IP queries addressed to it. This mode requires the controller to be accessible from the remote device (PC), i.e. it must be accessible at a public and static IP address if you want to connect to it from the internet.		
ENABLED	This mode enables the AirGate service. The AirGate server address is adjusted by the setpoint AirGate Address (page 405) . Also the standard TCP/IP is enabled.		

[back to List of setpoints](#)

AirGate Address

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	[-]		
Default value	airgate.comap.cz	Alternative config	NO
Step	[-]		
Comm object	24364	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
This setpoint is used for entering the domain name or IP address of the AirGate server. Use the free AirGate server provided by ComAp at airgate.comap.cz.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

ComAp TCP Port

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	1.8.0
Range [units]	0 .. 65 535[-]		
Default value	23	Alternative config	NO
Step	[-]		
Comm object	24374	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint Internet Connection (page 380) (CM-GPRS module)		
Description			
This setpoint is used to adjust the port number, which is used for Ethernet connection to a PC with any of ComAp PC program (i.e. IntelliConfig). This setpoint should be adjusted to 23, which is the default port used by all ComAp PC programs. A different value should be used only in special situations as e.g. sharing one public IP address among many controllers or to overcome a firewall restrictions.			
IMPORTANT: If AirGate is used, this setpoint has to be adjusted to 23.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Web Interface

Setpoint group	CM-Ethernet	Related FW	1.8.0
Range [units]	Disabled / Enabled [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	24110	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed + conditioned by the setpoint IP Address Mode (page 399)		
Description			
The setpoint is used to enable/disable WebServer function.			

[back to List of setpoints](#)

Group: EM-BIO8-EFCP

Earth Fault Current Protection

Setpoint group	EM-BIO8-EFCP	Related FW	1.8.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	11631	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
This setpoint can block or allow Earth fault Current protection.			
DISABLED	Earth fault current protection is blocked.		
ENABLED	Earth fault current protection is allowed. Behavior of Earth fault current protection is set by these setpoints: Earth Fault CT Input Range (page 407), Earth Fault CT Ratio (page 407), Earth Fault Delay (page 407) and Earth Fault Sd (page 408).		

[back to List of setpoints](#)

Earth Fault Delay

Setpoint group	EM-BIO8-EFCP	Related FW	1.8.0
Range [units]	0,03 .. 5,00 [s]		
Default value	0,10 s	Alternative config	NO
Step	0,01 s		
Comm object	11633	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Delay for Earth Fault Current protection.			

[back to List of setpoints](#)

Earth Fault CT Input Range

Setpoint group	EM-BIO8-EFCP	Related FW	1.8.0
Range [units]	1 [A] / 5 [A]		
Default value	5 A	Alternative config	NO
Step	[-]		
Comm object	14340	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
There are 2 physical inputs for Earth Fault Current Protection (page 406) . Value of this setpoint has to be set on value of physical input which is presently in use.			

[back to List of setpoints](#)

Earth Fault CT Ratio

Setpoint group	EM-BIO8-EFCP	Related FW	1.8.0
Range [units]	1 .. 2000 [1/(1or5)A]		
Default value	500 1/(1or5)A	Alternative config	NO
Step	1A/1A; 1A/5A		
Comm object	14339	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Earth Fault current transformer ratio.			
<p><i>Note: Type of units depends on setpoint Earth Fault CT Input Range (page 407) which have to be set before this setpoint.</i></p>			

[back to List of setpoints](#)

Earth Fault Sd

Setpoint group	EM-BIO8-EFCP	Related FW	1.8.0
Range [units]	0,03 .. 5,00 [A]		
Default value	0,30 A	Alternative config	NO
Step	0,01 [A]		
Comm object	11632	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant module is installed		
Description			
Limit value for Earth Fault Current protection.			

[back to List of setpoints](#)

Group: PLC

PLC Setpoint 1

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10440	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.69 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 2

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10441	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.70 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 3

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10442	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

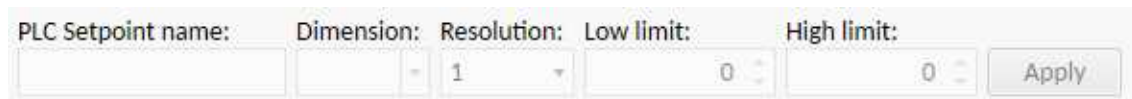


Image 9.71 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 4

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10443	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.72 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 5

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10444	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.73 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 6

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10445	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.74 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 7

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10446	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.75 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 8

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10447	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.76 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 9

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10448	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.77 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 10

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10449	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.78 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 11

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10450	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.79 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 12

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10451	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.80 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 13

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10452	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

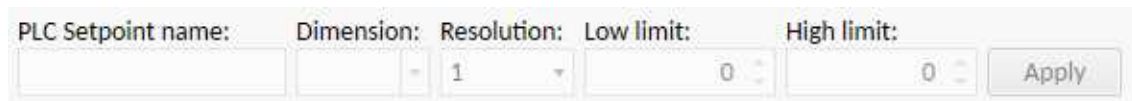


Image 9.81 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 14

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10453	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.82 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 15

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10454	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.83 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 16

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10455	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.84 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 17

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10456	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.85 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 18

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10457	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.86 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 19

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10458	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.87 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 20

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10459	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

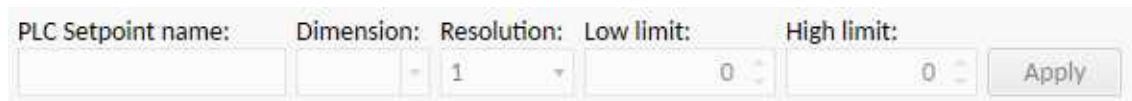


Image 9.88 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 21

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10460	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.89 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 22

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10461	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.90 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 23

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10462	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.91 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 24

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10463	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.92 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 25

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10464	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.93 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 26

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10465	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.94 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 27

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10466	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.95 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 28

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10467	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.96 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 29

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10468	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.97 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 30

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10469	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

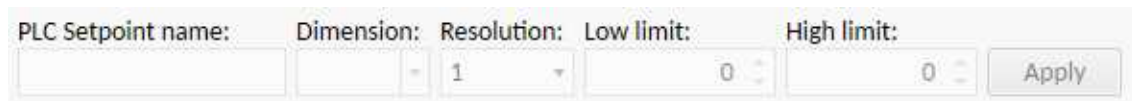


Image 9.98 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 31

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10470	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.99 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 32

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10471	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.100 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 33

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10472	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.101 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 34

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10473	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.102 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 35

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10474	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.103 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 36

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10475	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.104 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 37

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10476	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

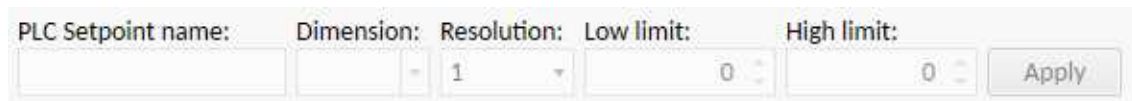


Image 9.105 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 38

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10477	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.106 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 39

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10478	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.107 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 40

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10479	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.108 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 41

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10480	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.109 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 42

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10481	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.110 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 43

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10482	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.111 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 44

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10483	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.112 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 45

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10484	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.113 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 46

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10485	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.114 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 47

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10486	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.115 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 48

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10487	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.116 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 49

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10488	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.117 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 50

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10489	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.118 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 51

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10490	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.119 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 52

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10491	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.120 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 53

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10492	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.121 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 54

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10493	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.122 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 55

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10494	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.123 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 56

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10495	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.124 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 57

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10496	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.125 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 58

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10497	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

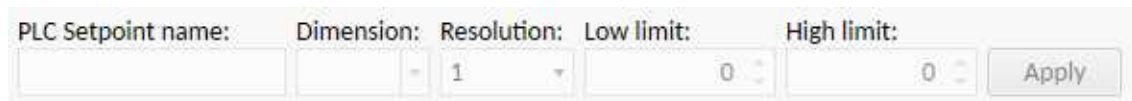


Image 9.126 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 59

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10498	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

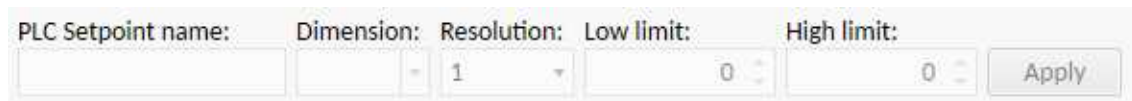


Image 9.127 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 60

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10499	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.128 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 61

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10500	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.129 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 62

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10501	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.130 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 63

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10502	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.131 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 64

Setpoint group	PLC	Related FW	1.8.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10503	Related applications	AMF, MRS
Config level	Standard		
Setpoint visibility	Only if relevant setpoint is used in PLC		

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 9.132 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

8.1.2 Values

What values are:

Values (or quantities) are analog or binary data objects, measured or computed by the controller, that are intended for reading from the controller screen, PC, MODBUS, etc. Values are organized into groups according to their meaning.

Invalid flag

If valid data is not available for a particular value, the invalid flag is set to it. This situation may be due to the following:

- ▶ The value is not being evaluated in the scope of the current application and configuration.
- ▶ Sensor fail has been detected on an analog input.
- ▶ The configured ECU or extension module does not provide the particular value.
- ▶ The communication with the ECU or extension module is interrupted.

A value containing the invalid flag is displayed as “#####” in IntelliConfig and on the controller screen. If such a value is read out via MODBUS, it will contain the data 32768 in the case of signed values and 65535 in the case of unsigned values.

List of values groups

Group: Engine	475
Group: Generator	479
Group: Load	482
Group: Mains	487
Group: Controller I/O	489
Group: Statistics	491
Group: IL Info	496
Group: Log Bout	499
Group: CM-GPRS	501
Group: CM-4G-GPS	506
Group: CM-Ethernet	512
Group: Date/Time	515
Group: Plug-In I/O	515
Group: PLC	516

For full list of setpoints go to the chapter **List of values (page 473)**.

List of values

Engine

DEF Level	475
DPF Ash Load	475
DPF Soot Load	475
ECU-BIN 1	475
ECU-BIN 2	476
ECU-BIN 3	476
ECU-BIN 4	476
ECU-BIN 5	476
ECU-BIN 6	477
ECU-BIN 7	477
ECU-BIN 8	477
ECU-BIN 9	477
ECU-BIN-EXT-1	478
ECU Frequency Select ..	478
ECU State	478
RPM	479
Speed Request	479
Speed Required RPM	479

Generator

Generator Frequency	479
Generator Voltage L1-L2 ..	480
Generator Voltage L1-N ..	480
Generator Voltage L2-L3 ..	480
Generator Voltage L2-N ..	480
Generator Voltage L3-L1 ..	480
Generator Voltage L3-N ..	481
Nominal Current	481
Nominal Power	481
Nominal Voltage	481
Earth Fault Current	481

Load

Load A L1	482
Load A L2	482
Load A L3	482

Load Characteristic	482
Load Characteristic L1 ..	483
Load Characteristic L2 ..	483
Load Characteristic L3 ..	483
Load kVA	483
Load kVA L1	484
Load kVA L2	484
Load kVA L3	484
Load kVAr	484
Load kVAr L1	485
Load kVAr L2	485
Load kVAr L3	485
Load kW	485
Load kW L1	486
Load kW L2	486
Load kW L3	486
Load Power Factor	486
Load Power Factor L1	487
Load Power Factor L2	487
Load Power Factor L3	487

Mains

Mains Frequency	487
Mains Voltage L1-L2	487
Mains Voltage L1-N	488
Mains Voltage L2-L3	488
Mains Voltage L2-N	488
Mains Voltage L3-L1	488
Mains Voltage L3-N	488

Dual Operation

Running Hours To Swap ..	489
Master Running Hours	489
Slave Running Hours	489

Controller I/O

Analog Input 1	489
----------------------	-----

Analog Input 2	490
Analog Input 3	490
Analog Input 4	490
Battery Volts	490
Binary Inputs	490
Binary Outputs	491
D+	491

Statistics

Genset kVAh	491
Genset kWh	491
Mains kVAh	492
Mains kWh	492
Maintenance 1	492
Maintenance 2	492
Maintenance 3	493
Num E-Stops	493
Num Starts	493
Pulse Counter 1	493
Pulse Counter 2	493
Rental 1	494
Rental 2	494
Running Hours	494
Shutdowns	494
Time Till Empty	495
Time Till Empty	495
Time Till Empty	495
Total Fuel Consumption ..	496

IL Info

Application	496
Breaker State	496
Connection Type	496
Engine State	497
FW Branch	497
FW Version	497
ID String	497

Password Decode	497
SPI Module A	498
SPI Module B	498
Timer Text	498
Timer Value	498

Log Bout

Log Bout 1	499
Log Bout 2	499
Log Bout 3	499
Log Bout 4	499
Log Bout 5	499
Log Bout 6	500
Log Bout 7	500
Log Bout 8	500
Log Bout 9	500
Log Bout 10	500

CM-GPRS ; CM-4G-GPS (4G part)

AirGate Status	501
AirGate ID	501
Connection Type	501
Cell Diag Code	501
Cell ErrorRate	503
Cell Signal Lev	503
Cell Status	504
Last Email Result	505
Operator	506
AirGate ID	507
AirGate Status	508
Connection Type	508
Cell Diag Code	508
Cell ErrorRate	510
Cell Signal Lev	510
Cell Status	510
Last Email Result	511
Operator	512

CM-4G-GPS (GPS part)

Altitude	506
HomePosDist	506
Latitude	506
Longitude	507
Satellites	507

CM-Ethernet

AirGate Status	512
AirGate ID	512
Current DNS	513
ETH Interface Status	513
Current Gateway	513
Current IP Address	513
Last Email Result	514
MAC Address	514
Current Subnet Mask	515

Date/Time

Time	515
Date	515

Plug-In I/O

EM BIO A	515
EM BIO B	516

PLC

PLC Resource 1	516
PLC Resource 2	516
PLC Resource 3	516
PLC Resource 4	516
PLC Resource 5	517
PLC Resource 6	517
PLC Resource 7	517
PLC Resource 8	517
PLC-BOUT 1	517
PLC-BOUT 2	518
PLC-BOUT 3	518
PLC-BOUT 4	518

PLC-BOUT 5	518
PLC-BOUT 6	518
PLC-BOUT 7	519

Group: Engine

DEF Level

Value group	Engine	Related FW	1.8.0
Units	%		
Comm object	14522	Related applications	AMF, MRS
Description			
The level of diesel exhaust fluid tank.			

[back to List of values](#)

DPF Ash Load

Value group	Engine	Related FW	1.8.0
Units	%		
Comm object	12483	Related applications	AMF, MRS
Description			
The rate of ash in DPF (Diesel particulate filter).			

[back to List of values](#)

DPF Soot Load

Value group	Engine	Related FW	1.8.0
Units	%		
Comm object	12484	Related applications	AMF, MRS
Description			
The rate of soot in DPF (Diesel particulate filter).			

[back to List of values](#)

ECU-BIN 1

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10153	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<p>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</p>			

[back to List of values](#)

ECU-BIN 2

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10154	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 3

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10155	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 4

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10156	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 5

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10157	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 6

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10158	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 7

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10159	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 8

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10160	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN 9

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10161	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<i>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</i>			

[back to List of values](#)

ECU-BIN-EXT-1

Value group	Engine	Related FW	1.8.0
Units	Depends on ECU value		
Comm object	10173	Related applications	AMF, MRS
Description			
This is one of the inputs, which are defined by ECU. Order of values depends on type of ECU.			
<p>Note: Usually there are engine speed[RPM], fuel rate[L/h], coolant temperature[°C], intake temperature [°C], oil pressure[bar], boost pressure[bar], load[%], oil temperature[°C] etc.</p>			

◀ back to List of values

ECU Frequency Select

Value group	Engine	Related FW	1.8.0
Units	-		
Comm object	12926	Related applications	AMF, MRS
Description			
Shows selected frequency of ECU. The value is calculated from setpoint Nominal Frequency (page 194)			
<ul style="list-style-type: none"> ▶ If is Nominal Frequency (page 194) in range from 45 Hz to 54 Hz, is considered as 50 Hz application. The value is set to 0. ▶ If is Nominal Frequency (page 194) in range from 55 Hz to 65 Hz, is considered as 60 Hz application. The value is set to 1. 			

◀ back to List of values

ECU State

Value group	Engine	Related FW	1.8.0
Units	-		
Comm object	10034	Related applications	AMF, MRS
Description			
Shows binary status (0 or 1) of ECU:			
<ul style="list-style-type: none"> ▶ ECU Yellow Lamp ▶ ECU Red Lamp ▶ Wait To Start 			

◀ back to List of values

RPM

Value group	Engine	Related FW	1.8.0
Units	RPM		
Comm object	10123	Related applications	AMF, MRS
Description			
This value contains the current engine speed. The value is obtained from one of the following sources: <ul style="list-style-type: none"> ▶ ECU, if an ECU is configured ▶ Pickup input ▶ Generator frequency 			

[◀ back to List of values](#)

Speed Request

Value group	Engine	Related FW	1.8.0												
Units	%														
Comm object	10137	Related applications	AMF, MRS												
Description															
Engine speed control via CAN bus.															
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Speed request</th> <th>Requested speed</th> <th>Accelerator pedal position</th> </tr> </thead> <tbody> <tr> <td>0%</td> <td>1350 RPM</td> <td>0%</td> </tr> <tr> <td>50%</td> <td>1500 RPM</td> <td>50%</td> </tr> <tr> <td>100%</td> <td>1650 RPM</td> <td>100%</td> </tr> </tbody> </table>				Speed request	Requested speed	Accelerator pedal position	0%	1350 RPM	0%	50%	1500 RPM	50%	100%	1650 RPM	100%
Speed request	Requested speed	Accelerator pedal position													
0%	1350 RPM	0%													
50%	1500 RPM	50%													
100%	1650 RPM	100%													

[◀ back to List of values](#)

Speed Required RPM

Value group	Engine	Related FW	1.8.0
Units	RPM		
Comm object	10006	Related applications	AMF, MRS
Description			
Requested engine speed.			

[◀ back to List of values](#)

Group: Generator

Generator Frequency

Value group	Generator	Related FW	1.8.0
Units	Hz		
Comm object	8210	Related applications	AMF, MRS
Description			
Frequency of generator.			

[◀ back to List of values](#)

Generator Voltage L1-L2

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	9628	Related applications	AMF, MRS
Description			
Generator phase to phase voltage between L1 and L2 phases.			

[back to List of values](#)

Generator Voltage L1-N

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	8192	Related applications	AMF, MRS
Description			
Generator voltage on phase 1.			

[back to List of values](#)

Generator Voltage L2-L3

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	9629	Related applications	AMF, MRS
Description			
Generator phase to phase voltage between L2 and L3 phases.			

[back to List of values](#)

Generator Voltage L2-N

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	8193	Related applications	AMF, MRS
Description			
Generator voltage on phase 2.			

[back to List of values](#)

Generator Voltage L3-L1

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	9630	Related applications	AMF, MRS
Description			
Generator phase to phase voltage between L3 and L1 phases.			

[back to List of values](#)

Generator Voltage L3-N

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	8194	Related applications	AMF, MRS
Description			
Generator voltage on phase 3.			

[back to List of values](#)

Nominal Current

Value group	Generator	Related FW	1.8.0
Units	A		
Comm object	9978	Related applications	AMF, MRS
Description			
Generator nominal current.			

[back to List of values](#)

Nominal Power

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	9018	Related applications	AMF, MRS
Description			
Generator nominal power.			

[back to List of values](#)

Nominal Voltage

Value group	Generator	Related FW	1.8.0
Units	V		
Comm object	9917	Related applications	AMF, MRS
Description			
Generator nominal voltage.			

[back to List of values](#)

Earth Fault Current

Value group	Generator	Related FW	1.8.0
Units	A		
Comm object	14325	Related applications	AMF, MRS
Description			
Measured value of fault for evaluation of earth fault protection.			

[back to List of values](#)

Group: Load

Load A L1

Value group	Load	Related FW	1.8.0
Units	A		
Comm object	8198	Related applications	AMF, MRS
Description			
Load current phase L1.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load A L2

Value group	Load	Related FW	1.8.0
Units	A		
Comm object	8199	Related applications	AMF, MRS
Description			
Load current phase L2.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load A L3

Value group	Load	Related FW	1.8.0
Units	A		
Comm object	8200	Related applications	AMF, MRS
Description			
Load current phase L3.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load Characteristic

Value group	Load	Related FW	1.8.0
Units	[-]		
Comm object	8395	Related applications	AMF, MRS
Description			
Character of the load. "L" means inductive load, "C" is capacitive and "R" is resistive load (power factor = 1).			

[back to List of values](#)

Load Characteristic L1

Value group	Load	Related FW	1.8.0
Units	[-]		
Comm object	8626	Related applications	AMF, MRS
Description			
Character of the generator load in the L1 phase. “L” means inductive load, “C” is capacitive and “R” is resistive load (power factor = 1).			

[▲ back to List of values](#)

Load Characteristic L2

Value group	Load	Related FW	1.8.0
Units	[-]		
Comm object	8627	Related applications	AMF, MRS
Description			
Character of the generator load in the L2 phase. “L” means inductive load, “C” is capacitive and “R” is resistive load (power factor = 1).			

[▲ back to List of values](#)

Load Characteristic L3

Value group	Load	Related FW	1.8.0
Units	[-]		
Comm object	8628	Related applications	AMF, MRS
Description			
Character of the generator load in the L3 phase. “L” means inductive load, “C” is capacitive and “R” is resistive load (power factor = 1).			

[▲ back to List of values](#)

Load kVA

Value group	Load	Related FW	1.8.0
Units	kVA		
Comm object	8565	Related applications	AMF, MRS
Description			
Load apparent power.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[▲ back to List of values](#)

Load kVA L1

Value group	Load	Related FW	1.8.0
Units	kVA		
Comm object	8530	Related applications	AMF, MRS
Description			
Load apparent power L1.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVA L2

Value group	Load	Related FW	1.8.0
Units	kVA		
Comm object	8531	Related applications	AMF, MRS
Description			
Load apparent power L2.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVA L3

Value group	Load	Related FW	1.8.0
Units	kVA		
Comm object	8532	Related applications	AMF, MRS
Description			
Load apparent power L3.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVAr

Value group	Load	Related FW	1.8.0
Units	kVAr		
Comm object	8203	Related applications	AMF, MRS
Description			
Load reactive power.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVAr L1

Value group	Load	Related FW	1.8.0
Units	kVAr		
Comm object	8527	Related applications	AMF, MRS
Description			
Load reactive power in phase L1.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVAr L2

Value group	Load	Related FW	1.8.0
Units	kVAr		
Comm object	8528	Related applications	AMF, MRS
Description			
Load reactive power in phase L2.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVAr L3

Value group	Load	Related FW	1.8.0
Units	kVAr		
Comm object	8529	Related applications	AMF, MRS
Description			
Load reactive power in phase L3.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kW

Value group	Load	Related FW	1.8.0
Units	kW		
Comm object	8202	Related applications	AMF, MRS
Description			
Load active power.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kW L1

Value group	Load	Related FW	1.8.0
Units	kW		
Comm object	8524	Related applications	AMF, MRS
Description			
Load active power in phase L1.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kW L2

Value group	Load	Related FW	1.8.0
Units	kW		
Comm object	8525	Related applications	AMF, MRS
Description			
Load active power in phase L2.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kW L3

Value group	Load	Related FW	1.8.0
Units	kW		
Comm object	8526	Related applications	AMF, MRS
Description			
Load active power in phase L3.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load Power Factor

Load	Load	Related FW	1.8.0
Units	[-]		
Comm object	8204	Related applications	AMF, MRS
Description			
Generator power factor.			

[back to List of values](#)

Load Power Factor L1

Load	Load	Related FW	1.8.0
Units	[-]		
Comm object	8533	Related applications	AMF, MRS
Description			
Generator power factor in phase L1.			

[back to List of values](#)

Load Power Factor L2

Load	Load	Related FW	1.8.0
Units	[-]		
Comm object	8534	Related applications	AMF, MRS
Description			
Generator power factor in phase L2.			

[back to List of values](#)

Load Power Factor L3

Load	Load	Related FW	1.8.0
Units	[-]		
Comm object	8535	Related applications	AMF, MRS
Description			
Generator power factor in phase L3.			

[back to List of values](#)

Group: Mains

Mains Frequency

Value group	Mains	Related FW	1.8.0
Units	Hz		
Comm object	8211	Related applications	AMF
Description			
Frequency of mains.			

[back to List of values](#)

Mains Voltage L1-L2

Value group	Mains	Related FW	1.8.0
Units	V		
Comm object	9631	Related applications	AMF
Description			
Mains phase to phase voltage between L1 and L2 phases.			

[back to List of values](#)

Mains Voltage L1-N

Value group	Mains	Related FW	1.8.0
Units	V		
Comm object	8195	Related applications	AMF
Description			
Mains voltage on phase 1.			

[back to List of values](#)

Mains Voltage L2-L3

Value group	Mains	Related FW	1.8.0
Units	V		
Comm object	9632	Related applications	AMF
Description			
Mains phase to phase voltage between L2 and L3 phases.			

[back to List of values](#)

Mains Voltage L2-N

Value group	Mains	Related FW	1.8.0
Units	V		
Comm object	8196	Related applications	AMF
Description			
Mains voltage on phase 2.			

[back to List of values](#)

Mains Voltage L3-L1

Value group	Mains	Related FW	1.8.0
Units	V		
Comm object	9633	Related applications	AMF
Description			
Mains phase to phase voltage between L3 and L1 phases.			

[back to List of values](#)

Mains Voltage L3-N

Value group	Mains	Related FW	1.8.0
Units	V		
Comm object	8197	Related applications	AMF
Description			
Mains voltage on phase 3.			

[back to List of values](#)

Group: Dual Operation

Running Hours To Swap

Value group	Dual Operation	Related FW	1.8.0
Units			
Comm object	16046	Related applications	AMF, MRS
Description			
This value shows how long it will take until the swap between gen-sets will be made.			

[back to List of values](#)

Master Running Hours

Value group	Dual Operation	Related FW	1.8.0
Units			
Comm object	16044	Related applications	AMF, MRS
Description			
This is actual value of running hours of Master controller used in dual operation function (Running Hours (page 494) + Running Hours Base (page 262)).			

[back to List of values](#)

Slave Running Hours

Value group	Dual Operation	Related FW	1.8.0
Units			
Comm object	16045	Related applications	AMF, MRS
Description			
This is actual value of running hours of Slave controller used in dual operation function (Running Hours (page 494) + Running Hours Base (page 262)).			

[back to List of values](#)

Group: Controller I/O

Analog Input 1

Value group	Controller I/O	Related FW	1.8.0
Units	Configurable		
Comm object	9151	Related applications	AMF, MRS
Description			
This is the value of the analog input 1 of the controller.			

[back to List of values](#)

Analog Input 2

Value group	Controler I/O	Related FW	1.8.0
Units	Configurable		
Comm object	9152	Related applications	AMF, MRS
Description			
This is the value of the analog input 2 of the controller.			

[back to List of values](#)

Analog Input 3

Value group	Controler I/O	Related FW	1.8.0
Units	Configurable		
Comm object	9153	Related applications	AMF, MRS
Description			
This is the value of the analog input 3 of the controller.			

[back to List of values](#)

Analog Input 4

Value group	Controler I/O	Related FW	1.8.0
Units	Configurable		
Comm object	9154	Related applications	AMF, MRS
Description			
This is the value of the analog input 4 of the controller.			

[back to List of values](#)

Battery Volts

Value group	Controler I/O	Related FW	1.8.0
Units	V		
Comm object	8213	Related applications	AMF, MRS
Description			
Controller supply voltage.			

[back to List of values](#)

Binary Inputs

Value group	Controler I/O	Related FW	1.8.0
Units	[-]		
Comm object	8235	Related applications	AMF, MRS
Description			
State of the binary inputs of the controller.			

[back to List of values](#)

Binary Outputs

Value group	Controler I/O	Related FW	1.8.0
Units	[-]		
Comm object	8239	Related applications	AMF, MRS
Description			
State of the binary outputs of the controller.			

[back to List of values](#)

D+

Value group	Controler I/O	Related FW	1.8.0
Units	V		
Comm object	10603	Related applications	AMF, MRS
Description			
D+ terminal voltage.			

[back to List of values](#)

Group: Statistics

Genset kVArh

Value group	Statistics	Related FW	1.8.0
Units	kVArh		
Comm object	8539	Related applications	AMF, MRS
Description			
Counter of gen-set reactive power.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Genset kWh

Value group	Statistics	Related FW	1.8.0
Units	kWh		
Comm object	8205	Related applications	AMF, MRS
Description			
Counter of gen-set active power.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Mains kVArh

Value group	Statistics	Related FW	1.8.0
Units	kVArh		
Comm object	11026	Related applications	AMF
Description			
Counter of mains reactive power.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

⬅ back to List of values

Mains kWh

Value group	Statistics	Related FW	1.8.0
Units	kWh		
Comm object	11025	Related applications	AMF
Description			
Counter of mains active power.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

⬅ back to List of values

Maintenance 1

Value group	Statistics	Related FW	1.8.0
Units	hours		
Comm object	11616	Related applications	AMF, MRS
Description			
Countdown until next maintenance 1. Initial value can be set in Maintenance Timer 1 (page 233) .			

⬅ back to List of values

Maintenance 2

Value group	Statistics	Related FW	1.8.0
Units	hours		
Comm object	11617	Related applications	AMF, MRS
Description			
Countdown until next maintenance 2. Initial value can be set in Maintenance Timer 2 (page 234) .			

⬅ back to List of values

Maintenance 3

Value group	Statistics	Related FW	1.8.0
Units	hours		
Comm object	11618	Related applications	AMF, MRS
Description			
Countdown until next maintenance 3. Initial value can be set in Maintenance Timer 3 (page 234) .			

[back to List of values](#)

Num E-Stops

Value group	Statistics	Related FW	1.8.0
Units	[-]		
Comm object	11195	Related applications	AMF, MRS
Description			
Emergency stop alarms counter.			

[back to List of values](#)

Num Starts

Value group	Statistics	Related FW	1.8.0
Units	[-]		
Comm object	8207	Related applications	AMF, MRS
Description			
Engine start commands counter. The counter is increased by 1 even if the particular start command will take more than one attempt.			

[back to List of values](#)

Pulse Counter 1

Value group	Statistics	Related FW	1.8.0
Units	-		
Comm object	10986	Related applications	AMF, MRS
Description			
This is the value of PULSE COUNTER 1 (PAGE 559) function.			

[back to List of values](#)

Pulse Counter 2

Value group	Statistics	Related FW	1.8.0
Units	-		
Comm object	10987	Related applications	AMF, MRS
Description			
This is the value of PULSE COUNTER 2 (PAGE 559) function.			

[back to List of values](#)

Rental 1

Value group	Statistics	Related FW	1.8.0
Units	hours		
Comm object	14328	Related applications	AMF, MRS
Description			
Remaining hours of Rental Timer 1 (page 339) .			

[◀ back to List of values](#)

Rental 2

Value group	Statistics	Related FW	1.8.0
Units	days		
Comm object	14369	Related applications	AMF, MRS
Description			
Remaining days of Rental Timer 2 (page 341) .			

[◀ back to List of values](#)

Running Hours

Value group	Statistics	Related FW	1.8.0
Units	hours		
Comm object	8206	Related applications	AMF, MRS
Description			
Engine operation hours counter. The engine hours are incremented in the controller while the engine is running.			

[◀ back to List of values](#)

Shutdowns

Value group	Statistics	Related FW	1.8.0
Units	[-]		
Comm object	11196	Related applications	AMF, MRS
Description			
Shutdown alarms counter. This counter counts all occurrences of a shutdown alarm, not only real shutdowns of the gen-set, i.e. the counter is increased by 2 if two shutdown alarms appear simultaneously.			

[◀ back to List of values](#)

Time Till Empty

Value group	Statistics	Related FW	1.8.0
Units	days		
Comm object	13770	Related applications	AMF, MRS
Description			
Assessment in days when the fuel tank will be empty.			
<p>Note: This value is based on setpoint <i>Fuel Tank Volume</i> (page 230) and value from ECU Fuel Rate. For correct calculation of this value is necessary to have configured ECU which send Fuel Rate value, otherwise this value can't be calculated.</p>			

[back to List of values](#)

Time Till Empty

Value group	Statistics	Related FW	1.8.0
Units	hours		
Comm object	13771	Related applications	AMF, MRS
Description			
Assessment in hours when the fuel tank will be empty.			
<p>Note: This value is based on setpoint <i>Fuel Tank Volume</i> (page 230) and value from ECU Fuel Rate. For correct calculation of this value is necessary to have configured ECU which send Fuel Rate value, otherwise this value can't be calculated.</p>			

[back to List of values](#)

Time Till Empty

Value group	Statistics	Related FW	1.8.0
Units	minutes		
Comm object	13772	Related applications	AMF, MRS
Description			
Assessment in minutes when the fuel tank will be empty.			
<p>Note: This value is based on setpoint <i>Fuel Tank Volume</i> (page 230) and value from ECU Fuel Rate. For correct calculation of this value is necessary to have configured ECU which send Fuel Rate value, otherwise this value can't be calculated.</p>			

[back to List of values](#)

Total Fuel Consumption

Value group	Statistics	Related FW	1.8.0
Units	L		
Comm object	9040	Related applications	AMF, MRS
Description			
Value containing total amount of consumed fuel by engine. The controller automatically updates this value every 30 s. The controller can calculate it in three ways: <ul style="list-style-type: none"> ▶ Direct reading from ECU ▶ Calculation based on actual fuel consumption reading from ECU ▶ Calculation from fuel level drop in tank (using Fuel Level Analog Input + Fuel Tank Volume (page 230) setpoint) <p><i>Note: The accuracy of Total Fuel Consumption depends on the precision of ECU values or precision of Fuel Tank Volume (page 230) and fuel level sensor.</i></p>			

[◀ back to List of values](#)

Group: IL Info

Application

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	8480	Related applications	AMF, MRS
Description			
The value contains actual application in controller.			

[◀ back to List of values](#)

Breaker State

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	9245	Related applications	AMF, MRS
Description			
The value contains actual "breaker state" message which is shown on the main screen of the controller.			

[◀ back to List of values](#)

Connection Type

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	12944	Related applications	AMF, MRS
Description			
The text of this value represents the connection type which is adjusted in setpoint Connection type (page 191) .			

[◀ back to List of values](#)

Engine State

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	9244	Related applications	AMF, MRS
Description			
The value contains actual "engine state" message which is shown on the main screen of the controller.			

[back to List of values](#)

FW Branch

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	8707	Related applications	AMF, MRS
Description			
The value contains actual branch of firmware in controller.			

[back to List of values](#)

FW Version

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	24339	Related applications	AMF, MRS
Description			
Major and minor firmware version number.			

[back to List of values](#)

ID String

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	24501	Related applications	AMF, MRS
Description			
Name of controller which is used in IntelliConfig in command bar.			

[back to List of values](#)

Password Decode

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	24202	Related applications	AMF, MRS
Description			
This value contains a number which can be used for retrieving a lost password. Send this number together with the controller serial number to your distributor if you have lost your password.			

[back to List of values](#)

SPI Module A

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	14447	Related applications	AMF, MRS
Description			
The name of plug-in module which is inserted in slot A.			

[◀ back to List of values](#)

SPI Module B

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	14448	Related applications	AMF, MRS
Description			
The name of plug-in module which is inserted in slot B.			

[◀ back to List of values](#)

Timer Text

Value group	IL Info	Related FW	1.8.0
Units	[-]		
Comm object	10040	Related applications	AMF, MRS
Description			
The value contains the numeric code of the "Current process timer" text which is shown on the main screen of the controller.			
The assignment of texts to the codes can be obtained using InteliConfig. Open any connection (also offline with a previously saved archive) and go to the Tools ribbon -> Generate CFG image (all). The resulting file will contain the assignment of texts to the codes.			

[◀ back to List of values](#)

Timer Value

Value group	IL Info	Related FW	1.8.0
Units	[HH:MM:SS]		
Comm object	14147	Related applications	AMF, MRS
Description			
The value contains the "Current process timer" value which is shown on the main screen of the controller.			

[◀ back to List of values](#)

Group: Log Bout

Log Bout 1

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9143	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 2

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9144	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 3

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9145	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 4

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9146	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 5

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9147	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 6

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9148	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 7

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9149	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 8

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	9150	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 9

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	11896	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 10

Value group	Log Bout	Related FW	1.8.0
Units	[-]		
Comm object	11897	Related applications	AMF, MRS
Description			
State of binary outputs.			

[back to List of values](#)

Group: CM-GPRS

AirGate Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0														
Units	[-]																
Comm object	24308	Related applications	AMF, MRS														
Description																	
Diagnostic code for AirGate connection. Helps in troubleshooting.																	
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SIM card is not inserted</td> </tr> <tr> <td>1</td> <td>Controller registered, waiting for authorization</td> </tr> <tr> <td>2</td> <td>Not possible to register, controller blacklisted</td> </tr> <tr> <td>3</td> <td>Not possible to register, server has no more capacity</td> </tr> <tr> <td>4</td> <td>Not possible to register, other reason</td> </tr> <tr> <td>5</td> <td>Controller registered and authorized</td> </tr> </tbody> </table>				Code	Description	0	SIM card is not inserted	1	Controller registered, waiting for authorization	2	Not possible to register, controller blacklisted	3	Not possible to register, server has no more capacity	4	Not possible to register, other reason	5	Controller registered and authorized
Code	Description																
0	SIM card is not inserted																
1	Controller registered, waiting for authorization																
2	Not possible to register, controller blacklisted																
3	Not possible to register, server has no more capacity																
4	Not possible to register, other reason																
5	Controller registered and authorized																

[back to List of values](#)

AirGate ID

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24309	Related applications	AMF, MRS
Description			
Identification string generated by AirGate server for the purpose of establishing communication via IntelliConfig or any other supported PC tool.			

[back to List of values](#)

Connection Type

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24146	Related applications	AMF, MRS
Description			
The type of data connection.			

[back to List of values](#)

Cell Diag Code

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		

Comm object	24288	Related applications	AMF, MRS
Description			
Diagnostic code for the CM-GPRS or CM-4G-GPS module.			
GSM Diag Code – Common list of diagnostic codes for cellular modules			
Code	Description		
0	OK. No error.		
1	Not possible to hang up.		
2	Modul is switched off		
3	Module is switched on		
4	Module – error in initialization		
5	Module – not possible to set the APN		
6	Module – not possible to connect to GPRS network		
7	Module – not possible to retrieve IP address		
8	Module – not accepted DNS IP address		
9	Error in modem detection		
10	Error in initialization of analog modem		
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking		
12	No GSM signal		
13	Not possible to read the SIM card parameters		
14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card		
15	Unknown modem		
16	Bad answer to complement initialization string		
17	Not possible to read GSM signal strength		
18	CDMA modem not detected		
19	No CDMA network		
20	Unsuccessful registration to CDMA network		
21	SIMCom/ME909s: can't read FW version		
22	SIMCom: GSM signal not found		
23	SIMCom: can't detect module speed		
24	SIMCom: HW reset issued		
25	PUK is required		
26	Error of SIM card detected		
27	ME909s: can't set module bps		
28	ME909s: can't set link configuration		
29	ME909s: can't do power-off		
30	ME909s: can't do power-on		

31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued
35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration
41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

[◀ back to List of values](#)

Cell ErrorRate

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	%		
Comm object	24300	Related applications	AMF, MRS
Description			
This value contains information about relative quality of the cellular signal received by the CM-GPRS module or by CM-4G-GPS module. The lower value means higher quality of signal.			

[◀ back to List of values](#)

Cell Signal Lev

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	%		
Comm object	24302	Related applications	AMF, MRS
Description			
This value contains information about relative strength of the cellular signal received by the CM-GPRS module or by CM-4G-GPS module. It is a relative value helping to find the best signal and for troubleshooting cases.			

[◀ back to List of values](#)

Cell Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24290	Related applications	AMF, MRS
Description			
The text of this value represents the status of the GSM modem.			

 [back to List of values](#)

Last Email Result

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0																																																				
Units	[-]																																																						
Comm object	24307	Related applications	AMF, MRS																																																				
Description																																																							
Result of last email, which was sent by controller.																																																							
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>0</td><td>Email was successfully sent.</td></tr> <tr><td>2</td><td>It is not possible to establish connection with SMTP server.</td></tr> <tr><td>3</td><td>SMTP server is not ready for communication.</td></tr> <tr><td>4</td><td>Maximum length of data can't be read.</td></tr> <tr><td>5</td><td>No appeal to send command.</td></tr> <tr><td>6</td><td>Command can't be send.</td></tr> <tr><td>7</td><td>Command can't be send.</td></tr> <tr><td>8</td><td>HELO command was refused.</td></tr> <tr><td>11</td><td>AUTH LOGIN command was refused.</td></tr> <tr><td>12</td><td>Wrong user name.</td></tr> <tr><td>13</td><td>Wrong password.</td></tr> <tr><td>14</td><td>MAIL FROM command was refused.</td></tr> <tr><td>15</td><td>RCPT TO command was refused.</td></tr> <tr><td>16</td><td>DATA command was refused.</td></tr> <tr><td>17</td><td>Sending of email failed.</td></tr> <tr><td>18</td><td>SMTP server refused the data of email.</td></tr> <tr><td>19</td><td>SMTP server refused the data of email.</td></tr> <tr><td>20</td><td>QUIT command was refused.</td></tr> <tr><td>21</td><td>Lost of connection.</td></tr> <tr><td>23</td><td>Error during closing the connection.</td></tr> <tr><td>24</td><td>No answer from server.</td></tr> <tr><td>25</td><td>It is impossible to create data for command DATA.</td></tr> <tr><td>26</td><td>It is impossible to read data for command DATA.</td></tr> <tr><td>28</td><td>Error of encoding.</td></tr> <tr><td>29</td><td>There was no attempt to send email.</td></tr> </tbody> </table>				Code	Description	0	Email was successfully sent.	2	It is not possible to establish connection with SMTP server.	3	SMTP server is not ready for communication.	4	Maximum length of data can't be read.	5	No appeal to send command.	6	Command can't be send.	7	Command can't be send.	8	HELO command was refused.	11	AUTH LOGIN command was refused.	12	Wrong user name.	13	Wrong password.	14	MAIL FROM command was refused.	15	RCPT TO command was refused.	16	DATA command was refused.	17	Sending of email failed.	18	SMTP server refused the data of email.	19	SMTP server refused the data of email.	20	QUIT command was refused.	21	Lost of connection.	23	Error during closing the connection.	24	No answer from server.	25	It is impossible to create data for command DATA.	26	It is impossible to read data for command DATA.	28	Error of encoding.	29	There was no attempt to send email.
Code	Description																																																						
0	Email was successfully sent.																																																						
2	It is not possible to establish connection with SMTP server.																																																						
3	SMTP server is not ready for communication.																																																						
4	Maximum length of data can't be read.																																																						
5	No appeal to send command.																																																						
6	Command can't be send.																																																						
7	Command can't be send.																																																						
8	HELO command was refused.																																																						
11	AUTH LOGIN command was refused.																																																						
12	Wrong user name.																																																						
13	Wrong password.																																																						
14	MAIL FROM command was refused.																																																						
15	RCPT TO command was refused.																																																						
16	DATA command was refused.																																																						
17	Sending of email failed.																																																						
18	SMTP server refused the data of email.																																																						
19	SMTP server refused the data of email.																																																						
20	QUIT command was refused.																																																						
21	Lost of connection.																																																						
23	Error during closing the connection.																																																						
24	No answer from server.																																																						
25	It is impossible to create data for command DATA.																																																						
26	It is impossible to read data for command DATA.																																																						
28	Error of encoding.																																																						
29	There was no attempt to send email.																																																						

[◀ back to List of values](#)

Operator

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24147	Related applications	AMF, MRS
Description			
The name of operator which to SIM card is connected.			
<i>Note: If roaming service is used then prefix "R" is added before the name of operator.</i>			

⬅ back to List of values

Group: CM-4G-GPS

Altitude

Value group	CM-4G-GPS (GPS part)	Related FW	1.8.0
Units	m		
Comm object	24266	Related applications	AMF, MRS
Description			
Actual GPS altitude.			

⬅ back to List of values

HomePosDist

Value group	CM-4G-GPS (GPS part)	Related FW	1.8.0
Units	km		
Comm object	11680	Related applications	AMF, MRS
Description			
Actual distance from home position. Home position is adjusted via setpoints Home Latitude (page 344) and Home Longitude (page 344) or by binary input GEO HOME POSITION (PAGE 553) .			

⬅ back to List of values

Latitude

Value group	CM-4G-GPS (GPS part)	Related FW	1.8.0
Units	[-]		
Comm object	24268	Related applications	AMF, MRS
Description			
Actual GPS latitude. Positions on north hemisphere have positive value, position on south hemisphere have negative value.			

⬅ back to List of values

Longitude

Value group	CM-4G-GPS (GPS part)	Related FW	1.8.0
Units	[-]		
Comm object	24267	Related applications	AMF, MRS
Description			
Actual GPS longitude. Positions on east hemisphere have positive value, position on west hemisphere have negative value.			

[back to List of values](#)

Satellites

Value group	CM-4G-GPS (GPS part)	Related FW	1.8.0
Units	[-]		
Comm object	24265	Related applications	AMF, MRS
Description			
Number of available satellites for GPS location.			

[back to List of values](#)

AirGate ID

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24309	Related applications	AMF, MRS
Description			
Identification string generated by AirGate server for the purpose of establishing communication via IntelliConfig or any other supported PC tool.			

[back to List of values](#)

AirGate Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0														
Units	[-]																
Comm object	24308	Related applications	AMF, MRS														
Description																	
Diagnostic code for AirGate connection. Helps in troubleshooting.																	
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SIM card is not inserted</td> </tr> <tr> <td>1</td> <td>Controller registered, waiting for authorization</td> </tr> <tr> <td>2</td> <td>Not possible to register, controller blacklisted</td> </tr> <tr> <td>3</td> <td>Not possible to register, server has no more capacity</td> </tr> <tr> <td>4</td> <td>Not possible to register, other reason</td> </tr> <tr> <td>5</td> <td>Controller registered and authorized</td> </tr> </tbody> </table>				Code	Description	0	SIM card is not inserted	1	Controller registered, waiting for authorization	2	Not possible to register, controller blacklisted	3	Not possible to register, server has no more capacity	4	Not possible to register, other reason	5	Controller registered and authorized
Code	Description																
0	SIM card is not inserted																
1	Controller registered, waiting for authorization																
2	Not possible to register, controller blacklisted																
3	Not possible to register, server has no more capacity																
4	Not possible to register, other reason																
5	Controller registered and authorized																

[back to List of values](#)

Connection Type

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24146	Related applications	AMF, MRS
Description			
The type of data connection.			

[back to List of values](#)

Cell Diag Code

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0										
Units	[-]												
Comm object	24288	Related applications	AMF, MRS										
Description													
Diagnostic code for the CM-GPRS or CM-4G-GPS module.													
GSM Diag Code – Common list of diagnostic codes for cellular modules													
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OK. No error.</td> </tr> <tr> <td>1</td> <td>Not possible to hang up.</td> </tr> <tr> <td>2</td> <td>Modul is switched off</td> </tr> <tr> <td>3</td> <td>Module is switched on</td> </tr> </tbody> </table>				Code	Description	0	OK. No error.	1	Not possible to hang up.	2	Modul is switched off	3	Module is switched on
Code	Description												
0	OK. No error.												
1	Not possible to hang up.												
2	Modul is switched off												
3	Module is switched on												

4	Module – error in initialization
5	Module – not possible to set the APN
6	Module – not possible to connect to GPRS network
7	Module – not possible to retrieve IP address
8	Module – not accepted DNS IP address
9	Error in modem detection
10	Error in initialization of analog modem
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking
12	No GSM signal
13	Not possible to read the SIM card parameters
14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card
15	Unknown modem
16	Bad answer to complement initialization string
17	Not possible to read GSM signal strength
18	CDMA modem not detected
19	No CDMA network
20	Unsuccessful registration to CDMA network
21	SIMCom/ME909s: can't read FW version
22	SIMCom: GSM signal not found
23	SIMCom: can't detect module speed
24	SIMCom: HW reset issued
25	PUK is required
26	Error of SIM card detected
27	ME909s: can't set module bps
28	ME909s: can't set link configuration
29	ME909s: can't do power-off
30	ME909s: can't do power-on
31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued
35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration

41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

[back to List of values](#)

Cell ErrorRate

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	%		
Comm object	24300	Related applications	AMF, MRS
Description			
This value contains information about relative quality of the cellular signal received by the CM-GPRS module or by CM-4G-GPS module. The lower value means higher quality of signal.			

[back to List of values](#)

Cell Signal Lev

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	%		
Comm object	24302	Related applications	AMF, MRS
Description			
This value contains information about relative strength of the cellular signal received by the CM-GPRS module or by CM-4G-GPS module. It is a relative value helping to find the best signal and for troubleshooting cases.			

[back to List of values](#)

Cell Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24290	Related applications	AMF, MRS
Description			
The text of this value represents the status of the GSM modem.			

[back to List of values](#)

Last Email Result

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0																																																				
Units	[-]																																																						
Comm object	24307	Related applications	AMF, MRS																																																				
Description																																																							
Result of last email, which was sent by controller.																																																							
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>0</td><td>Email was successfully sent.</td></tr> <tr><td>2</td><td>It is not possible to establish connection with SMTP server.</td></tr> <tr><td>3</td><td>SMTP server is not ready for communication.</td></tr> <tr><td>4</td><td>Maximum length of data can't be read.</td></tr> <tr><td>5</td><td>No appeal to send command.</td></tr> <tr><td>6</td><td>Command can't be send.</td></tr> <tr><td>7</td><td>Command can't be send.</td></tr> <tr><td>8</td><td>HELO command was refused.</td></tr> <tr><td>11</td><td>AUTH LOGIN command was refused.</td></tr> <tr><td>12</td><td>Wrong user name.</td></tr> <tr><td>13</td><td>Wrong password.</td></tr> <tr><td>14</td><td>MAIL FROM command was refused.</td></tr> <tr><td>15</td><td>RCPT TO command was refused.</td></tr> <tr><td>16</td><td>DATA command was refused.</td></tr> <tr><td>17</td><td>Sending of email failed.</td></tr> <tr><td>18</td><td>SMTP server refused the data of email.</td></tr> <tr><td>19</td><td>SMTP server refused the data of email.</td></tr> <tr><td>20</td><td>QUIT command was refused.</td></tr> <tr><td>21</td><td>Lost of connection.</td></tr> <tr><td>23</td><td>Error during closing the connection.</td></tr> <tr><td>24</td><td>No answer from server.</td></tr> <tr><td>25</td><td>It is impossible to create data for command DATA.</td></tr> <tr><td>26</td><td>It is impossible to read data for command DATA.</td></tr> <tr><td>28</td><td>Error of encoding.</td></tr> <tr><td>29</td><td>There was no attempt to send email.</td></tr> </tbody> </table>				Code	Description	0	Email was successfully sent.	2	It is not possible to establish connection with SMTP server.	3	SMTP server is not ready for communication.	4	Maximum length of data can't be read.	5	No appeal to send command.	6	Command can't be send.	7	Command can't be send.	8	HELO command was refused.	11	AUTH LOGIN command was refused.	12	Wrong user name.	13	Wrong password.	14	MAIL FROM command was refused.	15	RCPT TO command was refused.	16	DATA command was refused.	17	Sending of email failed.	18	SMTP server refused the data of email.	19	SMTP server refused the data of email.	20	QUIT command was refused.	21	Lost of connection.	23	Error during closing the connection.	24	No answer from server.	25	It is impossible to create data for command DATA.	26	It is impossible to read data for command DATA.	28	Error of encoding.	29	There was no attempt to send email.
Code	Description																																																						
0	Email was successfully sent.																																																						
2	It is not possible to establish connection with SMTP server.																																																						
3	SMTP server is not ready for communication.																																																						
4	Maximum length of data can't be read.																																																						
5	No appeal to send command.																																																						
6	Command can't be send.																																																						
7	Command can't be send.																																																						
8	HELO command was refused.																																																						
11	AUTH LOGIN command was refused.																																																						
12	Wrong user name.																																																						
13	Wrong password.																																																						
14	MAIL FROM command was refused.																																																						
15	RCPT TO command was refused.																																																						
16	DATA command was refused.																																																						
17	Sending of email failed.																																																						
18	SMTP server refused the data of email.																																																						
19	SMTP server refused the data of email.																																																						
20	QUIT command was refused.																																																						
21	Lost of connection.																																																						
23	Error during closing the connection.																																																						
24	No answer from server.																																																						
25	It is impossible to create data for command DATA.																																																						
26	It is impossible to read data for command DATA.																																																						
28	Error of encoding.																																																						
29	There was no attempt to send email.																																																						

[◀ back to List of values](#)

Operator

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	1.8.0
Units	[-]		
Comm object	24147	Related applications	AMF, MRS
Description			
The name of operator which to SIM card is connected.			
<i>Note: If roaming service is used then prefix "R" is added before the name of operator.</i>			

[back to List of values](#)

Group: CM-Ethernet

AirGate Status

Value group	CM-Ethernet	Related FW	1.8.0														
Units	[-]																
Comm object	24344	Related applications	AMF, MRS														
Description																	
Diagnostic code for AirGate connection. Helps in troubleshooting.																	
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Ethernet cable is disconnected</td> </tr> <tr> <td>1</td> <td>Controller registered, waiting for authorization</td> </tr> <tr> <td>2</td> <td>Not possible to register, controller blacklisted</td> </tr> <tr> <td>3</td> <td>Not possible to register, server has no more capacity</td> </tr> <tr> <td>4</td> <td>Not possible to register, other reason</td> </tr> <tr> <td>5</td> <td>Controller registered and authorized</td> </tr> </tbody> </table>				Code	Description	0	Ethernet cable is disconnected	1	Controller registered, waiting for authorization	2	Not possible to register, controller blacklisted	3	Not possible to register, server has no more capacity	4	Not possible to register, other reason	5	Controller registered and authorized
Code	Description																
0	Ethernet cable is disconnected																
1	Controller registered, waiting for authorization																
2	Not possible to register, controller blacklisted																
3	Not possible to register, server has no more capacity																
4	Not possible to register, other reason																
5	Controller registered and authorized																

[back to List of values](#)

AirGate ID

Value group	CM-EthernetInfo	Related FW	1.8.0
Units	[-]		
Comm object	24345	Related applications	AMF, MRS
Description			
Identification string generated by AirGate server for the purpose of establishing communication via IntelliConfig or any other supported PC tool.			

[back to List of values](#)

Current DNS

Value group	CM-Ethernet	Related FW	1.8.0
Units	[-]		
Comm object	24181	Related applications	AMF, MRS
Description			
Current domain name server.			

[back to List of values](#)

ETH Interface Status

Value group	CM-Ethernet	Related FW	1.8.0
Units	[-]		
Comm object	24180	Related applications	AMF, MRS
Description			
Current status of ethernet communication.			

[back to List of values](#)

Current Gateway

Value group	CM-Ethernet	Related FW	1.8.0
Units	[-]		
Comm object	24182	Related applications	AMF, MRS
Description			
Current gateway address.			

[back to List of values](#)

Current IP Address

Value group	CM-Ethernet	Related FW	1.8.0
Units	[-]		
Comm object	24184	Related applications	AMF, MRS
Description			
Current IP address of the controller.			

[back to List of values](#)

Last Email Result

Value group	CM-Ethernet	Related FW	1.8.0																																						
Units	[-]																																								
Comm object	24332	Related applications	AMF, MRS																																						
Description																																									
Result of last email, which was sent by controller.																																									
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Email was successfully sent.</td> </tr> <tr> <td>2</td> <td>It is not possible to establish connection with SMTP server.</td> </tr> <tr> <td>3</td> <td>SMTP server is not ready for communication.</td> </tr> <tr> <td>8</td> <td>HELO command was refused.</td> </tr> <tr> <td>9</td> <td>EHLO command was refused.</td> </tr> <tr> <td>11</td> <td>AUTH LOGIN command was refused.</td> </tr> <tr> <td>12</td> <td>Wrong user name.</td> </tr> <tr> <td>13</td> <td>Wrong password.</td> </tr> <tr> <td>14</td> <td>MAIL FROM command was refused.</td> </tr> <tr> <td>15</td> <td>RCPT TO command was refused.</td> </tr> <tr> <td>16</td> <td>DATA command was refused.</td> </tr> <tr> <td>17</td> <td>Sending of email failed.</td> </tr> <tr> <td>20</td> <td>QUIT command was refused.</td> </tr> <tr> <td>25</td> <td>It is impossible to create data for command DATA.</td> </tr> <tr> <td>26</td> <td>It is impossible to read data for command DATA.</td> </tr> <tr> <td>27</td> <td>Email address can't be read.</td> </tr> <tr> <td>30</td> <td>SMTP server address translation error (from DNS server).</td> </tr> <tr> <td>31</td> <td>Error reading email content data (24327).</td> </tr> </tbody> </table>				Code	Description	0	Email was successfully sent.	2	It is not possible to establish connection with SMTP server.	3	SMTP server is not ready for communication.	8	HELO command was refused.	9	EHLO command was refused.	11	AUTH LOGIN command was refused.	12	Wrong user name.	13	Wrong password.	14	MAIL FROM command was refused.	15	RCPT TO command was refused.	16	DATA command was refused.	17	Sending of email failed.	20	QUIT command was refused.	25	It is impossible to create data for command DATA.	26	It is impossible to read data for command DATA.	27	Email address can't be read.	30	SMTP server address translation error (from DNS server).	31	Error reading email content data (24327).
Code	Description																																								
0	Email was successfully sent.																																								
2	It is not possible to establish connection with SMTP server.																																								
3	SMTP server is not ready for communication.																																								
8	HELO command was refused.																																								
9	EHLO command was refused.																																								
11	AUTH LOGIN command was refused.																																								
12	Wrong user name.																																								
13	Wrong password.																																								
14	MAIL FROM command was refused.																																								
15	RCPT TO command was refused.																																								
16	DATA command was refused.																																								
17	Sending of email failed.																																								
20	QUIT command was refused.																																								
25	It is impossible to create data for command DATA.																																								
26	It is impossible to read data for command DATA.																																								
27	Email address can't be read.																																								
30	SMTP server address translation error (from DNS server).																																								
31	Error reading email content data (24327).																																								

[back to List of values](#)

MAC Address

Value group	CM-Ethernet	Related FW	1.8.0
Units	[-]		
Comm object	24333	Related applications	AMF, MRS
Description			
Current MAC address of the controller ethernet interface.			

[back to List of values](#)

Current Subnet Mask

Value group	CM-Ethernet	Related FW	1.8.0
Units	[-]		
Comm object	24183	Related applications	AMF, MRS
Description			
Current subnet mask.			

[◀ back to List of values](#)

Group: Date/Time

Time

Value group	Date/Time	Related FW	1.8.0
Units	HH:MM:SS		
Comm object	24554	Related applications	AMF, MRS
Description			
Shows setup time.			

[◀ back to List of values](#)

Date

Value group	Date/Time	Related FW	1.8.0
Units	DD.MM.YYYY		
Comm object	24553	Related applications	AMF, MRS
Description			
Shows setup date.			

[◀ back to List of values](#)

Group: Plug-In I/O

EM BIO A

Value group	Plug-In I/O	Related FW	1.8.0
Units	[-]		
Comm object	14291	Related applications	AMF, MRS
Description			
Binary inputs from extension module in slot A.			

[◀ back to List of values](#)

EM BIO B

Value group	Plug-In I/O	Related FW	1.8.0
Units	[-]		
Comm object	14292	Related applications	AMF, MRS
Description			
Binary inputs from extension module in slot B.			

[back to List of values](#)

Group: PLC

PLC Resource 1

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10504	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 2

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10505	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 3

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10506	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 4

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10507	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 5

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10508	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 6

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10509	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 7

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10510	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 8

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10511	Related applications	AMF, MRS
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC-BOUT 1

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10424	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 2

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10425	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 3

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10426	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 4

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10427	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 5

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10428	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 6

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10429	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 7

Value group	PLC	Related FW	1.8.0
Units	[-]		
Comm object	10430	Related applications	AMF, MRS
Description			
State of binary outputs of PLC.			

 [back to List of values](#)

8.1.3 Logical binary inputs

What Logical binary inputs are:

Logical binary inputs are inputs for binary values and functions.

Alphabetical groups of Logical binary inputs

LBI: A	522
LBI: B	523
LBI: C	547
LBI: D	549
LBI: E	550
LBI: F	551
LBI: G	552
LBI: H	554
LBI: I	554
LBI: L	555
LBI: M	556
LBI: N	558
LBI: O	558
LBI: R	559
LBI: S	562





For full list of Logical binary inputs go to the chapter **Logical binary inputs alphabetically (page 521)**.

Logical binary inputs alphabetically

Access Lock	522	BIN Protection 32	539	Lang Selection 1	555
Alternate Config 2	522	BIN Protection 33	539	Lang Selection 2	555
Alternate Config 3	522	BIN Protection 34	540	Lang Selection 3	556
AMF Function	522	BIN Protection 35	540	Mains Fail Block	556
AMF Start Block	523	BIN Protection 36	541	MCB Button	556
Battery Charger	523	BIN Protection 37	541	MCB Feedback	557
BIN Protection 1	523	BIN Protection 38	542	Not Used	558
BIN Protection 02	524	BIN Protection 39	542	Oil Pressure	558
BIN Protection 03	524	BIN Protection 40	543	Protection Enable	558
BIN Protection 04	525	BIN Protection 41	543	Pulse Counter 1	559
BIN Protection 05	525	BIN Protection 42	544	Pulse Counter 2	559
BIN Protection 06	526	BIN Protection 43	544	Regeneration Inhib	559
BIN Protection 07	526	BIN Protection 44	545	Remote AUTO	560
BIN Protection 08	527	BIN Protection 45	545	Remote Ctrl Lock	560
BIN Protection 09	527	BIN Protection 46	546	Remote MAN	560
BIN Protection 10	528	BIN Protection 47	546	Remote OFF	561
BIN Protection 11	528	BIN Protection 48	547	Remote Start/Stop	561
BIN Protection 12	529	Choke Inhibit	547	Rem TEST On Load	562
BIN Protection 13	529	Coolant Temp	548	Remote TEST	562
BIN Protection 14	530	Dark Mode	549	Sd Override	562
BIN Protection 15	530	Dual Swap Gen-sets	549	Start Button	562
BIN Protection 16	531	Dual Top Priority	549	Stop Button	563
BIN Protection 17	531	ECU Key Switch	550		
BIN Protection 18	532	ECU Speed Down	550		
BIN Protection 19	532	ECU Speed Up	550		
BIN Protection 20	533	Emergency MAN	550		
BIN Protection 21	533	Emergency Stop	551		
BIN Protection 22	534	Fault Reset Button	551		
BIN Protection 23	534	Force Regeneration	551		
BIN Protection 24	535	Fuel Level	552		
BIN Protection 25	535	Fuel Pump On/Off	552		
BIN Protection 26	536	GCB Button	552		
BIN Protection 27	536	GCB Feedback	553		
BIN Protection 28	537	Geo Home Position	553		
BIN Protection 29	537	Geo-Fencing Enabled	554		
BIN Protection 30	538	Horn Reset Button	554		
BIN Protection 31	538	Idle Speed	554		

LBI: A

Access Lock

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1		
Description			
<p>When this input is closed, no setpoints can be adjusted from controller's front panel and controller mode (OFF / MAN / AUTO / TEST) cannot be changed.</p> <p>Note: Access Lock does not protect setpoints and mode changing from IntelliConfig. To avoid unqualified changes the selected setpoints have to be password protected.</p> <p>Also the buttons Fault Reset  and Horn Reset  are not blocked at all and buttons Start  and Stop  in MAN mode are not blocked.</p>			

⬅ back to Logical binary inputs alphabetically

Alternate Config 2

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	859		
Description			
<p>This binary input can switch between configuration sets. When this binary input is active, setpoints in Alternate Config group are switched to the second set (setpoints with number 2).</p>			

⬅ back to Logical binary inputs alphabetically

Alternate Config 3

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	860		
Description			
<p>This binary input can switch between configuration sets. When this binary input is active, setpoints in Alternate Config group are switched to the third set (setpoints with number 3).</p>			

⬅ back to Logical binary inputs alphabetically

AMF Function

Related FW	1.8.0	Related applications	AMF
Comm object	692		
Description			
<p>This binary input can switch controller function between AMF and MRS.</p> <p>Note: Binary input "AMF function" has higher priority than the setpoint <i>Operation Mode</i> (page 197) in Basic settings.</p>			

⬅ back to Logical binary inputs alphabetically

AMF Start Block

Related FW	1.8.0	Related applications	AMF
Comm object	211		
Description			
This binary input can allow or block the AMF start. In case of running gen-set in AUTO mode gen-set goes to cooling procedure and stops.			

⬅ back to Logical binary inputs alphabetically

LBI: B

Battery Charger

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	623		
Description			
When binary input is active and his delay Battery Charger Fail Delay (page 235) is out of time than alarm Battery Charger Fail (page 676) is activated, written into history log and logical binary output AL BATTERY CHARGER (PAGE 569) is activated.			

⬅ back to Logical binary inputs alphabetically

BIN Protection 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9999		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrm	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

⬅ back to Logical binary inputs alphabetically

BIN Protection 02

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9998		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 03

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9997		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 04

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9996		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 05

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9995		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 06

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9994		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 07

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9993		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 08

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9992		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 09

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9991		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 10

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9990		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 11

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9989		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 12

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9988		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 13

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9987		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 14

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9986		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 15

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9985		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 16

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9984		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 17

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9983		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 18

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9982		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 19

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9981		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 20

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9980		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 21

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9979		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 22

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9978		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 23

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9977		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 24

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9976		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 25

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9975		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 26

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9974		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 27

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9973		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 28

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9972		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 29

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9971		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 30

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9970		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 31

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9969		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 32

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9968		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 33

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9967		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 34

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9966		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 35

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9965		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 36

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9964		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 37

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9963		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 38

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9962		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 39

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9961		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 40

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9960		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 41

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9959		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 42

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9958		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 43

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9957		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 44

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9956		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 45

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9955		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 46

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9954		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 47

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9953		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 48


Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9952		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

[◀ back to Logical binary inputs alphabetically](#)

LBI: C

Choke Inhibit

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	946		
Description			
Logical binary input CHOKE INHIBIT prevent Choke functionality when logical binary output CHOKE (PAGE 593) is activated. If CHOKE INHIBIT is activated when CHOKE LBO is active, CHOKE LBO is deactivated immediately and vice versa if LBI CHOKE INHIBIT is deactivated and LBO CHOKE should be active then is activated.			

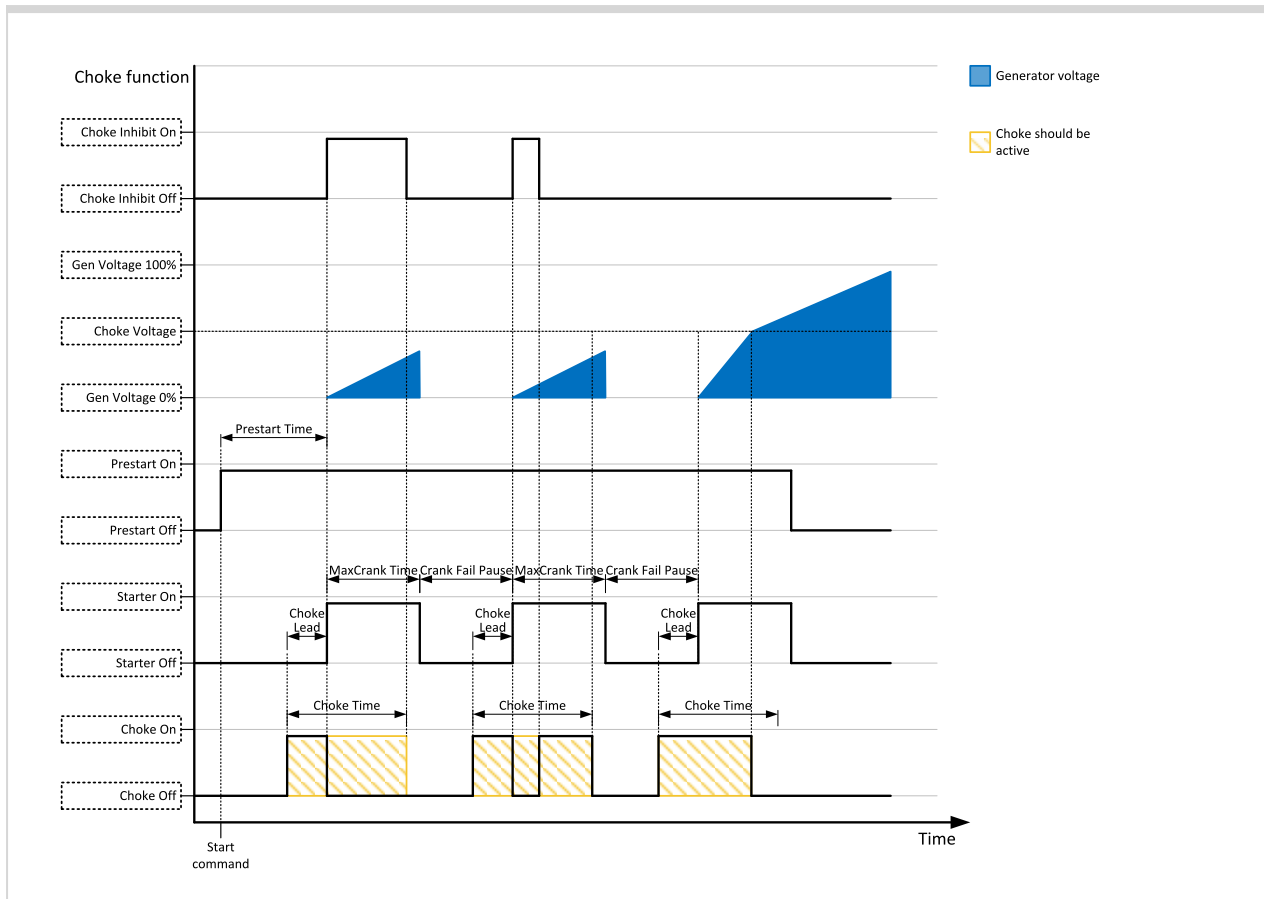

⬅ back to Logical binary inputs alphabetically

Coolant Temp

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	625		
Description			
Binary input for COOLANT TEMP (PAGE 654) protection.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

⬅ back to Logical binary inputs alphabetically

LBI: D

Dark Mode

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	930		
Description			
<p>This binary input activates function of dark mode. It means that backlight of display is turn of (information on controller screens are not affected) and LEDs (Mains, Generator, Load, Breakers, etc.) are turn off (LEDs don't react on normal condition of their activation and deactivation).</p> <p>Note: After deactivation of dark mode, backlight of display is turned on and than behaves normally.</p> <p>Note: After deactivation of dark mode, Front Face status LEDs are turned on due to current situation of gen-set.</p>			

⬅ back to Logical binary inputs alphabetically

Dual Swap Gen-sets

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	947		
Description			
<p>This LBI enables or disables swapping of gen-sets on load in dual operation. This LBI has higher priority then setpoint Swap Gen-sets (page 262). This LBI is accepted only in Master controller.</p>			

⬅ back to Logical binary inputs alphabetically

Dual Top Priority

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	954		
Description			
<p>This LBI defines, which gen-set has higher priority in dual operation mode. If this LBI is active on one gen-set, this gen-set is used in dual operation function (running hours values are not used to decide, which gen-set should start).</p> <p>Setpoint Swap Gen-sets (page 262) or LBI DUAL SWAP GEN-SETS (PAGE 549) has higher priority than this LBI.</p> <p>Example: Engine 1 is running. LBI Top Priority is activated on engine 2. If swapping of gen-sets is disabled, nothing happens. If swapping of gen-sets is enabled, engine 2 is started and engine 1 is stopped.</p> <p>Note: If this LBI is active on both gen-sets, the behavior is not changed. Decision is based on running hours values.</p>			

⬅ back to Logical binary inputs alphabetically

LBI: E

ECU Key Switch

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	951		
Description			
<p>This binary input is used to switch on ECU POWER RELAY (PAGE 596), when engine start is not requested. It is intended to enable engine values reading, when engine doesn't run.</p> <p>When this binary input is active, binary output ECU POWER RELAY (PAGE 596) is active too.</p> <p>When this binary input is inactive, function of ECU POWER RELAY (PAGE 596) is not affected.</p>			

◀ back to Logical binary inputs alphabetically

ECU Speed Down

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	164		
Description			
<p>This binary input is used to set the setpoint ECU Speed Adjustment (page 239) by binary inputs. When the LBI is activated the setpoint is decreased by 2%.</p>			

◀ back to Logical binary inputs alphabetically

ECU Speed Up

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	165		
Description			
<p>This binary input is used to set the setpoint ECU Speed Adjustment (page 239) by binary inputs. When the LBI is activated the setpoint is increase by 2%.</p>			

◀ back to Logical binary inputs alphabetically

Emergency MAN

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	45		
Description			
<p>This input is designed to allow the gen-set or breakers to be controlled externally, not by the controller. This feature can be useful in case of or in case of some failure, which disables the gen-set or breakers to be controlled by the controller, but the gen-set itself is operational.</p> <p>The controller behaves in the following way:</p> <ul style="list-style-type: none"> ▶ Shows the text EmergMan in the engine status on the main screen. ▶ Stops all functions regarding the gen-set or breaker control, deactivates all outputs related to it. ▶ Stop Fail alarm is not being evaluated and stop solenoid is not activated if nonzero speed is detected. ▶ When the input is deactivated, the controller takes control according to the situation in the moment of deactivation, i.e. the gen-set remains running loaded if it was running and GCB was closed in the moment the input was deactivated. 			

◀ back to Logical binary inputs alphabetically


Emergency Stop

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	40		
Description			
The shutdown procedure will start immediately when this input is activated. Input is inverted (NC = normally closed) in default configuration.			
<p>Note: <i>In case of controller hardware or software fail, safe stop of the engine doesn't have to be ensured. To back-up the Emergency Stop function it is recommended to connect separate circuit for disconnection of Fuel Solenoid and Starter signals.</i></p>			
For more detail see chapter recommended wiring.			

🔍 back to Logical binary inputs alphabetically

LBI: F

Fault Reset Button

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	191		
Description			
Binary input has the same function as Fault Reset button  on the IntelliLite front panel.			

🔍 back to Logical binary inputs alphabetically

Frequency Select

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1815		
Description			
The Frequency select output is opened when Nominal Frequency (Frequency Settings) is equal to 50Hz and closed when Nominal Frequency (Frequency Settings) is equal to 60Hz.			

🔍 back to Logical binary outputs alphabetically

Force Regeneration

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	680		
Description			
When this binary input is activated, the controller send request for force regeneration of DPF (diesel particulate filter) to ECU.			
<p>Note: <i>ECU with Tier IV support is required for proper functionality.</i></p>			

🔍 back to Logical binary inputs alphabetically

Fuel Level

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	626		
Description			
Binary input for FUEL LEVEL (PAGE 655) protection.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
Wrm	Binary input is used for warning protection only.		
BOC	Binary input is used for BOC (Breaker Open and Cooling) protection.		
Sd	Binary input is used for shutdown protection.		

⬅ back to Logical binary inputs alphabetically

Fuel Pump On/Off

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	694		
Description			
This binary input is used for manual control of binary output FUEL PUMP (PAGE 598).			
<i>Note: This binary input is basically designed for ON and OFF switch (switch with arrestment in these positions) because controller reacts to rising and falling edge of signal in this input.</i>			
IMPORTANT: When binary input FUEL PUMP ON/OFF (PAGE 552) is configured then binary output FUEL PUMP (PAGE 598) is control by this binary input. Setpoints Fuel Pump On (page 231) and Fuel Pump Off (page 232) are not evaluated!			
IMPORTANT: It is necessary to configure analog input FUEL LEVEL (PAGE 655) for proper function of this binary input.			

⬅ back to Logical binary inputs alphabetically

LBI: G

GCB Button

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	193		
Description			
Binary input has the same function as GCB button  on the IntelliLite front panel. It is evaluated in MAN mode only.			

⬅ back to Logical binary inputs alphabetically

GCB Feedback

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	63		

Description

Use this input for indication whether the generator circuit breaker is open or closed.

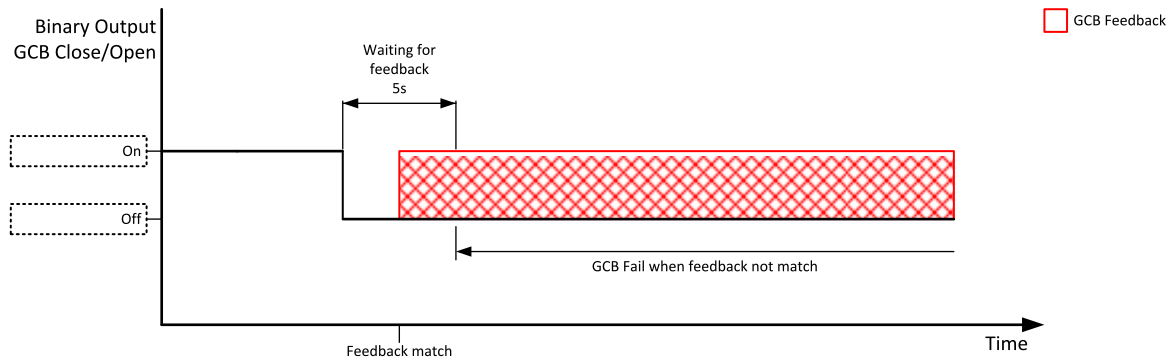


Image 9.133 GCB Feedback 1

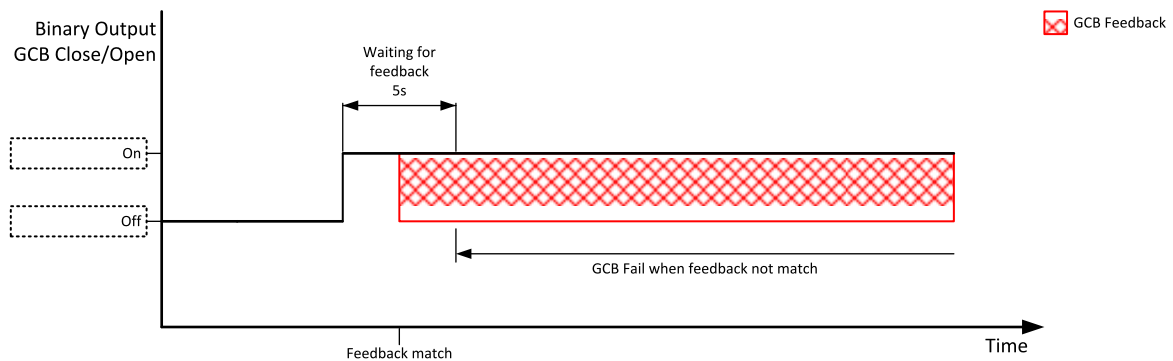


Image 9.134 GCB Feedback 2

Note: IntelliLite controller can work even without breaker feedbacks, in this case do not configure the feedback to binary inputs.

🔍 back to Logical binary inputs alphabetically

Geo Home Position

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	219		

Description

This binary input can be used to adjust home position of gen-set. In case that binary input is active, setpoints **Home Latitude (page 344)** and **Home Longitude (page 344)** are adjusted automatically from actual coordinates from GPS signal.

Note: Input has to be activated for at least 2 seconds.

🔍 back to Logical binary inputs alphabetically


Geo-Fencing Enabled

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	218		
Description			
This binary input enables or disables Fence 1 Protection (page 347) and Fence 2 Protection (page 348) if Geo-Fencing (page 346) is adjusted to value "LBI Enable".			

[▲ back to Logical binary inputs alphabetically](#)

LBI: H

Horn Reset Button

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	192		
Description			
Binary input has the same function as Horn reset  button on the IntelliLite front panel.			

[▲ back to Logical binary inputs alphabetically](#)

LBI: I

Idle Speed

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	624		
Description			
This binary input changes cooling speed from nominal to idle.			

[▲ back to Logical binary inputs alphabetically](#)

LBI: L

Lang Selection 1

Related FW	1.8.0	Related applications	AMF, MRS																		
Comm object	107																				
Description																					
Use this binary input with binary input LANG SELECTION 2 (PAGE 555) and LANG SELECTION 3 (PAGE 556) to choose required language of controller. The system is based on binary numbers.																					
<table border="1"> <thead> <tr> <th>Binary input</th> <th>Binary number</th> <th>Active language</th> </tr> </thead> <tbody> <tr> <td>Language Selection 1 is active</td> <td>1</td> <td>First language (English)</td> </tr> <tr> <td>LANG SELECTION 2 (PAGE 555) is active</td> <td>2</td> <td>Second language</td> </tr> <tr> <td>Language Selection 1 and LANG SELECTION 2 (PAGE 555) are active</td> <td>3</td> <td>Third language</td> </tr> <tr> <td>LANG SELECTION 3 (PAGE 556) is active</td> <td>4</td> <td>Fourth language</td> </tr> <tr> <td>Language Selection 1 and LANG SELECTION 3 (PAGE 556) are active</td> <td>5</td> <td>Fifth language</td> </tr> </tbody> </table>				Binary input	Binary number	Active language	Language Selection 1 is active	1	First language (English)	LANG SELECTION 2 (PAGE 555) is active	2	Second language	Language Selection 1 and LANG SELECTION 2 (PAGE 555) are active	3	Third language	LANG SELECTION 3 (PAGE 556) is active	4	Fourth language	Language Selection 1 and LANG SELECTION 3 (PAGE 556) are active	5	Fifth language
Binary input	Binary number	Active language																			
Language Selection 1 is active	1	First language (English)																			
LANG SELECTION 2 (PAGE 555) is active	2	Second language																			
Language Selection 1 and LANG SELECTION 2 (PAGE 555) are active	3	Third language																			
LANG SELECTION 3 (PAGE 556) is active	4	Fourth language																			
Language Selection 1 and LANG SELECTION 3 (PAGE 556) are active	5	Fifth language																			

[◀ back to Logical binary inputs alphabetically](#)

Lang Selection 2

Related FW	1.8.0	Related applications	AMF, MRS																		
Comm object	108																				
Description																					
Use this binary input with binary input LANG SELECTION 1 (PAGE 555) and LANG SELECTION 3 (PAGE 556) to choose required language of controller. The system is based on binary numbers.																					
<table border="1"> <thead> <tr> <th>Binary input</th> <th>Binary number</th> <th>Active language</th> </tr> </thead> <tbody> <tr> <td>LANG SELECTION 1 (PAGE 555) is active</td> <td>1</td> <td>First language (English)</td> </tr> <tr> <td>Lang Selection 2 is active</td> <td>2</td> <td>Second language</td> </tr> <tr> <td>LANG SELECTION 1 (PAGE 555) and Lang Selection 2 are active</td> <td>3</td> <td>Third language</td> </tr> <tr> <td>LANG SELECTION 3 (PAGE 556) is active</td> <td>4</td> <td>Fourth language</td> </tr> <tr> <td>LANG SELECTION 1 (PAGE 555) and LANG SELECTION 3 (PAGE 556) are active</td> <td>5</td> <td>Fifth language</td> </tr> </tbody> </table>				Binary input	Binary number	Active language	LANG SELECTION 1 (PAGE 555) is active	1	First language (English)	Lang Selection 2 is active	2	Second language	LANG SELECTION 1 (PAGE 555) and Lang Selection 2 are active	3	Third language	LANG SELECTION 3 (PAGE 556) is active	4	Fourth language	LANG SELECTION 1 (PAGE 555) and LANG SELECTION 3 (PAGE 556) are active	5	Fifth language
Binary input	Binary number	Active language																			
LANG SELECTION 1 (PAGE 555) is active	1	First language (English)																			
Lang Selection 2 is active	2	Second language																			
LANG SELECTION 1 (PAGE 555) and Lang Selection 2 are active	3	Third language																			
LANG SELECTION 3 (PAGE 556) is active	4	Fourth language																			
LANG SELECTION 1 (PAGE 555) and LANG SELECTION 3 (PAGE 556) are active	5	Fifth language																			

[◀ back to Logical binary inputs alphabetically](#)

Lang Selection 3

Related FW	1.8.0	Related applications	AMF, MRS																		
Comm object	109																				
Description																					
Use this binary input with binary input LANG SELECTION 1 (PAGE 555) and LANG SELECTION 2 (PAGE 555) to choose required language of controller. The system is based on binary numbers.																					
<table border="1"> <thead> <tr> <th>Binary input</th> <th>Binary number</th> <th>Active language</th> </tr> </thead> <tbody> <tr> <td>Language Selection 1 is active</td> <td>1</td> <td>First language (English)</td> </tr> <tr> <td>LANG SELECTION 2 (PAGE 555) is active</td> <td>2</td> <td>Second language</td> </tr> <tr> <td>Language Selection 1 and LANG SELECTION 2 (PAGE 555) are active</td> <td>3</td> <td>Third language</td> </tr> <tr> <td>Lang Selection 3 (page 1) is active</td> <td>4</td> <td>Fourth language</td> </tr> <tr> <td>LANG SELECTION 1 (PAGE 555) and Lang Selection 3 (page 1) are active</td> <td>5</td> <td>Fifth language</td> </tr> </tbody> </table>				Binary input	Binary number	Active language	Language Selection 1 is active	1	First language (English)	LANG SELECTION 2 (PAGE 555) is active	2	Second language	Language Selection 1 and LANG SELECTION 2 (PAGE 555) are active	3	Third language	Lang Selection 3 (page 1) is active	4	Fourth language	LANG SELECTION 1 (PAGE 555) and Lang Selection 3 (page 1) are active	5	Fifth language
Binary input	Binary number	Active language																			
Language Selection 1 is active	1	First language (English)																			
LANG SELECTION 2 (PAGE 555) is active	2	Second language																			
Language Selection 1 and LANG SELECTION 2 (PAGE 555) are active	3	Third language																			
Lang Selection 3 (page 1) is active	4	Fourth language																			
LANG SELECTION 1 (PAGE 555) and Lang Selection 3 (page 1) are active	5	Fifth language																			

⬅ back to Logical binary inputs alphabetically

LBI: M

Mains Fail Block

Related FW	1.8.0	Related applications	AMF
Comm object	622		
Description			
If the input is closed, the automatic start of the gen-set at Mains failure is blocked. In case of running gen-set in AUTO mode, timer Mains Return Delay (page 253) is started and when it elapses GCB is opened, gen-set goes to cooling procedure and stops. When GCB is opened after Transfer Delay (page 254) the MCB is closed.			
<i>Note: This input simulates healthy Mains.</i>			

⬅ back to Logical binary inputs alphabetically

MCB Button

Related FW	1.8.0	Related applications	AMF
Comm object	194		
Description			
This binary input has the same function as MCB button <input type="checkbox"/> on the IntelliLite front panel. It is evaluated in MAN mode only.			

⬅ back to Logical binary inputs alphabetically

MCB Feedback

Related FW	1.8.0	Related applications	AMF
Comm object	65		

Description

Use this input for indication whether the mains circuit breaker is open or closed.

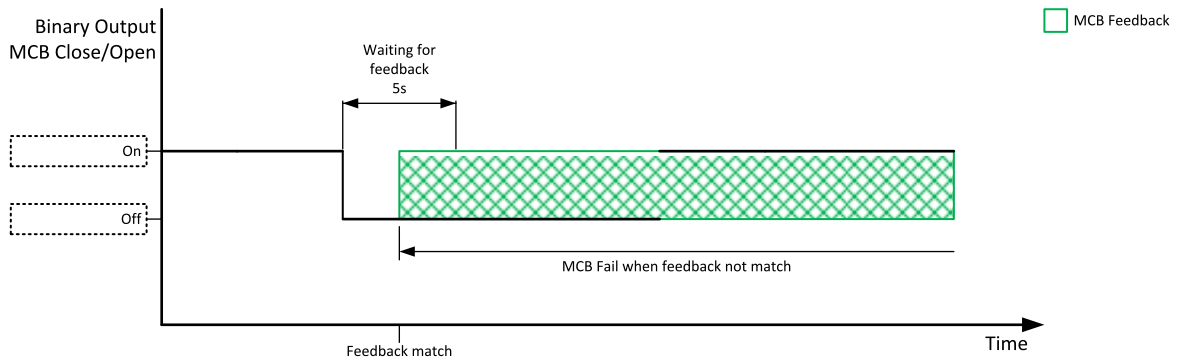


Image 9.135 MCB Feedback 1

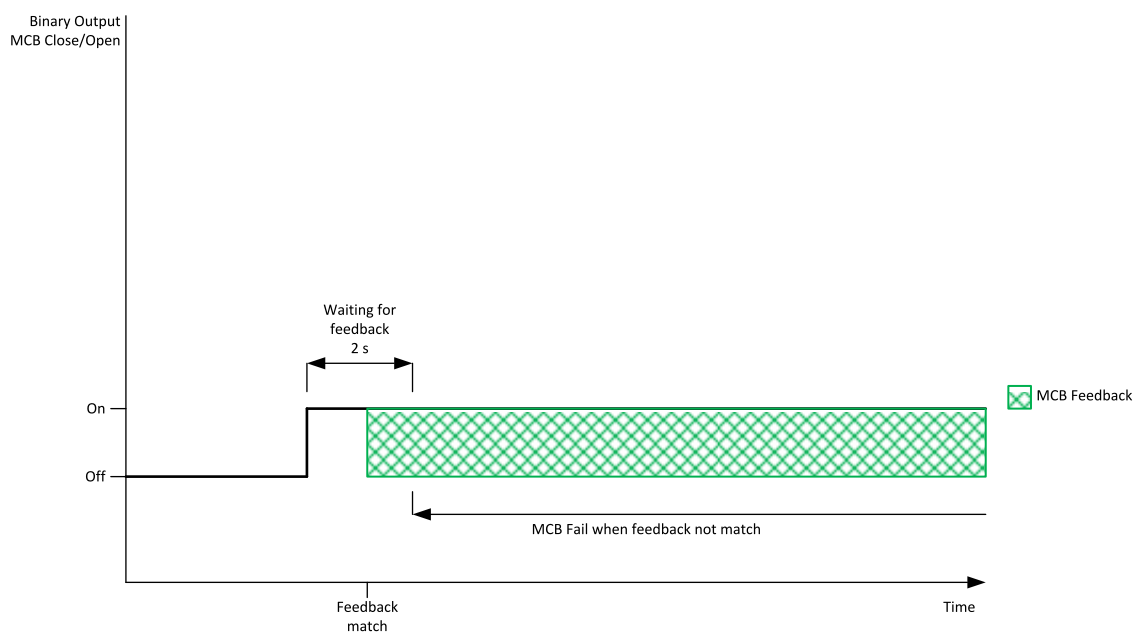


Image 9.136 MCB Feedback 2

Note: IntelliLite controller can work even without breaker feedbacks, in this case do not configure the feedback to binary inputs.

 **back to Logical binary inputs alphabetically**

LBI: N

Not Used

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	184		
Description			
Binary input has no function. Use this configuration when binary input is not used.			

[⬅ back to Logical binary inputs alphabetically](#)

LBI: O

Oil Pressure

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	43		
Description			
Binary input for OIL PRESSURE (PAGE 657) protection.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
Wrm	Binary input is used for warning protection only.		
Sd	Binary input is used for shutdown protection.		
IMPORTANT: This binary input is also used for evaluating engine running condition.			
Example: Normally close connection - when LBI is closed then oil pressure is OK and is higher than starting oil pressure.			
Note: In case that you want to use binary input of oil pressure sensor just for protection please use one of the BIN PROTECTION 1 (PAGE 523) .			

[⬅ back to Logical binary inputs alphabetically](#)

LBI: P

Protection Enable

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	920		
Description			
This logic binary input enables or disables protections adjusted as LBI Enable.			

[⬅ back to Logical binary inputs alphabetically](#)

Pulse Counter 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	87		
Description			
<p>This is the input of the Pulse Counter 1 function. The module counts pulses at the input and if the input pulses counter reaches value given by the setpoint Conversion Coefficient Pulse 1 (page 236) the counter value Pulse Counter 1 (page 493) is increased by 1 and input pulses counter is reset to 0. Both counter value and input pulses counter are stored in the nonvolatile memory.</p>			

🔍 back to Logical binary inputs alphabetically

Pulse Counter 2

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	88		
Description			
<p>This is the input of the Pulse Counter 2 function. The module counts pulses at the input and if the input pulses counter reaches value given by the setpoint Conversion Coefficient Pulse 2 (page 236) the counter value Pulse Counter 2 (page 493) is increased by 0,1 and input pulses counter is reset to 0. Both counter value and input pulses counter are stored in the nonvolatile memory.</p>			

🔍 back to Logical binary inputs alphabetically

LBI: R

Regeneration Inhib

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	679		
Description			
<p>When this binary input is activated, the controller sends request to inhibit regeneration of DPF (diesel particulate filter) to ECU.</p>			
<p>Note: ECU with Tier IV support is required for proper functionality.</p>			

🔍 back to Logical binary inputs alphabetically

Remote AUTO

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	620		
Description			
<p>The controller is switched to the AUTO mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.</p> <p>This binary input has the lowest priority from Remote OFF / MAN / AUTO / TEST binary inputs</p> <p>Remote control priority:</p> <ul style="list-style-type: none"> ▶ Remote OFF (Highest priority) ▶ Remote TEST ▶ Remote MAN ▶ Remote AUTO (Lowest Priority) 			

⬅ back to Logical binary inputs alphabetically

Remote Ctrl Lock

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	4		
Description			
<p>If the input is active, the controller will not accept any actions regarding the system control – e.g. writing of commands and setpoint changes via remote communication interfaces.</p>			

⬅ back to Logical binary inputs alphabetically

Remote MAN

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	618		
Description			
<p>The controller is switched to the MAN mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.</p> <p>Remote control priority:</p> <ul style="list-style-type: none"> ▶ Remote OFF (Highest priority) ▶ Remote TEST ▶ Remote MAN ▶ Remote AUTO (Lowest Priority) 			

⬅ back to Logical binary inputs alphabetically

Remote OFF

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	617		
Description			
<p>The controller is switched to the OFF mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.</p> <p>Remote control priority:</p> <ul style="list-style-type: none"> ▶ Remote OFF (Highest priority) ▶ Remote TEST ▶ Remote MAN ▶ Remote AUTO (Lowest Priority) 			

⬅ back to Logical binary inputs alphabetically

Remote Start/Stop

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	38		
Description			
<p>Use this input to start and stop the gen-set in AUTO mode.</p> <p>Note: If the binary input Remote Start/Stop is active and engine is running and mains failure occurs, the MCB breaker opens, after Transfer Delay (page 254) the GCB breaker is closed. Once the mains is OK, the Mains Return Delay (page 253) elapses and the GCB breaker is opened. Then after Transfer Delay (page 254) is MCB breaker closed. Gen-set remains running as long as binary input Rem Start/Stop is active. For more details see timing diagram below.</p>			
<p>The diagram shows the timing of GCB and MCB breakers relative to a mains failure and return. The y-axis represents Binary Input / Output for GCB Close/Open (On/Off), Remote Start/Stop (On/Off), and MCB Close/Open (On/Off). The x-axis represents Time. A 'Mains Fail' event is marked. The legend indicates: blue hatched area for 'Engine is running', green hatched area for 'Mains OK', and red hatched area for 'Mains Fail'. Key delays shown are 'Transfer Delay' (GCB closing after mains fail), 'Mains Return Delay' (GCB opening after mains return), and another 'Transfer Delay' (MCB closing after mains return).</p>			
Image 9.137 Remote Start/Stop			

⬅ back to Logical binary inputs alphabetically

Rem TEST On Load

Related FW	1.8.0	Related applications	AMF
Comm object	61		
Description			
When input is closed, the controller automatically transfers load from the mains to the gen-set. Load is automatically transferred back to the mains when any gen-set shut down protection activates.			

⬅ back to Logical binary inputs alphabetically

Remote TEST

Related FW	1.8.0	Related applications	AMF
Comm object	621		
Description			
The controller is switched to the TEST mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.			
Remote control priority:			
▶ Remote OFF (Highest priority)			
▶ Remote TEST			
▶ Remote MAN			
▶ Remote AUTO (Lowest Priority)			

⬅ back to Logical binary inputs alphabetically


LBI: S

Sd Override

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	44		
Description			
If this input is active, all alarms except Emergency Stop and Overspeed are suppressed. The suppressed alarms will be displayed in the alarm list, but they will not take effect regarding the gen-set control.			
<i>Note: Sd Override (page 562) is indicated in the alarm list if Sd Override mode is active to inform the operator that the engine is not protected.</i>			
IMPORTANT: MISUSE OF THIS INPUT CAN CAUSE DAMAGE TO THE GEN-SET!			


⬅ back to Logical binary inputs alphabetically

Start Button

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	189		
Description			
Binary input has the same function as Start Button  on the IntelliLite front panel. It is evaluated in MAN mode only.			

⬅ back to Logical binary inputs alphabetically

Stop Button

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	190		
Description			
Binary input has the same function as Stop Button  on the IntelliLite front panel. It is evaluated in MAN Mode only.			

[▲ back to Logical binary inputs alphabetically](#)

8.1.4 Logical binary outputs

What Logical binary outputs are:

Logical binary outputs are outputs for binary values and functions.

Alphabetical groups of Logical binary outputs

LBO: A	567
LBO: B	589
LBO: C	593
LBO: D	594
LBO: E	595
LBO: F	598
LBO: G	600
LBO: H	607
LBO: I	608
LBO: M	610
LBO: N	615
LBO: P	616
LBO: R	618
LBO: S	620
LBO: T	623

For full list of Logical binary outputs go to the chapter **Logical binary outputs alphabetically (page 565)**.

Logical binary outputs alphabetically

Frequency Select	551	AL Gen Voltage	575	AIN Switch19	588
Air Valves	567	AL Mains Fail	575	AIN Switch20	589
AL AIN 1 Sd+BOC	567	AL Mains Frequency	575	BIN 1 Status	589
AL AIN 1 Wrm	567	AL Mains Voltage	575	BIN 2 Status	590
AL AIN 2 Sd+BOC	568	AL Maintenance 1	575	BIN 3 Status	590
AL AIN 2 Wrm	568	AL Maintenance 2	576	BIN 4 Status	591
AL AIN 3 Sd+BOC	568	AL Maintenance 3	576	BIN 5 Status	591
AL AIN 3 Wrm	568	AL Oil Press Sd	576	BIN 6 Status	592
AL AIN 4 Sd+BOC	568	AL Oil Press Wrm	576	BIN 7 Status	592
AL AIN 4 Wrm	569	AL Overcurrent	576	BIN 8 Status	593
AL Battery Flat	569	AL Overload BOC	577	Choke	593
AL Battery Charger	569	AL Overload Wrm	577	Cooling Pump	594
AL Battery Overvoltage	569	AL Overspeed	577	Cooling	594
AL Battery Undervoltage	569	AL Rental Timer 1	577	Dual Operation Error	594
AL Battery Voltage	570	AL Rental Timer 2	578	Dual Operation OK	594
AL Common BOC	570	AL Start Fail	578	ECU Communic Error	595
AL Common Fls	570	AL Stop Fail	578	ECU Communic OK	595
AL Common Sd	570	AL Underspeed	578	ECU Power Relay	596
AL Common Wrm	571	Alarm	579	ECU Red Lamp	596
AL CoolantTemp Low	571	AIN Switch01	579	ECU Run Stop	597
AL CoolantTemp Sd	571	AIN Switch02	580	ECU Yellow Lamp	597
AL CoolantTemp Wrm	571	AIN Switch03	580	Exercise Timer 1	597
AL D+ Fail	572	AIN Switch04	581	Exercise Timer 2	597
AL Dual Master Fail	572	AIN Switch05	581	FltRes	598
AL Dual Slave Fail	572	AIN Switch06	582	Fuel Pump	598
AL Earth Fault	572	AIN Switch07	582	Fuel Solenoid	598
AL Fence 1	572	AIN Switch08	583	GCB Close/Open	600
AL Fence 2	573	AIN Switch09	583	GCB OFF Coil	602
AL Fuel Level Sd	573	AIN Switch10	584	GCB ON Coil	603
AL Fuel Level Wrm	573	AIN Switch11	584	GCB UV Coil	603
AL Gen Freq Wrm	573	AIN Switch12	585	Generator Healthy	605
AL Gen Frequency	573	AIN Switch13	585	Glow Plugs	605
AL Gen Overfrequency	574	AIN Switch14	586	Heartbeat	607
AL Gen Overvoltage	574	AIN Switch15	586	HEST Lamp	607
AL Gen Underfrequency	574	AIN Switch16	587	Horn	607
AL Gen Undervoltage	574	AIN Switch17	587	Idle/Nominal	608
AL Gen Voltage Wrm	574	AIN Switch18	588	Ignition	608

Ignition On	609
Mains Healthy	610
Manual Ready	610
MCB Close/Open	610
MCB OFF Coil	612
MCB ON Coil	613
MCB UV Coil	614
Mode AUTO	615
Mode MAN	615
Mode OFF	615
Mode TEST	615
Not In AUTO	615
Not Used	616
Power Switch	616
Prestart	616
Ready To AMF	618
Ready To Load	618
Ready	619
Regen Needed	619
Running	619
Sd Override	620
Starter	620
Still Log 0	621
Still Log 1	621
Stop Pulse	621
Stop Solenoid	621
Supplying Load	623
Swap Start	623
Temperature Switch	623
Ventilation	624
Ventilation Off Pulse	624
Ventilation On Pulse	624

LBO: A

Air Valves

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1247		
Description			
<p>This output closes together with binary output PRESTART (PAGE 616) and opens after the engine is stopped or in case that engine is not ready.</p>			
Image 9.138 Air Valves			

⬅ back to Logical binary outputs alphabetically

AL AIN 1 Sd+BOC

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1386		
Description			
<p>The output is closed when there is the shutdown or BOC alarm from the analog input 1 of the controller present in the alarmlist or isn't confirmed.</p>			

⬅ back to Logical binary outputs alphabetically

AL AIN 1 Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1382		
Description			
<p>The output is closed when there is the warning alarm from the analog input 1 of the controller present in the alarmlist or isn't confirmed.</p>			

⬅ back to Logical binary outputs alphabetically

AL AIN 2 Sd+BOC

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1387		
Description			
The output is closed when there is the shutdown or BOC alarm from the analog input 2 of the controller present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL AIN 2 Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1383		
Description			
The output is closed when there is the warning alarm from the analog input 2 of the controller present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL AIN 3 Sd+BOC

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1388		
Description			
The output is closed when there is the shutdown or BOC alarm from the analog input 3 of the controller present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL AIN 3 Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1384		
Description			
The output is closed when there is the warning alarm from the analog input 3 of the controller present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL AIN 4 Sd+BOC

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1389		
Description			
The output is closed when there is the shutdown or BOC alarm from the analog input 4 of the controller present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL AIN 4 Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1385		
Description			
The output is closed when there is the warning alarm from the analog input 4 of the controller present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL Battery Flat

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1292		
Description			
This output is active when the Sd Battery Flat (page 699) or Wrn Battery < Voltage (page 679) alarm is present in the alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Battery Charger

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1272		
Description			
This output is active when the Battery Charger Fail (page 676) alarm is present in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL Battery Overvoltage

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1995		
Description			
This output is active when the Wrn Battery > Voltage (page 679) alarm is present in the alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Battery Undervoltage

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1994		
Description			
This output is active when the Wrn Battery < Voltage (page 679) alarm is present in the alarmlist or isn't confirm.			


[◀ back to Logical binary outputs alphabetically](#)

AL Battery Voltage

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1293		
Description			
This output is active when the Wrn Battery > Voltage (page 679) or Wrn Battery < Voltage (page 679) alarm is present in the alarmlist or isn't confirm.			


[⬅ back to Logical binary outputs alphabetically](#)

AL Common BOC

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9		
Description			
Output closes when any BOC alarm appears.			
The output opens, if:			
<ul style="list-style-type: none"> ▶ No BOC alarm is active and ▶ Fault reset  button is pressed 			


[⬅ back to Logical binary outputs alphabetically](#)

AL Common FIs

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	6		
Description			
Output closes when any sensor fail alarm appears.			
The output opens, if:			
<ul style="list-style-type: none"> ▶ No sensor fail alarm is active and ▶ Fault reset  button is pressed 			


[⬅ back to Logical binary outputs alphabetically](#)

AL Common Sd

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	4		
Description			
Output closes when any shutdown alarm appears.			
The output opens, if:			
<ul style="list-style-type: none"> ▶ No shutdown alarm is active and ▶ Fault reset  button is pressed 			

[⬅ back to Logical binary outputs alphabetically](#)

AL Common Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	3		
Description			
Output closes when any warning alarm appears.			
The output opens, if:			
<ul style="list-style-type: none"> ▶ No warning alarm is active and ▶ Fault reset  button is pressed 			

 [back to Logical binary outputs alphabetically](#)

AL CoolantTemp Low

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1295		
Description			
The output is closed when there is the Wrn Coolant Temperature Low (page 680) alarm from the COOLANT TEMP (PAGE 654) in the alarmlist or isn't confirmed.			

 [Logical binary outputs alphabetically \(page 565\)](#)

AL CoolantTemp Sd

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1421		
Description			
The output is closed when there is the shutdown or BOC alarm from the COOLANT TEMP (PAGE 654) in the alarmlist or isn't confirmed.			

 [Logical binary outputs alphabetically \(page 565\)](#)

AL CoolantTemp Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1420		
Description			
The output is closed when there is the warning alarm from the COOLANT TEMP (PAGE 654) in the alarmlist or isn't confirmed.			
<p>Note: Binary output is also active if protection type is set to <i>HistRecOnl</i> and threshold level for history record is reach.</p>			

 [back to Logical binary outputs alphabetically](#)

AL D+ Fail

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1260		
Description			
This output is active when the Wrn Charging Alternator Fail (page 679) alarm is present in the alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Dual Master Fail

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2098		
Description			
This LBO is active when there is alarm of 2nd level on Master controller.			

[◀ back to Logical binary outputs alphabetically](#)

AL Dual Slave Fail

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2099		
Description			
This LBO is active when there is alarm of 2nd level on Slave controller.			

[◀ back to Logical binary outputs alphabetically](#)

AL Earth Fault

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1294		
Description			
This output is active when the Sd Earth Fault Current (page 700) alarm is present in alarm list or isn't confirm.			
<p>Note: <i>It is strongly recommended to use this output only onetime.</i></p>			

[◀ back to Logical binary outputs alphabetically](#)

AL Fence 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1548		
Description			
This output is active when the Wrn Fence 1 Alarm (page 680) or BOC Fence 1 Alarm (page 709) or Sd Fence 1 Alarm (page 701) (depends on configuration of alarm type) alarm is present in the alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Fence 2

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1549		
Description			
This output is active when the Wrn Fence 2 Alarm (page 681) or BOC Fence 2 Alarm (page 710) or Sd Fence 2 Alarm (page 701) (depends on configuration of alarm type) alarm is present in the alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

AL Fuel Level Sd

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1423		
Description			
The output is closed when there is the shutdown or BOC alarm from the FUEL LEVEL (PAGE 655) in the alarmlist or isn't confirmed.			

◀ back to Logical binary outputs alphabetically

AL Fuel Level Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1422		
Description			
The output is closed when there is the warning alarm from the FUEL LEVEL (PAGE 655) in the alarmlist or isn't confirmed.			
<p>Note: Binary output is also active if protection type is set to <i>HistRecOnl</i> and threshold level for history record is reach.</p>			

◀ back to Logical binary outputs alphabetically

AL Gen Freq Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1267		
Description			
This output is active generator frequency warning alarm is present in alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

AL Gen Frequency

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1266		
Description			
This output is active when at least one generator frequency BOC or Sd alarm is present in alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

AL Gen Overfrequency

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1264		
Description			
This output is active when at least one generator overfrequency alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Gen Overvoltage

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1261		
Description			
This output is active when at least one generator overvoltage alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Gen Underfrequency

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1265		
Description			
This output is active when at least one generator underfrequency alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Gen Undervoltage

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1262		
Description			
This output is active when at least one generator undervoltage alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Gen Voltage Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1289		
Description			
This output is active when at least one generator voltage warning alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Gen Voltage

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1263		
Description			
This output is active when at least one generator voltage BOC or Sd alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains Fail

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	197		
Description			
Output for signaling Mains Failure. This output is active when at least one mains frequency BOC or Sd alarm or at least one mains voltage BOC or Sd alarm is present in alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains Frequency

Related FW	1.8.0	Related applications	AMF
Comm object	1271		
Description			
This output is active when at least one mains frequency BOC or Sd alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains Voltage

Related FW	1.8.0	Related applications	AMF
Comm object	1270		
Description			
This output is active when at least one mains voltage BOC or Sd alarm is present in the alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Maintenance 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1254		
Description			
This output is active when the Alarm Maintenance 1 is present in the alarmlist. It means that counter of maintenance is on zero or the Alarm Maintenance 1 isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Maintenance 2

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1255		
Description			
This output is active when the Alarm Maintenance 2 is present in the alarmlist. It means that counter of maintenance is on zero or the Alarm Maintenance 2 isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Maintenance 3

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1256		
Description			
This output is active when the Alarm Maintenance 3 is present in the alarmlist. It means that counter of maintenance is on zero or the Alarm Maintenance 3 isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Oil Press Sd

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1419		
Description			
The output is closed when there is the shutdown alarm from the OIL PRESSURE (PAGE 657) in the alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL Oil Press Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1418		
Description			
The output is closed when there is the warning alarm from the OIL PRESSURE (PAGE 657) in the alarmlist or isn't confirmed.			
<p><i>Note: Binary output is also active if protection type is set to HistRecOnl and threshold level for history record is reach.</i></p>			

[◀ back to Logical binary outputs alphabetically](#)

AL Overcurrent

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	109		
Description			
This output is active when the BOC Overcurrent IDMT (page 713) or BOC Short Circuit (page 714) alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Overload BOC

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1268		
Description			
This output is active when the Sd Overload (page 707) alarm is present in the alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Overload Wrn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1269		
Description			
This output is active when the Wrn Overload (page 687) alarm is present in alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically


AL Overspeed

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	779		
Description			
This output is active when the Sd Overspeed (page 707) alarm is present in the alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Rental Timer 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1370		
Description			
The binary output closes when the Rental Timer 1 (page 339) elapsed.			

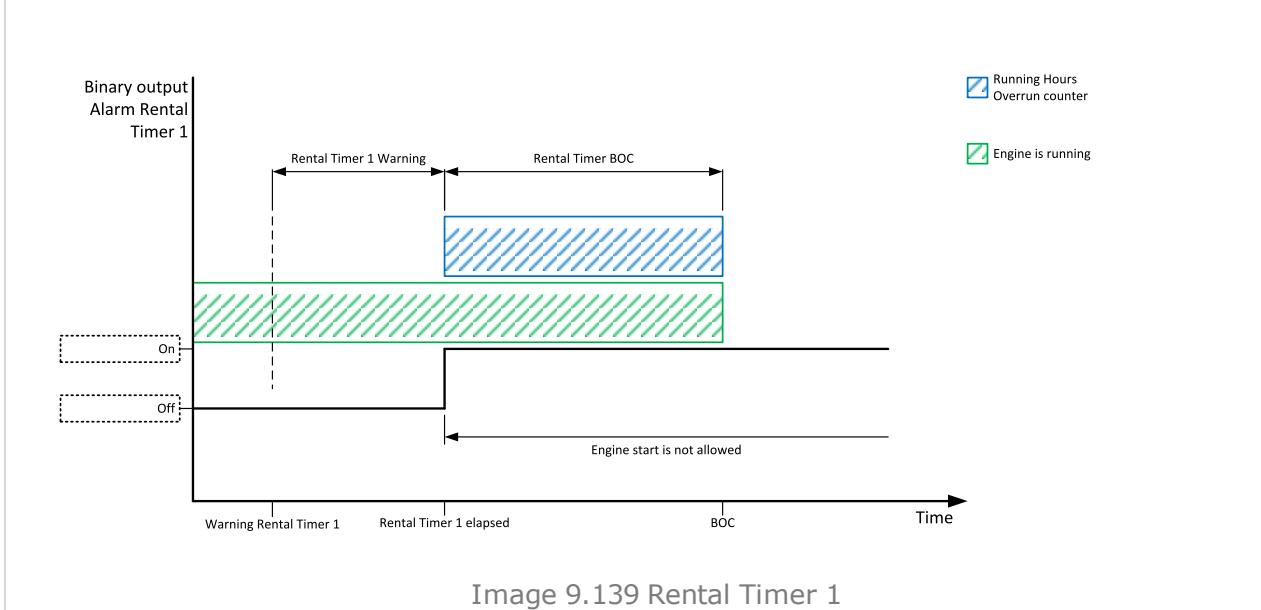

⬅ back to Logical binary outputs alphabetically

AL Rental Timer 2

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1371		
Description			
The binary output closes when the Rental Timer 2 (page 341) elapsed.			
Image 9.140 Rental Timer 2			

◀ back to Logical binary outputs alphabetically

AL Start Fail

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1291		
Description			
This output is active when the Sd Start Fail (page 708) alarm is present in the alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

AL Stop Fail

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	339		
Description			
This output is active when the Wrn Stop Fail (page 688) alarm is present in the alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

AL Underspeed

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1296		
Description			
This output is active when the Sd Underspeed (page 708) alarm is present in the alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

Alarm

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2		
Description			
The output is designed to be used as external alarm indication such as a red bulb in the control room etc. The output is active when at least one unconfirmed alarm is present in the alarmlist and remains active until confirmation of alarm.			

🔍 back to Logical binary outputs alphabetically

AIN Switch01

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1400		
Description			
This is an output from the General Analog Input 1 switch function. The behavior of the switch depends on the adjustment of the setpoints Analog Switch 1 On (page 265) and Analog Switch 1 Off (page 266). The value is measured from AIN SWITCH 01 (PAGE 647) analog input.			
Image 9.141 General analog input 1 switch			

🔍 back to Logical binary outputs alphabetically

AIN Switch02

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1401		

Description

This is an output from the General Analog Input 2 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 2 On** (page 268) and **Analog Switch 2 Off** (page 269). The value is measured from **AIN SWITCH 02** (PAGE 647) analog input.

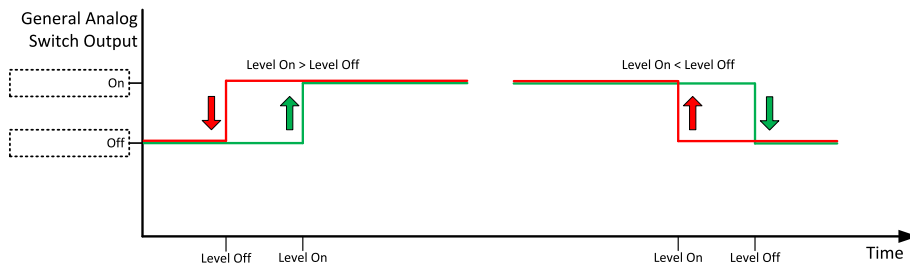


Image 9.142 General analog input 2 switch

[back to Logical binary outputs alphabetically](#)

AIN Switch03

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1402		

Description

This is an output from the General Analog Input 3 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 3 On** (page 271) and **Analog Switch 3 Off** (page 272). The value is measured from **AIN SWITCH 03** (PAGE 647) analog input.

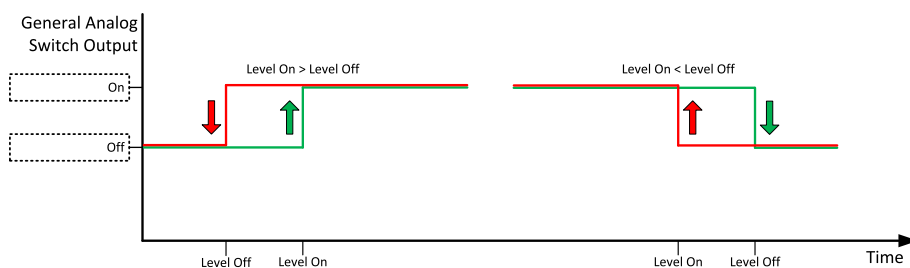


Image 9.143 General analog input 3 switch

[back to Logical binary outputs alphabetically](#)

AIN Switch04

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1403		

Description

This is an output from the General Analog Input 4 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 4 On** (page 274) and **Analog Switch 4 Off** (page 275). The value is measured from **AIN SWITCH 04** (PAGE 648) analog input.

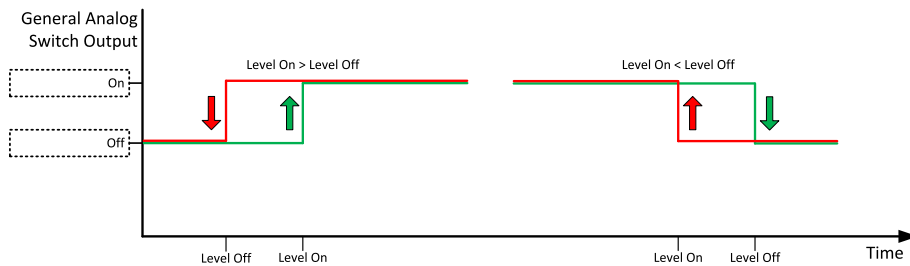


Image 9.144 General analog input 4 switch

Logical binary outputs alphabetically (page 565)

AIN Switch05

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1787		

Description

This is an output from the General Analog Input 5 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 5 On** (page 277) and **Analog Switch 5 Off** (page 278). The value is measured from **AIN SWITCH 05** (PAGE 648) analog input.

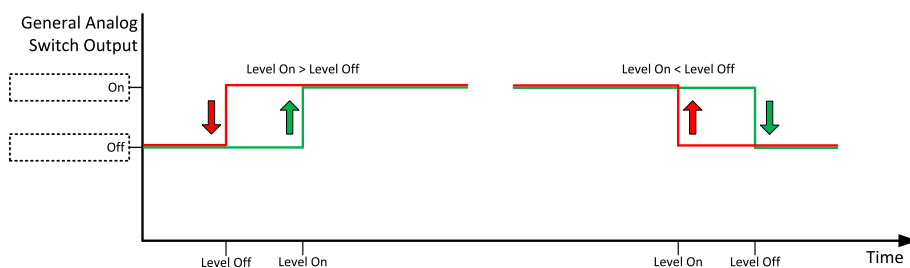


Image 9.145 General analog input 5 switch

Logical binary outputs alphabetically (page 565)

AIN Switch06

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1788		

Description

This is an output from the General Analog Input 6 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 6 On** (page 280) and **Analog Switch 6 Off** (page 281). The value is measured from **AIN SWITCH 06** (PAGE 648) analog input.

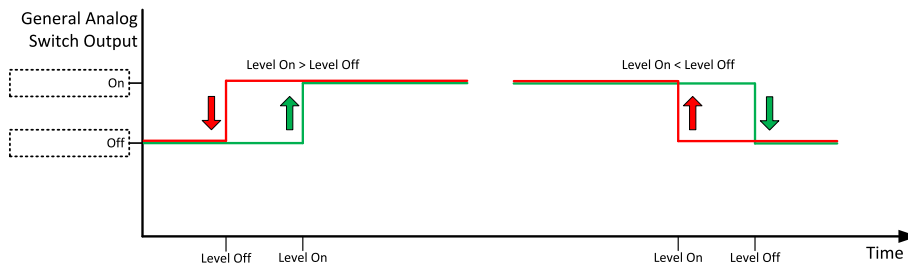


Image 9.146 General analog input 6 switch

Logical binary outputs alphabetically (page 565)

AIN Switch07

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1789		

Description

This is an output from the General Analog Input 7 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 7 On** (page 283) and **Analog Switch 7 Off** (page 284). The value is measured from **AIN SWITCH 07** (PAGE 649) analog input.

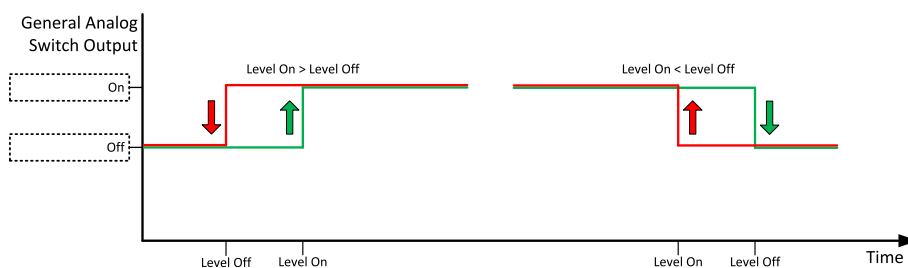


Image 9.147 General analog input 7 switch

Logical binary outputs alphabetically (page 565)

AIN Switch08

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1790		

Description

This is an output from the General Analog Input 8 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 8 On** (page 286) and **Analog Switch 8 Off** (page 287). The value is measured from **AIN SWITCH 08** (PAGE 649) analog input.

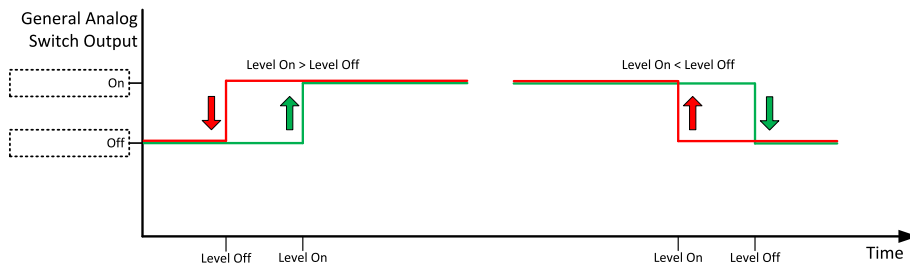


Image 9.148 General analog input 8 switch

Logical binary outputs alphabetically (page 565)

AIN Switch09

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1791		

Description

This is an output from the General Analog Input 9 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 9 On** (page 289) and **Analog Switch 9 Off** (page 290). The value is measured from **AIN SWITCH 09** (PAGE 649) analog input.

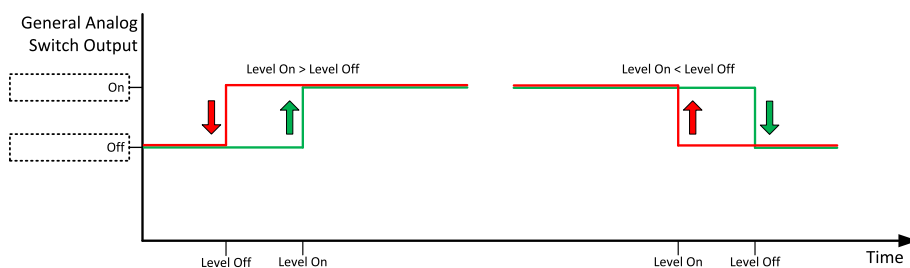


Image 9.149 General analog input 9 switch

Logical binary outputs alphabetically (page 565)

AIN Switch10

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1792		

Description

This is an output from the General Analog Input 10 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 10 On** (page 292) and **Analog Switch 10 Off** (page 293). The value is measured from **AIN SWITCH 10** (PAGE 650) analog input.

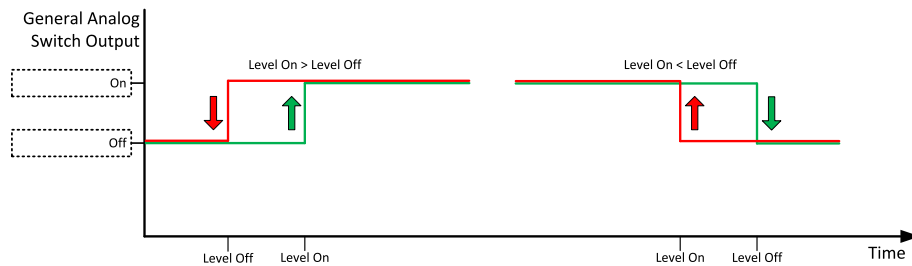


Image 9.150 General analog input 10 switch

Logical binary outputs alphabetically (page 565)

AIN Switch11

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1793		

Description

This is an output from the General Analog Input 11 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 11 On** (page 295) and **Analog Switch 11 Off** (page 296). The value is measured from **AIN SWITCH 11** (PAGE 650) analog input.

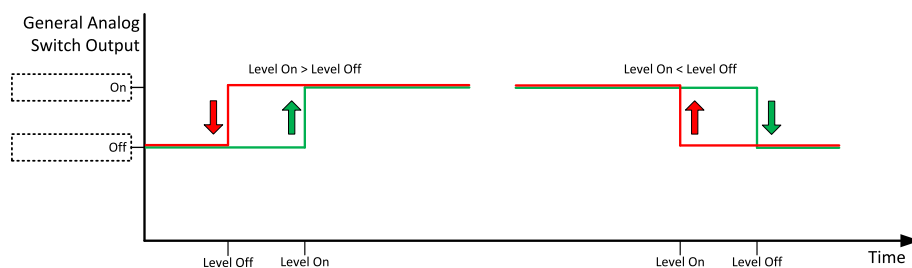


Image 9.151 General analog input 11 switch

Logical binary outputs alphabetically (page 565)

AIN Switch12

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1794		

Description

This is an output from the General Analog Input 12 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 12 On** (page 298) and **Analog Switch 12 Off** (page 299). The value is measured from **AIN SWITCH 12** (PAGE 650) analog input.

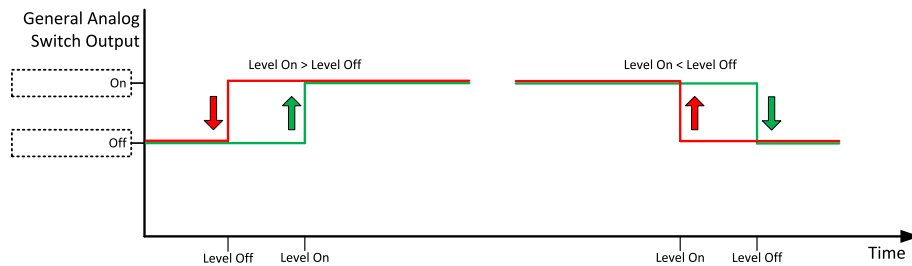


Image 9.152 General analog input 12 switch

Logical binary outputs alphabetically (page 565)

AIN Switch13

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1795		

Description

This is an output from the General Analog Input 13 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 13 On** (page 301) and **Analog Switch 13 Off** (page 302). The value is measured from **AIN SWITCH 13** (PAGE 651) analog input.

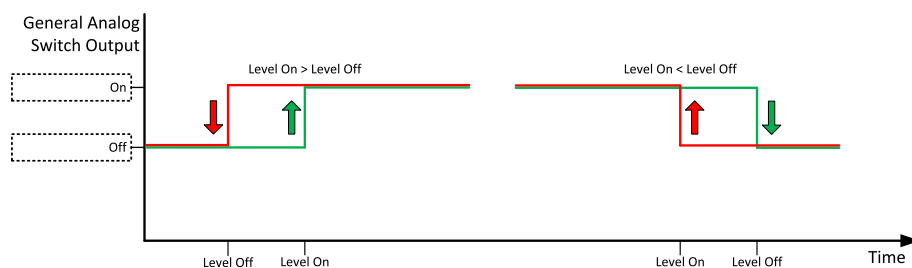


Image 9.153 General analog input 13 switch

Logical binary outputs alphabetically (page 565)

AIN Switch14

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1796		

Description

This is an output from the General Analog Input 14 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 14 On** (page 304) and **Analog Switch 14 Off** (page 305). The value is measured from **AIN SWITCH 14** (PAGE 651) analog input.

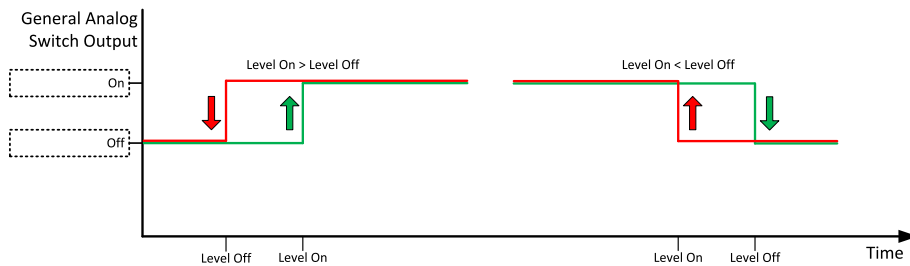


Image 9.154 General analog input 14 switch

Logical binary outputs alphabetically (page 565)

AIN Switch15

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1797		

Description

This is an output from the General Analog Input 15 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 15 On** (page 307) and **Analog Switch 15 Off** (page 308). The value is measured from **AIN SWITCH 15** (PAGE 651) analog input.

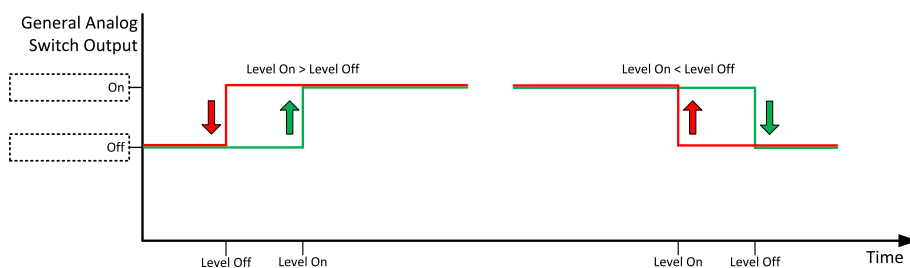


Image 9.155 General analog input 15 switch

Logical binary outputs alphabetically (page 565)

AIN Switch16

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1798		

Description

This is an output from the General Analog Input 16 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 16 On** (page 310) and **Analog Switch 16 Off** (page 311). The value is measured from **AIN SWITCH 16** (PAGE 652) analog input.

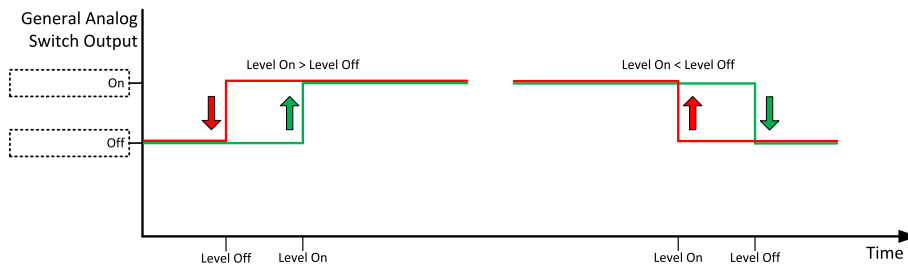


Image 9.156 General analog input 16 switch

Logical binary outputs alphabetically (page 565)

AIN Switch17

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1799		

Description

This is an output from the General Analog Input 17 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 17 On** (page 313) and **Analog Switch 17 Off** (page 314). The value is measured from **AIN SWITCH 17** (PAGE 652) analog input.

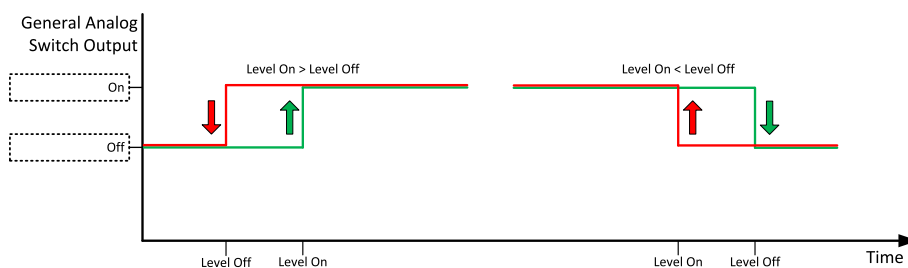


Image 9.157 General analog input 17 switch

Logical binary outputs alphabetically (page 565)

AIN Switch18

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1800		

Description

This is an output from the General Analog Input 18 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 18 On** (page 316) and **Analog Switch 18 Off** (page 317). The value is measured from **AIN SWITCH 18** (PAGE 652) analog input.

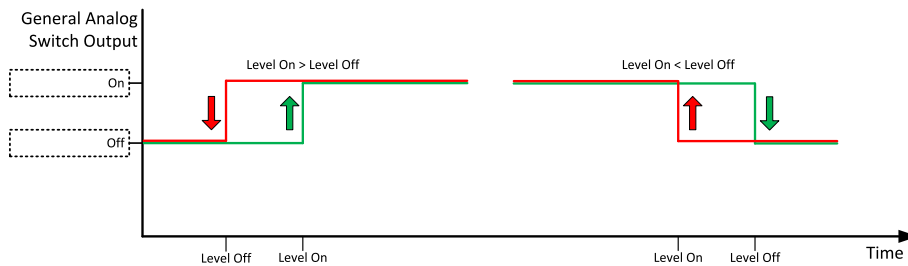


Image 9.158 General analog input 18 switch

Logical binary outputs alphabetically (page 565)

AIN Switch19

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1801		

Description

This is an output from the General Analog Input 19 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 19 On** (page 319) and **Analog Switch 19 Off** (page 320). The value is measured from **AIN SWITCH 19** (PAGE 653) analog input.

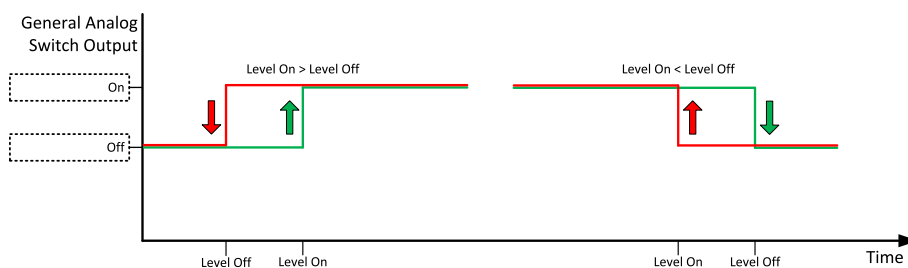


Image 9.159 General analog input 19 switch

Logical binary outputs alphabetically (page 565)

AIN Switch20

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1802		

Description

This is an output from the General Analog Input 20 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 20 On** (page 322) and **Analog Switch 20 Off** (page 323). The value is measured from **AIN SWITCH 20** (PAGE 653) analog input.

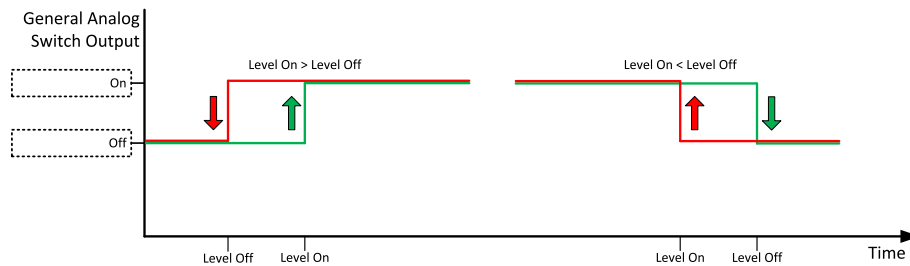


Image 9.160 General analog input 20 switch

🔍 Logical binary outputs alphabetically (page 565)

LBO: B

BIN 1 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1374		

Description

This output is closed, when Binary Input 1 is active and open when Binary Input 1 is inactive. When Binary Input 1 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.

Note: When LBI 1 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.

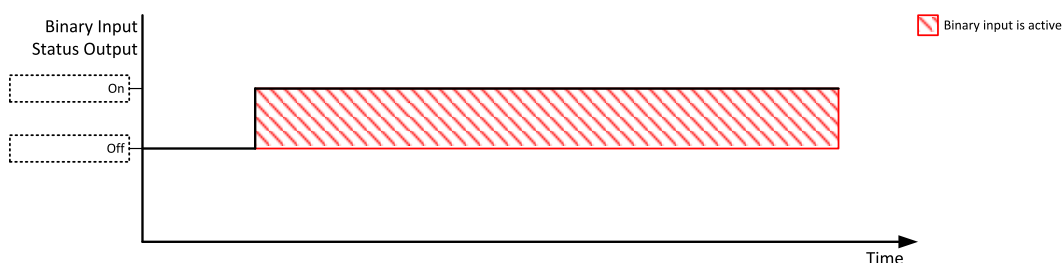


Image 9.161 Binary Input 1 Status

🔍 back to Logical binary outputs alphabetically

BIN 2 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1375		
Description			
<p>This output is closed, when Binary Input 2 is active and open when Binary Input 2 is inactive. When Binary Input 2 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 2 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.162 Binary Input 2 Status			

🔍 back to Logical binary outputs alphabetically

BIN 3 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1376		
Description			
<p>This output is closed, when Binary Input 3 is active and open when Binary Input 3 is inactive. When Binary Input 3 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 3 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.163 Binary Input 3 Status			

🔍 back to Logical binary outputs alphabetically

BIN 4 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1377		
Description			
<p>This output is closed, when Binary Input 4 is active and open when Binary Input 4 is inactive. When Binary Input 4 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 4 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.164 Binary Input 4 Status			

🔍 back to Logical binary outputs alphabetically

BIN 5 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1378		
Description			
<p>This output is closed, when Binary Input 5 is active and open when Binary Input 5 is inactive. When Binary Input 5 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 5 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.165 Binary Input 5 Status			

🔍 back to Logical binary outputs alphabetically

BIN 6 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1379		
Description			
<p>This output is closed, when Binary Input 6 is active and open when Binary Input 6 is inactive. When Binary Input 6 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 6 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.166 Binary Input 6 Status			

🔍 back to Logical binary outputs alphabetically

BIN 7 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1380		
Description			
<p>This output is closed, when Binary Input 7 is active and open when Binary Input 7 is inactive. When Binary Input 7 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 7 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.167 Binary Input 7 Status			

🔍 back to Logical binary outputs alphabetically

BIN 8 Status

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1381		
Description			
<p>This output is closed, when Binary Input 8 is active and open when Binary Input 8 is inactive. When Binary Input 8 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 8 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 9.168 Binary Input 8 Status			

🔍 back to Logical binary outputs alphabetically

LBO: C

Choke

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2091		
Description			
<p>Logical binary output for choke valve control. Output CHOKE is activated every time when logical binary output STARTER (PAGE 620) is activated. Output is deactivated when one of these conditions is fulfilled:</p> <ul style="list-style-type: none"> ▶ Choke Time is elapsed ▶ Generator voltage is higher than Choke Voltage ▶ Logical binary input Choke Inhibit is activated <p>Or when some of these situations during start occurs:</p> <ul style="list-style-type: none"> ▶ Any second level alarm ▶ Emergency stop ▶ Stop command ▶ Cranking pause 			

🔍 back to Logical binary outputs alphabetically

Cooling Pump

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	40		
Description			
<p>This output is dedicated for coolant pump control. It is closed in the moment the gen-set is started and remains closed until the gen-set is stopped and After Cooling Time (page 218) elapses or the cranking pause or the Emergency Stop occurs or the controller is switched to OFF mode.</p>			
Image 9.169 Cooling Pump			

⬅ back to Logical binary outputs alphabetically

Cooling

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	74		
Description			
<p>The output closes when gen-set is in Cooling state.</p>			

⬅ back to Logical binary outputs alphabetically

LBO: D

Dual Operation Error

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2097		
Description			
<p>This LBO is active when there is Dual Operation Fail (page 690) alarm in alarmlist.</p>			

⬅ back to Logical binary outputs alphabetically

Dual Operation OK

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2096		
Description			
<p>This LBO is active when there is not Dual Operation Fail (page 690) alarm in alarmlist.</p>			

⬅ back to Logical binary outputs alphabetically

LBO: E

ECU Communic Error

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	114		
Description			
This output is active when an ECU is configured, but the communication with the ECU is not established or has dropped out.			
<p>Note: When <i>ECU POWER RELAY (PAGE 596)</i> is not configured, output is evaluated all the time. If <i>ECU POWER RELAY (PAGE 596)</i> is configured, output is evaluated only when engine is not stop (<i>ECU POWER RELAY (PAGE 596)</i> is active).</p>			

🔍 back to Logical binary outputs alphabetically

ECU Communic OK

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	347		
Description			
This output is active when an ECU is configured, connected and the communication with the ECU is established.			
<p>Note: When <i>ECU POWER RELAY (PAGE 596)</i> is not configured, output is evaluated all the time. If <i>ECU POWER RELAY (PAGE 596)</i> is configured, output is evaluated only when engine is not stop (<i>ECU POWER RELAY (PAGE 596)</i> is active).</p>			

🔍 back to Logical binary outputs alphabetically

ECU Power Relay

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	116		

Description

This output is to be used for control of “keyswitch” input of an ECU. If the particular ECU does not have keyswitch or a similar input, it can be used for control of DC power for the ECU.

The output closes together with **PRESTART (PAGE 616)** and remains closed for the entire duration that the engine is running. It is opened at the moment that the engine comes to a stop (i.e. together with the **FUEL SOLENOID (PAGE 598)**).

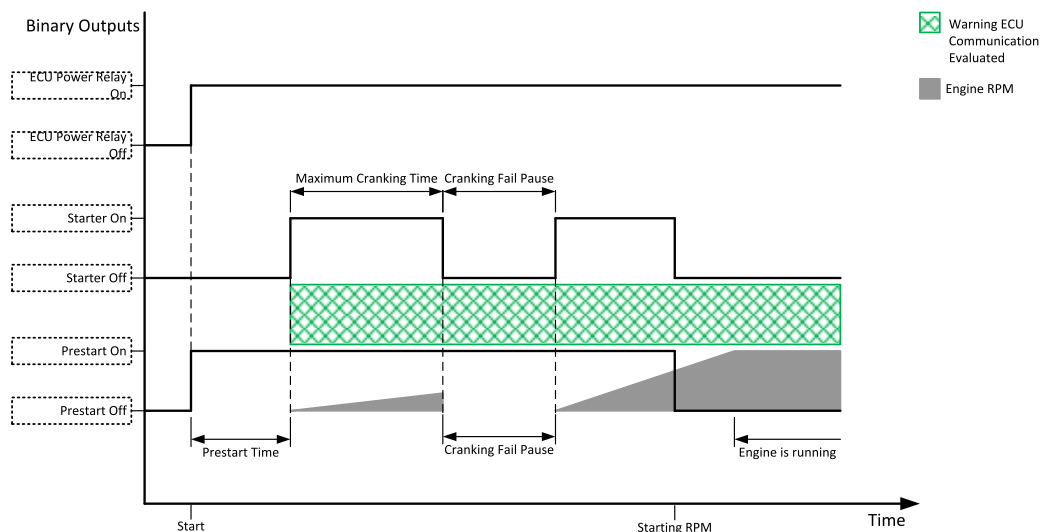


Image 9.170 ECU Power Relay

IMPORTANT: This LBO also affects evaluation of **Sd ECU Communication Fail (page 701)** or **Wrn ECU Communication Fail (page 680)** alarms. With configured LBO ECU Power Relay, these alarms are evaluated only when this LBO is active. Without configured LBO ECU Power Relay, these alarm are evaluated all the time.

🔍 back to Logical binary outputs alphabetically

ECU Red Lamp

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	350		

Description

This output is active when the ECU sends an active “red lamp” flag, i.e. it has detected a critical malfunction and the engine should not be operated until a service check is performed. This flag is taken from the DM1 frame on standard J1939 ECUs. Some ECUs provide this flag in their own proprietary frames and some do not provide the flag at all.

🔍 back to Logical binary outputs alphabetically

ECU Run Stop

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	958		
Description			
Signal for starting and stopping of ECU.			

[◀ back to Logical binary outputs alphabetically](#)

ECU Yellow Lamp

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	349		
Description			
This output is active when the ECU sends an active “yellow lamp” flag, i.e. it has detected a non-critical malfunction. This flag is taken from the DM1 frame on standard J1939 ECUs. Some ECUs provide this flag in their own proprietary frames and some do not provide the flag at all.			

[◀ back to Logical binary outputs alphabetically](#)

Exercise Timer 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1250		
Description			
This is an output from the Exercise timer 1. This output makes it easy to make periodic tests of the gen-set and its activation depends on the setpoints in the Subgroup: Timer 1 (page 325) subgroup. This output is active when Timer 1 is active.			

[◀ back to Logical binary outputs alphabetically](#)

Exercise Timer 2

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1251		
Description			
This is an output from the Exercise timer 2. This output makes it easy to make periodic tests of the gen-set and its activation depends on the setpoints in the Subgroup: Timer 2 (page 332) subgroup. This output is active when Timer 2 is active.			

[◀ back to Logical binary outputs alphabetically](#)

LBO: F

FItRes

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	592		
Description			
<p>This output provides 1s pulse when:</p> <ul style="list-style-type: none"> ▶ Fault Reset button is pressed on the controller front fascia or ▶ Fault Reset button is pressed on any of external local/remote terminals or ▶ Fault Reset command is received via communication line or ▶ the input FAULT RESET BUTTON is activated. 			

⬅ back to Logical binary outputs alphabetically

Fuel Pump

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1253		
Description			
<p>Output closes when the value of Fuel Level lies under the value of Fuel Pump On (page 231) setpoint and opens when value of Fuel Pump Off (page 232) is reached.</p> <p>This output also can be closed by binary input FUEL PUMP ON/OFF (PAGE 552). In this case the binary output FUEL PUMP ON (PAGE 231) is closed until the binary input FUEL PUMP ON/OFF (PAGE 552) is active or until the value of Fuel Pump Off (page 232) is reached.</p> <p><i>Note: Setpoints Fuel Pump On (page 231) and Fuel Pump Off (page 232) are invisible until configuration of this LBO.</i></p>			

⬅ back to Logical binary outputs alphabetically

Fuel Solenoid

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	22		
Description			
<p>This output controls the fuel solenoid valve. The Fuel Solenoid output has two different behaviors depending on engine type – gas or diesel. This setting is done by Fuel Solenoid (page 203) setpoint in Engine Settings group.</p>			

Diesel:

The output closes before binary output **STARTER** (PAGE 620). The lead time is adjusted by setpoint **Fuel Solenoid Lead** (page 212).

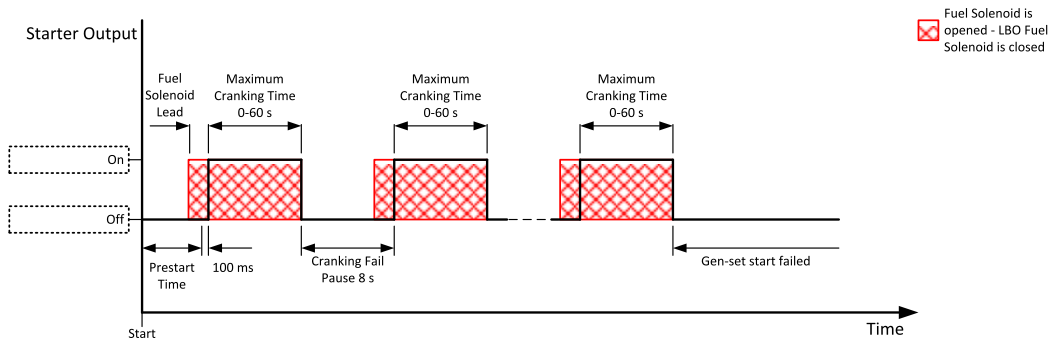


Image 9.171 Fuel Solenoid 1

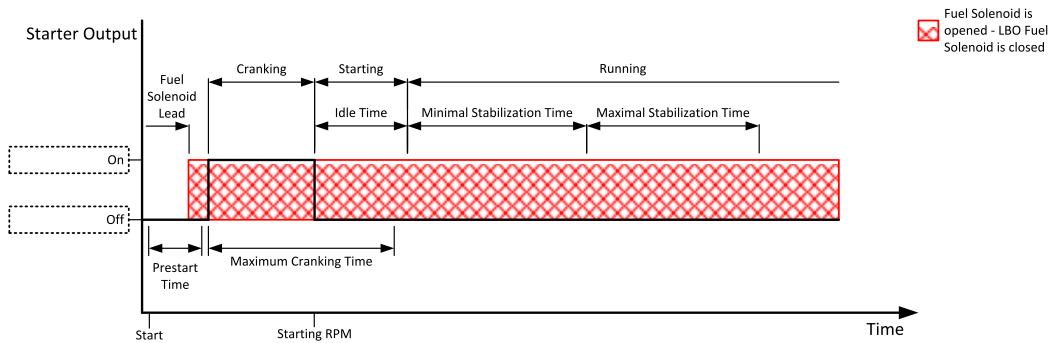


Image 9.172 Fuel Solenoid 2

The output opens when:

- ▶ Emergency Stop comes
- ▶ cooled gen-set is stopped
- ▶ in pause between repeated starts

Gas:

The output closes together with binary output IGNITION (PAGE 608) when engine RPM exceed 30 RPM (fix value).

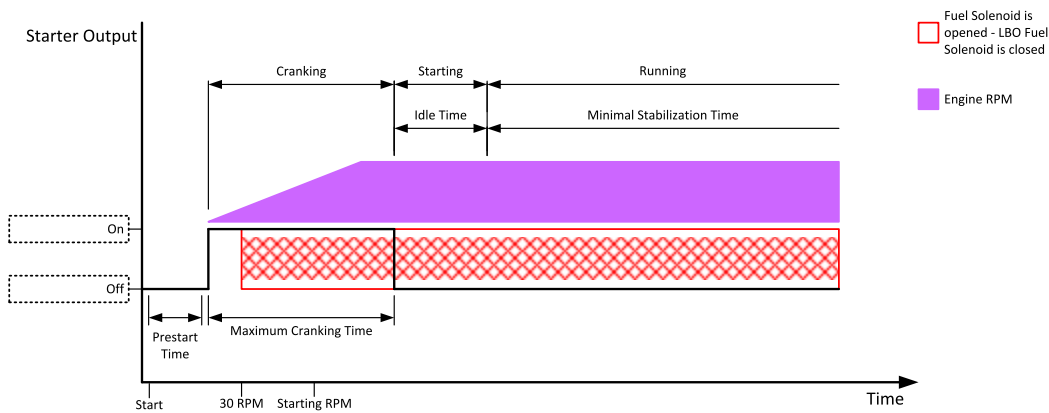


Image 9.173 Fuel Solenoid 3

The output opens when:

- ▶ Emergency Stop comes
- ▶ cooled gen-set is stopped
- ▶ in pause between repeated starts

🔍 back to Logical binary outputs alphabetically

LBO: G

GCB Close/Open

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	41		
Description			
<p>The output controls the generator circuit breaker. Its state represents the breaker position requested by the controller. The breaker must react within 5 seconds to a close or open command, otherwise an alarm is issued.</p> <p>Note: <i>InteliLite controllers can work even without breaker feedbacks, in this case do not configure the feedback to binary inputs.</i></p>			

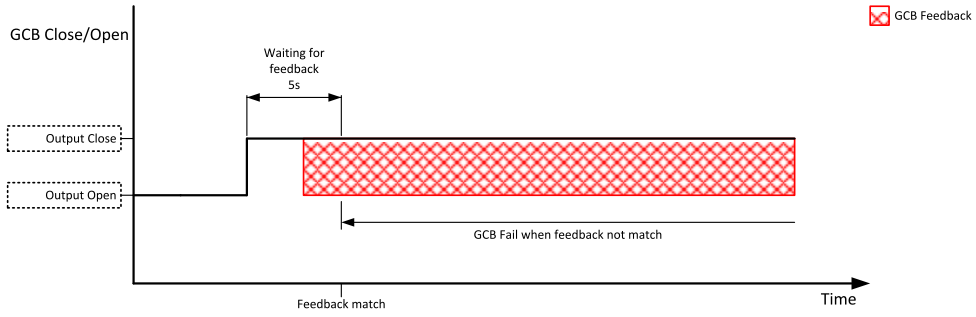


Image 9.174 GCB Close command

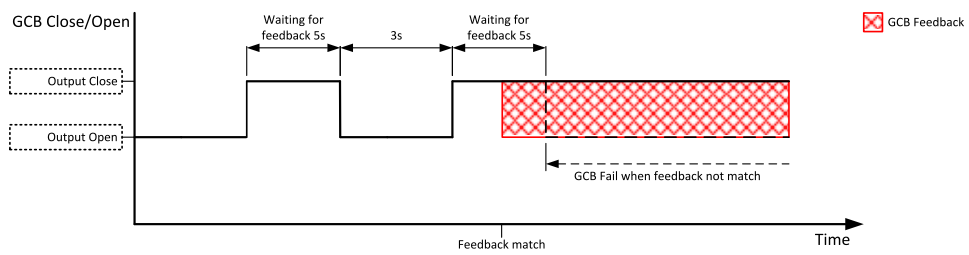


Image 9.175 Repeated GCB Close command

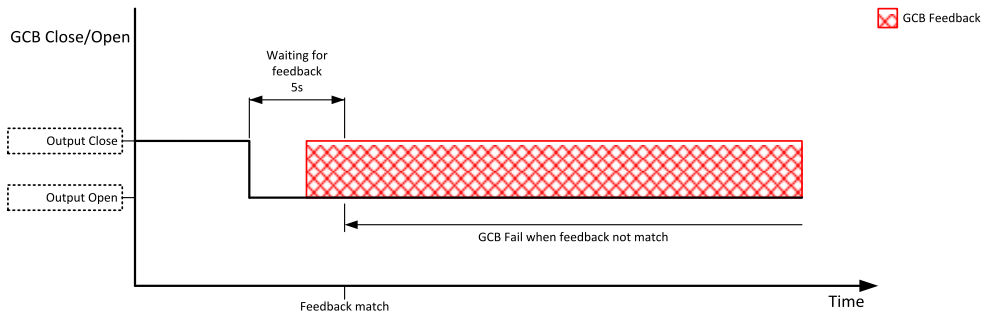


Image 9.176 GCB Open command

🔍 back to Logical binary outputs alphabetically

GCB OFF Coil

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	43		

Description

The output is intended for control of open coil of generator circuit breaker. The output gives a pulse in the moment the breaker has to be opened. The pulse lasts until the feedback deactivates, but at least for 5 seconds.

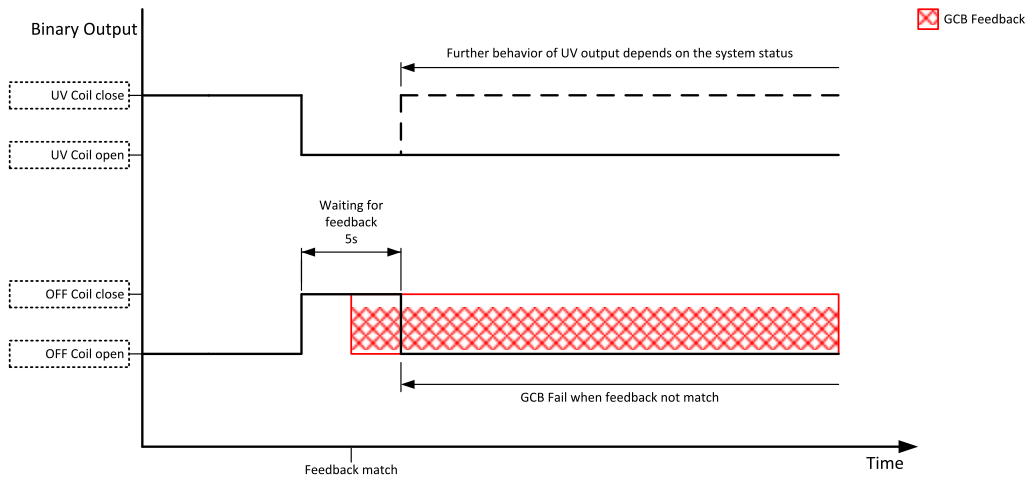


Image 9.177 GCB OFF Coil command

[back to Logical binary outputs alphabetically](#)

GCB ON Coil

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	42		

Description

The output is intended for control of close coil of generator circuit breaker. The output gives at least 5 second pulse in the moment the breaker has to be closed.

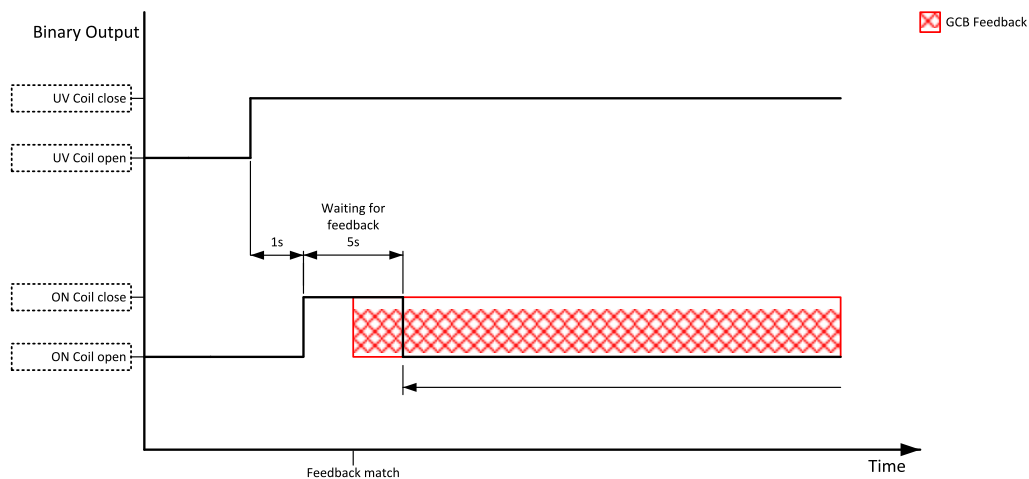


Image 9.178 GCB ON Coil close command

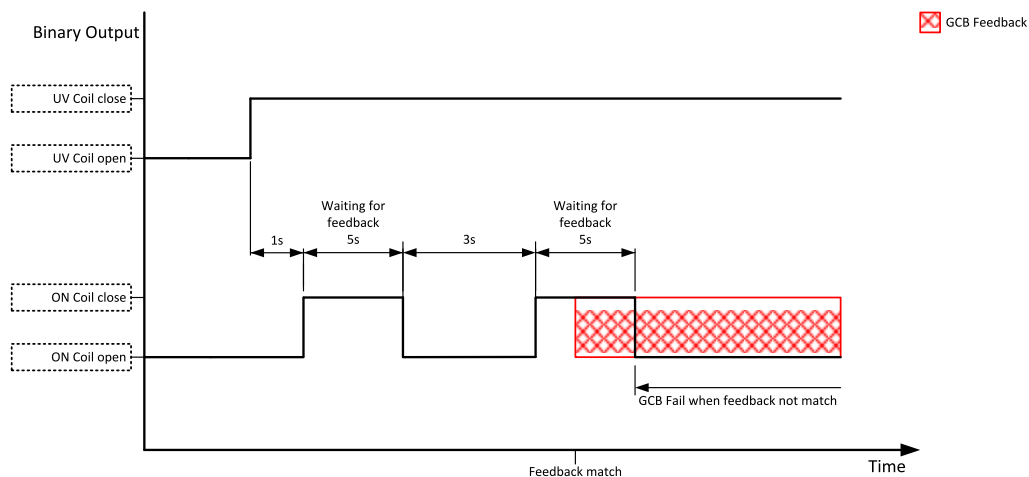


Image 9.179 Repeated GCB ON coil close command

[back to Logical binary outputs alphabetically](#)

GCB UV Coil

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	44		

Description

The output is intended for control of undervoltage coil of generator circuit breaker. The output is active the

whole time when the generator is running. The output is deactivated for at least 5 seconds in the moment the breaker has to be switched off.

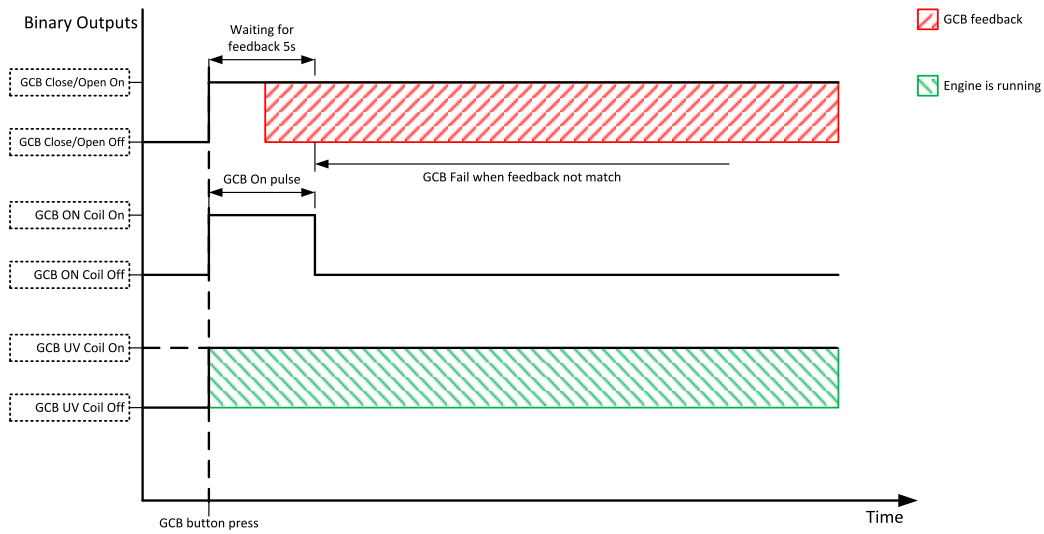


Image 9.180 GCB UV Coil close command

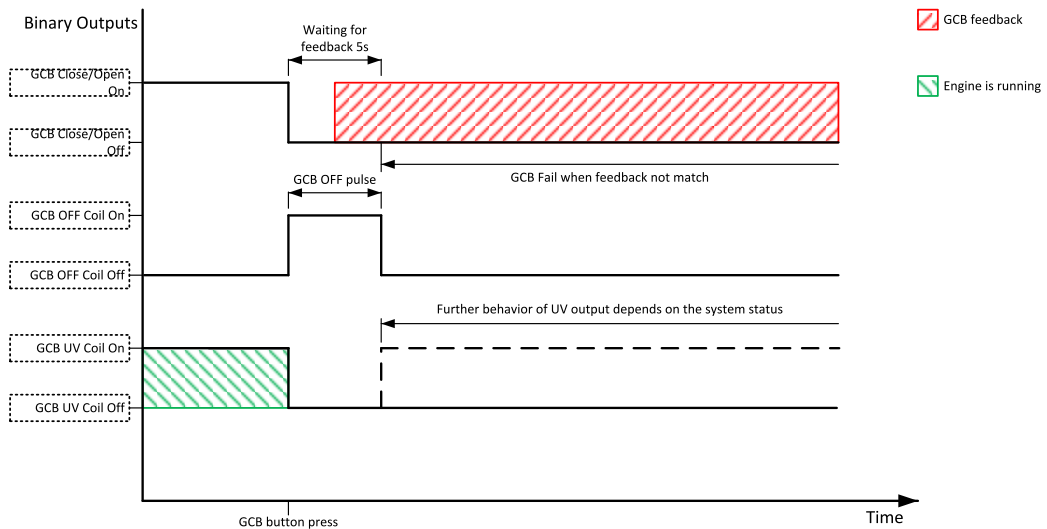


Image 9.181 GCB UV Coil open command

[back to Logical binary outputs alphabetically](#)

Generator Healthy

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	77		
Description			
<p>This output is active when the generator voltage, frequency and voltage unbalance is within limits. It is deactivated:</p> <ul style="list-style-type: none"> ▶ immediately when the voltage/frequency/voltage unbalance gets out of limits (when GCB is not closed) or ▶ with an appropriate delay after the voltage/frequency/voltage unbalance has got out of limits (when GCB is closed) 			

◀ back to Logical binary outputs alphabetically

Glow Plugs

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1252		
Description			
<p>This output is dedicated for diesel engine only. This output will close for exact time pre-set by setpoint Glow Plugs Time (page 206) before every starting attempt. The output opens in same time as the STARTER (PAGE 620) output closes (100 ms after PRESTART (PAGE 616) output opens).</p>			
<p>The diagram shows the timing sequence for engine starting. The y-axis represents Binary Outputs and the x-axis represents Time. The outputs shown are: Glow Plugs On, Glow Plugs Off, Starter On, Starter Off, Prestart On, and Prestart Off. A grey shaded area represents Engine RPM, which begins to rise after the Prestart signal is active. Key time intervals are marked: Prestart Time (from Prestart On to Prestart Off), a 100 ms delay after Prestart Off before Starter On, a 100 ms delay after Starter Off before Glow Plugs On, and Glow Plugs Time (the duration the Glow Plugs On signal is active). The engine starts running after the Glow Plugs turn off.</p>			
Image 9.182 Glow Plugs			

When the Glow Plugs Time (page 206) is longer than Cranking Fail Pause (page 204) then the Glow Plugs Time (page 206) in Cranking Fail Pause (page 204) is long as Cranking Fail Pause (page 204).

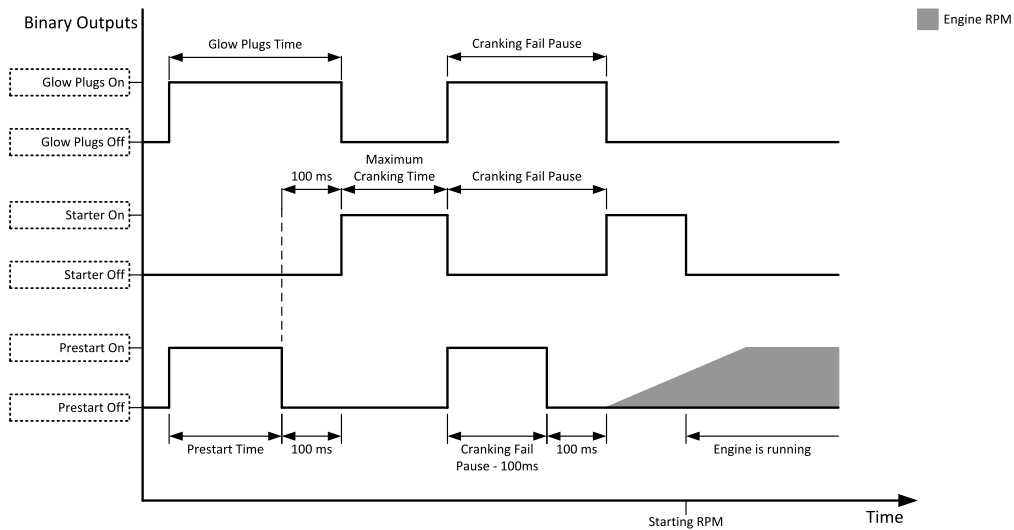


Image 9.183 Glow Plugs in Cranking Fail Pause 1

When the Glow Plugs Time (page 206) is shorter than Cranking Fail Pause (page 204) then the Glow Plugs Time (page 206) in Cranking Fail Pause (page 204) is long as normal Glow Plugs Time (page 206).

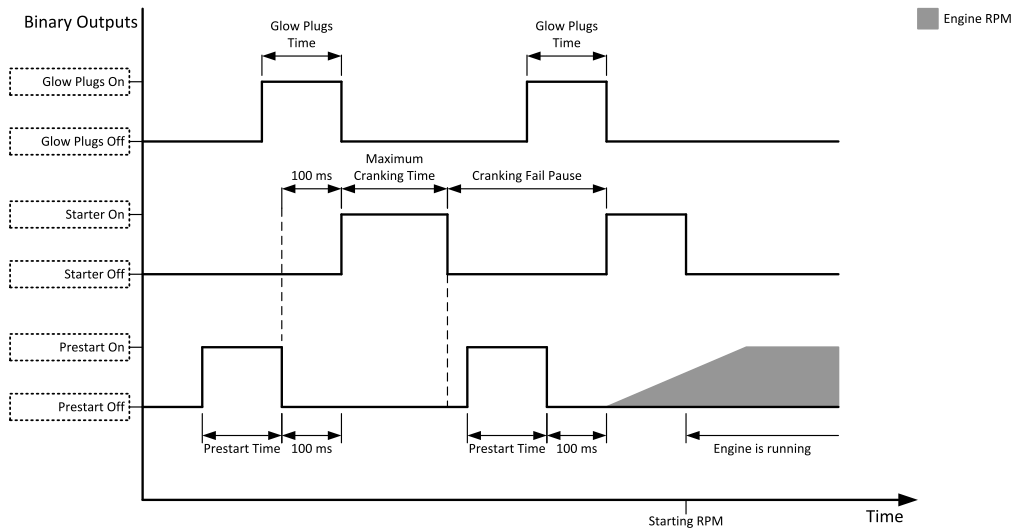


Image 9.184 Glow Plugs in Cranking Fail Pause 2

[back to Logical binary outputs alphabetically](#)

LBO: H

Heartbeat

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	81		
Description			
This output toggles on/off in a period of 500 ms whenever the controller is switched on and functional.			



 [back to Logical binary outputs alphabetically](#)

HEST Lamp

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1373		
Description			
This output is closed if ECU send signal HEST Lamp. If ECU stop send HEST LAMP signal binary input will be opened without no matter if alarms in alarmlist are confirmed or not.			

 [back to Logical binary outputs alphabetically](#)

Horn

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1		
Description			
The output designed to be used for acoustic indication of a newly appeared alarm. The output is activated each time a new alarm has appeared and remains active until one of the following events occurs:			
<ul style="list-style-type: none"> ▶ Fault reset  is pressed ▶ Horn reset  is pressed ▶ Horn Timeout (page 199) has elapsed 			

 [back to Logical binary outputs alphabetically](#)

LBO: I


Idle/Nominal

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	39		
Description			
<p>This output is used for switching between idle speed and nominal speed of the engine during the startup phase, if this feature (input) is available on the particular engine. In the case of some EFI engines, the idle/nominal switching is performed over the communication bus.</p> <p>The output Idle/Nominal closes after the timer Idle Time (page 212) elapses. The Idle Time (page 212) starts to countdown when Starting RPM (page 205) reached. The underspeed protection is not evaluated during fixed 5 seconds period after reaching Starting RPM (page 205). A Start Fail protection occurs if the RPM drop below 2RPM during idle.</p>			
Image 9.185 Idle/Nominal			
<p>Note: Connect binary output Idle/Nominal to speed governor to switch the speed: <i>opened = Idle</i> <i>closed = Nominal</i> <i>(for normally open contact type)</i></p>			

[back to Logical binary outputs alphabetically](#)

Ignition

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	37		
Description			
<p>This output is dedicated to controlling the ignition at a gas engine. The output is closed together with binary output FUEL SOLENOID (PAGE 598) in the moment when the timer Sd Ventilation Time (page 216) elapsed and the gen-set reaches at least 30 RPM during cranking. The timer Sd Ventilation Time (page 216) become active when the gen-set has been stopped for any Sd protection or the controller has been turned on only before first cranking attempt. The output is opened 500ms after all Additional running engine indication Additional running engine indications (page 131) will be inactive. The output is opened when the gen-set has to be stopped or in pause during repeated starts.</p>			

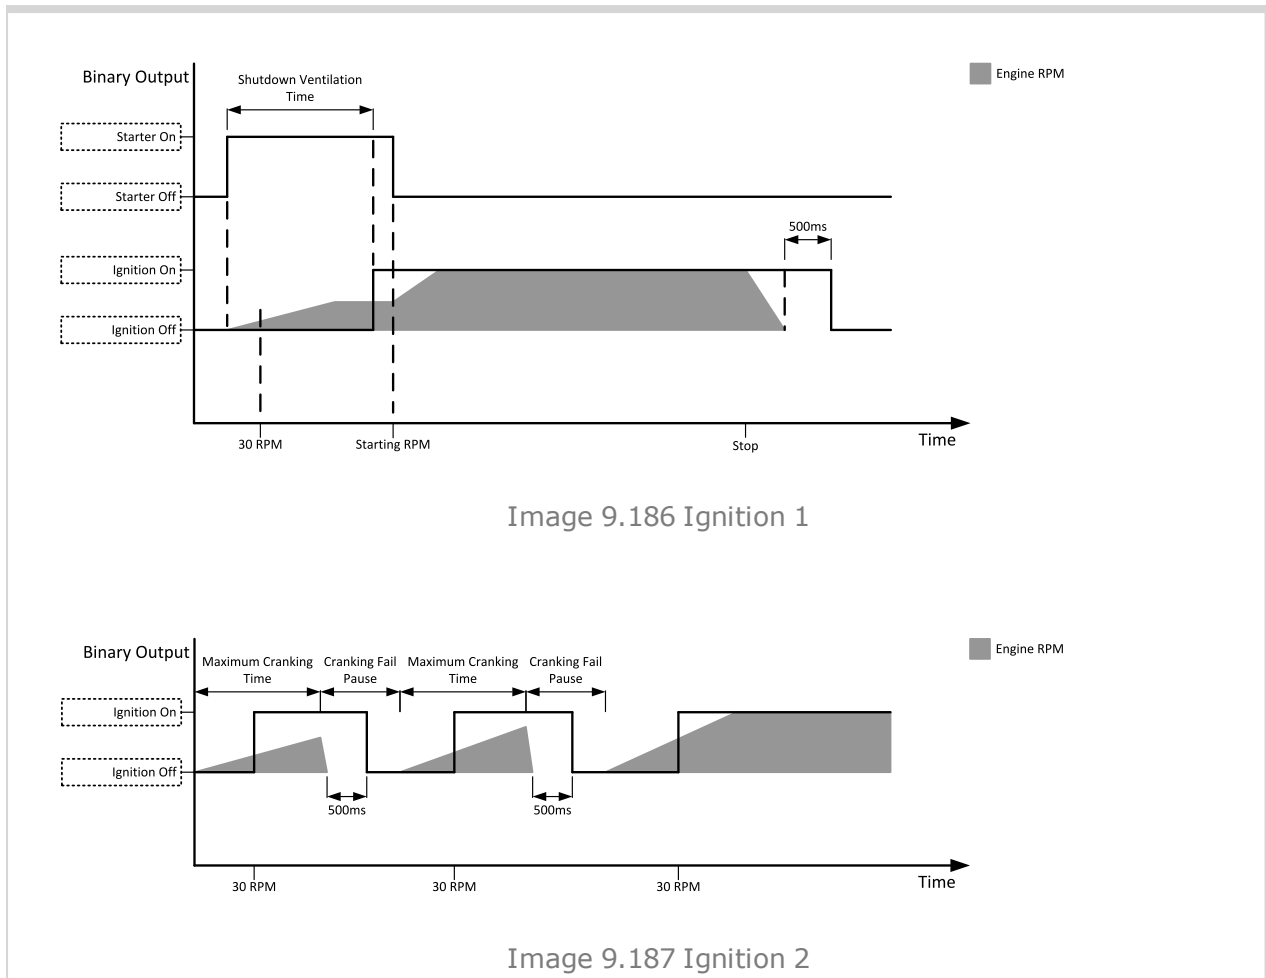

[back to Logical binary outputs alphabetically](#)

Ignition On

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1257		
Description			
This input is on since start button is pressed till the unit is completely stopped (or the engine doesn't start or Sd or E-Stop becomes active)			
Note: This function is the same as <i>ECU POWER RELAY (PAGE 596)</i> . Ignition ON stays there from historical reasons.			

[back to Logical binary outputs alphabetically](#)

LBO: M

Mains Healthy

Related FW	1.8.0	Related applications	AMF
Comm object	78		
Description			
This output is active while mains failure is not detected and mains voltage and frequency is within limits.			

⬅ back to Logical binary outputs alphabetically

Manual Ready

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1258		
Description			
This output is active when controller is in MAN mode and the engine is stopped and it is possible to start it i.e. no red alarm is activated or SD OVERRIDE (PAGE 562) is active (Output READY (PAGE 619) is active).			

⬅ back to Logical binary outputs alphabetically

MCB Close/Open

Related FW	1.8.0	Related applications	AMF
Comm object	45		
Description			
The output controls the mains circuit breaker. Its state represents the breaker position requested by the controller. The breaker must react within 5 seconds to a close or open command, otherwise an alarm is issued.			

Note: *InteliLite controllers can work even without breaker feedbacks, in this case do not configure the feedback to binary inputs.*


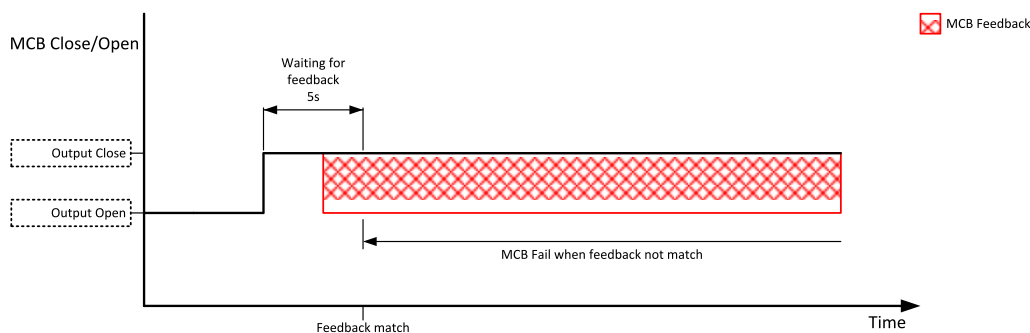


Image 9.188 MCB Close command

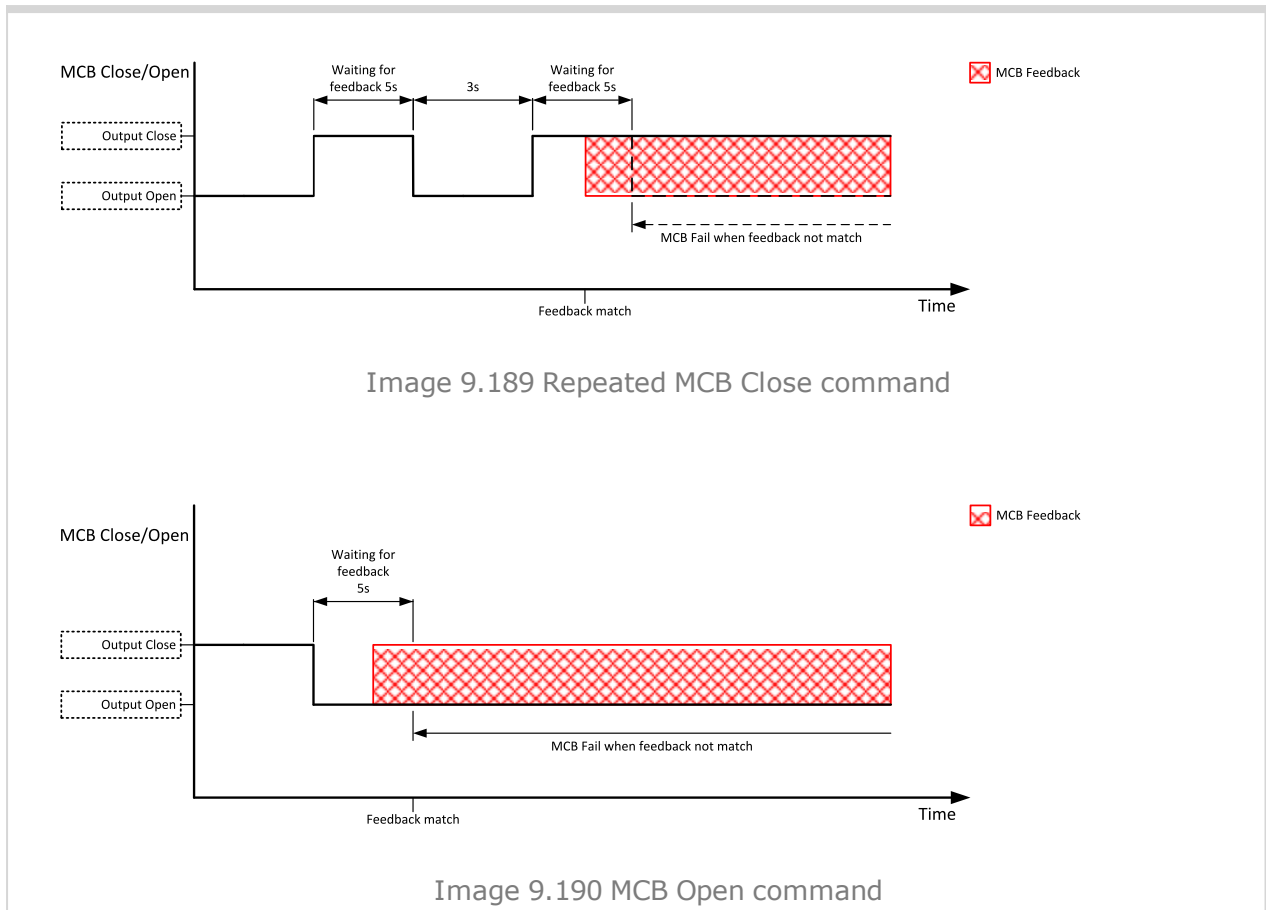

⬅ back to Logical binary outputs alphabetically

MCB OFF Coil

Related FW	1.8.0	Related applications	AMF
Comm object	47		

Description

The output is intended for control of open coil of mains circuit breaker. The output gives a pulse in the moment the breaker has to be opened. The pulse lasts until the feedback deactivates, but at least for 5 seconds.

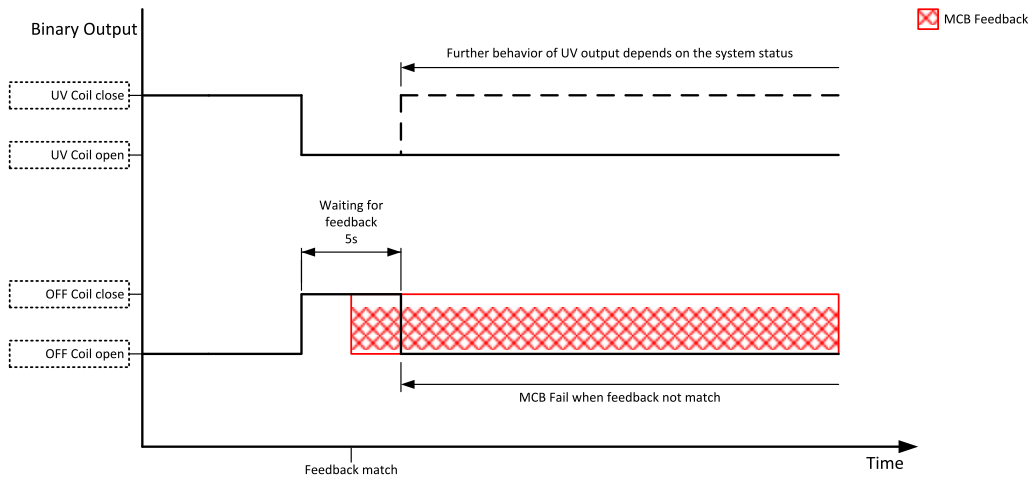


Image 9.191 MCB OFF Coil command

[back to Logical binary outputs alphabetically](#)

MCB ON Coil

Related FW	1.8.0	Related applications	AMF
Comm object	46		

Description

The output is intended for control of close coil of mains circuit breaker. The output gives at least 5 second pulse in the moment the breaker has to be closed.

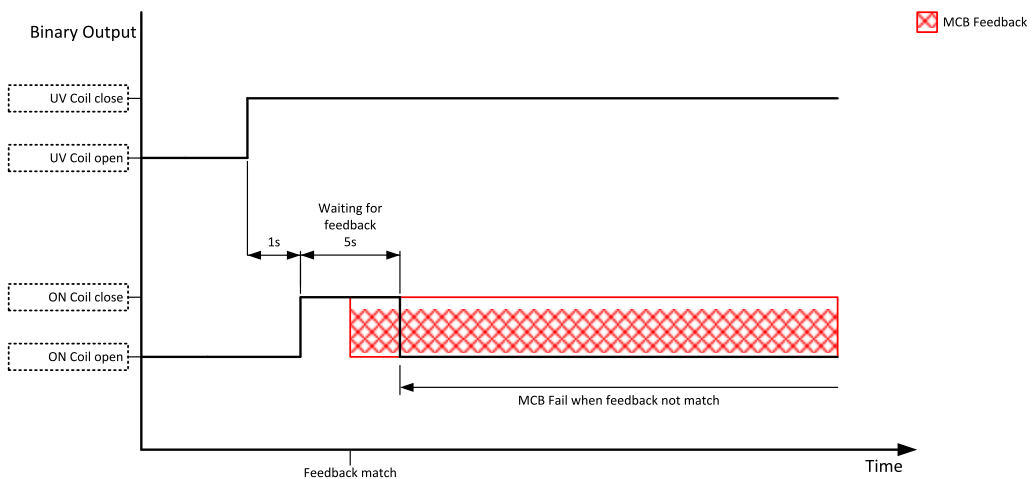


Image 9.192 MCB ON Coil close command

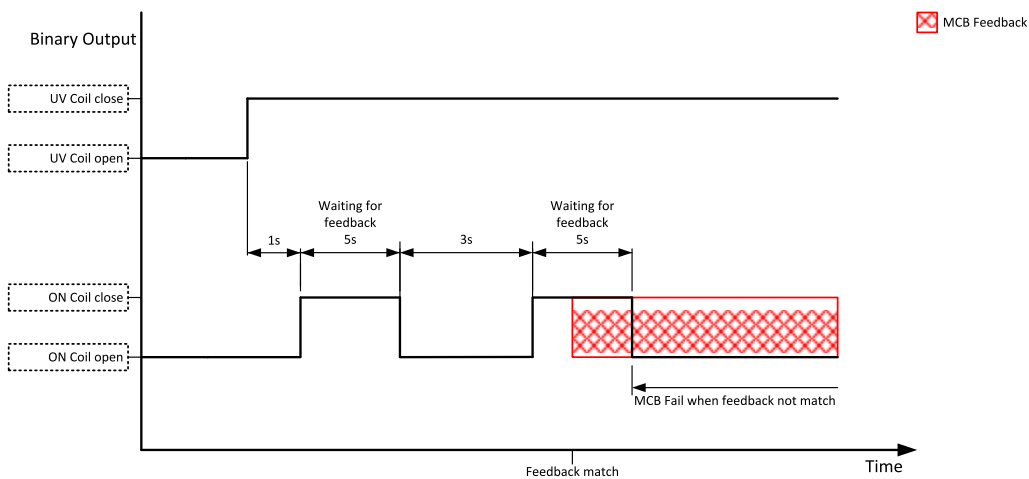


Image 9.193 Repeated MCB ON coil close command

[back to Logical binary outputs alphabetically](#)

MCB UV Coil

Related FW	1.8.0	Related applications	AMF
Comm object	48		

Description

The output is intended for control of undervoltage coil of mains circuit breaker. The output is active the whole time when the controller is switched on. The output is deactivated for at least 5 seconds in the moment the breaker has to be switched off.

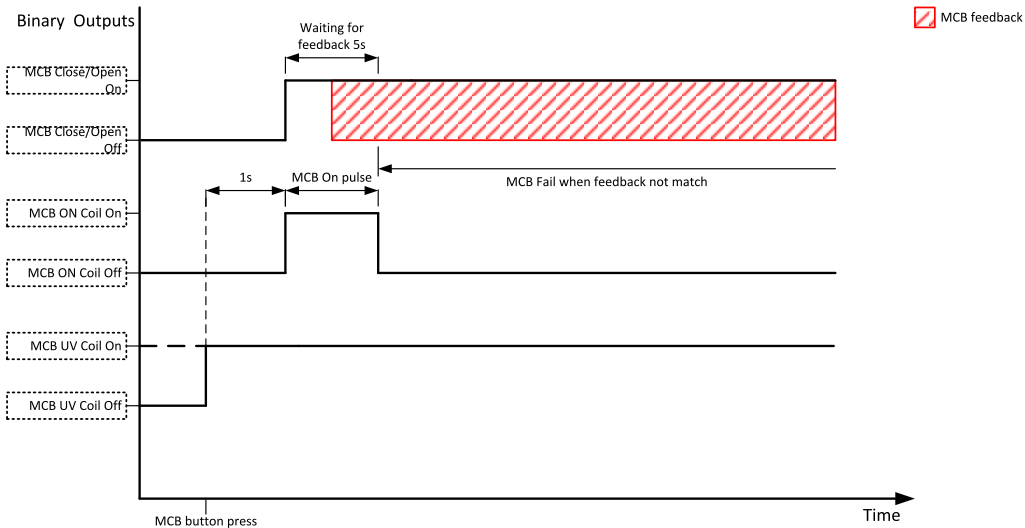


Image 9.194 MCB UV Coil close command

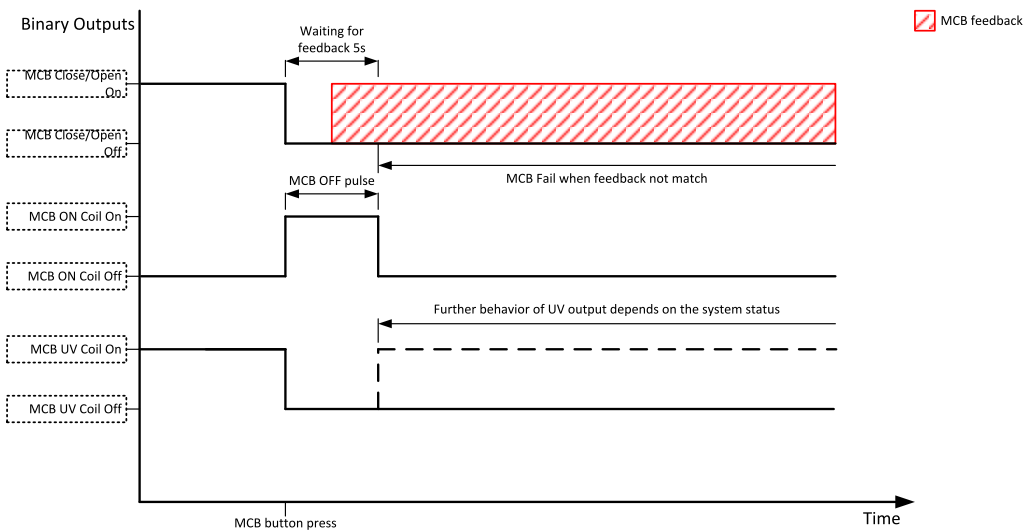


Image 9.195 MCB UV Coil open command

🔍 back to Logical binary outputs alphabetically

Mode AUTO

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	19		
Description			
This output is active whenever the controller is in AUTO mode.			

[◀ back to Logical binary outputs alphabetically](#)

Mode MAN

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	18		
Description			
This output is active whenever the controller is in MAN mode.			

[◀ back to Logical binary outputs alphabetically](#)

Mode OFF

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	17		
Description			
This output is active whenever the controller is in OFF mode.			

[◀ back to Logical binary outputs alphabetically](#)

Mode TEST

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	20		
Description			
This output is active whenever the controller is in TEST mode.			

[◀ back to Logical binary outputs alphabetically](#)

LBO: N

Not In AUTO

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1248		
Description			
This output is active when controller isn't in AUTO mode.			

[◀ back to Logical binary outputs alphabetically](#)

Not Used

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	286		
Description			
Output has no function.			

🔍 back to Logical binary outputs alphabetically

LBO: P

Power Switch

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	290		

Description

This is an output from the Power switch function. The behavior of the switch depends on the adjustment of the setpoints **Power Switch On** (page 236) and **Power Switch Off** (page 237). When the dummy load function is used the switching ON of Power switch is block when the engine isn't running and is allowed 30 s after start of the engine.

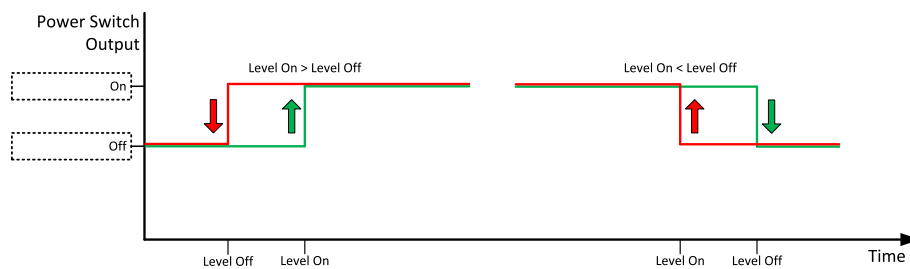


Image 9.196 Power Switch

Note: Setpoints **Power Switch On** (page 236) and **Power Switch Off** (page 237) are invisible until configuration of this LBO.

🔍 back to Logical binary outputs alphabetically

Prestart

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	36		
Description			

This output can be used for control of any device, which has to be activated just before start. The output is closed for time period of **Prestart Time (page 205)**. The output opens 100 ms before the **STARTER (PAGE 620)** output closes.

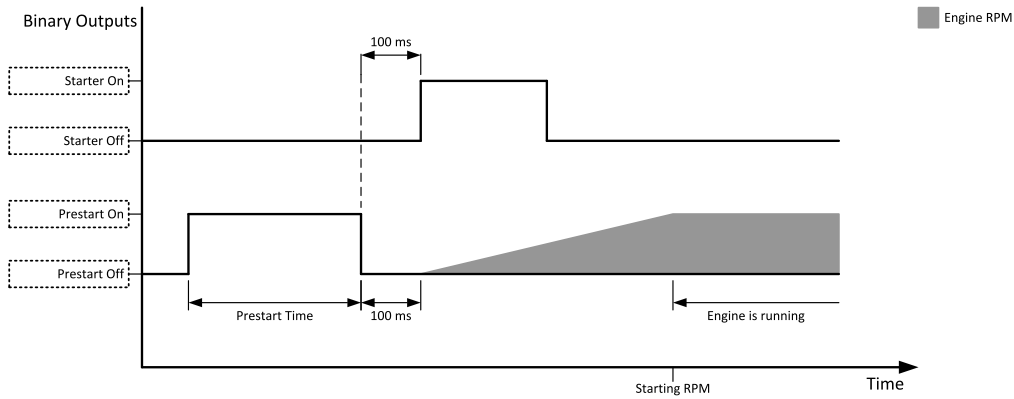


Image 9.197 Engine start

When the **Prestart Time (page 205)** is longer than **Cranking Fail Pause (page 204)** then the **Prestart Time (page 205)** in **Cranking Fail Pause (page 204)** is long as **Cranking Fail Pause (page 204)** minus 100ms.

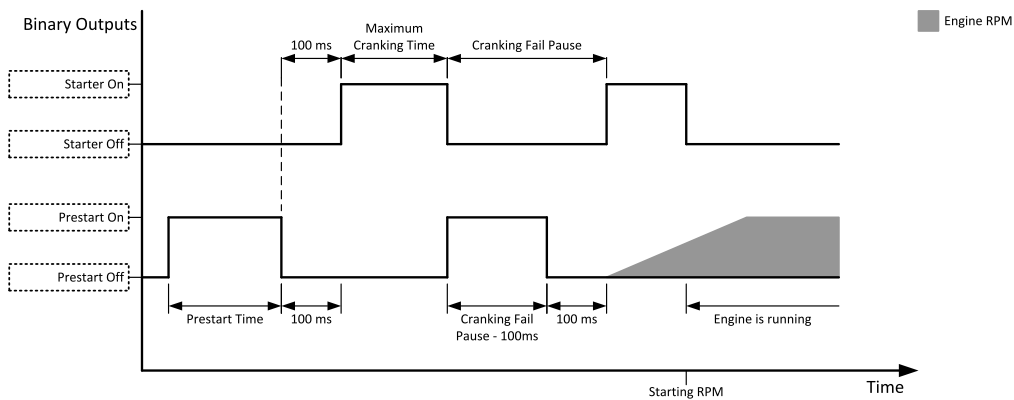


Image 9.198 Prestart in Cranking Fail Pause 1

When the **Prestart Time** (page 205) is shorter than **Cranking Fail Pause** (page 204) then the **Prestart Time** (page 205) in **Cranking Fail Pause** (page 204) is long as normal **Prestart Time** (page 205).

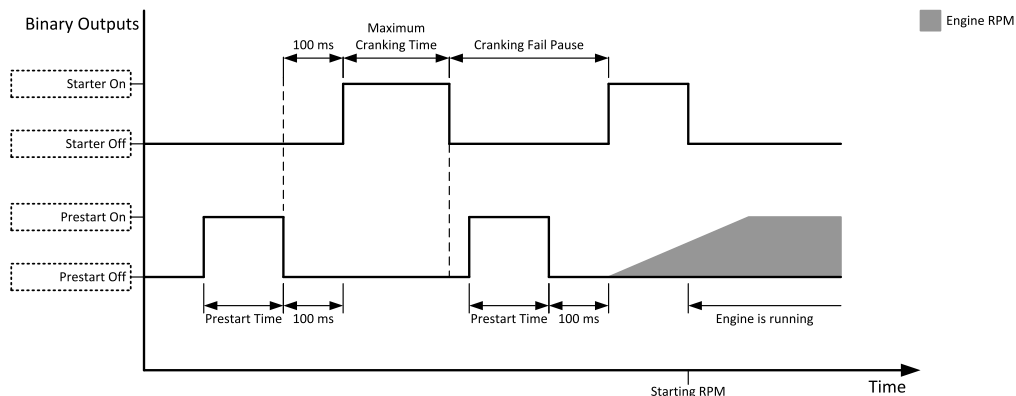


Image 9.199 Prestart in Cranking Fail Pause 2

[back to Logical binary outputs alphabetically](#)

LBO: R

Ready To AMF

Related FW	1.8.0	Related applications	AMF
Comm object	324		
Description			
<p>The output is closed if the gen-set is ready to start automatically and take the load if the mains fails, i.e.:</p> <ul style="list-style-type: none"> ▶ the controller is in AMF operating mode ▶ the controller is in AUTO controller mode and ▶ no red alarm is present in the alarmlist ▶ when the red alarm is confirmed during Stop Valve and other requirements are fulfilled then the LBO is still inactive until the state ready 			

[back to Logical binary outputs alphabetically](#)

Ready To Load

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	58		
Description			
<p>The output is closed whenever the GCB is closed or can be closed i.e. the stabilization phase is finished, the gen-set is running and the Minimal Stabilization Time (page 214) timer has elapsed. and the gen-set voltage and frequency are within limits.</p> <p>If GCB is open then gen-set voltage and frequency must be in limits.</p> <p>If GCB is close then gen-set voltage and frequency can be out of limits, but protection delay can't be count down. If gen-set voltage and frequency will return into limits until delay is count down then output is still closed.</p>			

[back to Logical binary outputs alphabetically](#)

Ready

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	62		
Description			
<p>The binary output is closed, when the engine is stopped and it is possible to start it i.e. no red alarm is activated or SD OVERRIDE (PAGE 562) is active.</p> <p>The binary output is switch on when the Ready state occurs.</p> <p>The binary output is switch off when the Prestart or the Not Ready or the Stop state occurs i.e. always except Ready state.</p>			

◀ back to Logical binary outputs alphabetically

Regen Needed

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1372		
Description			
<p>This output is closed when DPF lamp from ECU is active.</p>			

◀ back to Logical binary outputs alphabetically

Running

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	67		
Description			
<p>The output is designed to be used as an indication that the gen-set is running. The output closes if FUEL SOLENOID (PAGE 598) is closed and STARTER (PAGE 620) and PRESTART (PAGE 616) are open. The out remains close until engine stop and cooling period elapses.</p>			
<p>The diagram shows the timing of various signals during engine start and running. The y-axis lists signals: Starter Output (Starter On/Off), Fuel Solenoid (On/Off), and Running (On/Off). The x-axis is Time, starting from 'Start'. A 1s interval is marked for Cranking Time. Prestart Time is also indicated. A green shaded area represents the engine running period, with a legend indicating 'Engine is running'.</p>			
Image 9.200 Running			

◀ back to Logical binary outputs alphabetically

LBO: S

Sd Override

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	962		
Description			
The output is closed if SD OVERRIDE (PAGE 562) input is active and open if SD OVERRIDE (PAGE 562) input is inactive. This output is usually used to send information about SD OVERRIDE (PAGE 562) input into ECU.			

◀ back to Logical binary outputs alphabetically

Starter

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	24		

Description

This output is dedicated for starter motor control. The number of cranking attempts is adjusted by setpoint **Cranking Attempts (page 203)** in Engine Settings group. Cranking fail pause is adjusted by setpoint **Cranking Fail Pause (page 204)**.

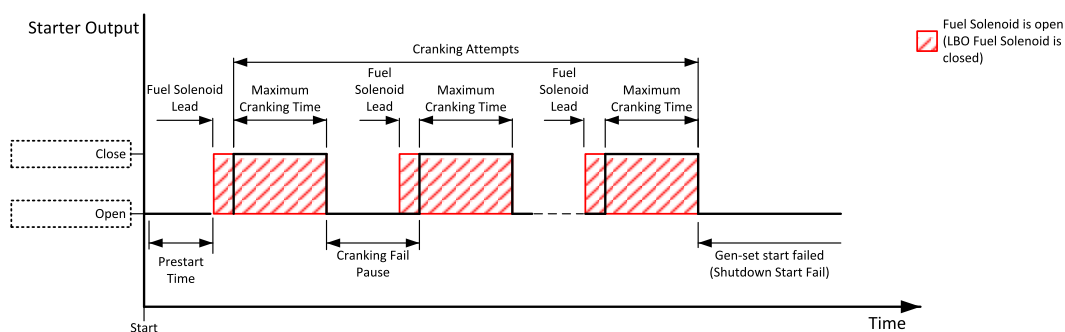


Image 9.201 Starter

The starter output opens when:

- ▶ the “firing” speed is reached
- ▶ maximum time of cranking is exceeded
- ▶ request to stop comes up
- ▶ D+ value is higher than **D+ Threshold (page 220)**
- ▶ Oil pressure value is higher than **Starting Oil Pressure (page 206)**
- ▶ Generator voltage > 25% of **Nominal Voltage Ph-N (page 193)** or **Nominal Voltage Ph-Ph (page 193)** (any phase)

◀ back to Logical binary outputs alphabetically

Still Log 0

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	26		
Description			
Logical binary output which is still in logical 0.			

◀ back to Logical binary outputs alphabetically

Still Log 1

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	27		
Description			
Logical binary output which is still in logical 1.			

◀ back to Logical binary outputs alphabetically

Stop Pulse

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	25		

Description

Output is active for 1 second after **STOP SOLENOID (PAGE 621)** output activation. This signal is sent to ECU in case of engine stop request.

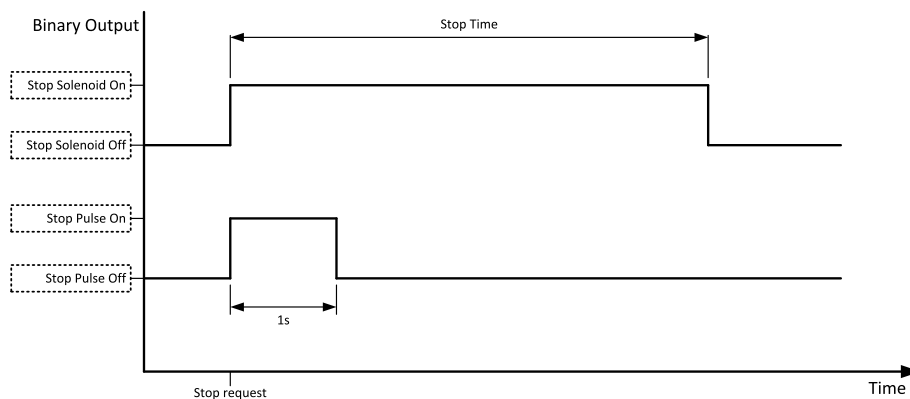


Image 9.202 Stop Pulse

◀ back to Logical binary outputs alphabetically

Stop Solenoid

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	23		

Description

This output is dedicated to control the stop solenoid (valve). The output closes when an engine stop command is received and is deactivated 12 s after last running engine indication went off, i.e. engine is stopped.

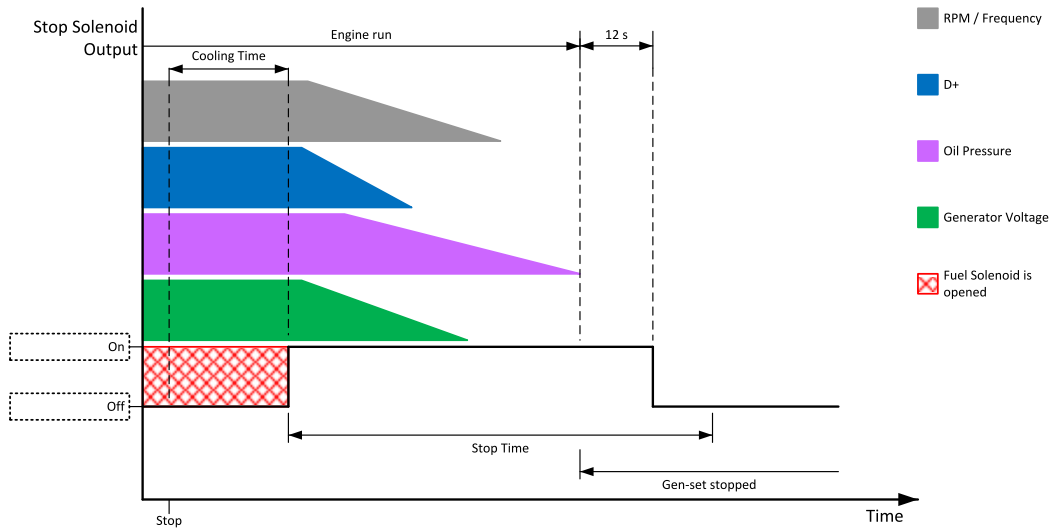


Image 9.203 Stop Solenoid 1

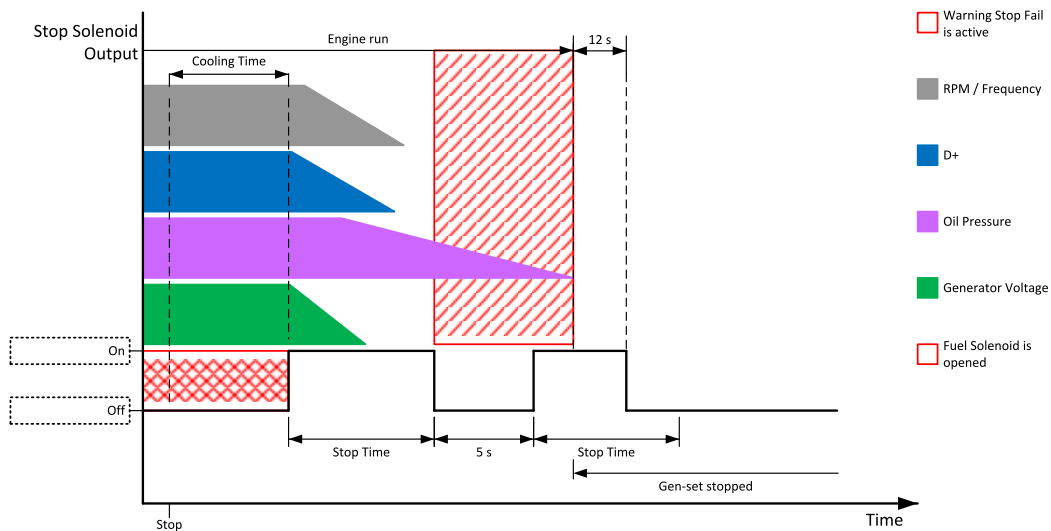


Image 9.204 Stop Solenoid 2

Note: If Additional running engine indications (page 131) went off during 5 s pause than Stop Solenoid is not activated again otherwise stop solenoid is activated again.

▲ Logical binary outputs alphabetically (page 565)

Supplying Load

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1249		
Description			
<p>The binary output depends on measured generator active power. Power is compared with generator nominal active power with use of hysteresis and with delay of switch 1 s.</p> <p>When the measured active power is equal or bigger than 5 % of Nominal Power (page 190) for 1 s than the binary output is closed.</p> <p>When the measured active power is equal or lower than 3 % of Nominal Power (page 190) for 1 s than the binary output is opened.</p>			

🔍 back to Logical binary outputs alphabetically


Swap Start

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	1997		
Description			
<p>This logical binary output is result of internal comparator which compares statistic values Running Hours (page 494) and Pulse Counter 2 (page 493). Binary output is active when Running Hours (page 494) are equal or higher than the Pulse Counter 2 (page 493).</p>			

🔍 back to Logical binary outputs alphabetically

LBO: T

Temperature Switch

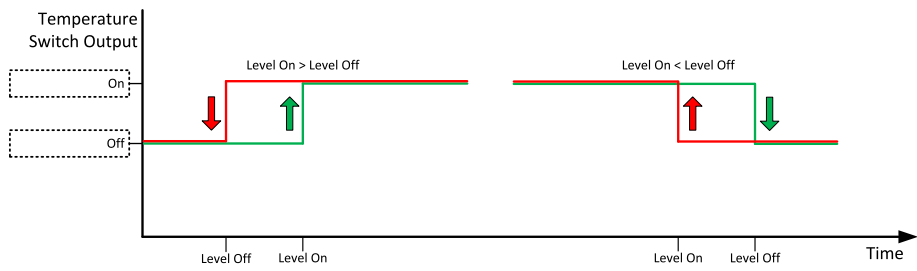Related FW	1.8.0	Related applications	AMF, MRS
Comm object	563		
Description			
<p>This is an output from the Temperature switch function. The behavior of the switch depends on the adjustment of the setpoints Temperature Switch On (page 226) and Temperature Switch Off (page 227).</p>			
			
Image 9.205 Temperature Switch			
<p>Note: Setpoints Temperature Switch On (page 226) and Temperature Switch Off (page 227) are invisible until configuration of this LBO.</p>			

🔍 back to Logical binary outputs alphabetically

LBO: V

Ventilation

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	38		
Description			
<p>This logical binary output is activated at the beginning of start procedure together with PRESTART (PAGE 616) LBO. Ventilation output is deactivated when engine stops revolving.</p> <p>Ventilation LBO is also deactivated immediately when EMERGENCY STOP (PAGE 551) (or E-Stop) is activated or when controller is switched to OFF mode.</p> <p><i>Note: The output is intended for control of an engine room ventilation fan, engine container ventilation fan, container louvres or similar running gen-set technology.</i></p>			

[◀ back to Logical binary outputs alphabetically](#)

Ventilation Off Pulse

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2090		
Description			
<p>This logical binary output is activated on falling edge of VENTILATION (PAGE 624) LBO (when engine stops). The pulse duration is adjusted by Ventilation Pulse Time (page 239) setpoint.</p> <p><i>Note: The output is intended for control of an engine room ventilation fan, engine container ventilation fan, container louvres or similar running gen-set technology.</i></p>			

[◀ back to Logical binary outputs alphabetically](#)

Ventilation On Pulse

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	2089		
Description			
<p>This logical binary output is activated on rising edge of VENTILATION (PAGE 624) LBO (at the beginning of prestart period). The pulse duration is adjusted by Ventilation Pulse Time (page 239) setpoint.</p> <p><i>Note: The output is intended for control of an engine room ventilation fan, engine container ventilation fan, container louvres or similar running gen-set technology.</i></p>			

[◀ back to Logical binary outputs alphabetically](#)

8.1.5 Logical analog inputs

What Logical analog inputs are:

Logical analog inputs are inputs for analog values.

Alphabetical groups of Logical analog inputs

LAI: A	627
LAI: C	654
LAI: F	655
LAI: N	656
LAI: O	657

For full list of Logical analog inputs go to the chapter **Logical analog inputs alphabetically (page 626)**.

Logical analog inputs alphabetically

AIN Prot01	627	AIN Switch 18	652
AIN Prot02	628	AIN Switch 19	653
AIN Prot03	629	AIN Switch 20	653
AIN Prot04	630	Coolant Temp	654
AIN Prot05	631	Fuel Level	655
AIN Prot06	632	Not Used	656
AIN Prot07	633	Oil Pressure	657
AIN Prot08	634		
AIN Prot09	635		
AIN Prot10	636		
AIN Prot11	637		
AIN Prot12	638		
AIN Prot13	639		
AIN Prot14	640		
AIN Prot15	641		
AIN Prot16	642		
AIN Prot17	643		
AIN Prot18	644		
AIN Prot19	645		
AIN Prot20	646		
AIN Switch 01	647		
AIN Switch 02	647		
AIN Switch 03	647		
AIN Switch 04	648		
AIN Switch 05	648		
AIN Switch 06	648		
AIN Switch 07	649		
AIN Switch 08	649		
AIN Switch 09	649		
AIN Switch 10	650		
AIN Switch 11	650		
AIN Switch 12	650		
AIN Switch 13	651		
AIN Switch 14	651		
AIN Switch 15	651		
AIN Switch 16	652		
AIN Switch 17	652		

LAI: A

AIN Prot01

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9999		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. Limits for this protection are adjusted by setpoints Analog Protection 1 Wrn (page 264) and Analog Protection 1 Sd (page 264). Delay is adjusted by setpoint Analog Protection 1 Delay (page 265).</p>			
Protection types			
Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.		
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.		
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.		
Wrn	Analog value is used for warning protection only.		
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.		
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.		
Wrn + Sd	Analog value is used for warning and shutdown protection.		
Sd	Analog value is used for shutdown protection.		
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
Alarm			
Under limit	Alarm is activated when value of analog input is under adjusted limits		
Over limit	Alarm is activated when value of analog input is over adjusted limits		
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
<p>Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.</p>			
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			

🔍 back to Logical analog inputs alphabetically

AIN Prot02

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9998		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 2 Wrn (page 266)** and **Analog Protection 2 Sd (page 267)**. Delay is adjusted by setpoint **Analog Protection 2 Delay (page 267)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot03

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9997		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 3 Wrn (page 269)** and **Analog Protection 3 Sd (page 270)**. Delay is adjusted by setpoint **Analog Protection 3 Delay (page 270)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot04

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9996		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 4 Wrn (page 272)** and **Analog Protection 4 Sd (page 273)**. Delay is adjusted by setpoint **Analog Protection 4 Delay (page 273)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot05

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9995		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 5 Wrn (page 275)** and **Analog Protection 5 Sd (page 276)**. Delay is adjusted by setpoint **Analog Protection 5 Delay (page 276)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot06

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9994		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 6 Wrn (page 278)** and **Analog Protection 6 Sd (page 279)**. Delay is adjusted by setpoint **Analog Protection 6 Delay (page 279)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot07

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9993		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 7 Wrn (page 281)** and **Analog Protection 7 Sd (page 282)**. Delay is adjusted by setpoint **Analog Protection 7 Delay (page 282)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot08

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9992		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 8 Wrn (page 284)** and **Analog Protection 8 Sd (page 285)**. Delay is adjusted by setpoint **Analog Protection 8 Delay (page 285)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot09

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9991		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 9 Wrn (page 287)** and **Analog Protection 9 Sd (page 288)**. Delay is adjusted by setpoint **Analog Protection 9 Delay (page 288)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot10

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9990		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 10 Wrn (page 290)** and **Analog Protection 10 Sd (page 291)**. Delay is adjusted by setpoint **Analog Protection 10 Delay (page 291)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot11

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9989		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 11 Wrn (page 293)** and **Analog Protection 11 Sd (page 294)**. Delay is adjusted by setpoint **Analog Protection 11 Delay (page 294)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot12

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9988		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 12 Wrn (page 296)** and **Analog Protection 12 Sd (page 297)**. Delay is adjusted by setpoint **Analog Protection 12 Delay (page 297)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot13

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9987		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 13 Wrn (page 299)** and **Analog Protection 13 Sd (page 300)**. Delay is adjusted by setpoint **Analog Protection 13 Delay (page 300)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot14

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9986		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 14 Wrn (page 302)** and **Analog Protection 14 Sd (page 303)**. Delay is adjusted by setpoint **Analog Protection 14 Delay (page 303)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot15

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9985		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 15 Wrn (page 305)** and **Analog Protection 15 Sd (page 306)**. Delay is adjusted by setpoint **Analog Protection 15 Delay (page 306)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot16

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9984		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 16 Wrn (page 308)** and **Analog Protection 16 Sd (page 309)**. Delay is adjusted by setpoint **Analog Protection 16 Delay (page 309)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot17

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9983		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 17 Wrn (page 311)** and **Analog Protection 17 Sd (page 312)**. Delay is adjusted by setpoint **Analog Protection 17 Delay (page 312)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot18

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9982		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 18 Wrn (page 314)** and **Analog Protection 18 Sd (page 315)**. Delay is adjusted by setpoint **Analog Protection 18 Delay (page 315)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot19

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9981		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 19 Wrn (page 317)** and **Analog Protection 19 Sd (page 318)**. Delay is adjusted by setpoint **Analog Protection 19 Delay (page 318)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot20

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9980		

Description

Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs **see Analog inputs on page 49**. Limits for this protection are adjusted by setpoints **Analog Protection 20 Wrn (page 320)** and **Analog Protection 20 Sd (page 321)**. Delay is adjusted by setpoint **Analog Protection 20 Delay (page 321)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.
Wrn + Sd	Analog value is used for warning and shutdown protection.
Sd	Analog value is used for shutdown protection.

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Switch 01

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	209		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH01 (PAGE 579). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 1 On (page 265) and Analog Switch 1 Off (page 266).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 02

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	210		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH02 (PAGE 580). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 2 On (page 268) and Analog Switch 2 Off (page 269).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 03

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	211		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH03 (PAGE 580). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 3 On (page 271) and Analog Switch 3 Off (page 272).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 04

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	212		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH04 (PAGE 581). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 4 On (page 274) and Analog Switch 4 Off (page 275).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 05

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	278		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH05 (PAGE 581). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 5 On (page 277) and Analog Switch 5 Off (page 278).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 06

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	279		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH06 (PAGE 582). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 6 On (page 280) and Analog Switch 6 Off (page 281).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 07

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	280		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH07 (PAGE 582). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 7 On (page 283) and Analog Switch 7 Off (page 284).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 08

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	281		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH08 (PAGE 583). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 8 On (page 286) and Analog Switch 8 Off (page 287).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 09

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	282		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH09 (PAGE 583). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 9 On (page 289) and Analog Switch 9 Off (page 290).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 10

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	283		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH10 (PAGE 584). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 10 On (page 292) and Analog Switch 10 Off (page 293).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 11

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	284		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH11 (PAGE 584). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 11 On (page 295) and Analog Switch 11 Off (page 296).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 12

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	285		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH12 (PAGE 585). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 12 On (page 298) and Analog Switch 12 Off (page 299).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 13

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	286		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH13 (PAGE 585). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 13 On (page 301) and Analog Switch 13 Off (page 302).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 14

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	287		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH14 (PAGE 586). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 14 On (page 304) and Analog Switch 14 Off (page 305).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 15

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	288		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH15 (PAGE 586). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 15 On (page 307) and Analog Switch 15 Off (page 308).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 16

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	289		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH16 (PAGE 587). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 16 On (page 310) and Analog Switch 16 Off (page 311).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 17

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	290		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH17 (PAGE 587). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 17 On (page 313) and Analog Switch 17 Off (page 314).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 18

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	291		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH18 (PAGE 588). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 18 On (page 316) and Analog Switch 18 Off (page 317).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

🔍 back to Logical analog inputs alphabetically

AIN Switch 19

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	292		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH19 (PAGE 588). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 19 On (page 319) and Analog Switch 19 Off (page 320).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[◀ back to Logical analog inputs alphabetically](#)

AIN Switch 20

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	293		
Description			
<p>Logical analog input designed for general value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. This analog input controls logical binary output AIN SWITCH20 (PAGE 589). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 20 On (page 322) and Analog Switch 20 Off (page 323).</p> <p><i>Note: This function is not suitable for tristate or binary analog sensors.</i></p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[◀ back to Logical analog inputs alphabetically](#)

LAI: C

Coolant Temp

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	67		
Description			
<p>Logical analog input designed for coolant temperature value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. Limits for this protection are adjusted by setpoints Coolant Temperature Wrn (page 224) and Coolant Temperature Sd (page 224). Delay is adjusted by setpoint Coolant Temperature Delay (page 225).</p>			
Protection types			
Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.		
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.		
Wrn	Analog value is used for warning protection only.		
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.		
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.		
Wrn + Sd	Analog value is used for warning and shutdown protection.		
Sd	Analog value is used for shutdown protection.		
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
Alarm			
Under limit	Alarm is activated when value of analog input is under adjusted limits		
Over limit	Alarm is activated when value of analog input is over adjusted limits		
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
<p>Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.</p>			
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
<p>Note: This analog function can by also configured on binary input as binary function. In this case chose COOLANT TEMP (PAGE 548) binary input in the list of binary inputs. Delay of this binary input is adjusted via the same setpoint like for analog function.</p>			
IMPORTANT: Value from analog input has higher priority than value from ECU.			

🔍 back to Logical analog inputs alphabetically

LAI: F

Fuel Level

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	78		
Description			
<p>Logical analog input designed for fuel level value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. Limits for this protection are adjusted by setpoints Fuel Level Wrn (page 228) and Fuel Level Sd (page 228). Delay is adjusted by setpoint Fuel Level Delay (page 229).</p>			
Protection types			
Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.		
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.		
Wrn	Analog value is used for warning protection only.		
Wrn + BOC	Analog value is used for warning and BOC (Breaker Open and Cooling) protection.		
BOC	Analog value is used for BOC (Breaker Open and Cooling) protection.		
Wrn + Sd	Analog value is used for warning and shutdown protection.		
Sd	Analog value is used for shutdown protection.		
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
Alarm			
Under limit	Alarm is activated when value of analog input is under adjusted limits		
Over limit	Alarm is activated when value of analog input is over adjusted limits		
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
<p>Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.</p>			
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
<p>IMPORTANT: For right behavior of this function, curve for analog input has to be in percentage and setpoint Fuel Tank Volume (page 230) has to be adjusted correctly.</p>			
<p>Note: This analog function can by also configured on binary input as binary function. In this case chose FUEL LEVEL (PAGE 552) binary input in the list of binary inputs. Delay of this binary input is adjusted via the same setpoint like for analog function.</p>			
<p>IMPORTANT: Value from analog input has higher priority than value from ECU.</p>			

🔍 back to Logical analog inputs alphabetically

LAI: N**Not Used**

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	230		
Description			
Input has no function.			

 [back to Logical analog inputs alphabetically](#)

LAI: O

Oil Pressure

Related FW	1.8.0	Related applications	AMF, MRS
Comm object	9		
Description			
<p>Logical analog input designed for oil pressure value received from analog sensor. For more information about wiring of analog inputs see Analog inputs on page 49. Limits for this protection are adjusted by setpoints Oil Pressure Wrn (page 222) and Oil Pressure Sd (page 222). Delay is adjusted by setpoint Oil Pressure Delay (page 223).</p>			
Protection types			
Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.		
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.		
Wrn	Analog value is used for warning protection only.		
Wrn + Sd	Analog value is used for warning and Sd protection.		
Sd	Analog value is used for Sd protection.		
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
Alarm			
Under limit	Alarm is activated when value of analog input is under adjusted limits		
Over limit	Alarm is activated when value of analog input is over adjusted limits		
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
<p>Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.</p>			
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
Note: This analog function can by also configured on binary input as binary function. In this case chose OIL PRESSURE (PAGE 558) binary input in the list of binary inputs. Delay of this binary input is adjusted via the same setpoint like for analog function.			
IMPORTANT: Value from analog input has higher priority than value from ECU.			

🔍 back to Logical analog inputs alphabetically

8.1.6 PLC

List of PLC groups

Group: Basic Logical functions660

Group: Comparison of analog inputs	663
Group: Time functions	665
Group: Other functions	669

For full list of PLC blocks go to the chapter **List of PLC blocks (page 659)**.

List of PLC blocks

Group: Basic logical functions

OR/AND	660
XOR/RS	662

Group: Comparison of analog inputs

Comparator With Hysteresis	663
Comparator With Delay ..	664

Group: Time functions

Timer	665
Delay	667

Group: Other functions

Force History Record	669
Force Protection	669

Group: Basic Logical functions

OR/AND

PLC group	Basic logical functions	
Related FW	1.8.0	
Related applications	AMF, MRS	
Comm object	1	

Inputs

Input	Type	Negation	Range	Function
Input 1..8	Binary	Yes	0/1	Inputs 1..8

Outputs

Output	Type	Negation	Range	Function
Output	Binary	Yes	0/1	Result of the logical operation

Description

The block performs logical operation OR / AND of 2 - 8 binary operands. The inputs as well as the output can be inverted.

Function OR

Input 1	Input 2	Output
0	0	0
0	1	1
1	0	1
1	1	1

Function AND

Input 1	Input 2	Output
0	0	0
0	1	0
1	0	0
1	1	1

There have to be at least 2 inputs every time. There may be up to 8 inputs configured.

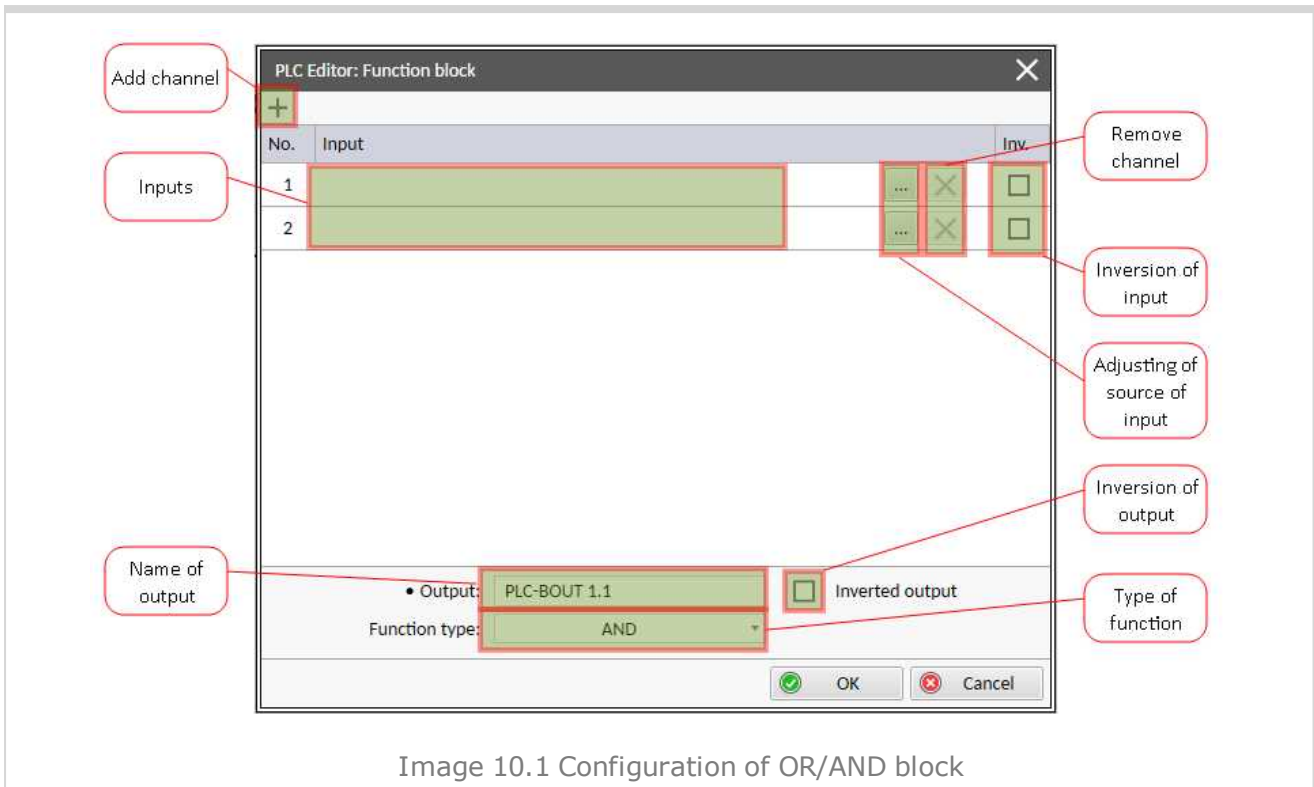



Image 10.1 Configuration of OR/AND block

[back to List of PLC blocks](#)

XOR/RS

PLC group	Basic logical functions	
Related FW	1.8.0	
Related applications	AMF, MRS	
Comm object	2	

Inputs

Input	Type	Negation	Range	Function
Input 1..2	Binary	Yes	0/1	Inputs 1..2

Outputs

Output	Type	Negation	Range	Function
Output	Binary	Yes	0/1	Result of the logical operation

Description

The block provides logical function of two values - XOR or RS flip-flop. Both inputs and output can be inverted.

Function XOR

Input 1	Input 2	Output
0	0	0
0	1	1
1	0	1
1	1	0

Function RS

R	S	Q _{n+1}
0	0	Q _n
0	1	1
1	0	0
1	1	0

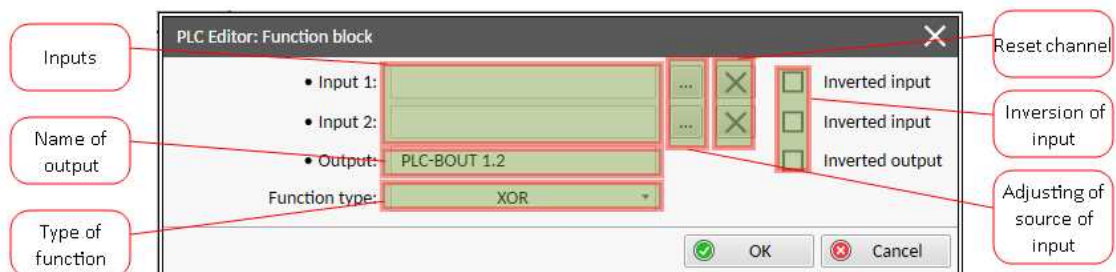



Image 10.2 Configuration of XOR/RS block

[back to List of PLC blocks](#)

Group: Comparison of analog inputs

Comparator With Hysteresis

PLC group	Comparison of analog inputs	
Related FW	1.8.0	
Related applications	AMF, MRS	
Comm object	3	

Inputs

Input	Type	Negation	Range	Function
Input	Analog	No	Any	Compared value
Input ON	Analog	No	Same as Input	Comparative level for switching on
Input OFF	Analog	No	Same as Input	Comparative level for switching off

Outputs

Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Comparator output

Description

The block compares the input value with the comparative levels. The behavior depends on whether the ON level is higher than OFF level or vice versa.

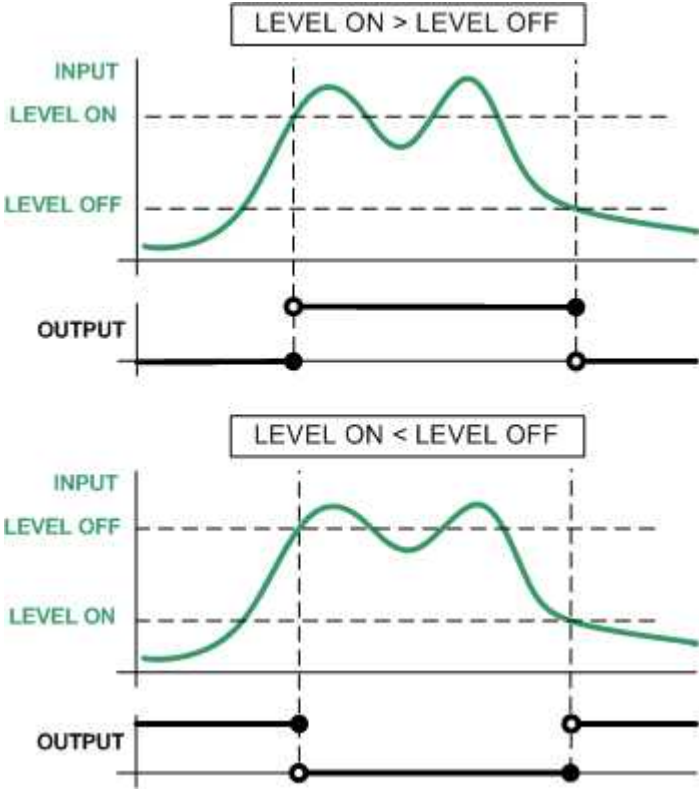


Image 10.3 Different On and Off levels

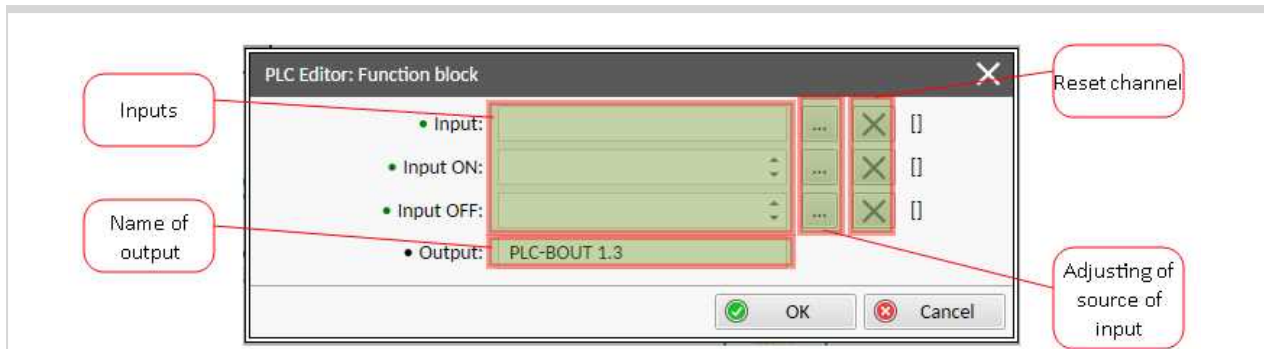



Image 10.4 Configuration of Comp Hyst block

Note: Level On and Level Off can be constants or values from controller.

IMPORTANT: In case that values on inputs have different decimal numbers than the values are converted and the name of block is red. It is strongly recommended to use values with the same decimal numbers.

⏪ back to List of PLC blocks

Comparator With Delay

PLC group	Comparison of analog inputs			
Related FW	1.8.0			
Related applications	AMF, MRS			
Comm object	4			
Inputs				
Input	Type	Negation	Range	Function
Input 1	Analog	No	Any	Compared value
Input 2	Analog	No	Same as Input 1	Comparative level
Delay	Analog	No	0.0..3000,0 [s]	Comparative delay
Outputs				
Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Comparator output
Description				
The block works as an analog switch. It compares the input value with the comparative level. The output will switch on if the input is equal or higher than the comparative level for time longer than the delay.				

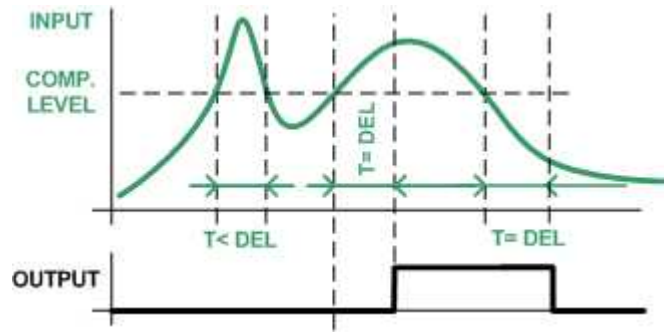


Image 10.5 Principle of delay

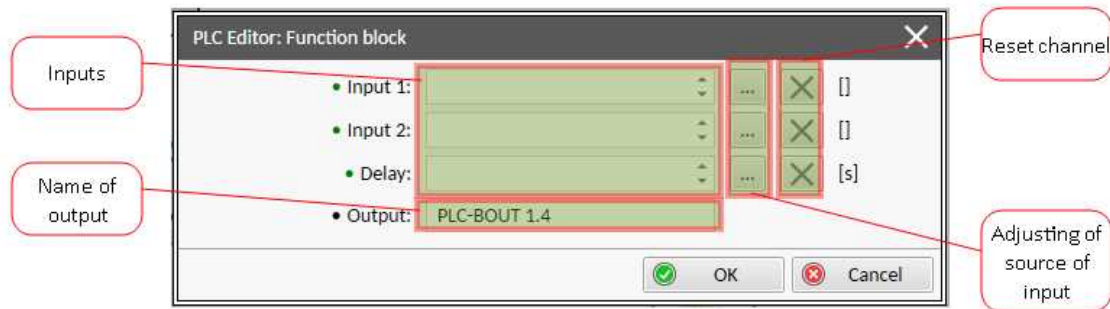



Image 10.6 Configuration of Comp Time block

Note: Input 2 and Delay can be constants or values from controller.

 back to List of PLC blocks

Group: Time functions

Timer

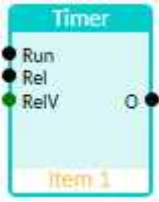PLC group	Time functions			
Related FW	1.8.0			
Related applications	AMF, MRS			
Comm object	14			
Inputs				
Input	Type	Negation	Range	Function
Run	Binary	No	0/1	The timer runs only if this input is active or not connected
Reload	Binary	No	0/1	This input reloads the timer to the initial value
Reload value	Analog	No	0,0..3276,7 [s]	Initial value of the timer
Outputs				

Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Timer output

Description

The block works as a countdown timer which is decreased by 1 every PLC cycle. The timer initial value is adjustable by the "Reload value" input. The timer is automatically reloaded with the initial value when it reaches zero or it can be reloaded in any other moment using the "reload" input. The timer is held at reload value until the reload input is deactivated. The timer output is inverted always when the timer is reloaded.

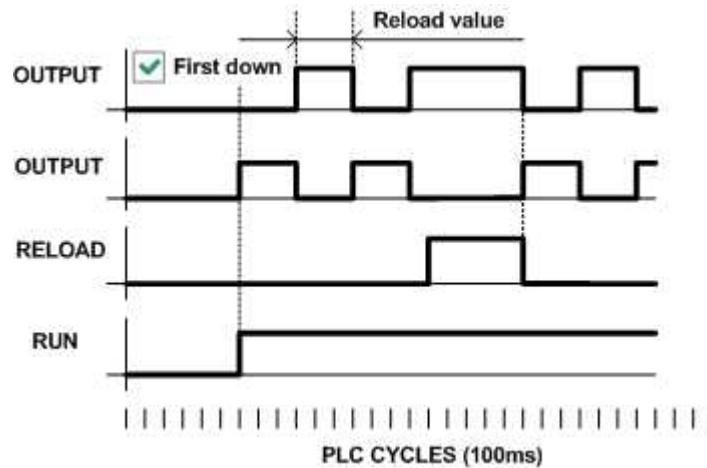


Image 10.7 Principle of timer

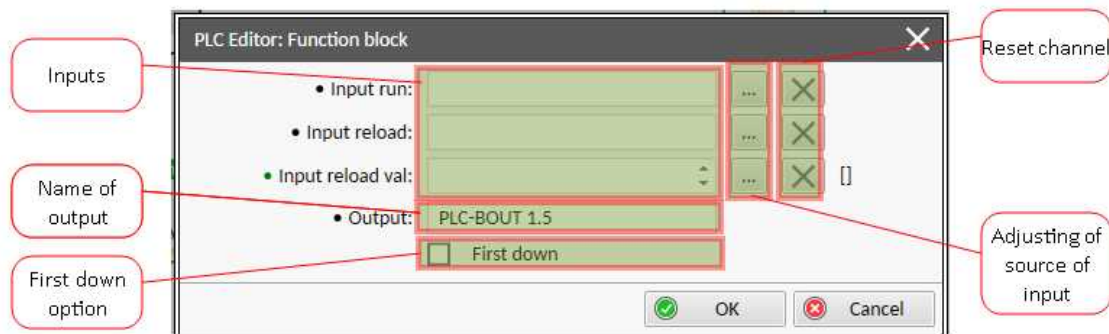


Image 10.8 Configuration of Timer block


Note: Input reload value can be constant or value from controller.

Note: If you want the output to start at logical 0, tick First down option. Otherwise the output will start at logical 1.

IMPORTANT: In case that inputs are not connected and First down option isn't tick, than output is active.

 back to List of PLC blocks

Delay

PLC group	Time functions			
Related FW	1.8.0			
Related applications	AMF, MRS			
Comm object	33			
Inputs				
Input	Type	Negation	Range	Function
Input	Binary	No	0/1	Input signal to be delayed
Input time up	Analog	No	-3200,0..3200,0 [s, m, h]	Delay of the rising edge resp. pulse length generated by rising edge of the input
Input time down	Analog	No	-3200,0..3200,0 [s, m, h]	Delay of the falling edge resp. pulse length generated by falling edge of the input
Input reset	Binary	No	0/1	Resets the output to logical 0. The output remains in logical 0 until new rising edge appears on Input (when Input reset is deactivated already)
Outputs				
Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Output signal
Description				
<p>This block can work in two modes of operation:</p> <ul style="list-style-type: none"> ▶ Delay mode - the rising edge at the output is generated with delay of "input time up" when a rising edge at the input is detected. The falling edge at the output is generated with delay of "input time down" when a falling edge at the input is detected. If the delayed falling edge at the output came earlier than the delayed rising edge, then no pulse would be generated at the output. ▶ Pulse mode - a pulse of "input time up" length is generated at the output when a rising edge is detected, a pulse of "input time down" length is generated at the output when a falling edge is detected. 				

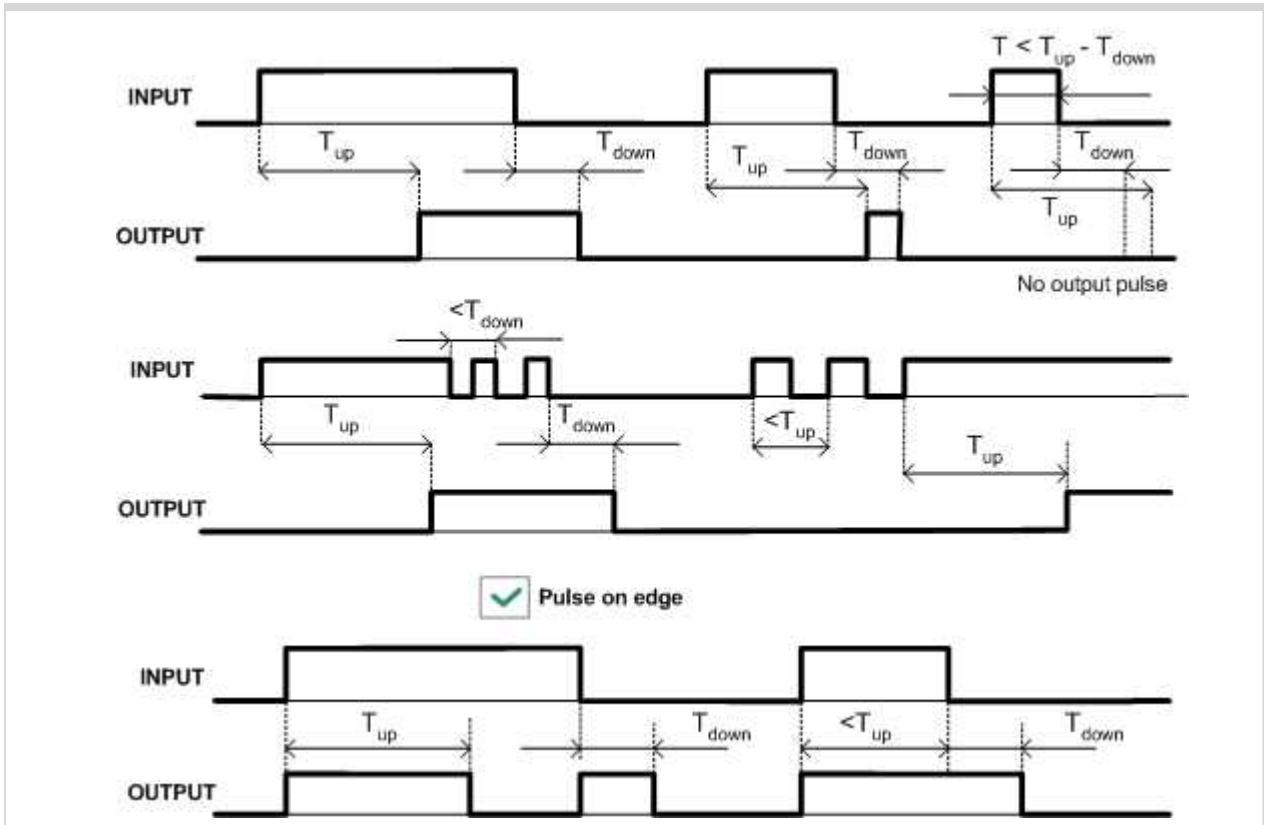


Image 10.9 Delay modes principles

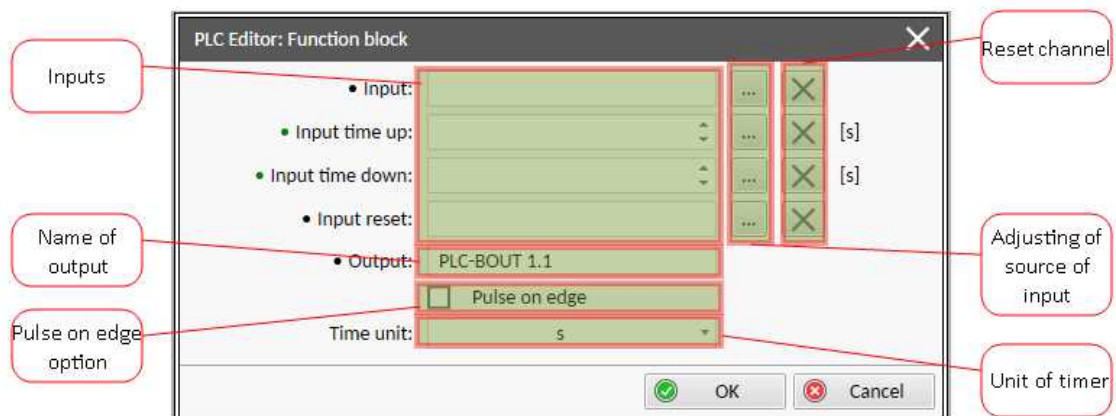


Image 10.10 Configuration of Delay block

Note: If Input time up or Input time down value is <0, this input is internally set to zero.

Note: Input time up and Input time down values can be constants or values from controller.

Note: Use Pulse on edge option to choose between delay and pulse mode.

 back to List of PLC blocks

Group: Other functions

Force History Record

PLC group	Other functions	
Related FW	1.8.0	
Related applications	AMF, MRS	
Comm object	9	

Inputs

Input	Type	Negation	Range	Function
Input	Binary	No	0/1	A record with configured text is recorded into the controller history when the input is activated.

Outputs

No outputs.

Description

This block writes a record with defined text into the history when the input is activated.

Image 10.11 Configuration of Force Hist block

Note: Maximal number of characters for history message is 15.

⬅ back to List of PLC blocks

Force Protection

PLC group	Other functions	
Related FW	1.8.0	
Related applications	AMF, MRS	
Comm object	10	

Inputs

Input	Type	Negation	Range	Function
Lvl 1	Binary	No	0/1	The input activates yellow level of the configured protection if it is configured
Lvl 2	Binary	No	0/1	The input activates red level of the configured protection if a red level protection is configured
Fls	Binary	No	0/1	The input activates sensor fail if a fls protection is configured

Outputs
No outputs.

Description
This block issues alarms of configured type and text when appropriate binary input is activated.

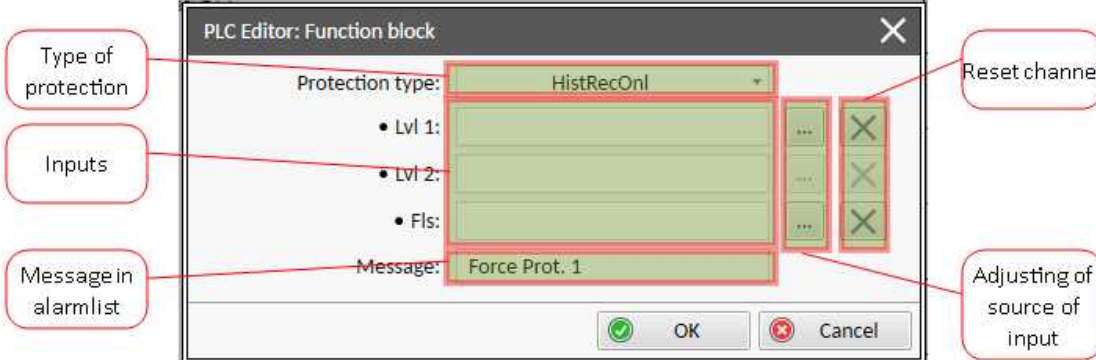


Image 10.12 Configuration of Force Prot block

Available protections are:

- ▶ Monitoring
- ▶ HistRecOnl
- ▶ AL Indic
- ▶ Wm
- ▶ Wm+BOC
- ▶ BOC
- ▶ Wm+Sd
- ▶ Sd

Note: Maximal number of characters for alarmlist message is 15.

Note: Prefix of protection (e.g. Wm, Sd, BOC) is added automatically into alarmlist message.

 [back to List of PLC blocks](#)

8.2 Alarms

8.2.1 Alarms level 1	670
8.2.2 Alarms level 2	696
8.2.3 Fail sensor and other types	715

What alarms are:

The controller evaluates two levels of alarms. For more information see **Alarm management on page 111**.

8.2.1 Alarms level 1

Warnings	674
Other type	689

For full list of Alarms level 1 go to [List of alarms level 1 \(page 672\)](#).

What alarms level 1 are:

The level 1 alarm indicates that a value or parameter is out of normal limits, but has still not reached critical level. For more information see [Alarm types - Level 1 on page 113](#).

List of alarms level 1

Alarm Email 1 Fail	674	Voltage		Dual Operation Different	
Alarm Email 2 Fail	674	Wrn Generator L1L2 >		FW Version	689
Alarm Email 3 Fail	674	Voltage	682	Dual Operation Different	
Alarm Email 4 Fail	674	Wrn Generator L1L2 <		Mains	689
Alarm SMS 1 Fail	675	Voltage	682	Dual Operation Fail	690
Alarm SMS 2 Fail	675	Wrn Generator L2 >		Dual Operation Master Fail	690
Alarm SMS 3 Fail	675	Voltage	682	Dual Operation Slave Fail	690
Alarm SMS 4 Fail	675	Wrn Generator L2 <		ECU Wait To Start	691
Battery Charger Fail	676	Voltage	683	ECU Yellow Lamp	691
Event Email 1 Fail	676	Wrn Generator L2L3 >		EM(A) - a message lost ..	691
Event Email 2 Fail	676	Voltage	683	EM(A) - configuration	
Event Email 3 Fail	676	Wrn Generator L2L3 <		mistake	691
Event Email 4 Fail	677	Voltage	683	EM(A) - insufficient	692
Event SMS 1 Fail	677	Wrn Generator L3 >		EM(A) - missing or	
Event SMS 2 Fail	677	Voltage	683	damaged	692
Event SMS 3 Fail	677	Wrn Generator L3 <		EM(B) - a message lost ..	692
Event SMS 4 Fail	678	Voltage	684	EM(B) - configuration	
Rental Timer 1 Elapsed ...	678	Wrn Generator L3L1 >		mistake	692
Rental Timer 2 Elapsed ...	678	Voltage	684	EM(B) - insufficient	692
Rental Timer Block Start .	678	Wrn Generator L3L1 <		EM(B) - missing or	
Wrn AIN Prot	678	Voltage	684	damaged	693
Wrn Battery > Voltage ...	679	Wrn Generator >		Generator CCW Rotation	693
Wrn Battery < Voltage ...	679	Frequency	685	Mains CCW Rotation	693
Wrn BIN Protection	679	Wrn Generator <		Manual Restore	693
Wrn Charging Alternator		Frequency	685	Module(slotA) - comm.	
Fail	679	Wrn Check DPF Status ..	685	outage	694
Wrn Coolant Temperature		Wrn Mains Voltage		Module(slotA) - false	
Low	680	Detected	685	module	694
Wrn Coolant Temp	680	Wrn Maintenance 1	686	Module(slotA) -	
Wrn ECU Communication		Wrn Maintenance 2	686	unattended	694
Fail	680	Wrn Maintenance 3	686	Module(slotA) -	
Wrn Fence 1 Alarm	680	Wrn MCB Fail	686	unexpected	694
Wrn Fence 2 Alarm	681	Wrn Oil Pressure	687	Module(slotA) - unknown	
Wrn Fuel Level	681	Wrn Overload	687	module	695
Wrn Fuel Theft	681	Wrn Override All Sd	687	Module(slotB) - comm.	
Wrn Generator L1 >		Wrn Rental Timer 1	688	outage	695
Voltage	681	Wrn Rental Timer 2	688	Module(slotB) - false	
Wrn Generator L1 <	682	Wrn Stop Fail	688	module	695
		After-Treatment	689	Module(slotB) -	
				unattended	695

Module(slotB) -
unexpected 696
Module(slotB) - unknown
module 696

Warnings

Alarm Email 1 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 1 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 1 (page 392) and email wasn't send.

[◀ back to List of alarms level 1](#)

Alarm Email 2 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 2 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 2 (page 393) and email wasn't send.

[◀ back to List of alarms level 1](#)

Alarm Email 3 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 3 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 3 (page 393) and email wasn't send.

[◀ back to List of alarms level 1](#)

Alarm Email 4 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 4 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 4 (page 394) and email wasn't send.

[◀ back to List of alarms level 1](#)

Alarm SMS 1 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 1 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 1 (page 389) and SMS wasn't send.

⬅ back to List of alarms level 1

Alarm SMS 2 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 2 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 2 (page 389) and SMS wasn't send.

⬅ back to List of alarms level 1

Alarm SMS 3 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 3 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 3 (page 390) and SMS wasn't send.

⬅ back to List of alarms level 1

Alarm SMS 4 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 4 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 4 (page 390) and SMS wasn't send.

⬅ back to List of alarms level 1

Battery Charger Fail

Alarm Type	Warning
Alarmlist message	Battery Charge Fail
Alarm evaluated	Mains is OK
Related applications	AMF, MRS
Description	This alarm is activated when logical binary input BATTERY CHARGER (PAGE 523) is active.

⬅ back to List of alarms level 1

Event Email 1 Fail

Alarm Type	Other
Alarmlist message	Event Email 1 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 1 (page 392) and email wasn't send.

⬅ back to List of alarms level 1

Event Email 2 Fail

Alarm Type	Other
Alarmlist message	Event Email 2 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 2 (page 393) and email wasn't send.

⬅ back to List of alarms level 1

Event Email 3 Fail

Alarm Type	Other
Alarmlist message	Event Email 2 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 3 (page 393) and email wasn't send.

⬅ back to List of alarms level 1

Event Email 4 Fail

Alarm Type	Other
Alarmlist message	Event Email 4 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 4 (page 394) and email wasn't send.

🔍 back to List of alarms level 1

Event SMS 1 Fail

Alarm Type	Other
Alarmlist message	Event SMS 1 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 1 (page 389) and SMS wasn't send.

🔍 back to List of alarms level 1

Event SMS 2 Fail

Alarm Type	Other
Alarmlist message	Event SMS 2 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 2 (page 389) and SMS wasn't send.

🔍 back to List of alarms level 1

Event SMS 3 Fail

Alarm Type	Other
Alarmlist message	Event SMS 3 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 3 (page 390) and SMS wasn't send.

🔍 back to List of alarms level 1

Event SMS 4 Fail

Alarm Type	Other
Alarmlist message	Event SMS 4 Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 4 (page 390) and SMS wasn't send.

⬅ back to List of alarms level 1

Rental Timer 1 Elapsed

Alarm Type	Warning
Alarmlist message	Rental Timer 1 Elapsed
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm is activated when Rental Timer 1 (page 339) elapses.

⬅ back to List of alarms level 1

Rental Timer 2 Elapsed

Alarm Type	Warning
Alarmlist message	Rental Timer 2 Elapsed
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm is activated when Rental Timer 2 (page 341) elapses.

⬅ back to List of alarms level 1

Rental Timer Block Start

Alarm Type	Other
Alarmlist message	Rental Timer Block Start
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	Alarm is active when there is start command and Rental Timer 1 (page 339) or Rental Timer 2 (page 341) elapsed.

⬅ back to List of alarms level 1

Wrn AIN Prot

Alarm Type	Warning
Alarmlist message	Wrn + Name of analog input
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that value the general analog protection is out of warning protection limit.

⬅ back to List of alarms level 1

Wrn Battery > Voltage

Alarm Type	Warning
Alarmlist message	All the time
Alarm evaluated	Wrn Battery > Voltage
Related applications	AMF, MRS
Description	<p>This alarm informs the operator that the controller supply voltage is too high. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Battery Overvoltage (page 235) ▶ Battery <> Voltage Delay (page 235)

⬅ back to List of alarms level 1

Wrn Battery < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Battery < Voltage
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm informs the operator that the controller supply voltage is too low. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Battery Undervoltage (page 234) ▶ Battery <> Voltage Delay (page 235)

⬅ back to List of alarms level 1

Wrn BIN Protection

Alarm Type	Warning
Alarmlist message	Wrn + Name of binary input
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>Binary input also can be adjusted like alarm. In this case message in alarmlist contains prefix - Wrn and binary input name. This alarm occurs, when appropriate binary input is active.</p>

⬅ back to List of alarms level 1

Wrn Charging Alternator Fail

Alarm Type	Warning
Alarmlist message	Wrn Charging Alternator Fail
Alarm evaluated	Engine running only
Related applications	AMF, MRS
Description	<p>This alarm is issued if the engine is running and the voltage on the D+ terminal is lower than D+ Threshold (page 220) of the controller supply voltage. This alarm works similar to the red “battery” alarm indicator on a vehicle dashboard.</p> <p>The setpoint has to be in Charge Fail or Enabled position to enable this alarm.</p>

[◀ back to List of alarms level 1](#)

Wrn Coolant Temperature Low

Alarm Type	Warning
Alarmlist message	Wrn Coolant Temperature Low
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that the coolant temperature is lower than the temperature set in Coolant Temperature Low Wrn (page 227) setpoint.

[◀ back to List of alarms level 1](#)

Wrn Coolant Temp

Alarm Type	Warning
Alarmlist message	Wrn Coolant Temp
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that the coolant temperature is higher than the temperature set in Coolant Temperature Wrn (page 224) setpoint.

[◀ back to List of alarms level 1](#)

Wrn ECU Communication Fail

Alarm Type	Warning
Alarmlist message	Wrn ECU Communication Fail
Alarm evaluated	With configured LBO ECU POWER RELAY (PAGE 596) - only when this LBO is active Without configured LBO ECU POWER RELAY (PAGE 596) - all the time
Related applications	AMF, MRS
Description	This alarm occurs when an ECU is configured, but the communication with the ECU is not established or has dropped out.

[◀ back to List of alarms level 1](#)

Wrn Fence 1 Alarm

Alarm Type	Warning
Alarmlist message	Wrn Fence 1 Alarm
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm evaluates the GPS position of gen-set. The following setpoint are related to it: <ul style="list-style-type: none"> ▶ Geo-Fencing (page 346) ▶ Fence 1 Protection (page 347) ▶ Fence Radius 1 (page 345)

[◀ back to List of alarms level 1](#)

Wrn Fence 2 Alarm

Alarm Type	Warning
Alarmlist message	Wrn Fence 2 Alarm
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm evaluates the GPS position of gen-set. The following setpoint are related to it:</p> <ul style="list-style-type: none"> ▶ Geo-Fencing (page 346) ▶ Fence 2 Protection (page 348) ▶ Fence Radius 2 (page 345)

⬅ back to List of alarms level 1

Wrn Fuel Level

Alarm Type	Warning
Alarmlist message	Wrn Fuel Level
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm indicates that the fuel level is lower than the level set in Fuel Level Wrn (page 228) setpoint.</p>

⬅ back to List of alarms level 1

Wrn Fuel Theft

Alarm Type	Warning
Alarmlist message	Wrn Fuel Theft
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm occurs when the fuel level value measured at relevant AI (Fuel Level) drops faster than is the limit adjusted by setpoint Maximal Fuel Drop (page 230).</p>

⬅ back to List of alarms level 1

Wrn Generator L1 > Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L1 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Wrn (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L1 < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L1 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage Wrn (page 245) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L1L2 > Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L1L2 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 1 and 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Wrn (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L1L2 < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L1L2 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 1 and 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage Wrn (page 245) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L2 > Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L2 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Wrn (page 244) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 1](#)

Wrn Generator L2 < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L2 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage Wrn (page 245) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 1](#)

Wrn Generator L2L3 > Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L2L3 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 2 and 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Wrn (page 244) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 1](#)

Wrn Generator L2L3 < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L2L3 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 2 and 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage Wrn (page 245) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 1](#)

Wrn Generator L3 > Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L3 > Voltage
Alarm evaluated	Generator excited only

Related applications	AMF, MRS
Description	This alarm evaluates the generator phase voltage in phase 3. The following setpoints are related to it: <ul style="list-style-type: none"> ▶ Generator Overvoltage Wrn (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L3 < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L3 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	This alarm evaluates the generator phase voltage in phase 3. The following setpoints are related to it: <ul style="list-style-type: none"> ▶ Generator Undervoltage Wrn (page 245) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L3L1 > Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L3L1 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	This alarm evaluates the generator phase to phase voltage between phases 3 and 1. The following setpoints are related to it: <ul style="list-style-type: none"> ▶ Generator Overvoltage Wrn (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator L3L1 < Voltage

Alarm Type	Warning
Alarmlist message	Wrn Generator L3L1 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	This alarm evaluates the generator phase to phase voltage between phases 3 and 1. The following setpoints are related to it: <ul style="list-style-type: none"> ▶ Generator Undervoltage Wrn (page 245) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 1

Wrn Generator > Frequency

Alarm Type	Warning
Alarmlist message	Wrn Generator > Frequency
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator frequency in the phase L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overfrequency Wrn (page 246) ▶ Generator <> Frequency Delay (page 247)

⬅ back to List of alarms level 1

Wrn Generator < Frequency

Alarm Type	Warning
Alarmlist message	Wrn Generator < Frequency
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator frequency in the phase L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Underfrequency Wrn (page 247) ▶ Generator <> Frequency Delay (page 247)

⬅ back to List of alarms level 1

Wrn Check DPF Status

Alarm Type	Warning
Alarmlist message	Wrn Check DPF Status
Alarm evaluated	When ECU is configured
Related applications	AMF, MRS
Description	<p>This alarm occurs when ECU send alarm message about Tier IV protection.</p> <p>Note: Tier IV protection have to be supported by ECU.</p>

⬅ back to List of alarms level 1

Wrn Mains Voltage Detected

Alarm Type	Warning
Alarmlist message	Wrn Mains Voltage Detected
Alarm evaluated	Gen-set is running
Related applications	AMF
Description	<p>This alarm occurs when setpoint Operation Mode (page 197) is adjusted to MRS and voltage is detected on mains.</p>

⬅ back to List of alarms level 1

Wrn Maintenance 1

Alarm Type	Warning
Alarmlist message	Wrn Maintenance 1
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	Adjust the setpoint Maintenance Timer 1 (page 233) to the interval of the next maintenance check. The value of the setpoint will count down while the engine is running and if reaches zero, this alarm will be issued. The alarm message will remain in the alarm list (even if the controller is switched off and on again) until the setpoint is re-adjusted to a positive value.

[◀ back to List of alarms level 1](#)

Wrn Maintenance 2

Alarm Type	Warning
Alarmlist message	Wrn Maintenance 2
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	Adjust the setpoint Maintenance Timer 2 (page 234) to the interval of the next maintenance check. The value of the setpoint will count down while the engine is running and if reaches zero, this alarm will be issued. The alarm message will remain in the alarm list (even if the controller is switched off and on again) until the setpoint is re-adjusted to a positive value.

[◀ back to List of alarms level 1](#)

Wrn Maintenance 3

Alarm Type	Warning
Alarmlist message	Wrn Maintenance 3
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	Adjust the setpoint Maintenance Timer 3 (page 234) to the interval of the next maintenance check. The value of the setpoint will count down while the engine is running and if reaches zero, this alarm will be issued. The alarm message will remain in the alarm list (even if the controller is switched off and on again) until the setpoint is re-adjusted to a positive value.

[◀ back to List of alarms level 1](#)

Wrn MCB Fail

Alarm Type	Warning
Alarmlist message	Wrn MCB Fail
Alarm evaluated	All the time

Related applications	AMF
Description	<p>This alarm will occur when the MCB FEEDBACK (PAGE 557) input does not match the expected position given by the MCB CLOSE/OPEN (PAGE 610) output. It stays active until the mismatch between the output and feedback disappears.</p> <ul style="list-style-type: none"> ▶ If there was no command issued by the controller and the breaker (feedback) changes suddenly the position itself, the alarm will be issued immediately. ▶ Self-opening of the breaker is not considered a fault and if all mains values are within limits, the command to reclose the breaker is issued after delay given by the setpoint Mains Return Delay (page 253) has elapsed. ▶ The alarm will be also issued, if the breaker does not respond to the close command within 2 seconds. After this period has elapsed the output MCB Close/Open is deactivated again and the next attempt to close the breaker will occur first after the alarm is reset. ▶ The alarm will be also issued if the breaker does not respond to the open command within 2 seconds. The output MCB Close/Open will stay deactivated. Closing of GCB is blocked until this alarm becomes inactive.

◀ back to List of alarms level 1

Wrn Oil Pressure

Alarm Type	Warning
Alarmlist message	Wrn Oil Pressure
Alarm evaluated	Gen-set is running
Related applications	AMF, MRS
Description	This alarm indicates that the oil pressure is lower than the pressure set in Oil Pressure Wrn (page 222) setpoint.

◀ back to List of alarms level 1

Wrn Overload

Alarm Type	Warning
Alarmlist message	Wrn Overload
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>The alarm is issued when the gen-set power is over the limit for time period longer than the delay. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Overload Wrn (page 240) adjusts the overload limit. ▶ Overload Delay (page 240) Overload Del adjusts the delay.

◀ back to List of alarms level 1

Wrn Override All Sd

Alarm Type	Warning
Alarmlist message	Override All Sd
Alarm evaluated	All the time

Related applications	AMF, MRS
Description	This alarm occurs when binary input Sd OVERRIDE (PAGE 562) is activated.

🔍 back to List of alarms level 1

Wrn Rental Timer 1

Alarm Type	Warning
Alarmlist message	Wrn Rental Timer 1
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs xx hours before Rental Timer 1 (page 339) elapsed. Hours are adjusted by setpoint Rental Timer 1 Wrn (page 341) .

🔍 back to List of alarms level 1

Wrn Rental Timer 2

Alarm Type	Warning
Alarmlist message	Wrn Rental Timer 2
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs xx hours before Rental Timer 2 (page 341) elapsed. Hours are adjusted by setpoint Rental Timer 2 Wrn (page 343) .

🔍 back to List of alarms level 1

Wrn Stop Fail

Alarm Type	Warning
Alarmlist message	Wrn Stop Fail
Alarm evaluated	While the engine shall be stopped
Related applications	AMF, MRS

Description This alarm occurs if the gen-set shall be stopped, but some symptom indicates that it is not stopped. The period when the gen-set shall be stopped begins after the **FUEL SOLENOID (PAGE 598)** has been switched off and time delay **Stop Time (page 217)** has elapsed and lasts for the entire time the **FUEL SOLENOID (PAGE 598)** or **STARTER (PAGE 620)** are off.

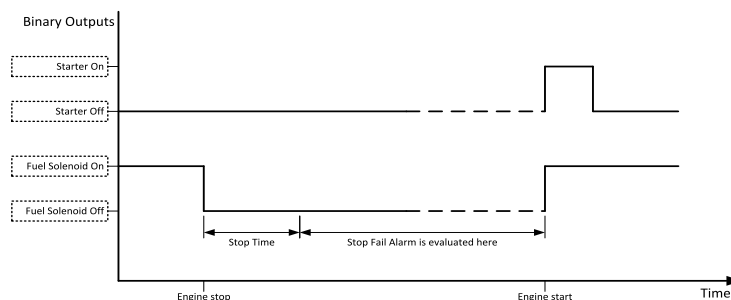


Image 10.13 Stop Fail

Note: Gen-set cannot be started until this alarm is inactive and reset.

[◀ back to List of alarms level 1](#)

Other type

After-Treatment

Alarm Type	Alarm indication
Alarmlist message	After-Treatment
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs when appropriate after-treatment lamp is active.

[◀ back to List of alarms level 1](#)

Dual Operation Different FW Version

Alarm Type	Alarm indication
Alarmlist message	Dual Operation Different FW Version
Alarm evaluated	Only during dual operation
Related applications	AMF, MRS
Description	This alarm is active when FW version (all numbers are checked) or Branch of Master and Slave is different.

[◀ back to List of alarms level 1](#)

Dual Operation Different Mains

Alarm Type	Alarm indication
Alarmlist message	Dual Operation Different Mains
Alarm evaluated	Only during dual operation
Related applications	AMF, MRS
Description	<p>This alarm is active when there are different states of mains on controllers. For example Master see healthy mains and slave see mains fail.</p> <p>Note: This alarm is also written to history.</p>

[◀ back to List of alarms level 1](#)

Dual Operation Fail

Alarm Type	Alarm indication
Alarmlist message	Dual Operation Fail
Alarm evaluated	Only during dual operation
Related applications	AMF, MRS
Description	<p>This alarm is active when there is fail between controllers in dual operation function.</p> <p>Exapmles:</p> <ul style="list-style-type: none"> ▶ No connection - disconnection of cable ▶ No connection - incorrect settings of COM Modes ▶ Controllers not in AUTO mode ▶ Different Operation Modes (AMF controllers only) ▶ Different FW versions in controllers ▶ Different mains statuses in controllers (AMF controllers only) <p>Note: This alarm is also written to history.</p>

◀ back to List of alarms level 1

Dual Operation Master Fail

Alarm Type	Alarm indication
Alarmlist message	Dual Operation Master Fail
Alarm evaluated	Only during dual operation
Related applications	AMF, MRS
Description	<p>This alarm is active when Master is not able to take the load e.g. there is alarm of 2nd level on Master. Logical binary input AL DUAL MASTER FAIL (PAGE 572) is activated.</p> <p>Note: This alarm is also written to history.</p>

◀ back to List of alarms level 1

Dual Operation Slave Fail

Alarm Type	Alarm indication
Alarmlist message	Dual Operation Slave Fail
Alarm evaluated	Only during dual operation
Related applications	AMF, MRS
Description	<p>This alarm is active when Slave is not able to take the load e.g. there is alarm of 2nd level on Slave. Logical binary input AL DUAL SLAVE FAIL (PAGE 572) is activated.</p> <p>Note: This alarm is also written to history.</p>

◀ back to List of alarms level 1

ECU Wait To Start

Alarm Type	Warning
Alarmlist message	ECU Wait To Start
Alarm evaluated	Only when ECU is connected
Related applications	AMF, MRS
Description	This alarm is activated when ECU send information that ECU Wait To Start lamp is activated. LBO ALARM (PAGE 579)is not activated, after deactivation of lamp, alarm automatically disappear.

⬅ back to List of alarms level 1

ECU Yellow Lamp

Alarm Type	Alarm indication + history record
Alarmlist message	ECU Yellow Lamp
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm is activated when ECU send information that ECU Yellow lamp is activated. LBO ALARM (PAGE 579)is not activated, after deactivation of lamp, alarm automatically disappear.

⬅ back to List of alarms level 1

EM(A) - a message lost

Alarm Type	Other
Alarmlist message	EM(A) - a message lost
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

⬅ back to List of alarms level 1

EM(A) - configuration mistake

Alarm Type	Other
Alarmlist message	EM(A) - configuration mistake
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with configuration of binary input or output of module in slot.

⬅ back to List of alarms level 1

EM(A) - insufficient

Alarm Type	Other
Alarmlist message	EM(A) - insufficient
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that module does not support all required features.

[◀ back to List of alarms level 1](#)

EM(A) - missing or damaged

Alarm Type	Other
Alarmlist message	EM(A) - missing or damaged
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with communication with module in slot (in first 5 second there was no communication and module is configured in slot).

[◀ back to List of alarms level 1](#)

EM(B) - a message lost

Alarm Type	Other
Alarmlist message	EM(B) - a message lost
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

[◀ back to List of alarms level 1](#)

EM(B) - configuration mistake

Alarm Type	Other
Alarmlist message	EM(B) - configuration mistake
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with configuration of binary input or output of module in slot.

[◀ back to List of alarms level 1](#)

EM(B) - insufficient

Alarm Type	Other
Alarmlist message	EM(B) - insufficient
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that module does not support all required features.

[◀ back to List of alarms level 1](#)

EM(B) - missing or damaged

Alarm Type	Other
Alarmlist message	EM(B) - missing or damaged
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with communication with module in slot (in first 5 second there was no communication and module is configured in slot).

🔍 back to List of alarms level 1

Generator CCW Rotation

Alarm Type	Warning
Alarmlist message	Generator CCW Rotation
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	The controller detects phase sequence on generator voltage terminals. This protection is important after controller installation to avoid wrong voltage phase connection. There is a fixed defined phase sequence in IntelliLite controller: T35 = N, T36 = L1, T37 = L2 and T38 = L3. When the phases are connected in a different order, alarms are detected. This alarm prevent circuit breaker closing.

🔍 back to List of alarms level 1

Mains CCW Rotation

Alarm Type	Alarm indication
Alarmlist message	Mains CCW Rotation
Alarm evaluated	All the time
Related applications	AMF
Description	The controller detects phase sequence on mains voltage terminals. This protection is important after controller installation to avoid wrong voltage phase connection. There is a fixed defined phase sequence in IntelliLite controller: T39 = N, T40 = L1, T41 = L2 and T42 = L3. When the phases are connected in a different order, alarms are detected. This alarm prevent circuit breaker closing.

🔍 back to List of alarms level 1

Manual Restore

Alarm Type	Warning
Alarmlist message	Manual Restore
Alarm evaluated	All the time
Related applications	AMF
Description	Alarm is activated when controller is in AUTO mode, Return From Island (page 259) setpoint is set to manual, load is on gen-set a mains has returned.

🔍 back to List of alarms level 1

Module(slotA) - comm. outage

Alarm Type	Other
Alarmlist message	Module(slotA) - comm. outage
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

⬅ back to List of alarms level 1

Module(slotA) - false module

Alarm Type	Other
Alarmlist message	Module(slotA) - fake module
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that false module is inserted in slot.

⬅ back to List of alarms level 1

Module(slotA) - unattended

Alarm Type	Other
Alarmlist message	Module(slotA) - unattended
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that two same communication modules are inserted in slots and one of them will be inactive.

⬅ back to List of alarms level 1

Module(slotA) - unexpected

Alarm Type	Other
Alarmlist message	Module(slotA) - unexpected
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that in slot is inserted different module than which is configured or the module is unconfigured and has to be configured for proper function.

⬅ back to List of alarms level 1

Module(slotA) - unknown module

Alarm Type	Other
Alarmlist message	Module(slotA) - unknown module
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that unknown module is inserted in slot.

[back to List of alarms level 1](#)

Module(slotB) - comm. outage

Alarm Type	Other
Alarmlist message	Module(slotB) - comm. outage
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

[back to List of alarms level 1](#)

Module(slotB) - false module

Alarm Type	Other
Alarmlist message	Module(slotB) - fake module
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that false module is inserted in slot.

[back to List of alarms level 1](#)

Module(slotB) - unattended

Alarm Type	Other
Alarmlist message	Module(slotB) - unattended
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that two same communication modules are inserted in slots and one of them will be inactive.

[back to List of alarms level 1](#)

Module(slotB) - unexpected

Alarm Type	Other
Alarmlist message	Module(slotB) - unexpected
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that in slot is inserted different module than which is configured or the module is unconfigured and has to be configured for proper function.

🔍 back to List of alarms level 1

Module(slotB) - unknown module

Alarm Type	Other
Alarmlist message	Module(slotB) - unknown module
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that unknown module is inserted in slot.

🔍 back to List of alarms level 1

Wrn Fuel Transfer Failed

Alarm Type	Warning
Alarmlist message	Wrn Fuel Transfer Failed
Alarm evaluated	When FUEL PUMP (PAGE 598) is active
Related applications	AMF, MRS
Description	This alarm will occur when there is no increase of fuel level when FUEL PUMP (PAGE 598) is active.

🔍 back to List of alarms level 1

Wrn Transferring Fuel

Alarm Type	Warning
Alarmlist message	Transferring Fuel
Alarm evaluated	When FUEL PUMP (PAGE 598) is active
Related applications	AMF, MRS
Description	This alarm will occur when FUEL PUMP (PAGE 598) is active.

🔍 back to List of alarms level 1

8.2.2 Alarms level 2

Shutdown	699
Other type	708

For full list of Alarms level 2 go to [List of alarms level 2 \(page 698\)](#).

What alarms level 2 are:

The level 2 level alarm indicates that a critical level of the respective value or parameter has been reached. For

more information see **Alarm types - Level 2** on page 113.

List of alarms level 2

Emergency Stop	699	Sd Overspeed	707
Sd AIN Protec	699	Sd RPM Measurement	
Sd Battery Flat	699	Fail	707
Sd BIN Protection	699	Sd Short Circuit	708
Sd Coolant Temp	700	Sd Start Fail	708
Sd Current Unbalance	700	Sd Underspeed	708
Sd Earth Fault Current	700	BOC AIN Prot	708
Sd ECU Communication		BOC BIN Protection	709
Fail	701	BOC Coolant Temp	709
Sd Fence 1 Alarm	701	BOC Current Unbalance	709
Sd Fence 2 Alarm	701	BOC Fence 1 Alarm	709
Sd Fuel Level	701	BOC Fence 2 Alarm	710
Sd GCB Fail	702	BOC Fuel Level	710
Sd Generator L1 > Voltage	702	BOC Generator L1 <	
Sd Generator L1 < Voltage	702	Voltage	710
Sd Generator L1L2 >		BOC Generator L1L2 <	
Voltage	703	Voltage	710
Sd Generator L1L2 <		BOC Generator L2 <	
Voltage	703	Voltage	711
Sd Generator L2 > Voltage	703	BOC Generator L2L3 <	
Sd Generator L2 < Voltage	703	Voltage	711
Sd Generator L2L3 >		BOC Generator L3 <	
Voltage	704	Voltage	711
Sd Generator L2L3 <		BOC Generator L3L1 <	
Voltage	704	Voltage	712
Sd Generator L3 > Voltage	704	BOC Generator >	
Sd Generator L3 < Voltage	704	Frequency	712
Sd Generator L3L1 >		BOC Generator <	
Voltage	705	Frequency	712
Sd Generator L3L1 <		BOC Gen Voltage	
Voltage	705	Unbalance Ph-Ph	712
Sd Generator > Frequency	705	BOC Gen Voltage	
Sd Generator < Frequency	706	Unbalance Ph-N	713
Sd Generator Voltage		BOC Overcurrent IDMT ..	713
Unbalance Ph-Ph	706	BOC Overload	714
Sd Generator Voltage		BOC Rental Timer	714
Unbalance Ph-N	706	BOC Short Circuit	714
Sd Oil Pressure	706	ECU Red Lamp	714
Sd Overload	707		

Shutdown

Emergency Stop

Alarm Type	Shutdown
Alarmlist message	Emergency Stop
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>Alarm is activated when binary input EMERGENCY STOP (PAGE 551) is activated. The gen-set shuts down in the moment the input is activated and starting is blocked until the input is deactivated and fault reset is pressed.</p> <p>Note: Use red emergency button placed on the switchboard door and connect it to a binary input of the controller. Then configure the function Emergency Stop to this binary input. It is recommended to use NC contact of the button.</p> <p>Note: The MCB control is not affected by this alarm.</p>

⬅ back to List of alarms level 2

Sd AIN Protec

Alarm Type	Sd
Alarmlist message	Sd + Name of analog input
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that value the general analog protection is out of shutdown protection limit.

⬅ back to List of alarms level 2

Sd Battery Flat

Alarm Type	Shutdown
Alarmlist message	Sd Battery Flat
Alarm evaluated	During cranking
Related applications	AMF, MRS
Description	This alarm will be issued if the controller was reset during cranking of the gen-set. If this situation occurs, the controller supposes the starting battery is so exhausted that its voltage drops so low when starter motor is energized that it causes controller reset.

⬅ back to List of alarms level 2

Sd BIN Protection

Alarm Type	Shutdown
Alarmlist message	Sd + Name of binary input
Alarm evaluated	All the time

Related applications	AMF, MRS
Description	Binary input also can be adjusted like alarm. In this case message in alarmlist contains prefix - Sd and binary input name. This alarm occurs, when appropriate binary input is active.

🔍 back to List of alarms level 2

Sd Coolant Temp

Alarm Type	Shutdown
Alarmlist message	Sd Coolant Temp
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that the coolant temperature is higher than the temperature set in Coolant Temperature Sd (page 224) setpoint.

🔍 back to List of alarms level 2

Sd Current Unbalance

Alarm Type	Shutdown
Alarmlist message	Sd Current Unbalance
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm evaluates the unbalance of the phase currents, i.e. the difference between highest and lowest phase current at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Current Unbalance BOC (page 243) adjusts the maximum allowed difference between the highest and lowest phase current at any given time. ▶ Current Unbalance BOC Delay (page 243) adjusts the alarm delay.

🔍 back to List of alarms level 2

Sd Earth Fault Current

Alarm Type	Shutdown
Alarmlist message	Sd Earth Fault Current
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm indicates that the value of earth fault current is higher than adjusted limit. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Earth Fault Sd (page 408) adjusts the maximum allowed earth fault current. ▶ Earth Fault Delay (page 407) adjusts the alarm delay.

🔍 back to List of alarms level 2

Sd ECU Communication Fail

Alarm Type	Shutdown
Alarmlist message	Sd ECU Communication Fail
Alarm evaluated	With configured LBO ECU POWER RELAY (PAGE 596) - only when this LBO is active Without configured LBO ECU POWER RELAY (PAGE 596) - all the time
Related applications	AMF, MRS
Description	This alarm occurs when an ECU is configured, but the communication with the ECU is not established or has dropped out.

🔍 back to List of alarms level 2

Sd Fence 1 Alarm

Alarm Type	Shutdown
Alarmlist message	Sd Fence 1 Alarm
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm evaluates the GPS position of gen-set. The following setpoint are related to it: <ul style="list-style-type: none"> ▶ Geo-Fencing (page 346) ▶ Fence 1 Protection (page 347) ▶ Fence Radius 1 (page 345)

🔍 back to List of alarms level 2

Sd Fence 2 Alarm

Alarm Type	Shutdown
Alarmlist message	Sd Fence 2 Alarm
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm evaluates the GPS position of gen-set. The following setpoint are related to it: <ul style="list-style-type: none"> ▶ Geo-Fencing (page 346) ▶ Fence 1 Protection (page 347) ▶ Fence Radius 1 (page 345)

🔍 back to List of alarms level 2

Sd Fuel Level

Alarm Type	Shutdown
Alarmlist message	Sd Fuel Level
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that the fuel level is lower than the level set in Fuel Level Sd (page 228) setpoint.

◀ back to List of alarms level 2

Sd GCB Fail

Alarm Type	Shutdown
Alarmlist message	Sd GCB Fail
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm will occur when the GCB FEEDBACK (PAGE 553) input does not match the expected position given by the GCB CLOSE/OPEN (PAGE 600) output. It stays active until the mismatch between the output and feedback persists.</p> <ul style="list-style-type: none"> ▶ If there was no command issued by the controller and the breaker (feedback) changes suddenly the position itself, the alarm will be issued immediately. ▶ The alarm will be also issued if the breaker does not respond to an open or close command within 5 seconds.

◀ back to List of alarms level 2

Sd Generator L1 > Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L1 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Sd (page 243) ▶ Generator <> Voltage Delay (page 245)

◀ back to List of alarms level 2

Sd Generator L1 < Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L1 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phases 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

◀ back to List of alarms level 2

Sd Generator L1L2 > Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L1L2 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 1 and 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Sd (page 243) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

Sd Generator L1L2 < Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L1L2 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 1 and 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

Sd Generator L2 > Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L2 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Sd (page 243) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

Sd Generator L2 < Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L2 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phases 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 2](#)

Sd Generator L2L3 > Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L2L3 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 2 and 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Sd (page 243) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 2](#)

Sd Generator L2L3 < Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L2L3 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 2 and 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 2](#)

Sd Generator L3 > Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L3 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phase 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Sd (page 243) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 2](#)

Sd Generator L3 < Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L3 < Voltage
Alarm evaluated	Generator excited only

Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phases 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

Sd Generator L3L1 > Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L3L1 > Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 3 and 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overvoltage Sd (page 243) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

Sd Generator L3L1 < Voltage

Alarm Type	Shutdown
Alarmlist message	Sd Generator L3L1 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 3 and 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

Sd Generator > Frequency

Alarm Type	Shutdown
Alarmlist message	Sd Generator > Frequency
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator frequency in the phase L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overfrequency BOC (page 246) ▶ Generator <> Frequency Delay (page 247)

⬅ back to List of alarms level 2

Sd Generator < Frequency

Alarm Type	Shutdown
Alarmlist message	Sd Generator < Frequency
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator frequency in the phase L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Underfrequency BOC (page 247) ▶ Generator <> Frequency Delay (page 247)

⬅ back to List of alarms level 2

Sd Generator Voltage Unbalance Ph-Ph

Alarm Type	Shutdown
Alarmlist message	Sd Generator Voltage Unbalance Ph-Ph
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the unbalance of the phase to phase voltage, i.e. the difference between highest and lowest phase to phase voltage at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Voltage Unbalance BOC (page 245) adjusts the maximum allowed difference between the highest and lowest phase voltage at any given time. ▶ Voltage Unbalance BOC Delay (page 246) adjusts the alarm delay.

⬅ back to List of alarms level 2

Sd Generator Voltage Unbalance Ph-N

Alarm Type	Shutdown
Alarmlist message	Sd Generator Voltage Unbalance Ph-N
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the unbalance of the phase voltage, i.e. the difference between highest and lowest phase voltage at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Voltage Unbalance BOC (page 245) adjusts the maximum allowed difference between the highest and lowest phase voltage at any given time. ▶ Voltage Unbalance BOC Delay (page 246) adjusts the alarm delay.

⬅ back to List of alarms level 2

Sd Oil Pressure

Alarm Type	Shutdown
Alarmlist message	Sd Oil Pressure
Alarm evaluated	Gen-set is running

Related applications	AMF, MRS
Description	This alarm indicates that the oil pressure is lower than the pressure set in Oil Pressure Sd (page 222) setpoint.

⬅ back to List of alarms level 2

Sd Overload

Alarm Type	Shutdown
Alarmlist message	Sd Overload
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>The alarm is issued when the gen-set power is over the limit for time period longer than the delay. The behavior of the overload alarm is adjusted by the following setpoints:</p> <ul style="list-style-type: none"> ▶ Overload BOC (page 240) adjusts the overload limit. ▶ Overload Delay (page 240) adjusts the delay

⬅ back to List of alarms level 2

Sd Overspeed

Alarm Type	Shutdown
Alarmlist message	Sd Overspeed
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm occurs immediately when the engine speed has exceeded the limit. The behavior of the overspeed alarm is adjusted by the following setpoints:</p> <ul style="list-style-type: none"> ▶ Overspeed Sd (page 221) adjust the overspeed limit ▶ Overspeed Overshot (page 221) adjust the additional overspeed limit ▶ Overspeed Overshot Period (page 222) adjust the time period of additional overspeed limit

⬅ back to List of alarms level 2

Sd RPM Measurement Fail

Alarm Type	Shutdown
Alarmlist message	Sd RPM Measurement Fail
Alarm evaluated	During cranking
Related applications	AMF, MRS
Description	The alarm is issued if the engine speed has not exceeded the Starting RPM (page 205) within the Maximum Cranking Time (page 204) , although some of additional running engine indication sources indicate that the engine has started.

⬅ back to List of alarms level 2

Sd Short Circuit

Alarm Type	Shutdown
Alarmlist message	Sd Short Circuit
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This is a fast overcurrent protection. The following setpoints are related to this alarm:</p> <ul style="list-style-type: none"> ▶ Short Circuit BOC (page 241) adjusts the short current limit ▶ Short Circuit BOC Delay (page 241) adjusts the delay in fine steps

⬅ back to List of alarms level 2

Sd Start Fail

Alarm Type	Shutdown
Alarmlist message	Sd Start Fail
Alarm evaluated	When the gen-set is being started
Related applications	AMF, MRS
Description	<p>This alarm will be issued after all attempts to start the gen-set have run out but the gen-set did not start. The following setpoints are related to this alarm:</p> <ul style="list-style-type: none"> ▶ Cranking Attempts (page 203) adjust the number of attempts

⬅ back to List of alarms level 2

Sd Underspeed

Alarm Type	Shutdown
Alarmlist message	Sd Underspeed
Alarm evaluated	Engine running only
Related applications	AMF, MRS
Description	<p>This alarm will be issued when the gen-set is running and then stops by itself, i.e. the RPM drops under the value of setpoint Underspeed Sd (page 221).</p> <p>The underspeed alarm starts to be evaluated after successful gen-set start and is being evaluated for the entire time that the fuel solenoid is on.</p>

⬅ back to List of alarms level 2

Other type

BOC AIN Prot

Alarm Type	BOC
Alarmlist message	BOC + Name of analog input
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm indicates that the value of general analog protection is out of BOC protection limit.</p>

⬅ back to List of alarms level 2

BOC BIN Protection

Alarm Type	BOC
Alarmlist message	BOC + Name of binary input
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	Binary input also can be adjusted like alarm. In this case message in alarmlist contains prefix - BOC and binary input name. This alarm occurs, when appropriate binary input is active.

🔍 back to List of alarms level 2

BOC Coolant Temp

Alarm Type	BOC
Alarmlist message	BOC Coolant Temperature
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that the coolant temperature is higher than the temperature set in Coolant Temperature Sd (page 224) setpoint.

🔍 back to List of alarms level 2

BOC Current Unbalance

Alarm Type	BOC
Alarmlist message	BOC Current Unbalance
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm evaluates the unbalance of the phase currents, i.e. the difference between highest and lowest phase current at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Current Unbalance BOC (page 243) adjusts the maximum allowed difference between the highest and lowest phase current at any given time. ▶ Current Unbalance BOC Delay (page 243) adjusts the alarm delay.

🔍 back to List of alarms level 2

BOC Fence 1 Alarm

Alarm Type	BOC
Alarmlist message	BOC Fence 1 Alarm
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm evaluates the GPS position of gen-set. The following setpoint are related to it:</p> <ul style="list-style-type: none"> ▶ Geo-Fencing (page 346) ▶ Fence 1 Protection (page 347) ▶ Fence Radius 1 (page 345)

[◀ back to List of alarms level 2](#)

BOC Fence 2 Alarm

Alarm Type	BOC
Alarmlist message	BOC Fence 2 Alarm
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm evaluates the GPS position of gen-set. The following setpoint are related to it:</p> <ul style="list-style-type: none"> ▶ Geo-Fencing (page 346) ▶ Fence 1 Protection (page 347) ▶ Fence Radius 1 (page 345)

[◀ back to List of alarms level 2](#)

BOC Fuel Level

Alarm Type	BOC
Alarmlist message	BOC Fuel Level
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm indicates that the fuel level is lower than the level set level in Fuel Level Sd (page 228) setpoint.</p>

[◀ back to List of alarms level 2](#)

BOC Generator L1 < Voltage

Alarm Type	BOC
Alarmlist message	BOC Generator L1 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phases 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

[◀ back to List of alarms level 2](#)

BOC Generator L1L2 < Voltage

Alarm Type	BOC
Alarmlist message	BOC Generator L1L2 < Voltage
Alarm evaluated	Generator excited only

Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 1 and 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

BOC Generator L2 < Voltage

Alarm Type	BOC
Alarmlist message	BOC Generator L2 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phases 2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

BOC Generator L2L3 < Voltage

Alarm Type	BOC
Alarmlist message	BOC Generator L2L3 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 2 and 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

BOC Generator L3 < Voltage

Alarm Type	BOC
Alarmlist message	BOC Generator L3 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase voltage in phases 3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

BOC Generator L3L1 < Voltage

Alarm Type	BOC
Alarmlist message	BOC Generator L3L1 < Voltage
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator phase to phase voltage between phases 3 and 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Undervoltage BOC (page 244) ▶ Generator <> Voltage Delay (page 245)

⬅ back to List of alarms level 2

BOC Generator > Frequency

Alarm Type	BOC
Alarmlist message	BOC Generator > Frequency
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator frequency in the phase L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Overfrequency BOC (page 246) ▶ Generator <> Frequency Delay (page 247)

⬅ back to List of alarms level 2

BOC Generator < Frequency

Alarm Type	BOC
Alarmlist message	BOC Generator < Frequency
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the generator frequency in the phase L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Generator Underfrequency BOC (page 247) ▶ Generator <> Frequency Delay (page 247)

⬅ back to List of alarms level 2

BOC Gen Voltage Unbalance Ph-Ph

Alarm Type	BOC
Alarmlist message	BOC Gen Voltage Unbalance ph-ph
Alarm evaluated	Generator excited only

Related applications	AMF, MRS
Description	<p>This alarm evaluates the unbalance of the phase to phase voltages, i.e. the difference between highest and lowest phase to phase voltage at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Voltage Unbalance BOC (page 245) adjusts the maximum allowed difference between the highest and lowest phase voltage at any given time. ▶ Voltage Unbalance BOC Delay (page 246) adjusts the alarm delay.

🔍 back to List of alarms level 2

BOC Gen Voltage Unbalance Ph-N

Alarm Type	BOC
Alarmlist message	BOC Gen Voltage Unbalance ph-n
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>This alarm evaluates the unbalance of the phase voltages, i.e. the difference between highest and lowest phase voltage at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Voltage Unbalance BOC (page 245) adjusts the maximum allowed difference between the highest and lowest phase voltage at any given time. ▶ Voltage Unbalance BOC Delay (page 246) adjusts the alarm delay.

🔍 back to List of alarms level 2

BOC Overcurrent IDMT

Alarm Type	Shutdown
Alarmlist message	Sd + Name of binary input
Alarm evaluated	Generator excited only
Related applications	AMF, MRS
Description	<p>The overcurrent alarm is based on IDMT principle. The reaction time of an IDMT alarm is not fixed, but depends on how much is the protected value (generator current in this case) above the limit (Nominal Current (page 190)). The higher is the overcurrent, the shorter the reaction time will be. All generator phases are evaluated.</p> <p>The behaviour of the overcurrent alarm is adjusted by the following setpoints:</p> <ul style="list-style-type: none"> ▶ IDMT Overcurrent Delay (page 242) defines the reaction time of the protection when the current is twice the amount of nominal value. ▶ Nominal Current (page 190) set the nominal current level, where the alarm starts to be evaluated. The reaction time is infinite at this point.

🔍 back to List of alarms level 2

BOC Overload

Alarm Type	BOC
Alarmlist message	BOC Overload
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>The alarm is issued when the gen-set power is over the limit for time period longer than the delay. The behavior of the overload alarm is adjusted by the following setpoints:</p> <ul style="list-style-type: none"> ▶ Overload BOC (page 240) adjusts the overload limit. ▶ Overload Delay (page 240) adjusts the delay

🔍 back to List of alarms level 2

BOC Rental Timer

Alarm Type	Shutdown
Alarmlist message	BOC Rental Timer
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs when Rental Timer BOC (page 343) elapses.

🔍 back to List of alarms level 2

BOC Short Circuit

Alarm Type	BOC
Alarmlist message	BOC Short Circuit
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This is a fast overcurrent protection. The following setpoints are related to this alarm:</p> <ul style="list-style-type: none"> ▶ Short Circuit BOC (page 241) adjusts the short current limit ▶ Short Circuit BOC Delay (page 241) adjusts the delay in fine steps

🔍 back to List of alarms level 2

ECU Red Lamp

Alarm Type	Alarm indication + history record
Alarmlist message	ECU Red Lamp
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	<p>This alarm is activated when ECU send information that ECU Red lamp is activated. LBO ALARM (PAGE 579) is not activated, after deactivation of lamp, alarm automatically disappear.</p> <p>Note: <i>This alarm doesn't stop the engine.</i></p>

🔍 back to List of alarms level 2

8.2.3 Fail sensor and other types

FIs AIN Prot 1	717
FIs Coolant Temp	717
FIs Fuel Level	717
FIs Oil Pressure	717

For full list of Fails sensor and other types of alarms go to **List of fail sensor alarms (page 716)**.

What Fail sensor and other types of alarms are

If the measured resistance on an analog input exceeds the valid range, a sensor fail will be detected and a sensor fail message will appear in the Alarmlist. For more information **see Sensor fail detection (FLS) on page 114**.

List of fail sensor alarms

FIs AIN Prot 1	717
FIs Coolant Temp	717
FIs Fuel Level	717
FIs Oil Pressure	717

Fail sensor

FIs AIN Prot 1

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 1
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm indicates that the value of general analog protection is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs Coolant Temp

Alarm Type	FIs
Alarmlist message	FIs Coolant Temperature
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs when measurement value of coolant temperature is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs Fuel Level

Alarm Type	FIs
Alarmlist message	FIs Fuel Level
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs when measurement value of fuel level is out of range or is missing.

[◀ List of fail sensor alarms \(page 716\)](#)

FIs Oil Pressure

Alarm Type	FIs
Alarmlist message	FIs Oil Pressure
Alarm evaluated	All the time
Related applications	AMF, MRS
Description	This alarm occurs when measurement value of oil pressure is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

8.3 Modules

8.3.1 Plug-In modules	718
8.3.2 CAN modules	733

8.3.1 Plug-In modules

Communication modules	718
Extension modules	730

IMPORTANT: 2nd generation of IntelliLite controllers does not support new modules and 3rd generation does not support all old modules.

The available communication plug-in modules are:

- ▶ CM-RS232-485 - communication module for connection via RS232 or RS485 line
- ▶ CM-4G-GPS - communication module for connection via 4G
- ▶ CM-GPRS - communication module for connection via GPRS
- ▶ CM-Ethernet - communication module for internet connection via Ethernet

The available extension plug-in modules are:

- ▶ EM-BIO8-EFCP - extension module with 8 binary inputs/outputs and with earth fault current protection

Note: Controller has 2 plug-in module slots.

Supported combinations of plug-in modules

Module	CM-Ethernet	CM-4G-GPS	CM-GPRS	CM-RS232-485	EM-BIO8-EFCP
CM-Ethernet	✗	✓	✓	✓	✓
CM-4G-GPS	✓	✗	✗	✓	✓
CM-GPRS	✓	✗	✗	✓	✓
CM-RS232-485	✓	✓	✓	✗	✓
EM-BIO8-EFCP	✓	✓	✓	✓	✓

Communication modules

CM-RS232-485	718
CM-Ethernet	720
CM-GPRS	722
CM-4G-GPS	726

CM-RS232-485

CM-RS232-485 is optional plug-in card to enable IntelliLite the RS232 and RS485 communication. This is required for computer or MODBUS connection. The CM-RS232-485 is a dual port module with RS232 and RS485 interfaces at independent COM channels. The RS232 is connected to COM1 and RS485 to COM2.



Image 10.14 CM-RS232-485 interface

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

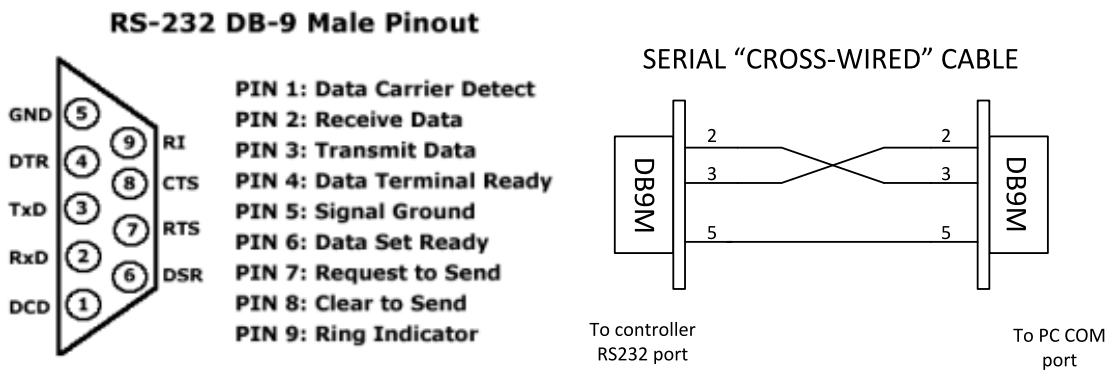


Image 10.15 Pinout of RS-232 line

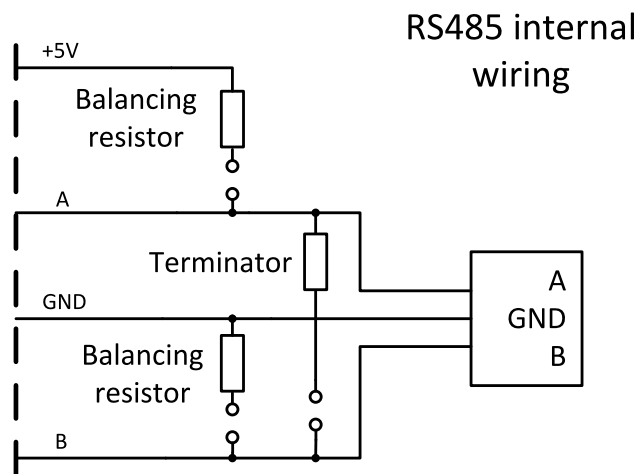


Image 10.16 Pinout of RS-485 line



Image 10.17 Jumpers description

Note: Balancing resistors shall be both closed at only one device in whole RS485 network.

Maximal distance of line is 10m for RS232 line and 1200m for RS485 line.

Terminator 120Ω

Balancing resistor +5V

Technical data

Power consumption	40 mA / 8 VDC
	26 mA / 12 VDC
	14 mA / 24 VDC
	10 mA / 36 VDC
Isolation	Galvanic separation

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

CM-Ethernet

CM-Ethernet is a plug-in card with Ethernet 10/100 Mbit interface in RJ45 connector. It provides an interface for connecting a PC with through ethernet/internet network, for sending active e-mails and for integration of the controller into a building management (MODBUS TCP and SNMP protocols). This card also enables to monitor and control the gen-set over web browser from any location with internet access using appropriate security measures.

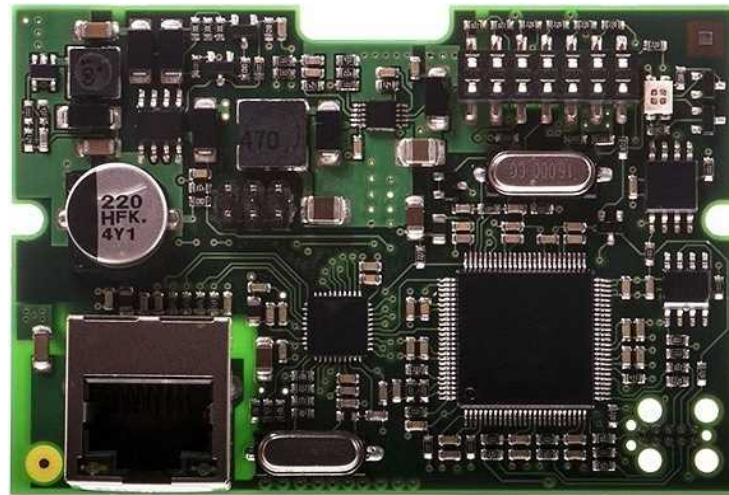


Image 10.18 CM-Ethernet interface

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

Use an Ethernet UTP cable with a RJ45 connector for linking the module with your Ethernet network. The module can also be connected directly to a PC using cross-wired UTP cable.

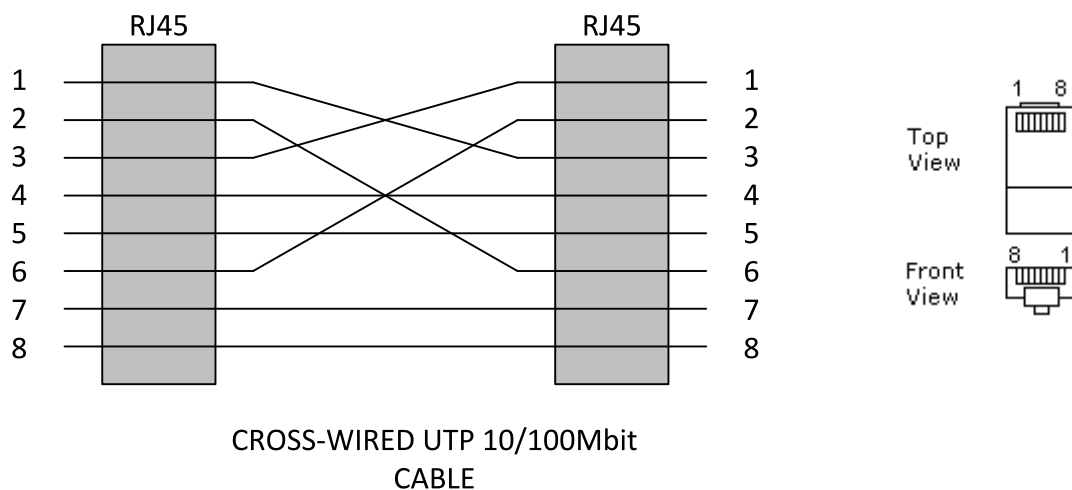


Image 10.19 Cross-wired cable

Technical data

Power consumption	120 mA / 8 VDC
	82 mA / 12 VDC
	35 mA / 24 VDC
	25 mA / 36 VDC

Module setup

All settings related to the module are to be adjusted via the controller setpoints. The respective setpoints are located in the setpoint **Group: CM-Ethernet (page 392)**.

All actual operational values like actual IP address etc. are available in controller values in a specific group as well.

Status LED

Blinking frequency	Color
1 Hz	Green - everything is OK Red - some of following errors occurred: <ul style="list-style-type: none"> ▶ unplugged ethernet cable ▶ module cannot connect to AirGate ▶ module can not obtain IP address from DHCP
10 Hz	Green - firmware is currently being programmed Red - no firmware present in the module

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

CM-GPRS

CM-GPRS plug-in module is a GSM/GPRS modem which can works in two modes of operation based on the settings in the setpoint **Internet Connection** (page 380).



Image 10.20 CM-GPRS module

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

IMPORTANT: CM-4G-GPS and CM-GPRS modules can't be used in one controller in the same time.

Note: GPRS and CSD services must be provided by your GSM/GPRS operator for successful operation.

Note: The GPRS and CSD connection should not be used for the firmware update process.

CM-GPRS module works with:

- ▶ WebSupervisor – internet-based remote monitoring solution
- ▶ AirGate – powerful connection technology to make internet access as simple as possible

Technical data

Power consumption	32 mA / 8 VDC
	18 mA / 12 VDC
	10 mA / 24 VDC
	12 mA / 36 VDC

SIM card settings

SIM card to be used in CM-4G-GPS or CM-GPRS modules must be adjusted as follows:

- ▶ SMS service enabled
- ▶ Packet data (Internet access) enabled (when required for the selected mode of operation)
- ▶ PIN code security disabled

How to start using CM-GPRS module

- ▶ You will need a controller, CM-GPRS module, antenna and SIM card with SMS and packet data service.

Make sure that your SIM supports the packet data network type you want to use. I.e. if you want to use the module in GPRS (2,5G) network you have to confirm with the operator that the particular SIM card does support 2,5G network.

- ▶ Contact your mobile operator for getting packet data APN (APN = Access Point Name), username and password.

Example: APN Name = "internet", UserName = [blank], Password = [blank].

- ▶ Make sure SIM card does not require PIN code. Use any mobile phone to switch the SIM PIN security off.
- ▶ Place the SIM card into slot on CM-GPRS card
- ▶ Connect the antenna to Cellular module antenna connector.
- ▶ Switch off the controller.
- ▶ Insert CM-GPRS module into controller
- ▶ Power up the controller.
- ▶ Select the mode of CM-GPRS module by adjusting setpoint Mode.
- ▶ Enter correct APN Name, APN User Name and APN User Password in controller's setpoint group CM-GPRS which is accessible by PAGE button from any measurement screen on controller. Setpoints can be set on controller's front panel keyboard or by IntelliConfig.
- ▶ Switch the controller off and on.
- ▶ Wait for approx 2 - 4 minutes for first connection of the system to AirGate. AirGate will generate automatically the AirGate ID value. Then navigate to measurement screens where you will find signal strength bar and AirGate ID identifier.



Image 10.21 Main screen of CM-GPRS module



Image 10.22 Screen of AirGate

GSM Diag Code – Diagnostic code for CM-GPRS modem

GSM Diag Code – Common list of diagnostic codes for cellular modules

Code	Description
0	OK. No error.
1	Not possible to hang up.
2	Modul is switched off
3	Module is switched on
4	Module – error in initialization
5	Module – not possible to set the APN
6	Module – not possible to connect to GPRS network
7	Module – not possible to retrieve IP address
8	Module – not accepted DNS IP address
9	Error in modem detection
10	Error in initialization of analog modem
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking
12	No GSM signal
13	Not possible to read the SIM card parameters

14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card
15	Unknown modem
16	Bad answer to complement initialization string
17	Not possible to read GSM signal strength
18	CDMA modem not detected
19	No CDMA network
20	Unsuccessful registration to CDMA network
21	SIMCom/ME909s: can't read FW version
22	SIMCom: GSM signal not found
23	SIMCom: can't detect module speed
24	SIMCom: HW reset issued
25	PUK is required
26	Error of SIM card detected
27	ME909s: can't set module bps
28	ME909s: can't set link configuration
29	ME909s: can't do power-off
30	ME909s: can't do power-on
31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued
35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration
41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

AirGate Diag – Diagnostic Code for AirGate connection

Code	Description
0	Waiting for connection to AirGate Server
1	Controller registered, waiting for authorization
2	Not possible to register, controller blacklisted
3	Not possible to register, server has no more capacity
4	Not possible to register, other reason
5	Controller registered and authorized

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

CM-4G-GPS

CM-4G-GPS plug-in module containing a GPS receiver and GSM/WCDMA/LTE modem which can works in two modes of operation based on the settings in the setpoint **Internet Connection (page 380)**.



Image 10.23 CM-4G-GPS module

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

IMPORTANT: CM-4G-GPS and CM-GPRS modules cant be used in one controller in the same time.

IMPORTANT: Operating temperature of module is from -30°C to +75°C.

Note: Cellular data service must be enabled in your SIM card by your mobile operator for successful operation.

CM-4G-GPS module works with:

- ▶ WebSupervisor – internet-based remote monitoring solution
- ▶ AirGate – powerful connection technology to make internet access as simple as possible
- ▶ Locate – Cellular network based localization service

CM-4G-GPS module also works like GPS locator. Geo-fencing function can be used with this module.

Supported 4G bands are as follows:

- ▶ FDD LTE: Band 1, Band 2, Band 3, Band 4, Band 5, Band 7, Band 8, Band 20, all bands with diversity
- ▶ WCDMA/HSDPA/HSUPA/HSPA+: Band 1, Band 2, Band 5, Band 8, all bands with diversity
- ▶ GSM/GPRS/EDGE: 850 MHz/900 MHz/1800 MHz/1900 MHz

Technical data

Power consumption	55 mA / 8 VDC
	35 mA / 12 VDC
	8 mA / 24 VDC
	5 mA / 36 VDC

SIM card settings

SIM card to be used in CM-4G-GPS or CM-GPRS modules must be adjusted as follows:

- ▶ SMS service enabled
- ▶ Packet data (Internet access) enabled (when required for the selected mode of operation)
- ▶ PIN code security disabled

How to start using CM-4G-GPS module

- ▶ You will need a controller, CM-4G-GPS module, antenna and SIM card with SMS and packet data service.

Note: Make sure that your SIM supports the packet data network type you want to use. - i.e. if you want to use the module in LTE (4G) network you have to confirm with the operator that the particular SIM card supports 4G network.

- ▶ Contact your mobile operator for getting packet data APN (APN = Access Point Name), username and password.

Example: APN Name = "internet", UserName = [blank], Password = [blank].

- ▶ Make sure SIM card does not require PIN code. Use any mobile phone to switch the SIM PIN security off.
- ▶ Place the SIM card into slot on CM-4G-GPS card
- ▶ Connect the antenna to Cellular module antenna connector.
- ▶ If you want to use the built-in GPS receiver connect also an **active** GPS antenna to the GPS antenna connector.
- ▶ Switch off the controller.
- ▶ Insert CM-4G-GPS module into controller
- ▶ Power up the controller.
- ▶ Select the mode of CM-4G-GPS module by adjusting setpoint Mode.
- ▶ Enter correct APN Name, APN User Name and APN User Password in controller's setpoint group CM-4G-GPS which is accessible by PAGE button from any measurement screen on controller. Setpoints can be set on controller's front panel keyboard or by IntelliConfig.
- ▶ Switch the controller off and on.
- ▶ Wait for approx 2 - 4 minutes for first connection of the system to AirGate. AirGate will generate automatically the AirGate ID value. Then navigate to measurement screens where you will find signal strength bar and AirGate ID identifier.



Image 10.24 Main screen of CM-4G-GPS module



Image 10.25 Screen of AirGate

GSM Diag Code – Common list of diagnostic codes for cellular modules

GSM Diag Code – Common list of diagnostic codes for cellular modules

Code	Description
0	OK. No error.
1	Not possible to hang up.
2	Modul is switched off
3	Module is switched on
4	Module – error in initialization
5	Module – not possible to set the APN
6	Module – not possible to connect to GPRS network
7	Module – not possible to retrieve IP address
8	Module – not accepted DNS IP address
9	Error in modem detection
10	Error in initialization of analog modem
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking
12	No GSM signal
13	Not possible to read the SIM card parameters

14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card
15	Unknown modem
16	Bad answer to complement initialization string
17	Not possible to read GSM signal strength
18	CDMA modem not detected
19	No CDMA network
20	Unsuccessful registration to CDMA network
21	SIMCom/ME909s: can't read FW version
22	SIMCom: GSM signal not found
23	SIMCom: can't detect module speed
24	SIMCom: HW reset issued
25	PUK is required
26	Error of SIM card detected
27	ME909s: can't set module bps
28	ME909s: can't set link configuration
29	ME909s: can't do power-off
30	ME909s: can't do power-on
31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued
35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration
41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

AirGate Diag – Diagnostic Code for AirGate connection

Code	Description
0	Waiting for connection to AirGate Server
1	Controller registered, waiting for authorization
2	Not possible to register, controller blacklisted
3	Not possible to register, server has no more capacity
4	Not possible to register, other reason
5	Controller registered and authorized

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

Extension modules

EM-BIO8-EFCP730

EM-BIO8-EFCP

EM-BIO8-EFCP is optional plug-in card. Through this card controller can accommodate one AC current (CT) measuring input (1A or 5A input) and up to 8 binary inputs or outputs. In InteliConfig PC configuration tool it is possible to easily choose if particular I/O will be binary input or output.

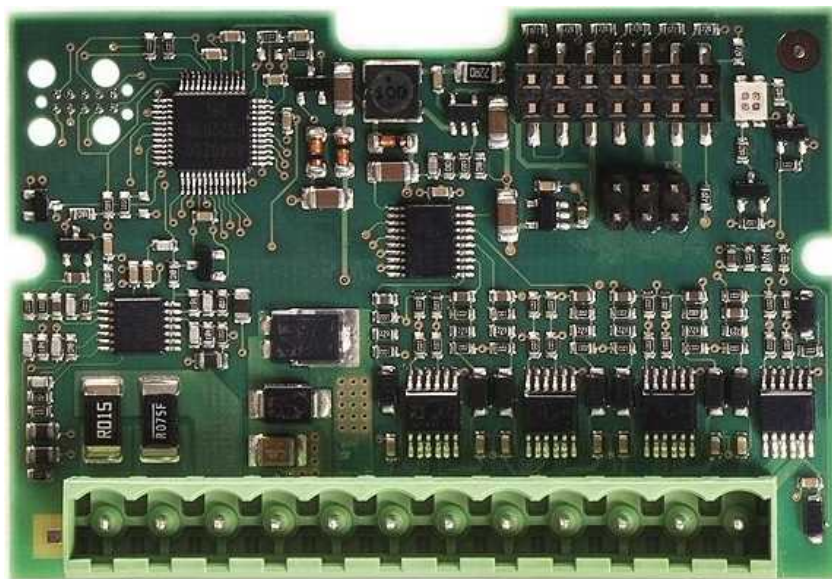


Image 10.26 EM-BIO8-EFCP interface

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

IMPORTANT: Earth fault current measurement is supported by controller only in slot A.

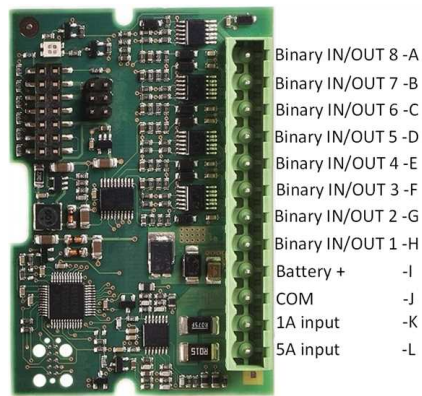


Image 10.27 Overview of EM-BIO8-EFCP

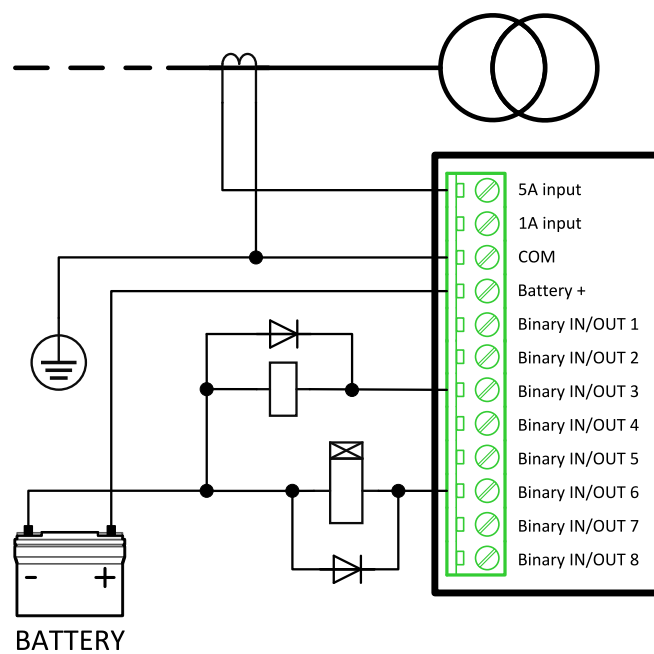


Image 10.28 EM-BIO8-EFCP wiring

EM-BIO8-EFCP technical data

Power supply

Power supply range	8-36 VDC
Power consumption	40 mA / 8 VDC
	27 mA / 12 VDC
	22 mA / 24 VDC
	19 mA / 36 VDC

Binary inputs

Number	Up to 8, non-isolated
Close/Open indication	0-2 VDC close contact
	>6 VDC open contact

Binary outputs

Number	Up to 8 , non-isolated
Max. current	0,5A
Switching to	positive supply terminal

Current measuring input

Number of inputs	2
Nominal input current	1A/5A
Load (CT output impedance)	< 0,1
Max measured current from CT	10 A
Current measurement tolerance	2% from Nominal current
Max peak current from CT	150 A / 1 s
Max continuous current	10 A

Earth fault current measurement

The Earth Fault protection is done by the extension module EM-BIO8-EFCP.

When the measured current exceeds the set value, which indicates that part of the current is dispersed to earth, and when the set **Earth Fault Delay** (page 407) time elapses, the **Earth Fault Current Protection** (page 406), **Sd Earth Fault Current** (page 700) alarm and **AL EARTH FAULT** (PAGE 572) output are activated. Earth Fault protection is not active when gen-set does not run and when the **Earth Fault Current Protection** (page 406) is disabled.

IMPORTANT: Earth fault current measurement is not intended to protect human health, but the machines!

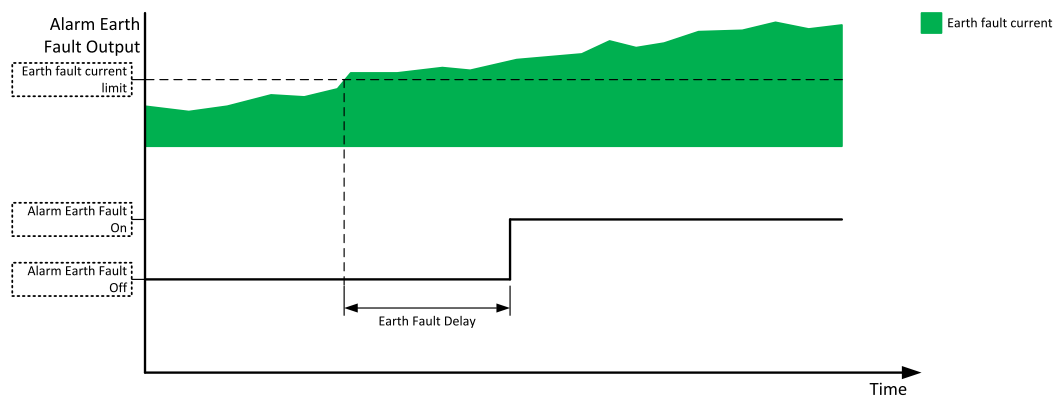


Image 10.29 Earth fault current protection

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware

you want to program into the module (in IntelliConfig).

- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

8.3.2 CAN modules

Extension modules733

The available extension CAN modules are:

- ▶ Intel AIN8 - extension CAN module with 8 analog inputs
- ▶ Intel IO8/8 - extension CAN module with 8 binary inputs, 8 binary outputs and 2 analog outputs
 - this CAN module can be switched to Intel IO 16/0 - extension CAN module with 16 binary inputs and 2 analog outputs

Supported combinations of modules

Slot	Intel AIN8	Intel AIN8TC	Intel IO8/8	Intel IO 16/0	IGL-RA15	IGS-PTM	Intel AIO9/1
1	✓	✓	✓	✓	✓	✓	✓
1	✓	✓	✓	✓	✓	✓	✓
3	✓	✓	✓	✓	✓	✗	✗
4	✓	✓	✓	✓	✓	✗	✗
5	✗	✗	✓	✓	✗	✗	✗

IMPORTANT: In slot 3, 4 and 5 CAN modules Intel IO8/8 and Intel IO 16/0 are supported without analog outputs. Analog outputs of these CAN modules are supported only in slot 1 and 2.

It is possible to add up to 80 binary inputs or up to 68 binary outputs or up to 32 analog inputs on CAN modules.

Extension modules

Intel AIN8733

Intel IO8/8739

IGS-PTM746

Intel AIN8TC752

Intel AIO9/1756

Intel AIN8

Intel AIN8 module is extension module equipped with analog inputs. Intel AIN8 module is connected to controller by CAN1 bus.



Image 10.30 IntelI AIN8


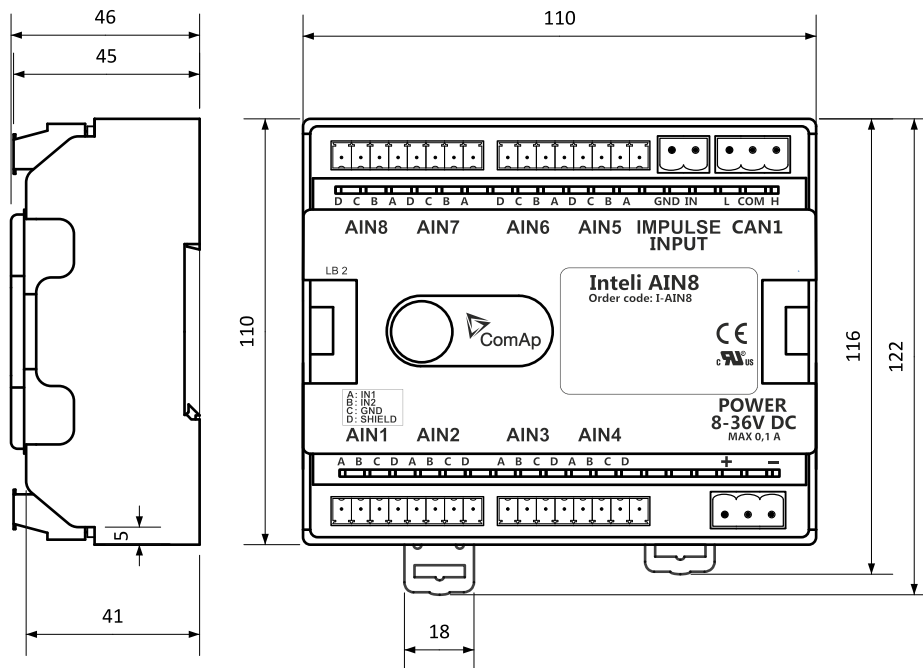


Image 10.31 IntelI AIN8 dimensions

Note: All dimensions are in mm.

Terminals

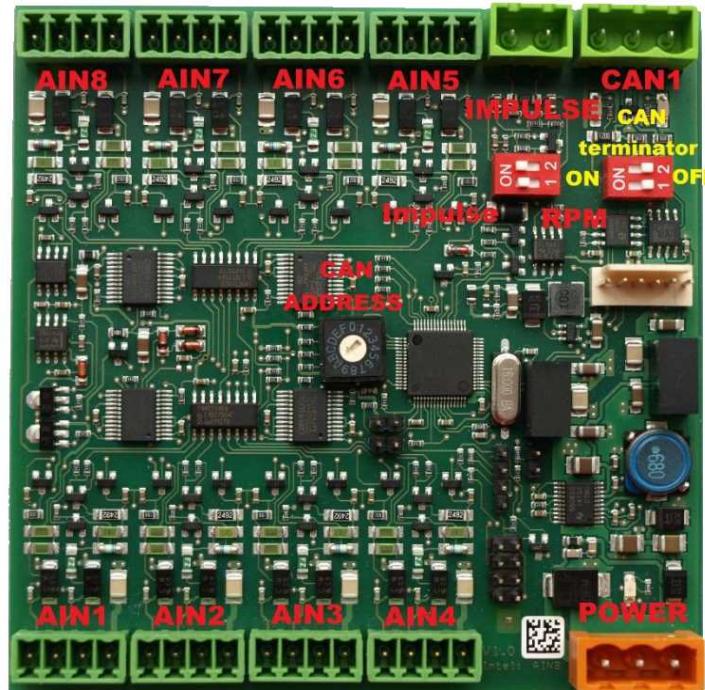

Analog input	8 analog Inputs
CAN	CAN1 line
Power	Power supply
CAN LED Tx, Rx	Indication transmitted or received data
Status LED	LED indication of correct function
CAN terminator	Terminating CAN resistor (active in position "ON" - switch both switches)

Note: Impulse input is not supported.

Analog inputs

- ▶ 8 channels
- ▶ can be configured as:
 - resistor three wire input
 - current input
 - voltage input

All inputs can be configured to any logical function or protection.

IMPORTANT: Impulse input is not supported in controller.

Supported sensors

Sensors		
User curves	NI100 [°F] (fix)	0-5V
PT100 [°C] (fix)	NI1000 [°F] (fix)	0-10V
PT1000 [°C] (fix)		4-20mA passive

Sensors		
NI100 [°C] (fix)	0-2400ohm	4-20mA active
NI1000 [°C] (fix)	0-10k ohm	0-20mA passive
PT100 [°F] (fix)	+ -1V	+ -20mA active
PT1000 [°F] (fix)	0-2.4V	

CAN address

DIP switch determinates CAN address for analog inputs.




Note: In case of setting the CAN address to zero, the appropriate group of signals is deactivated.

Programming firmware

Firmware upgrade process:

1. Disconnect all terminals from the unit.
2. Separate the top cover of module
3. Put the TEST jumper on a pins
4. Connect the unit with PC via RS232-null modem cable and AT-Link conv

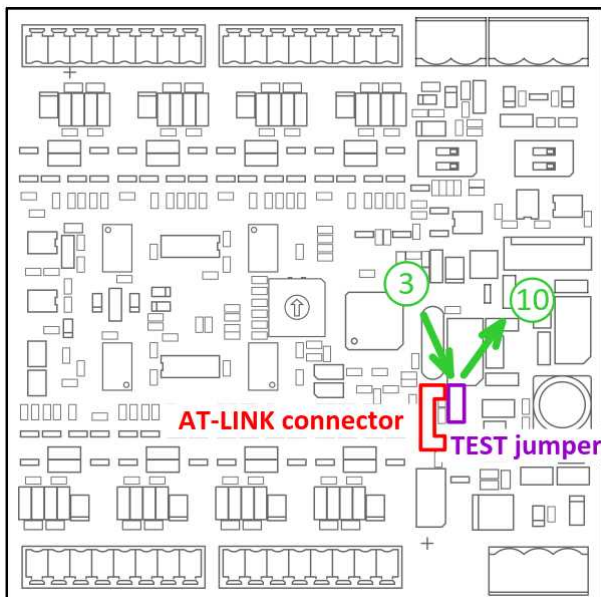

5. Connect power supply of the module (status LED lights continuously)
6. Launch FlashPgr.exe PC software (version 4.2 or higher)
7. In FlashPrg program choose card Inteli AIN8 and load FW for the module
8. Set the proper COM port (connected with the unit) and press Start button

9. Wait till process is done (If the process doesn't start – after 60 second the "Timeout" will be evaluated. In this case please check:
 - ▶ You have proper connection with the unit
 - ▶ COM port selection is correct
 - ▶ Module has power supply, (no CAN bus connection, status LED lights continuously)
10. After successful programming disconnect AT-Link conv , remove TEST jumper and disconnect power supply
11. Connect power supply again (status LED should blinking)
12. Module FW is upgraded


LED indication

LED status	Description
Dark	Fw in module does not work correctly.
Flashing	Module does not communicate with controller (in case non-zero CAN address).
Lights	Power supply is in the range and the communication between Inteli AIN8 and controller works properly. Or power supply is in range and zero CAN address is set. (in case zero CAN address module doesn't communicate with the controller).


Wiring

The following diagrams show the correct connection of sensors.

Terminator

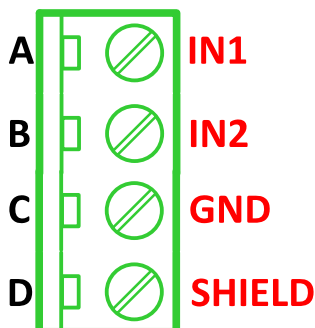


Resistance sensor - 3 wires

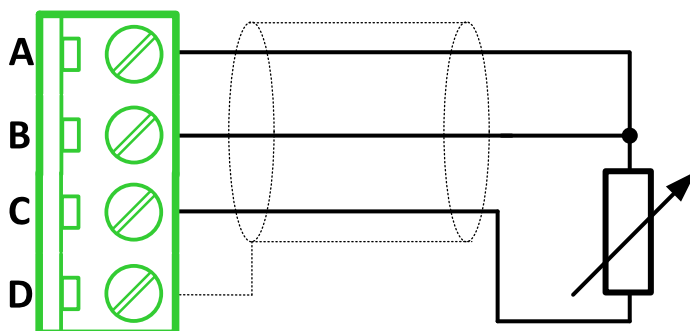


Note: Ranges: Pt100, Pt1000, Ni100, Ni1000, 0 – 2400 Ω, 0 – 10 kΩ

Resistance sensor - 2 wires

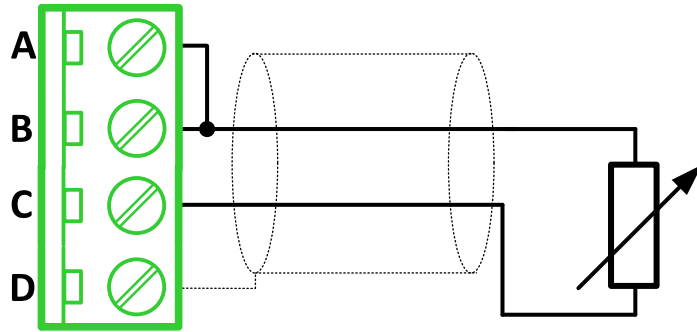


Note: Ranges: Pt100, Pt1000, Ni100, Ni1000, 0 – 2400 Ω, 0 – 10 kΩ

Current sensor - active

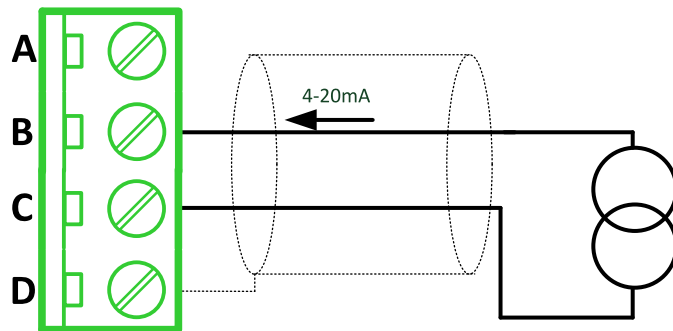


Note: Ranges: ±20 mA, 4 – 20 mA

Current sensor - passive

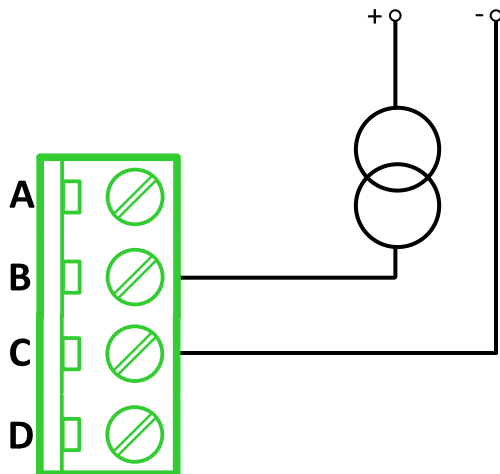

Note: Ranges: 0 – 20 mA, 4 – 20 mA

Voltage sensor

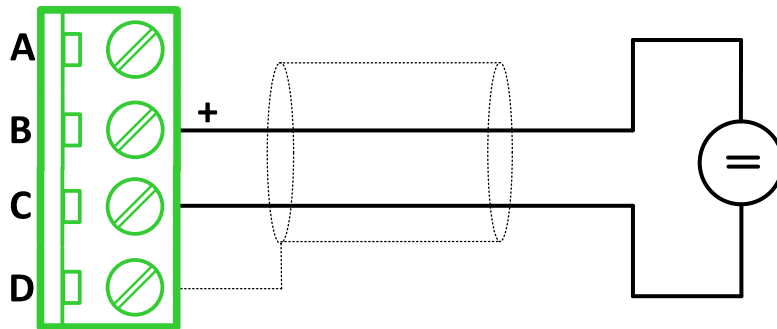

Note: Ranges: $\pm 1\text{ V}$, $0-2,5\text{ V}$, $0-5\text{ V}$, $0-10\text{ V}$

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	35 mA at 24 V ÷ 100 mA at 8 V
Interface to controller	CAN1
Protection	IP20
Storage temperature	- 40 °C to + 80 °C
Operating temperature	- 30 °C to + 70 °C
Dimensions (WxHxD)	110x110x46 mm (4,3"x4,3"x1,8")
Weight	221,5 grams

Analog inputs

Number of channels	8
Voltage	Range 0-10 V Accuracy: $\pm 0,25\%$ of actual value + $\pm 25\text{ mV}$
Current	Range: $\pm 20\text{ mA}$ Accuracy: $\pm 0,25\%$ of actual value + $\pm 50\text{ }\mu\text{A}$
Resistive	Range: 0- 10 k Ω Accuracy: $\pm 0,5\%$ of actual value + $\pm 2\text{ }\Omega$

Inteli IO8/8

Inteli IO8/8 module is an extension module equipped with binary inputs, binary outputs and analog outputs.

Inteli IO8/8 is the name of the module, but it is possible to configure the module (by internal switch) to two configurations:

- ▶ Inteli IO8/8 - 8 binary inputs, 8 binary outputs and 2 analog outputs
- ▶ Inteli IO 16/0 - 16 binary inputs, 0 binary outputs and 2 analog outputs

The detection of communication speed is indicated by fast flashing of status LED. Once the speed is detected the module remains set for the speed even when the communication is lost. Renewal of communication speed detection is done by reset of the module.



Image 10.32 IntelI IO8/8


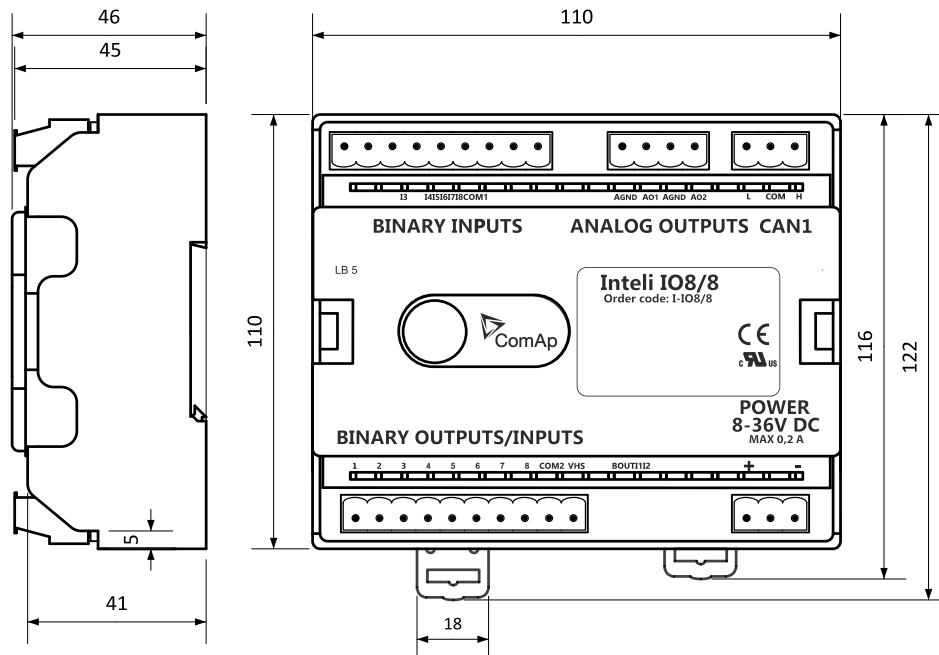


Image 10.33 IntelI IO8/8 dimensions

Note: All dimensions are in mm.

Terminals

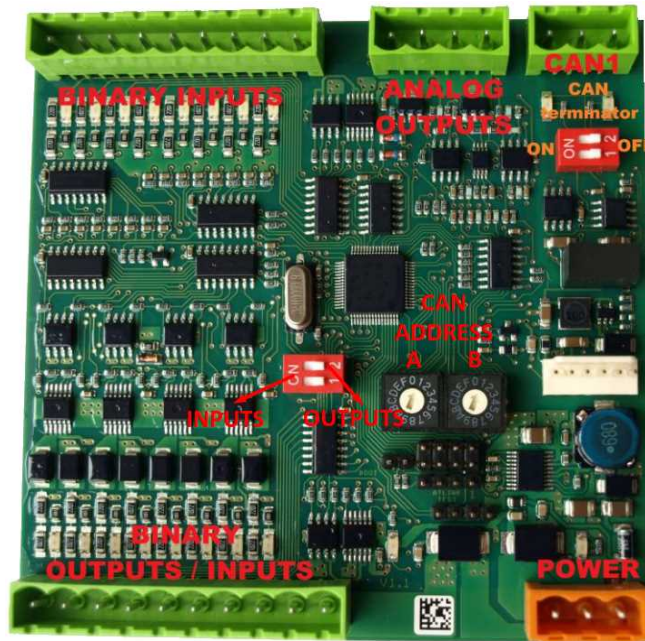

Binary inputs	8 binary inputs
Binary outputs	8 binary outputs (8 binary inputs)
Analog outputs	2 analog outputs
CAN	CAN1 line
Power	Power supply
Binary inputs LEDs	8 LEDs for binary input indication
Binary outputs LEDs	8 LEDs for binary output indication
CAN LED	Indication transmitted or received data
Status	LED indication of correct function
CAN terminator	Terminating CAN resistor (active in position "ON" - switch both switches)

Inputs and outputs

Binary inputs

- ▶ 8 channels
- ▶ can be configured as:
 - pull up
 - pull down

All 8 inputs are configured to one type together.

All inputs can be configured to any logical function or protection.

Binary outputs

- ▶ 8 channels
- ▶ can be configured as:
 - High side switch
 - Low side switch

Always all 8 inputs are configured to one type (HSS/LSS) together. All 8 outputs can be modified to inputs by switch on the PCB (Intel IO8/8 to Intel IO 16/0).

Analog outputs

- ▶ 2 channels
- ▶ can be configured as:
 - voltage 0-10V
 - current 0-20mA
 - PWM (level 5V, with adjustable frequency from 200Hz to 2400Hz, with step 1Hz)

All inputs/outputs can be configured to any logical function or protection.

Output state check

Output state check function evaluates in real time the state of binary outputs and adjusted (required) state. In case of failure (different state of required state and real state) history record and alarm are issued (type of the alarm is set by “Protection upon module failure” - (No protection / Warning / Shutdown)).

This function is designed for short-circuit or other failure, which causes change of set state of binary output.

CAN address

In Intel IO8/8 mode CAN address for binary inputs is determined by DIP switch A, CAN address for binary output and analog outputs is determined by DIP switch B.

In Intel IO 16/0 mode CAN address for binary inputs is determined by DIP switch A, first group of 8 input has address A, second group of 8 inputs has address A+1. CAN address of analog outputs is set by DIP switch B.




Note: In case of setting the CAN address to zero, the appropriate group of signals is deactivated.

Programming firmware

Firmware upgrade process:

1. Disconnect all terminals from the unit.
2. Separate the top cover of module
3. Put the TEST jumper on a pins

4. Connect the unit with PC via RS232-null modem cable and AT-Link conv

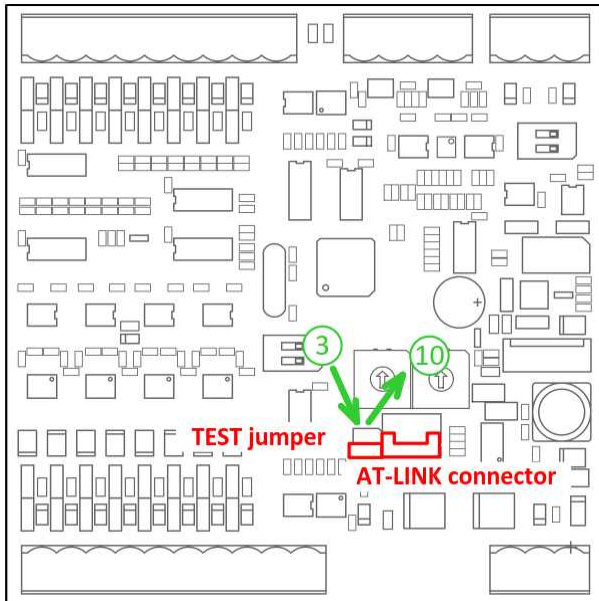

5. Connect power supply of the module (status LED lights continuously)
6. Launch FlashPgr.exe PC software (version 4.2 or higher)
7. In FlashPrg program choose card Inteli IO8/8 and load FW for the module
8. Set the proper COM port (connected with the unit) and press Start button
9. Wait till process is done (If the process doesn't start – after 60 second the "Timeout" will be evaluated. In this case please check:
 - ▶ You have proper connection with the unit
 - ▶ COM port selection is correct
 - ▶ Module has power supply, (no CAN bus connection, status LED lights continuously)
10. After successful programming disconnect AT-Link conv , remove TEST jumper and disconnect power supply
11. Connect power supply again (status LED should blinking)
12. Module FW is upgraded

LED indication

Binary input

Each binary input has LED which indicates input signal. LED is shining when input signal is set, and LED is dark while input signal has other state.

Binary output

Each binary output has LED which indicates output signal. Binary output LED is shining when binary output is set. When this LED is shining, then module is configured as 8 binary inputs and 8 binary outputs. When this LED is dark, then the module is configured as 16 binary inputs.


LED at power connector - status LED

LED status	Description
Dark	Fw in module does not work correctly.
Flashing	Module does not communicate with controller (in case non-zero CAN address).
Lights	Power supply is in the range and the communication between Intel IO8/8 and controller works properly. Or power supply is in range and zero CAN address is set. (in case zero CAN address module doesn't communicate with the controller).

Wiring

The following diagrams show the correct connection of inputs and outputs.


Binary inputs - pull up

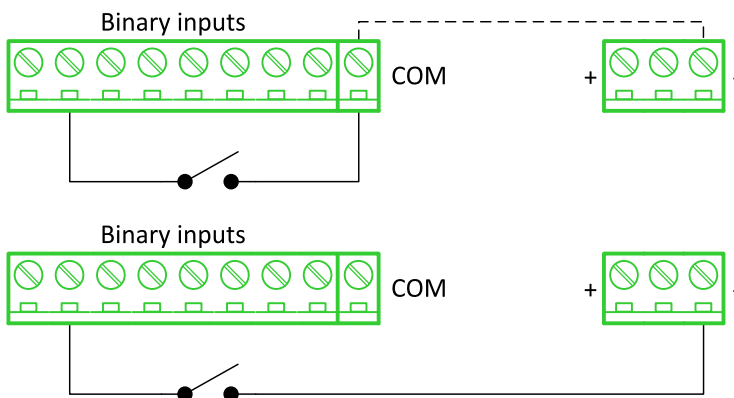

There are two options of wiring. On upper picture you can see case when binary input is connected between BIN2 and COM (COM is connected internally to the GND (-) - dashed line).

On lower picture is case of wiring between BIN2 and GND (-). Both ways are correct.


Binary inputs - pull down

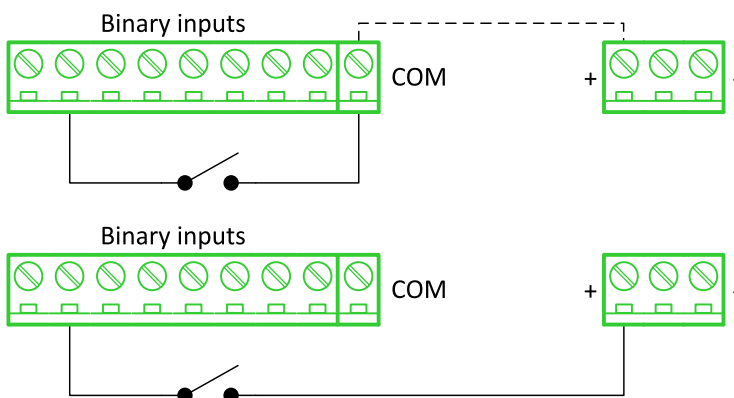

There are two options of wiring. On upper picture you can see case when binary input is connected between BIN2 and COM (COM is connected internally to the Ucc (+) - dashed line).


On lower picture is case of wiring between BIN2 and Ucc (+). Both ways are correct.

Binary outputs - high side

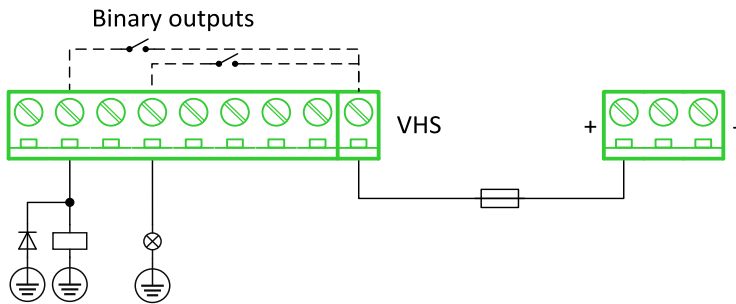

When high side setting of outputs is chosen - binary output must be connected to the minus potential directly Terminal VHS (voltage High side) has to be connected to positive potential directly. Maximal current of each binary output is 500 mA. Size of fuse depends on load.


Binary outputs - low side

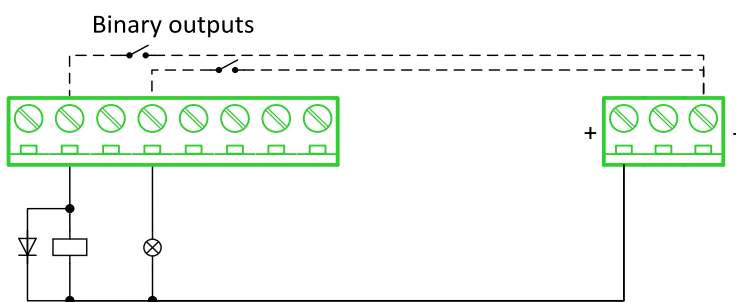

When low side setting of outputs is chosen - binary output must be connected to the plus potential of power supply directly. Minus potential is connected internally - dashed line.

Analog outputs

Analog outputs

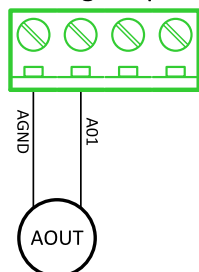

Note: Limit of analog ground (AGND) is 100mA.

IMPORTANT: Terminator for analog output has special analog ground (AGND), which must not be connected to the GND.

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	35 mA at 24 V + 100 mA at 8 V
Interface to controller	CAN1
Protection	IP20
Storage temperature	- 40 °C to + 80 °C

Operating temperature	- 30 °C to + 70 °C
Dimensions (WxHxD)	110x110x46 mm (4,3"x4,3"x1,8")
Weight	240 grams

Analog outputs

Number of channels	2
Voltage	Range 0-10 V Accuracy: ± 20 mV + $\pm 0,5$ % of actual value I _{max} 5 mA
Current	Range: 0-20 mA Accuracy: ± 100 μ A + $\pm 0,5$ % of actual value R _{max} 500 Ω
PWM	Level 5 V Frequency - adjustable 200-2400 Hz I _{max} 20 mA

Binary inputs

Number of channels	8 for Intel IO8/8, 16 for Intel IO 16/0
Input resistance	4400 Ω
Input range	0 to 36 V DC
Switching voltage level for open contact indication	0 to 2 V DC
Max voltage level for close contact indication	6 to 36 V DC

Binary outputs

Number of channels	8 for Intel IO8/8, 0 for Intel IO 16/0
Max current	500 mA
Max switching voltage	36 V DC

IGS-PTM

IGS-PTM module is extension module equipped with binary inputs, binary outputs, analog inputs and analog output. IGS-PTM module is connected to controller by CAN1 bus.



Image 10.34 IGS-PTM


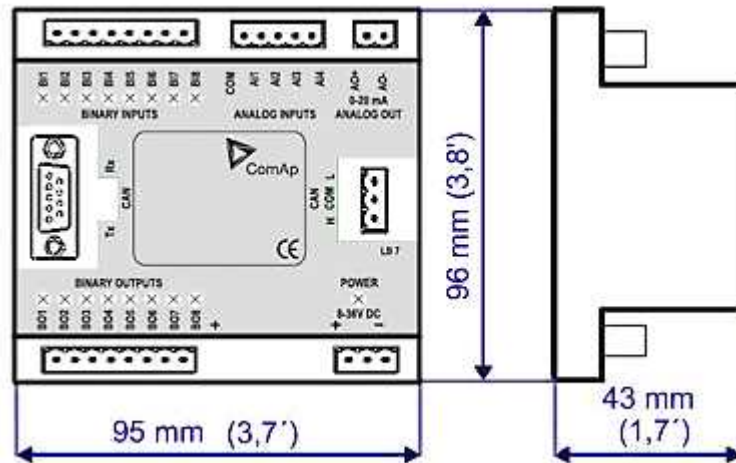


Image 10.35 IGS-PTM dimensions

Terminals

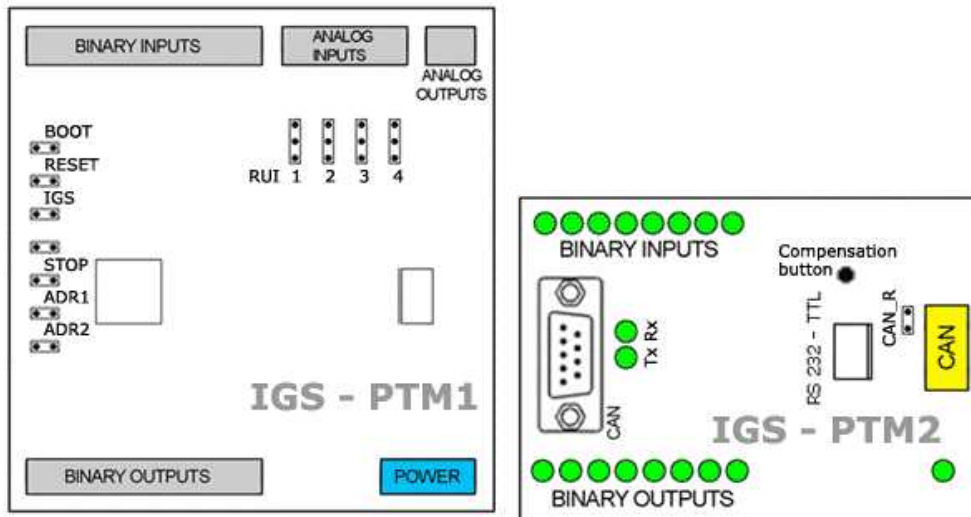

Binary inputs	8 binary inputs
Analog inputs	4 analog inputs
Analog outputs	1 analog output
Binary outputs	8 binary outputs
CAN	CAN1 line
RS232-TTL	Interface for programming
Power	Power supply

Analog inputs

Analog inputs can be configured for:

- ▶ Resistance measurement
- ▶ Current measurement
- ▶ Voltage measurement

The type of analog inputs is configured via jumpers RUI located on lower PCB.

RUI	Analog input configuration
1 - 2	Resistance measuring
2 - 3	Current measuring
no jumper	Voltage measuring

Supported sensors

Sensors	
PT100 [°C] (fix)	User curves
NI100 [°C] (fix)	0-100 mV
PT100 [°F] (fix)	0-2400 ohm
NI100 [°F] (fix)	±20 mA

CAN address

Controller type selection

The type of controller to be used with IGS-PTM must be selected via jumper labeled IGS accessible at the lower PCB.

IGS jumper	Controller type
OPEN	IL-NT, IC-NT
CLOSE	IG-NT, IS-NT, IntelliLite

Address configuration

If IntelliLite controller type is selected (by IGS jumper), address of IGS-PTM could be modified via jumpers labeled ADR1 and ADR2.

ADR1	ADR2	ADR offset	BIN module	BOUT module	AIN module
Open	Open	0 (default)	1	1	1
Close	Open	1	2	2	2
Open	Close	2	3	3	3
Close	Close	3	4	4	4

Programing firmware

Firmware upgrade is via AT-link (TTL). For programming is necessary to close jumper BOOT. RESET jumper is used to reset the device. Close jumper to reset the device. For programming is used FlashProg PC tool.

LED indication

Binary input

Each binary input has LED which indicates input signal. LED is shining when input signal is set, and LED is dark while input signal has other state.

Binary output


Each binary output has LED which indicates output signal. Binary output LED is shining when binary output is set.

LED at power connector - status LED


LED status	Description
Dark	No required power connected.
Quick flashing	Program check failure.
One flash and pause	Compensation fail.
Three flashes and pause	Compensation successful.
Flashes	There is no communication between IGS-PTM and the controller.
Lights	Power supply is in the range and communication between IGS-PTM and controller properly works.

Wiring


Binary inputs

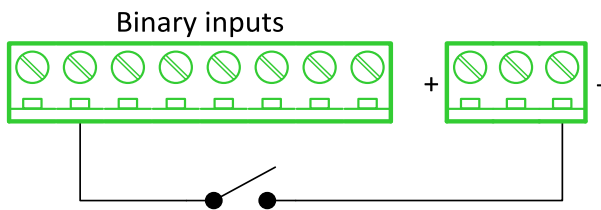

Binary outputs

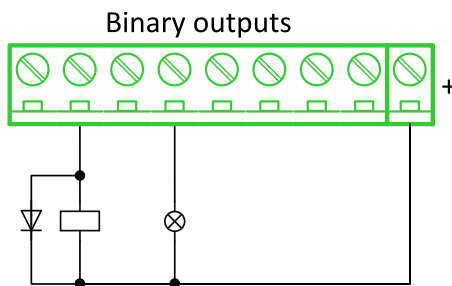


Resistance sensor

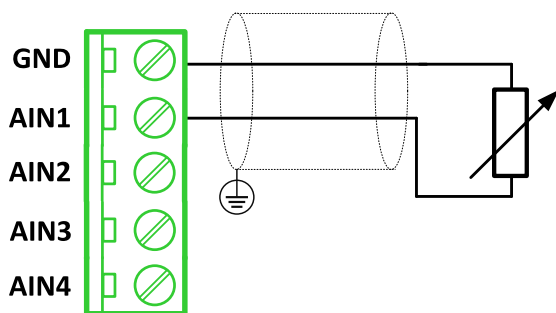

Note: Range: 0- 2400 Ω


IMPORTANT: Physical analog input range is 0-250 Ω . In sensor configuration in PC tool it is necessary to chose 0-2400 Ω sensor HW type to ensure proper function of analog input.

Voltage sensor

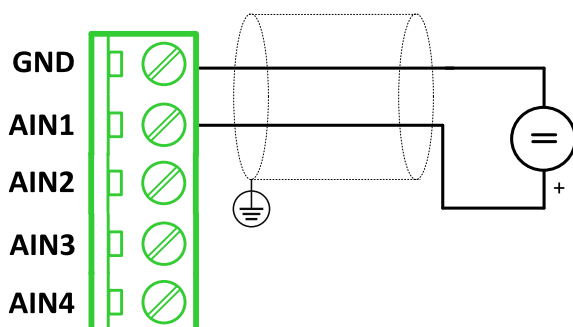

Note: Range 0-100 mV

Current sensor - passive

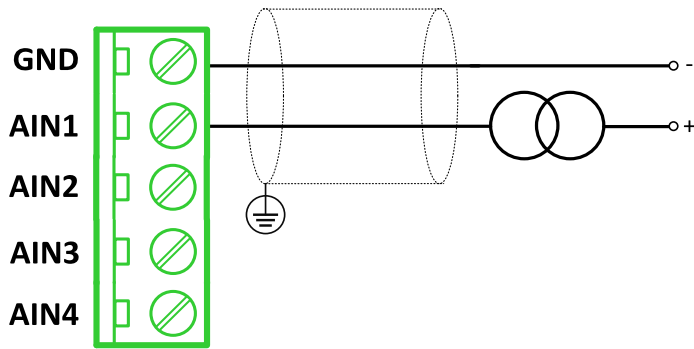


Note: Range: $\pm 0-20\text{ mA}$

IMPORTANT: Physical analog input range is 0-20mA. In sensor configuration in PC tool it is necessary to chose +- 20mA active sensor HW type to ensure proper function of analog input.

Analog outputs

Analog output

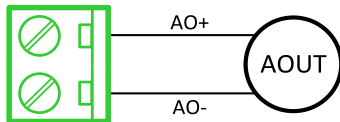

Note: Range: 0 to 20 mA $\pm 0,33\text{ mA}$

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	100 mA at 24V $\pm 500\text{ mA}$
Interface to controller	CAN1
Protection	IP20
Storage temperature	- 40 °C to + 80 °C
Operating temperature	- 30 °C to + 70 °C
Dimensions (WxHxD)	95×96×43 mm (3.7'×3.8'×1.7')

Analog inputs

Number of channels	8
Voltage	Range 0-100 mV Accuracy: 1,5 % $\pm 1\text{ mV}$ out of measured value
Current	Range: 0-20 mA Accuracy: 2.5 % $\pm 0,5\text{ ohm}$ out of measured value
Resistive	Range: 0- 250 Ω Accuracy: 1 % $\pm 2\text{ ohm}$ out of measured value

Analog outputs

Number of channels	1
Current	Range: 0 to 20 mA \pm 0,33 mA Resolution 10 bit

Binary inputs

Number of channels	8
Input resistance	4700 Ω
Input range	0 to 36 V DC
Switching voltage level for open contact indication	0 to 2 V DC
Max voltage level for close contact indication	8 to 36 V DC

Binary outputs

Number of channels	8
Max current	500 mA
Max switching voltage	36 V DC
Number of channels	8
Voltage	Range 0-100 mV Accuracy: 1,5 % \pm 1 mV out of measured value
Current	Range: 0-20 mA Accuracy: 2.5 % \pm 0,5 ohm out of measured value
Resistive	Range: 0- 250 Ω Accuracy: 1 % \pm 2 ohm out of measured value

Inteli AIN8TC

Inteli AIN8TC module is extension module equipped with 8 analog inputs dedicated for thermocouple sensors only.

The detection of communication speed is indicated by fast flashing of status LED. Once the speed is detected the module remains set for the speed even when the communication is lost. Renewal of communication speed detection is done by reset of the module.



Image 10.36 Intel AIN8TC


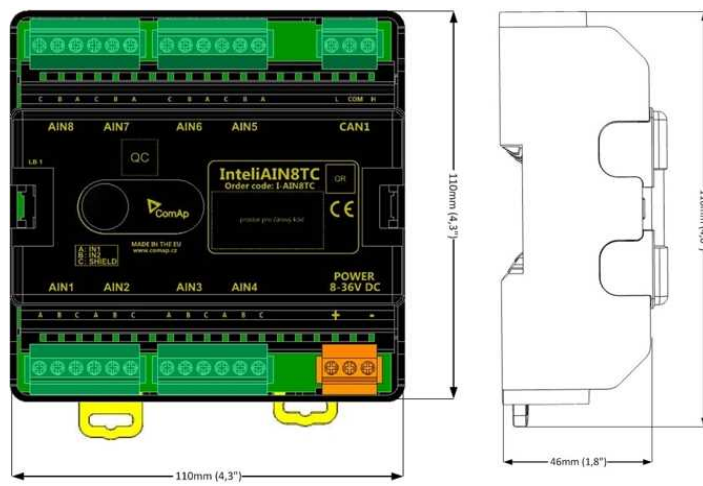


Image 10.37 Intel AIN8TC dimensions

Terminals

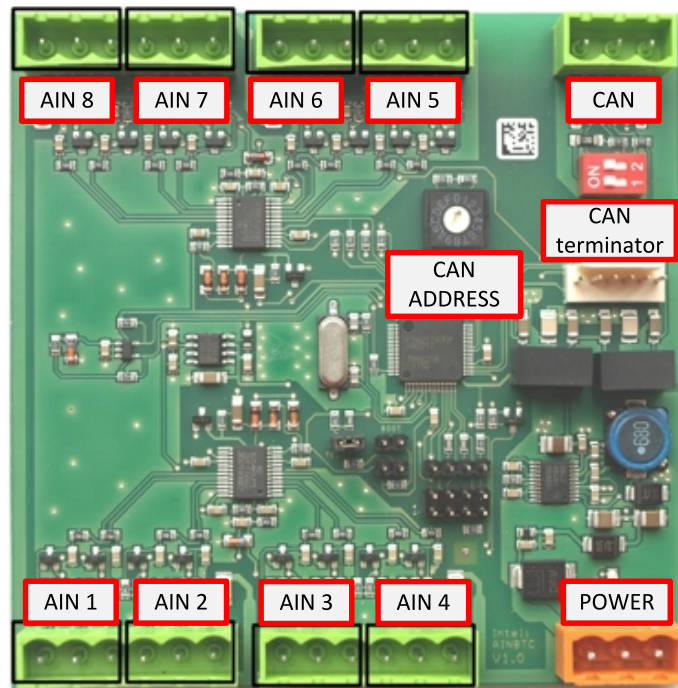

ANALOG INPUT	8 analog Inputs
CAN	CAN1 line
POWER	Power supply
CAN LED Tx, Rx	Indication transmitted or received data
Status LED	LED indication of correct function
CAN terminator	Terminating CAN resistor (active in position "ON")
TEST jumper	Upgrade of sw
AT-LINK	Connector for AT-LINK

Analog inputs

- ▶ 8 channels
- ▶ can be configured as thermocouple sensors only

Supported sensors

Sensors
Thermocpl J [°C] (fix)
Thermocpl K [°C] (fix)
Thermocpl L [°C] (fix)
Thermocpl J [°F] (fix)
Thermocpl K [°F] (fix)
Thermocpl L [°F] (fix)
Thermocpl (nc) J [°C] (fix)

Thermocpl (nc) K [°C] (fix)
Thermocpl (nc) L [°C] (fix)
Thermocpl (nc) J [°F] (fix)
Thermocpl (nc) K [°F] (fix)
Thermocpl (nc) L [°F] (fix)

Note: “nc” means not cold junction compensation (by external sensor). In this case is used internal temperature sensor on the PCB

Address and DIP switch setting

Address configuration

DIP switch determinates CAN address for analog inputs.

Programming firmware

Firmware is upgraded via AT-link (TTL). For programming it is necessary to close jumper TEST.


For programming FlashProg PC tool version 4.2 or higher must be used.

LED indication


LED status	Description
Dark	Fw in module does not work correctly.
Flashing	Module does not communicate with controller (in case non-zero CAN address)
Fast flashing	Detection of CAN communication speed
Lights	Power supply is in the range and the communication between Inteli AIN8TC and controller works properly. Or power supply is in range and zero CAN address is set. (in case zero CAN address module doesn't communicate with the controller)

Wiring

Analog inputs

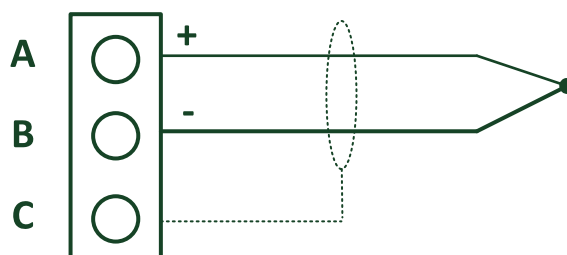

Terminaoor

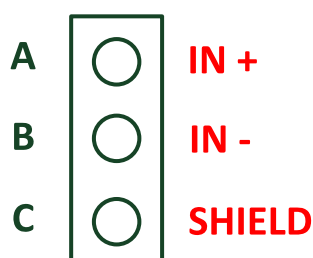

Technical data

Dimension (W × H × D)	110 × 110 × 46 mm (4.3" × 4.3" × 1.8")
Weight	237.5 grams
Interface to controller	CAN1

Analog inputs (not electric separated)	8, no galvanic separated
Measuring	±100 mV
Accuracy	± 0.1 % of actual value + ± 100 μV (± 3 °C)
Internal sensor for measuring cold junction - Accuracy	±1 °C in temperature range -20 °C ÷ +70 °C
Galvanic separation	CANbus is galvanic separated from the measurement and power supply. All analog inputs are galvanic separated from power supply. Analog inputs are not galvanic separated between channels

Power supply	8 to 36 V DC
Protection	IP20
Current consumption	35 mA at 24 V ÷ 100 mA at 8 V
Storage temperature	- 40 °C to + 80 °C
Operating temperature	- 30 °C to + 70 °C
Heat radiation	2 W

Thermocouples galvanically separated and galvanically non-separated are supported.

Inteli AIO9/1

Inteli AIO9/1 module is extension module equipped with analog inputs and outputs – designed for DC measurement.

The detection of communication speed is indicated by fast flashing of status LED. Once the speed is detected the module remains set for the speed even when the communication is lost. Renewal of communication speed detection is done by reset of the module.



Image 10.38 Intel AIO9/1


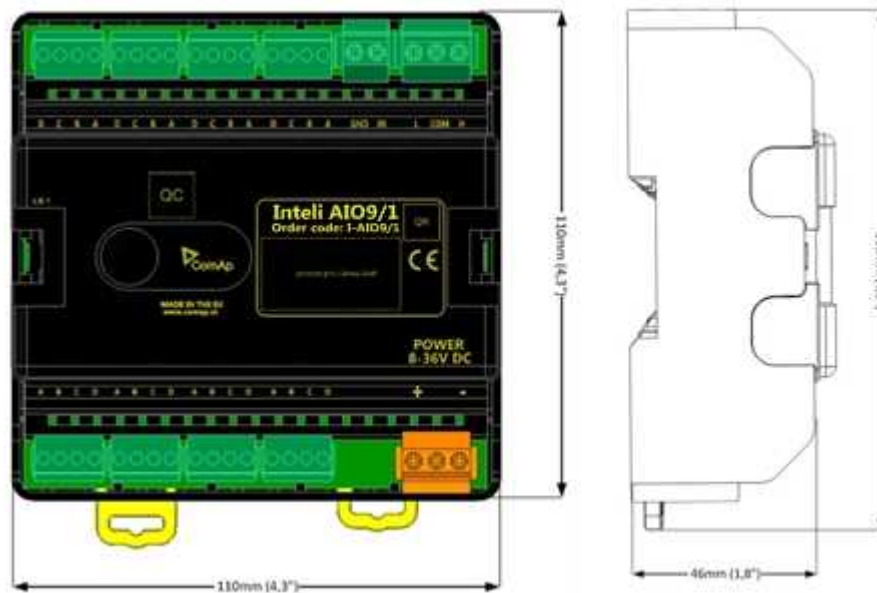


Image 10.39 Intel AIO9/1 dimensions

Terminals

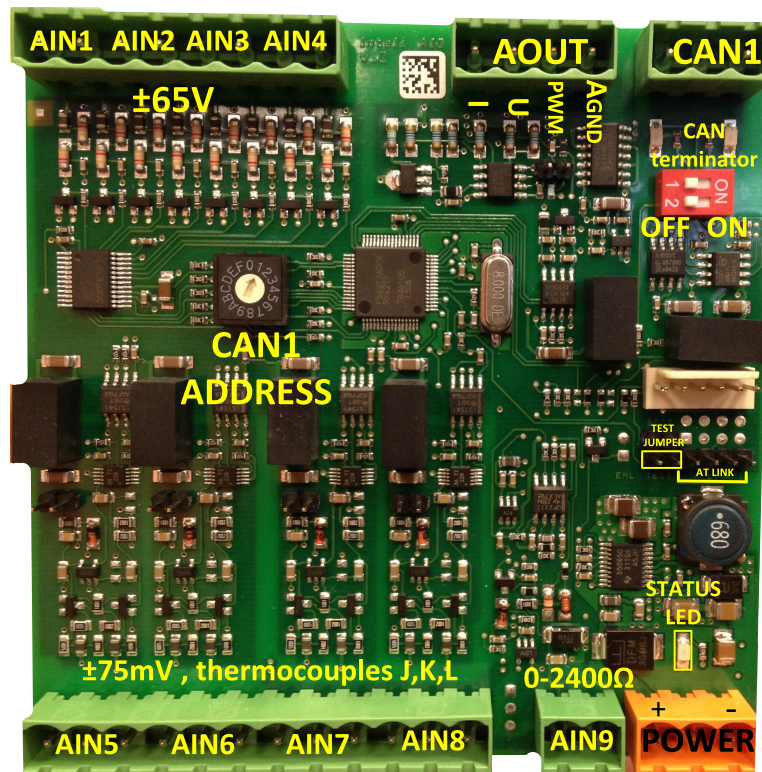

ANALOG INPUT	9 channels
ANALOG OUTPUTS	1 channel
CAN	CAN1 line
POWER	Power supply
CAN LED Tx, Rx	Indication transmitted or received data
Status LED	LED indication of correct function
CAN terminator	Terminating CAN resistor (active in position "ON")
TEST jumper	Upgrade of sw
AT-LINK	Connector for AT-LINK (Upgrade of sw)

Analog inputs

- ▶ 4 channels AIN1 – AIN4 can be configured as:
 - Sensor $\pm 65\text{V}$ (it is determined for measurement of battery voltage)
- ▶ 4 channels AIN5 – AIN8 can be configured as:
 - Thermocouples – type J, K or L (in $^{\circ}\text{C}$ or $^{\circ}\text{F}$)
 - Sensor $\pm 75\text{mV}$ DC – (for connecting current shunts)
- ▶ 1 channel AIN9 can be configured as:
 - RTD (Pt1000, Ni1000)
 - Common resistance 0-2400 Ω

Analog outputs

- ▶ 1 channel AOUT1. Type of output:
 - 0-10V DC
 - 0-20mA
 - PWM (5V, freq 2,4Hz ÷2,4kHz)
- ▶ Analog output has 4-pins connector – GND and one pin for each type of output.

All analog inputs can be configured to any logical function or protection.

Supported sensors

Sensors
User curves
PT1000 [°C] (fix)
NI1000 [°C] (fix)
0-2400Ω (fix linear)
± 65 V DC (fix linear)
+ -75mV (fix linear)
Thermocpl J [°C] (fix)
Thermocpl K [°C] (fix)
Thermocpl L [°C] (fix)
Thermocpl (nc) J [°C] (fix)
Thermocpl (nc) K [°C] (fix)
Thermocpl (nc) L [°C] (fix)
Thermocpl (nc) J [°F] (fix)
Thermocpl (nc) K [°F] (fix)
Thermocpl (nc) L [°F] (fix)

Address and DIP switch setting

Address configuration

DIP switch determinates CAN address for analog inputs and outputs.

Programming Firmware

Firmware upgrade is via AT-link (TTL). For programming it is necessary to close jumper TEST and switch OFF and switch ON the power supply.

For programming use FlashProg PC tool version 4.4 or higher.


LED indication

LED status	Description
Dark	Fw in module does not work correctly.
Flashing	Module does not communicate with controller (in case non-zero CAN address)

Fast flashing	Detection of CAN communication speed
Lights	Power supply is in the range and the communication between Intelilite AIN8TC and controller works properly. Or power supply is in range and zero CAN address is set. (in case zero CAN address module doesn't communicate with the controller)


Wiring

The following diagrams show the correct connection of sensors.

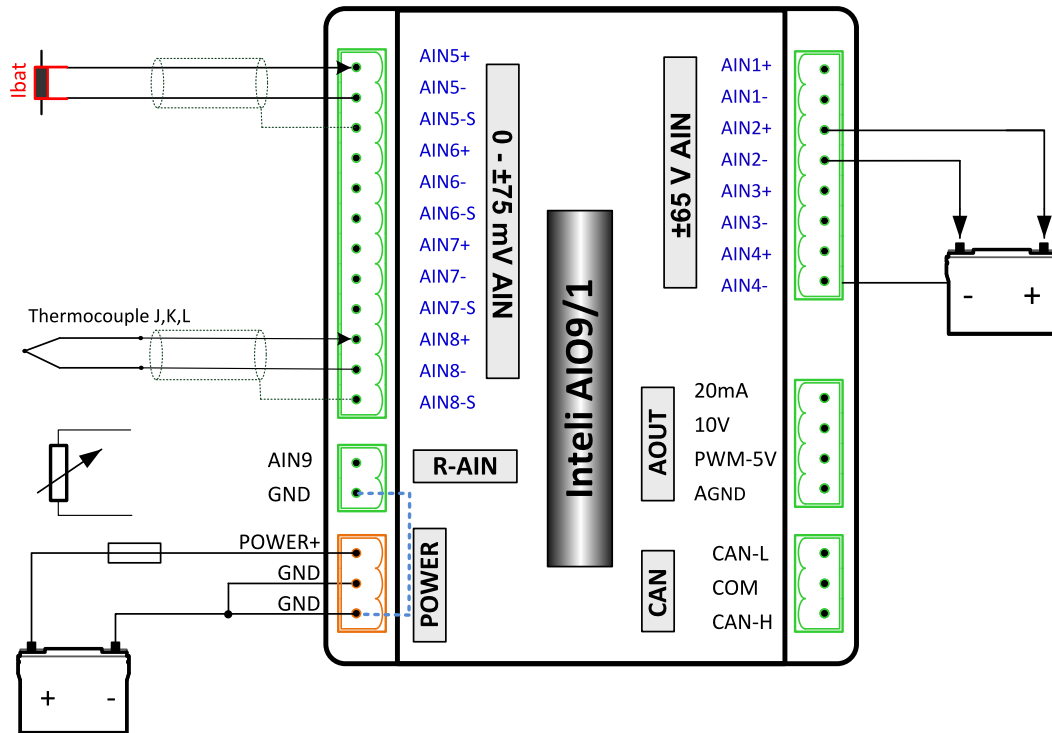

Measuring resistance – AIN9

- ▶ 2 – wire measurement

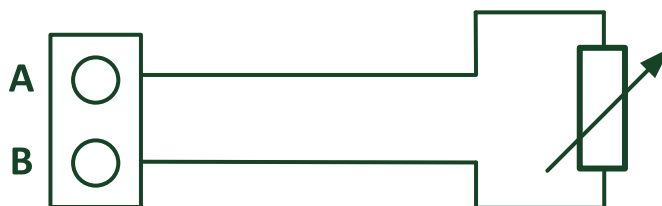

Ranges: Pt1000, Ni1000, 0 – 2400 Ω.

Analog input 9 is determined for measuring resistance only.

Technical data

Dimension (W × H × D)	110 × 110 × 46 mm (4.3" × 4.3" × 1.8")
Weight	248 grams
Interface to controller	CAN1 – galvanic separated from power supply and measurement,

Analog inputs (not electric separated)		9 channels
AIN1-AIN4 – Voltage inputs	Range	0-65 V ± 0.25 % of actual value + ± 120 mV Measurement is not galvanic separated from power supply, but IN- is not interconnected with GND – there is floating measurement.
	Accuracy of measurement	± 0,1 % of actual value + ± 100 µV (± 3 °C)
AIN5-AIN8 – Voltage inputs	Range	± 75 mV (nominal) (measurement up to ±80 mV)
	Accuracy of measurement	± 0.1 % of actual value + ± 75 µV Galvanic separated from power supply
AIN9 resistance input	Range	0- 2400 Ω
	Accuracy of measurement	± 0.5 % of actual value + ± 4 Ω Pt1000, Ni1000 ± 2,5 °C It is not galvanic separated from power supply.

Analog output
I 0-20mA /500Rmax. ± 1 % of actual value + ± 200 uA U 0-10V ± 0.5 % of actual value + ± 50 mV PWM – 5 V, 200 Hz-2.4kHz 15 mA max. Galvanic separated from power supply

Galvanic separation	CAN bus is galvanic separated from the measurement and power supply
----------------------------	---

Power supply	8 to 36 V DC
Protection	IP20
Current consumption	150 mA at 24 V ÷ 400 mA at 8 V
Storage temperature	- 40 °C to + 80 °C
Operating temperature	- 30 °C to + 80 °C

The product is fully supported in fw IGS-NT 3.1.1 or higher.

Information about support this module in IGS-NT fw branches and ID-DCU – please read New Feature Lists.