

InteliMains 210

Mains supervision controller

SW version 2.0.0

1 Document information	6
2 System overview	11
3 Applications overview	20
4 Installation and wiring	25
5 Controller setup	47
6 Communication	149
7 Technical data	184
8 Appendix	185

Table of contents

1 Document information	6
1.1 Clarification of notation	6
1.2 About this Global Guide	6
1.3 Legal notice	6
1.4 General warnings	8
1.4.1 Remote control and programing	8
1.4.2 SW and HW versions compatibility	8
1.4.3 Dangerous voltage	8
1.4.4 Adjust the setpoints	8
1.5 Certifications and standards	9
1.6 Document history	9
1.7 Symbols in this manual	10
2 System overview	11
2.1 General description	11
2.1.1 The key features of IntelliMains 210	11
2.2 True RMS measurement	11
2.3 Configurability and monitoring	12
2.3.1 Supported configuration and monitoring tools	12
2.3.2 Configuration parts	12
2.4 PC tools	14
2.4.1 IntelliConfig	14
2.4.2 WebSupervisor	14
2.4.3 WinScope	15
2.5 Plug-in modules	15
2.5.1 CM-Ethernet	15
2.5.2 CM-4G-GPS	16
2.5.3 CM-GPRS	16
2.5.4 CM-RS232-485	16
2.5.5 EM-BIO8-EFCP	17
2.6 CAN modules	17
2.6.1 Intelli AIN8	17
2.6.2 Intelli IO8/8	18
2.6.3 IGS-PTM	18
2.6.4 IGL-RA15	19
3 Applications overview	20

3.1 MCB	21
3.1.1 MCB application with one mains incomer	21
3.1.2 MCB application with multiple mains incomers	22
3.2 MGCB	23
4 Installation and wiring	25
4.1 Package content	25
4.2 Controller installation	26
4.2.1 Dimensions	26
4.2.2 Mounting	26
4.3 Terminal Diagram	28
4.4 Recommended wiring	29
4.4.1 General	30
4.4.2 Grounding	30
4.4.3 Power supply	30
4.4.4 Measurement wiring	32
4.4.5 Binary inputs	38
4.4.6 Binary Outputs	39
4.4.7 CAN bus and RS485 wiring	39
4.4.8 USB	44
4.4.9 USB HOST	44
4.5 Plug-in module installation	44
4.5.1 Installation	44
4.6 Maintenance	46
4.6.1 Backup battery replacement	46
5 Controller setup	47
5.1 Default configuration	47
5.1.1 Default configuration	47
5.2 Controller configuration and PC tools connection	47
5.2.1 USB	48
5.2.2 RS232/RS485	49
5.2.3 Ethernet	50
5.2.4 Firmware upgrade	54
5.3 Operator Guide	57
5.3.1 Front panel elements	57
5.3.2 Display screens and pages structure	59
5.3.3 Browsing alarms	70
5.3.4 Password	71
5.3.5 Information screen	77

5.3.6 Language selection	78
5.3.7 Display contrast adjustment	80
5.4 Functions	80
5.4.1 Operating Modes	81
5.4.2 Connecting to load	82
5.4.3 Parallel to mains operation	85
5.4.4 AMF operation	88
5.4.5 Power management	89
5.4.6 Control groups	107
5.4.7 Distributed power management signals	108
5.4.8 Regulation loops	112
5.4.9 Frequency control	114
5.4.10 Voltage PF control	115
5.4.11 Electric state machine	115
5.4.12 Alarm management	116
5.4.13 History log	121
5.4.14 Breaker control	122
5.4.15 Exercise timers	125
5.4.16 Analog switches	131
5.4.17 Voltage phase sequence detection	133
5.4.18 Sensor curves	133
5.4.19 PLC	134
5.4.20 Mains decoupling protections	141
5.4.21 Alternate configuration	142
5.4.22 USB host	143
5.4.23 Load shedding	146
5.4.24 Peak shaving	148
6 Communication	149
6.1 PC	149
6.1.1 Direct communication	149
6.1.2 Remote communication	151
6.2 Connection to 3rd party systems	163
6.2.1 SNMP	163
6.2.2 MODBUS-RTU, MODBUS/TCP	165
6.3 Replacing InternetBridge-NT	178
6.3.1 Sites with "NT" family controllers	178
6.3.2 Sites with new controller families	180
6.3.3 Combined sites	182

7 Technical data	184
8 Appendix	185
8.1 Controller objects	186
8.1.1 Setpoints	187
8.1.2 Values	406
8.1.3 Logical binary inputs	444
8.1.4 Logical binary outputs	482
8.1.5 Logical analog inputs	516
8.1.6 PLC	545
8.2 Alarms	558
8.2.1 Alarms level 1	558
8.2.2 Alarms level 2	577
8.2.3 Fail sensor and other types	587
8.3 Modules	594
8.3.1 Plug-In modules	594
8.3.2 CAN modules	609

1 Document information

1.1 Clarification of notation	6
1.2 About this Global Guide	6
1.3 Legal notice	6
1.4 General warnings	8
1.5 Certifications and standards	9
1.6 Document history	9
1.7 Symbols in this manual	10

 [back to Table of contents](#)

1.1 Clarification of notation

Note: This type of paragraph calls readers attention to a notice or related theme.

IMPORTANT: This type of paragraph highlights a procedure, adjustment etc., which can cause a damage or improper function of the equipment if not performed correctly and may not be clear at first sight.

Example: This type of paragraph contains information that is used to illustrate how a specific function works.

1.2 About this Global Guide

This manual contains important instructions for IntelliMains 210 controllers family that shall be followed during installation and maintenance of the controllers.

This manual provides general information how to install and operate IntelliMains 210 controllers.

This manual is dedicated for:

- ▶ Operators
- ▶ Control panel builders
- ▶ For everybody who is concerned with installation, operation and maintenance

1.3 Legal notice

This End User's Guide/Manual as part of the Documentation is an inseparable part of ComAp's Product and may be used exclusively according to the conditions defined in the "END USER or Distributor LICENSE AGREEMENT CONDITIONS – COMAP CONTROL SYSTEMS SOFTWARE" (License Agreement) and/or in the "ComAp a.s. Global terms and conditions for sale of Products and provision of Services" (Terms) and/or in the "Standardní podmínky projektů komplexního řešení ke smlouvě o dílo, Standard Conditions for Supply of Complete Solutions" (Conditions) as applicable.

ComAp's License Agreement is governed by the Czech Civil Code 89/2012 Col., by the Authorship Act 121/2000 Col., by international treaties and by other relevant legal documents regulating protection of the intellectual properties (TRIPS).

The End User and/or ComAp's Distributor shall only be permitted to use this End User's Guide/Manual with ComAp Control System Registered Products. The Documentation is not intended and applicable for any other purpose.

Official version of the ComAp's End User's Guide/Manual is the version published in English. ComAp reserves the right to update this End User's Guide/Manual at any time. ComAp does not assume any responsibility for its use outside of the scope of the Terms or the Conditions and the License Agreement.

Licensed End User is entitled to make only necessary number of copies of the End User's Guide/Manual. Any translation of this End User's Guide/Manual without the prior written consent of ComAp is expressly prohibited!

Even if the prior written consent from ComAp is acquired, ComAp does not take any responsibility for the content, trustworthiness and quality of any such translation. ComAp will deem a translation equal to this End User's Guide/Manual only if it agrees to verify such translation. The terms and conditions of such verification must be agreed in the written form and in advance.

For more details relating to the Ownership, Extent of Permitted Reproductions Term of Use of the Documentation and to the Confidentiality rules please review and comply with the ComAp's License Agreement, Terms and Conditions available on www.comap-control.com.

Security Risk Disclaimer

Pay attention to the following recommendations and measures to increase the level of security of ComAp products and services.

Please note that possible cyber-attacks cannot be fully avoided by the below mentioned recommendations and set of measures already performed by ComAp, but by following them the cyber-attacks can be considerably reduced and thereby to reduce the risk of damage. ComAp does not take any responsibility for the actions of persons responsible for cyber-attacks, nor for any damage caused by the cyber-attack. However, ComAp is prepared to provide technical support to resolve problems arising from such actions, including but not limited to restoring settings prior to the cyber-attacks, backing up data, recommending other preventive measures against any further attacks.

Warning: Some forms of technical support may be provided against payment. There is no legal or factual entitlement for technical services provided in connection to resolving problems arising from cyber-attack or other unauthorized accesses to ComAp's Products or Services.

General security recommendations and set of measures

1. AccessCode

- Change the AccessCode BEFORE the device is connected to a network.
- Use a secure AccessCode – ideally a random string of 8 characters containing lowercase, uppercase letters and digits.
- For each device use a different AccessCode.

2. Password

- Change the password BEFORE the device enters a regular operation.
- Do not leave displays or PC tools unattended if an user, especially administrator, is logged in.

3. Controller Web interface

- The controller web interface at port TCP/80 is based on http, not https, and thus it is intended to be used only in closed private network infrastructures.
- Avoid exposing the port TCP/80 to the public Internet.

4. MODBUS/TCP

- The MODBUS/TCP protocol (port TCP/502) is an instrumentation protocol designed to exchange data between locally connected devices like sensors, I/O modules, controllers etc. From it's nature it does not

contain any kind of security – neither encryption nor authentication. Thus it is intended to be used only in closed private network infrastructures.

- Avoid exposing the port TCP/502 to the public Internet.

5. SNMP

- The SNMP protocol (port UDP/161) version 1,2 is not encrypted. Thus it is intended to be used only in closed private network infrastructures.
- Avoid exposing the port UDP/161 to the public Internet.

Used Open Source Software: mBed-TLS

<https://www.mbed.com/en/development/software/mbed-tls/>

<http://www.apache.org/licenses/LICENSE-2.0>

1.4 General warnings

1.4.1 Remote control and programming

Controller can be remotely controlled. In the event that maintenance of gen-set has to be done, or controller has to be programmed, check the following points to ensure that the engine cannot be started or any other parts of the system cannot be effected.

To be sure:

- ▶ Disconnect remote control
- ▶ Disconnect binary outputs

1.4.2 SW and HW versions compatibility

Be aware to use proper combination of SW and HW versions.

1.4.3 Dangerous voltage

In no case touch the terminals for voltage and current measurement!

Always connect grounding terminals!

In any case do not disconnect controller CT terminals!



1.4.4 Adjust the setpoints

All parameters are adjusted to their typical values. However the setpoints has to be checked and adjusted to their real values before the first starting of the gen-set.



IMPORTANT: Wrong adjustment of setpoints can destroy the gen-set.

***Note:** The controller contains a large number of configurable setpoints, because of this it is impossible to describe all of its functions. Some functions can be changed or have different behavior in different SW versions. Always check the Global guide and New feature list for SW version which is used in controller. This manual only describes the product and is not guaranteed to be set for your application.*

IMPORTANT: Be aware that the binary outputs can change state during and after software reprogramming (before the controller is used again ensure that the proper configuration and setpoint settings are set in the controller).

The following instructions are for qualified personnel only. To avoid personal injury do not perform any action not specified in related guides for product.

1.5 Certifications and standards

<ul style="list-style-type: none"> ▶ EN 61000-6-2 ▶ EN 61000-6-4 ▶ EN 61010-1 ▶ EN 60068-2-1 (-20 °C/16 h for std, -40 °C/16 h for LT version) ▶ EN 60068-2-2 (70 °C/16 h) ▶ EN 60068-2-6 (2÷25 Hz / ±1,6 mm; 25÷100 Hz / 4,0 g) ▶ EN 60068-2-27 (a=500 m/s²; T=6 ms) ▶ EN 60068-2-30:2005 25/55°C, RH 95%, 48hours ▶ EN 60529 (front panel IP65, back side IP20) 	 
---	--

1.6 Document history

Revision number	Related sw. version	Date	Author
4	2.0.0	25.3.2019	Martin Klíma
3	2.0.0	7.3.2019	Michal Slavata
2	2.0.0	21.12.2018	Lubomír Brož
1	1.0.0	12.7.2018	Lubomír Brož

1.7 Symbols in this manual

	3 x Phases		Connector - male		Grounding		Resistor adjustable
	Active current sensor		Contact		GSM		Resistive sensor RPTC
	AirGate		Contactor		GSM modem		RS 232 male
	Alternating current		Controller simplified		IG-AVRi		RS 232 female
	Analog modem		Module simplified		IG-AVRi TRANS		Starter
	Battery		Current measuring		Jumper		Switch - manually operated
	Binary output		Current measuring		Load		Transformer
	Breaker contact		Diode		Mains		USB type B male
	Breaker contact		Ethernet male		Mains		USB type B female
	Breaker		Ethernet female		Mobile provider		Voltage measuring
	Breaker		Fuel solenoid		Passive current sensor		Wifi / WAN / LAN
	Capacitor		Fuse		Pick - up		back to Document information
	Coil		Fuse switch		Relay coil		
	Connector - female		Generator		Relay coil of slow-operating		
			Generator schematic		Resistor		

2 System overview

2.1 General description	11
2.2 True RMS measurement	11
2.3 Configurability and monitoring	12
2.4 PC tools	14
2.5 Plug-in modules	15
2.6 CAN modules	17

 [back to Table of contents](#)

2.1 General description

InteliMains 210 controller is comprehensive mains supervision controller for multiple generating sets operating in parallel to the Mains. A modular construction allows upgrades to different levels of complexity in order to provide the best solution for various customer applications. Controllers are equipped with a powerful graphic display showing icons, symbols and bar-graphs for intuitive operation, which sets, together with high functionality, new standards in Mains controls.

The controller automatically connects the group of gen-sets to the Mains. It features mains failure detection using integrated Mains protections, MCB and MGCB synchronization, configuration level switches based on Mains import or object consumption.

The controller provides easy-to-use operation and installation. Predefined configurations for typical applications are available as well as user-defined configurations for special applications.

2.1.1 The key features of InteliMains 210

- ▶ Easy-to-use operation and installation. The factory default configuration covers most applications
- ▶ Various customizations are possible thanks to its configurability
- ▶ Excellent remote communication capabilities
- ▶ High reliability

2.2 True RMS measurement

This controller measures AC values based on True RMS principle. This principle corresponds exactly to the physical definition of alternating voltage effective values. Under normal circumstances the mains voltage should have a pure sinusoidal waveform. However some nonlinear elements connected to the mains produce harmonic waveforms with frequencies of multiples of the basic mains frequency and this may result in deformation of the voltage waveforms. The True RMS measurement gives accurate readings of effective values not only for pure sinusoidal waveforms, but also for deformed waveforms.

Note: *The harmonic deformation causes that the Power Factor of a generator working parallel with the mains cannot reach values in a certain range around the PF 1.00. The higher the deformation, the wider the power factor dead range. If the requested power factor is adjusted inside the dead range, the controller cannot reach the requested value because of this fact.*

2.3 Configurability and monitoring

One of the key features of the controller is the system's high level of adaptability to the needs of each individual application and wide possibilities for monitoring. This can be achieved by configuring and using the powerful PC/mobile tools.

2.3.1 Supported configuration and monitoring tools

- ▶ IntelliConfig - complete configuration and single gen-set monitoring
- ▶ WebSupervisor - web-based system for monitoring and controlling
 - WebSupervisor mobile - supporting application for smart-phones
- ▶ WinScope - special graphical monitoring software

Note: Use the IntelliConfig PC software to read, view and modify configuration from the controller or disk and write the new configuration to the controller or disk.

The firmware of controller contains a large number of binary inputs and outputs needed for all necessary functions available. However, not all functions are required at the same time on the same gen-set and also the controller hardware does not have so many input and output terminals. One of the main tasks of the configuration is mapping of “logical” firmware inputs and outputs to the “physical” hardware inputs and outputs.

2.3.2 Configuration parts

- ▶ Mapping of logical binary inputs (functions) or assigning alarms to physical binary input terminals
- ▶ Mapping of logical binary outputs (functions) to physical binary output terminals
- ▶ Assigning sensor characteristics (curves) and alarms to analog inputs
- ▶ Selection of peripheral modules, which are connected to the controller, and doing the same (as mentioned above) for them
- ▶ Changing the language of the controller interface

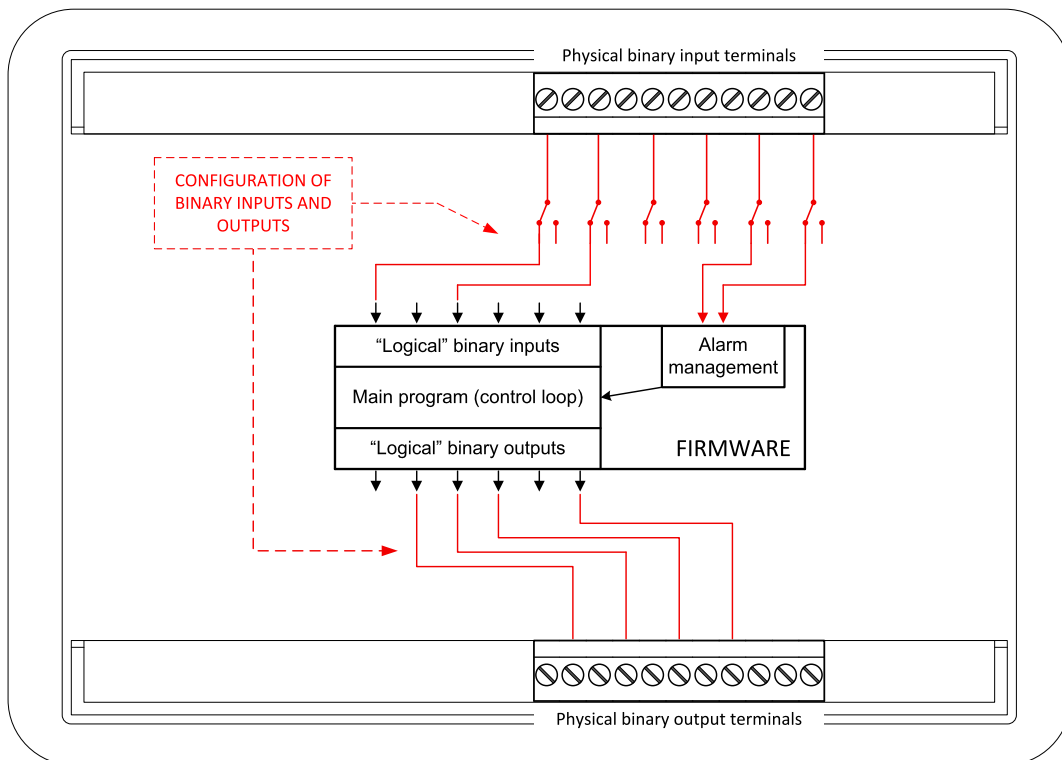


Image 2.1 Principle of binary inputs and outputs configuration

The controller is shipped with a default configuration, which should be suitable for most standard applications. This default configuration can be changed only by using a PC with the IntelliConfig software. See IntelliConfig documentation for details.

Note: You need one of communication modules to connect the controller to a PC with IntelliConfig. There is a special easy removable service module for cases when no communication module is permanently attached.

Once the configuration is modified, it can be saved to a file for later usage with another controller or for backup purposes. The file is called archive and has the file extension .ail3. An archive contains a full image of the controller at the time of saving (if the controller is online for the PC) except the firmware. Besides configuration it also contains current adjustment of all setpoints, all measured values, a copy of the history log and a copy of the alarm list.

The archive can be simply used for cloning controllers, i.e. preparing controllers with identical configuration and settings.


2.4 PC tools

2.4.1 IntelliConfig

Configuration and monitoring tool for IntelliGen controllers. See more in IntelliConfig Reference Guide.

This tool provides the following functions:

- ▶ Direct or internet communication with the controller
- ▶ Offline or online controller configuration
- ▶ Controller firmware upgrade
- ▶ Reading/writing/adjustment of setpoints
- ▶ Reading of measured values
- ▶ Browsing of controller history records
- ▶ Exporting data into a XLS file
- ▶ Controller language translation

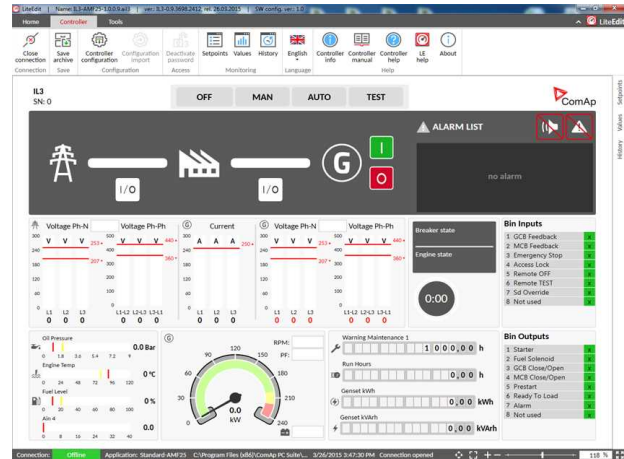


2.4.2 WebSupervisor

Web-based system for monitoring and controlling of controllers. See more at the WebSupervisor webpage.

This tool provides the following functions:

- ▶ Site and fleet monitoring
- ▶ Reading of measured values
- ▶ Browsing of controller history records
- ▶ On-line notification of alarms
- ▶ Email notification
- ▶ Also available as a smart-phone application

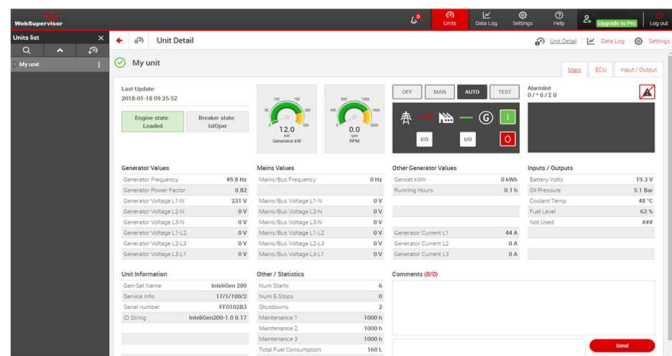

WebSupervisor available at: www.websupervisor.net

Demo account:

- ▶ Login: comaptest
- ▶ Password: ComAp123

2.4.3 WinScope

Special graphical controller monitoring software used mainly for commissioning and gen-set troubleshooting. See more in the WinScope Reference guide.

This tool provides the following functions:

- ▶ Monitoring and archiving of ComAp controller's parameters and values
- ▶ View of actual / historical trends in controller
- ▶ On-line change of controllers' parameters for easy regulator setup




2.5 Plug-in modules

2.5.1 CM-Ethernet

Internet/Ethernet module including web server.

- ▶ 10/100 Mbit ethernet interface in RJ45 socket
- ▶ Web interface for monitoring and adjustment of the controller
- ▶ Direct IP and/or AirGate connection for remote access from IntelliConfig
- ▶ MODBUS/TCP and SNMP protocols for integration of the controller into building management systems or other remote monitoring purposes
- ▶ Sending of active emails
- ▶ Simply connection via AirGate

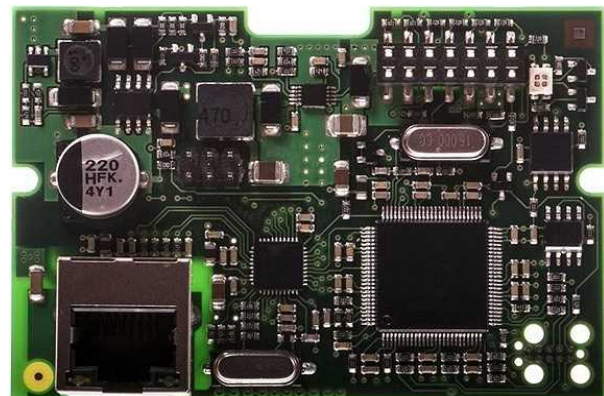

2.5.2 CM-4G-GPS

GSM/4G Internet module and GPS locator

- ▶ Wireless integrated solution
- ▶ Quick and easy installation
- ▶ Support of WebSupervisor
- ▶ Instant alarm SMS notification
- ▶ System control over SMS
- ▶ Quad Band GPRS/EDGE modem, 850/900/1800/1900 MHz, FDD LTE: Band 1, Band 2, Band 3, Band 4, Band 5, Band 7, Band 8, Band 20, all bands with diversity, WCDMA/HSDPA/HSUPA/HSPA+: Band 1, Band 2, Band 5, Band 8, all bands with diversity
- ▶ GPRS multi-slot class 10
- ▶ TCP/IP communication over GPRS



2.5.3 CM-GPRS

GSM/GPRS Internet module


- ▶ Wireless integrated solution
- ▶ Quick and easy installation
- ▶ Support of WebSupervisor
- ▶ Instant alarm SMS notification
- ▶ System control over SMS
- ▶ Quad Band GPRS/EDGE modem, 850/900/1800/1900 MHz
- ▶ GPRS multi-slot class 10
- ▶ TCP/IP communication over GPRS



2.5.4 CM-RS232-485

Communication module with two communication ports.


- ▶ RS232 and RS485 interface
- ▶ MODBUS
- ▶ Serial connection to IntelliConfig

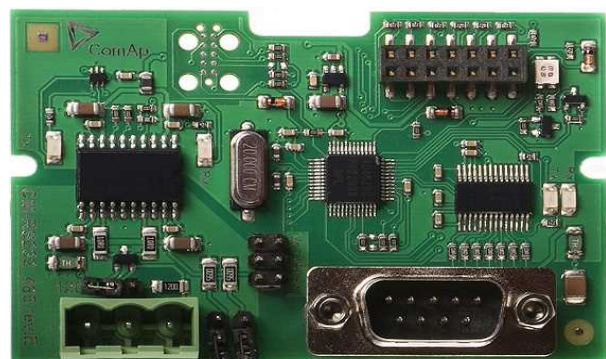

2.5.5 EM-BIO8-EFCP

Hybrid current input and binary input/output extension module.

- ▶ One additional AC current (CT) measuring for Earth Fault Current protection (EFCP)
- ▶ Wide range of measured current - one input for 1A and 1 input for 5A
- ▶ Up to 8 additional configurable binary inputs or outputs

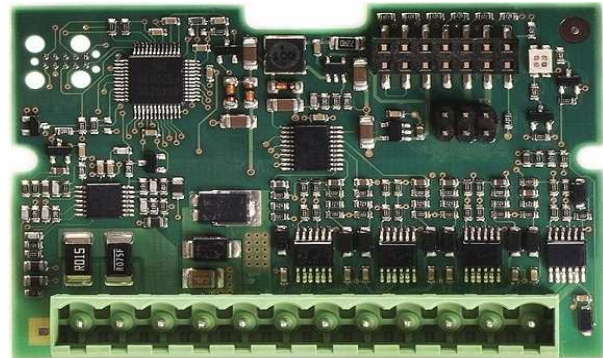

2.6 CAN modules

2.6.1 IntelI AIN8

The unit offers the user the flexibility to configure the unit to have 8 analog inputs.

Supported sensors:

- ▶ Resistor 3-wire input
 - Common resistor: 0-250Ω, 0-2400Ω, 0-10kΩ
 - Temperature sensor: Pt100, Pt1000, Ni100, Ni1000
- ▶ Current (active or passive sensors)
 - ±20mA, 0-20mA, 4-20mA
- ▶ Voltage
 - ±1V, 0-2,4V, 0-5V, 0-10V
 - Lambda probes
 - Thermocouples are not supported (the measuring loop was designed for lambda probes, what caused non-support of thermocouples)

Impulse/RPM sensor:

- ▶ RPM measuring pulses with frequency 4Hz – 10kHz
- ▶ Impulse
 - Possibility to measure pulses from electrometer, flowmeter (measurement of total consumption, average fuel consumption)



2.6.2 IntelI IO8/8

The unit offers the user the flexibility to configure the unit to have 8 binary inputs, 8 binary outputs, and 2 analog outputs, or 16 binary inputs, 0 binary outputs and 2 analog outputs via switches inside the controller.

Configuration 8/8

- ▶ 8 Binary inputs (options: pull up or pull down logic)
- ▶ 8 Binary outputs (options: Low side switch (LSS) or High side switch (HSS))
- ▶ 2 Analog outputs (options: voltage (0-10V), current (0-20mA) and PWM (5V, adjustable frequency 200Hz-2,4kHz))

Configuration 16/0


- ▶ 16 Binary inputs (options: pull up or pull down logic)
- ▶ 0 Binary outputs
- ▶ 2 Analog outputs (options: voltage (0-10V), current (0-20mA) and PWM (5V, adjustable frequency 200Hz-2,4kHz))



2.6.3 IGS-PTM

The unit offers the user the flexibility to configure the unit to have 8 binary inputs, 8 binary outputs, 4 analog inputs and 1 analog outputs.


- ▶ Configurable 8 binary and 4 analog inputs
- ▶ Configurable 8 binary and 1 analog output
- ▶ LEDs indicate the state of binary inputs/outputs
- ▶ Measures values from Pt100 and Ni100 sensors
- ▶ Analog inputs (resistance range 0-250 Ohms, voltage range 0-100mV, current range 0-20mA - selectable via jumper)
- ▶ UL certified

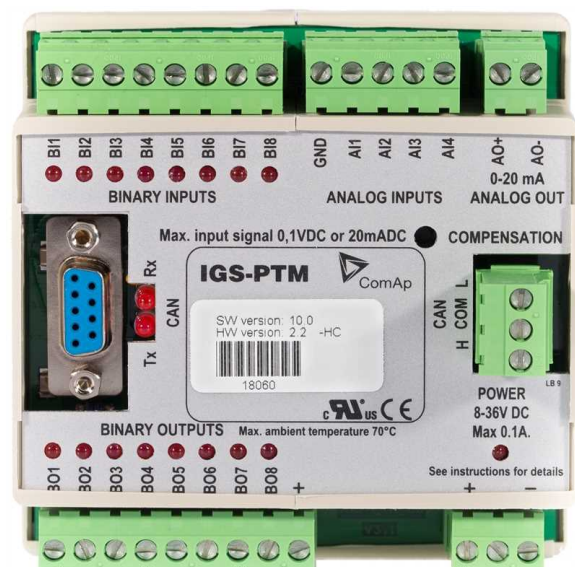

2.6.4 IGL-RA15

Remote annunciator.

- ▶ 15 programmable LEDs with configurable colors red-green-yellow
- ▶ Lamp test function with status LED
- ▶ Customizable labels
- ▶ Local horn output
- ▶ Maximal distance 200 m from the controller
- ▶ Up to 4 units can be connected to the controller
- ▶ UL certified

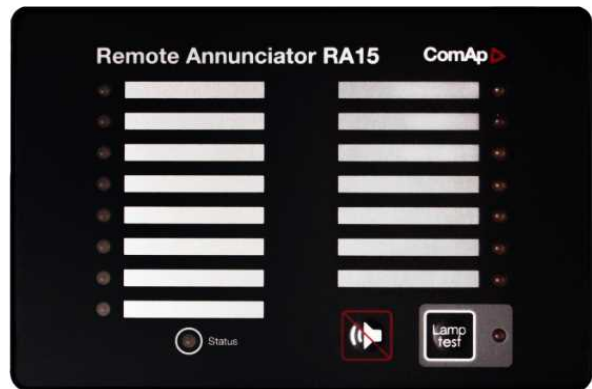

 [back to System overview](#)

3 Applications overview

3.1 MCB	21
3.2 MGCB	23

 [back to Table of contents](#)

3.1 MCB

3.1.1 MCB application with one mains incomer

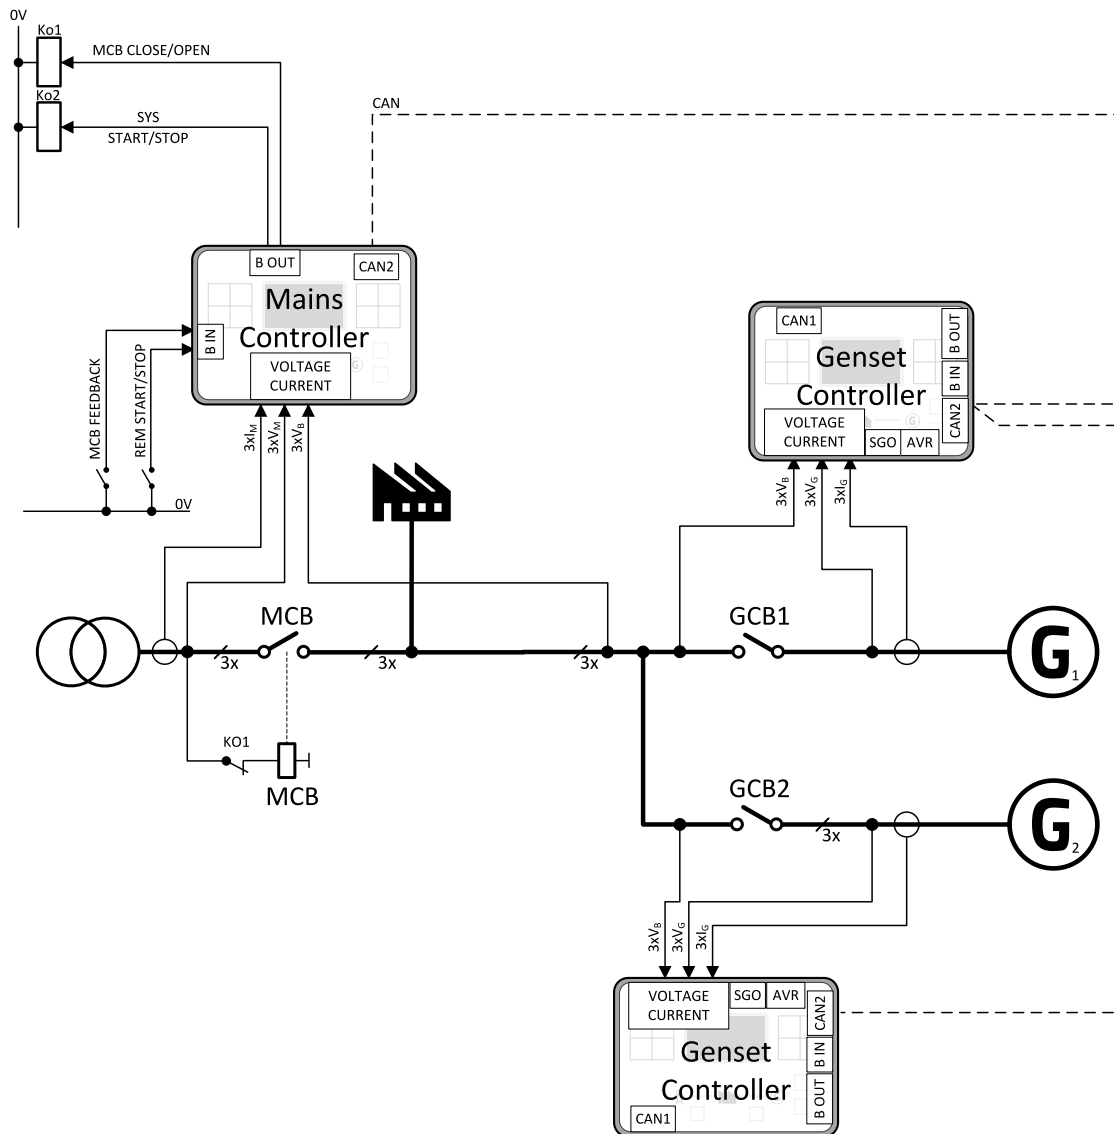


Image 3.1 Multiple island-parallel application without MGCB

InteliMains controls only the MCB.

Power control is controlled via load sharing and VAR sharing line integrated in CAN communication line.

InteliMains controller senses the mains parameters and in case of mains failure activates the Automatic Mains Failure (AMF) function. In this case is opened MCB and activated start signal to the gen-set controllers. After mains recovery is MCB back synchronized and after that is gen-set load transferred to the mains and start signal for gen-sets is deactivated. AMF function activation is conditioned by parameter AMF Start - ENABLED/DISABLED.

In AUT mode could be start signal activated with extra dedicated binary inputs (e.g. Remote Start/Stop, Force Parallel, Force Island, Test On Load...)

Peak Shaving mode activates the start signal based on the adjusted requested mains import value.

Different types of load transfers from Mains to Bus or from Bus to Mains can be used.

- ▶ Open Transfer
- ▶ Soft Transfer
- ▶ Close Only
- ▶ Close Primarily

In MAN mode could be start signal activated with start-stop buttons. If the MAN mode is switched the controller follows the previous internal state. MCB can be switched on/off with MCB button.

3.1.2 MCB application with multiple mains incomers

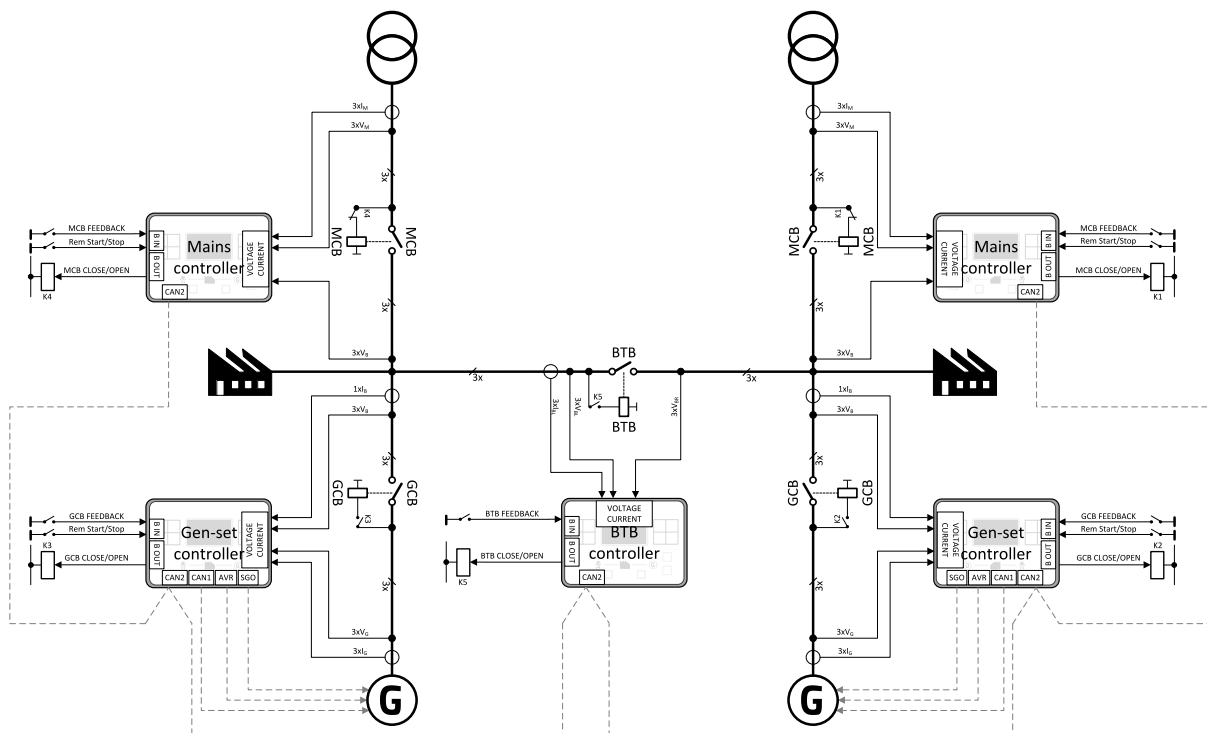


Image 3.2 Multiple island-parallel application without MGCB

It is possible to use IntelliMains with multiple mains incomers. In this case it is necessary to also use BTB controller. For more information please see IntelliMains BTB Global guide.

3.2 MGCB

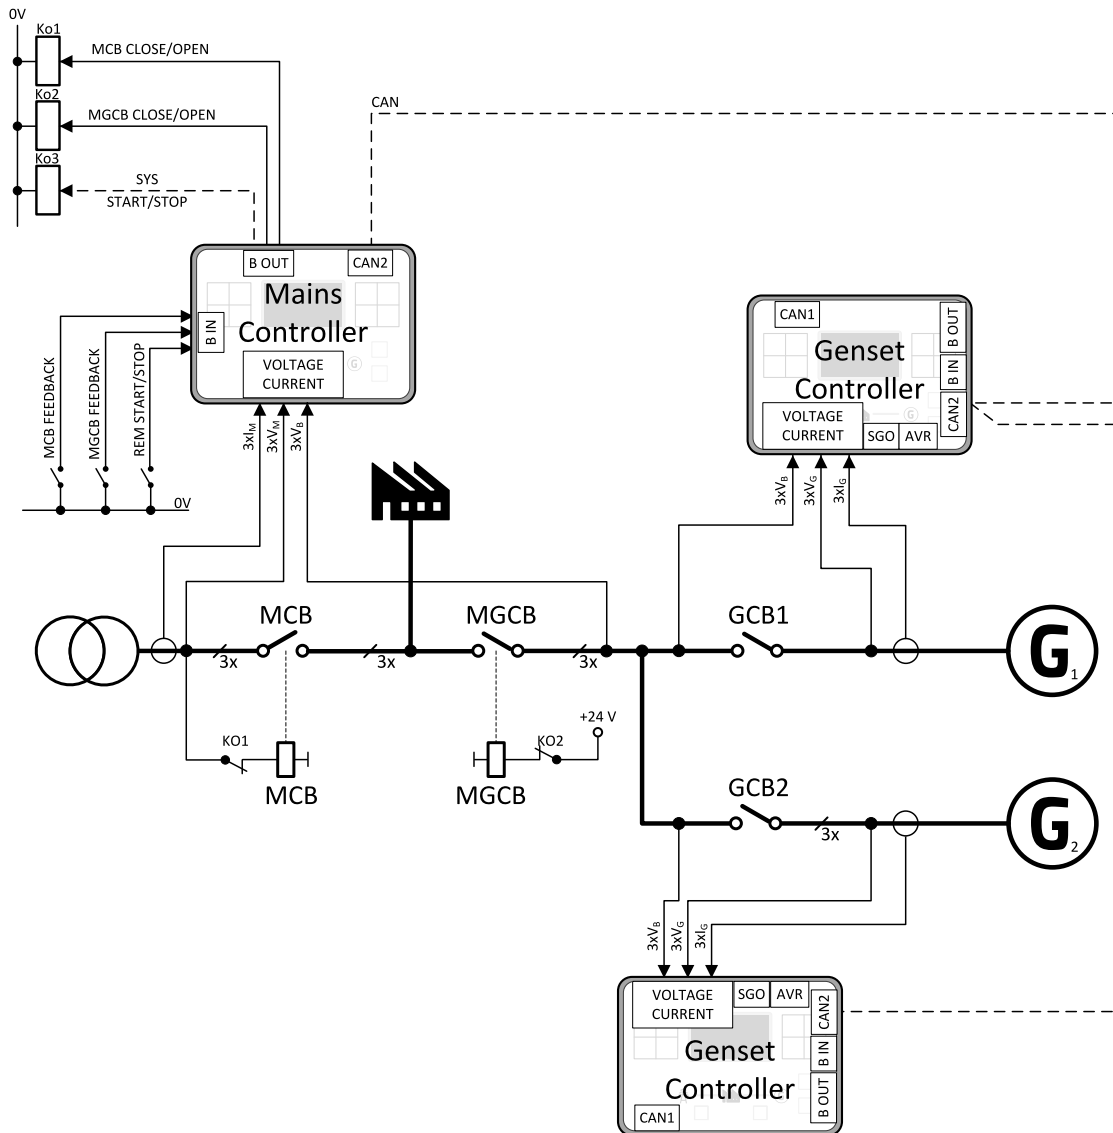


Image 3.3 Multiple island-parallel application with MGCB

Note: Sys Start/Stop do not need to be physically wired. He is shared as a Fixed shared signal via CAN.

IntelliMains controls the MCB and MGCB. Power control is controlled via load sharing and VAR sharing line integrated in CAN communication line. IntelliMains controller senses the mains parameters and in case of mains failure activates the Automatic Mains Failure (AMF) function. In this case is opened MCB and activated start signal to the gen-set controllers. MGCB breaker is closed only in case the sufficient power is available (Load Reserve is achieved). After mains recovery is MCB back synchronized and after that is gen-set load transferred to the mains and start signal for gen-sets is deactivated. AMF function activation is conditioned by parameter AMF Start - ENABLED/DISABLED.

In AUTO mode could be start signal activated with extra dedicated binary inputs (e.g. Remote Start/Stop). Peak Shaving mode activates the start signal based on the adjusted requested mains import value. Different types of load transfers from Mains to Bus or from Bus to Mains can be used.

- ▶ Open Transfer
- ▶ Soft Transfer
- ▶ Close Only
- ▶ Close Primarily

In MAN mode could be start signal activated with start-stop buttons. If the MAN mode is switched the controller follows the previous internal state. MCB and MGCB can be switched on/off with MCB and MGCB buttons but the control is conditioned on setting of parameter CB Control In MAN Mode.

IMPORTANT: Control of MGCB breaker is affected by System Start/Stop signal in MAN mode when MCB breaker is closed. It is necessary to activate System Start/Stop signal in MAN mode before closing MGCB breaker (otherwise it is not possible to close MGCB breaker). System Start/Stop signal can be activated by Start button on controller's front facia.

 [back to Applications overview](#)

4 Installation and wiring

4.1 Package content	25
4.2 Controller installation	26
4.3 Terminal Diagram	28
4.4 Recommended wiring	29
4.5 Plug-in module installation	44
4.6 Maintenance	46

 [back to Table of contents](#)

4.1 Package content


The package contains:

- ▶ Controller
- ▶ Mounting holders
- ▶ Terminal blocks

Note: *The package does not contain a communication or extension modules. The required modules should be ordered separately.*

4.2 Controller installation


4.2.1 Dimensions

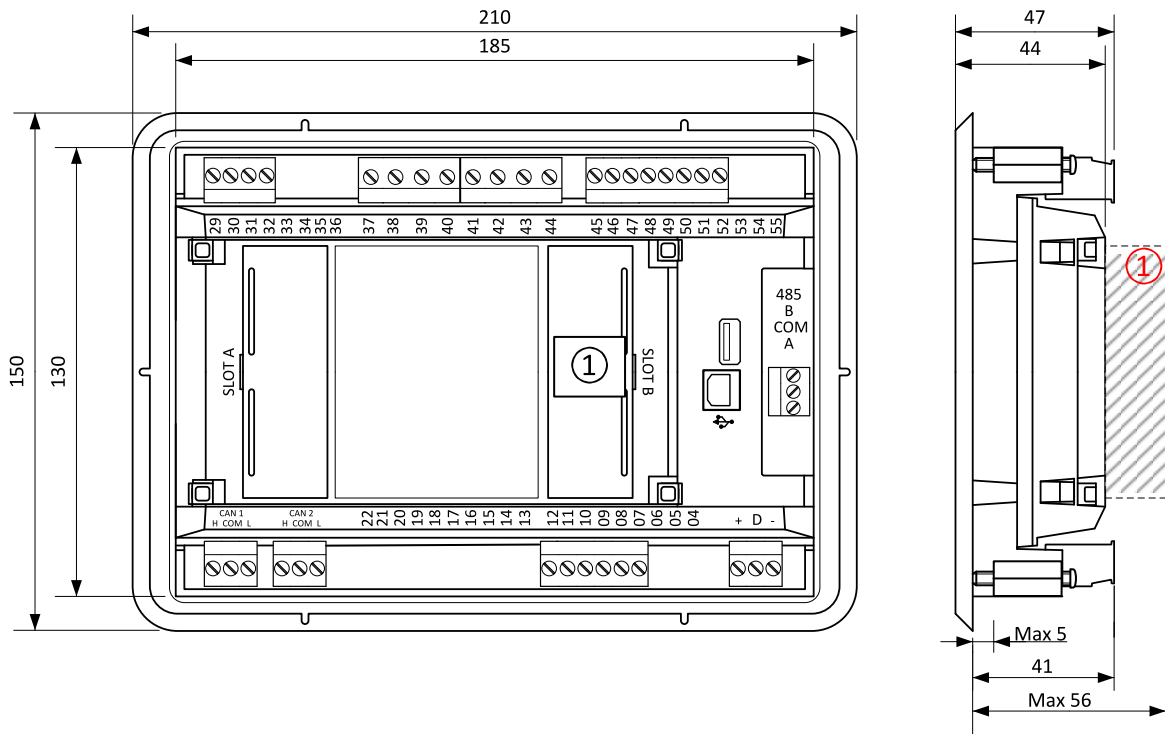

① Plug-in module

Note: Dimension x depends on plug-in module

Note: Dimensions are in millimeters.

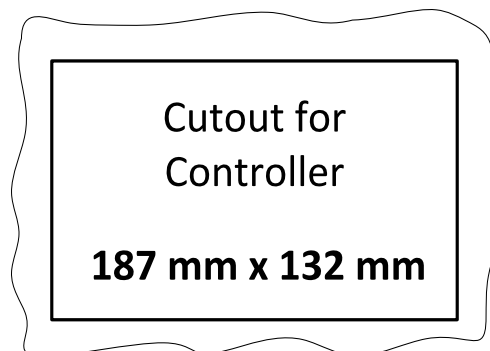


Note: Cutout is in millimeters.

4.2.2 Mounting

The controller is to be mounted onto the switchboard door. Requested cutout size is 187 x 132 mm. Use the screw holders delivered with the controller to fix the controller into the door as described on pictures below. Recommended torque for holders is 0.15 N·m.

Panel door mounting

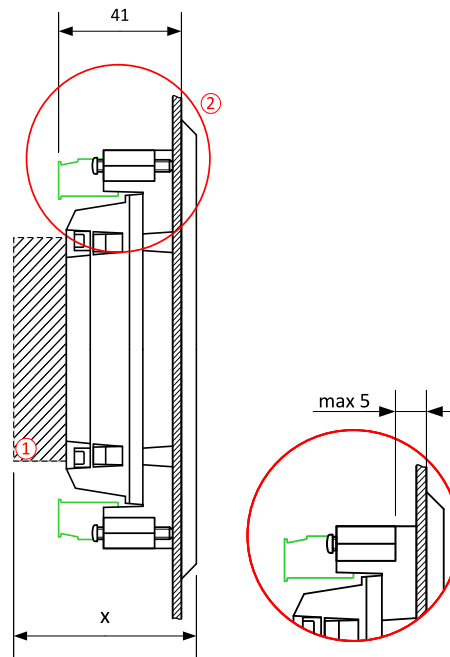

Note: The final depth of the controller depends on the selected extension module - it can vary between 41 and 56 mm. Mind also a size of connector and cables (e.g. in case of RS232 connector add about another 60 mm for standard RS232 connector and cable).

Note: Enclosure Type rating with mounting instruction - For use on a Flat surface of a type 1 enclosure.

Note: These devices shall be mounted in a pollution degree 2 environment enclosure having adequate strength and thickness with acceptable spacings being provided.


Note: The accessibility of live parts through openings in the enclosure, reliable retention of guards or barriers for prevention of risk of electric shock, etc., shall be considered in the end product evaluation.

Note: These devices should be used within their electrical ratings and in an ambient temperature not exceeding 70 °C, for 4 A (BOU1 & 2) output or 60 °C for 5 A (BOU1 & 2) output.

Note: Voltage sensing circuits shall be connected to controlled Overvoltage Category III circuits only in the end product installation.


4.3 Terminal Diagram

① CURRENT MEASUREMENT		② MAINS VOLTAGE		③ BUS VOLTAGE		④ BINARY INPUTS	
T29	COM	T37	N	T41	N	T45	BIN1
T30	L1	T38	L1	T42	L1	T46	BIN2
T31	L2	T39	L2	T43	L2	T47	BIN3
T32	L3	T40	L3	T44	L3	T48	BIN4
						T49	BIN5
						T50	BIN6
						T51	BIN7
						T52	BIN8

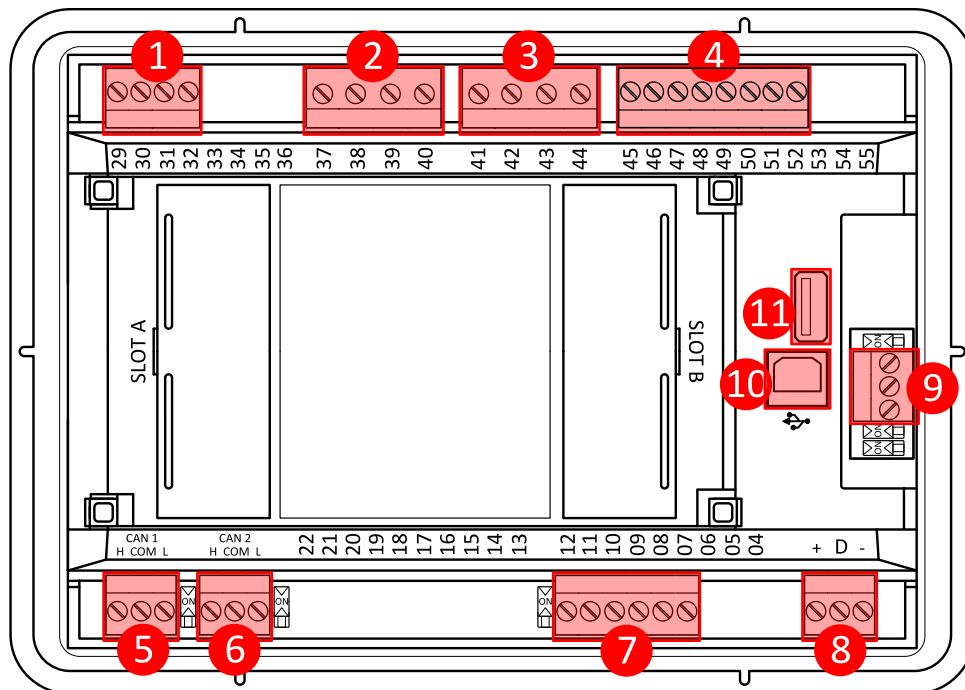

⑤ CAN1		⑦ BINARY OUTPUTS		⑧ POWER SUPPLY, D+		⑩ USB
T26	L	T07	BOU1	T01	BATT -	⑪ USB HOST
T27	COM	T08	BOU2	T02	D+	
T28	H	T09	BOU3	T03	BATT +	
⑥ CAN2		T10	BOU4	⑨ RS485		
T23	L	T11	BOU5	T56	B	
T24	COM	T12	BOU6	T57	COM	
T25	H			T58	A	

4.4 Recommended wiring

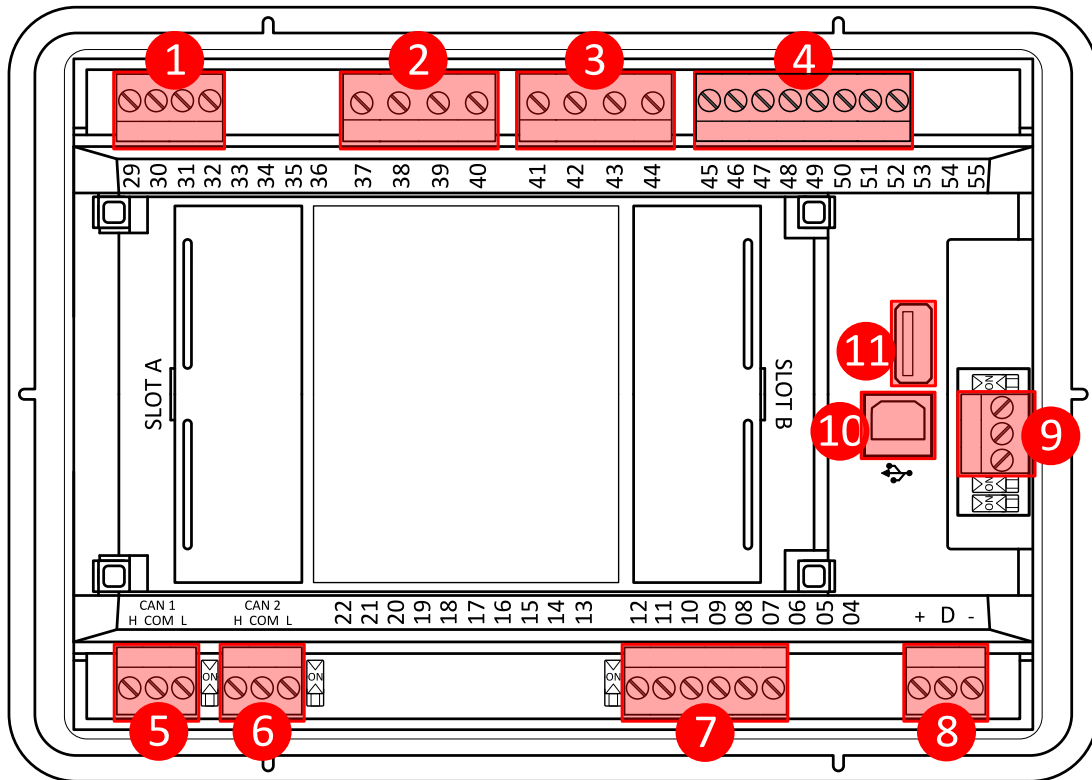

1	Current inputs	29 - 32	Current measurement wiring (page 32)
2	Mains voltage inputs	37 - 40	Voltage measurement wiring (page 35)
3	Bus voltage inputs	41 - 44	Voltage measurement wiring (page 35)
4	Binary inputs	45 - 52	Binary inputs (page 38)
5	CAN1	H, COM, L	CAN bus and RS485 wiring (page 39)
6	CAN2	H, COM, L	CAN bus and RS485 wiring (page 39)
7	Binary outputs	07 - 12	Binary Outputs (page 39)
8	Power supply	"+" "D" "-"	Power supply (page 30)
9	RS485	A, COM, B	CAN bus and RS485 wiring (page 39)
10	USB	USB B	USB (page 44)
11	USB HOST	USB A	USB HOST (page 44)

IMPORTANT: Firmware IntelliMains 210 is possible to upload also in to the IntelliGen 200 Hardware. Be aware that the BO1 and BO2 on the IntelliGen 200 are used only combination with E-Stop input which are in IntelliMains 210 not supported. Check always the terminal numbers.


4.4.1 General

To ensure proper function:

- ▶ Use grounding terminals.
- ▶ Wiring for binary inputs and analog inputs must not be run with power cables.
- ▶ Analog and binary inputs should use shielded cables, especially when the length is more than 3 m.

Tightening torque, allowable wire size and type, for the Field-Wiring Terminals:

For Mains(Bus) Voltage, Generator Voltage and Current terminals

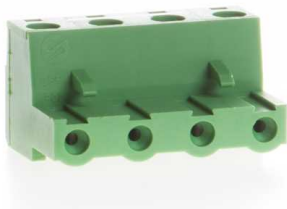

Specified tightening torque is 0,56 Nm (5,0 In-lbs)

Use only diameter 2,0 - 0,5 mm (12 - 26 AWG) conductor, rated for 90°C minimum.

For other controller field wiring terminals



Specified tightening torque 0,79 nm (7,0 In-lb)

Use only diameter 2,0 - 0,5 mm (12 - 26 AWG) conductor, rated for 75°C minimum.



Use copper conductors only.

4.4.2 Grounding

The shortest possible length of wire should be used for controller grounding. Use cable min 2.5 mm².

The negative " - " battery terminal must be properly grounded.

Switchboard and engine must be grounded at common point. Use as short cable as possible to the grounding point.

4.4.3 Power supply

To ensure proper function:


- ▶ Use power supply cable min. 1.5 mm²

Maximum continuous DC power supply voltage is 36 V DC. The controller's power supply terminals are protected against large pulse power disturbances. When there is a potential risk of the controller being subjected to conditions outside its capabilities, an outside protection device should be used.

It is necessary to ensure that potential difference between generator current COM terminal and battery " - " terminal is maximally ± 2 V. Therefore is strongly recommended to interconnect these two terminals together.

Note: The controller should be grounded properly in order to protect against lightning strikes. The maximum allowable current through the controller's negative terminal is 4 A (this is dependent on binary output load).

For the connections with 12 V DC power supply, the controller includes internal capacitors that allow the controller to continue in operation during cranking if the batter voltage dip occurs. If the voltage dip goes during cranking to 0 V and after 50 ms it recovers to 4 V, the controller continues operating. This cycle can repeat several times. During this voltage dip the controller screen backlight can turn off.

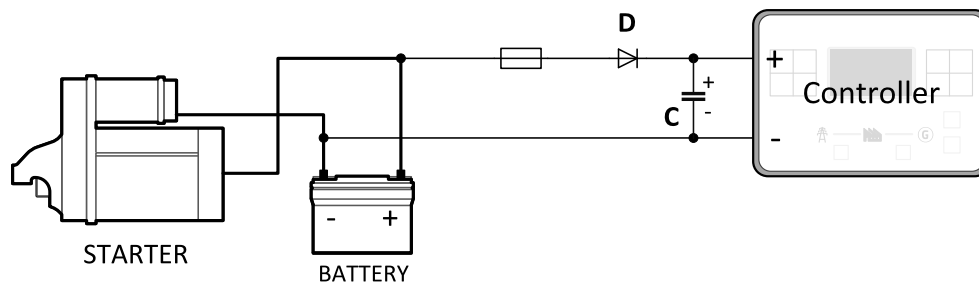

Note: Recommended fusing is 4 A fuse.

Note: In case of the dip to 0 V the high-side binary outputs will be temporarily switched off and after recovering to 4 V back on.

IMPORTANT: When the controller is power up only by USB and the USB is disconnected then the actual statistics can be lost.


Note: Suitable conductor protection shall be provided in accordance with NFPA 70, Article 240.

Note: Low voltage circuits (35 volts or less) shall be supplied from the engine starting battery or an isolated secondary circuit.

Note: It is also possible to further support the controller by connecting the external capacitor and separating diode. The capacitor size depends on required time. It shall be approximately thousands of μ F. The capacitor size should be 5 000 μ F to withstand 150 ms voltage dip under following conditions: Voltage before dip is 12 V, after 150 ms the voltage recovers to min. allowed voltage, i.e. 8 V.

Power supply fusing

A 4 A fuse should be connected in-line with the battery positive terminal to the controller and modules. These items should never be connected directly to the starting battery. Fuse value and type depends on number of connected devices and wire length. Recommended fuse (not fast) type - T4 A. Not fast due to internal capacitors charging during power up.

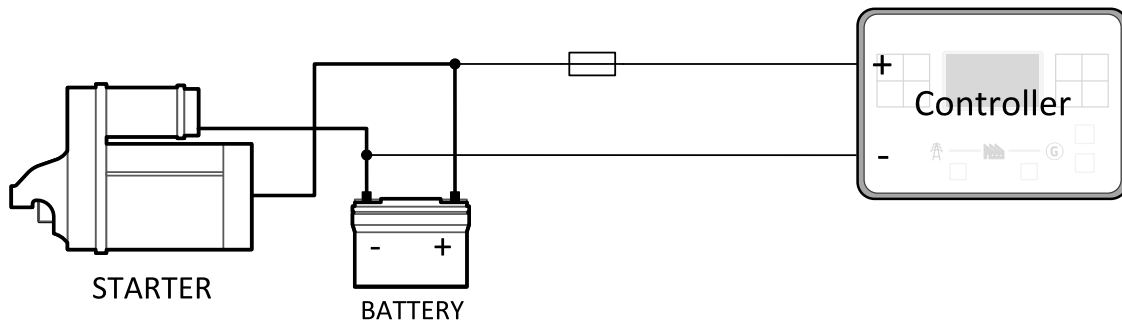

Note: Recommended fusing is 4 A fuse.

IMPORTANT: 4 A fuse is calculated without BOUT consumption nor extension modules. Real value of fuse depends on consumption of binary outputs and modules.

Example: Maximal consumption of binary outputs can be 22 A

- ▶ 2 x 10 A on high current outputs (for 10 seconds)
- ▶ 2 A on all others binary outputs

4.4.4 Measurement wiring

Use 1.5 mm² cables for voltage connection and 2.5 mm² for current transformers connection. Adjust **Connection type** (page 204), **Nominal Voltage Ph-N** (page 205), **Nominal Voltage Ph-Ph** (page 206), **Nominal Current** (page 204), **Mains VT Ratio** (page 206) by appropriate setpoints in the Basic Settings group.

IMPORTANT: Risk of personal injury due to electric shock when manipulating voltage terminals under voltage. Be sure the terminals are not under voltage before touching them.

Do not open the secondary circuit of current transformers when the primary circuit is closed. Open the primary circuit first.

Current measurement wiring

The number of CT's is automatically selected based on selected value of setpoint **Connection type** (page 204) [3Ph4Wire / High Leg D / 3Ph3Wire / Split Ph / Mono Ph].

Mains currents and power measurement is suppressed if current level is below <1 % of CT range.

To ensure proper function:

- ▶ Use cables of 2.5 mm²
- ▶ Use transformers to 5 A
- ▶ Connect CT according to following drawings:

3 phase application:

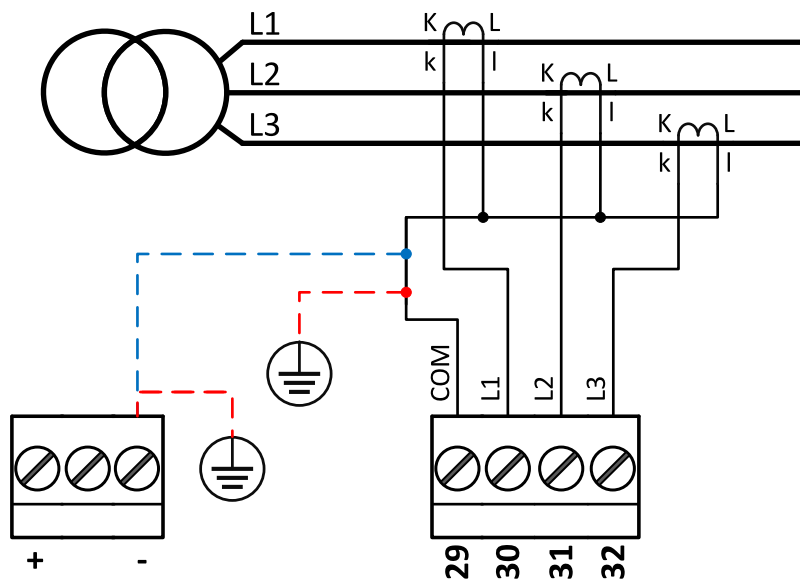


Image 4.1 3 phase application

IMPORTANT: It is necessary to ensure that potential difference between current COM terminal and power supply “-” terminal is maximally ± 2 V. There are 2 options how to ensure this:

- ▶ "Red" option - properly ground both terminals
- ▶ "Blue" option - interconnect these two terminals

Always apply only one option. Never realize both options on one installation.

Split phase application:

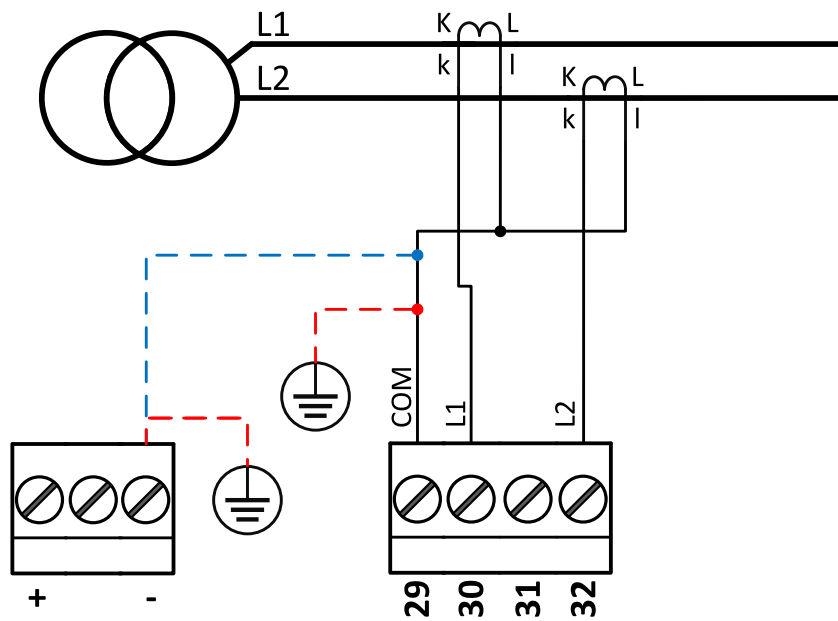


Image 4.2 Split phase application

IMPORTANT: The second phase of split phase connection is connected to the terminal, where is normally connected the third phase.

IMPORTANT: It is necessary to ensure that potential difference between current COM terminal and power supply “-” terminal is maximally ± 2 V. There are 2 options how to ensure this:

- ▶ "Red" option - properly ground both terminals
- ▶ "Blue" option - interconnect these two terminals

Always apply only one option. Never realize both options on one installation.

Mono phase application:

Connect CT according to following drawings. Terminals phase 2 and phase 3 are opened.

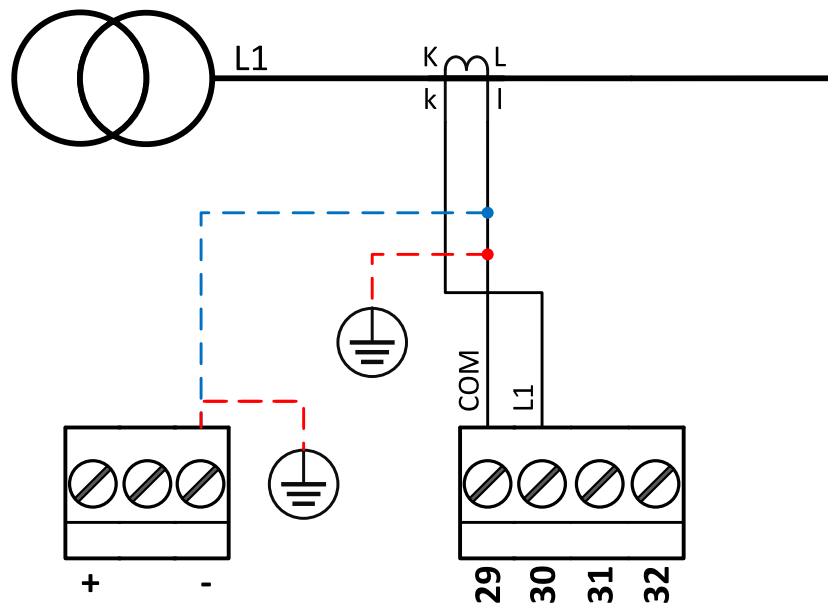


Image 4.3 Mono phase application

IMPORTANT: It is necessary to ensure that potential difference between current COM terminal and power supply “-” terminal is maximally ± 2 V. There are 2 options how to ensure this:

- ▶ "Red" option - properly ground both terminals
- ▶ "Blue" option - interconnect these two terminals

Always apply only one option. Never realize both options on one installation.

Voltage measurement wiring

There are 4 voltage measurement Connection Type (setpoint **Connection type (page 204)** [3Ph4Wire / High Leg D / 3Ph3Wire / Split Ph / Mono Ph]) options, every type matches to corresponding connection type.

Note: For fusing of voltage measurement input use T1A or T2A fuse.

The generator protections are evaluated from different voltages based on **Connection type (page 204)** setting:

- ▶ 3Ph 4W – Ph-Ph voltage, Ph-N voltage
- ▶ 3Ph 3W – Ph-Ph voltage
- ▶ Split Ph – Ph-N voltage
- ▶ Mono Ph – Ph-N voltage

ConnectionType: 3 Phase 4 Wires

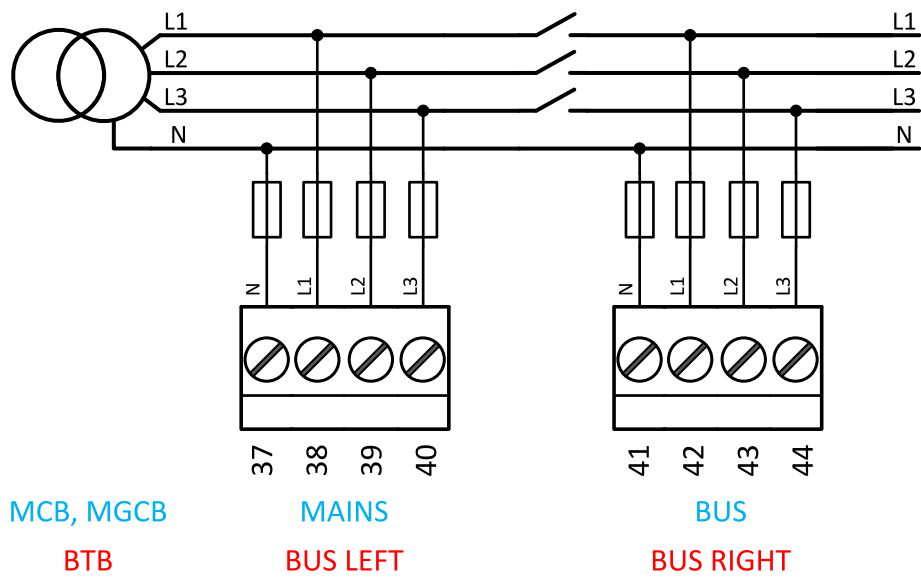


Image 4.4 3 phase application with neutral

ConnectionType: 3 Phase 3 Wires

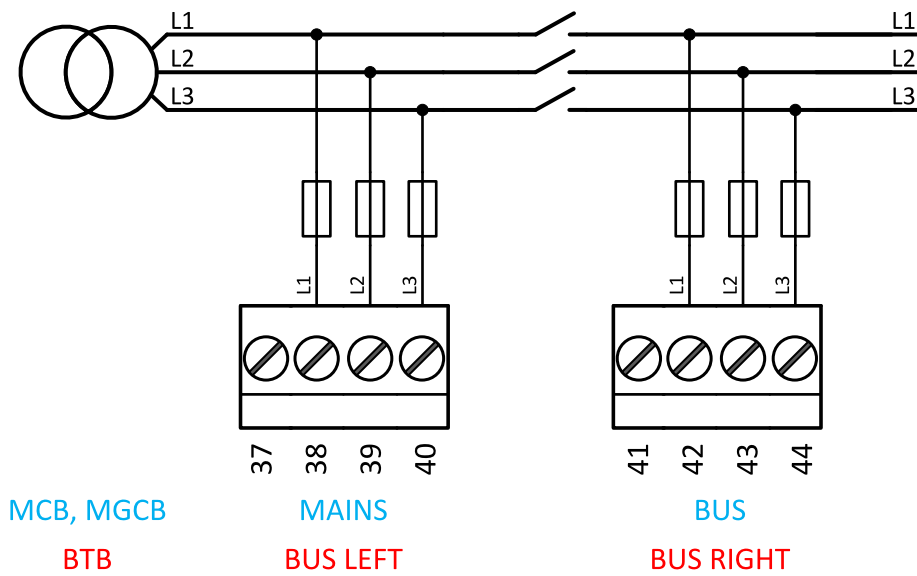


Image 4.5 3 phase application without neutral

ConnectionType: Split Phase

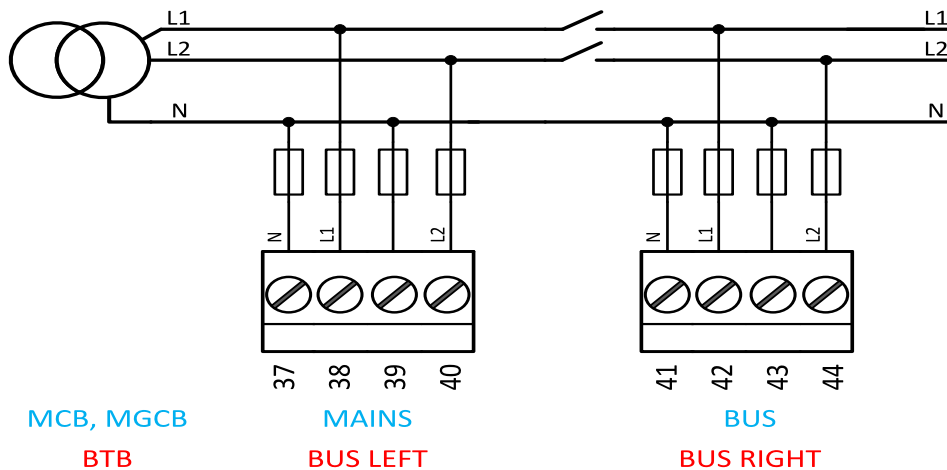


Image 4.6 Split phase application

IMPORTANT: The second phase of split phase connection is connected to the terminal, where is normally connected the third phase.

ConnectionType: Mono Phase

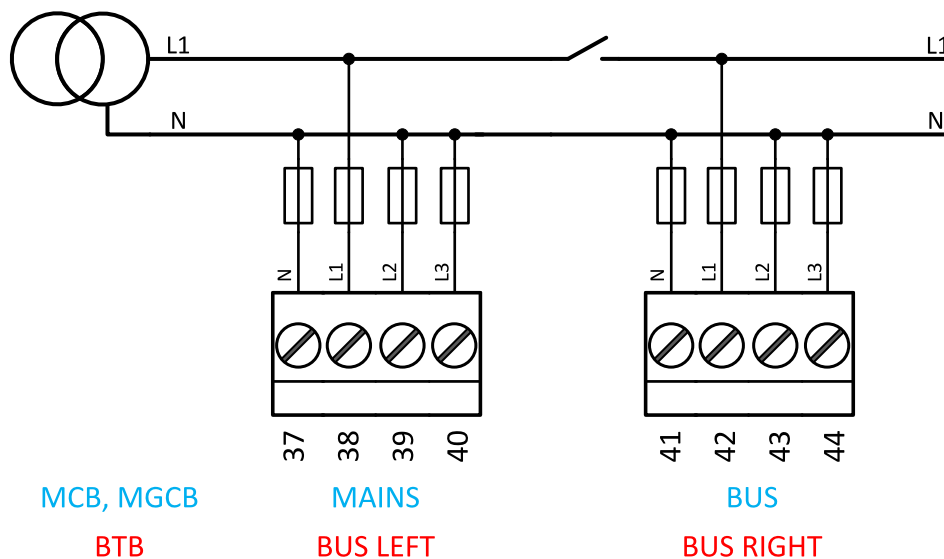


Image 4.7 Mono phase application

Voltage measurement IntelliMains applications on IntelliGen 200 hardware

Because there is possible to import the IntelliMains 210 Firmware in to the IntelliGen 200 Hardware, is important to respect the number of terminals for voltage measurement.

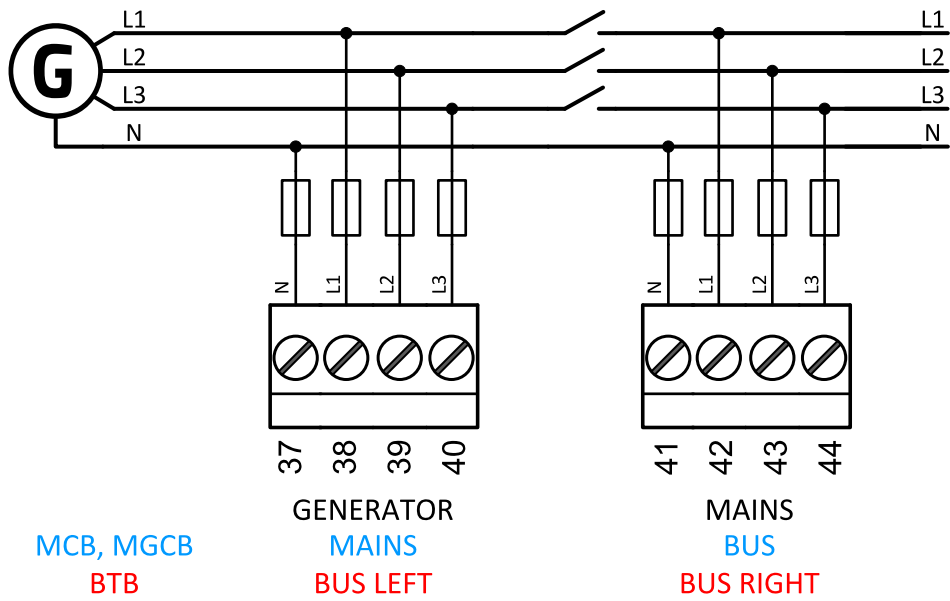


Image 4.8 Voltage measurement on IntelliGen 200 Hardware

4.4.5 Binary inputs

Use minimally 1 mm² cables for wiring of Binary inputs.

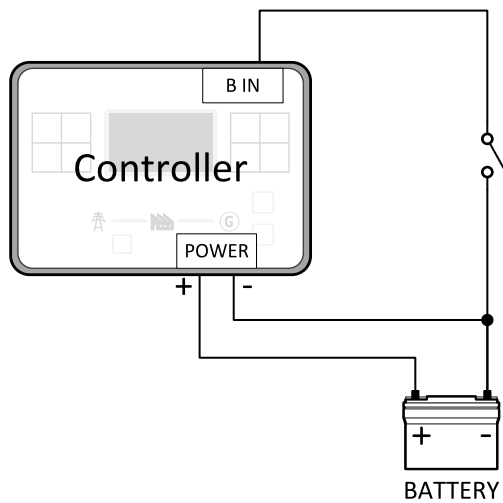



Image 4.9 Wiring binary inputs

Note: The name and function or alarm type for each binary input have to be assigned during the configuration.

4.4.6 Binary Outputs


Use min. 1 mm² cables for wiring of binary outputs. Use external relays as indicated on the schematic below for all outputs except those where low-current loads are connected (signalization etc...).

IMPORTANT: Use suppression diodes on all relays and other inductive loads!

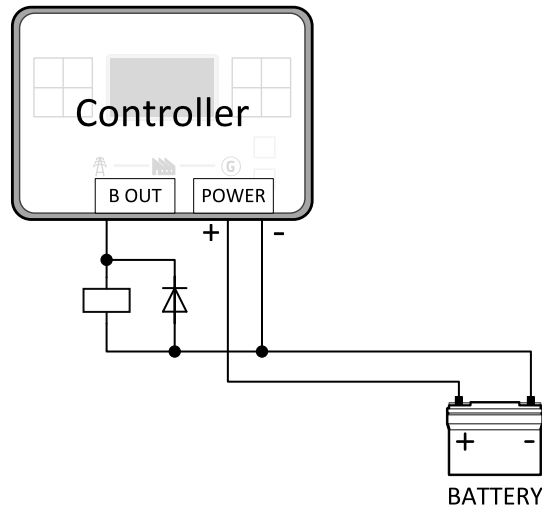

Note: Every single binary output can provide up to 0,5 A of steady current.

IMPORTANT: When operating temperature is higher than 60 °C it is strongly recommended to limit output current of high current binary outputs (terminal 45 and terminal 56) to 4 A (each).

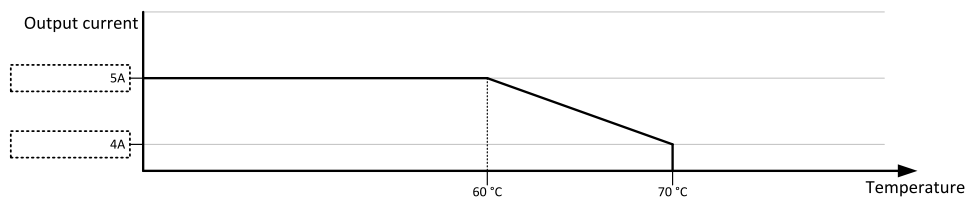

4.4.7 CAN bus and RS485 wiring

CAN bus wiring

The wiring of the CAN bus should be provided in such a way that the following rules are observed:

- ▶ The maximum length of the CAN bus depends on the communication speed. For a speed of 250 kbps, which is used on the CAN1 bus (extension modules) and CAN2 bus, the maximum length is 200 m.
- ▶ The bus must be wired in linear form with termination resistors at both ends. No nodes are allowed except on the controller terminals.

- ▶ Shielded cable¹ has to be used, shielding has to be connected to the terminal T01 (Grounding).
- ▶ External units can be connected on the CAN bus line in any order, but keeping line arrangement (no tails, no star) is necessary.
- ▶ The CAN bus has to be terminated by 120 Ohm resistors at both ends use a cable with following parameters:

Cable type	Shielded twisted pair
Impedance	120 Ω
Propagation velocity	≥ 75% (delay ≤ 4.4 ns/m)
Wire crosscut	≥ 0.25 mm ²
Attenuation (@1MHz)	≤ 2 dB/100 m

Note: Communication circuits shall be connected to communication circuits of Listed equipment.

Note: A termination resistor at the CAN (120 Ω) is already implemented on the PCB. For connecting, close the jumper near the appropriate CAN terminal.

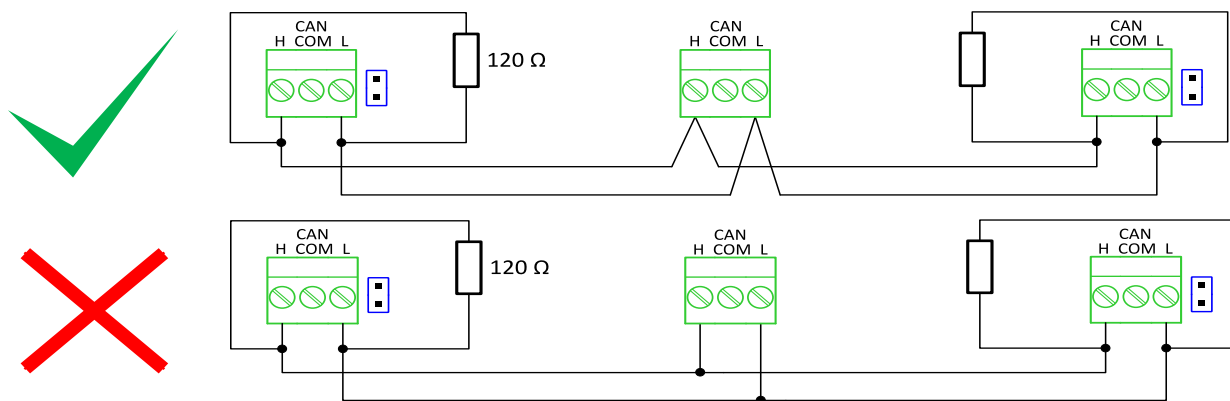


Image 4.10 CAN bus topology

¹Recommended data cables: BELDEN (<http://www.belden.com>) - for shorter distances: 3105A Paired - EIA Industrial RS-485 PLTC/CM (1x2 conductors); for longer distances: 3106A Paired - EIA Industrial RS-485 PLTC/CM (1x2+1 conductors)

- ▶ For shorter distances (connection within one building)

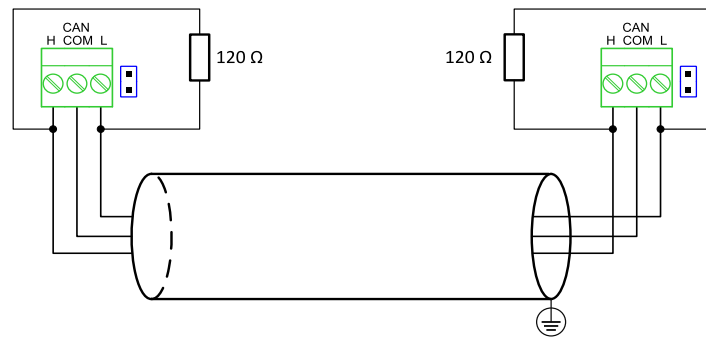


Image 4.11 CAN bus wiring for shorter distances

Note: Shielding shall be grounded at one end only. Shielding shall not be connected to CAN COM terminal.

- ▶ For longer distances or in case of surge hazard (connection out of building, in case of storm etc.)

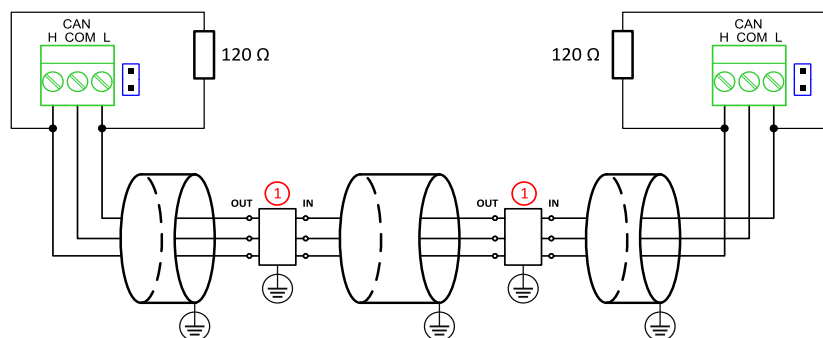


Image 4.12 CAN bus wiring for longer distances

① Recommended PT5-HF-12DC-ST¹

RS485 wiring

The wiring of the RS485 communication should be provided in such a way that the following rules are observed:

Note: A termination resistor at the CAN (120Ω) is already implemented on the PCB. For connecting, close the jumper near the appropriate CAN terminal.

- ▶ Standard maximum bus length is 1000 m.
- ▶ Shielded cable² has to be used, shielding has to be connected to the terminal T01 (Grounding).
- ▶ External units can be connected on the RS485 line in any order, but keeping line arrangement (no tails, no star) is necessary.
- ▶ The line has to be terminated by 120 Ohm resistors at both ends.

¹Protections recommended: Phoenix Contact (<http://www.phoenixcontact.com>): PT 5-HF-12DC-ST with PT2x2-BE (base element) or Saltek (<http://www.saltek.cz>): DM-012/2 R DJ

²Recommended data cables: BELDEN (<http://www.belden.com>) - for shorter distances: 3105A Paired - EIA Industrial RS-485 PLTC/CM (1x2 conductors); for longer distances: 3106A Paired - EIA Industrial RS-485 PLTC/CM (1x2+1 conductors)

- ▶ For shorter distances (connection within one building).

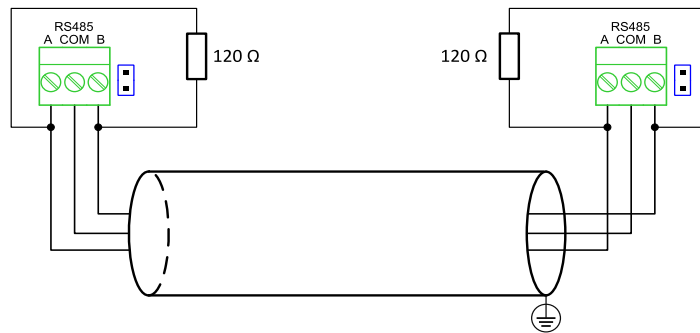


Image 4.13 RS485 wiring for shorter distances

- ▶ For longer distances or in case of surge hazard (connection out of building, in case of storm etc.)

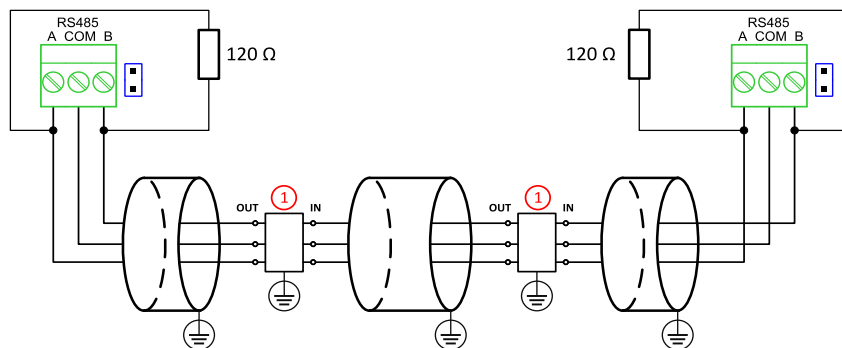


Image 4.14 RS485 wiring for longer distances

- ① Recommended PT5HF-5DC-ST¹

Note: Communication circuits shall be connected to communication circuits of Listed equipment.

¹Recommended protections: Phoenix Contact (<http://www.phoenixcontact.com>): PT 5-HF-5DC-ST with PT2x2-BE (base element)(or MT-RS485-TTL) or Saltek (<http://www.saltek.cz>): DM-006/2 R DJ

On board RS485 description

Balancing resistors

The transmission bus into the RS-485 port enters an indeterminate state when it is not being transmitted to. This indeterminate state can cause the receivers to receive invalid data bits from the noise picked up on the cable. To prevent these data bits, you should force the transmission line into a known state. By installing two 620 Ohm balancing resistors at one node on the transmission line, you can create a voltage divider that forces the voltage between the differential pair to be less than 200 milli-Volts, the threshold for the receiver. You should install these resistors on only one node. The figure below shows a transmission line using bias resistors. Balancing resistors are placed directly on the PCB of controller. Use jumpers PULL UP/PULL DOWN to connect the balancing resistors.

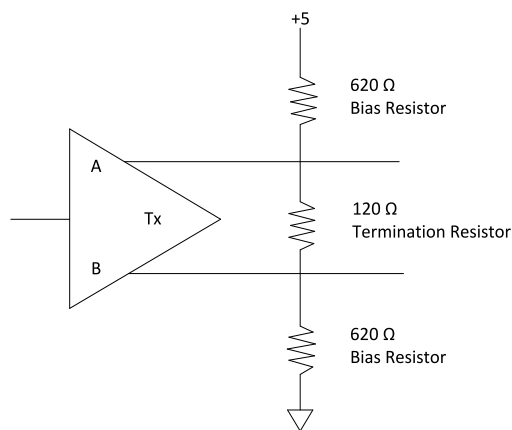


Image 4.15 Balancing resistors

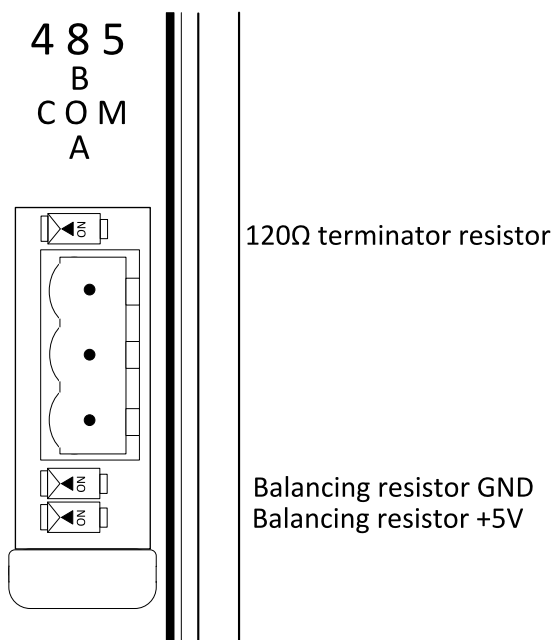


Image 4.16 RS485 on board

4.4.8 USB

This is required for computer connection. Use the shielded USB A-B cable.

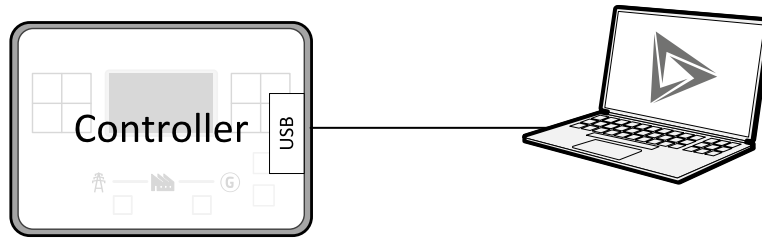


Image 4.17 USB connection

Controller can be also powered by USB (only for service purpose like uploading firmware, change of configuration etc.).

IMPORTANT: Power supply by USB is only for service purpose. Binary inputs and outputs are in logical 0. Also plug-in modules are not working.


4.4.9 USB HOST

USB Flash Drive can be connected into USB A connector.


4.5 Plug-in module installation

4.5.1 Installation


Remove the back cover. To do this, press four holders which are located in corners.

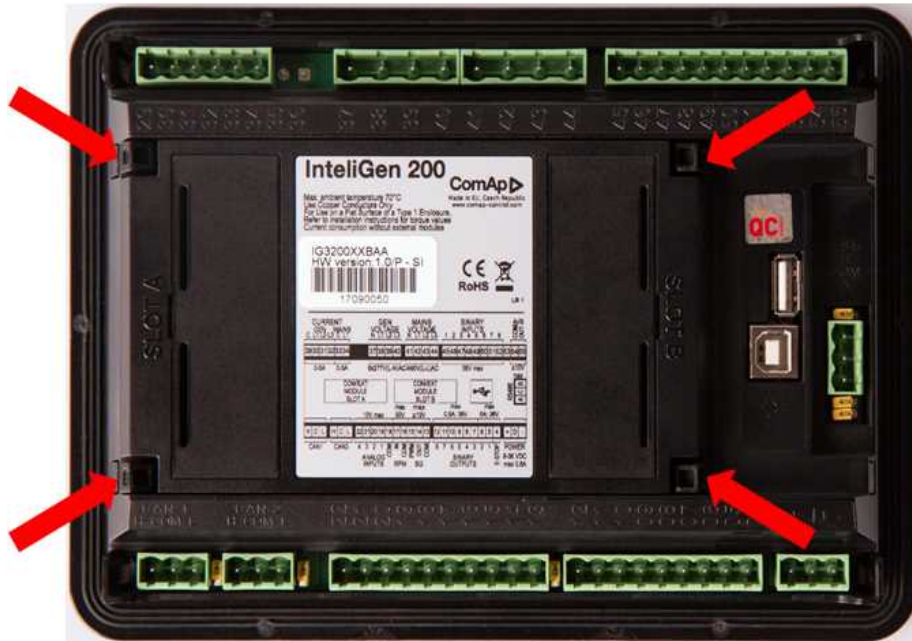

After removing back cover insert the plug-in module. Plug-in module has to be inserted under holders. Start with holders marked by symbol 1. On the controller are also arrows for better navigation. After inserting plug-in module under holders 1 press it down to holders marked by symbol 2 which locks the module.

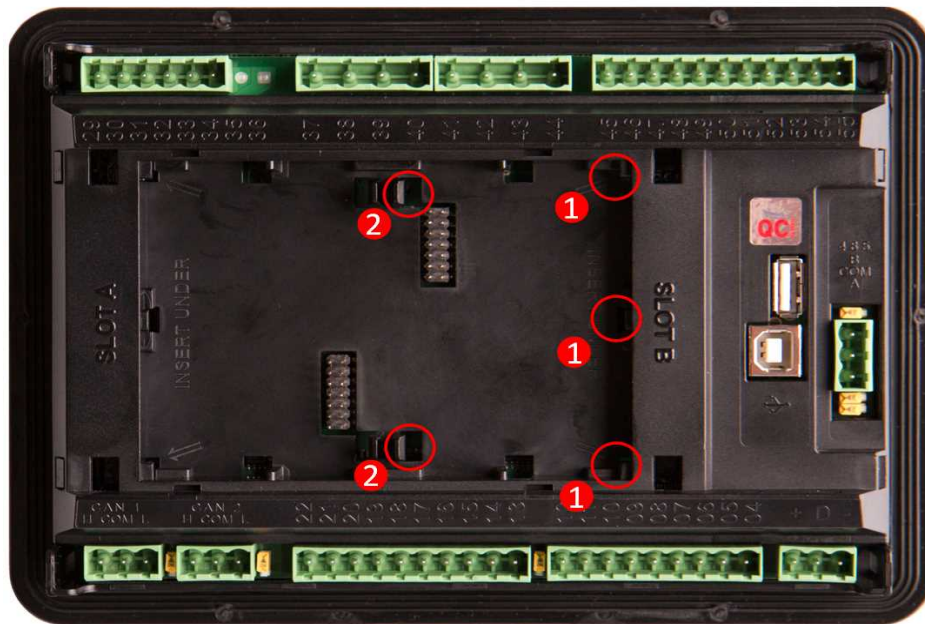

Insert the plug-in module under holders marked by symbol 1.

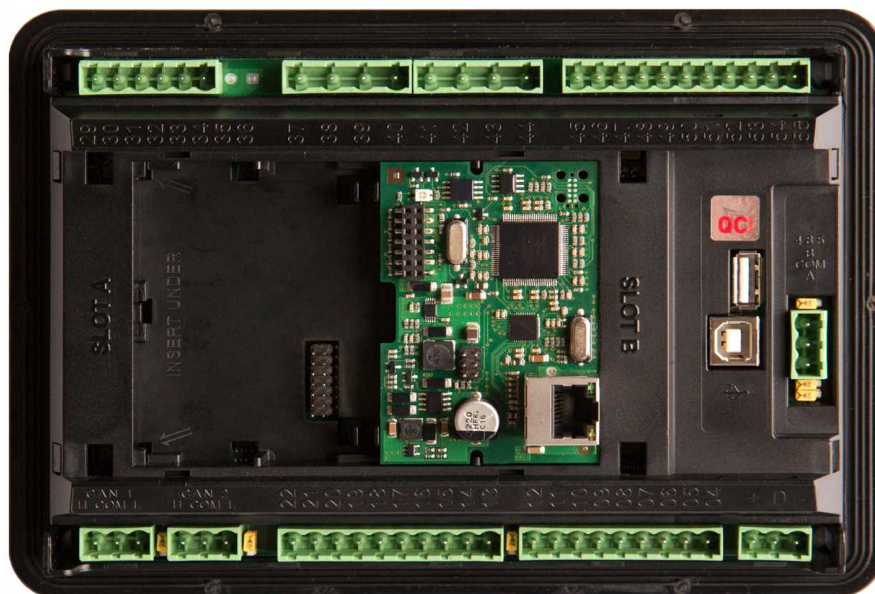

After locking the plug-in module into holders, place back the back cover (small cover for connectors has to be removed from back cover). Finally insert the small cover for connectors. Small covers are unique for each plug-in module.

4.6 Maintenance


4.6.1 Backup battery replacement

The internal backup battery lifetime is approx. 6 years. If replacement of backup battery is needed, follow these instructions:

- ▶ Connect the controller to a PC and save an archive for backup purposes (not necessary but recommended).
- ▶ Disconnect all terminals from the controller and remove the controller from the switchboard.
- ▶ Remove the back cover and all plug-in modules.
- ▶ Release the rear cover using a flat screwdriver or another suitable tool.



- ▶ The battery is located in a holder on the circuit board. Remove the old battery with a small sharp screwdriver and push with a finger the new battery into the holder.

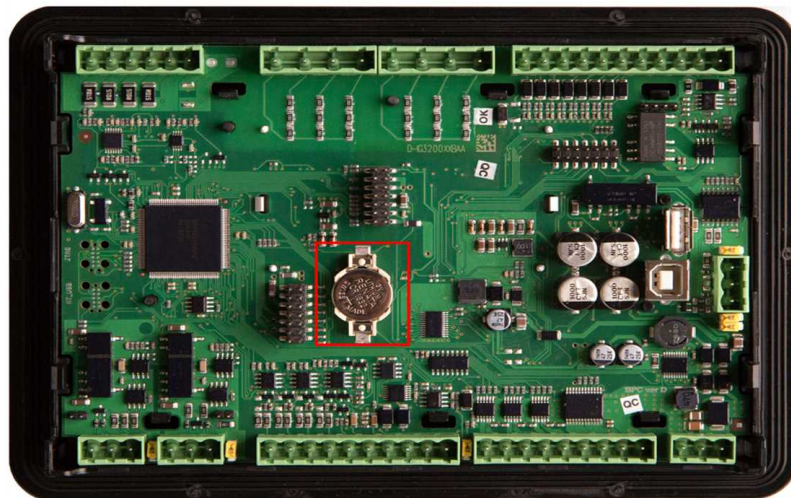

- ▶ Put the rear cover back. Use slight pressure to lock the snaps into the housing. Pay attention that the cover is in correct position and not upside down!
- ▶ Put back the plugin modules and back cover.
- ▶ Power the controller on, adjust date and time and check all setpoints.

🔍 **back to Installation and wiring**

5 Controller setup

5.1 Default configuration	47
5.2 Controller configuration and PC tools connection	47
5.3 Operator Guide	57
5.4 Functions	80

[🔍 back to Table of contents](#)

5.1 Default configuration

5.1.1 Default configuration

Binary inputs

Number	Description	Configured function
BIN1	Mains circuit breaker feedback	MCB Feedback
BIN2	System activation in AUT mode	Remote Start/Stop
BIN3	Switch controller to TEST mode	Remote TEST
BIN4	Switch controller to TEST mode with load	Remote TEST On Load
BIN5	Access lock keyswitch	Access lock
BIN6	Switch the site to Island state	Force Island
BIN7	Active parallel run	Force Parallel
BIN8	Warning protection	BIN Protection 01

Binary outputs

Number	Description	Function
BOUT1	Control of MCB	MCB Close/Open
BOUT2	System activation	Sys Start/Stop
BOUT3	Indication of system reserve	System Reserve OK
BOUT4	Spare	Not used
BOUT5	Spare	Not used
BOUT6	Spare	Not used

5.2 Controller configuration and PC tools connection

5.2.1 USB	48
5.2.2 RS232/RS485	49
5.2.3 Ethernet	50

back to Controller setup

This chapter contains brief introduction into the specifics of firmware and archive upload and connection of various PC tools to the controller. If you require detailed information on each PC tool please use the included Help in those PC tools or download their Reference Guides.

5.2.1 USB

You may connect to the controller using the USB port. In this case standard USB A to B cable should be used.

Connection using IntelliConfig

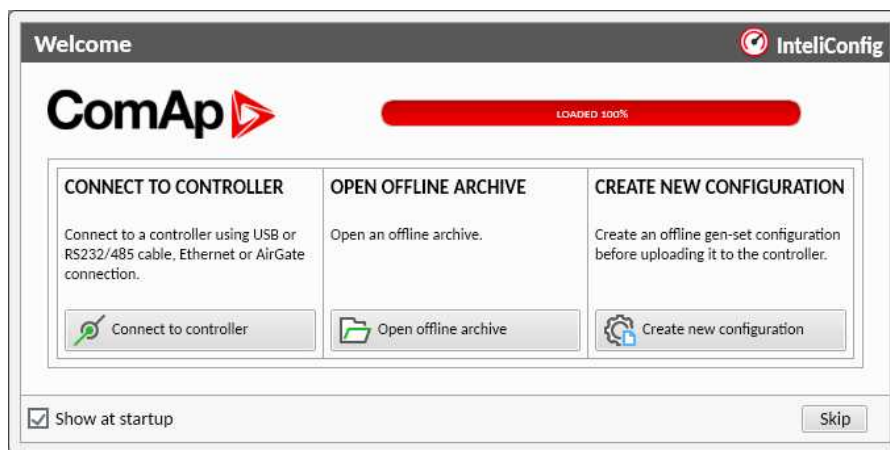


Image 5.1 First screen of IntelliConfig - select connect to controller



Image 5.2 Second screen of IntelliConfig - select detected controllers

Connection using WinScope

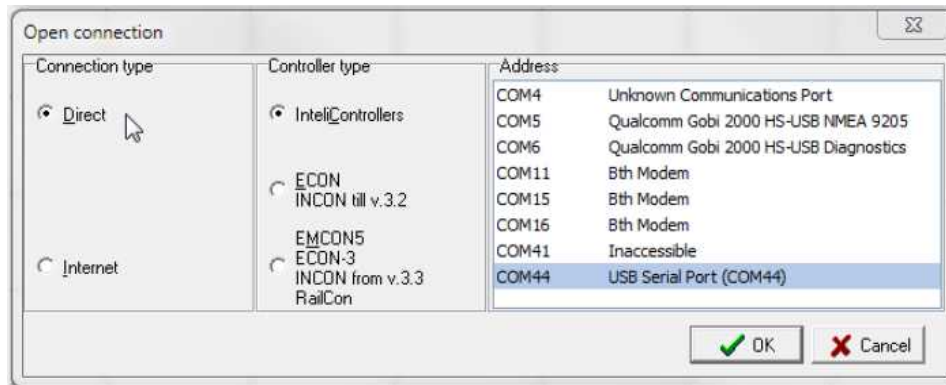


Image 5.3 WinScope screen - select direct connection

5.2.2 RS232/RS485

It is possible to connect to the controller using RS232 or RS485 direct connection (serial port or USB to RS232/RS485 converter may be used). The following settings need to be checked in the controller:

- ▶ **COM1 Mode (page 304)** = Direct
- ▶ **Controller Address (page 209)** has to be set to the same value as in the PC tool

Connection using InteliConfig

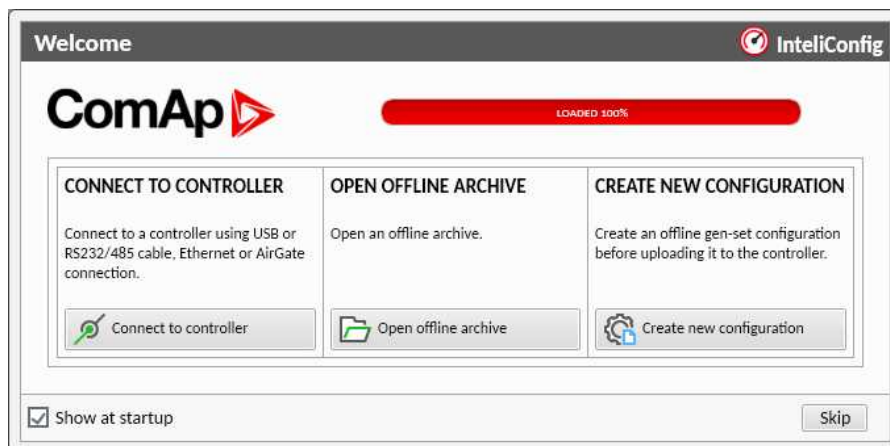


Image 5.4 First screen of InteliConfig - select connect to controller

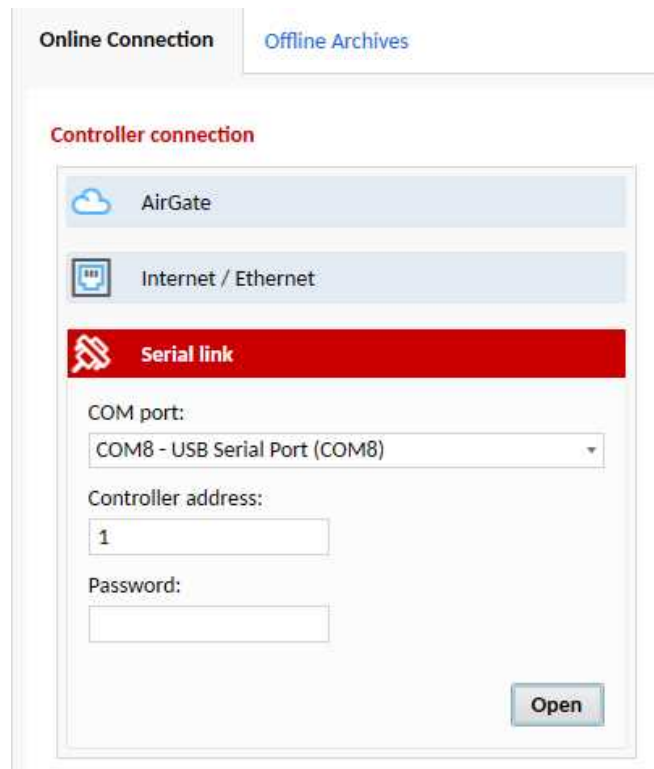


Image 5.5 Second screen of IntelIconfig - select Serial link

Connection using WinScope

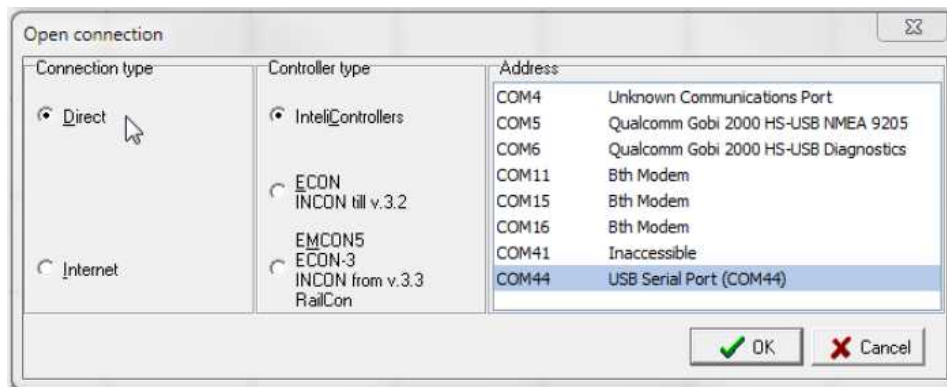


Image 5.6 WinScope screen - select direct connection

Note: Winscope supports only 19200, 38400, 57600 speeds.

5.2.3 Ethernet

It is possible to connect to the controller using ethernet port either directly or using ComAp's AirGate service.

Direct connection

When you use direct connection the controller needs to be reachable directly from the PC you use (i.e. one LAN or WAN without any firewalls and other points that may not allow the connection). The following settings need to be checked in the controller:

- ▶ **Controller Address (page 209)** has to be set to the same value as in the PC tool.
- ▶ **IP Address Mode (page 330)** can be set to AUTOMATIC when there is DHCP service is available. Otherwise it needs to be set to FIXED.
- ▶ **IP Address (page 331)** is either set automatically or it can be adjusted to a specific requested value.
- ▶ **Subnet Mask (page 331)** is either set automatically or it can be adjusted to a specific requested.
- ▶ **Gateway IP (page 331)** can be set here when it is used.
- ▶ **ComAp TCP Port (page 335)** number is 23. Make sure that this port is open for communication in your network.

Connection using IntelliConfig

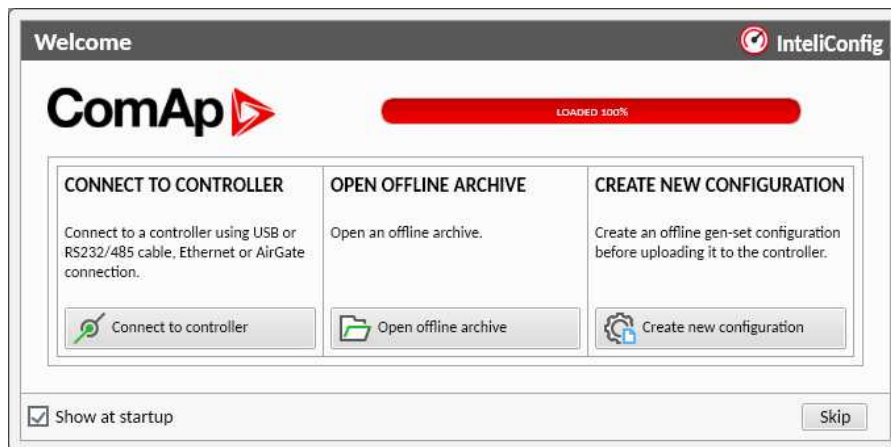


Image 5.7 First screen of IntelliConfig - select connect to controller

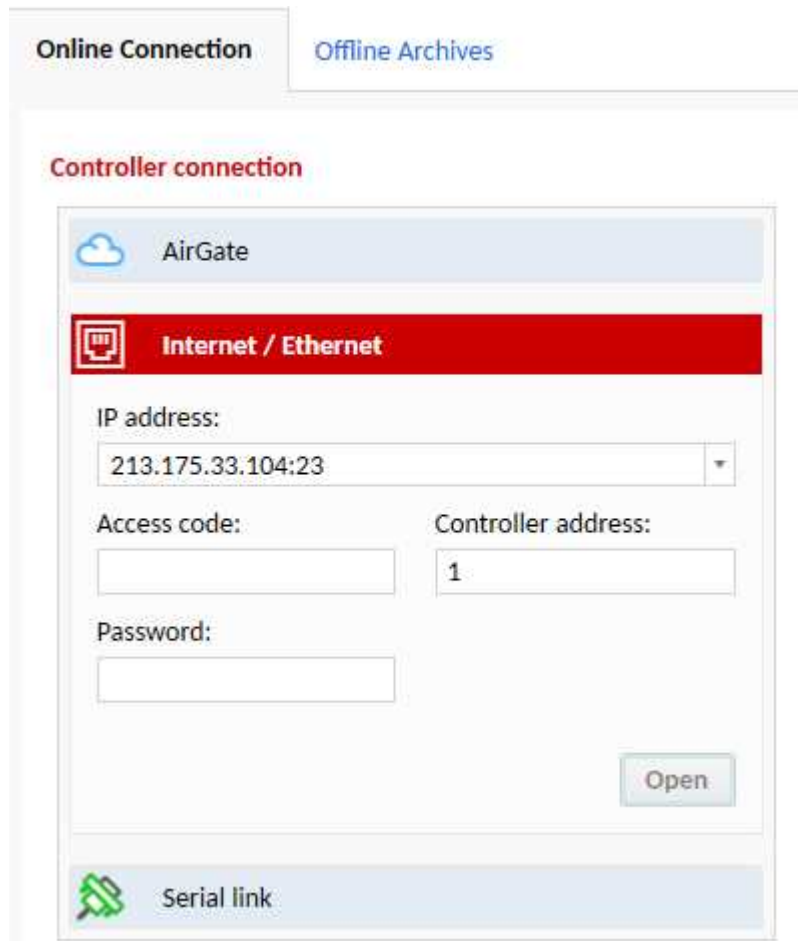


Image 5.8 Second screen of Intelliconfig - select Internet/Ethernet

Connection using WinScope

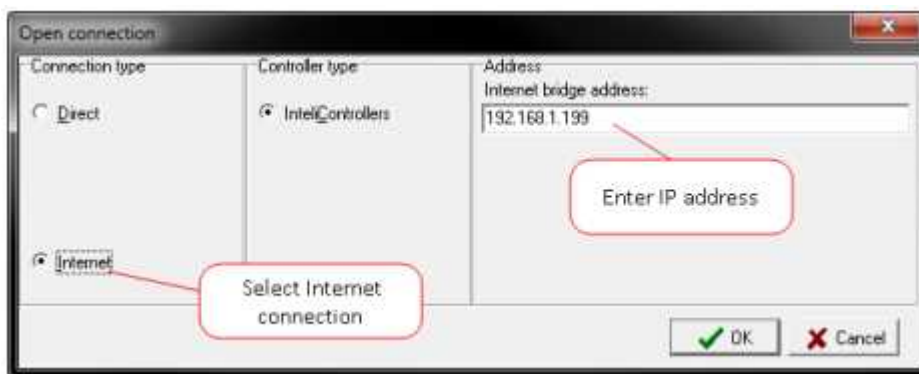


Image 5.9 WinScope screen

AirGate connection

You can use ComAp's AirGate service that allows you to connect to any controller via internet no matter what are the restrictions of the local network (if the controller can connect to the internet AirGate service will work). The following setpoints have to be adjusted:

- ▶ **Controller Address (page 209)** has to be set to the same value as in the PC tool.
- ▶ **IP Address Mode (page 330)** can be set to AUTOMATIC when there is DHCP service is available. Otherwise it needs to be set to FIXED.
- ▶ **IP Address (page 331)** is either set automatically or it can be adjusted to a specific requested value.
- ▶ **Subnet Mask (page 331)** is either set automatically or it can be adjusted to a specific requested.
- ▶ **Gateway IP (page 331)** can be set here when it is used.
- ▶ **AirGate Connection (page 334)** has to be set to Enabled.
- ▶ **AirGate Address (page 334)** currently there is one AirGate server running at URL airgate.comap.cz (enter this URL into the setpoint).

Connection using IntelliConfig


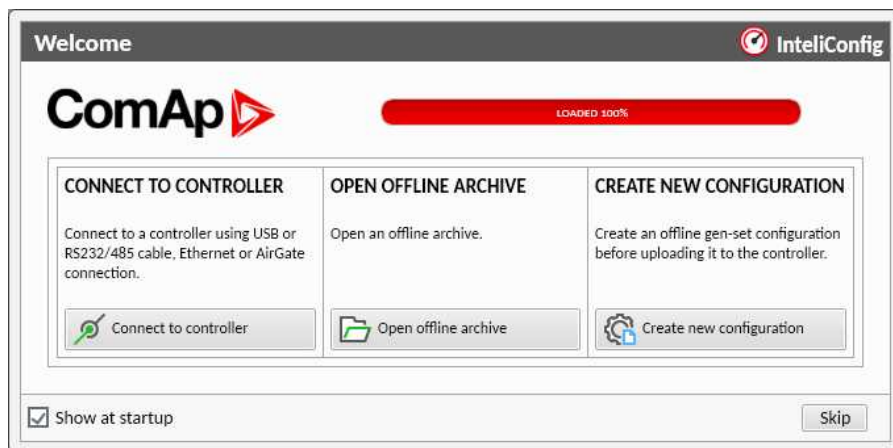


Image 5.10 First screen of IntelliConfig - select connect to controller

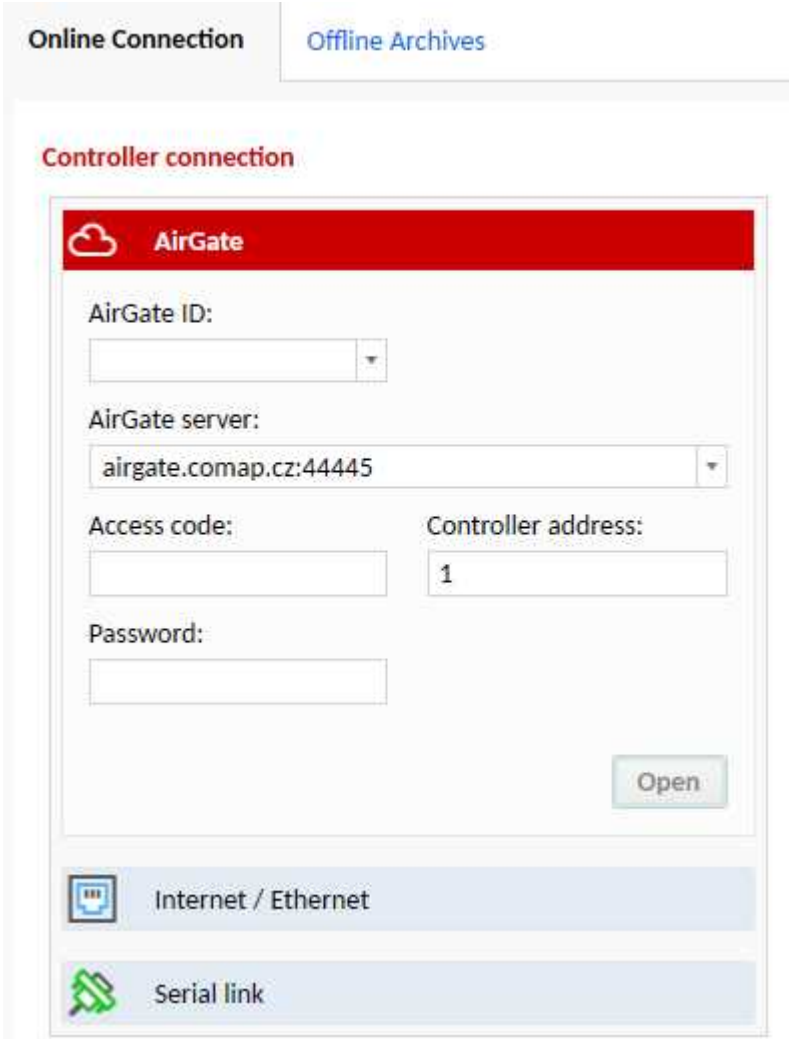

The screenshot shows the 'Controller connection' screen in the IntelIconfig software. The 'AirGate' tab is active. The form contains the following fields and options:

- AirGate ID:** A dropdown menu.
- AirGate server:** A dropdown menu with the value 'airgate.comap.cz:44445'.
- Access code:** A text input field.
- Password:** A text input field.
- Controller address:** A text input field with the value '1'.
- Open:** A button to initiate the connection.
- Connection options:** Two radio buttons for 'Internet / Ethernet' and 'Serial link'.

Image 5.11 Second screen of IntelIconfig - select AirGate

Connection using WinScope

WinScope doesn't support connection via AirGate.

5.2.4 Firmware upgrade

Firmware upgrade is provided through IntelIconfig pc software. For more information please download the manual from websites.

<https://www.comap-control.com/products/detail/inteliconfig>

Firmware upgrade in IG200 hardware

IMPORTANT: IntelMains 210 firmware is possible to use also with IntelGen 200 hardware. But because there are some important differences between both hardwares, please pay always attention by configuration of IntelMains 210.

The main issue is based on Binary outputs on IntelGen 200.

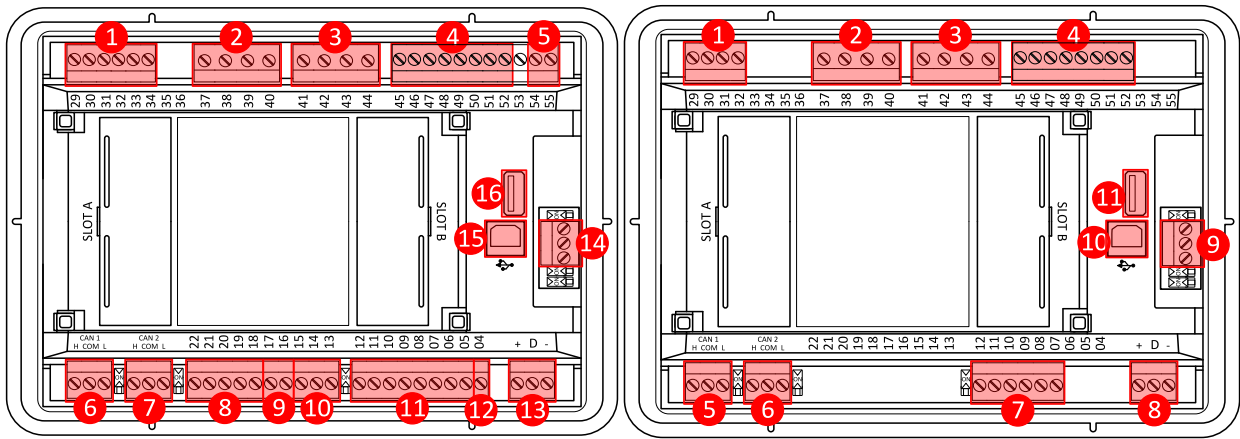


Image 5.12 Terminal diagram IntelliGen 200 and IntelliMains 210

IntelliMains 210 doesn't use the terminals 04, 05, 06 see **Terminal Diagram on page 28**. This leads to very specific condition which has to be remembered during configuration.

From the configuration point of view is that you configure always binary outputs BO1-BO6 and on IntelliGen 200 hardware is it in fact BO3-BO8.

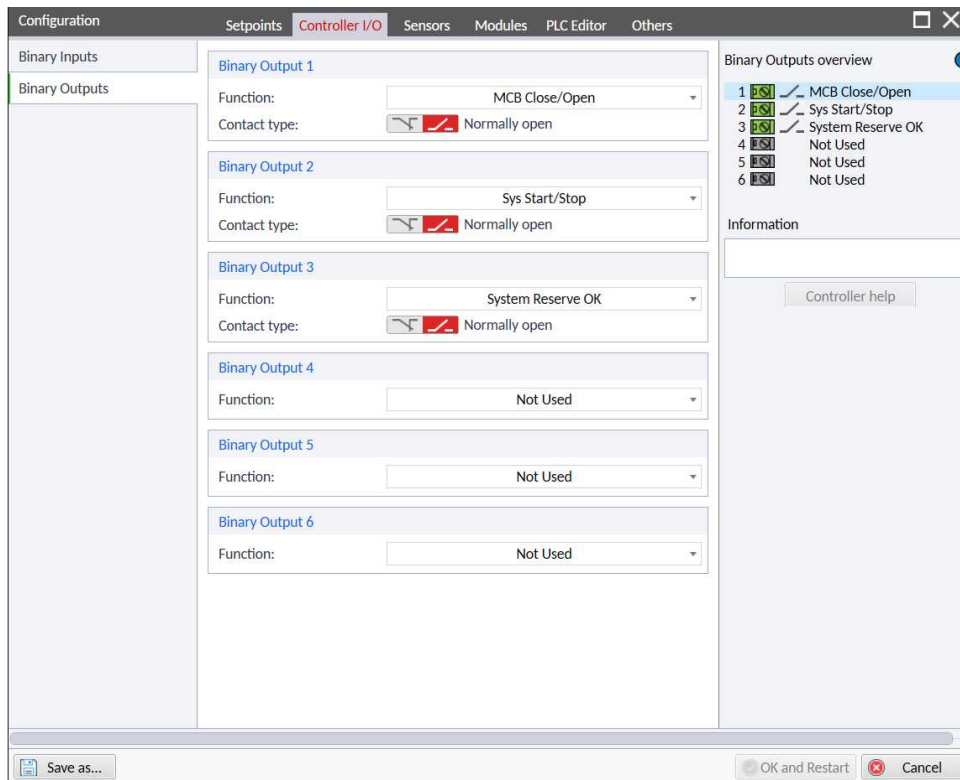


Image 5.13 Binary outputs configuration IM210

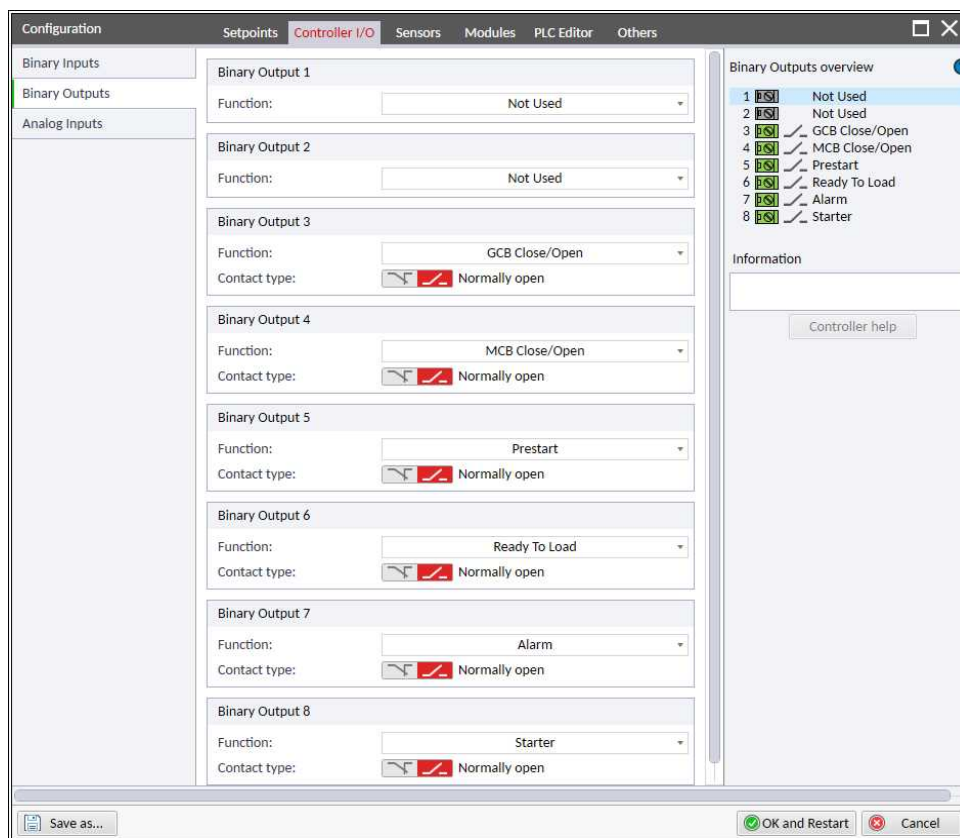


Image 5.14 Binary outputs configuration IG200

IMPORTANT: During configuration of binary outputs either for IntelliMains 210 or IntelliGen 200 hardware is always required to keep the same terminal numbers BO1=07...BO6=12!

5.3 Operator Guide

- 5.3.1 Front panel elements 57
- 5.3.2 Display screens and pages structure 59
- 5.3.3 Browsing alarms 70
- 5.3.4 Password 71
- 5.3.5 Information screen 77
- 5.3.6 Language selection 78
- 5.3.7 Display contrast adjustment 80

5.3.1 Front panel elements

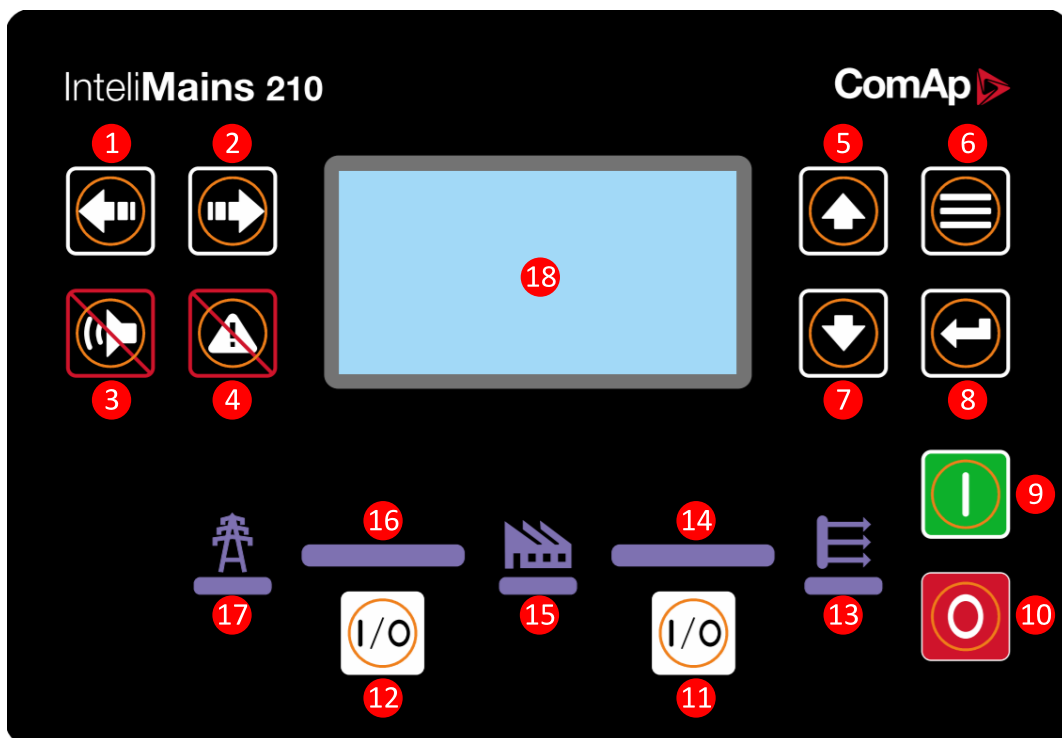














Image 5.15 Operator interface of IntelliMains 210

Control buttons		
Position	Picture	Description
1		<p>LEFT button. Use this button to move left or to change the mode. The button can change the mode only if the main screen with the indicator of currently selected mode is displayed.</p> <p><i>Note: This button will not change the mode if the controller mode is forced by one of binary inputs listed in the Reference Guide – “Operating modes” chapter.</i></p>
2		<p>RIGHT button. Use this button to move right or to change the mode. The button can change the mode only if the main screen with the indicator of currently selected mode is displayed.</p>

		<i>Note: This button will not change the mode if the controller mode is forced by one of binary inputs listed in the Reference Guide – “Operating modes” chapter.</i>
3		HORN RESET button. Use this button to deactivate the horn output without acknowledging the alarms.
4		FAULT RESET button. Use this button to acknowledge alarms and deactivate the horn output. Inactive alarms will disappear immediately and status of active alarms will be changed to "confirmed" so they will disappear as soon as their reasons dismiss.
5		UP button. Use this button to move up or increase value.
6		PAGE button. Use this button to switch over display pages.
7		DOWN button. Use this button to move down or decrease value.
8		ENTER button. Use this button to finish editing a setpoint or moving right in the history page.
9		START button. Works in MAN mode only. Press this button to initiate the start sequence of the system.
10		STOP button. Works in MAN mode only. Press this button to initiate the stop sequence of the system.
11		MOCB button. Works in MAN and TEST modes only. Press this button to open or close the MOCB or start synchronization manually. Active only in MOCB application.
12		MCB button. Works in MAN and TEST modes only. Press this button to open or close the MCB or start the reverse synchronization manually.
Indicators and others		
Position	Description	

13	GENERATOR status indicator. There are two states - Gen-set OK (indicator is green) and Gen-set failure (indicator is red). Green LED is on if the generator voltage is present and within limits. Red LED starts flashing when gen-set failure occurs. After FAULT RESET button is pressed, goes to steady light (if an alarm is still active) or is off (if no alarm is active).
14	MGCB ON . Active only in MGCB application. Green LEDs are on if MGCB is closed and Bus is healthy. If Bus is not healthy and MGCB is closed than middle LED is on. It is driven by MGCB CLOSE/OPEN output or by MGCB feedback signal.
15	LOAD . Green LED is ON if load is supplied by mains or by generator. It means, that Bus or Mains is OK and proper circuit breaker is closed.
16	MCB ON . Green LEDs are on if MCB is closed and Mains is healthy. If Mains is not healthy and MCB is closed than middle LED is on. It is driven by MCB CLOSE/OPEN output or by MCB feedback signal.
17	MAINS status indicator. There are two states - Mains OK (indicator is green) and Mains failure (indicator is red). Green LED is on, if mains is present and within limits. Red LED starts blinking when the mains failure is detected and after the gen-set has started and connected to the load it lights permanently until the mains failure disappears.
18	Graphic B/W display, 132x64 pixels.

5.3.2 Display screens and pages structure

The displayed information is structured into "pages" and "screens". Use PAGE button to switch over the pages.


- ▶ The page Measurement consists of screens which display measured values like voltages, current, oil pressure etc., computed values like i.e. gen-set power, statistic data and the alarm list on the last screen.
- ▶ The page Setpoints contains all setpoints organized to groups and also a special group for entering password.
- ▶ The page History log shows the history log in the order that the last record is displayed first.

Main Screen

Symbols

- ▶ Padlock - active when LBI ACCESS LOCK is active
- ▶ R - active when there is active remote connection to controller
- ▶ Exclamation mark - active when there is any alarm in alarmlist

Measurement Screens

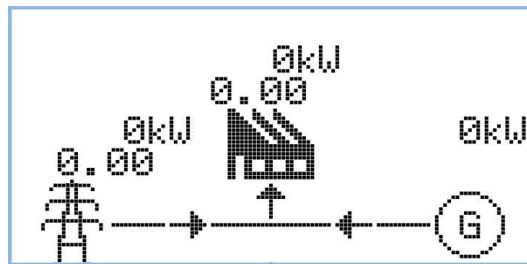

Note: Use Up and Down button to move between measurement pages.




Note: Use Up and Down button to move between measurement pages.

Mains			
L1N	0V	L1L2	0V
L2N	0V	L2L3	0V
L3N	0V	L3L1	0V
Mains Frequency			0.0 Hz



Note: Use Up and Down button to move between measurement pages.

Mains Current	
L1	0A
L2	0A
L3	0A



Note: Use Up and Down button to move between measurement pages.

Mains Power			
	kW	PF	kVA
L1	0	0.00	0
L2	0	0.00	0
L3	0	0.00	0
Σ	0	0.00	0




Note: Use Up and Down button to move between measurement pages.

BUS			
L1N	0V	L1L2	0V
L2N	0V	L2L3	0V
L3N	0V	L3L1	0V
Bus Frequency			0.0Hz



Note: Use Up and Down button to move between measurement pages.

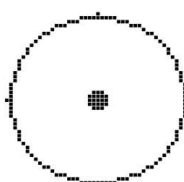
Synchronization		
	Slip	0.00Hz
	Bus	0V
	Mns	0V
	LS0	0.00%
	US0	0.00%



Note: Use Up and Down button to move between measurement pages.

```

Power Management
ActGrpPwr          0kW
ActResPwr          0kW
:
CAN16 I0000000000000000
CAN32 0000000000000000
    
```



Note: Use Up and Down button to move between measurement pages.

```

Control Groups
:
Reg16 I0000000000000000
Reg32 0000000000000000
    
```



Note: Use Up and Down button to move between measurement pages.

```

Binary Inputs 1/2
00000000
1 MCB Feedback          0
2 Remote Start/Stop    0
3 Remote TEST           0
4 Rem TEST On Load     0
5 Access Lock           0
    
```



Note: Use Up and Down button to move between measurement pages.

```

Binary Inputs 2/2
00000000
6 Force Island          0
7 Force Parallel        0
8 Bin Protection 01    0
    
```



Note: Use Up and Down button to move between measurement pages.

Binary Outputs 1/2		
	I0000000	
1	MCB Close/Open	I
2	Sys Start/Stop	0
3	System Reserve OK	0
4	Not used	0
5	Not used	0



Note: Use Up and Down button to move between measurement pages.

Binary Outputs 2/2		
	I0000000	
6	Not used	0
7	Not used	0
8	Not used	0




Note: Use Up and Down button to move between measurement pages.

Statistics 1/1		
Mains kWh Im		-1
Mains kVArh		-1
Mains kWh Ex		-1
Mains kVArh		-1




Note: Use Up and Down button to move between measurement pages.

Battery Voltage	
Battery Volts	27.6V
: 	



Note: Use Up and Down button to move between measurement pages.

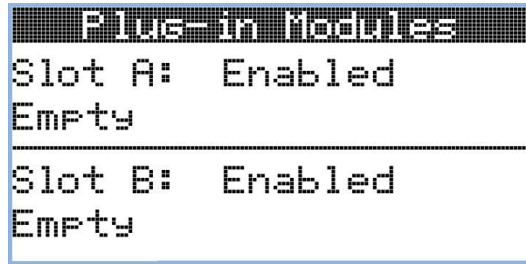

Note: Use Up and Down button to move between measurement pages.




Note: Use Up and Down button to move between measurement pages.


Note: From all of these pages it is possible to switch seamlessly to the setpoint group page by pressing Page button.

Note: There can be some additional screens and also some screens can be hidden. Screen's visibility depends on actual configuration (usage of extension or communication modules, etc.).

Setpoint Screens

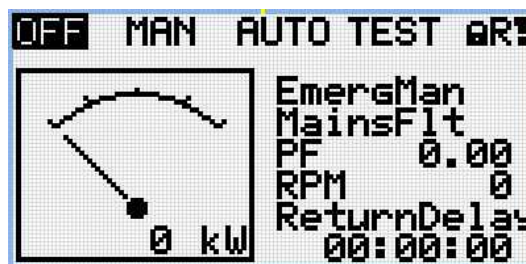


Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

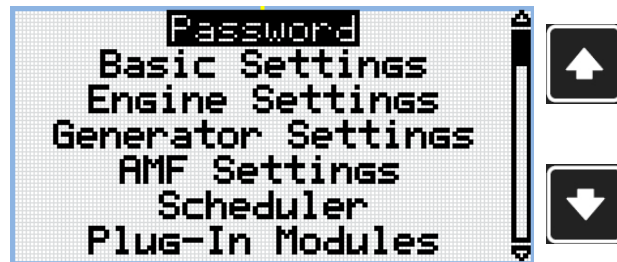

Note: Use Up and Down button to select required setpoint group.




Note: Use Enter button to enter selected setpoint group.

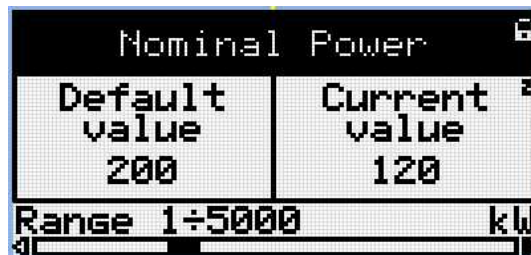

Note: Use Left and Right button to select required setpoint.



Note: Use Enter button to enter selected setpoint.

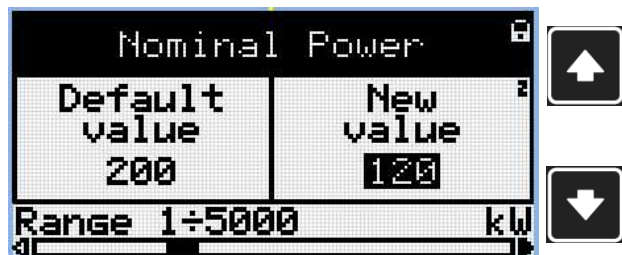

Note: Use Up and Down button to set required value of selected setpoint.




Note: Use Enter button to confirm adjusted value of setpoint.




Note: Use Page button to discard changes, to set setpoint to previous value and to return to the list of setpoints of selected group.

IMPORTANT: Cannot change setpoint? Setpoints marked with an padlock are password protected. Enter password as described in the chapter Password (page 71).


History Log

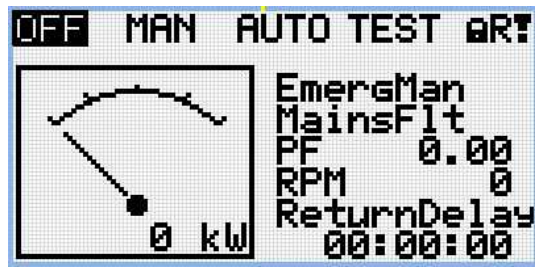

Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

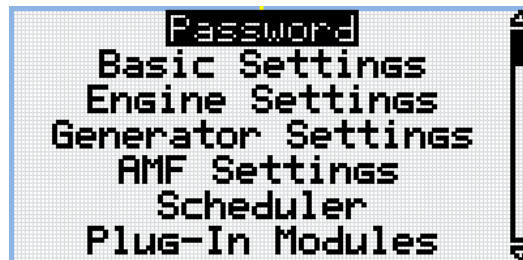


Note: From setpoint group page we can fluently go to the history log pages by pressing Page button.

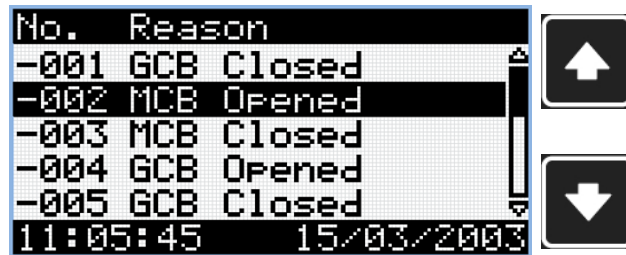

Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

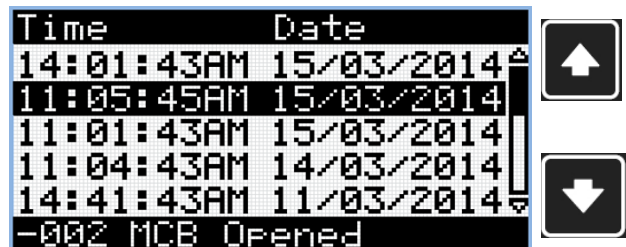

Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

RPM	Pwr	Q
1500	15.0	15.0
0	0.0	0.0
0	0.0	0.0
1500	15.0	15.0
1500	15.0	15.0
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

PF	LChr	GFra
0.75	C	50.0
0.00	C	0.0
0.00	C	0.0
0.73	C	50.0
0.74	C	50.0
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Ug1	Ug2	Ug3
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Ug12	Ug23	Ug31
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230
-002 MCB Opened		



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

IL1	IL2	IL3
30	30	30
0	0	0
0	0	0
30	30	30
30	30	30

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Um1	Um2	Um3
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Um12	Um23	Um31
230	230	230
0	0	0
0	0	0
230	230	230
230	230	230

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

FC	FMI
0	0
0	0
0	0
0	0
0	0

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

MFra	UBat	OilP
50.0	23.2	3.2
0.0	0.0	0.0
0.0	23.2	0.0
50.0	23.3	3.2
50.0	23.3	3.2

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

EngT	FLvl	Ain4
30.0	50	00.0
22.0	20	00.0
23.0	30	00.0
23.0	30	00.0
23.0	50	00.0

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

BIN	BOUT
01101000	11000011
11001001	01001010
01010100	01010100
11010000	01101000
11000011	01010100

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.



Note: Use Enter button to move to the next page of history log.

Mode
MAN
MAN
MAN
MAN
MAN

-002 MCB Opened



Note: Use Up and Down button to select required alarm reason.




Note: Use Enter button to move to the first page of history log.


IMPORTANT: The records are numbered in reverse order, i.e. the latest (newest) record is "0" and older records have "-1", "-2" etc.

Note: This is only basic history record. There can be some additional screens in case that in controller is extension module is configured. Also it depends on connection type.

5.3.3 Browsing alarms

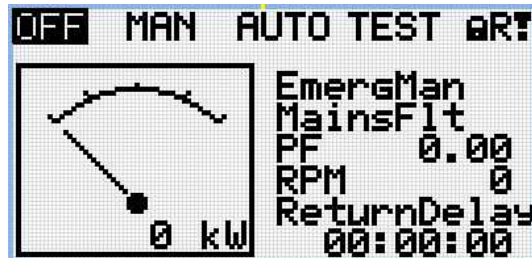

Note: Use Up button to move to alarmlist from main measurement screen.

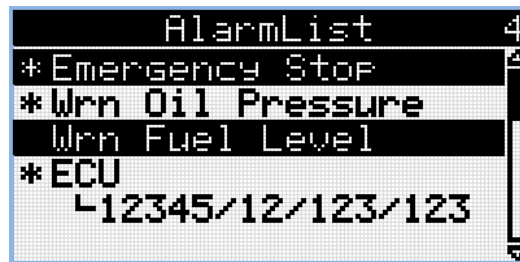


- ▶ Active alarms are displayed as white text on black background. It means the alarm is still active, i.e. the appropriate alarm conditions are still present.
- ▶ Inactive alarms are displayed as black text on white background. It means the alarm is no more active, i.e. the appropriate alarm conditions are gone.
- ▶ Not confirmed alarms are displayed with an asterisk. It means the alarm is still not acknowledged (confirmed).




5.3.4 Password

Enter password

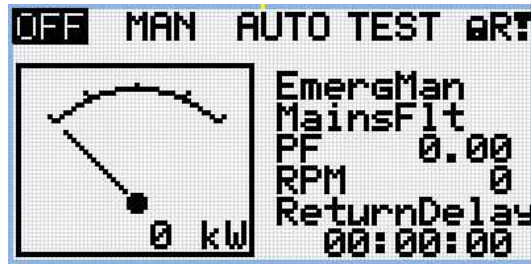


Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

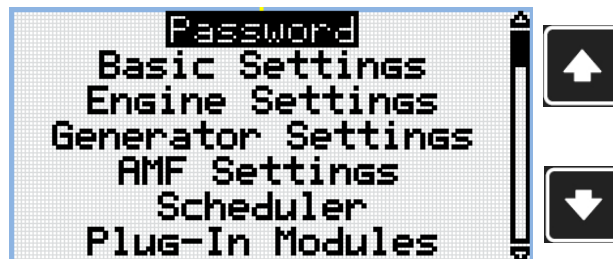

Note: Use Up and Down button to select setpoint group Password.




Note: Use Enter button to enter setpoint group Password.

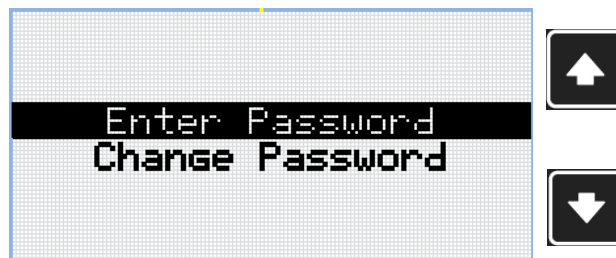

Note: Use Up and Down button to select Enter Password.




Note: Use Enter button to enter selected setpoint.

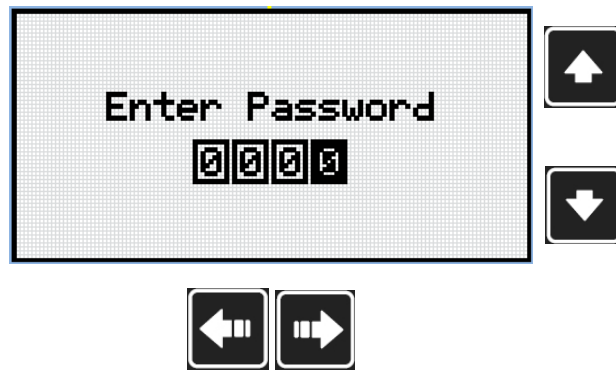


Note: Use Up and Down button to set required value of selected setpoint.

Note: Use Left and Right button to move between digits.

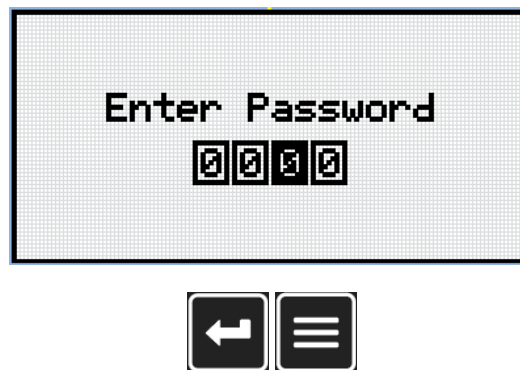


Note: Use Enter button to confirm the password or Page button to cancel entering the password.

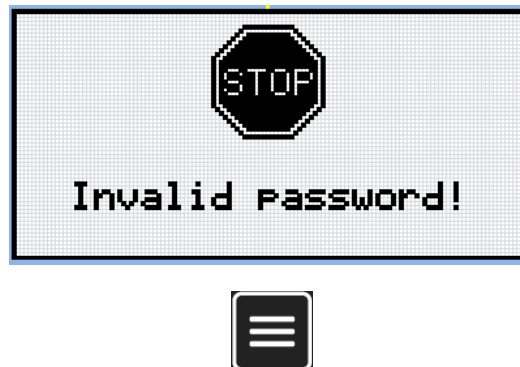


Note: In case that invalid password is entered, the controller shows Invalid password screen. Use Page button to go back to menu.

Change password

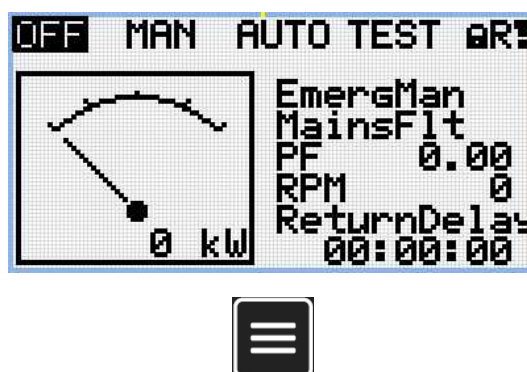

Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

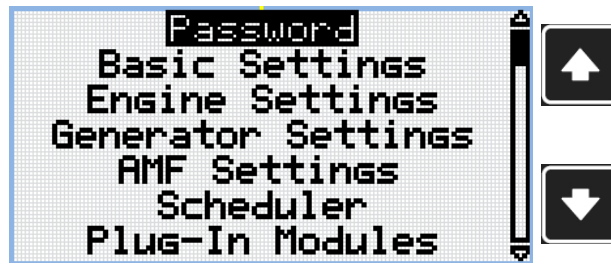

Note: Use Up and Down button to select setpoint group Password.




Note: Use Enter button to enter setpoint group Password.



Note: Use Up and Down button to select Change Password.




Note: Use Enter button to enter selected setpoint.

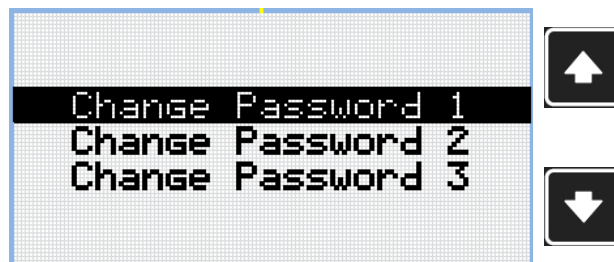

Note: Use Up and Down button to select required level of password.



Note: Use Enter button to enter selected setpoint.

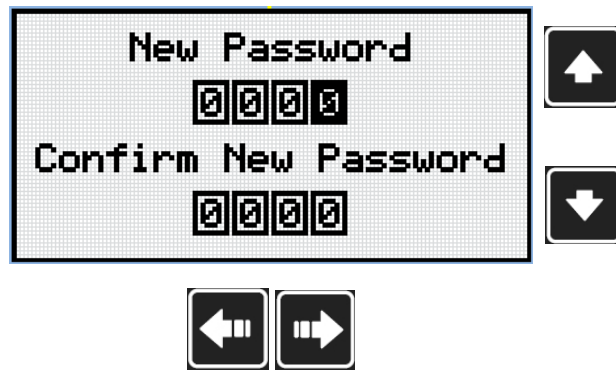

Note: Use Up and Down button to set required value of password.

Note: Use Left and Right button to move between digits.



Note: After setting new password use Enter button to confirm adjusted password.



Note: Use Up and Down button to set required value of password again.

Note: Use Left and Right button to move between digits.




Note: After setting new password again use Enter button to confirm adjusted password or Page button to discard changes and to cancel changing password.




Note: Before changing the password controller has to be unlocked. In case that controller is locked, the controller shows Password required screen. In that case the password has to be entered before changing the password.

Log out from controller

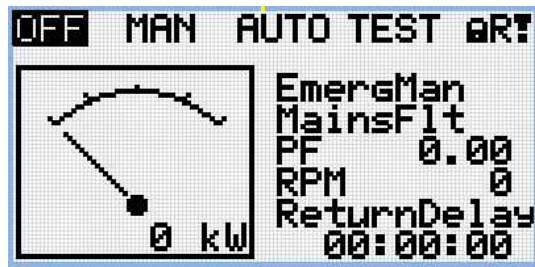


Note: From all measurement pages we can fluently go to the setpoint group page by pressing Page button.

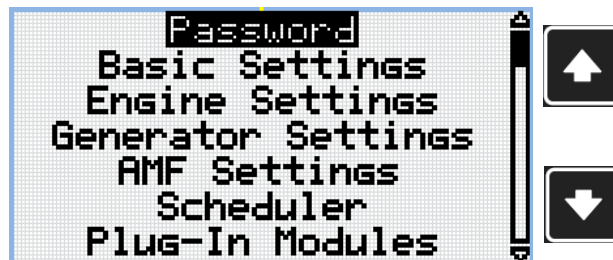

Note: Use Up and Down button to select setpoint group Password.




Note: Use Enter button to enter setpoint group Password.

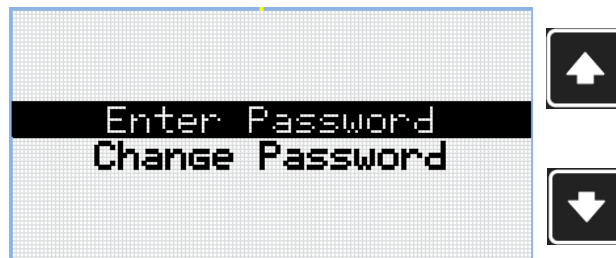

Note: Use Up and Down button to select Enter Password.



Note: Use Enter button to enter selected setpoint.

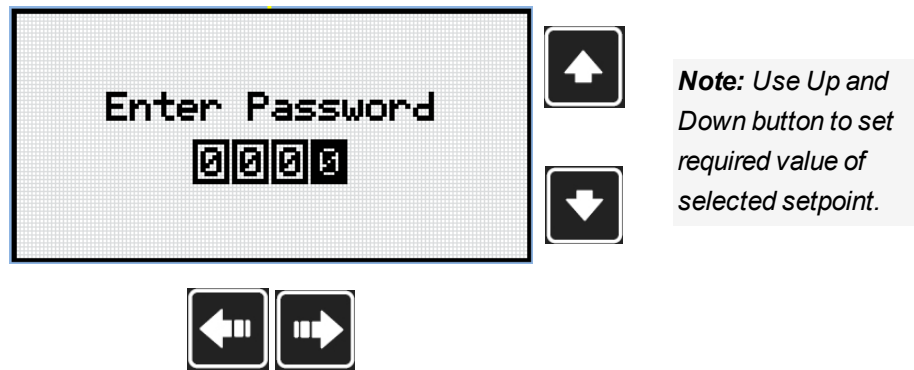

Note: Use Left and Right button to move between digits.

Note: Enter invalid password to log out from controller.



Note: In case that invalid password is entered, the controller shows Invalid password screen. Use Page button to go back to menu.

Lost Password

If you lost the administrator-level (level 3) password, proceed according to following steps.

1. Connect to the controller with IntelliConfig, go to "Password reset" window and proceed according to the instructions there. You will obtain unique one-time request code which must be sent to ComAp technical support.
2. ComAp technical support will send an unique one-time action code to the backup e-mail address specified in the controller.
3. Copy the received action code to IntelliConfig and reset the administrator-level password to default.

IMPORTANT: It is extremely important to adjust the backup e-mail address in the controller. Otherwise you will not be able to receive the action code!

IMPORTANT: If the backup email was not setup. Display the information screen containing the serial number and password decode number as described in the chapter Information screen (page 77) and send them to your local distributor.

Password break protection


The controller password is protected against breaking by brute force. The protection works at every controller interface separately.

1. When an invalid password is entered 5 times after each other, independently on the time period elapsed between the attempts, the controller will be blocked after the 5th unsuccessful attempt for 1 minute at the


particular interface.

2. While the controller is blocked it refuses any further attempts to enter password.
3. When unblocked again the controller accepts one attempt to enter password. If the password is incorrect again the controller will be blocked for 2 minutes.
4. Each further attempt to enter invalid password will double the blocking time, but maximum blocking time is 20 minutes.
5. When incorrect password is entered 100-times after each other the controller is blocked forever and the password reset procedure is required to unblock it.

5.3.5 Information screen

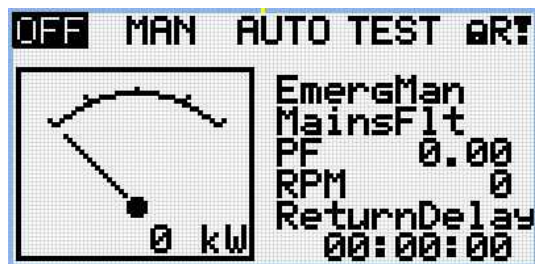


Note: On Main measurement screen press Enter and Page button together. Enter button has to be pressed first.

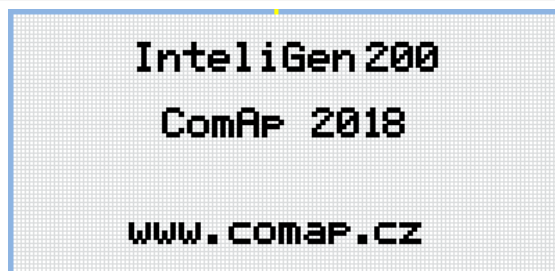

Note: Use Page button to move to the next page.




Note: Use Page button to move to the next page.

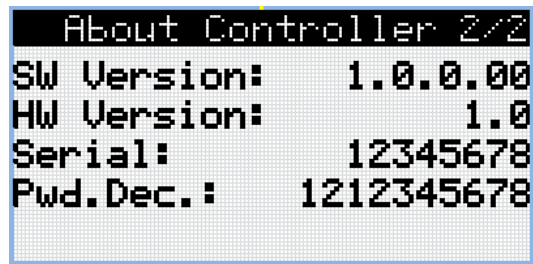


Note: Use Up button to move back to main measurement screen.

5.3.6 Language selection

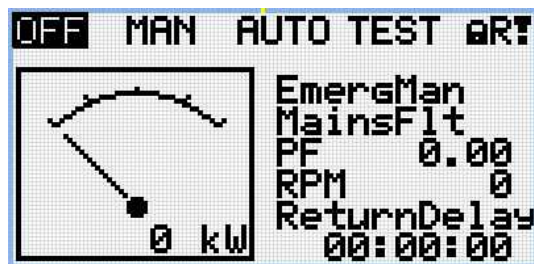

Note: On Main measurement screen press Enter and Page button together. Enter button has to be pressed first.

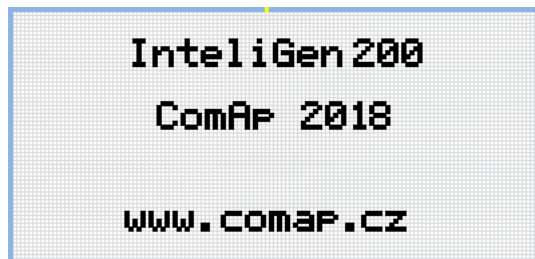

Note: Use Page button to move to the next page.

```

About Controller 1/2
  IntelliLite
  ComAp 2015
  Controller Name

Application:      AMF25
Branch:          Standard
    
```



Note: Use Page button to move to the next page.

```

About Controller 2/2
SW Version:      1.0.0.00
HW Version:      1.0
Serial:          12345678
Pwd.Dec.:        1212345678
    
```



Note: Use Page button to move to the next page.

```

Languages
Language1
Language2
Language3
    
```




Note: Use Up and down button to select required language.





Note: Use Enter button to confirm selected language.

5.3.7 Display contrast adjustment

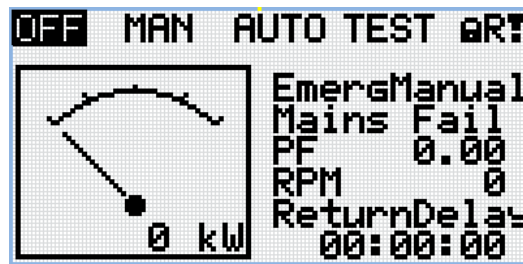

Note: On any measurement screen press Enter and Down button together for lower contrast.

Note: On any measurement screen press Enter and Up button together for higher contrast.

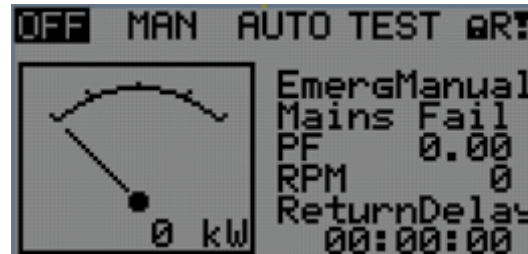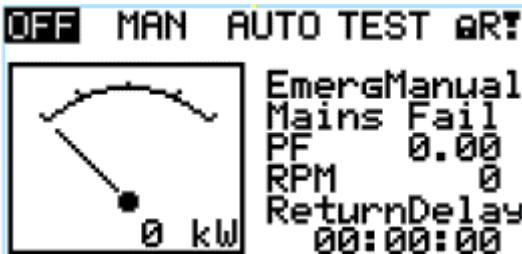

Note: After setting a contrast, no another action is needed.

 back to Controller setup



5.4 Functions

5.4.1 Operating Modes	81
5.4.2 Connecting to load	82
5.4.3 Parallel to mains operation	85
5.4.4 AMF operation	88
5.4.5 Power management	89
5.4.6 Control groups	107
5.4.7 Distributed power management signals	108
5.4.8 Regulation loops	112
5.4.9 Frequency control	114
5.4.10 Voltage PF control	115
5.4.11 Electric state machine	115
5.4.12 Alarm management	116
5.4.13 History log	121
5.4.14 Breaker control	122
5.4.15 Exercise timers	125
5.4.16 Analog switches	131
5.4.17 Voltage phase sequence detection	133

5.4.18 Sensor curves	133
5.4.19 PLC	134
5.4.20 Mains decoupling protections	141
5.4.21 Alternate configuration	142
5.4.22 USB host	143
5.4.23 Load shedding	146
5.4.24 Peak shaving	148

 **back to Controller setup**

5.4.1 Operating Modes

Selecting the operating mode is done through Left  and Right  buttons on the front panel or by changing the **Controller mode (page 207)** setpoint (from the front panel or remotely).

Note: *If this setpoint is configured as password-protected, the correct password must be entered prior to attempting to change the mode.*





Note: *The mode cannot be changed if Access Lock input is active.*

The following binary inputs can be used to force one respective operating mode independent of the mode setpoint selection:

- ▶ **Remote OFF (page 478)**
- ▶ **Remote TEST (page 479)**
- ▶ **Remote MAN (page 478)**
- ▶ **Remote AUTO (page 477)**

If the respective input is active the controller will change the mode to the respective position according to the active input. If multiple inputs are active, the mode will be changed according to priorities of the inputs. The priorities match the order in the list above. If all inputs are deactivated, the mode will return to the original position given by the setpoint.

OFF





No system start activation is possible. If mains is healthy and MCB is opened, then is MCB tried to close after the delay given by setpoint MCB Close Delay. In case of mains fail and option MCB Open On - Mains Fail is chosen then is MCB tried to open. In MGCB application is MGCB opened in case is closed. No AMF or Power management function will be performed. The buttons MCB , GCB , Start  and Stop  including the appropriate binary inputs for external buttons are not active.

MAN

In MAN mode can be the system started by pressing the START button or by activating binary input Start Button. If there is present gen-set controller, their system start/stop is activated/deactivated via internal communication line. In case of MCB application can be controlled only the MCB breaker by pressing the MCB button or by activating the binary input MCB Button. In case of MGCB application the control of MCB breaker and MGCB breaker is depending on the setting of Setpoint CB Control In MAN Mode. MGCB breaker can be controlled also by pressing the MGCB button or by activating the binary input MGCB Button.

IMPORTANT: Control of MGCB breaker is affected by System Start/Stop signal in MAN mode when MCB breaker is closed. It is necessary to activate System Start/Stop signal in MAN mode before closing MGCB breaker (otherwise it is not possible to close MGCB breaker). System Start/Stop signal can be activated by Start button on controller's front facia.

AUTO

System activation is based on external signal (**REMOTE START/STOP (PAGE 479)**) or by conditions (AMF, Power management system, ...). The controller does not respond to buttons Start , Stop , MCB ON/OFF  and MGCB ON/OFF .

TEST

The behavior of the controller in TEST mode depends mainly on the setting of the setpoints and binary inputs. TEST mode can be activated via front panel of controller or via binary input **REMOTE TEST (PAGE 479)**.

The system start is activated when the controller is put in to TEST mode.

MCB application - system start is active, if gen-sets will be started their GCB will be closed in to the parallel state.

MGCB application - system start is active, if gen-sets will be started their GCB will be closed but MGCB stays opened.

If mains failure occurs, the MCB is opened and in MGCB application will be the MGCB breaker closed.

After the mains return, the back synchronisation is activated and system is transferred back to the TEST mode if the TEST request is still active.

The transfer is depending on the setting **see Subgroup: Load Transfer on page 240**.

5.4.2 Connecting to load

There are two ways to connect the gen-set to the load (bus bar). This depends on the state of **MCB FEEDBACK (PAGE 475)** and on the measured mains/bus voltage.

Connecting to dead bus

MCB / MGCB

The measured voltage must be below 2% of the nominal bus voltage.

Note: If there is multiple site where is more breaker controlled from another controllers and they have the same conditions for connecting to the dead bus, there is an internal logic to prevent to closing of more breakers to the same at the same time without synchronisation. One of the breakers will be the first closed to the dead bus and other breakers will synchronize to the first one.

Note: There is also a protection of "Bus power loss sensing". The "Bus Measurement Error" is detected when the MCB and MGCB (in MGCB application) or MCB (in MCB application) is closed and the bus parameters are out of limit for 20s. Bus Measurement Error can be disabled by setpoint.

Synchronization

Synchronization process

Behavior of synchronization process depends on, which breaker is used for synchronization and in which **Controller mode (page 207)** is controller switched.

Note: When the controller starts to synchronize and the main measuring screen is displayed, it will be automatically change to the synchroscope screen for the entire duration of synchronization. After synchronization the synchroscope screen is automatically changed back to the main measuring screen. It is also possible to change screens manually (arrows up and down) after displaying the synchroscope screen. In this case there is no automatic return to the main measuring screen after synchronization is finished.

Synchronization via MCB in AUTO mode in MCB application

Mains controller controls the synchronization process.

- ▶ if there is bus present from another mains, the MCB will be closed in case the setpoint **Mains Coupling (page 199)** is switched to ENABLE.
- ▶ if there is bus present from Gen-sets, the MCB will try to synchronize.
- ▶ if the mains (bus) voltage or the mains frequency gets out of the limits during synchronization, then the synchronization process is interrupted and can continue again when mains parameters gets restored after **Mains Return Delay (page 218)**.
- ▶ if the gen-set voltage or frequency gets out of the limits during the synchronization, the synchronization process continues until the generator parameters fail is confirmed.
- ▶ If the synchronization timeout gets elapsed the **Wrn Reverse Synchro Fail (page 567)** protection gets active and GCB stays closed. Synchronization is stopped.

Synchronization via MCB in MAN mode in MCB application

Mains controller controls the synchronization process.

- ▶ Behavior is exactly the same as in AUTO mode - but the synchronization does not start again automatically when parameters of the mains gets out of limits and back. The breaker control button must be pressed again.
- ▶ When the MCB button is pressed during the synchronization, then the synchronization process is interrupted.

Synchronization via MCB in AUTO mode in MGCB application

Mains controller controls the synchronization process.

- ▶ if there is bus present and MGCB is closed, the MCB will try to synchronize.
- ▶ if the mains (bus) voltage or the mains frequency gets out of the limits during synchronization, then the synchronization process is interrupted and can continue again when mains parameters gets restored after **Mains Return Delay (page 218)**.
- ▶ If the synchronization timeout gets elapsed the **Wrn Reverse Synchro Fail (page 567)** protection gets active and MGCB stays closed. Synchronization is stopped.

Synchronization via MCB in MAN mode in MGCB application

Mains controller controls the synchronization process.

- ▶ Behavior is exactly the same as in AUTO mode - but the synchronization does not start again automatically when parameters of the mains gets out of limits and back. The breaker control button must be pressed again.
- ▶ When the MCB button is pressed during the synchronization, then the synchronization process is interrupted.

Synchronization via MGCB in AUTO mode

Mains controller controls the synchronization process.

- ▶ In AUTO mode will be the MGCB tried to synchronize only if the system start is activated (e.g. by LBI the **REMOTE START/STOP (PAGE 479)**, **REMOTE TEST ON LOAD (PAGE 480)**...) and MCB is closed (mains healthy).
- ▶ If the mains or bus voltage or frequency goes out of limits during the synchronization, the synchronization process is interrupted and starts when the parameters are back in limits.

Synchronization via MGCB in MAN mode

Mains controller controls the synchronization process.

- ▶ Behavior is exactly the same as in AUTO mode - but the synchronization does not start again automatically when parameters of the mains gets out of limits and back. The breaker control button must be pressed again.
- ▶ When the MGCB button is pressed during the synchronization, then the synchronization process is interrupted.

IMPORTANT: Control of MGCB breaker is affected by System Start/Stop signal in MAN mode when MCB breaker is closed. It is necessary to activate System Start/Stop signal in MAN mode before closing MGCB breaker (otherwise it is not possible to close MGCB breaker). System Start/Stop signal can be activated by Start button on controller's front facia.

Synchronization types

There are two types of synchronization. Type of synchronization is adjusted via setpoint **Synchronization Type (page 245)**.

Phase match

The phase match synchronization consists of voltage matching and frequency/angle matching. The maximum duration of synchronization is given by the setpoint **Synchronization Timeout (page 245)**. If the synchronization is not successful within this period of time, the **Synchronization Fail (page 567)** alarm will be issued.

Voltage matching

The bus voltage is regulated to match the mains voltage with tolerance given by the setpoint **Voltage Window (page 246)**. The regulation is adjusted by the setpoints **Voltage Gain (page 243)** and **Voltage Int (page 244)**.

Frequency/angle matching

The bus frequency is regulated to match the mains frequency first. The frequency regulation loop is active (setpoints **Frequency Gain (page 238)** and **Frequency Int (page 239)**). Once the frequency is matched, the regulation loop is switched to match the angle (setpoint **Angle Gain (page 239)**). When the angle is matched with tolerance +/- **Phase Window (page 246)** for a time given by the setpoint **Dwell Time (page 246)** and the voltage is matched too, then the MCB or MGCB is closed.

Note: *The matching loops will continue to run even if the MCB or MGCB close command has been already issued until the controller receives **MCB FEEDBACK (PAGE 475)** or **MGCB FEEDBACK (PAGE 476)** or a MCB or MGCB fail alarm occurs. After the feedback has been received, the control loops are switched to load and power factor loops or load and power factor sharing respectively.*

Slip synchronization

The slip synchronization is based on frequency/angle matching. The maximum duration of synchronization is given by the setpoint **Synchronization Timeout (page 245)**. If the synchronization is not successful within this period of time, the **Synchronization Fail (page 567)** alarm will be issued.

Frequency/angle matching

The bus frequency is regulated to match the mains frequency + **Slip Frequency (page 246)**. The frequency regulation loop is active (setpoints **Frequency Gain (page 238)** and **Frequency Int (page 239)**). Once the frequency is matched, the regulation loop gets frozen immediately and the command for breaker closing is unblocked after the delay given by setpoint **Dwell Time (page 246)**. However the closing breaker command is issued later in advance before the expected phase match. The proper "angle of advance" is calculated from setpoints **MGCB Latency (page 247)** or **MCB Latency (page 247)**.

Whenever the bus frequency leaves off the **Slip Frequency Window (page 247)**, the command for breaker closing gets blocked and regulation of frequency is activated again. The same procedure starts again.

5.4.3 Parallel to mains operation

If the MCB is closed (**MCB FEEDBACK (PAGE 475)** is present) and the gen-set has been synchronized to the bus bar, the parallel to mains operation will follow. It consists of the following phases:

Ramping the power

Power up

The first phase of the parallel to mains operation is the ramping of the gen-set up to the desired power level derived from the **#System BaseLoad (page 198)** or up to the load given by load sharing with other gen-sets connected to the bus bar. The speed of the ramp is given by the setpoint **Load Ramp (page 243)**. The setpoint adjusts the ramp time for a change from 0% to 100% of nominal power.

Power down

When a stop command is received the gen-set load is ramped down before opening the GCB or MGCB (in case of MGCB application). The ramp speed is given by the setpoint **Load Ramp (page 243)** and the end level is given by **Unload MGCB Open Level (page 242)** respectively **Unload MGCB Open Level (in case of MGCB application)**.

When the MGCB button is pressed, the gen-set load is ramped down before opening the MGCB as well. But after the MGCB has been opened, the gen-set remains running until a stop command comes or the MGCB is pressed again to reclose the MGCB.

Load control

If **MCB FEEDBACK (PAGE 475)** is active (parallel to mains operation) the load of group of the gen-sets is controlled to reach the power defined by setpoint **#System BaseLoad (page 198)**. Each loaded gen-set takes equal part (relative to their nominal power) from **#System BaseLoad (page 198)** requested value. The load is regulated locally in each controller by load control regulation loop, load-sharing regulation loop is not active. The setpoint **#System BaseLoad (page 198)** is also used for determining which gen-sets have to run or not. Control is adjusted via setpoints **Load Gain (page 239)** and **Load Int (page 240)**.

Note: Mains controller plays active role in case of load control only in case that the setpoint **#System Load Control PTM (page 195)** is set to Load sharing. If this setpoint is set to Baseload the load control is controlled from gen-set controllers and their load control loops.

PF control

If **MCB FEEDBACK (PAGE 475)** is active (parallel to mains operation) the value of PF (power factor) of group of the gen-sets is controlled to reach the PF defined by setpoint **#System Power Factor (page 198)**. The PF is regulated locally in each controller by PF control regulation loop, VAR-sharing regulation loop is not active. Control is adjusted via setpoints **PF Gain (page 244)** and **PF Int (page 244)**.

Note: Mains controller plays active role in case of PF control only in case that the setpoint #System PF Control PTM (page 195) is set to VAr sharing. If this setpoint is set to Base PF the PF control is controlled from gen-set controllers and their PF control loops.

Transfers of Load

Type of transfer of load between mains and Bus and vice versa is adjusted via setpoints **Transfer Bus To Mains (page 242)** and **Transfer Mains To Bus (page 241)**.

Types of transfers

Open	Transfer of the load from bus to mains and vice versa without parallel work and synchronization (one breaker opens and second is closed - checking feedbacks). The setpoint Open Transfer Min Break (page 240) sets the minimal duration of break.
Close Only	Transfer of the load from bus to mains and vice versa with synchronization and parallel work. The time of parallel work is given by setpoint Close Transfer Max Duration (page 240) . In case of synchronization fail, MCB stays closed and system start is deactivated.
Close Primarily	Transfer of the load from bus to mains and vice versa with synchronization and parallel work. The time of parallel work is given by setpoint Close Transfer Max Duration (page 240) . In case of synchronization fail, open transfer is done.
Soft Transfer	Transfer of the load from bus to mains and vice versa with parallel work and soft loading/unloading of the gen-set. This function is proceeded like the closed transfer, but there is time limitation of loading/unloading of the gen-set adjusted via setpoint Load Ramp (page 243) . The transfer is succeed only when the gen-set is fully loaded/unloaded (level of load when mains is considered as unloaded - gen-set is loaded is adjusted via setpoint Unload MCB Open Window (page 243)), level of load when gen-set is considered as unloaded is adjusted via setpoint Unload MGCB Open Level (page 242) .

Transition in MAN

Behavior of transfer of load in MAN mode is adjusted via setpoint **CB Control In MAN Mode (page 200)**.

Full Ctrl	No limitation of CB control in MAN mode (operator can close any breaker manually or evoke the synchronization and consequential operation in parallel to mains).
Aut Trans	Operator can control both MCB or MGCB breaker. However once synchronization is evoked the controller performs the automatic transfer of the load (depends on adjustment of setpoints Transfer Bus To Mains (page 242) and Transfer Mains To Bus (page 241)).
IsInd Disl	Behaves like the full manual control but the Island operation is disabled. <ul style="list-style-type: none"> ■ Example: When MCB opened and MGCB pressed, controller don't go to island. ■ Example: In parallel operation when MCB button pressed, MCB is not opened.

IMPORTANT: Control of MGCB breaker is affected by System Start/Stop signal in MAN mode when MCB breaker is closed. It is necessary to activate System Start/Stop signal in MAN mode before closing MGCB breaker (otherwise it is not possible to close MGCB breaker). System Start/Stop signal can be activated by Start button on controller's front facia.

Transition in AUTO

Behavior of transfer of load in AUTO mode is affected by binary inputs **FORCE ISLAND (PAGE 471)**, **FORCE PARALLEL (PAGE 471)** and **REMOTE START/STOP (PAGE 479)**.

When more binary inputs are activated at the same time, their priority is shown in the list below:

- ▶ **FORCE ISLAND (PAGE 471)** (highest priority).
- ▶ **REMOTE START/STOP (PAGE 479)**.
- ▶ **FORCE PARALLEL (PAGE 471)** (lowest priority).

Note: AMF function has the highest priority (if it is enabled).

Logical binary input	AUTO mode	TEST mode
FORCE ISLAND (PAGE 471)	<p>When activated:</p> <ul style="list-style-type: none"> ▶ System Start/Stop is activated ▶ the transfer of load from mains to generator is done <p>When deactivated:</p> <ul style="list-style-type: none"> ▶ the transfer of load from generator to mains is done ▶ System Start/Stop is deactivated 	<p>The System Start/Stop is activated anyway due to the TEST mode.</p> <p>When activated:</p> <ul style="list-style-type: none"> ▶ the transfer of load from mains to generator is done <p>When deactivated:</p> <ul style="list-style-type: none"> ▶ the transfer of load from generator to mains is done
REMOTE START/STOP (PAGE 479)	<p>When activated:</p> <ul style="list-style-type: none"> ▶ System Start/Stop activated ▶ if mains parameters ok - synchronize, run in parallel ▶ if mains parameters not ok - run in island <p>When deactivated:</p> <ul style="list-style-type: none"> ▶ unloading (if gen-set was in parallel), System Start/Stop deactivated 	<p>The System Start/Stop is activated anyway due to the TEST mode.</p> <p>When activated:</p> <ul style="list-style-type: none"> ▶ if mains parameters ok - synchronize, run in parallel <p>When deactivated:</p> <ul style="list-style-type: none"> ▶ unloading, System Start/Stop is deactivated
FORCE PARALLEL (PAGE 471)	<p>When activated:</p> <ul style="list-style-type: none"> ▶ check mains parameters - if not ok no action, if ok the procedure follows ▶ System Start/Stop activated, synchronize, parallel operation ▶ in case of mains fail - System Start/Stop is deactivated (if AMF function is disabled, otherwise it goes to island operation) 	<p>The System Start/Stop is activated anyway due to the TEST mode.</p> <p>When activated:</p> <ul style="list-style-type: none"> ▶ check mains parameters - if not ok no action, if ok the procedure follows ▶ synchronize, parallel operation <p>When deactivated:</p> <ul style="list-style-type: none"> ▶ unloading, deactivated System

Logical binary input	AUTO mode	TEST mode
	When deactivated: ▶ unloading, deactivated System Start/Stop	Start/Stop

Type of transfer of load between mains and gen-set and vice versa is adjusted via setpoints **Transfer Bus To Mains** (page 242) and **Transfer Mains To Bus** (page 241).

5.4.4 AMF operation

The “AMF function” represents the automatic start in the event that the mains have failed and stop after the mains have been restored. The automatic start can be enabled or disabled by binary inputs **AMF START BLOCK** (PAGE 446) or **MAINS FAIL BLOCK** (PAGE 473).

Note: The AMF function works only in AUTO mode.

Mains failure detection

The mains are considered as faulty when one or more of the following conditions are valid:

- ▶ The mains voltage is out of the limits given by the setpoints **Mains Undervoltage** (page 219) and **Mains Overvoltage** (page 219) for a time period longer than **Mains < > Voltage Delay** (page 220).
- ▶ The mains voltage unbalance is out of limit given by setpoint **Mains Voltage Unbalance** (page 220) for a time period longer than **Mains Voltage Unbalance Delay** (page 220).
- ▶ The mains frequency is out of the limits given by the setpoints **Mains Underfrequency** (page 221) and **Mains Overfrequency** (page 220) for a time period longer than **Mains < > Frequency Delay** (page 221).
- ▶ The MCB close command was not successful and the alarm **Wrn MCB Fail** (page 565) was not reset.
- ▶ Phase rotation is incorrect.
- ▶ The mains import is higher than limit given by setpoints **Overload MPR** (page 214) for a time longer than **Overload Delay** (page 214).
- ▶ The mains current is higher than limit given by setpoint **Short Circuit MPR** (page 215) for a time longer than **Short Circuit MPR Delay** (page 215).
- ▶ The IDMT protection is activated due to overcrossing the IDMT curve set by setpoints **IDMT Overcurrent** (page 216).

Healthy mains detection

The mains are considered to be healthy when all of following conditions are valid:

- ▶ The mains voltage is within the limits given by the setpoints **Mains Undervoltage** (page 219) and **Mains Overvoltage** (page 219).
- ▶ The mains voltage unbalance is within the limits given by the setpoint **Mains Voltage Unbalance** (page 220).
- ▶ The mains frequency is within the limits given by the setpoints **Mains Underfrequency** (page 221) and **Mains Overfrequency** (page 220).
- ▶ The alarm **Wrn MCB Fail** (page 565) is not active (if MCB feedback is active). This condition is not required

if MCB is open (MCB feedback is inactive).

- ▶ Phase rotation is correct.

The AMF procedure

When the mains failure is detected, the following steps are performed:

- ▶ If the setpoint **MCB Opens On** (page 223) is set to Mains Fail, the MCB is opened.
- ▶ The timer for automatic start of the gen-set **Emergency Start Delay** (page 218) begins to count down.
- ▶ After the timer has elapsed, the gen-set is started.

Note: The automatic start of the gen-set due to AMF function can be disabled by the binary inputs **AMF START BLOCK** (PAGE 446) or **MAINS FAIL BLOCK** (PAGE 473).

- ▶ If the setpoint **MCB Opens On** (page 223) is set to Gen Run, the MCB is opened once the generator voltage is within limits.

Note: If the mains are restored to health and the gen-set is still not connected to the load, the controller interrupts the startup process and closes back the MCB.

Note: Signal Gen Run is sent to IntelliMains controller through internal distributed signal.

- ▶ After **Open Transfer Min Break** (page 240) elapses, the GCB and MGCB (in case of MGCB application) is closed and the gen-set begins to supply the load.
- ▶ After the mains restored to normal, the timer **Mains Return Delay** (page 218) begins to count down.
- ▶ Transition of load back to mains is adjusted via setpoint **Transfer Bus To Mains** (page 242). Behavior of transition is also affected by binary inputs **FORCE ISLAND** (PAGE 471), **FORCE PARALLEL** (PAGE 471) and **REMOTE START/STOP** (PAGE 479).

IMPORTANT: Controller has this behavior only in AUTO mode!

5.4.5 Power management

The Power management function decides how many gen-sets should run and selects particular gen-sets to run. The power management is applicable in cases multiple gen-sets run in parallel to mains or in the island operation. The function is based on the load evaluation in order to provide enough of available running power. Since it allows the system to start and stop gen-sets based on the load demand, it can vastly improve the system fuel efficiency. In other words, an additional gen-set starts when the load of the system raises above certain level. The additional gen-set stops, when the load of the system drops down below a certain level. The process of determining gen-set start and stop is done in each controller; there is no "master slave" system. Therefore, the system is very robust and resistant to failures of any unit in the system. Each of the controllers can be switched off without influencing the whole system. Except the situation the respective gen-set is not available for the power management.

The power management evaluates so called load reserve. The load reserve is calculated as difference between actual load and nominal power of running gen-sets. The reserve is calculated as absolute value (in kW / kVA) or relatively to the nominal power of gen-set(s) (in %). The setpoint **#Power Management Mode** (page 228) is used to select the absolute or relative mode.

The automatic priority swapping function focuses on efficient run of gen-set in regards to running hours and gen-set size.

IMPORTANT: The function of the controller is designed to handle the maximum sum of nominal power at 32000 kW (or 3200,0 with decimal number).

Example: There are 20 gen-sets each with 1000 kW of nominal power. The sum of the nominal power is 20000 kW. Therefore the decimal power format in 0.1 kW cannot be used because the sum exceeds 32000. Therefore power format in kW needs to be chosen.


Basic power management

The Logical binary inputs **REMOTE START/STOP (PAGE 479)** requests the system to start or stop. If the input is not active, the system stops with delay **#System Stop Delay (page 230)** after the input has been deactivated and will not start again if in AUTO mode. If the input is activated again, the delay **#System Start Delay (page 229)** starts to count down. Once the delay elapsed, the system is activated and can be started by the power management. In other words, the power management is activated only if the Logical binary inputs **REMOTE START/STOP (PAGE 479)** is activated.

Note: *The gen-set performs load and VAR sharing whenever it is connected to the bus bar i.e. it is independent on whether the controller is in AUTO or MAN mode or whether the power management is active or not.*

Principle of power management

Internal conditions based on remaining load reserves and priorities are evaluated once a delay is elapsed. If the load reserve is insufficient the gen-set is started after delay given by the setpoint **#Next Engine Start Delay (page 234)** is elapsed. Once the gen-set runs the controller evaluates stopping conditions based on load reserves and priorities. If the reserve is sufficient enough to stop a particular gen-set, it is stopped after delay given by the setpoint **#Next Engine Stop Delay (page 234)** is elapsed. All the time the system stop condition – i.e. the Logical binary inputs **REMOTE START/STOP (PAGE 479)** deactivated – is evaluated as well. Once the delay given by the setpoint **#System Stop Delay (page 230)** has elapsed all gen-sets in AUTO mode are stopped. Following figure depicts the system activation and deactivation logic.

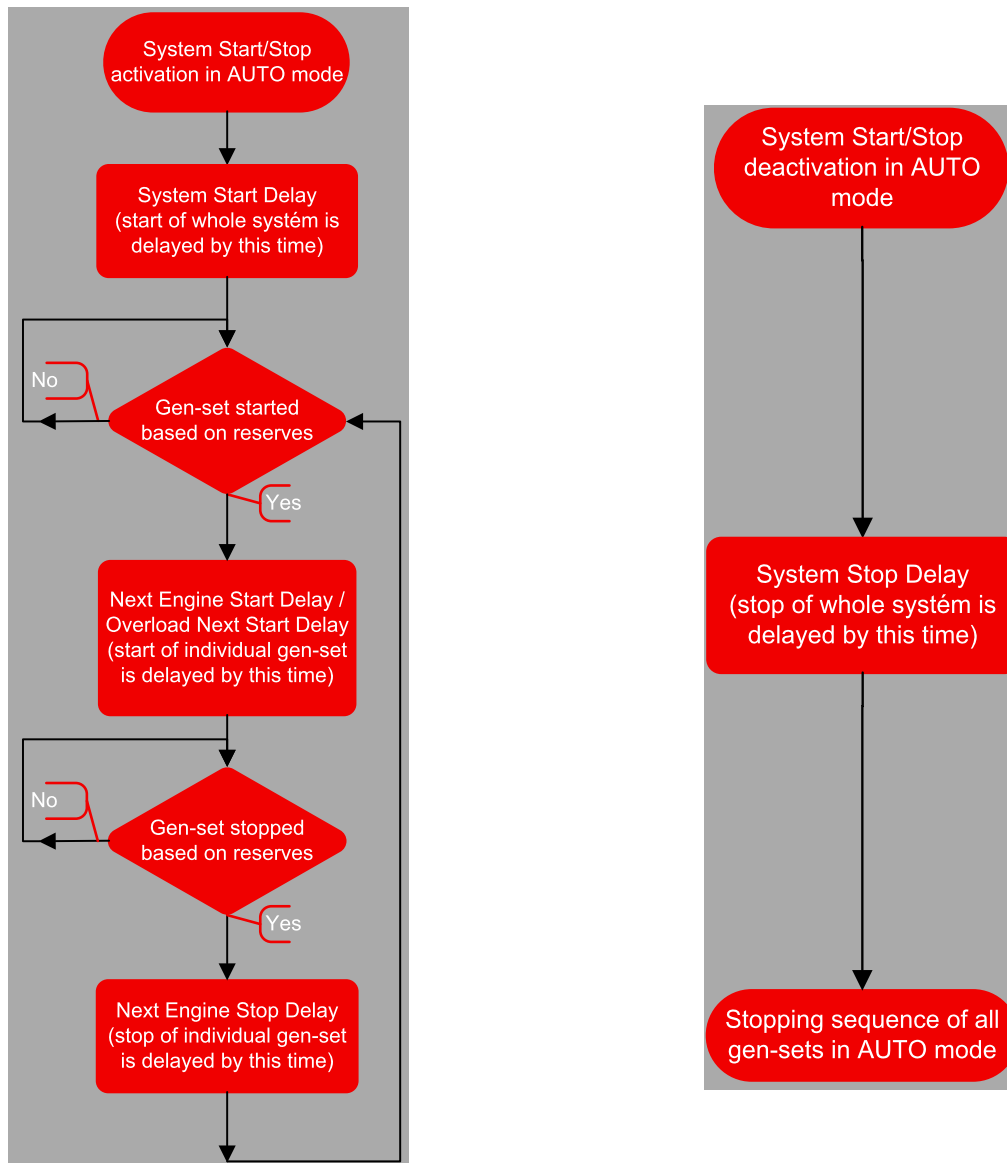

Setpoint **#Overload Next Start Delay** (page 236) is used in case that **#Overload Next Start Protection** (page 235) is enabled and gen-sets are running at **#Overload Next Start Level** (page 235) or more of their nominal power.

Load reserve

The power management is based on the load reserve concept. The load reserve is defined as a difference of the running nominal power of the group within power management and the total load of the system. There are two ways how to determine the load reserve. The absolute power management allows the system to keep the load reserve higher or equal to value in kW given by a relevant setpoint. The relative power management assures that load reserve is kept higher or equal to relative portion in % of the nominal power of group (i.e. running gen-sets active in power management) given by a relevant set-point. Depending of the situation, load reserves are calculated differently in two cases:

Case #1

This case is used in island operation.

Reserve	Actual Reserve	Start condition	Stop condition
Absolute kW	$AR_{strt} = \sum P_{g_{Nom}} - \sum P_{g_{Act}}$ $AR_{stp} = \sum P_{g_{Nom}}^* - \sum P_{g_{Act}}$	$AR_{strt} <$ $\#LoadResStrt$	$AR_{stp} >$ $\#LoadResStop$
Relative %	$RR_{strt} = [(\sum P_{g_{Nom}} - \sum P_{g_{Act}}) / \sum P_{g_{Nom}}].100\%$ $RR_{stp} = [(\sum P_{g_{Nom}}^* - \sum P_{g_{Act}}) / \sum P_{g_{Nom}}^*].100\%$	$RR_{strt} <$ $\\%LdResStrt$	$RR_{stp} >$ $\%LdResStop$

Case #2

This case is used in parallel to mains operation.

Reserve	Actual Reserve	Start condition	Stop condition
Absolute kW	$AR_{strt} = \sum P_{g_{Nom}} - BaseLoad$ $AR_{stp} = \sum P_{g_{Nom}}^* - BaseLoad$	$AR_{strt} <$ $\#LoadResStrt$	$AR_{stp} >$ $\#LoadResStop$
Relative %	$RR_{strt} = [(\sum P_{g_{Nom}} - BaseLoad) / \sum P_{g_{Nom}}].100\%$ $RR_{stp} = [(\sum P_{g_{Nom}}^* - BaseLoad) / \sum P_{g_{Nom}}^*].100\%$	$RR_{strt} <$ $\%LdResStrt$	$RR_{stp} >$ $\%LdResStop$

List of abbreviations:

- ▶ AR_{strt} .. Actual Absolute reserve in kW or kVA - for engine start calculation.
- ▶ AR_{stp} .. Actual Absolute reserves in kW or kVA - for engine stop calculation.
- ▶ RR_{strt} .. Actual Relative reserve in % - for engine start calculation.
- ▶ RR_{stp} .. Actual Relative reserves in % - for engine stop calculation.
- ▶ $\sum P_{g_{Nom}}$.. Sum of Nominal power of all gen-sets on the bus.
- ▶ $\sum P_{g_{Nom}}^*$.. Sum of Nominal power of all gen-sets on the bus apart of the one, which is going to be stopped.
- ▶ $\sum P_{g_{Act}}$.. Sum of Actual power of all gen-sets on the bus = system load.
- ▶ $BaseLd$.. Baseload is given by the setpoint **#System BaseLoad (page 198)**

Note: System starting sequences may be very different due to their complexity (i.e. gen-sets which do not take part in power management, various nominal powers etc.). Each system should be considered individually.

Starting sequence

As written above, the power management is based on the load evaluation in order to provide enough of available running power. An additional gen-set starts when the load of the system raises above certain level to keep the load reserve big enough. Following figure depicts the situation when an additional gen-set is requested to join the already running gen-set(s) to the bus.

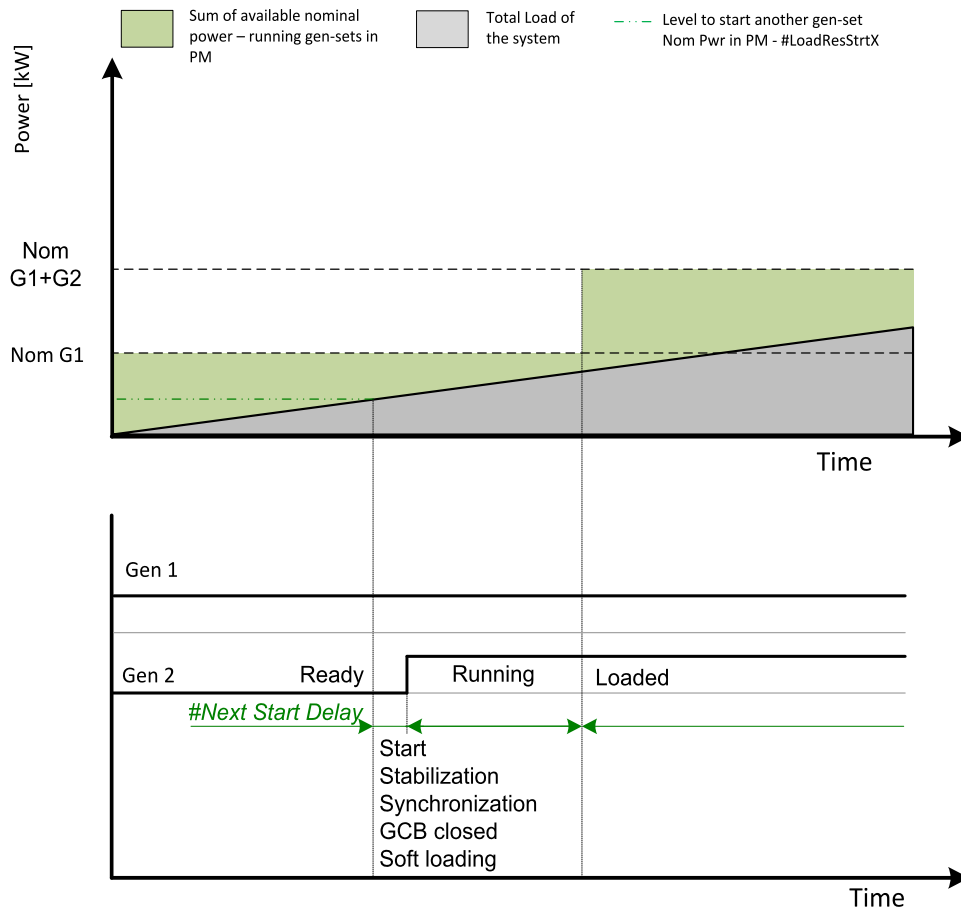


Image 5.16 Start sequence of power management

As shown above, the load of the system has increased above the level defined by the start condition – i.e. the load reserve is not sufficient as required by the appropriate setpoint. Further explanation is provided in chapters **Absolute power management (page 94)** and **Relative power management (page 97)**.

The level is illustrated by the green dashed line. If the load reserve keeps insufficient for longer time than defined by the setpoint **#Next Engine Start Delay (page 234)**, the next gen-set is actually started. The standard starting sequence follows. Once the synchronization procedure is done, the GCB breaker is closed and the gen-set power is ramping up. Once loaded, the system load reserve is raised and becomes sufficient again. Please note the sum of nominal power of all gen-sets on the bus is increased by the nominal power of the additional gen-set.

Stopping sequence

As it is written above, the power management is based on the load evaluation in order to provide enough of available running power. An additional gen-set stops when the load of the system drops below certain level to avoid inefficient run of the gen-set. Following figure depicts the situation when a gen-set is requested to stop due to the power management.

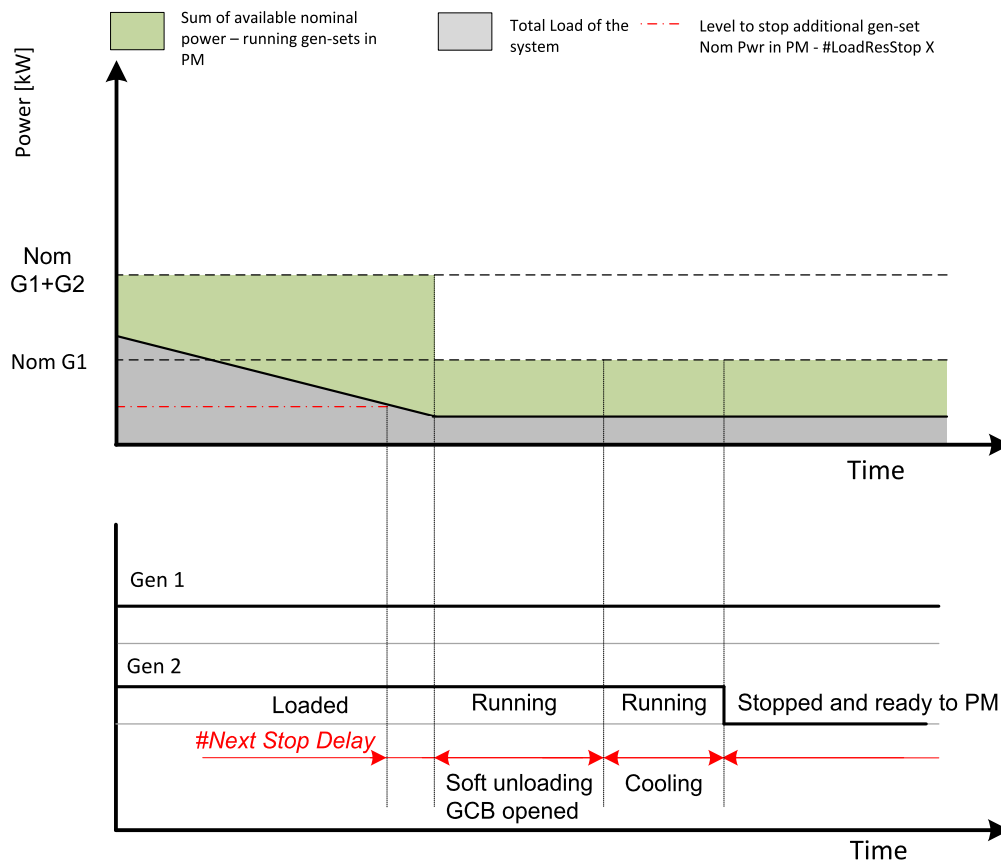


Image 5.17 Stopping sequence of power management

As shown above, the system load has decreased below the level defined by the stop condition – i.e. the load reserve is over a limit given by the appropriate setpoint. Further explanation is provided in chapters **Absolute power management (page 94)** and **Relative power management (page 97)**.

The level is illustrated by the red dashed line. If the load reserve keeps over this limit for longer time than defined by setpoint **#Next Engine Stop Delay (page 234)**, the next gen-set is actually requested to stop. Once the gen-set is unloaded, the GCB breaker is opened. Please note the sum of nominal power of all gen-sets on the bus is decreased by the nominal power of the stopped gen-set. The cooling sequence follows before the gen-set is actually stopped. The gen-set is ready to be started if the system load increases again.

Absolute power management

The power management based on absolute load reserves can be successfully used in cases the load portions are similar to the gen-set capacity or even bigger. The goal of the absolute reserve mode is to provide the same load reserve all the time independently on how many gen-sets are currently running. The mode perfectly fits for industrial plants with large loads.

The absolute power management guarantees adjustable load reserve in kW. This mode is active when **#Power Management Mode (page 228)** is set to ABS [kW] mode.

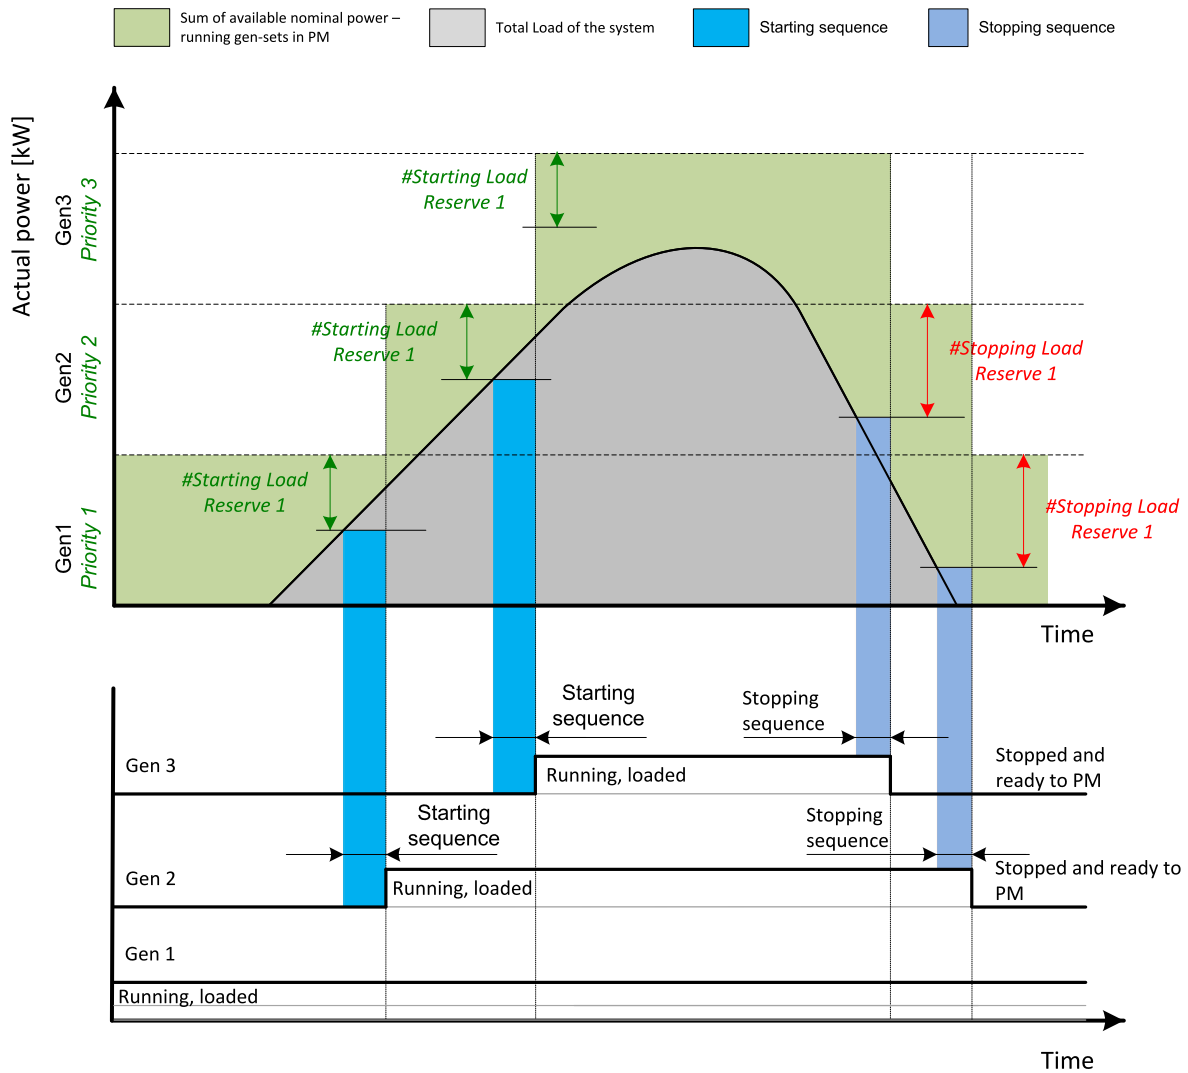


Image 5.18 Power management based on absolute load reserve

Example: An example of absolute power management is shown on the figure below. There are three gen-sets with following choice of setpoints:

Gen-set	Nominal power	Power management	#Power management mode	Priority	#Priority Auto Swap	#Starting Load Reserve X	#Stopping Load Reserve X
Gen-set #1	200 kW	ENABLED	ABS (kW)	1	DISABLED	100 kW	125 kW
Gen-set #2	500 kW	ENABLED	ABS (kW)	2	DISABLED	100 kW	125 kW
Gen-set #3	1 000 kW	ENABLED	ABS (kW)	3	DISABLED	100 kW	125 kW

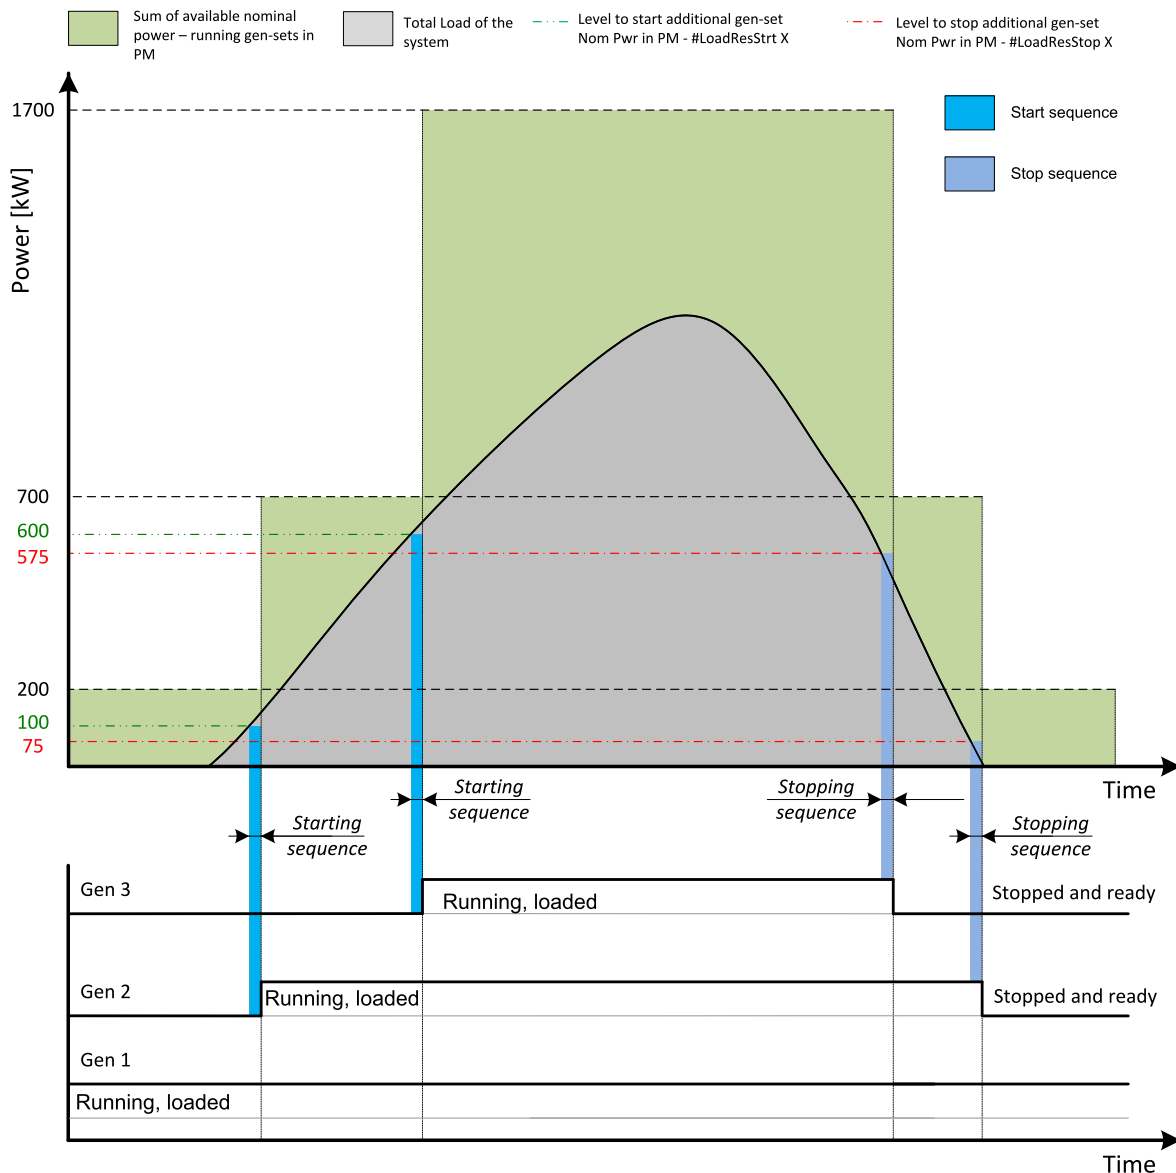


Image 5.19 Absolute power management example

As it is shown on both figures above, the additional gen-set is added once the actual load reserve is below the level given by the appropriate setpoint of load reserve. The additional gen-set is removed once the actual load reserve is above the level set by appropriate setpoint of load reserve.

The green dashed line depicts the value of load at which the additional gen-set is requested to start. This value of the load value is linked with the setpoint **#Starting Load Reserve 1 (page 230)** (or other selected reserve set) in following way:

Sum of nominal power for start - **#Starting Load Reserve 1 (page 230)** (or other selected reserve set) = value of load when additional gen-set requested to start (e.g.: 700 kW – 100 kW = 600 kW).

The red dashed line depicts the value of load at which the additional gen-set is requested to stop. This value of the load value is linked with the setpoint **#Stopping Load Reserve 1 (page 230)** (or other selected reserve set) in following way:

Sum of nominal power for stop - **#Stopping Load Reserve 1 (page 230)** (or other selected reserve set) = value of load when additional gen-set requested to stop (e.g.: 700 kW – 125 kW = 575 kW).

There are 2 sets of setpoints for starting and stopping gen-sets in absolute power management.

- ▶ **#Starting Load Reserve 1 (page 230) and #Stopping Load Reserve 1 (page 230)**
- ▶ **#Starting Load Reserve 2 (page 232) and #Stopping Load Reserve 2 (page 232)** considered if binary input **LOAD RES 2 ACTIVE (PAGE 473)** is activated

Note: All controllers cooperating together in Power management must have the same load reserve set selected.

Relative power management

The power management based on relative load reserves perfectly fits to those applications with such load portions connected to the group at once are much lower than the gen-set nominal power. This mode helps to achieve the maximal lifetime of the gen-sets, as they can be operated within optimal load range. The maximal size of the load connected at once depends on number of actually working gen-sets. The more gen-sets are connected to the bus bar the bigger load portion can be connected at once.

The relative power management guarantees that the engines are not continuously loaded more than to a certain level. This mode is active when **#Power Management Mode (page 228)** is set to REL [%] mode.

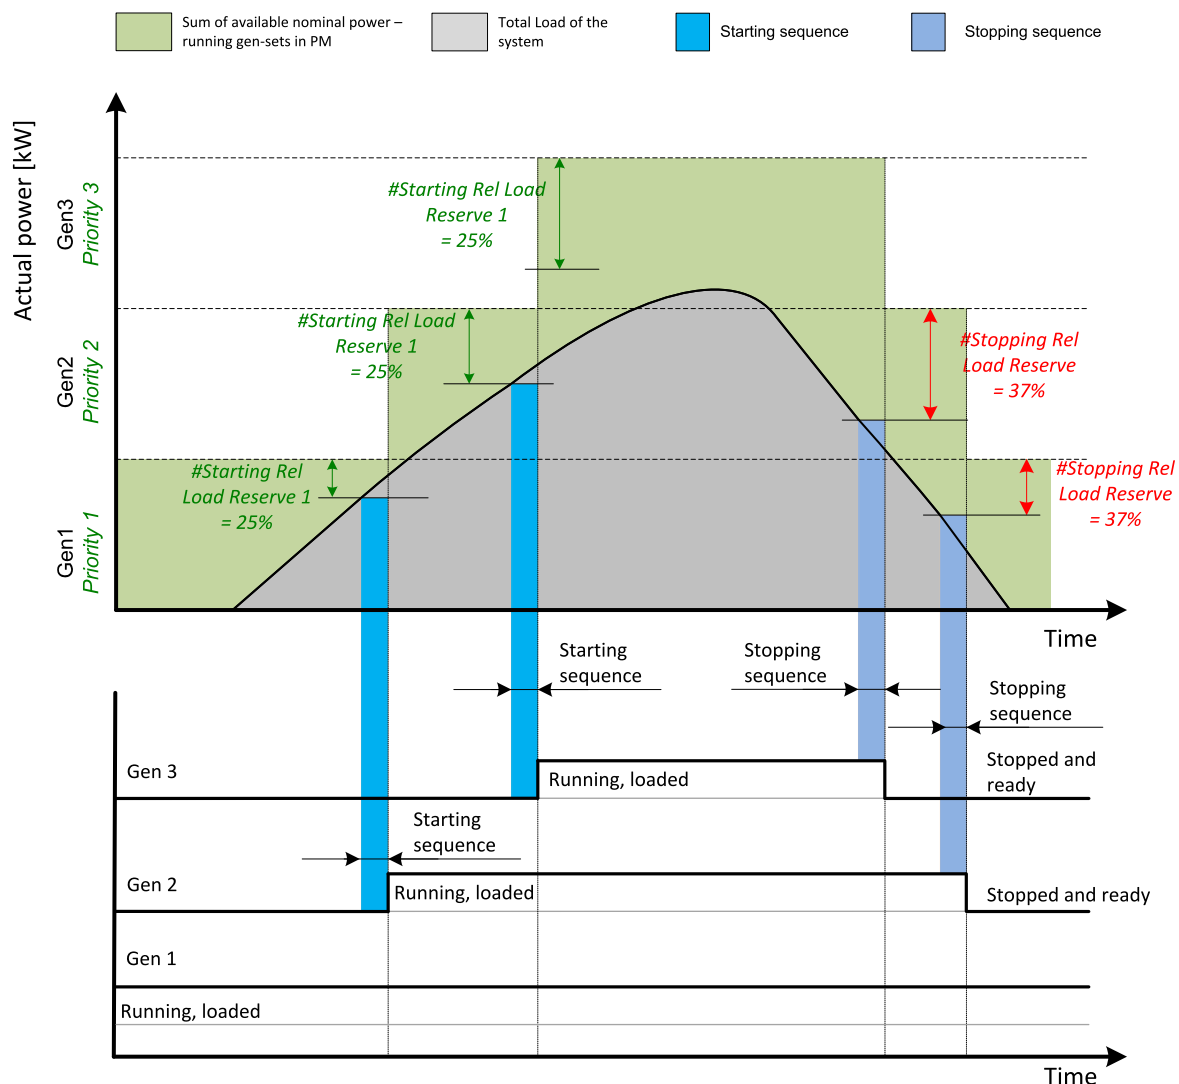


Image 5.20 Power management based on relative load reserve

Example: An example of relative power management is shown on the figure below. There are three gen-sets with following choice of setpoints:

Gen-set	Nominal power	Power management	#Power management mode	Priority	#Priority Auto Swap	#Starting Rel Load Reserve X	#Stopping Rel Load Reserve X
Gen-set #1	200 kW	ENABLED	REL (%)	1	DISABLED	35 %	40 %
Gen-set #2	500 kW	ENABLED	REL (%)	2	DISABLED	35 %	40 %
Gen-set #3	1 000 kW	ENABLED	REL (%)	3	DISABLED	35 %	40 %

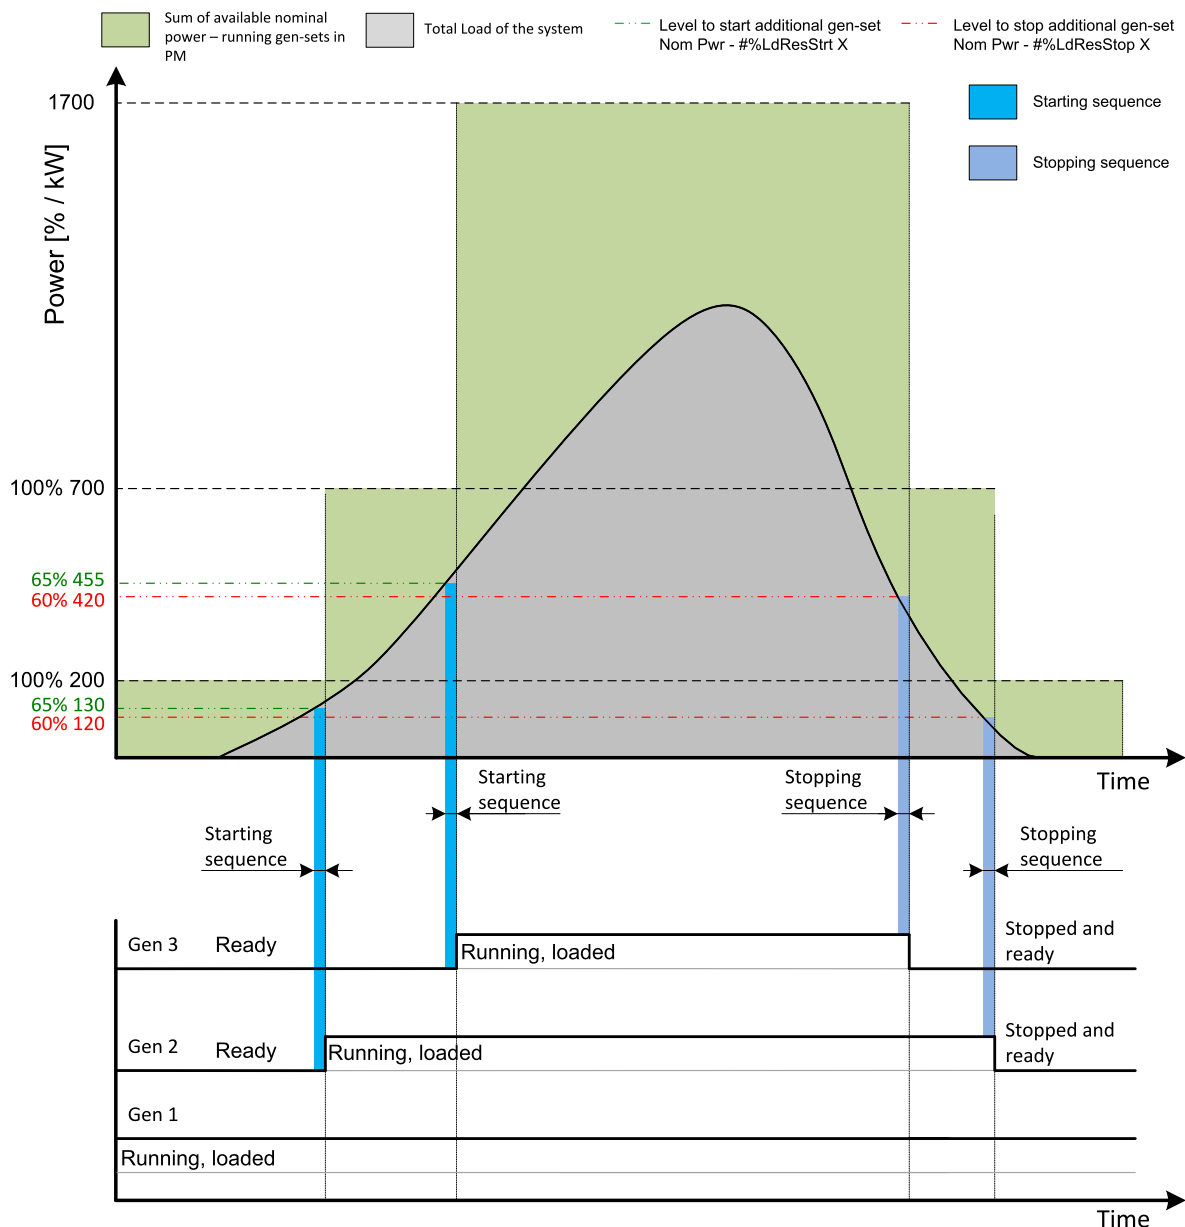


Image 5.21 Relative power management example

As it is shown on both figures above, the additional gen-set is added once the actual load reserve is below the level given by the appropriate setpoint of load reserve. The additional gen-set is removed once the actual load reserve is above the level set by appropriate setpoint of load reserve.

The green dashed line depicts the value of load at which the additional gen-set is requested to start. This value of the load value is linked with the setpoint **#Starting Rel Load Reserve 1 (page 231)** (or other selected reserve set) in following way:

$(100\% - \text{\#Starting Rel Load Reserve 1 (page 231) (or other selected reserve set)}) * \text{Sum of Nominal power} =$
 Value of load when additional gen-set requested to start in kW (in % of nominal power), e.g.: $(100\% - 35\%) * 700 \text{ kW} = 455 \text{ kW}$ (65 % of nominal power).

The red dashed line depicts the value of load at which the additional gen-set is requested to stop. This value of the load value is linked with the setpoint **#Stopping Rel Load Reserve 1 (page 231)** (or other selected reserve set) in following way:

$(100\% - \text{\#Stopping Rel Load Reserve 1 (page 231) (or other selected reserve set)}) * \text{Sum of Nominal power} =$
 Value of load when additional gen-set requested to stop in kW (in % of nominal power), e.g.: $(100\% - 40\%) * 700 \text{ kW} = 420 \text{ kW}$ (60 % of nominal power).

There are 2 sets of setpoint for starting and stopping gen-sets in relative power management.

- ▶ **#Starting Rel Load Reserve 1 (page 231)** and **#Stopping Rel Load Reserve 1 (page 231)**
- ▶ **#Starting Rel Load Reserve 2 (page 233)** and **#Stopping Rel Load Reserve 2 (page 233)** considered if binary input **LOAD RES 2 ACTIVE (PAGE 473)** is activated

Note: All controllers cooperating together in Power management must have the same load reserve set selected.

Priority auto swap

There is also the option of automatic priority selection. The controllers are sharing data concerning the running hours and all important information relevant to the actual load. Thanks to the Automatic priority swapping function the controllers choose the gen-set(s) to be running with consideration of their running hours and the actual load.

The running hours equalization function keeps a constant maximal difference of gen-set's running hours. The efficient function keeps running only the gen-sets with suitable nominal power to avoid inefficient fuel consumption or gen-set overload.

Note: The function sets the order of gen-sets by virtual values "engine priority".

Run hours equalization

The gen-sets engine priorities are automatically swapped to balance engine running hours. In other words, the controllers compare running hours of each gen-set and select gen-set(s) to run in order to maintain constant maximal difference of running hours. Up to 32 controllers are supported. This function is activated via setpoint **#Priority Auto Swap (page 229) = RUN HOURS**.

The value of running hours which is used in run hours equalization is calculated by following formula:

$$\text{RHE} = \text{Running Hours (page 424)} - \text{Run Hours Base (page 236)}$$

RHE is considered value for running hours equalization, **Running Hours (page 424)** is a cumulative sum of run hours available in statistic values of the controller, **Run Hours Base (page 236)** is a setpoint. This setpoint may be used in the case of gen-sets with different runs hours are intended to be set at the same initial point (e.g. a new gen-set and a used gen-set after retrofit maintenance inspection).

The Running hours equalization function compares RHE value of each controller in the group. Once the difference between RHE of individual controllers is higher than **#Run Hours Max Difference (page 236)** (i.e. **#Run Hours Max Difference (page 236) + 1**), the gen-set(s) with the lowest RHE is/are started.

Example: The system structure and its settings is shown on the figure below.

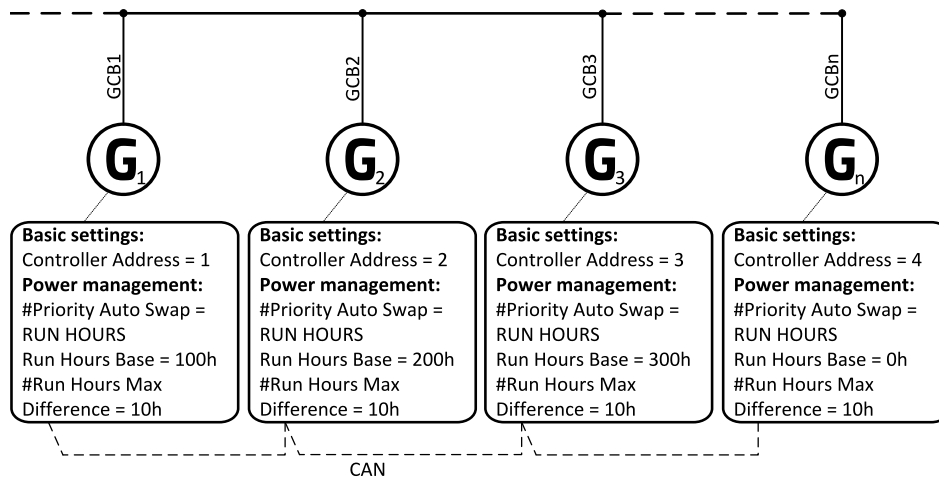


Image 5.22 Example of the system

3 cases are considered:

- ▶ Case #1: 2 gen-gets available
- ▶ Case #2: 3 gen-gets available with same initial RHE.
- ▶ Case #3: 3 gen-gets available with different initial RHE.

Case #1:

- ▶ Gen-set 1 running hours = 250 -> running hours considered in RHE = 100 (150 - **Run Hours Base (page 236)**)
- ▶ Gen-set 2 running hours = 450 -> running hours considered in RHE = 200 (250 - **Run Hours Base (page 236)**)

Both gen-sets have the same nominal power of 700 kW. Originally, priority of gen-sets was G1 = 2, G2 = 1. Load demand in this example is constant and it is 500 kW (i.e. only one engine is running at any time). In this case, the controllers set the engine priority of the gen-set 1 to 1 because it has the lowest considered RHE and the difference between RHE2 (i.e. considered RHE of gen-set 2) and RHE1 is higher than **#Run Hours Max Difference (page 236)** that is set to 10h.

	Run hours	#RunHoursBase	RHE
Gen-set #1	250	150	100
Gen-set #2	450	250	200

The gen-set 1 runs for 100 hours to equalize the RHE of both gen-sets. The gen-set 1 keeps running until the difference between RHE1 and RHE2 exceeds **#Run Hours Max Difference (page 236)** (i.e. 10h). The gen-set 1 runs $100 + \text{\#Run Hours Max Difference (page 236)} + 1 = 100 + 10 + 1 = 111$ hours. After 111 hours the gen-sets 2 has the lowest RHE and the difference between RHE1 and RHE2 is higher than **#Run Hours Max Difference (page 236)**. The gen-set 2 runs 11 hours to equalize the RHE of both gen-sets and then additional **#Run Hours Max Difference (page 236) + 1** hours (i.e. $11 + 10 + 1 = 22$ hours). The evolution of RHE1 and RHE2 is shown on the figure below.

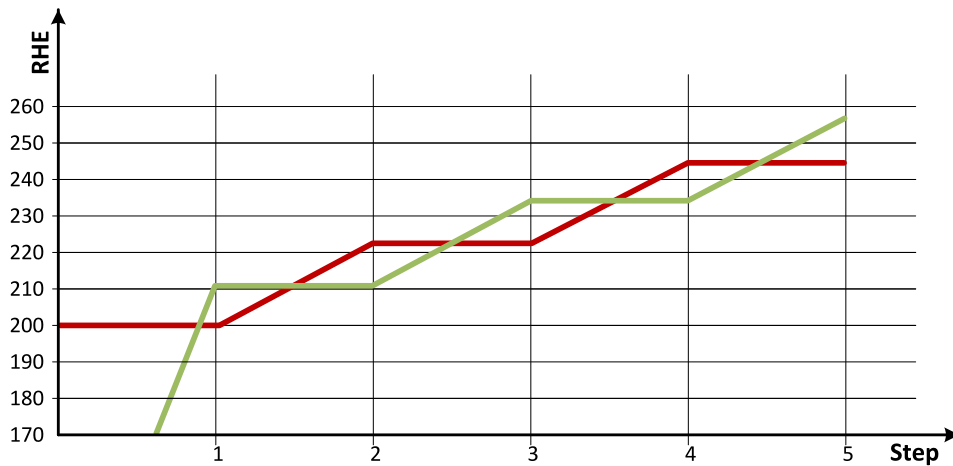


Image 5.23 Run hours equalization - case #1

Step	0	1	2	3	4	5
RHE1	100	211	211	233	233	255
RHE2	200	200	222	222	244	244
Run G1 (Δ RHE1)	0	111	0	22	0	22
Run G2 (Δ RHE2)	0	0	22	0	22	0

From the example of the case #1, it can be concluded that the gen-sets are swapped after the duration determined by following formula:

SwapTime = Second lowest considered running hours – Current lowest considered running hours + #Run Hours Max Difference (page 236) + 1

Case #2:

- ▶ Gen-set 1 running hours = 0 -> running hours considered in RHE = 0 (0-RunHoursBase)
- ▶ Gen-set 2 running hours = 0 -> running hours considered in RHE = 0 (0-RunHoursBase)
- ▶ Gen-set 3 running hours = 0 -> running hours considered in RHE = 0 (0-RunHoursBase)

Each gen-set has the same RHE = 0 h. By applying the SwapTime formula, we get the run time of gen-set 1 before next swapping:

$$\text{SwapTimeG1} = 0 - 0 + 10 + 1 = 11$$

Similar way, we get the run time of gen-set 2 before next swapping:

$$\text{SwapTimeG2} = 11 - 11 + 10 + 1 = 11$$

Finally, we get the run time of gen-set 3 before next swapping:

$$\text{SwapTimeG2} = 11 - 0 + 10 + 1 = 22$$

Please refer to figure below to understand the evolution of RHE of gen-sets in this particular case.

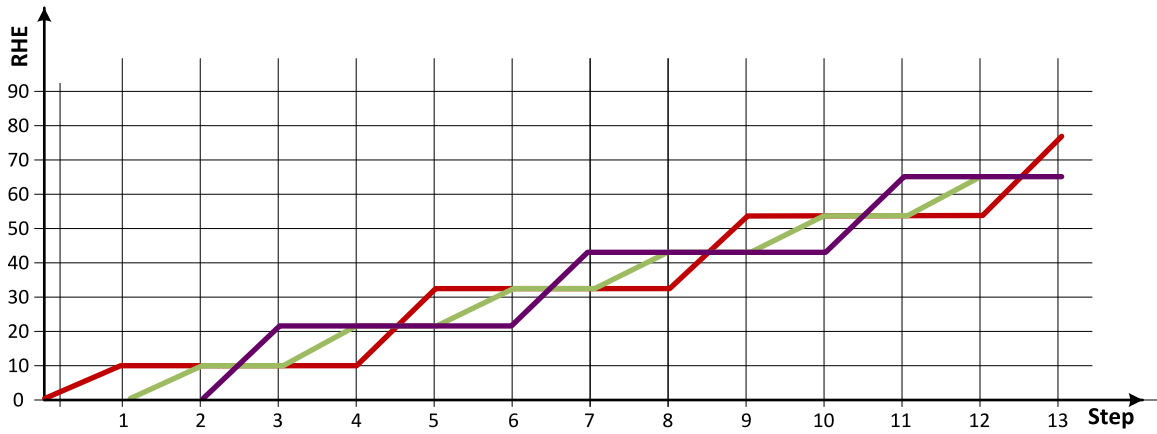


Image 5.24 Run hours equalization - case #2

step	0	1	2	3	4	5	6	7	8	9	10	11	12	13
RHE1	0	11	11	11	11	33	33	33	33	55	55	55	55	77
RHE2	0	0	11	11	22	22	33	33	44	44	55	55	66	66
RHE3	0	0	0	22	22	22	22	44	44	44	44	66	66	66
Run G1 (Δ RHE1)	0	11	0	0	0	22	0	0	0	22	0	0	0	22
Run G2 (Δ RHE2)	0	0	11	0	11	0	11	0	11	0	11	0	11	0
Run G3 (Δ RHE3)	0	0	0	22	0	0	0	22	0	0	0	22	0	0

Case #3:

- ▶ Gen-set 1 running hours = 250 -> running hours considered in RHE = 100 (150-RunHoursBase)
- ▶ Gen-set 2 running hours = 450 -> running hours considered in RHE = 200 (250-RunHoursBase)
- ▶ Gen-set 3 running hours = 750 -> running hours considered in RHE = 250 (500-RunHoursBase)

The gen-set 1 has the lowest RHE1 = 100 h. By applying the SwapTime formula, we get the run time of gen-set 2 before next swapping:

$$\text{SwapTimeG1} = 200 - 100 + 10 + 1 = 111$$

Till the step 5, the evolution of the gen-set swapping is the same as in the case #1, just gen-set 1 and gen-set 2 involve. In the step 6 the gen-set 2 can run only 17 hours (previously 22 hours) because the gen-set 3 involves. The evolution of RHE1, RHE2 and RHE3 is shown on the figure below.

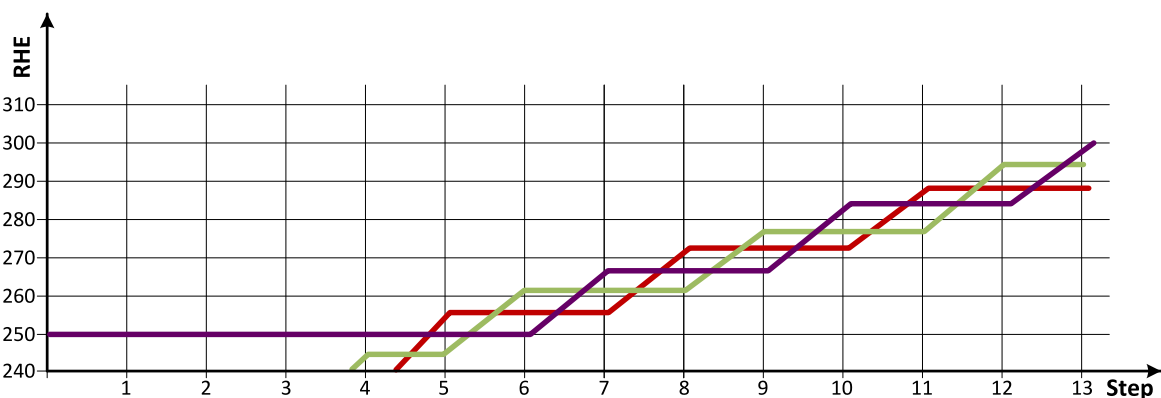


Image 5.25 Run hours equalization - case #3

step	0	1	2	3	4	5	6	7	8	9	10	11	12	13
RHE1	100	211	211	232	233	255	255	255	272	272	272	288	288	288
RHE2	200	200	222	222	244	244	261	261	261	277	277	277	294	294
RHE3	250	250	250	250	250	250	250	266	266	266	283	283	283	299
Run G1 (ΔRHE1)	0	111	0	22	0	22	0	0	17	0	0	16	0	0
Run G2 (ΔRHE2)	0	0	22	0	22	0	17	0	0	16	0	0	17	0
Run G3 (ΔRHE3)	0	0	0	0	0	0	0	16	0	0	17	0	0	16

Note: Setting **#Run Hours Max Difference (page 236)** = 5 does not mean that gen-sets swap every 5 hours. The Swap time is determined by the formula stated above. Please read the entire chapter *Running hours equalization* for better understanding.

Note: In the case **#Run Hours Max Difference (page 236)** is set to 0 and all gen-set in the group are at the same initial point (RHE are equal), the gen-set swapping happens every hour.

Efficiency

The gen-sets engine priorities are automatically swapped to best fit to the actual load demand (load demand swap - LDS). Also engine running hours are taken to the calculation (run hours equalization - RHE). This function is activated via setpoint **#Priority Auto Swap (page 229)** = Efficiency.

Algorithm of function:

- ▶ In the first step, the gen-sets are sorted according to their nominal power.
- ▶ In the second step, the gen-sets with the same nominal power are sorted according to their RHE
- ▶ The gen-set(s) with nominal power which fits the most actual load demand are chosen. From those with same nominal power, the gen-set(s) with lowest RHE are chosen. Selection formula:
 - **#Power Management Mode (page 228)** = ABS (kW)
 - Nominal power of gen-set > actual load demand + **#Starting Load Reserve 1 (page 230)**
 - **#Power Management Mode (page 228)** = REL (%)
 - Nominal power of gen-set > (actual load demand × 100)/(100 - **#Starting Rel Load Reserve 1 (page 231)**)
- ▶ If two or more gen-sets are available for taking over the load always the one with the lowest CAN address is chosen.
- ▶ If load demand is higher than nominal power of the biggest gen-set, this one is fixed and the whole process repeats from point the third bullet.

Example: The system structure and its settings is shown on the figure below.

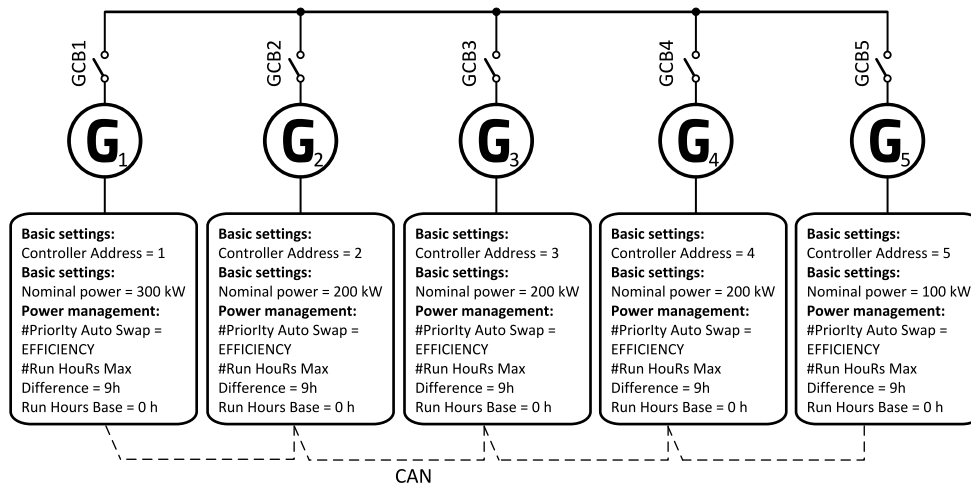


Image 5.26 Example of the system

Following table provide an example of gen-set selection in function of system load evolution. The table is an example of Efficiency priority optimization function (**#Power Management Mode (page 228) = ABS (kW)** and **#Starting Load Reserve 1 (page 230) = 20 kW**).

System Load [kW]	Running gen-sets		Description	Total Running power within PM [kW]	Relative load of gen-sets [%]
40	5			100	40
60	5			100	60
80	5 2 [0h]	2 start 5 stop	LDS Swap	300	26
100	2 [10h]			200	50
120	2 [20h]			200	60
120	2 [30h] 3 [10h]	3 start 2 stop	RHE Swap	400	30
120	3 [20h]			200	60
140	3 [30h]			200	70
180	3 [40h] 1	1 start 3 stop	LDS Swap	500	36
200	1			300	67
240	1			300	80
280	1 5	5 start	Gen#5 joins (LDS)	400	70
340	1 5			400	85
380	1 5 4 [20h]	4 start 5 stop	LDS + RHE Swap	600	63
400	1 4			500	80

System Load [kW]	Running gen-sets	Description	Total Running power within PM [kW]	Relative load of gen-sets [%]
440	1 4		500	88
480	1 4 5	5 start Gen#5 joins (LDS)	600	80
540	1 4 5		600	90
580	1 4 5 2 [30h]	2 start 5 stop LDS Swap	800	73
600	1 4 2		700	86
640	1 4 2		700	91
680	1 4 2 5	5 start Gen#5 joins (LDS)	800	85
740	1 4 2 5		800	93
780	1 4 2 5 3 [40h]	3 start 5 stop LDS Swap	1000	78
800	1 4 2 3		900	89

System Load [kW]	Running gen-sets	Description	Total Running power within PM [kW]	Relative load of gen-sets [%]
840	1 4 2 3		900	93
880	1 4 2 3 5	5 start Gen#5 joins (LDS)	1000	88
940	1 4 2 3 5		1000	94

Minimal running power

Minimum Running Power function is used to adjust a minimum value of the sum of nominal power of all running gen-sets. If the function is active, then the gen-sets would not be stopped, although the reserve for stop is fulfilled. Function is activated via logical binary input **Min Run Power Active** (page 476).

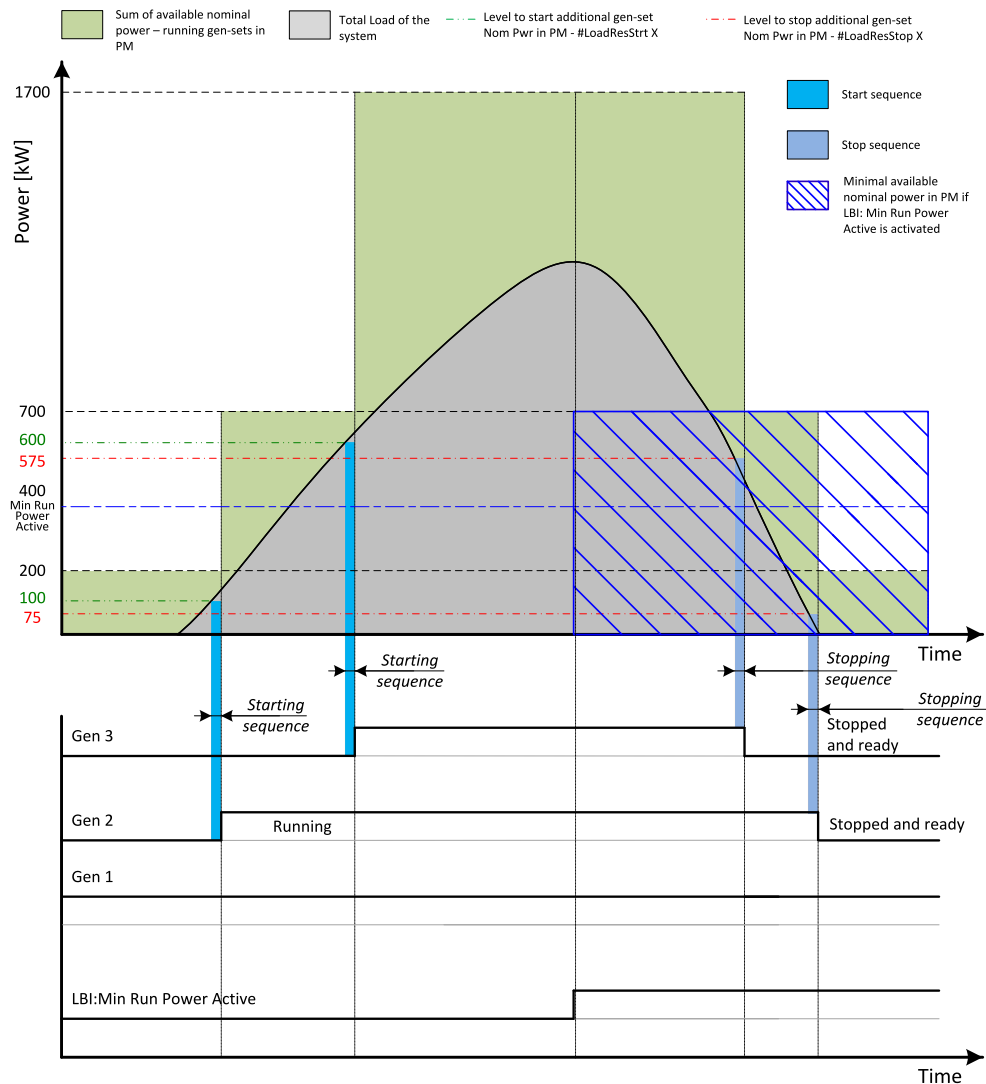


Image 5.27 Minimal running power

Setpoint **#Min Run Power** (page 234) is adjusted to 400 kW. Once the **MIN RUN POWER ACTIVE** (PAGE 476) is activated, the available nominal running power has to be equal or higher to 400 kW. Even if the load reserve is big enough to stop the gen-set #2 (nominal power 500 kW), the gen-set keeps running as at least 400 kW has to be available. The gen-set#1 (nominal power 200 kW) is not enough.

5.4.6 Control groups

The physical group of the gen-sets (i.e. the site) can be separated into smaller logical groups, which can work independently even if they are interconnected by the CAN2 bus. The logical groups are intended to reflect the real topology of the site when the site is divided into smaller gen-set groups separated from each other by bus-tie breakers. If the bus-tie breakers are closed the sub-groups have to work as one large group and if the bus-tie breakers are open, the sub-groups have to work independently.

- ▶ The group which the particular controller belongs to is adjusted by the setpoint **Control Group** (page 237). Use the default setting 1 with all controllers, if there is no bus-tie breaker.
- ▶ The information which groups are currently linked together is being distributed via the CAN. Each controller can provide information about one BTB breaker. The breaker position is detected by the input function *GroupLink* (i.e. this input is to be connected to the breaker feedback).

- ▶ The two groups which are connected together by the BTB, are defined with parameters **Group Link L** (page 238) and **Group Link R** (page 238).
- ▶ Controller sends via CAN2 bus information that controllers from groups *Group Link L* and *Group Link R* are linked together, if the *Group link* function (signal associated with the function) is active. It sends information that the groups are separated, if the *Group link* function is not active.

Note: The "group link" function is independent on the group, where the controller itself belongs to. The controller can provide "group link" information about any two groups and it may not belong to one of the groups.

- ▶ All gensets/controllers in linked groups cooperate with each other and perform load sharing, VAR sharing and power management together. These functionalities are performed independently in each group, when the groups are separated.

Example:

4 gen-sets separated by a BTB breaker into two groups of 2. The BTB position is detected by the controllers 2 and 3. The reason, why there are 2 controllers used for detection of the BTB position, is to have a backup source of the group link information, if the primary source (controller) is switched off.

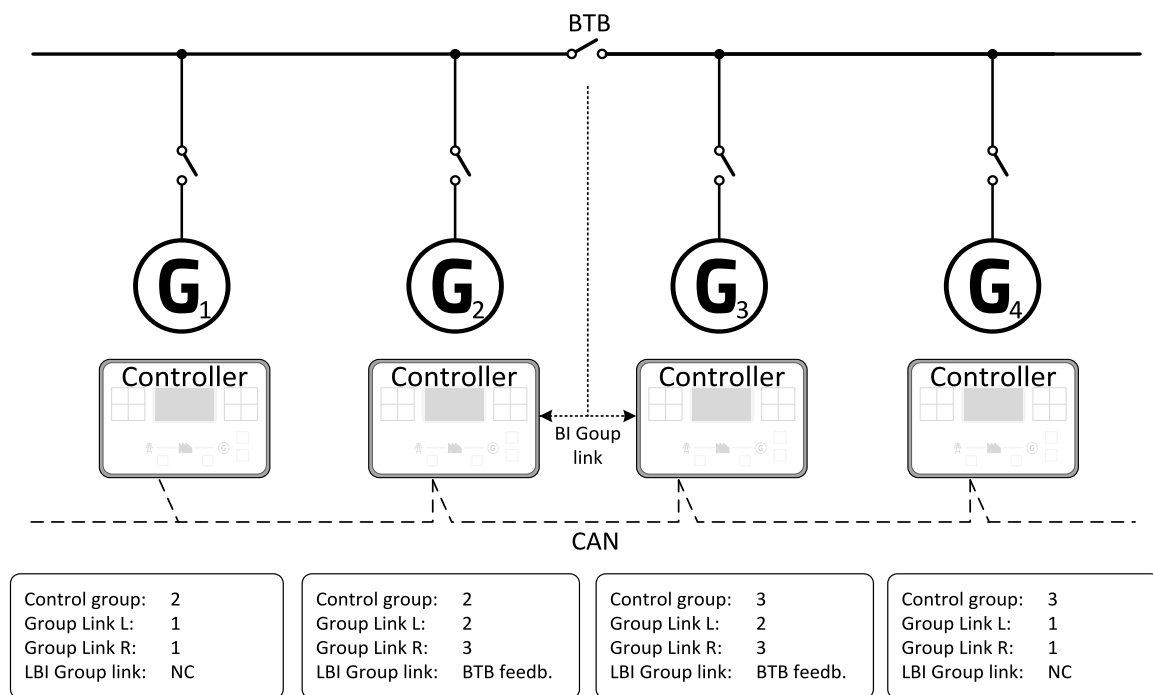


Image 5.28 Example of control groups

Once the BTB breaker is closed, the control groups 2 and 3 become new group 2+3. Power management, load sharing and VAR sharing are performed within newly established group 2+3. Merging of the groups may result with a genset stopping, if power management evaluates that available Actual Reserve is high enough to stop a genset.

5.4.7 Distributed power management signals

Sharing of multiple Logical Binary Input (LBI) functions is critical for power management system operation, because several power management functionality require simultaneous activation of LBI functions in controllers, which are involved in power management operation. It can be done either automatically using CAN2 bus link between controllers or using dedicated LBI functions.

These LBI functions are shared automatically:


▶ System Start/Stop

Note: IntelliMains controller activates the System Start/Stop signal in case of all system activations (e.g. AMF, TEST Mode, ...)

- ▶ Min Run Power Act
- ▶ Load Res 2 Active
- ▶ MCB Feedback

These rules applies to the automatic sharing of the selected signals:


1. LBI state is automatically shared via CAN2 bus, if corresponding LBI function is configured in a controller.

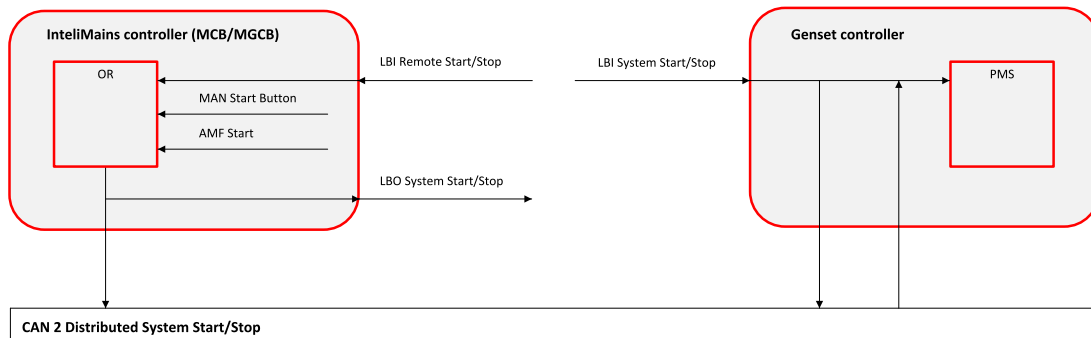

Example: Logical input Remote Start/Stop is configured with a controller. State of the signal is automatically transmitted to other controllers via CAN2 bus as System Start/Stop.


2. LBI state received from CAN2 bus is automatically used, if corresponding LBI function is not configured in a controller.

Example: LBI Remote Start/Stop is not configured with a controller, but automatically shared System Start/Stop is received from CAN2 bus. Controller follows state of the shared LBI signal then.

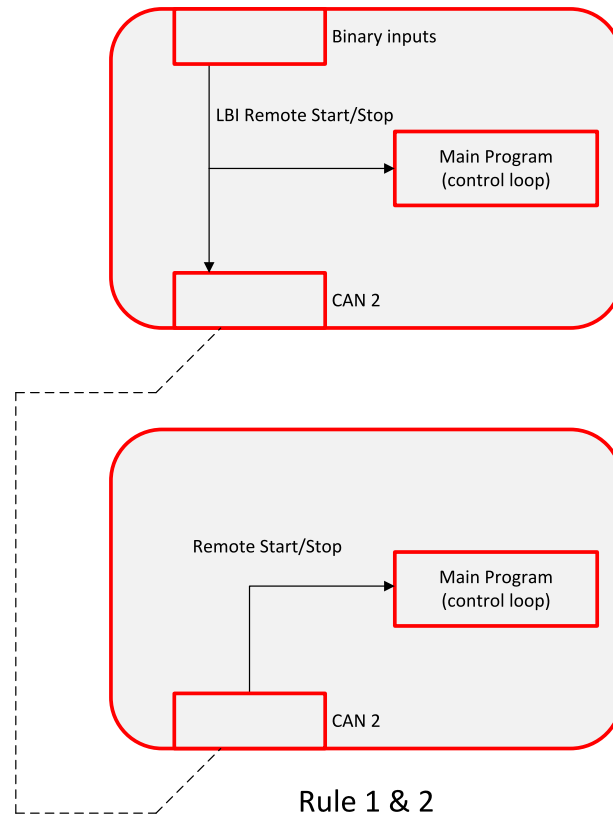


3. LBI state received from CAN2 bus is not used, if corresponding LBI function is configured in a controller.

Example: LBI Remote Start/Stop is configured with a controller. Controller follows only state of signal linked with the Remote Start/Stop function. The function is not activated by a shared System Start/Stop signal.

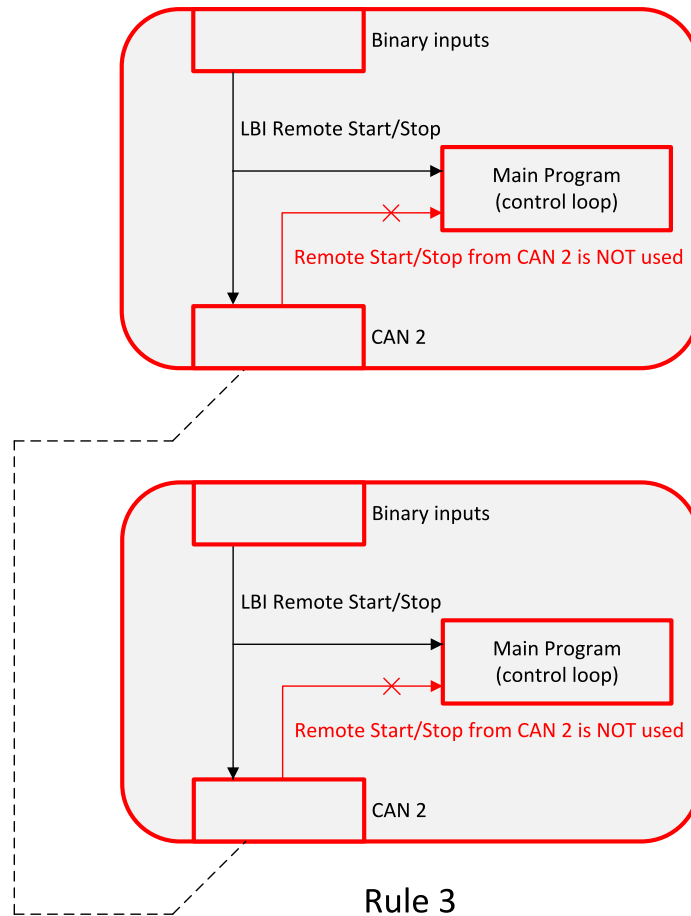

4. LBI function state transmitted via CAN2 bus is used only by controllers, which are in the same group as controller, which is source of the shared signal. Signal coming from controller in a different group is accepted only if the “source controller” group is linked with the “receiving controller” group.

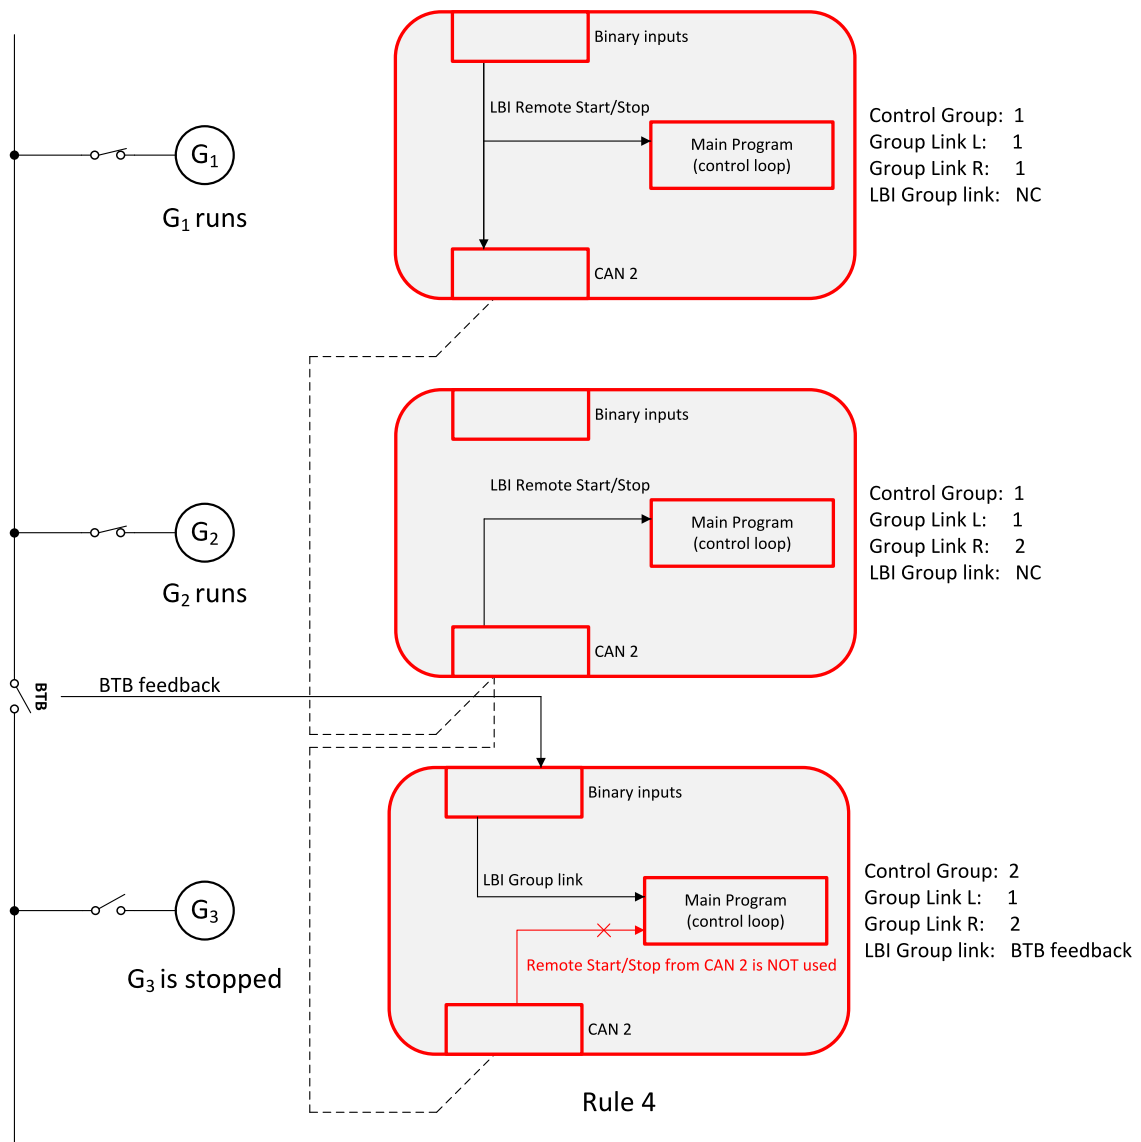

- LBI function can be configured with multiple controllers, which transmit through CAN2 bus state of the function. OR function applies to the function evaluation in controllers, in which the function is not configured. It means that function is activated by shared signal coming from any controller (rule 4. applies).

5.4.8 Regulation loops

Regulation loops overview

Regulation loops overview

Loop type	Related applications	Related setpoints
Frequency	MINT, SPtM, MCB, MGCB	Frequency Gain (page 238), Frequency Int (page 239)
Load	MINT, SPtM, MCB, MGCB	Load Gain (page 239), Load Int (page 240)
Voltage	MINT, SPtM, MCB, MGCB	Voltage Gain (page 243), Voltage Int (page 244)
PF control	MINT, SPtM, MCB, MGCB	PF Gain (page 244), PF Int (page 244)
Angle regulation	MINT, SPtM, MCB, MGCB	Angle Gain (page 239)

Speed, Frequency, Load sharing, Load regulation loops have one common output = Speed request. The value of this output is always composed from the contribution of each of the regulation loops.

Voltage, PF, VAr sharing have one common output = Voltage request. The value of this output is always composed from the contribution of each of the regulation loop.

Note: All regulation loops are PID, but only PI components are visible as setpoints.

MCB regulation loop

Loop type	Description
Frequency	The frequency regulation loop gets active when bus voltage and mains voltage is present. The loop is deactivated when the system start/stop is deactivated. Loop is not active in parallel operation. In parallel operation load control loop is used.
Load	The load regulation loop is active when gen-set is running in parallel with mains and during load transfers from mains to bus or vice versa.
Voltage	The voltage regulation loop gets active when bus voltage and mains voltage is present. The loop is deactivated when the system start/stop is deactivated. Loop is not active in parallel operation. In parallel operation PF control loop is used.
PF control	The PF control loop is active when gen-set is running in parallel with mains and during load transfers from mains to bus or vice versa.
Angle regulation	The differential angle control loop is active during the synchronization when phase match type of synchronization is used.

Adjustment of regulation loops

The regulation loops have two adjustable factors: P-factor and I-factor (except angle regulation loop, which has P-factor only). The P-factor (gain) influences the stability and overshoot of the regulation loop and the I-factor (int) influences the steady-state error as well as the settling time. See the picture below for typical responses of a PI regulation loop.

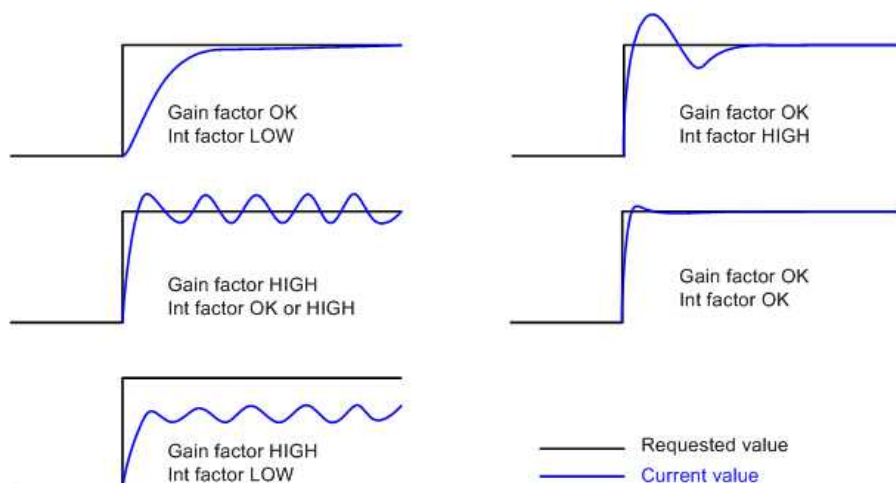


Image 5.29 Typical responses of PI regulator

For manual tuning of a control loop use following method:

- ▶ Set both the I-factor and P-factor to 0.
- ▶ Increase the P-factor slightly until the system starts to oscillate.

- ▶ Adjust the P-factor back to approx. one half of the value where the oscillations started.
- ▶ Increase the I-factor slightly to achieve optimal resulting response.

IMPORTANT: Be ready to press emergency stop button in case the regulation loop would start to behave unacceptable while it is being adjusted.

5.4.9 Frequency control

The frequency control output is used to control the frequency of the engines presented on the bus. The frequency regulation, load regulation and load sharing are realized through the Loadsharing Output. The frequency request is internal value of the regulator. This value is transformed to range 0...100% of the Loadsharing Output which comes out of the controller via communication line. Gen-set controller accept this value and transform this to his speed control output.

Load control adjustment

Synchronization adjustment

- ▶ Start the system in MAN Mode.
- ▶ In case of MCB application follow the synchronization procedure over the GCB according to rules described in particular gen-set guide.
- ▶ To start the synchronization press MGCB ON/OFF button. MGCB LED starts to flash to indicate synchronization. To stop synchronization press again MGCB ON/OFF .
- ▶ Adjust **Frequency Gain (page 238)** to unstable speed control and decrease value by 30 % to insure stable performance.
- ▶ Adjust **Frequency Int (page 239)** to stable (fast and smooth) slip control. Synchroscope movement on the controller measure screen should slow down and stop (in any position, because **Angle Gain (page 239)** control is off).
- ▶ Set **Angle Gain (page 239)**. Synchroscope on the controller measure screen should move slowly and stop in "up" position. Set **Angle Gain (page 239)** to unstable value (synchroscope swings) and decrease value by 30 % to insure stable performance.

Load control adjustment

IMPORTANT: Prior to Load control adjustment, the Voltage/PF control has to be adjusted.

Load control loop is active in parallel to mains mode only (MCB feedback closed). Switch off other engines while adjusting.

1. Set **#System BaseLoad (page 198)** setpoint to 30 % of one gen-set.
2. Set **Load Gain (page 239)** to the same value as **Angle Gain (page 239)**. Set **Load Int (page 240)** to zero.
3. Start the system in MAN Mode, press MGCB ON/OFF button to synchronize and close gen-set to mains.
4. When MGCB is closed, gen-set load slowly increases to **#System BaseLoad (page 198)** value. Check that gen-set power is positive (CT polarity).
5. Increase **Load Int (page 240)** to unstable load control and decrease value by 30 % to insure stable performance. When **Load Int (page 240)** factor is set to zero gen-set load can differ from required **#System BaseLoad (page 198)**.
6. To adjust and optimize **Load Int (page 240)** change **#System BaseLoad (page 198)** several times between 30 and 70 % of **Nominal Mains Import (page 203)**. Usually setting **Load Int (page 240)** to 100 % gives optimal performance.

5.4.10 Voltage PF control

The voltage control output is used to control the voltage or the power factor of the system. The voltage regulation, PF regulation and VAR sharing are realized through the voltage control. The voltage request is internal value of the regulator. This value is transformed to range 0...100% of the Varsharing Output which comes out of the controller via communication line. Gen-set controller accept this value and transform this to his AVR control output.

Voltage/PF control adjustment

Voltage adjustment

- ▶ Set **Voltage Gain (page 243)**, **Voltage Int (page 244)** to zero.
- ▶ Start the gen-set in MAN Mode to without load.
- ▶ When gen-set is running unloaded (bus voltage is present) increase carefully **Voltage Gain (page 243)** to unstable point and then decrease value by 30 % to insure stable performance.
- ▶ Adjust **Voltage Int (page 244)** (usually setting to 100% gives optimal performance).

PF adjustment

Power factor control loop is active in parallel to mains mode only (MCB feedback closed).

- ▶ Set the same values to **PF Gain (page 244)** and **PF Int (page 244)** as in the chapter **Voltage adjustment (page 115)** for parameters **Voltage Gain (page 243)** and **Voltage Int (page 244)**.
- ▶ Set **#System BaseLoad (page 198)** = 30 % of **Nominal Mains Import (page 203)** and **#System Power Factor (page 198)** = 1.0.
- ▶ Start and synchronize the system in MAN Mode by pressing MGCB ON/OFF (in case of MCB application press the GCB button on gen-set controller).
- ▶ When running in parallel to mains loaded on 30%, increase slowly **PF Gain (page 244)** to unstable point and then decrease the value by 30 % to insure stable performance.
- ▶ Adjust **PF Int (page 244)** (usually setting to 100% gives optimal performance).

5.4.11 Electric state machine

Init	Initialization mode of controller. The application is not activated.
BrksOff	MCB, MGCB opened
IslOper	Island operation ■ Example: MCB is opened, (M)GCB is closed
MainsOper	Mains is present and all its values are within limits. ■ Example: MCB is closed, (M)GCB is opened
ParalOper	Gen-set is in parallel with mains (MCB is closed, (M)GCB is closed)
RevSync	Mains is synchronized to presented bus (MCB is opened, (M)GCB closed)
Synchro	Gen-set is synchronizing (MCB is closed, GCB is opened)
MainsFlt	Mains fails
MainsRet	Mains recover

ValidFit	State activated after Emergency start del
MCB Off	Mains breaker is opened
EmergMan	Controller mode, where the LBI Emergency manual is activated. All control functions are stopped

5.4.12 Alarm management

The controller evaluates two levels of alarms. Level 1 – yellow alarm – is a pre-critical alarm that is only informative and does not take any action regarding gen-set control. Level 2 – red alarm – represents a critical situation, where an action must be taken to prevent damage of the gen-set or technology.

- ▶ One alarm of any type can be assigned to each binary input.
- ▶ Two alarms (one yellow and one red type) can be assigned to each analog input.
- ▶ There are also **Built-in alarms (page 119)** with fixed alarm types.
- ▶ Each alarm is written to the **Alarmlist (page 119)**.
- ▶ Each alarm causes a record to be written into the history log.
- ▶ Each alarm activates the Alarm and Horn output.
- ▶ Each alarm can cause sending of a SMS message or an email.

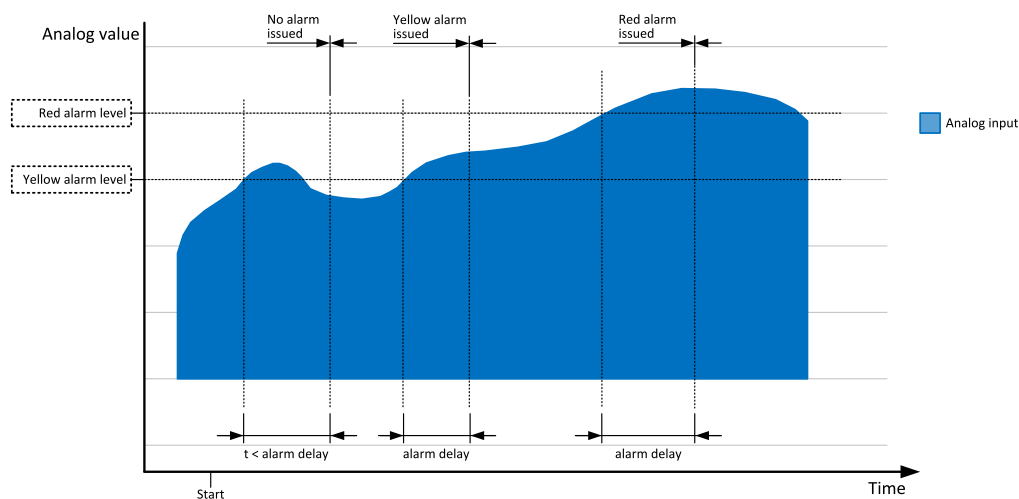


Image 5.30 Analog input alarm evaluation principle

Alarm handling

If an alarm is being evaluated and the appropriate alarm condition is fulfilled, the delay of evaluation will start to run. The delay is adjustable by a setpoint (in the case of built-in alarms, analog input alarms) or is adjusted via configuration window in IntelliConfig (in the case of binary input alarms). If the conditions persist, the alarm will activate. The alarm will not activate if the condition is dismissed while the delay is still running.

After pressing the Fault reset button or activating the binary input **FAULT RESET BUTTON (PAGE 471)**, all active alarms change to confirmed state. Confirmed alarms will disappear from the Alarmlist as soon as the respective condition dismisses. If the condition is dismissed before acknowledging the alarm, the alarm will remain in the Alarmlist as Inactive.

Alarm states

An alarm can have following states:

- ▶ Active alarm: the alarm condition persists, alarm delay has elapsed.
- ▶ Inactive alarm: the alarm condition has disappeared, but the alarm has not been confirmed.
- ▶ Confirmed alarm: the alarm condition persists, but the alarm has already been confirmed.



Image 5.31 Alarm List

Alarm types - Level 1

The level 1 alarm indicates that a value or parameter is out of normal limits, but has still not reached critical level. This alarm does not cause any actions regarding the gen-set control.

Warning (Wrn)

The alarm appears in the Alarmlist and is recorded into the history log. Activates the output **AL COMMON WRN (PAGE 485)** as well as the standard alarm outputs (**HORN (PAGE 503)** and **ALARM (PAGE 487)**).

Alarm indication (AL Indic)

The event is only indicated in the Alarmlist. It disappears from the alarmlist automatically as soon as the cause disappears. Standard alarm outputs (**HORN (PAGE 503)** and **ALARM (PAGE 487)**) are not activated.

History record only (HistRecOnI)

The event is recorded into the history. Standard alarm outputs (**HORN (PAGE 503)** and **ALARM (PAGE 487)**) are not activated.

Alarm types - Level 2

The level 2 level alarm indicates that a critical level of the respective value or parameter has been reached.

Note: *It is not possible to start the engine if any red level protection is active or not confirmed.*

IMPORTANT: The gen-set can start by itself after acknowledging the alarms if there is no longer an active red alarm and the controller is in AUTO or TEST mode!

Mains Protect

The alarm appears in the alarmlist and is recorded into the history log. It causes, that the controller react as in standard mains fail situation. MCB breaker is open according the setting of **MCB Opens On (page 223)**. The automatic mains failure function is activated while the protection is active. There can be two types of mains protection.

- ▶ Mains protect (MP) - this protection is not visible in alarmlist
- ▶ Mains protect with Reset (MPR) - this protection is visible in alarmlist and must be confirmed to deactivate the protection.

Activates the output **AL COMMON MP (PAGE 484)** respective **AL COMMON MPR (PAGE 485)** as well as the standard alarm outputs (**HORN (PAGE 503)** and **ALARM (PAGE 487)**).

Sensor fail detection (FLS)

If the measured resistance on an analog input exceeds the valid range, a sensor fail will be detected and a sensor fail message will appear in the **Alarmlist (page 119)**. The valid range is defined by the most-left (RL) and most-right (RH) points of the sensor characteristic $\pm 12.5\%$ from RH-RL.

Note: Sometimes there can be problem with lower limit of valid range which can be counted as negative number. In this case the lower limit is set as one half of the RL point of the sensor curve characteristic.

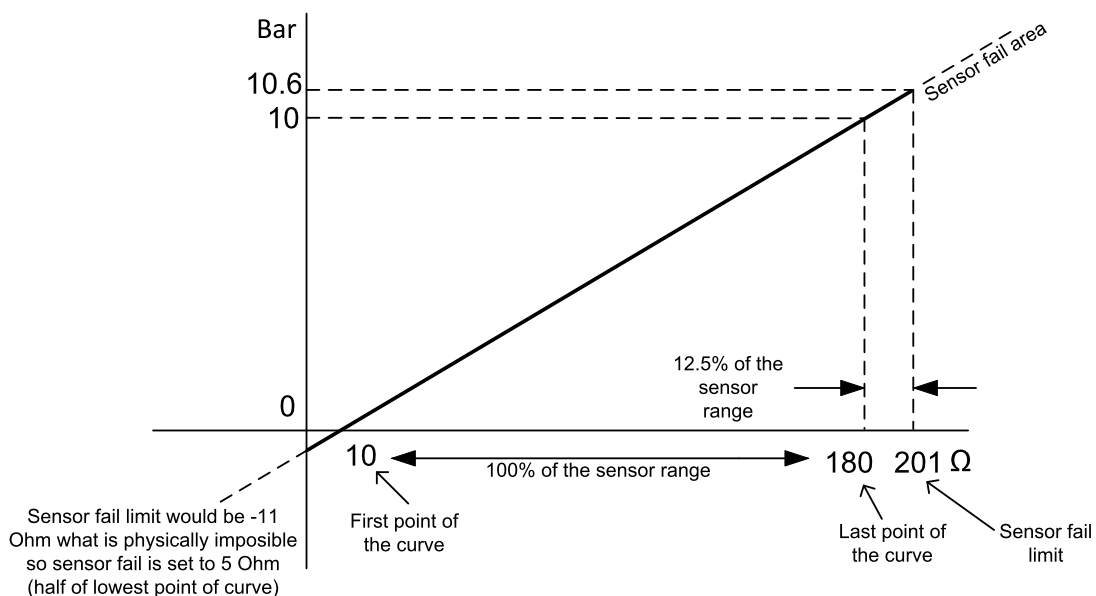


Image 5.32 Sensor fail detection principle

Remote alarm messaging

If communication plug-in module is connected to the controller, the controller can send SMS messages and emails at the moment when a new alarm appears in the **Alarmlist (page 119)** or new event is written in **History log (page 121)**. The message will contain a copy of the **Alarmlist (page 119)** or reasons from **History log (page 121)**. To enable this function, adjust setpoints **Event Message (page 327)**, **Wrn Message (page 328)**, **BOC Message (page 328)** and **Sd Messages (page 328)** to ON. Also enter a valid GSM phone number or email address to the setpoints **Telephone Number 1 (page 322)**, **Telephone Number 2 (page 322)**, **Telephone Number 3 (page 323)**, **Telephone Number 4 (page 323)**, **Email Address 1 (page 325)** **Email Address 2 (page 326)** **Email Address 3 (page 326)**, and **Email Address 4 (page 326)**.

The list of all supported terminals shows the table below:

Terminal	Event SMS	Warning SMS	BOC SMS	Shutdown SMS	Event email	Warning email	BOC email	Shutdown email
CM-RS232-485	no	no	no	no	no	no	no	no
CM-Ethernet	no	no	no	no	yes	yes	yes	yes
CM-GPRS	yes	yes	yes	yes	no yes* yes*	no yes*yes*	no yes* yes*	noyes*yes*
CM-4G-GPS	yes	yes	yes	yes	no yes* yes*	no yes*yes*	no yes* yes*	noyes*yes*

Note: * Only with enabled *Mode* (page 315).

Note: * Only with enabled *Mode* (page 315).

Alarmlist

Alarmlist is a container of active and inactive alarms. It will appear automatically on the controller display, if a new alarm occurs, or can be displayed manually from the display menu.

Active alarms are shown as inverted, not yet confirmed alarms are marked with asterisk before them.

Alarmlist contains three types of alarms:

- ▶ Controller built-in alarms
- ▶ User configured alarms on binary or analog inputs

Controller built-in alarms

An alarm message in the alarmlist begins with a prefix, which represents the alarm type (e.g. Wrm, Sd, BOC, Stp, MP, MPR). Then the alarm name follows. In some cases the prefix can be omitted.

User configured alarms

An alarm message in the alarmlist begins with a prefix, which represents the alarm type (e.g. Wrm, Sd, BOC, MP, MPR). Alarm type is selected by user during the configuration of binary or analog input as alarm. Then the alarm name follows. Name is adjusted by user during the configuration of binary or analog input as alarm.

Built-in alarms

Events specification	Protection type	Description
Wrm Battery Voltage	WRN	Battery voltage is out of limits given by Battery Undervoltage (page 208) and Battery Overvoltage (page 209) setpoints.
Binary input		Configurable Warning/MP/MPR alarms on the binary inputs.
RTC Battery Flat	WRN	RTC battery weak or flat and has to be changed.
Parameters Fail	NONE	Wrong check-sum of parameters. Happens typically after downloading new firmware or changing of the parameter. The controller stays in INIT mode. Check all parameters, change value of at least one parameter.

Events specification	Protection type	Description
MP Mains Lx >V MP Mains Lx <V (where x=1,2,3)	MP	The mains voltage is out of limits given by Mains <V and Mains >V setpoints.
Mains Voltage Unbalance	MP	The mains voltage is unbalanced more than the value of Mains Voltage Unbalance (page 220) setpoint.
Mains >, <Frequency	MP	The mains frequency is out of limits given by Mains Overfrequency (page 220) and Mains Underfrequency (page 221) setpoints.
Wm Bus Lx >V Wm Bus Lx <V (where x=1,2,3)	Hist	Bus voltage is out of limits given by Bus < and Bus > Voltage setpoint.
Bus >, <Frequency	Hist	The bus frequency is out of limits given by Bus Overfrequency (page 212) and Bus Underfrequency (page 212) setpoints.
Bus Voltage Unbalance	Hist	The bus voltage is unbalanced more than the value of Bus Voltage Unbalance (page 212) .
Current Unbalance	MP	The mains current is unbalanced more than the value of Current Unbalance (page 217) setpoint.
Current IDMT	MPR	Mains current exceeds the limit for IDMT protection given by Nominal Current (page 204) and IDMT Overcurrent (page 216) setpoints.
Short Circuit	MPR	Short circuit current alarm is activated when the current value is out of limits given by Short Circuit MPR (page 215)
Overload MPR	MPR	The load is greater than the value given by Overload MPR (page 214) setpoint.
MCB Fail	WRN	Failure of mains circuit breaker.
Mains CCW Rot	WRN	Mains voltage phases are not wired correctly. MCB closing is prohibited by controller.
Bus CCW Rot	WRN	Bus voltage phases are not wired correctly. MGCB closing is prohibited by controller.
Wm Synchronization Fail	WRN	If the synchronization timeout gets elapsed (forward synchronization).
Wm Reverse synchro Fail	WRN	If the synchronization timeout gets elapsed (reverse synchronization).
Bus Meas Error	WRN	Bus measurement error. Bus voltage is out of limits for 20s.
Vectorshift	MP	Vectorshift protection activated.
ROCOF	MP	Rocof protection activated.

Note: This table does not contain all alarms in controller. It is only list of the most common alarms.

5.4.13 History log

The history log is an area in the controller's non-volatile memory that records "snapshots" of the system at moments when important events occur. The history log is important especially for diagnostics of failures and problems. When the history file is full, the oldest records are removed.

Each record has the same structure and contains:

- The event which caused the record (e.g. "Overspeed alarm" or "GCB closed")
- The date and time when it was recorded
- All important data values like RPM, kW, voltages, etc. from the moment that the event occurred.

Record structure

Name	Abbreviation	Description
Number	No.	Row number (0 corresponds to the last record, -1 to the previous one, etc.)
Reason	Reason	Reason for history record (any event or alarm related to the gen-set)
Time	Time	Time
Date	Date	Date
Bus Frequency	Bfrq	Bus Frequency
Bus Voltage	Vb1	Bus voltage Ph1
Bus Voltage	Vb2	Bus voltage Ph2
Bus Voltage	Vb3	Bus voltage Ph3
Bus Voltage	Vb12	Bus voltage Ph12
Bus Voltage	Vb23	Bus voltage Ph23
Bus Voltage	Vb31	Bus voltage Ph31
Mains Frequency	Mfrq	Mains Frequency
Mains Voltage	Vm1	Mains voltage Ph1
Mains Voltage	Vm2	Mains voltage Ph2
Mains Voltage	Vm3	Mains voltage Ph3
Mains Voltage	Vm12	Mains voltage Ph12
Mains Voltage	Vm23	Mains voltage Ph23
Mains Voltage	Vm31	Mains voltage Ph31
Mains Current	IL1	Mains current Ph1
Mains Current	IL2	Mains current Ph2
Mains Current	IL3	Mains current Ph3
Voltage Battery	VBat	Voltage of battery
Binary Inputs	BIN	Controller binary inputs
Binary Outputs	BOUT	Controller binary outputs
Running nominal power	TRPN	Nominal power of all running gen-sets
Available nominal power	APN	Available nominal power of all gen-sets
Controller Mode	Mode	Controller mode

Note: When some setpoint is changed, in history log is written its number of communication object.

Note: Some additional columns can be added due to actual controller configuration (modules, etc.).

5.4.14 Breaker control

The following power switches are controlled by the controller:

- ▶ The master generator circuit breaker or contactor – MGCB
- ▶ The Mains circuit breaker or contactor – MCB

It is possible to use either a motorized circuit breaker or contactor. Below is a list of available control outputs that should fit all types of contactors or breakers. The following rules must be kept to when designing the wiring of power switches:

- ▶ The control outputs must be configured and wiring of the power switches must be provided in such a way, that the controller has full control over the breakers – i.e. the controller can open and close the breaker at any time.
- ▶ The breaker must respond within max. 2 seconds to a close and open command. Special attention should be paid to opening of motorized circuit breakers, as it could take more than 2 seconds on some types. In such cases it is necessary to use an undervoltage coil for fast opening.
- ▶ After opening the breaker, there is internal delay for another closing of breaker. Delay is 6 seconds - 5 seconds for OFF coil and 1 second for UV coil. After these 6 seconds, breaker can be closed again. For opening of breaker there is no delay.

Breaker control outputs

Close/Open	An output for control of a contactor. Its state represents the breaker position requested by the controller. The breaker must react within 2 seconds to a close or open command, otherwise an alarm is issued.
ON coil	An output giving a 2 second pulse in the moment the breaker has to be closed. The output is intended for control of close coils of circuit breakers.
OFF coil	An output giving a pulse in the moment the breaker has to be opened. The pulse lasts until the feedback deactivates, but at least for 2 seconds. The output is intended for control of open coils of circuit breakers.
UV coil	The GCB UV coil output is active the whole time the gen-set is running (not in idle or cooling). The MCB UV coil output is active when the controller is switched on. The output is deactivated for at least 2 seconds in the moment the breaker has to be switched off. The output is intended for control of undervoltage coils of circuit breakers.

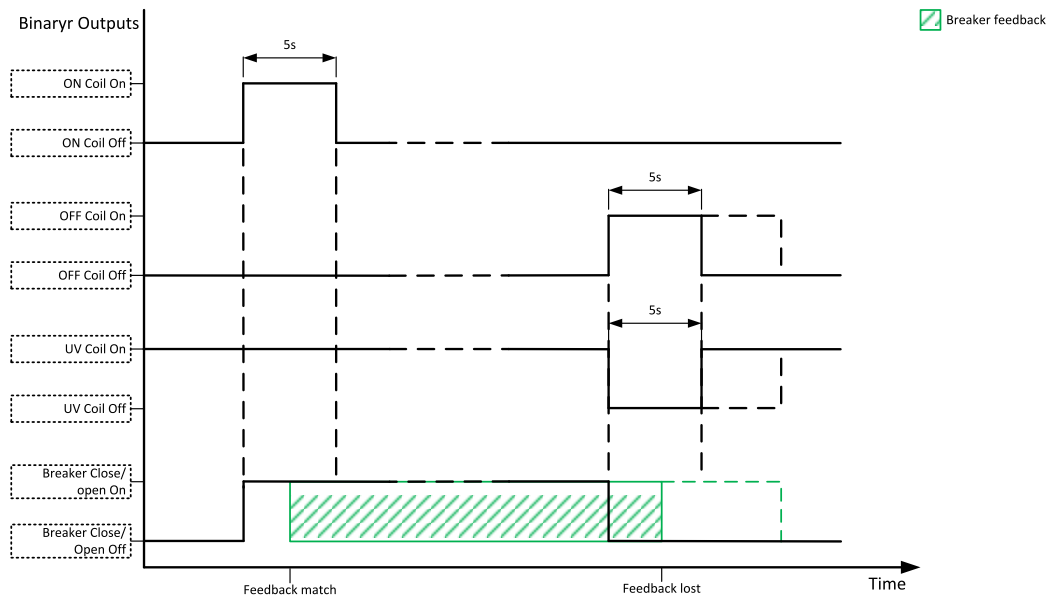


Image 5.33 Breaker control outputs

MCB special requirements

- ▶ If a contactor is used on the MCB position, it is recommended that the wiring be provided in such a way that the contactor will be normally closed and will open if the logical binary output **MCB CLOSE/OPEN** (PAGE 504) closes. This behavior is called “negative logic” and can be adjusted by the setpoint **MCB Logic** (page 221). The negative logic will prevent accidental opening of the MCB when the controller is switched off.
- ▶ If a contactor is used on the MCB position, it will open itself immediately after the mains have failed, because it will lose power for the coil. That is why the following adjustment is necessary to prevent triggering the **Wrn MCB Fail** (page 565) alarm: **MCB Opens On** (page 223) = Mains Fail, **Mains < > Voltage Delay** (page 220) ≤ 1.
- ▶ If a 230 V motor driven circuit breaker is used on the MCB position and an undervoltage coil is not fitted, it is not possible to open the breaker after the mains have failed, because there is no power for the motor drive until the gen-set is started and providing voltage. Adjusting the setpoint **MCB Opens On** (page 223) = Gen Run will prevent triggering the **Wrn MCB Fail** (page 565) alarm.

Breaker fail detection

Breaker fail detection is based on binary output breaker close/open comparing with binary input breaker feedback.

IMPORTANT: It is necessary to configure breaker feedback to use this function.

IMPORTANT: Also it is possible to use breakers without feedbacks. In this case there is no check of breaker real state.

There are three different time delays for breaker fail detection – see following diagrams.

IMPORTANT: When controller is synchronizing, there is only 2 seconds delay for breaker fail detection.

When binary output breaker close/open is in steady state and breaker feedback is changed the breaker fail is detected immediately (no delay).

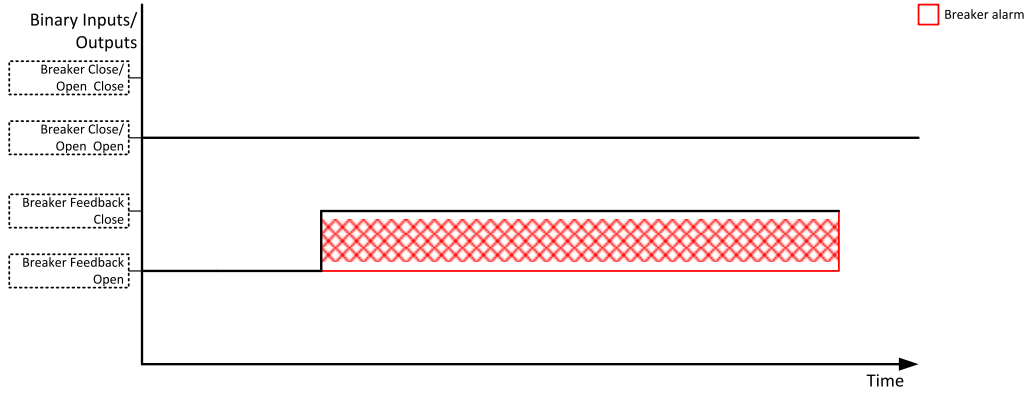


Image 5.34 Breaker fail - breaker close/open in steady position - open

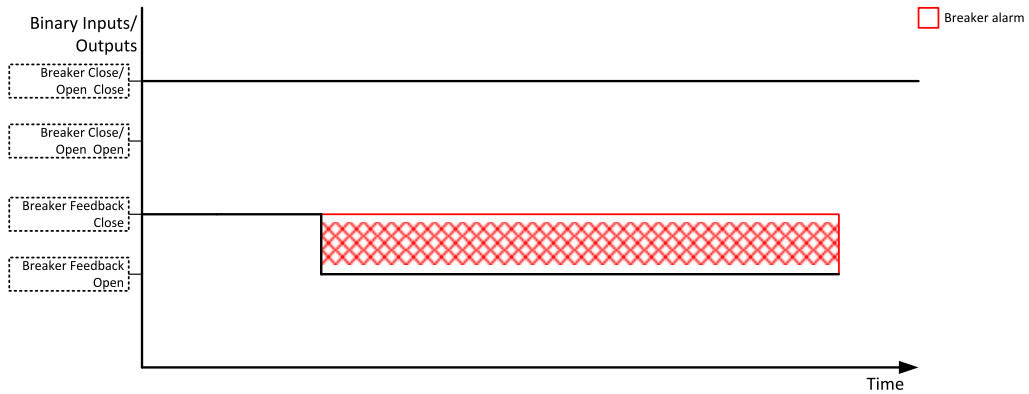


Image 5.35 Breaker fail - breaker close/open in steady position - close

When binary output breaker close/open opens there is 2 sec delay for breaker fail detection.

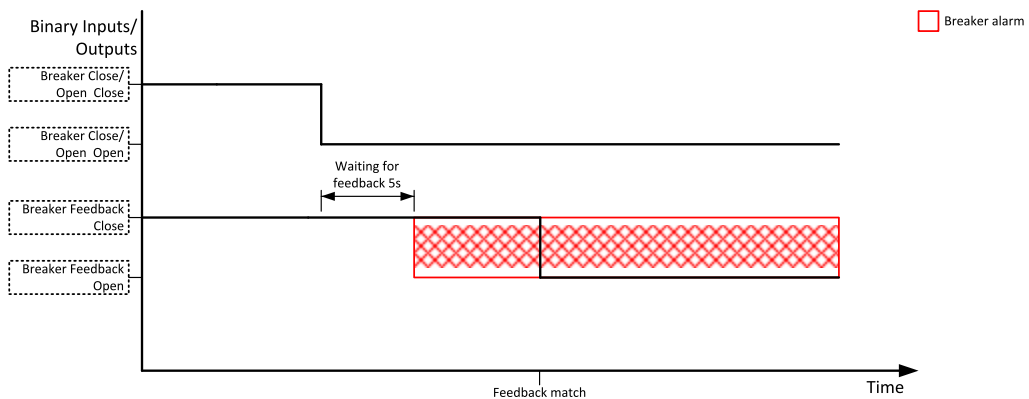


Image 5.36 Breaker fail - breaker close/open opens

When binary output breaker close/open closes there is 2 sec delay for breaker fail detection.

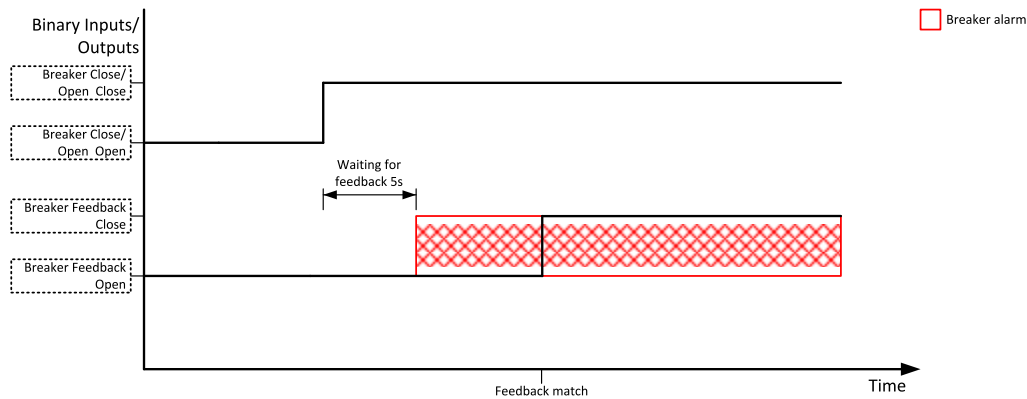


Image 5.37 Breaker fail - breaker close/open closes

5.4.15 Exercise timers

The exercise (general-purpose) timers in controller areis intended for scheduling of any operations such as e.g. periodic tests of the gen-set, scheduled transfer of the load to the gen-set prior to an expected disconnection of the mains etc.

Related setpoints for timer 1 are:

- ▶ [Timer 1 Function \(page 291\)](#)
- ▶ [Timer 1 Repetition \(page 291\)](#)
- ▶ [Timer 1 First Occur. Date \(page 292\)](#)
- ▶ [Timer 1 First Occur. Time \(page 292\)](#)
- ▶ [Timer 1 Duration \(page 292\)](#)
- ▶ [Timer 1 Repeated \(page 293\)](#)
- ▶ [Timer 1 Repeat Day \(page 295\)](#)
- ▶ [Timer 1 Day \(page 295\)](#)
- ▶ [Timer 1 Repeated Day In Week \(page 296\)](#)
- ▶ [Timer 1 Repeat Day In Month \(page 296\)](#)
- ▶ [Timer 1 Repeat Week In Month \(page 296\)](#)
- ▶ [Timer 1 Refresh Period \(page 294\)](#)
- ▶ [Timer 1 Weekends \(page 295\)](#)

Related setpoints for timer 2 are:

- ▶ [Timer 2 Function \(page 298\)](#)
- ▶ [Timer 2 Repetition \(page 298\)](#)
- ▶ [Timer 2 First Occur. Date \(page 299\)](#)
- ▶ [Timer 2 First Occur. Time \(page 299\)](#)
- ▶ [Timer 2 Duration \(page 299\)](#)
- ▶ [Timer 2 Repeated \(page 300\)](#)
- ▶ [Timer 2 Repeat Day \(page 302\)](#)
- ▶ [Timer 2 Day \(page 302\)](#)
- ▶ [Timer 2 Repeated Day In Week \(page 303\)](#)
- ▶ [Timer 2 Repeat Day In Month \(page 303\)](#)
- ▶ [Timer 2 Repeat Week In Month \(page 303\)](#)
- ▶ [Timer 2 Refresh Period \(page 301\)](#)
- ▶ [Timer 2 Weekends \(page 302\)](#)

Available modes of each timer:

Once	This is a single shot mode. The timer will be activated only once at preset date/time for preset duration.
Daily	The timer is activated every "x-th" day. The day period "x" is adjustable. Weekends can be excluded. E.g. the timer can be adjusted to every 2nd day excluding Saturdays and Sundays.
Weekly	The timer is activated every "x-th" week on selected weekdays. The week period "x" is adjustable. E.g. the timer can be adjusted to every 2nd week on Monday and Friday.
Monthly	The timer is activated every "x-th" month on the selected day. The requested day can be selected either as "y-th" day in the month or as "y-th" weekday in the month. E.g. the timer can be adjusted to every 1st month on 1st Tuesday.
Short period	The timer is repeated with adjusted period (hh:mm). The timer duration is included in the period.

Once mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint *Timer 1 Function* (page 291).

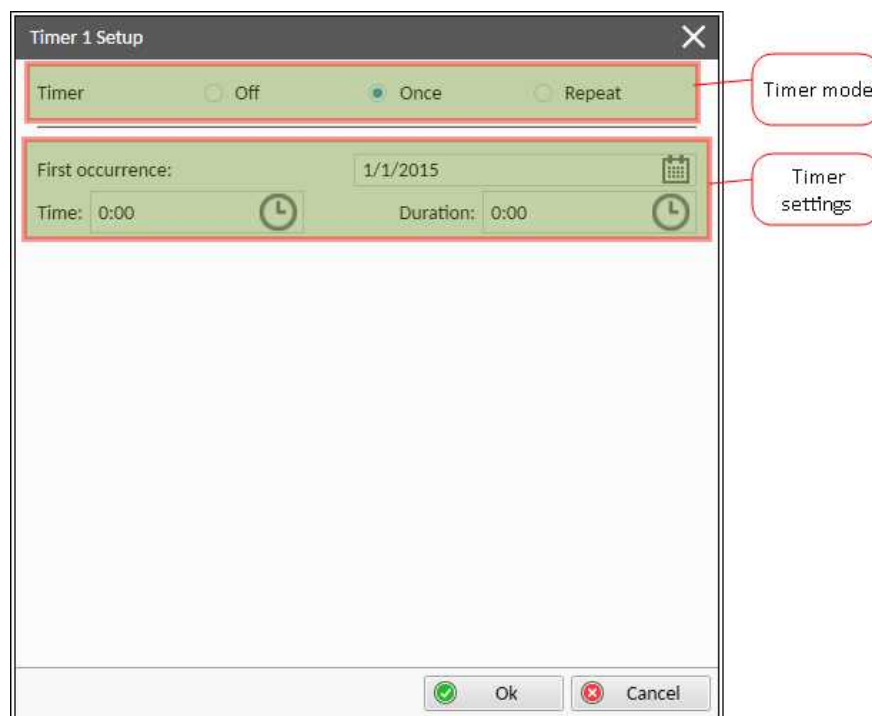


Image 5.38 Once mode - IntelliConfig

In timer mode select Once. In timer settings adjust date and time of occurrence of timer. Also adjust the duration of timer.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 291) setpoint. Than go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 291) setpoint select

Once mode. Than adjust **Timer 1 First Occur. Date** (page 292), **Timer 1 First Occur. Time** (page 292) and **Timer 1 Duration** (page 292).

Note: Use left and right buttons to move between timer setpoints.

Daily mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint **Timer 1 Function** (page 291).

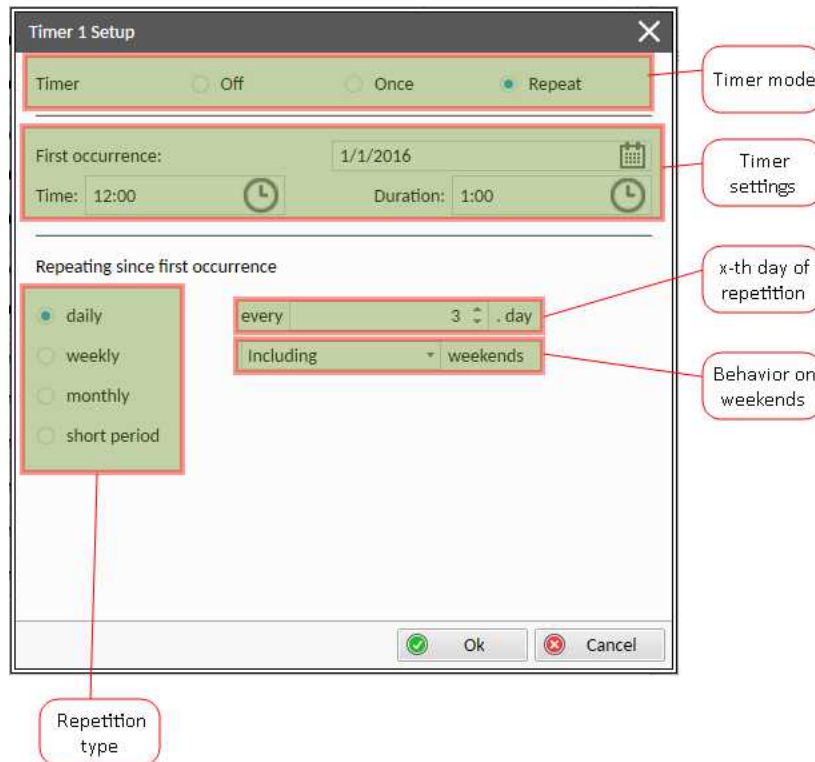


Image 5.39 Daily mode - IntelliConfig

In timer mode select Repeat. In repetition type select Daily. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Than select the x-th day of repetition (**Timer 1 Refresh Period** (page 294)) and behavior of timer on weekends (**Timer 1 Weekends** (page 295)).

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 3rd day at 12:00 for 1 hour including weekends.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 291) setpoint. Than go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 291) setpoint select Repeated mode. Than adjust **Timer 1 First Occur. Date** (page 292), **Timer 1 First Occur. Time** (page 292) and **Timer 1 Duration** (page 292). In setpoint **Timer 1 Repeated** (page 293) select Daily and adjust **Timer 1 Refresh Period** (page 294) (x-th day of repetition) and **Timer 1 Weekends** (page 295) (behavior of timer on weekends).

Note: Use left and right buttons to move between timer setpoints.

Weekly mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint *Timer 1 Function* (page 291).

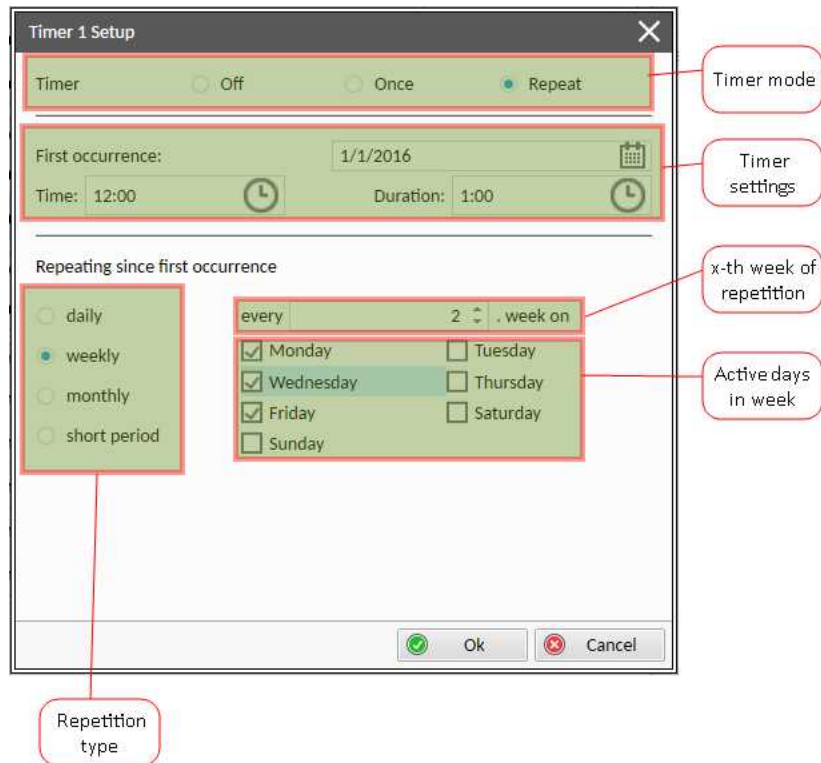


Image 5.40 Weekly mode - IntelliConfig

In timer mode select Repeat. In repetition type select Weekly. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the x-th week of repetition (**Timer 1 Refresh Period** (page 294)) and days when timer should be active (**Timer 1 Day** (page 295)).

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 2nd week on Monday, Wednesday and Friday at 12:00 for 1 hour.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 291) setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 291) setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date** (page 292), **Timer 1 First Occur. Time** (page 292) and **Timer 1 Duration** (page 292). In setpoint **Timer 1 Repeated** (page 293) select Weekly and adjust **Timer 1 Day** (page 295) (days when timer should be active) and **Timer 1 Refresh Period** (page 294) (x-th week of repetition).

Note: Use left and right buttons to move between timer setpoints.

Monthly mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint **Timer 1 Function (page 291)**.

There are two types of monthly repetition. First of them is based on repeating one day in month.

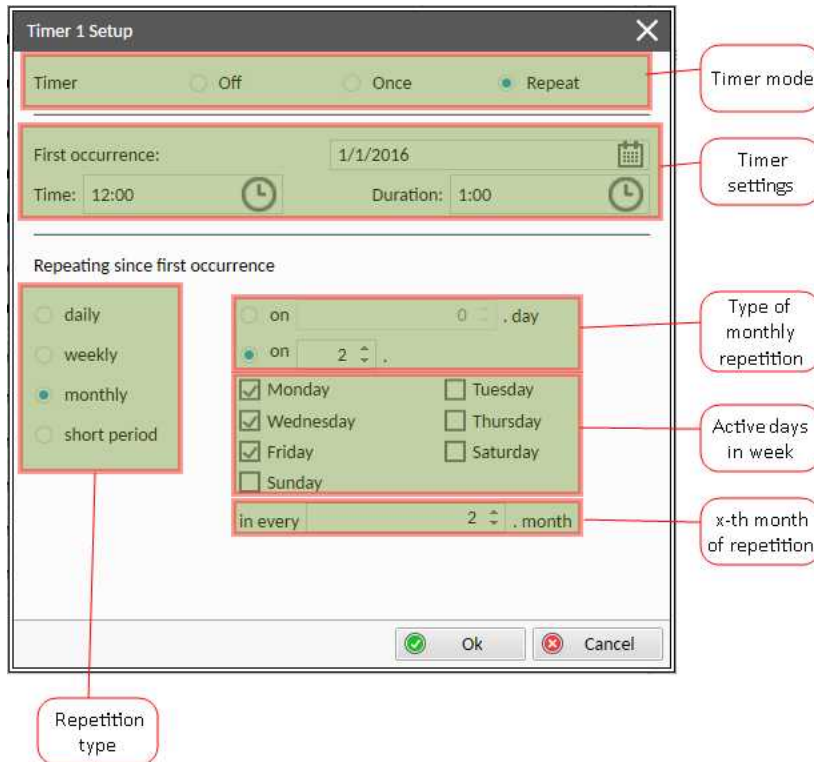


Image 5.41 Monthly mode - IntelConfig

In timer mode select Repeat. In repetition type select Monthly. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Than select the type of monthly repetition and the x-th day of repetition (**Timer 1 Repeat Day In Month (page 296)**). Than select the x-th month of repetition.

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 2nd day in 2nd month at 12:00 for 1 hour.

Second type of monthly repetition is based on repeating days in week in month.

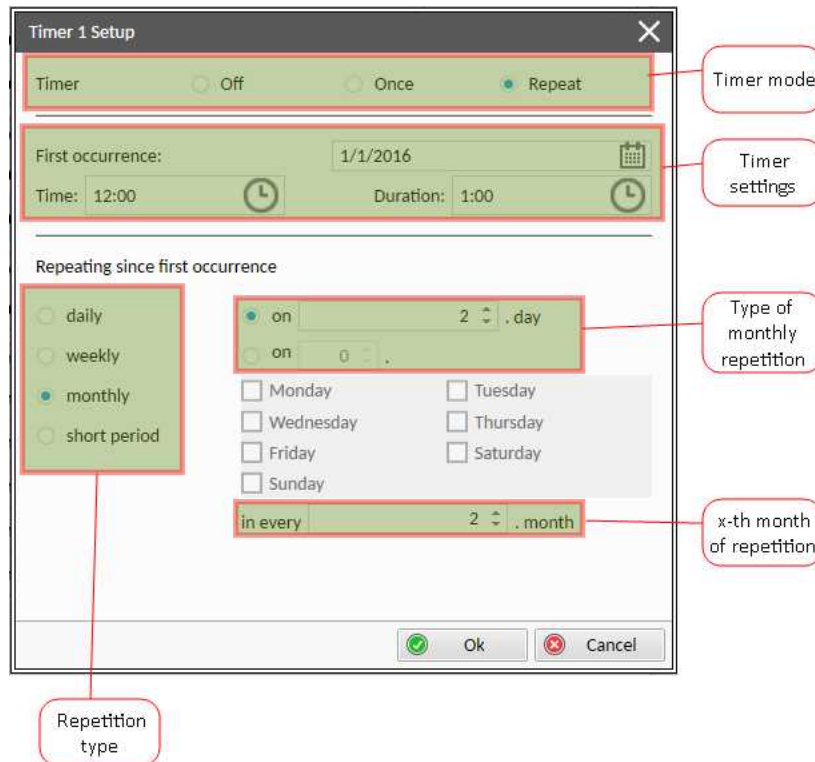


Image 5.42 Monthly mode - Intelliconfig

In timer mode select Repeat. In repetition type select Monthly. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the type of monthly repetition, the x-th week of repetition and days in week. Then select the x-th month of repetition.

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 2nd week in 2nd month on Monday, Wednesday and Friday at 12:00 for 1 hour.

Set-up via controller interface

There are two types of monthly repetition. First of them is based on repeating one day in month.

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function (page 291)** setpoint. Then go to **Timer 1 Setup** and press enter button. In **Timer 1 Repetition (page 291)** setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date (page 292)**, **Timer 1 First Occur. Time (page 292)** and **Timer 1 Duration (page 292)**. In setpoint **Timer 1 Repeated (page 293)** select Monthly and adjust type of monthly repetition via **Timer 1 Repeat Day (page 295)**, **Timer 1 Refresh Period (page 294)** (x-th month of repetition) and **Timer 1 Repeat Day In Month (page 296)** (concrete day in repeated months).

Second type of monthly repetition is based on repeating days in week in month.

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function (page 291)** setpoint. Then go to **Timer 1 Setup** and press enter button. In **Timer 1 Repetition (page 291)** setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date (page 292)**, **Timer 1 First Occur. Time (page 292)** and **Timer 1 Duration (page 292)**. In setpoint **Timer 1 Repeated (page 293)** select Monthly and adjust type of monthly repetition via **Timer 1 Repeat Day (page 295)**, **Timer 1 Refresh Period (page 294)** (x-th month of repetition), **Timer 1 Repeated Day In Week (page 296)** (days in week when timer is active) and **Timer 1 Repeat Week In Month (page 296)** (concrete week in repeated months).

Note: Use left and right buttons to move between timer setpoints.

Short period mode

Set-up via IntelliConfig

To set-up timer via IntelliConfig go to the setpoint ribbon, setpoint group scheduler and setpoint *Timer 1 Setup*.

Note: First of all function of timer has to be adjusted via setpoint *Timer 1 Function* (page 291).

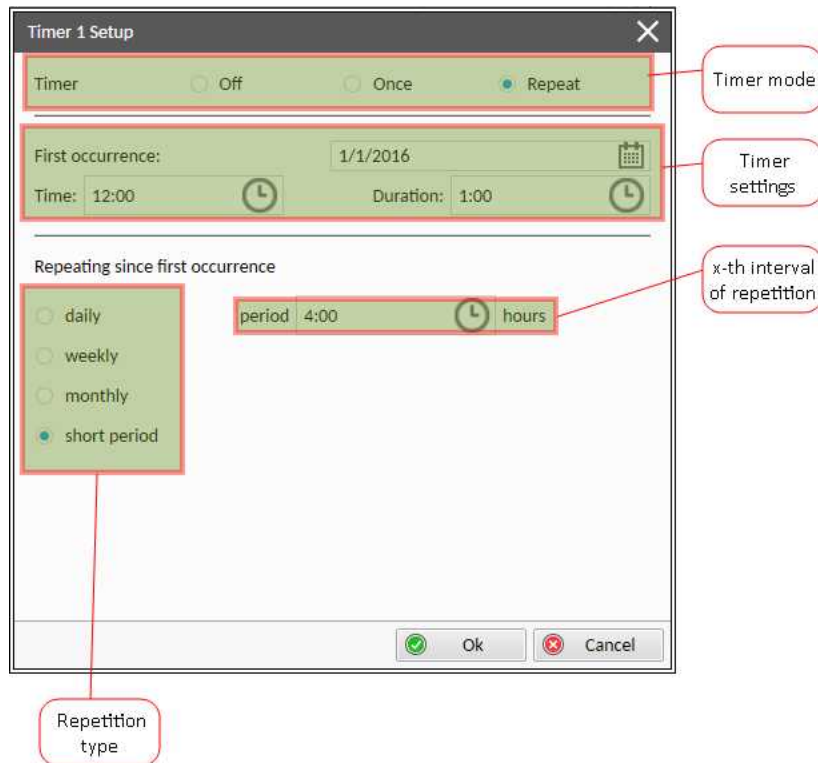


Image 5.43 Short period mode - IntelliConfig

In timer mode select Repeat. In repetition type select Short period. In timer settings adjust date and time of first occurrence of timer. Also adjust the duration of each occurrence of timer. Then select the interval of repetition (shorter than 1 day).

Example: On image example first start of timer will be 1/1/2016 at 12:00. Duration will be 1 hour. Timer will be again activated every 4th hour for 1 hour.

Set-up via controller interface

In controller go to the Scheduler setpoint group. Select the function of timer via **Timer 1 Function** (page 291) setpoint. Then go to *Timer 1 Setup* and press enter button. In **Timer 1 Repetition** (page 291) setpoint select Repeated mode. Then adjust **Timer 1 First Occur. Date** (page 292), **Timer 1 First Occur. Time** (page 292) and **Timer 1 Duration** (page 292). In setpoint **Timer 1 Repeated** (page 293) select Short Period and adjust **Timer 1 Refresh Period** (page 294) (interval of repetition).

Note: Use left and right buttons to move between timer setpoints.

5.4.16 Analog switches

There are logical analog function dedicated for analog switches. Each analog switch has setpoints for level ON and level OFF and logical binary output.

Analog switch	Setpoints	Binary output
AIN SWITCH 01 (PAGE 538)	Analog Switch 1 On (page 249) Analog Switch 1 Off (page 249)	AIN SWITCH01 (PAGE 487)
AIN SWITCH 02 (PAGE 538)	Analog Switch 2 On (page 251) Analog Switch 2 Off (page 251)	AIN SWITCH02 (PAGE 488)
AIN SWITCH 03 (PAGE 538)	Analog Switch 3 On (page 253) Analog Switch 3 Off (page 253)	AIN SWITCH03 (PAGE 488)
AIN SWITCH 04 (PAGE 539)	Analog Switch 4 On (page 255) Analog Switch 4 Off (page 255)	AIN SWITCH04 (PAGE 489)
AIN SWITCH 05 (PAGE 539)	Analog Switch 5 On (page 257) Analog Switch 5 Off (page 257)	AIN SWITCH05 (PAGE 489)
AIN SWITCH 06 (PAGE 539)	Analog Switch 6 On (page 259) Analog Switch 6 Off (page 259)	AIN SWITCH06 (PAGE 490)
AIN SWITCH 07 (PAGE 540)	Analog Switch 7 On (page 261) Analog Switch 7 Off (page 261)	AIN SWITCH07 (PAGE 490)
AIN SWITCH 08 (PAGE 540)	Analog Switch 8 On (page 263) Analog Switch 8 Off (page 263)	AIN SWITCH08 (PAGE 491)
AIN SWITCH 09 (PAGE 540)	Analog Switch 9 On (page 265) Analog Switch 9 Off (page 265)	AIN SWITCH09 (PAGE 491)
AIN SWITCH 10 (PAGE 541)	Analog Switch 10 On (page 267) Analog Switch 10 Off (page 267)	AIN SWITCH10 (PAGE 492)
AIN SWITCH 11 (PAGE 541)	Analog Switch 11 On (page 269) Analog Switch 11 Off (page 269)	AIN SWITCH11 (PAGE 492)
AIN SWITCH 12 (PAGE 541)	Analog Switch 12 On (page 271) Analog Switch 12 Off (page 271)	AIN SWITCH12 (PAGE 493)
AIN SWITCH 13 (PAGE 542)	Analog Switch 13 On (page 273) Analog Switch 13 Off (page 273)	AIN SWITCH13 (PAGE 493)
AIN SWITCH 14 (PAGE 542)	Analog Switch 14 On (page 275) Analog Switch 14 Off (page 275)	AIN SWITCH14 (PAGE 494)
AIN SWITCH 15 (PAGE 542)	Analog Switch 15 On (page 277) Analog Switch 15 Off (page 277)	AIN SWITCH15 (PAGE 494)
AIN SWITCH 16 (PAGE 543)	Analog Switch 16 On (page 279) Analog Switch 16 Off (page 279)	AIN SWITCH16 (PAGE 495)
AIN SWITCH 17 (PAGE 543)	Analog Switch 17 On (page 281) Analog Switch 17 Off (page 281)	AIN SWITCH17 (PAGE 495)

Analog switch	Setpoints	Binary output
AIN SWITCH 18 (PAGE 543)	Analog Switch 18 On (page 283) Analog Switch 18 Off (page 283)	AIN SWITCH18 (PAGE 496)
AIN SWITCH 19 (PAGE 544)	Analog Switch 19 On (page 285) Analog Switch 19 Off (page 285)	AIN SWITCH19 (PAGE 496)
AIN SWITCH 20 (PAGE 544)	Analog Switch 20 On (page 287) Analog Switch 20 Off (page 287)	AIN SWITCH20 (PAGE 497)

The behavior of the switch depends on the adjustment of the setpoints.

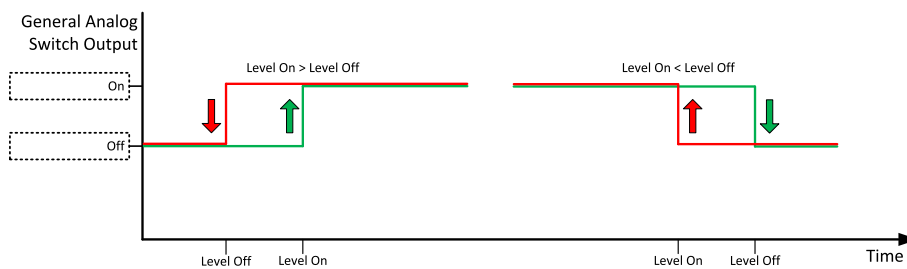


Image 5.44 Principle of analog switch

5.4.17 Voltage phase sequence detection

Controller detects phase sequence on both voltage terminals. This protection is important after controller installation to avoid wrong voltage phase connection. The phase sequence is adjusted via setpoint **Phase Rotation** (page 208). When the phases are connected in different order, following alarms are detected:

- ▶ **Bus CCW Rotation**
- ▶ **Mains CCW Rotation (page 564)**

5.4.18 Sensor curves

Default sensor curves

There are 16 default resistive curves available. The following table provides information on minimum/maximum values of respective sensors. Actual values especially of temperature curves may differ. Meaning is to prolong curve to the lower temperature values, so the cold engine will not raise alarm fail sensor.

Curve	Min [Ohm]	Max [Ohm]	Units
VDO 10 Bar 0-2400ohm	0	2400	Bar
VDO40-120°C0-2400ohm	0	2400	°C
VDOLevel%0-2400ohm	0	2400	%
General line 1	0	1000	ohm
General line 2	0	1000	ohm
General line 3	0	1000	ohm
General line 4	0	1000	ohm

General line 5	0	1000	ohm
General line 6	0	1000	ohm
General line 7	0	1000	ohm
General line 8	0	1000	ohm
General line 9	0	1000	ohm
General line 10	0	1000	ohm
General line 11	0	1000	ohm
General line 12	0	1000	ohm
General line 13	0	1000	ohm

Note: Curves can be modified via IntelliConfig. In IntelliConfig are also prepared some standard curves.

5.4.19 PLC

PLC Editor is powerful tool which helps you to create your own PLC scheme. It has graphical interface to have user interface easy to use.

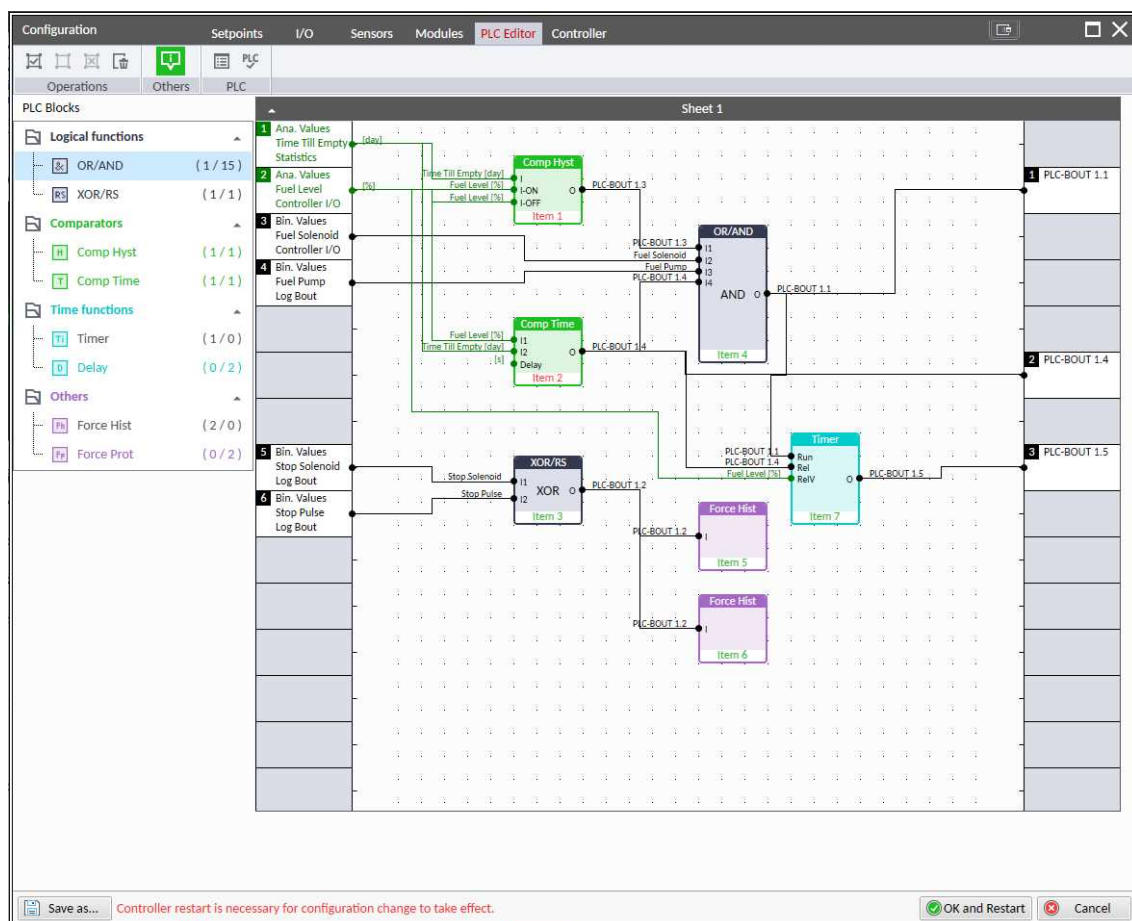


Image 5.45 PLC Editor main page

List of available PLC blocks

PLC block	Number of blocks
OR/AND	16
XOR/RS	2
Comparator with hysteresis (Comp Hyst)	2
Comparator with delay (Comp Time)	2
Timer	1
Delay	2
Force history record (Force Hist)	2
Force protection (Force Prot)	2

Working with the editor

If the currently opened archive does not contain any PLC program, then an empty drawing is created automatically when you select the PLC Editor. The procedure of creation of a PLC drawing (program) contains following essential steps:

- ▶ Adjust the sheet to your needs. See **Working with sheets (page 135)** for more information.
- ▶ Add PLC blocks into the sheets. See **Adding PLC blocks (page 136)** for more information.
- ▶ Define inputs and outputs of the PLC program. See **Define inputs and outputs (page 137)** for more information.
- ▶ Create connections between inputs, blocks and outputs. See **Creating wires (page 139)** for more information.
- ▶ Adjust properties of the blocks. See for more information about blocks.

Working with sheets

Drag the sheet edges to re-size the sheet according to your needs.

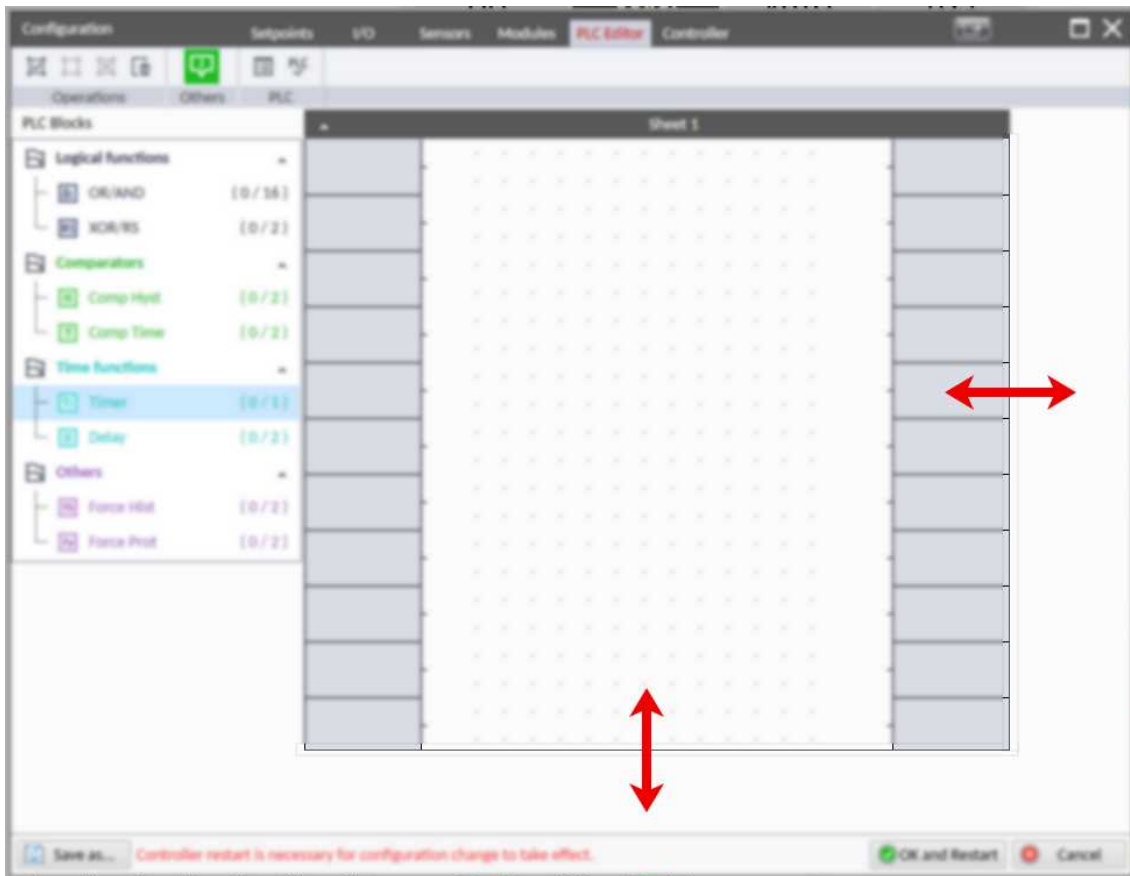


Image 5.46 Adjusting PLC sheet

Adding PLC blocks

Adding PLC block is simple and intuitive. Follow the procedure below to add PLC block.

- ▶ Select required block from the list of available PLC blocks at the left and drag it into the sheet.
- ▶ Double-click on the block and adjust properties of the block. See for more information about blocks.
- ▶ Connect the block inputs and outputs by drawing wires in the sheet. See **Define inputs and outputs (page 137)** for more information. It is also possible to connected inputs and outputs via properties of selected PLC block.

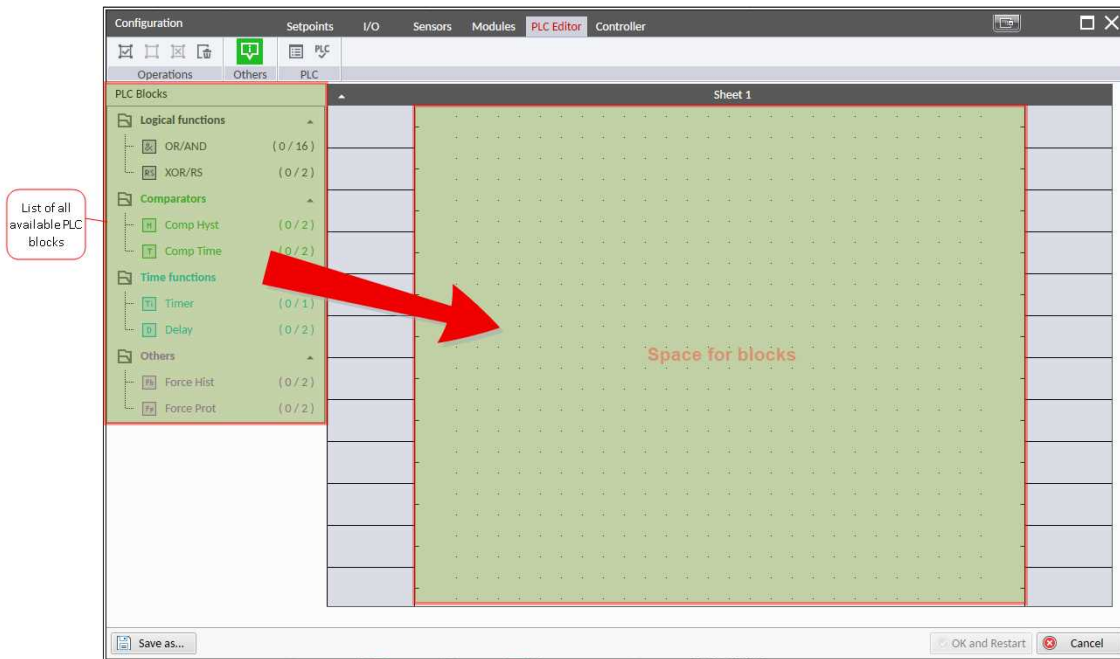


Image 5.47 Adding PLC blocks

Note: To delete PLC block just click on it and press delete button. Also delete selection function can be used.

Note: To see context help for selected PLC block just press F1 button.

Define inputs and outputs

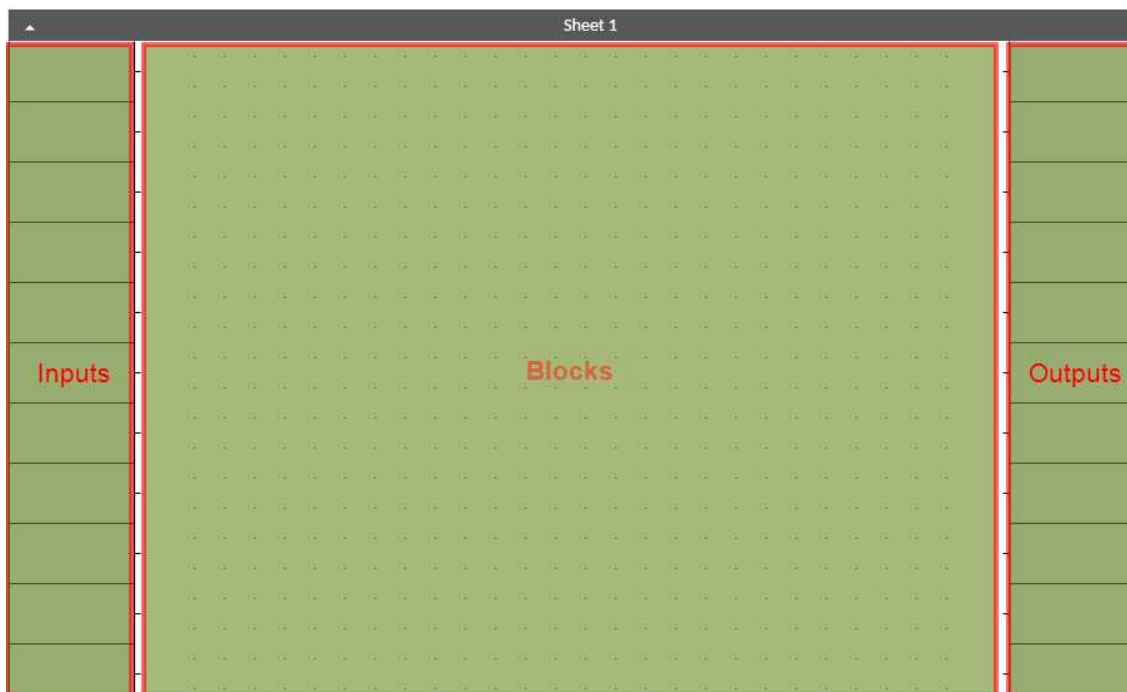


Image 5.48 Blank sheet of PLC editor

Inputs

Sheet inputs are located at the left side of a sheet. Follow the procedure below to add or edit an input.

- ▶ Double-click on a free input position or existing input to add new input or edit the existing one.
- ▶ Select the source for the input.
 - If you create a binary input, you can select a source from following categories:
 - Bin. Values - this category contains all binary values available in the controller as binary inputs, logical binary outputs etc.
 - PLC Outputs - this category contains all PLC blocks binary outputs available in the controller.
 - If you create an analog input, you can select a source from following categories:
 - Ana. Values - this category contains all analog values available in the controller as analog inputs, electrical values etc.
 - All Setpoints - this category contains all setpoints of the controller except the dedicated PLC setpoints. Names, resolutions and dimensions of these setpoints can not be modified.
 - PLC Setpoints - this category contains a group of setpoints which are dedicated for using in the PLC program. PLC setpoints can be renamed, their dimension, resolution and limits can be modified according to need of PLC blocks where they are used.

PLC Setpoint name:	Dimension:	Resolution:	Low limit:	High limit:	Apply
<input type="text"/>	<input type="text"/>	<input type="text" value="1"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	

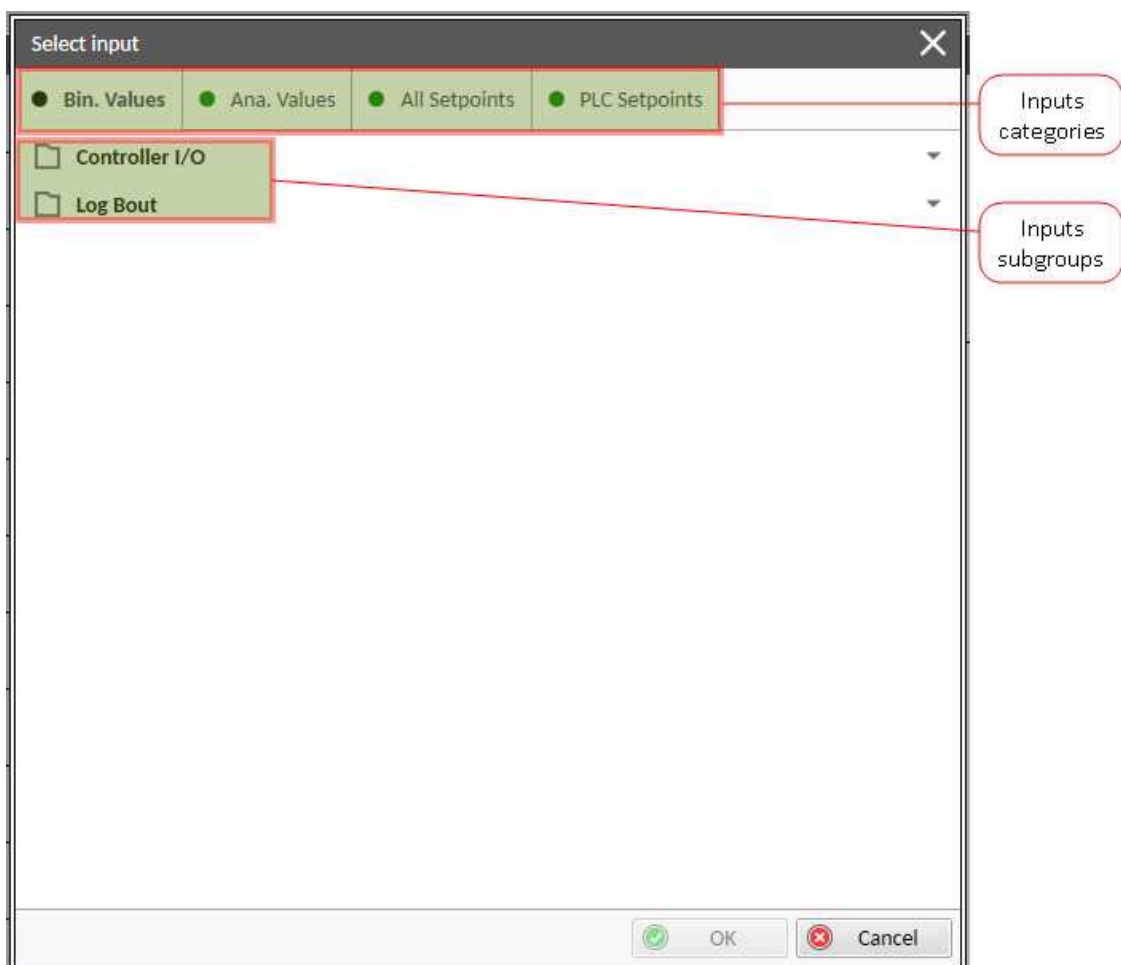


Image 5.49 PLC inputs

Outputs

Sheet outputs are located at the right side of a sheet. Follow the procedure below to add or edit an input.

- ▶ Doubleclick on a free output position to add new sheet output.
- ▶ Doubleclick on an already created output to configure the output onto a controller output terminal or a logical binary input (first of all some PLC block output has to be connected to this output to enable configuration of output).

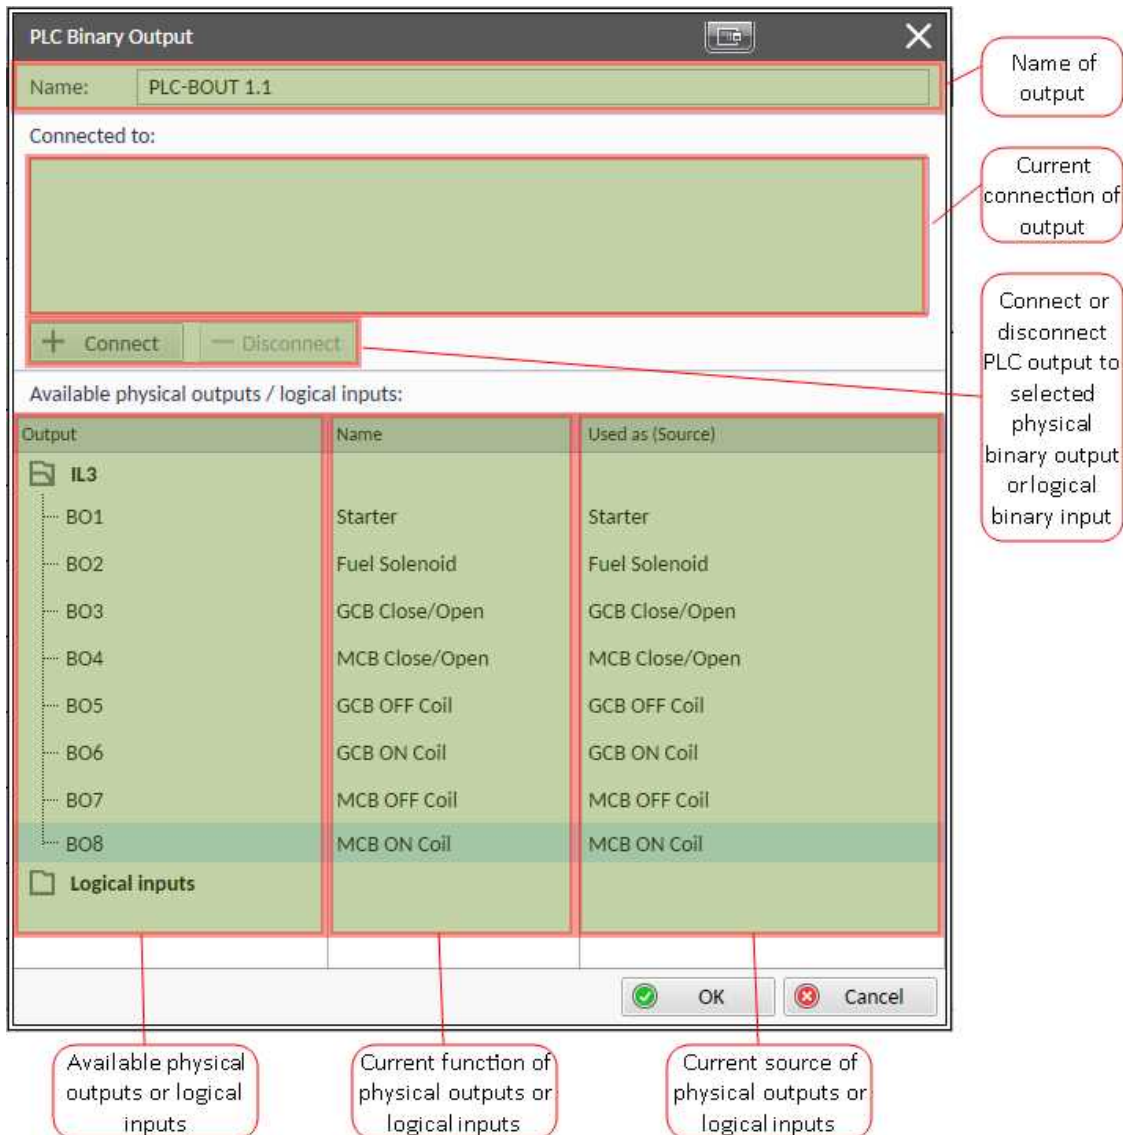


Image 5.50 PLC outputs

IMPORTANT: It is necessary to click on **Connect** button after selecting the output. Otherwise PLC output is not connected to output.

Creating wires

Wires can be create between PLC inputs and PLC blocks and between PLC blocks and PLC outputs.

IMPORTANT: Keep the order of starting and finishing connection points. Wires between inputs and blocks have to start from inputs. Wires between blocks and outputs have to start from blocks.

Follow the procedure below to create wire.

- ▶ Locate the mouse pointer over the starting point of the wire. If the area under the mouse pointer is a connection point, the pointer will change the color (fill of pointer will be white).
- ▶ Press and hold the left mouse button and drag the wire to the destination of required connection point. If you point over a valid connection point, the connection point will be marked with a red circle.
- ▶ Release the left mouse button to create a wire between the two points. The wire is routed automatically.

Note: It is possible to make connection only between the outputs and inputs with the same type of value (binary or analog). Binary values are marker by black pointer, analog values are marked with green pointer.

Note: To delete wire just click on it and press delete button. Also delete selection function can be used.

PLC logic execution rules

The PLC program is executed every 100 ms. The blocks are executed in order according to block numbers (item numbers), which are indicated in each block. The block numbers are assigned automatically according to position on sheet.



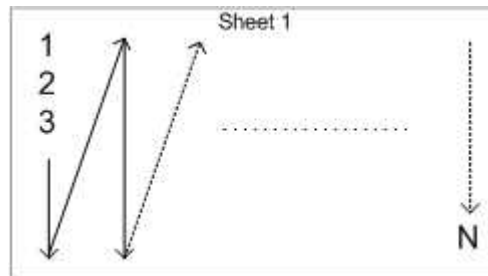


Image 5.51 PLC execution logic

IMPORTANT: Please always check that the blocks are ordered correctly, especially if you use direct feedbacks from outputs to inputs within one sheet. Wrong order may lead to incorrect results!!!

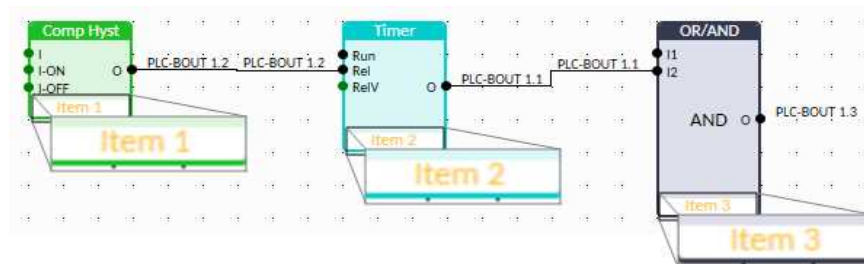

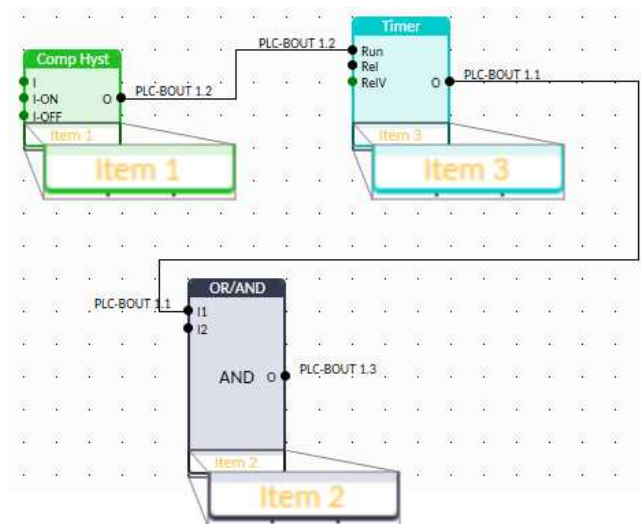

Other functions

Consistency check

Use this function to check if all inputs and outputs of PLC block are connected.

Delete whole content of sheet

Use this function to delete the whole content of sheet (including blocks, wires, inputs, outputs, etc...).

Hints

Use this function to enable or disable quick hints for blocks (controller help is not affected by this function).

PLC monitor

PLC monitor is a powerful tool for monitoring your PLC. Just click on PLC monitor button on main IntelliConfig page to see you PLC. Active inputs and outputs have blue color. Also wires with active signals have blue color.

IMPORTANT: It is not possible to edit PLC in PLC monitor tool.

5.4.20 Mains decoupling protections

Vector shift

The vector shift function is the fast protection for mains decoupling. It monitors the Load angle of the generators (bus) and if it gets changed dramatically, the protection is issued. The Vector shift is evaluated from the Mains Voltage Measurement (Phase 1).

Protection is enabled via setpoint **Vector Shift Protection** (page 223). Limit of protection is adjusted via setpoint **Vector Shift Limit** (page 224). When protection is activated, the breaker is opened. Which breaker is opened is adjusted via setpoint **Vector Shift CB Selector** (page 225). (For MCB application is fixedly opened only MCB breaker) Maximal value of vector shift is represented by value **Max Vector Shift** (page 415).

Note: *VectorShift protection gets active (is unblocked) right 500 ms after the condition for activation of protection gets fulfilled = when Controller goes to parallel to mains operation (When Vector Shift Protection = PARALLEL ONLY) or when MCB gets closed (when Vector shift protection = ENABLED).*

The settings can lead in MGCb application to these situations:

MCB status	MGCB status	Vector Shift CB Selector	Vector Shift Protection	Action
1	1	MCB or MGCB	Parallel or Enabled (No influence)	Opens MCB or MGCB based on setpoint Vector Shift CB Selector.
0	1	No influence	No influence	No action (MGCB stays always closed)
1	0	No influence	Parallel	No action MCB stays closed
1	0	MGCB	Enabled	No action MCB stays closed
1	0	MCB	Enabled	MCB opens

If a vector shift is detected and consequently the MCB is opened, however mains voltage and frequency remain in limits, the MCB is then closed again (synchronized) after **Mains Return Delay (page 218)** as the mains is evaluated as healthy.

If a vector shift is detected and consequently the MGCB is opened, however mains voltage and frequency remain in limits, the MGCB is then closed again (synchronized) immediately (no delay).

Note: *If the MCB application is chosen, than is always in case of VectorShift released the MCB breaker even there are some gen-set controllers connected on the bus.*

ROCOF

The Rate of Change of Frequency function is the fast protection for mains decoupling. It monitors the change of frequency and if it gets changed dramatically, the protection is issued.

Protection is enabled via setpoint **ROCOF Protection (page 224)**. Limit of protection is adjusted via setpoints **ROCOF df/dt (page 225)** and **ROCOF Windows Length (page 225)**. When protection is activated, the breaker is opened. Which breaker is opened is adjusted via setpoint **Vector Shift CB Selector (page 225)**.

5.4.21 Alternate configuration

In controller are 3 sets of configuration.

Configuration set 1	Configuration set 2	Configuration set 3
Nominal Frequency 1 (page 335)	Nominal Frequency 2 (page 337)	Nominal Frequency 3 (page 339)
Nominal Voltage Ph-N 1 (page 335)	Nominal Voltage Ph-N 2 (page 337)	Nominal Voltage Ph-N 3 (page 339)
Nominal Voltage Ph-Ph 1 (page 336)	Nominal Voltage Ph-Ph 2 (page 338)	Nominal Voltage Ph-Ph 3 (page 340)
Nominal Current 1 (page 336)	Nominal Current 2 (page 338)	Nominal Current 3 (page 340)
Connection Type 1 (page 336)	Connection type 2 (page 338)	Connection type 3 (page 340)

Configuration sets can be changed via logical binary input **ALTERNATE CONFIG 2 (PAGE 446)** and logical binary input **ALTERNATE CONFIG 3 (PAGE 446)**.

IMPORTANT: Gen-set can not switch to the alternative setpoints when is running.

5.4.22 USB host

USB host is a function for programming of controller from USB Flash Drive. Following functions are supported:

- ▶ Firmware upload
- ▶ Configuration upload
- ▶ Firmware and configuration upload
- ▶ Configuration download

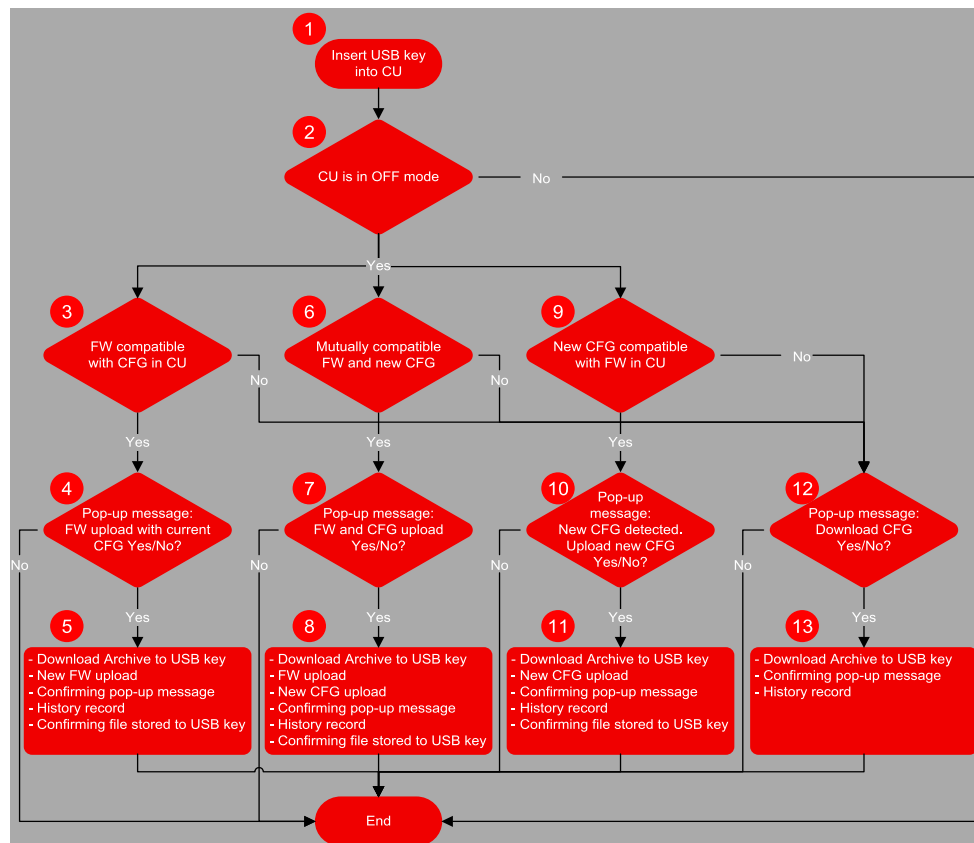


Image 5.52 USB host flowchart

Terminology:

- ▶ The Archive = the native file of IntelliConfig, including the complete Configuration + History + Statistic + Values (in the time of download) + Alarm list.
- ▶ Configuration = the part of Archive, in the terms of Configuration + Setpoints + PLC + IO definitions + Languages.
- ▶ New configuration = the configuration created in IntelliConfig for the purpose of uploading it into the controller using the USB memory stick. The new configuration is recognized due to it's name. The name has to contain the specific string ="InteliMains210-Genset name-M.N.P.B.aig3".
- ▶ Compatible firmware = the firmware version compatible with the configuration in the controller. The name of file including the firmware is "InteliMains210-M.N.P.B.bin".

Abbreviations:

- ▶ CU - control unit
- ▶ FW - firmware
- ▶ CFG - configuration

Firmware upload

- ▶ Point 1 - controller detects that USB Flash Drive has been inserted.
 - If the communication via USB B is running controller will not detect the USB memory key.
 - On the other hand if the USB memory key was detected, communication via USB B port is not possible.
- ▶ Point 2 - controller is in OFF mode
 - All operations with USB memory key are possible only in OFF mode
- ▶ Point 3 - Conditions for firmware upload with current configuration
 - The new firmware compatible with the version of the configuration in the controller has been detected (and there is no new configuration file).
 - Detection is based on name of firmware - required name: "InteliMains210-M.N.P.B.bin"
 - There can be stored more firmwares on the USB Flash Drive. Controller automatically select the compatible firmware with highest version.
- ▶ Point 4 - Pop-up message
 - Confirmation of firmware upload with current configuration
- ▶ Point 5 - Firmware upload
 - Current archive is download to USB Flash Drive (Name = SN_YYMMDDHHMM).
 - New firmware is uploaded into the controller without the change of the configuration
 - History record "USB Flash Drive FW upgrade" is made
 - Confirming file (.txt) on USB Flash Drive is made (Name = SN_YYMMDDHHMM)
 - Content: Serial number, Year/Date/Time, Upgrade to the FW "Name of the new FW" successful.
 - Confirmation pop-up message: "FW upgrade success"

Configuration upload

- ▶ Point 1 - controller detects that USB Flash Drive has been inserted.
 - If the communication via USB B is running controller will not detect the USB memory key.
 - On the other hand if the USB memory key was detected, communication via USB B port is not possible.
- ▶ Point 2 - controller is in OFF mode
 - All operations with USB memory key are possible only in OFF mode
- ▶ Point 9 - conditions for new configuration upload
 - The new configuration compatible with the version of the firmware in the controller has been detected (and there is no new firmware file).
 - Detection is based on name of configuration - required name: "InteliMains210-Genset name-M.N.P.B.aig3"
 - There can be only one configuration file
- ▶ Point 10 - Pop-up message
 - Confirmation of configuration upload with current firmware

- ▶ Point 11 - Configuration upload
 - Current archive is download to USB key (Name = SN_YMMMDDHHMM).
 - New configuration is uploaded into the controller without the change of the firmware
 - History record "USB key CFG upload" is made
 - Confirming file (.txt) on USB key is made (Name = SN_YMMMDDHHMM)
 - Content: Serial number, Year/Date/Time, Upgrade to the FW "Name of the new CFG" successful.
 - Confirmation pop-up message: "CFG upgrade success"

Firmware and configuration upload

- ▶ Point 1 - controller detects that USB Flash Drive has been inserted.
 - If the communication via USB B is running controller will not detect the USB memory key.
 - On the other hand if the USB memory key was detected, communication via USB B port is not possible.
- ▶ Point 2 - controller is in OFF mode
 - All operations with USB memory key are possible only in OFF mode
- ▶ Point 6 - conditions for new firmware and configuration upload
 - The new configuration has been detected. Also there is firmware file compatible with detected new configuration
 - Detection is based on name of configuration - required name: "InteliMains210-Genset name-M.N.P.B.aig3" and on name of firmware - required name: "InteliMains210-M.N.P.B.bin"
 - There can be only one configuration file
 - There can be stored more firmwares on the USB key. Controller automatically select the compatible firmware with highest version.
- ▶ Point 7 - Pop-up message
 - Confirmation of configuration and firmware upload
- ▶ Point 8 - Configuration and firmware upload
 - Current archive is download to USB key (Name = SN_YMMMDDHHMM).
 - New firmware is uploaded into the controller
 - New configuration is uploaded into the controller
 - History record "USB key FW and CFG upload" is made
 - Confirming file (.txt) on USB key is made (Name = SN_YMMMDDHHMM)
 - Content: Serial number, Year/Date/Time, Upgrade to the FW "Name of the new FW" successful, Upgrade to the FW "Name of the new CFG" successful.
 - Confirmation pop-up message: "FW and CFG upgrade success"

Configuration download

- ▶ Point 1 - controller detects that USB Flash Drive has been inserted.
 - If the communication via USB B is running controller will not detect the USB memory key.
 - On the other hand if the USB memory key was detected, communication via USB B port is not possible.

- ▶ Point 2 - controller is in OFF mode
 - All operations with USB memory key are possible only in OFF mode
- ▶ Points 3, 6, 9 - conditions for configuration download
 - There is no firmware or configuration with required name
- ▶ Point 12 - Pop-up message
 - Confirmation of configuration download
- ▶ Point 11 - Configuration download
 - Current archive is download to USB key (Name = SN_YYMMDDHHMM).
 - History record "USB key Archive download" is made
 - Confirmation pop-up message: "Archive download successful"

5.4.23 Load shedding

The Load shedding is controlled disconnection of less important load groups (circuits) when the object consumption is too high. There are two functions of the load shedding:

- ▶ To avoid loss of power at the fundamental loads in island mode, when the object consumption is getting near to the maximum power of the gen-sets.

All Load shedding outputs are activated (closed) to trip the unessential load when gen-set goes to island:

- ▶ When GCB or MGCB is closed after mains fail and gen-set starts in AUT mode.
- ▶ When MCB opens from parallel to mains operation in AUT mode.
- ▶ Before MCB is opened in MAN mode by button.

How the Load shedding controls the Load shedding outputs

The load shedding function is active in all controller modes except OFF.

Load shedding has three steps and each step is linked with its own binary output, **LOAD SHEDDING STAGE 1 (PAGE 503)**, **LOAD SHEDDING STAGE 2 (PAGE 503)** and **LOAD SHEDDING STAGE 3 (PAGE 504)**

The Load shedding outputs can be activated one by one in the direction 1, 2, 3. The condition for activation are defined by setpoints **Load Shedding Level (page 226)** and **Load Shedding Delay (page 227)**.

The Load shedding outputs are deactivated one by one according to the conditions given by the setpoints **Load Reconnection Level (page 227)**, **Load Reconnection Delay (page 227)**, **Auto Load Reconnection (page 228)**.

For manual reconnection of the load is desired the **Auto Load Reconnection (page 228)** setpoint needs to be disabled and the **MANUAL LOAD RECONNECTION (PAGE 474)** digital input needs to be configured.

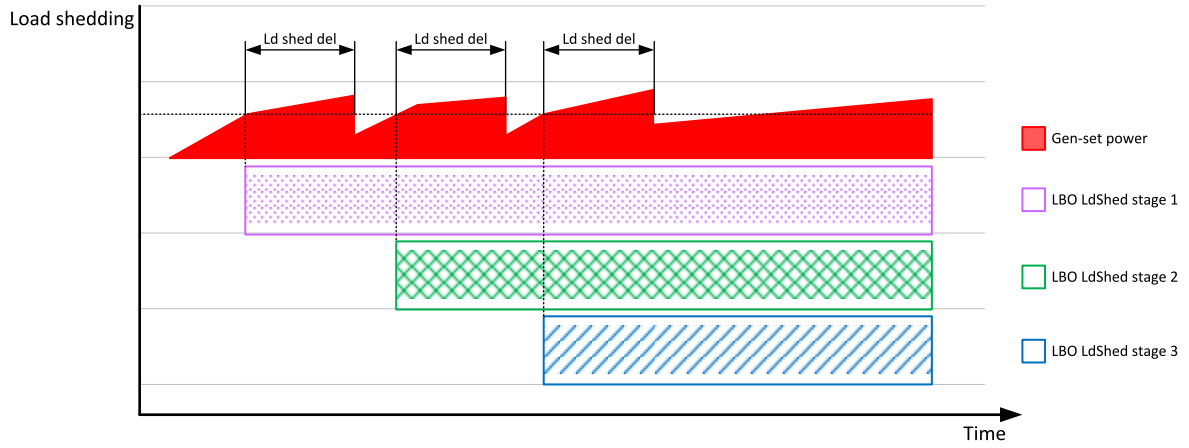


Image 5.53 Load shedding

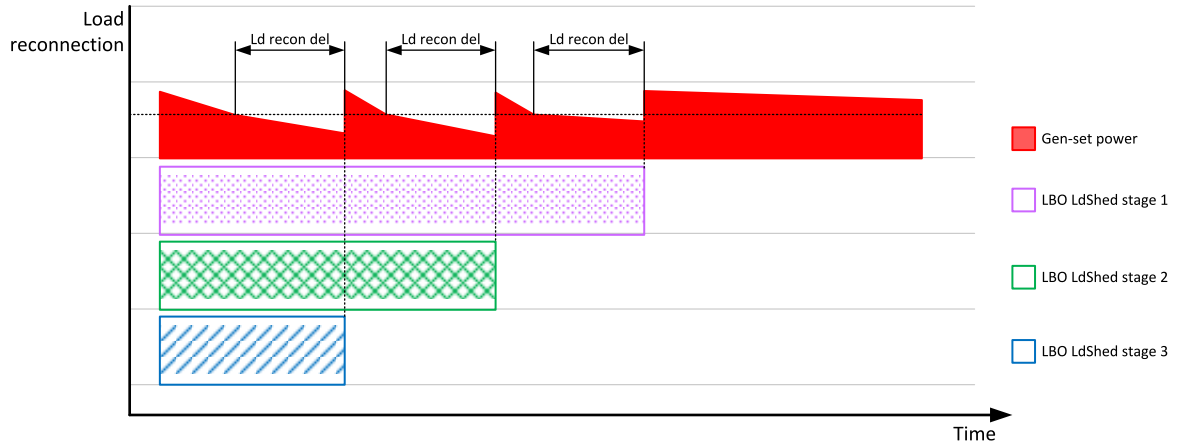


Image 5.54 Load reconnection



Image 5.55 Load manual reconnection

5.4.24 Peak shaving

The function compares the mains import with some certain limit and activates the system start/stop when the load exceeds this limit to decrease the mains import for some certain time.

The Peak shaving function is active only in AUT mode in Parallel to Mains operation. Peak shaving is based on active power only. If load consumption increases over **Peak Shaving Start Level (page 202)** and for period longer than **Peak Shaving Start/Stop Delay (page 202)** the Gen-set is started. If load consumption decreases below **Peak Shaving Stop Level (page 202)** and period longer than **Peak Shaving Start/Stop Delay (page 202)** the Gen-set is stopped. The activation of the function is indicated by LBO:PEAK SHAVING ACTIVE (PAGE 514).

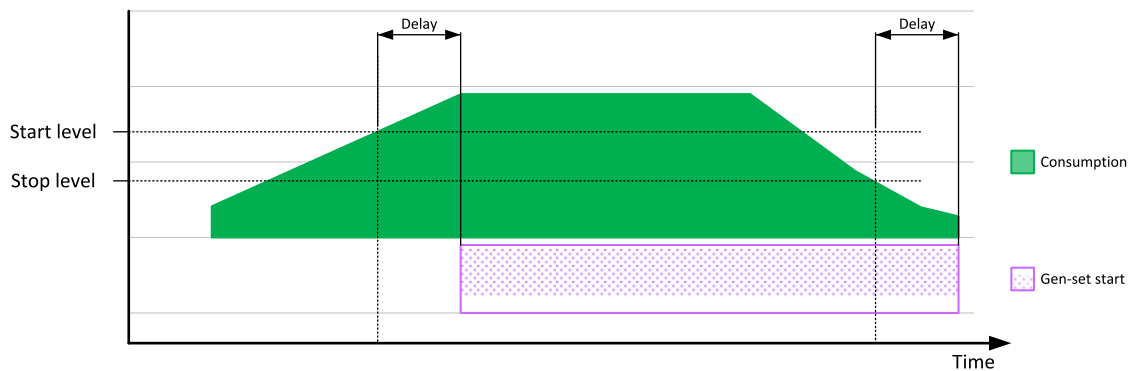


Image 5.56 Peak shaving

[back to Functions](#)

6 Communication

6.1 PC 149
 6.2 Connection to 3rd party systems 163
 6.3 Replacing InternetBridge-NT 178

 [back to Table of contents](#)

6.1 PC

6.1.1 Direct communication 149
 6.1.2 Remote communication 151

6.1.1 Direct communication

A RS232, USB, RS485 or ethernet interface can be used for direct cable connection to a PC.

Connection via RS232

A plug-in communication module CM-RS232-485 is necessary for communication via RS232 connection. The module is plugged into the slot located on the rear side of the controller. To find more information about installation of the modules **see Plug-in module installation on page 44.**

RS232 interface uses **COM1 Mode (page 304)** port of the controller. Use a cross-wired serial communication cable with DB9 female connectors and signals Rx, Tx, GND.

Note: Also USB-RS232 convertor can be used.

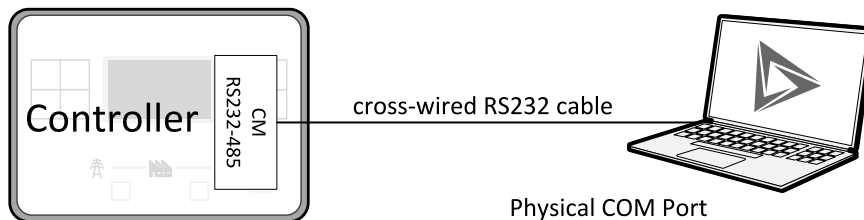


Image 6.1 Cross-wired RS232 cable is used

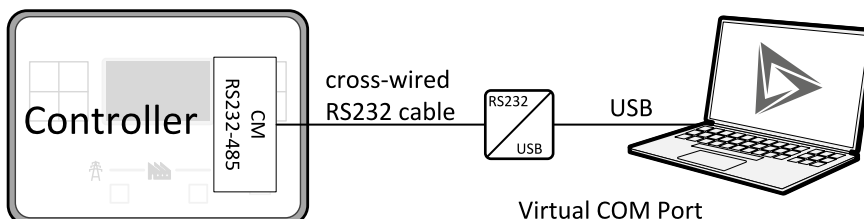


Image 6.2 Cross-wired RS232 cable and USB is used

Connection via RS485

Plug-in module CM-RS232-485 or on board RS485 connector can be used for communication via RS485 connection.

A plug-in communication module CM-RS232-485 is necessary for communication via RS485 connection.

The module is plugged into the slot located on the rear side of the controller. To find more information about installation of the modules **see Plug-in module installation on page 44**.

RS485 interface uses **COM2 Mode (page 305)** port of the controller.

Note: Also *USB-RS485 convertor* can be used.

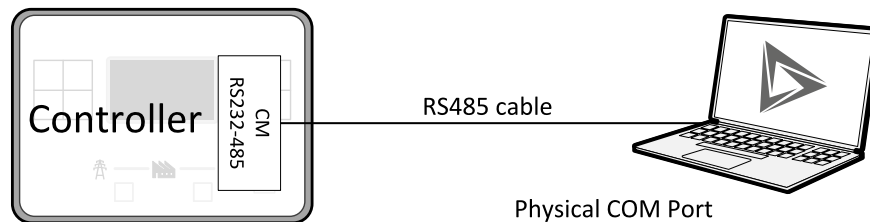


Image 6.3 Plug-in module CM RS232-485 is used

Connection via Ethernet

A plug-in communication module CM-Ethernet is necessary for ethernet connection.

The module is plugged into the slot located on the rear side of the controller. To find more information about installation of the modules **see Plug-in module installation on page 44**.

This connection type is used for communication with the controller from IntelliConfig or any other PC tool. This connection can be used regardless of AirGate is switched on or off. Only three remote clients can be connected at the same time (via AirGate only two remote clients at the same time).

To connect your PC tool to the controller use the INTERNET connection type and just put the CM-Ethernet IP address into the gen-set address box in the PC tool. If you do not use the default **ComAp TCP Port (page 335)** 23, then you also have to specify the port number using a colon.

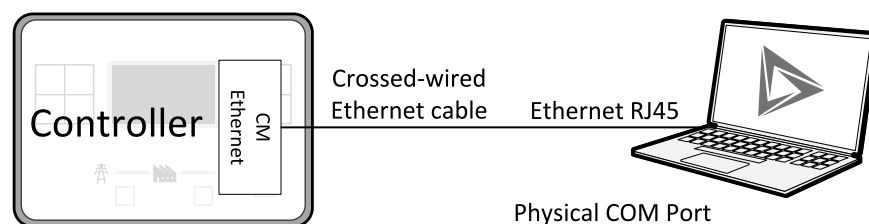


Image 6.4 Ethernet cable is used

Connection via USB

USB interface uses HID profile.

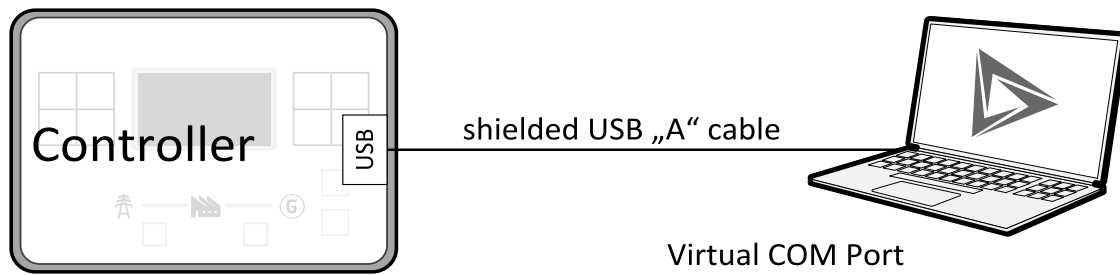


Image 6.5 Shielded USB type A cable is used

 back to Communication

6.1.2 Remote communication

A PC can be connected to the controller also remotely via CM-GPRS or CM-Ethernet plug-in module.

IMPORTANT: Factory default password and access code are "0". It is highly recommended to change these parameters.

Ethernet LAN connection

Direct IP LAN connection is intended to be used if the CM-Ethernet module is reachable from the client computer by specifying the IP address at which the module can be contacted.

- ▶ If direct IP connection is to be used within a local network the CM-Ethernet must have static IP address in the respective local network.

Note: If you have troubles with setting up static and public IP address for direct connection from Internet use AirGate connection instead.

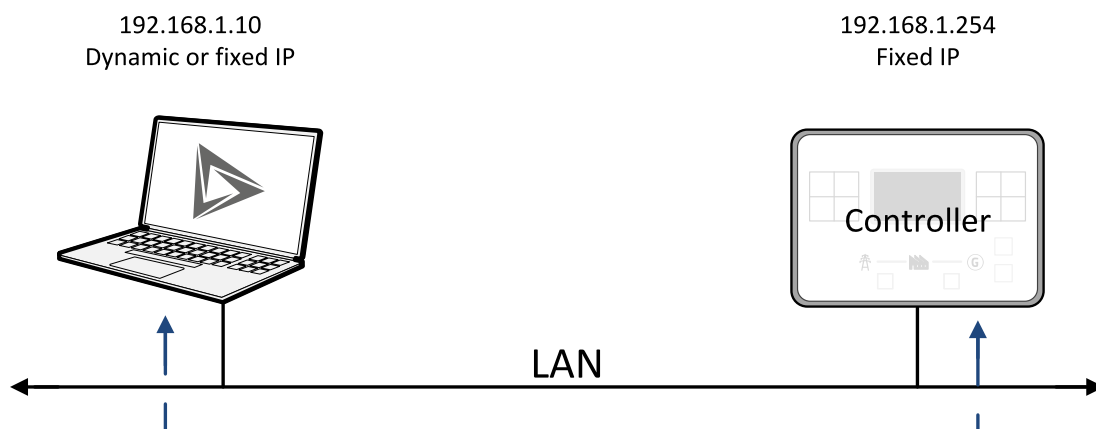


Image 6.6 Ethernet LAN connection

Setting-up static IP address

There are two basic ways to get the static IP address.

First way is to switch the CM-Ethernet to manual IP address mode. Adjust the setpoint **IP Address Mode (page 330)** to FIXED. In that case all setpoints of IP settings (**IP Address (page 331)**, **Subnet Mask (page 331)**, **Gateway IP (page 331)**, **DNS IP Address 1 (page 332)**) have to be adjusted manually. If this method is used several basic rules should be kept to avoid conflicts with the remaining network infrastructure:

- ▶ The static IP used in the controller must be selected in accordance with the local network in which CM-Ethernet is connected.
- ▶ The static IP used in the controller must be excluded from the pool of addresses which is assigned by DHCP server, which is in charge of the respective local network.
- ▶ The local infrastructure must generally allow using devices with manually assigned IP addresses.
- ▶ There must not be any other device using the same static IP address. This can be tested from a computer connected to the same network using "ping <required_ip_address>" command issued from the command line. The IP address is not occupied if there is not any response to the ping command.

Note: The list above contains only basic rules. Other specific restrictions/rules may take place depending on the local network security policy, technology used, topology etc.


Next way is to switch the CM-Ethernet to automatic IP address mode. Adjust the setpoint **IP Address Mode** (page 330) to AUTOMATIC. In that case all IP settings are assigned by DHCP server. Then configure the DHCP server to assign always the same IP address (i.e. static IP address) to the particular CM-Ethernet according to it's MAC address.

Internet connection

Public static IP

If public static IP connection is to be used from the Internet, the IP address, which is entered into the client computer, must be static and public in scope of the Internet.

- ▶ If CM-Ethernet is connected to Internet via a local ethernet network then in most cases port forwarding must be created from the public IP address of the network gateway to the local IP address of CM-Ethernet at the port specified for ComAp protocol. Different port numbers can be used to create multiple port forwarding rules in the same local network.

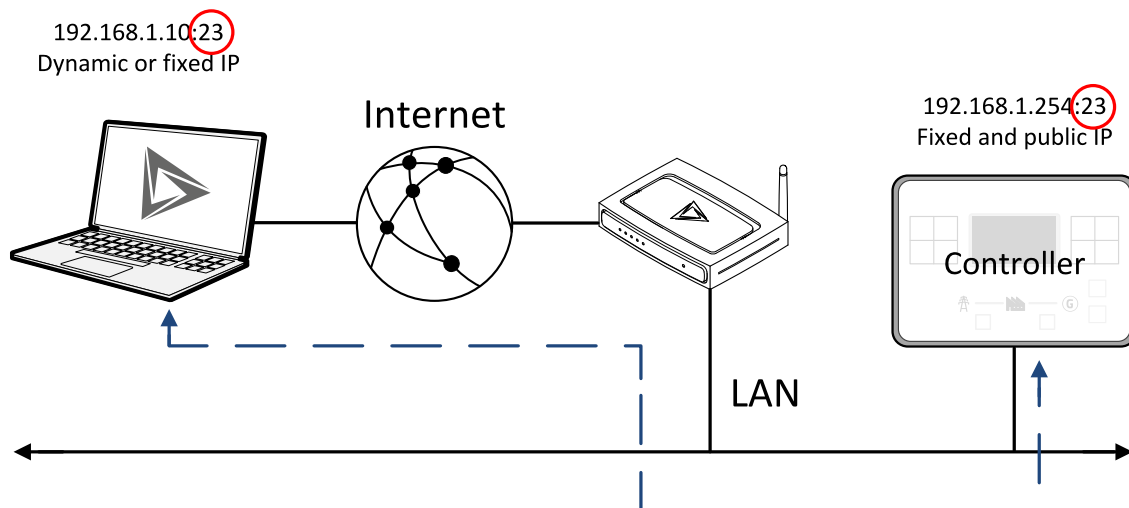

AirGate

This connection type is intended for remote connection from IntelliConfig, or any other ComAp PC tool over the Internet in situations, where obtaining fixed public IP address is not possible. Only two remote clients can be connected at the same time.

This connection type is active if AirGate connection is enabled. Setpoint **AirGate Address** (page 334) must contain AirGate server address. It can be entered in text form as well as numeric form. There is a public AirGate server available at address "airgate.comap.cz".

Once the controller is attached to the Internet and the AirGate server address is properly adjusted then the controller registers automatically to the server and an identification string AirGate ID is given to a controller, which is visible at the controller screen.

To connect your PC tool to the controller use the AirGate connection, put the the same AirGate address as in the controller into the AIRGATE ADDRESS field and use the AirGate ID displayed on the controller.

SMS

Event SMS

The IntelliMains 210 controller equipped with the CM-GPRS or CM-4G-GPS communication module is able to send Event SMS according to the setting of setpoint:

- ▶ **Event Message** (page 327)

Note: Firstly setpoint **Telephone Number 1** (page 322) has to be adjusted.

The following events can be received by mobile phone:

- ▶ Engine Start/Stop
 - Manual Start/Stop
 - Remote Start/Stop
 - AMF Start/Stop (as Automatic Mains Failure Start/Stop)
 - Test Start/Stop Gen-set
- ▶ Mains Fail
- ▶ Mains Returned
- ▶ Load on Mains
- ▶ Load on Gen-set
- ▶ Test On Load

Message structure:

- ▶ Genset Name (hh:mm:ss dd.mm.yyyy)
- ▶ hh:mm:ss Mains Fail
- ▶ hh:mm:ss AMF Start
- ▶ hh:mm:ss Load on Genset
- ▶ hh:mm:ss Mains Returned
- ▶ hh:mm:ss Load on Mains
- ▶ hh:mm:ss AMF Stop

Alarm SMS

The IntelliMains 210 controller equipped with the CM-GPRS or CM-4G-GPS communication module is able to send Alarm SMS according to the setting of setpoints:

- ▶ **Wrn Message (page 328)**
- ▶ **Sd Messages (page 328)**
- ▶ **BOC Message (page 328)**

Note: Firstly setpoint Telephone Number 1 (page 322) has to be adjusted.

Message structure:

- ▶ Gen-set Name
- ▶ AL=(Alarm 1, Alarm 2, Alarm x)

Note: Asterisk means that alarm is unconfirmed and exclamation mark means that alarm is active.

SMS commands

To control the gen-set equipped with IntelliMains 210 controller and CM-GPRS or CM-4G-GPS communication module (or modem) via SMS requests, send an SMS in the structure of:

xxxx, yyyy, zzzz, etc.

SMS send to the telephone number of the SIM card in your CM-GPRS module (or modem). Where the “#” mark means the controller access code, “xxxx” means the Command 1, “yyyy” is Command 2, “zzzz” is Command 3, etc.

Note: Access code is set up via IntelliConfig.

IMPORTANT: If wrong controller access code is set, then only help command is working.

start	Start the engine in MAN mode.
stop	Stop the engine in MAN mode.
fault reset	Acknowledging alarms and deactivating the horn output.
gcb close	Closing GCB in MAN and TEST mode.
gcb open	Opening GCB in MAN and TEST mode.
mcb close	Closing MCB in MAN and TEST mode
mcb open	Opening MCB in MAN and TEST mode
off	Switching to OFF mode.
man	Switching to MAN mode.
auto	Switching to AUTO mode.
test	Switching to TEST mode.
status	Get status information from controller unit.
help	Get a list of available SMS requests.

Note: Between commands are internal delays adjusted due to system requirements.

Example: When the controller, in AUTO mode, with a controller name of “InteliMains 210-Test”, with the CM-GPRS module and access code “0” receives the SMS:

0 man, start, gcb close, gcb open, stop, auto

Controller mode will be changed to MANUAL mode. The engine will be started and GCB will close. Then GCB will open, the engine will stop and it will go into AUTO mode again.

The controller will send back the SMS (controller will respond to SMS after every command has been finished, not sooner.):

#InteliMains 210-Test: <OK>, <OK>, <OK>, <OK>, <OK>, <OK>

The value <OK> or <ERROR> means if the command has been performed successfully or not.

Emails

Event Email

The InteliMains 210 controller equipped with the CM-Ethernet communication module is able to send Event Email according to the setting of setpoint:

► **Event Message (page 327)**

Note: Firstly setpoints *Email Address 1 (page 325)* and *SMTP Sender Address (page 320)* (for CM-GPRS) or *SMTP Sender Address (page 330)* (for CM-Ethernet) have to be adjusted.

Note: *#Summer Time Mode (page 289)* and *Time Zone (page 327)* have to be adjusted for correct time in emails.

Message structure:

Controller

Name: XXX

Serial number: XXX

SW branch: XXX

SW version: XXX

Application: XXX

Appl. version: XXX

Date: dd/mm/yyyy

Time: hh:mm:ss

Alarm list

Alarm 1

Alarm 2

Alarm 3

Events

hh:mm:ss Event 1

hh:mm:ss Event 2

hh:mm:ss Event 3

Alarm Email

The IntelliMains 210 controller equipped with the CM-Ethernet communication module is able to send Alarm Emails according to the setting of setpoints:

- ▶ **Wrn Message (page 328)**
- ▶ **Sd Messages (page 328)**
- ▶ **BOC Message (page 328)**

Note: Firstly setpoints *Email Address 1 (page 325)* and *SMTP Sender Address (page 320)* (for CM-GPRS) or *SMTP Sender Address (page 330)* (for CM-Ethernet) have to be adjusted.

Note: *#Summer Time Mode (page 289)* and *Time Zone (page 327)* have to be adjusted for correct time in emails.

Message structure:

Controller

Name: XXX

Serial number: XXX

SW branch: XXX

SW version: XXX

Application: XXX

Appl. version: XXX

Date: dd/mm/yyyy

Time: hh:mm:ss

Alarm list

Alarm 1

Alarm 2

Alarm 3

History events

0 dd/mm/yyyy hh:mm:ss.0 Event 1

-1 dd/mm/yyyy hh:mm:ss.0 Event 2

-2 dd/mm/yyyy hh:mm:ss.0 Event 3

Note: Asterisk means that alarm is unconfirmed and exclamation mark means that alarm is active.

Web Server

IMPORTANT: The web interface is based on HTTP protocol and is intended to be used only in private networks. It is not recommended to expose the web interface to the public Internet.

The Web Server is designed for basic monitoring and adjustment of the controller using a web browser. Just put the controller IP address into the browser to display the main controller web page like <http://192.168.1.254>. You will be asked for the controller access code prior to entering the web pages.

IMPORTANT: Do not use the browser navigation buttons as "Back", "Forward" or "Reload". Use the links and the reload button located in the toolbar instead.

Note: Only two remote clients can be connected to the Web Server at one moment. If you close your web browser without disconnecting from the CM-Ethernet ("Exit" button at the web pages), the connection will be blocked for next 5 minutes.

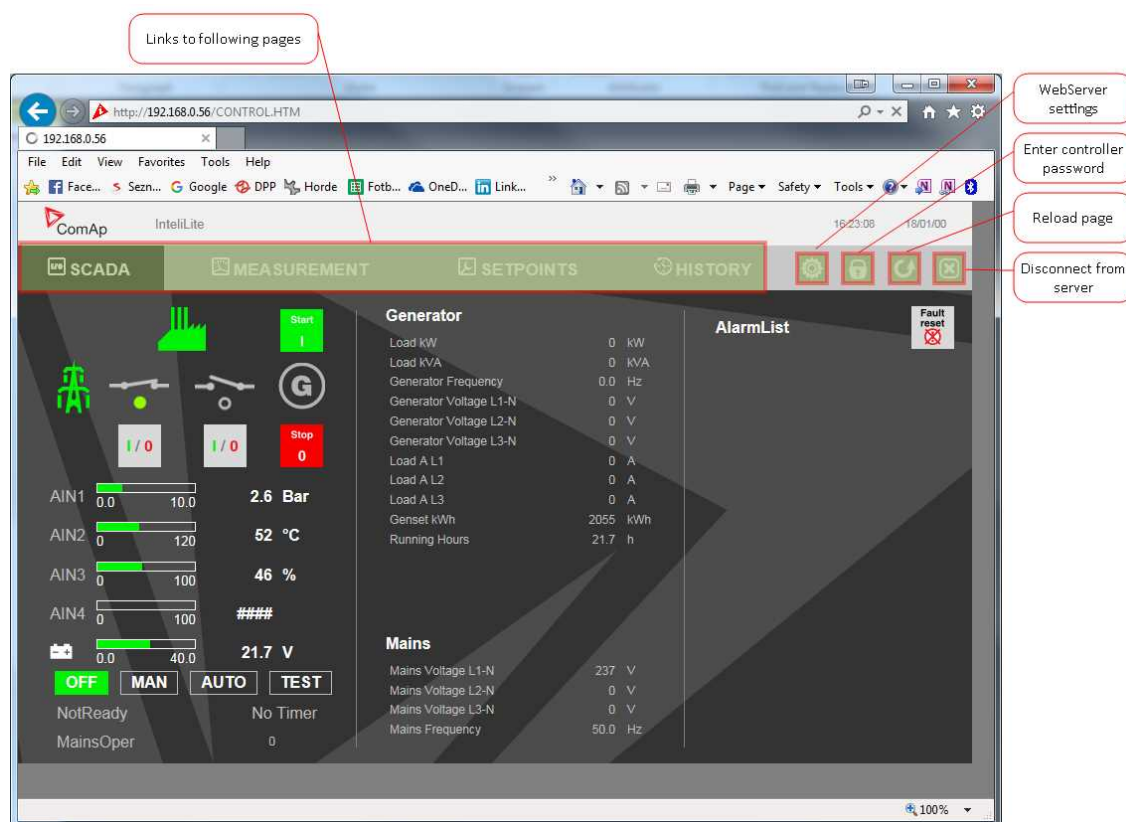


Image 6.7 Web Server main screen

Scada

Click to the SCADA link in the toolbar to display the scada page. The scada page is also the main page which is displayed by default if you just put the CM-Ethernet address into the browser (after entering the right access code).

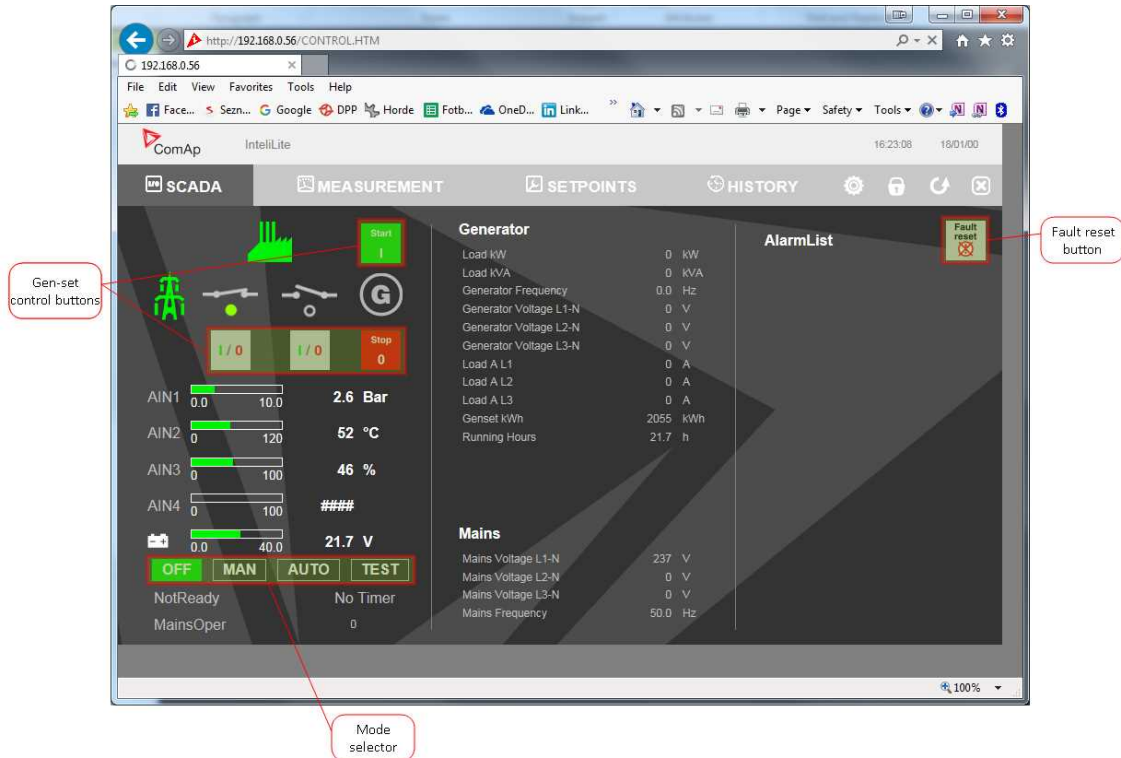


Image 6.8 Web Server - Scada screen

Measurement

Click to the MEASUREMENT link in the toolbar to display the measurement page. Then click to the required group name in the left box to display values of the group in the right box.

Note: The measurement page is automatically refreshed every 60 seconds (this time cannot be changed).

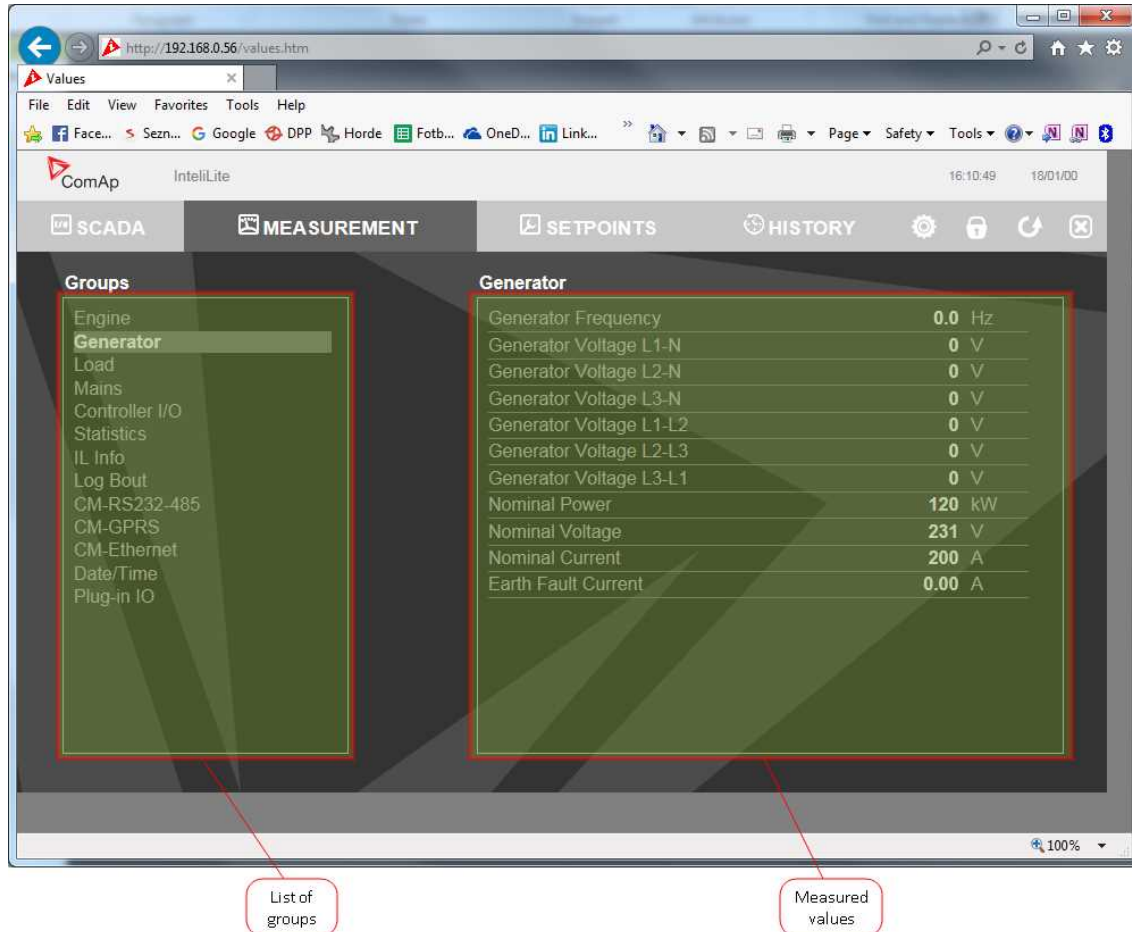


Image 6.9 Web Server - measurement screen

Setpoints

Click to the SETPOINTS link in the toolbar to display the setpoints page.

Click to the required group name in the left box to display setpoints of the group in the right box.

Click to the required setpoint name or value to change the value. If the respective setpoint is protected by password, which is indicated by a lock icon by the setpoint name, you have to click on the "Controller password" icon located in the toolbar and then enter valid password.

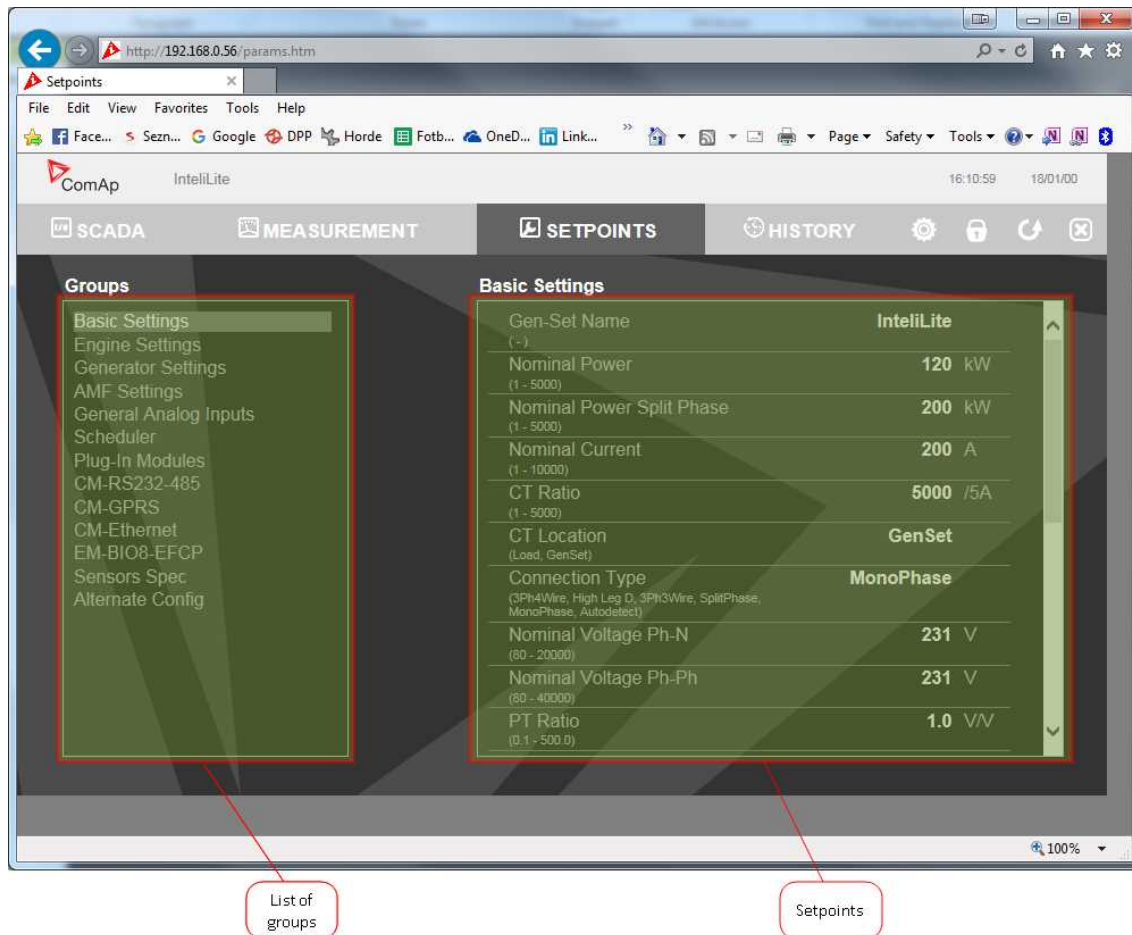


Image 6.10 Web Server - Setpoints screen

History

Click to the HISTORY link in the toolbar to display the history page.

Use the control buttons to move within the history file.

Note: The history page is automatically refreshed every 60 seconds. If a new record appears in the controller, the web page will not show it immediately as e.g. IntelliConfig.

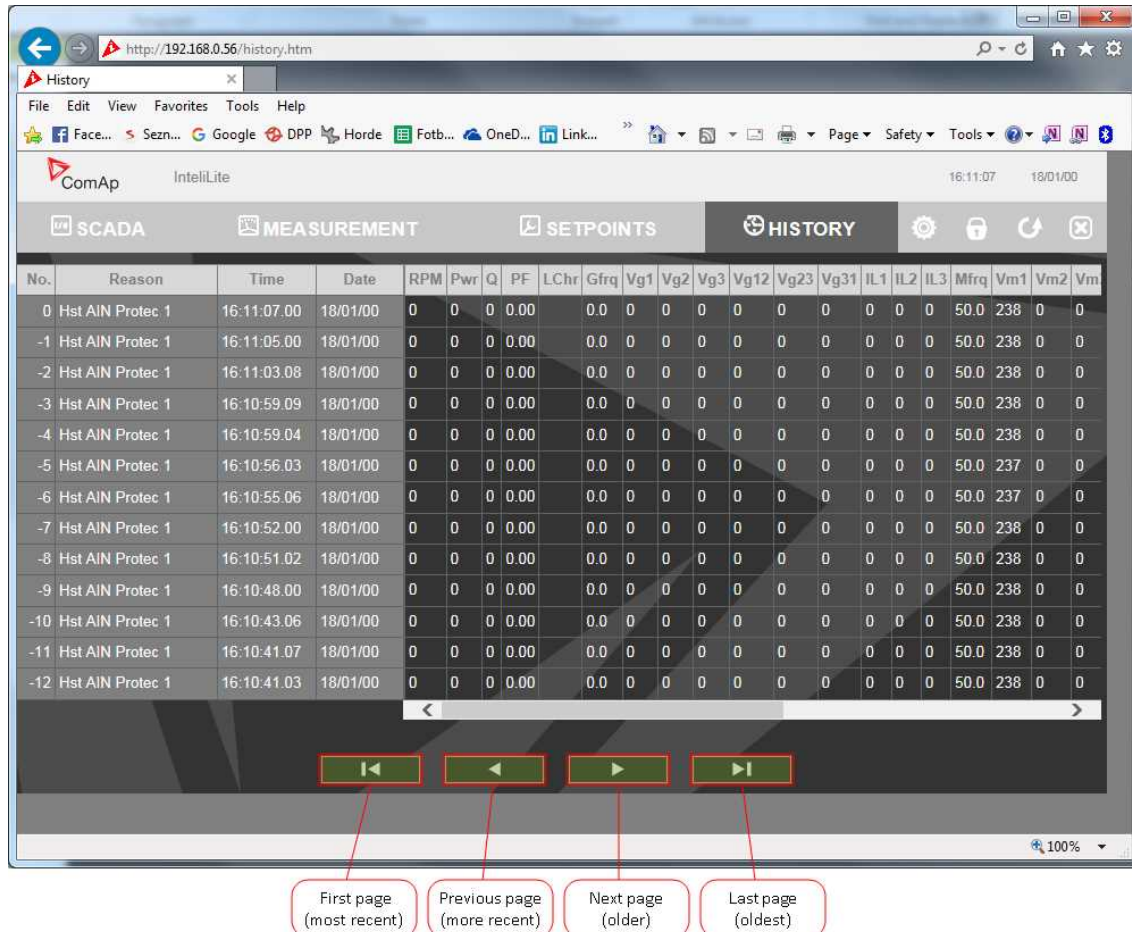


Image 6.11 Web Server - History screen

Web Server Adjustment

Click to the "Web Server settings" icon in the toolbar to display the settings page.

Select the controller language the web pages will appear in.

Select the rate of automatic refresh of the scada page.

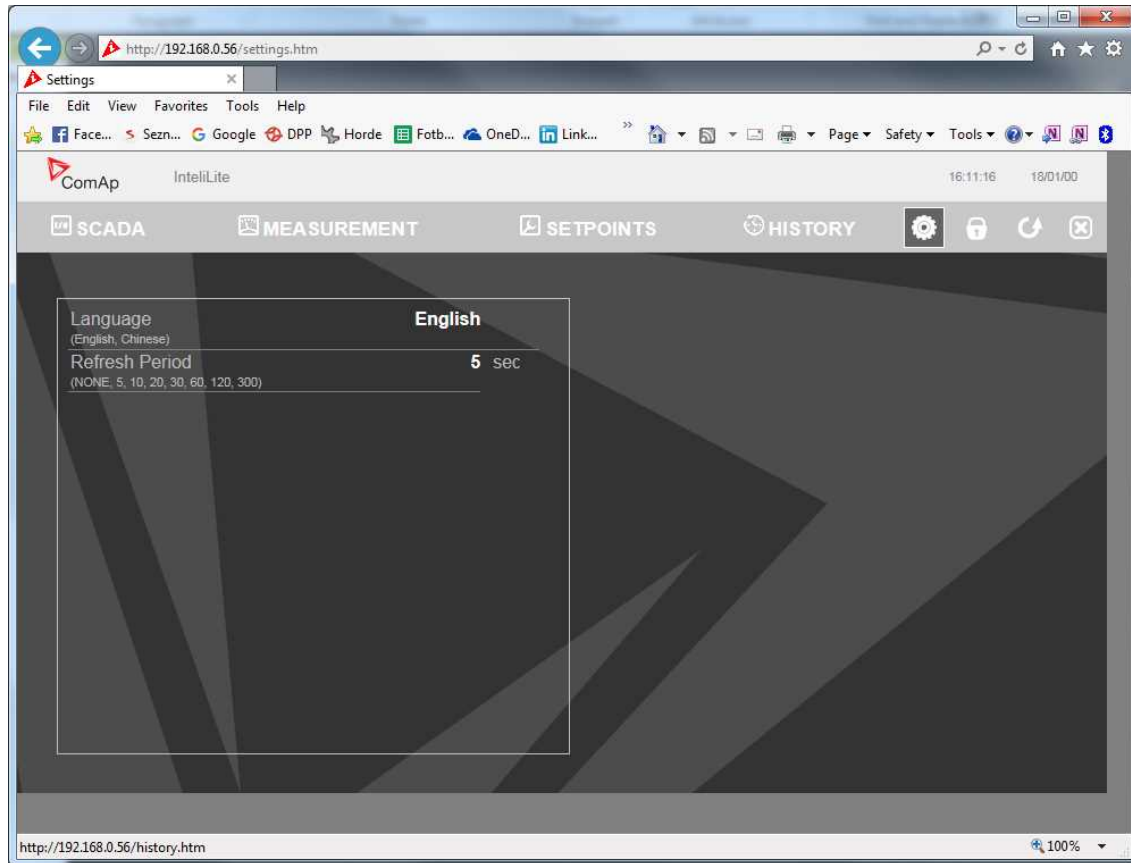


Image 6.12 Web Server - Adjustment screen

[back to Communication](#)

6.2 Connection to 3rd party systems

6.2.1 SNMP	163
6.2.2 MODBUS-RTU, MODBUS/TCP	165

[back to Communication](#)

6.2.1 SNMP

SNMP is an UDP-based client-server protocol used for providing data and events into a supervisory system (building management system). The controller plays the role of a „SNMP Agent“ while the supervisory system plays the role of a „SNMP Manager“.

- ▶ CM-Ethernet module is required for SNMP function
- ▶ Supported versions - SNMP v1 and SNMP v2c

The SNMP Agent function is to be enabled by the setpoint **SNMP Agent** (page 333) in the CM-Ethernet setpoint group. The setpoints **SNMP RD Community String** (page 333) and **SNMP WR Community String**

(page 333) in the same group can be used to customize the „community strings“ for the read and write operations which have function like „passwords“. All requests sent from the SNMP Manager have to contain community string which match with the community string adjusted in the controller otherwise the controller refuses the operation.

MIB table

The „MIB table“ (Management Information Base) is a table which gives to the Manager description of all objects provided by the Agent.

- ▶ The MIB table is specific for each controller type and configuration
- ▶ The MIB table is to be exported from the controller configuration using IntelliConfig
- ▶ Controllers with identical firmware and configuration share also identical MIB table, however if the configuration and/or firmware is not identical the MIB table is different and must be exported separately for each controller.

The root node of the MIB table of IntelliGen controller is enterprises.comapProjekt.il, which is 1.3.6.1.4.1.28634.14. Under this node there are following sub-nodes :

- ▶ Notifications group (SMI v2 only) contains definitions of all notification-type objects that the Agent may send to the Manager.
- ▶ GroupRdFix contains read-only objects that exist in all controller regardless of the firmware version/type and configuration.
- ▶ GroupRdCfg contains read-only objects that depend on the firmware version/type and configuration.
- ▶ GroupWrFix contains read-write objects that exist in all controller regardless of the firmware version/type and configuration.
- ▶ GroupWrCfg contains read-write objects that depend on the firmware version/type and configuration.
- ▶ GroupW contains write-only objects.
- ▶ NotificationData group contains objects that are accessible only as bindings of the notification messages.

SMI version

In IntelliConfig the MIB table may be exported in two different formats – SMI v1 and SMI v2. The format which shall be used for export depends on the SNMP Manager and SMI version that it does support.

Typically, SMI v1 is used for SNMP v1 and vice versa, but it is not a rule and SMI v2 may be also used for SNMP v1.

SNMP reserved objects

Name	OID	Access	Data type	Meaning
pfActionArgument	groupWrFix.24550	read,write	Gauge32	Writing: command argument Reading: command return value
pfActionCommand	groupW.24551	write	Integer32	Command code 1)
pfPassword	groupW.24524	write	Integer32	Password

1) For list of commands, arguments and description of the procedure of invoking commands see the description of the MODBUS protocol.

SNMP notifications

Except the request-response communication model, in which the communication is controlled by the Manager, there are also messages that the Agent sends without any requests. These messages are called „Notifications“ and inform the Manager about significant events occurred in the Agent.

The controller can send notifications to two different SNMP Managers (two different IP addresses). The addresses are to be adjusted in the CM-Ethernet setpoint group by the setpoints **SNMP Traps IP Address 1 (page 333)** and **SNMP Traps IP Address 2 (page 334)**. If the Manager address is not adjusted the particular notification channel is off. The controller will send the notifications in format adjusted by the setpoint **SNMP Trap Format**.

- ▶ Each notification (kind of event) is identified by an unique identifier (Trap ID in SNMPv1 or Notification OID in SNMPv2). This unique identifier gives the specific meaning to the notification message, e.g. Protection 1. level - Fuel Level - alarm activated.
- ▶ All possible notifications and their identifiers are listed in the MIB table.
- ▶ The notification message also contains controller name, serial number and textual description of the event.

Operational events

This events are used for SNMP traps. See the list below:

- ▶ Start commands of gen-set
 - Start button
 - AMF start
 - Remote start
- ▶ Stop commands of gen-set
 - Stop button
 - AMF stop
 - Remote stop
- ▶ Breaker records
 - Load on gen-set
 - Load on mains
- ▶ Others
 - Test on load
 - Mains fail
 - Mains returned

6.2.2 MODBUS-RTU, MODBUS/TCP

MODBUS protocol is used for integration of the controller into a building management system or for remote monitoring via 3rd party monitoring tools.

- ▶ MODBUS-RTU can be used on serial interfaces (CM-RS232-485 module is required via on board RS485 connector or via CM-RS232-485 communication module). The MODBUS-RTU server must be activated by switching the setpoint **COM1 Mode (page 304)** or **COM2 Mode (page 305)** into the Modbus position. The serial speed for MODBUS-RTU communication is to be adjusted by the setpoint **COM1 MODBUS Communication Speed (page 305)** or **COM2 MODBUS Communication Speed (page 306)**.

- ▶ MODBUS/TCP can be used on the ethernet interface (CM-Ethernet module is required). Up to 2 clients can be connected simultaneously. The MODBUS/TCP server must be activated by the setpoint **MODBUS Server** (page 332).

MODBUS, MODBUS/TCP protocol can be used simultaneously with Web connection and direct ethernet/AirGate connection.

IMPORTANT: Do not write setpoint repeatedly (e.g. power control from a PLC repeated writing of baseload setpoint via Modbus). The setpoints are stored in EEPROM memory, which can be overwritten up to 10⁵ times without risk of damage or data loss, but may become damaged, when the allowed number of writing cycles is exceeded!

Note: Modbus-RTU serial communication mode is 8-N-1 - startbit 1, 8 data bits, no parity and 1 stopbit.

Address space

The object address space is separated into several areas as described in the table below. The actual mapping of specific controller data objects to specific MODBUS addresses, which depends on configuration, can be exported into a text file from the appropriate controller archive using IntelliConfig. There are several special registers with fixed meaning (reserved registers) which are listed in a separate table in this chapter.

MODBUS address	Meaning	Access	MODICON object type	MODBUS function
0000 .. 0999	Binary objects	Read only	Discrete Inputs	Read: 01, 02
1000 .. 2999	Values	Read only	Input Registers	Read: 03, 04
3000 .. 3999	Setpoints	Read/Write	Holding Registers	Read: 03, 04 Write: 06, 16
4200 .. 7167	Reserved registers	Read/Write, depends on each specific register	Input Registers Holding Registers	Read: 03, 04 Write: 06, 16

Configurable part of the map

The contents of the configurable part of the map is specified in the configuration table. It can be changed by the customer as well as exported in a human-readable format using the configuration tool.

Discrete inputs

The discrete inputs are read-only objects located in the address range 0-999. The source ComAp objects for discrete inputs can be:

- ▶ Single bit of any value of any binary type.
- ▶ Protection (e.g. 2nd-level protection of the state "xyz"). The input is high if the protection is active regardless of if it is configured or not.

Input registers

The input registers are read-only numeric values located in the address range 1000-2999. The source ComAp objects can be:

- ▶ Any controller value of any data type. The mapping of the particular data type into registers is described in **Mapping data types to registers** (page 167).

Holding registers

The holding registers are read-write numeric values located in the address range 3000-3999. The source ComAp objects can be:

- ▶ Any controller setpoint of a primitive data type. The mapping of the particular data type into registers is described in **Mapping data types to registers (page 167)**.

Default contents of the configurable part

The default map of MODBUS objects contain following items. This map expects the PC tool does have the function allowing the user to modify the map.

Object type	Starting object address	Controller object
Discrete inputs	0000	Physical binary inputs CU + configured* modules Logical binary outputs Protections on binary inputs CU + configured* modules Protections on analog inputs CU + configured* modules All Built-in fixed protections
Input registers	1000	All configured* visible values
Holding registers	3000	None

*Present in the default configuration.

IMPORTANT: The default map of a particular firmware branch and application must not change when a new version of the firmware is created. If new objects are added they must be added to free positions so, that the previous content is not affected.

IMPORTANT: The default map of a particular firmware branch must not contain different values in different applications at the same MODBUS address. It means if a ComAp object does not make sense in some application type the respective MODBUS address must be left unassigned.

Mapping data types to registers

As there are multiple data types in the controller but only one data type in MODBUS (the register, which is 2 byte long), a mapping table is necessary to compose and decompose the MODBUS messages correctly.

Data type	Meaning	Number of registers	Data mapping
Integer8	1-byte signed integer	1	MSB = sign extension LSB = value
Unsigned8	1-byte unsigned integer	1	MSB = 0 LSB = value
Integer16	2-byte signed integer	1	MSB = value, MSB LSB = value, LSB
Unsigned16	2-byte unsigned integer	1	MSB = value, MSB LSB = value, LSB
Integer32	4-byte signed integer	2	MSB1 = value, byte 3 (MSB) LSB1 = value, byte 2 MSB2 = value, byte 1 LSB2 = value, byte 0 (LSB)
Unsigned32	4-byte unsigned integer	2	MSB1 = value, byte 3 (MSB)

Data type	Meaning	Number of registers	Data mapping
			LSB1 = value, byte 2 MSB2 = value, byte 1 LSB2 = value, byte 0 (LSB)
Binary8	8-bit binary value	1	MSB = 0 LSB = value, bits 0-7
Binary16	16-bit binary value	1	MSB = value, bits 8-15 LSB = value, bits 0-7
Binary32	32-bit binary value	2	MSB1 = value, bits 24-31 LSB1 = value, bits 16-23 MSB2 = value, bits 8-15 LSB2 = value, bits 0-7
Char	1-byte ASCII character	1	MSB = 0 LSB = ASCII value of the character
StrList	Index into a list of strings	1	MSB = 0 LSB = index into the list
ShortStr	Zero-terminated string of max 15 ASCII characters.	8	MSB1 = ASCII value of the 1. character LSB1 = ASCII value of the 2. character MSB2 = ASCII value of the 3. character LSB2 = ASCII value of the 4. character ...
LongStr	Zero-terminated string of max 31 ASCII characters.	16	MSB1 = ASCII value of the 1. character LSB1 = ASCII value of the 2. character MSB2 = ASCII value of the 3. character LSB2 = ASCII value of the 4. character ...

Data type	Meaning	Number of registers	Data mapping
Date	Date (dd-mm-yy)	2	MSB1 = BCD (dd) LSB1 = BCD (mm) MSB2 = BCD (yy) LSB2 = 0
Time	Time (hh-mm-ss)	2	MSB1 = BCD (hh) LSB1 = BCD (mm) MSB2 = BCD (ss) LSB2 = 0
Alarm	An item of the Alarmlist	27	MSB1 = reserved for future use LSB1 = reserved for future use MSB2 = Alarm level *) LSB2 = Alarm status **) MSB3 = alarm string ***) LSB3 = alarm string MSB4 = alarm string LSB5 = alarm string ...

*) 1 .. level 1 (yellow), 2 .. level 2 (red), 3 .. sensor fail

**) Bit0 – alarm is active, Bit1 – alarm is confirmed

***) String encoding is UTF-8

Error codes (exception codes)

Exception code is returned by the controller (server) if the query sent from the client could not be completed successfully.

The controller responds with the error codes in as follows:

- ▶ 01 – Illegal function is returned if an incompatible type of operation is applied for a specific object, e.g. if function 03 is applied to a binary object.
- ▶ 02 – illegal address is returned if the client tries to perform an operation with a object address that is not related to any existing object or that is located inside an object which is composed by multiple addresses (registers).
- ▶ 04 – device error is returned in all other erroneous situations. More detailed specification of the problem can be consequently obtained by reading the registers 4205 – 4206.

Reserved registers

There are several registers with specific meaning. These registers are available in all controllers regardless of the configuration.

Register addresses	Number of registers	Access	Data type	Meaning
4200 - 4201	2	read/write	Time	RTC Time in BCD code
4202 - 4203	2	read/write	Date	RTC Date in BCD code
4204	1	read/write	Unsigned8	Index of the language that is used for text data provided by MODBUS (e.g. alarmlist messages).
4205 - 4206	2	read	Unsigned32	Last application error. To be read after the device returns the exception code 04. It contains specific information about the error.
4207 - 4208	2	read/write	Unsigned32	Writing: command argument Reading: command return value
4209	1	write	Unsigned16	Command code
4010	1	-	-	Not implemented
4211	1	write	Unsigned16	Password
4212 - 4213	2	read	Unsigned32	Communication status
4214	1	read	Unsigned8	Number of items in the Alarmlist
4215 - 4241	27	read	Alarm	1. record in alarm list
4242 - 4268	27	read	Alarm	2. record in alarm list
4269 - 4295	27	read	Alarm	3. record in alarm list
4296 - 4322	27	read	Alarm	4. record in alarm list
4323 - 4349	27	read	Alarm	5. record in alarm list
4350 - 4376	27	read	Alarm	6. record in alarm list
4377 - 4403	27	read	Alarm	7. record in alarm list
4404 - 4430	27	read	Alarm	8. record in alarm list
4431 - 4457	27	read	Alarm	9. record in alarm list
4458 - 4484	27	read	Alarm	10. record in alarm list
4485 - 4511	27	read	Alarm	11. record in alarm list
4512 - 4538	27	read	Alarm	12. record in alarm list
4539 - 4565	27	read	Alarm	13. record in alarm list
4566 - 4592	27	read	Alarm	14. record in alarm list
4593 - 4619	27	read	Alarm	15. record in alarm list
4620 - 4646	27	read	Alarm	16. record in alarm list

List of commands and arguments

"Commands" are used to invoke a specific action in the controller via the communication channel. The list of available actions is in the table below. The general procedure of writing a command via MODBUS is as follows:

- (Optional) Write required level of password into the register 44212 (register address 4211). Use function 6. If the password is required or not depends on configuration of access rules. It can be adjusted/modified by IntelliConfig.

2. Write the command argument into the registers 44208-44209 (register addresses 4207-4208). Use function 16.
3. Write the command code into the register 44210 (register address 4209). Use function 6.
4. (Optional) Read the command return value from the registers 44208-44209 (register addresses 4207-4208). Use function 3.
5. If the command was executed the return value is as listed in the table. If the command was accepted but there was an error during execution the return value indicates the reason:
 - a. 0x00000001 – invalid argument
 - b. 0x00000002 – command refused (e.g. controller not in MAN, breaker can not be closed in the specific situation etc.)

Action	Command code	Argument	Return value
Engine start *)	0x01	0x01FE0000	0x000001FF
Engine stop *)	0x01	0x02FD0000	0x000002FE
Fault reset *)	0x01	0x08F70000	0x000008F8
Horn reset *)	0x01	0x04FB0000	0x000004FC
GCB toggle *)	0x02	0x11EE0000	0x000011EF
GCB on	0x02	0x11EF0000	0x000011F0
GCB off	0x02	0x11F00000	0x000011F1
MCB toggle *)	0x02	0x12ED0000	0x000012EE
MCB on	0x02	0x12EE0000	0x000012EF
MCB off	0x02	0x12EF0000	0x000012F0

*) This action is an equivalent of pressing the front panel button

MODBUS examples

Modbus RTU examples

- ▶ Reading of Battery voltage
 - Export table of values from IntelliConfig

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01053	8213	BatteryVoltage	V	Integer	2	1	0	400	Controller I/O

Request: (Numbers in Hex)									
01	03	04	1D	00	01	15	3C		
Controller address	Modbus function	Register address 041D _{hex} = 1053 _{dec}		Number of registers			CRC		

Response: (Numbers in Hex)									
01	03	02	00	F0	B8	00			
Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read		Data 00F0 _{hex} = 240 _{dec}			CRC		

We read value 240 from register 01053. From table of modbus registers we get dimension of read value and "Dec". Dec=1 means shift one decimal place to the right. So battery voltage is **24.0 V**.

- ▶ Reading Nominal power
 - Export table of values from IntelliConfig

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01228	9018	Nominal Power	kW	Integer	2	0	0	32767	Generator

Request: (Numbers in Hex)									
01	03	04	CC	00	01	45	05		
Controller address	Modbus function	Register address 04CC _{hex} = 1228 _{dec}		Number of registers			CRC		

Response: (Numbers in Hex)									
01	03	02	00	C8	B9	D2			
Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read		Data 00C8 _{hex} = 200 _{dec}			CRC		

Read nominal power is 200 kW.

► Reading all binary inputs as modbus register

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01068	8235	Binary Inputs		Binary#2	2	0	-	-	Controller I/O

Request: (Numbers in Hex)							
01	03	04	2C	00	01	44	F3
Controller address	Modbus function	Register address 042C _{hex} = 1068 _{dec}		Number of registers		CRC	

Response: (Numbers in Hex)							
01	03	02	00	12	38	49	
Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read	Data 0012 _{hex} = 00010010 _{bin}		CRC		

Binary inputs is 00010010. It means Binary input 2 and binary input 5 are active.

Note: You can use modbus function 4 insted of 3, rest of data remain same (CRC differs).

► Reading binary inputs as coil status.

Table: Binaries						
Allowed MODBUS functions: 01, 02						
Addresses Modbus Addr. Prot. Addr.	Source = Value = State	C.O.# State #	Name of Value Name of State	Bit #	Bit Name Activated by protection(s):	Group
00000	Value	8235	Binary Inputs	1	GCB Feedback	Controller I/O
00001	Value	8235	Binary Inputs	2	MCB Feedback	Controller I/O
00002	Value	8235	Binary Inputs	3	Emergency Stop	Controller I/O

We will read state of MCB Feedback binary input.

Request: (Numbers in Hex)							
01	01	00	01	00	01	AC	0A
Controller address	Modbus function	Register address $0001_{hex} = 0001_{dec}$		Number of registers		CRC	

Response: (Numbers in Hex)					
01	01	01	01	90	48
Controller address	Modbus function	Length of data $01_{hex} = 1 \text{ byte read}$		Data $01_{hex} = \text{active}$	
				CRC	

The readed data is 01, it means this binary input is active.

Note: You can use modbus function 2 insted of 1, rest of data remains same (CRC differs).

► Starting the engine

Before starting engine you may need to write password. Depends on your settings in controller.

Table Reserved registers (page 169)

Register addresses	Number of registers	Access	Data type	Meaning
4207 - 4208	2	read/write	Unsigned32	Writing: command argument Reading: command return value
4209	1	write	Unsigned16	Command code

Table List of commands and arguments (page 170)

Action	Command code	Argument	Return value
Engine start	0x01	0x01FE0000	0x000001FF
Engine stop	0x01	0x02FD0000	0x000002FE

Request 1/2: (Numbers in Hex)

01	10	10	6F	00	03	06
Controller address	Modbus function $10_{\text{hex}} = 16_{\text{dec}}$	Register address $106F_{\text{hex}} = 4207_{\text{dec}}$	Number of registers		Data length in bytes	

Request 2/2: (Numbers in Hex)

01	FE	00	00	00	01	68	0B
Argument				Command code		CRC	

Note: Command and argument may be written as one "packet" (function 16) or you can split it and write argument (function 16) and after that write command code (function 6).

► Password

This password is the same as in IntelliConfig or directly in controller.

Table **Reserved registers (page 169)**

Register addresses	Number of registers	Access	Data type	Meaning
4211	1	write	Unsigned16	Password

Note: Default password is "0".

In this example the password is "1234".

Request: (Numbers in Hex)							
01	06	10	73	04	D2	7C	D1
Controller address	Modbus function	Register address 1073 _{hex} = 4211 _{dec}		Password 04D2 _{hex} = 1234 _{dec}		CRC	

Response for success: (Numbers in Hex)							
01	06	10	73	00	00	7C	D1
Controller address	Modbus function	Register address 1073 _{hex} = 4211 _{dec}		Allways zero.		CRC	

Response for bad password: (Numbers in Hex)							
01	86	04			43	A3	
Controller address	Modbus exception for function 6.	04 – device error see Error codes (exception codes) on page 169			CRC		

► Nominal Power – writing

Table: Setpoints									
Allowed MODBUS functions: 03, 04, 06, 16									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
03008	8276	Nominal Power	kW	Unsigned	2	0	1	5000	Basic Settings

Request: (Numbers in Hex)									
01	06	0B	C0	00	64	8A	39		
Controller address	Modbus function	Register address 0BC0 _{hex} = 3008 _{dec}		Data 0064 _{hex} = 100 _{dec}		CRC 8A 39			

Response: (Numbers in Hex)									
01	06	0B	C0	00	00	8B	D2		
Controller address	Modbus function	Register address 0BC0 _{hex} = 3008 _{dec}		Allways zero		CRC 8B D2			

Written setpoint nominal power is 100 kW.

► CRC calculation

The check field allows the receiver to check the validity of the message. The check field value is the Cyclical Redundancy Check (CRC) based on the polynomial $x^{16}+x^{15}+x^2+1$. CRC is counted from all message bytes preceding the check field.

Online CRC calculator: <http://www.lammertbies.nl/comm/info/crc-calculation.html> Use CRC-16 (Modbus)

Write LSB first.

For writing nominal power 100 kW the CRC is calculated from this data: 01060BC00064_{hex}

Modbus TCP examples

- ▶ Reading of Battery voltage
 - Export table of values from IntelliConfig

Table: Values									
Allowed MODBUS functions: 03, 04									
Register(s)	Com.Obj.	Name	Dimension	Type	Len	Dec	Min	Max	Group
01053	8213	BatteryVoltage	V	Integer	2	1	0	400	Controller I/O

Request: (Numbers in Hex)											
00	00	00	00	00	06	01	03	04	1D	00	01
transaction identifier (usually 0)	protocol identifier (usually 0)	Length of data bytes following		Controller address	Modbus function	Register address 041D _{hex} = 1053 _{dec}		Number of registers			

Request: (Numbers in Hex)											
00	00	00	00	00	06	01	03	04	1D	00	01
transaction identifier (usually 0)	protocol identifier (usually 0)	Length of data bytes following		Controller address	Modbus function	Register address 041D _{hex} = 1053 _{dec}		Number of registers			

Response: (Numbers in Hex)											
00	00	00	00	00	05	01	03	02	00	F0	
transaction identifier (usually 0)	protocol identifier (usually 0)	Length of data bytes following		Controller address	Modbus function	Length of data 02 _{hex} = 2 bytes read		Data 00F0 _{hex} = 240 _{dec}			

We read value 240 from register 01053. From table of modbus registers we get dimension of read value and "Dec". Dec=1 means shift one decimal place to the right. So battery voltage is **24.0 V**.

🔍 [back to Connection to 3rd party systems](#)

6.3 Replacing InternetBridge-NT

6.3.1 Sites with "NT" family controllers

The CAN module IntelliBridge-NT was designed to provide ethernet or cellular connectivity for IntelliGen NT, IntelliSys NT, IntelliSys Gas controllers and it's derivatives. The typical topology of IntelliBridge-NT connection was as follows:

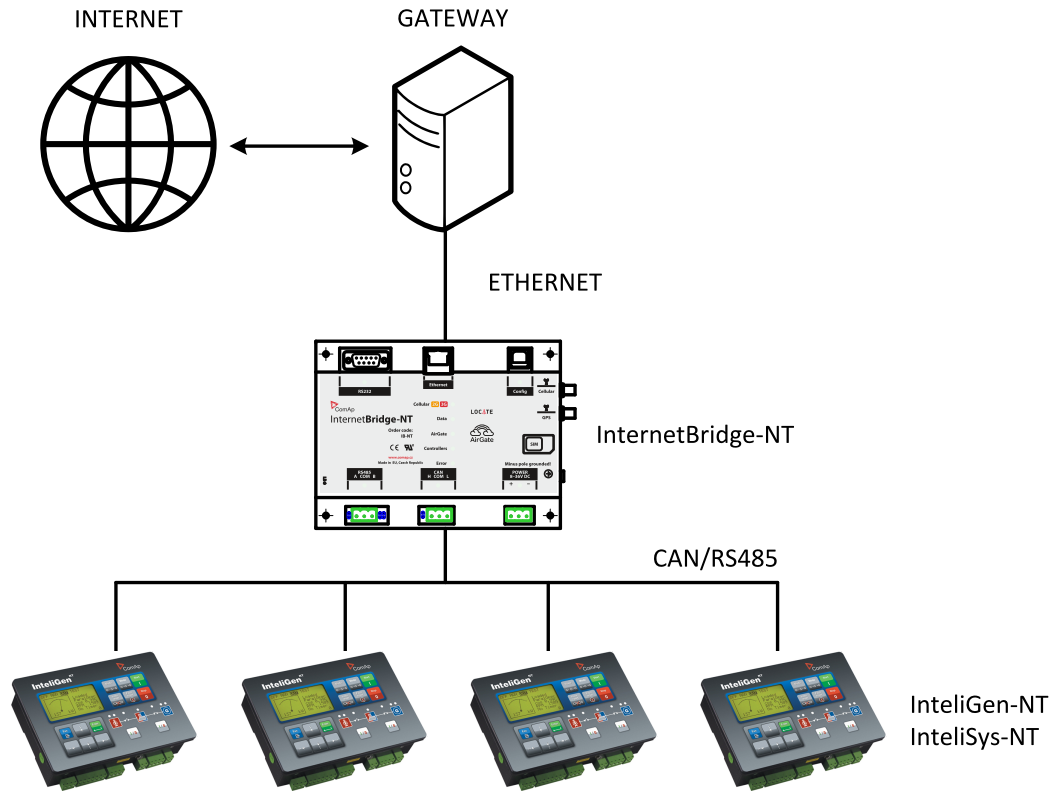


Image 6.13 IntelliBridge-NT, wired internet connection

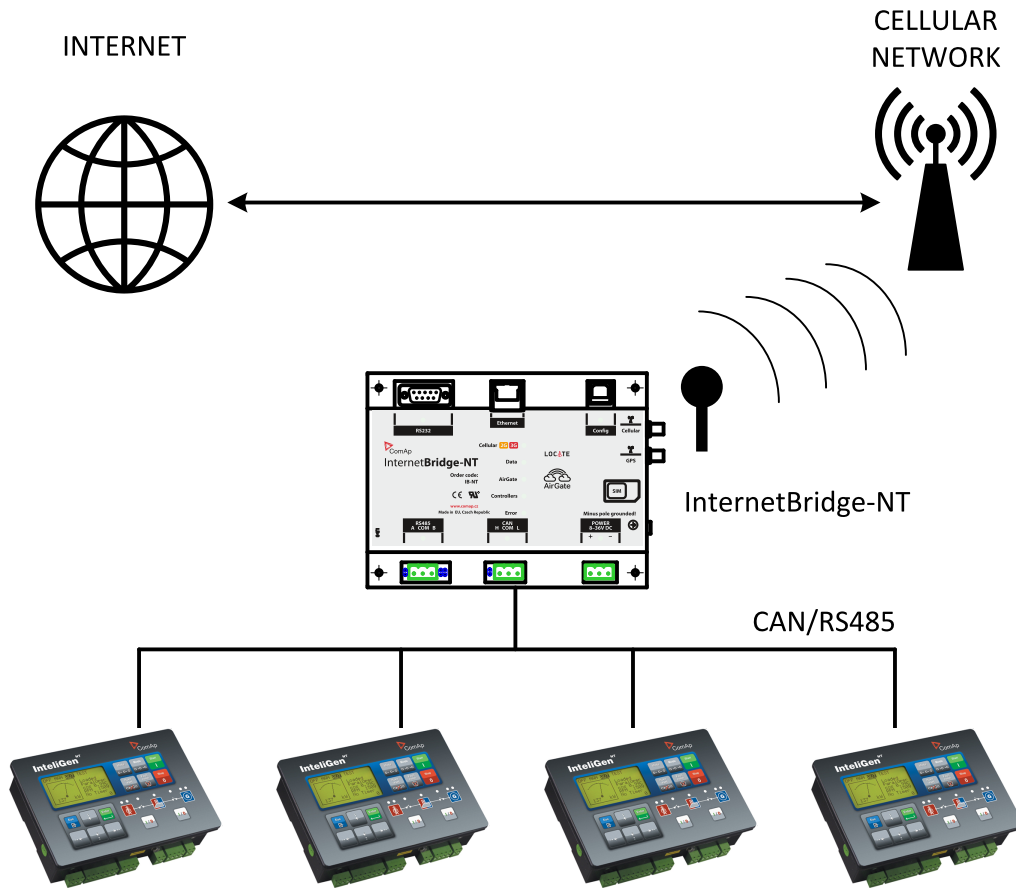


Image 6.14 IntelliBridge-NT, cellular internet connection

6.3.2 Sites with new controller families

In the new controller product families the connectivity is based primarily on ethernet - a modern, fast and reliable communication technology. The communication interface has been **moved inside the controllers**, either as built-in or as plug-in modules. Thus, there is no need of external CAN module to provide the connectivity. The topology has changed as described at following pictures.

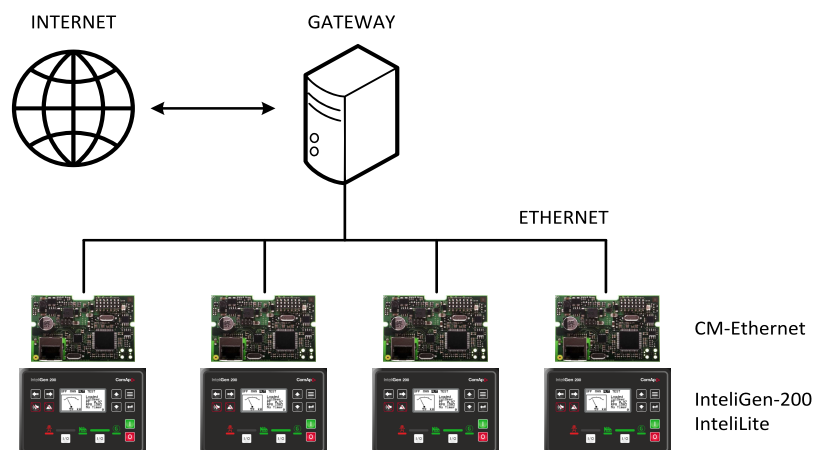


Image 6.15 IntelliGen 200, wired internet connection

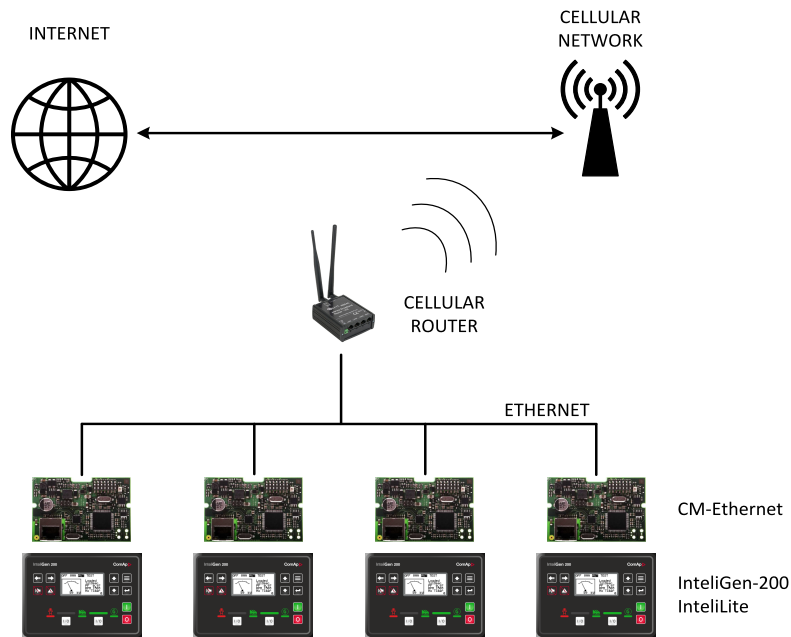


Image 6.16 IntelliGen 200, cellular internet connection via cellular router

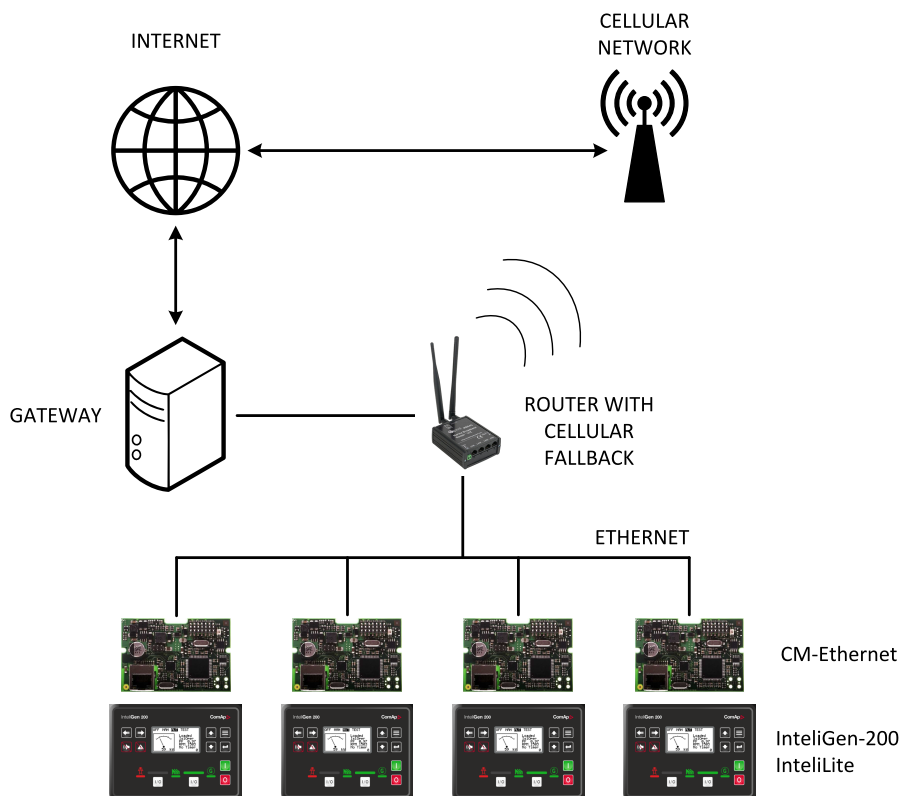


Image 6.17 IntelliGen 200, wired internet connection with cellular fallback

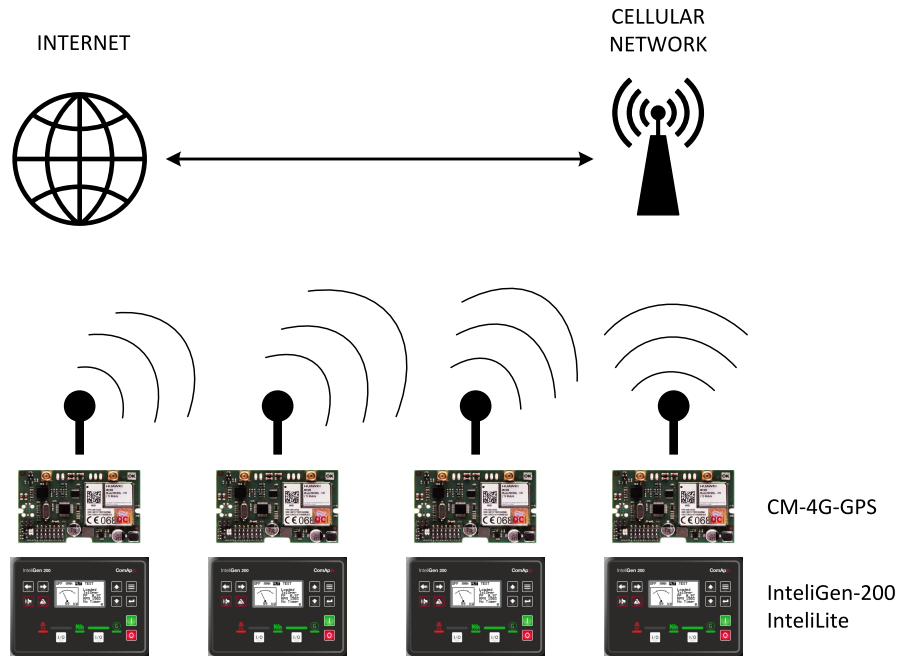


Image 6.18 IntelliGen 200, cellular internet connection via separate cellular modules

6.3.3 Combined sites

There might be also sites where the "NT" controllers are used together with newly installed controllers from the new product families. In such a case the topology respects the different connectivity:

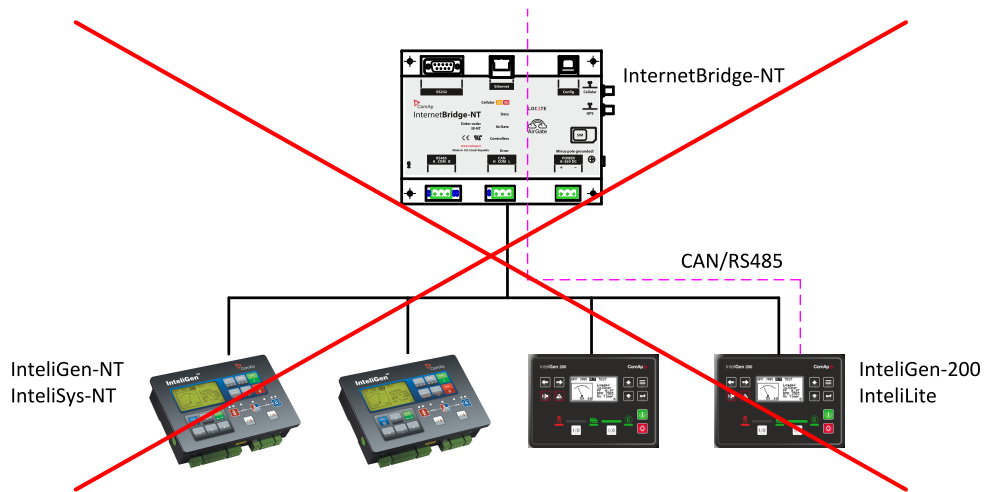
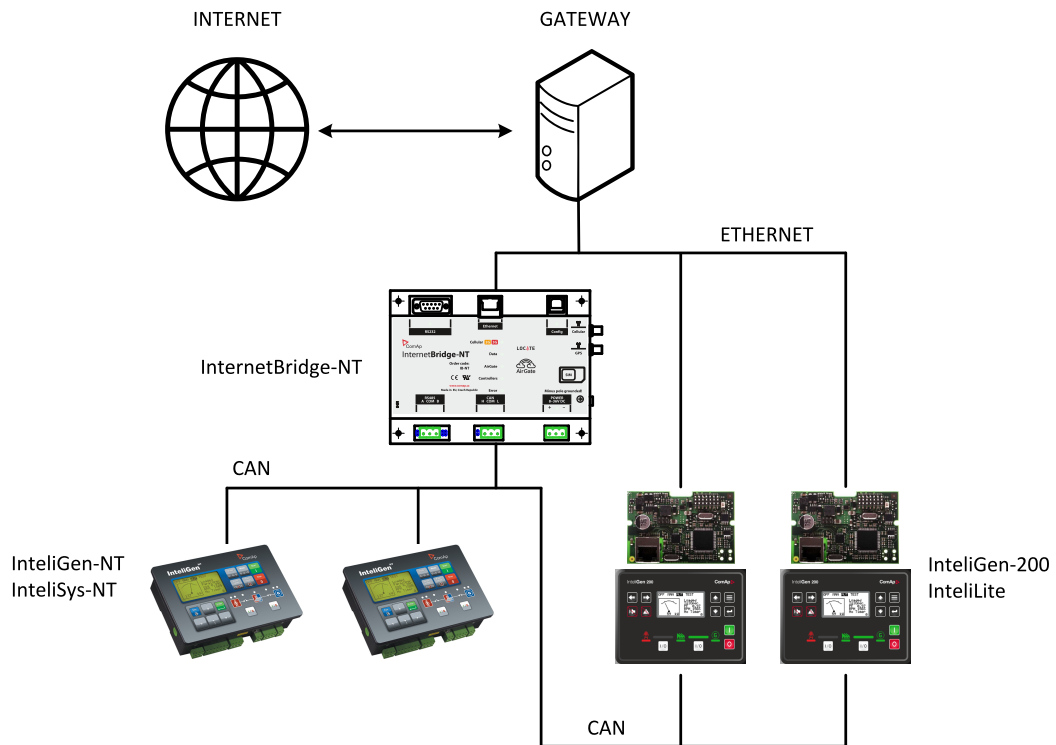


Image 6.19 Combined site, wired internet connection

Note: The controllers from new product lines are not supported in InteliBridge-NT and thus not accessible via it.

7 Technical data

Power supply

Power supply range	8-36 V DC
Power consumption	320 mA / 8 V DC
	210 mA / 12 V DC
	120 mA / 24 V DC
	90 mA / 36 V DC
RTC battery	Replaceable
Fusing	Power terminal max. 4 A w/o BOUT consumption
	E-Stop max. 12 A
Fusing E-Stop	12 A
Max. Power Dissipation	9 W

D+

Max. excitation current	250 mA
Charging fail threshold	80 % of Usupply

Operating conditions

Operating temperature	-20 °C to +70 °C
Operating temperature for Low Temp. version	-40 °C to +70 °C
Storage temperature	-30 °C to +80 °C
Protection degree (front panel)	IP 65
Operating humidity	95 % w/o condensation
Vibration	5-25 Hz, ± 1,6 mm
	25-100 Hz, a = 4 g
Shocks	a = 500 m/s ²
Surrounding air temperature rating 70°C	
Suitable for pollution degree 2	

Voltage measurement

Measurement inputs	3ph-n Gen voltage , 3ph-n Mains
Measurement range	277 V ph-n
Max. allowed voltage	350 V ph-n
Accuracy	1 %
Frequency range	40-70 Hz (accuracy 0.1 Hz)
Input impedance	0,72 MΩ ph-ph , 0,36 MΩ ph-n

Current measurement

Measurement inputs	3ph Gen current, 1ph Mains current
Measurement range	5 A
Max. allowed current	10 A
Accuracy	1,5 % for full temperature range (1 % from 0 °C to 50 °C)
Input impedance	< 0,1 Ω

Display

Type	Build-in monochromatic 3,2"
Resolution	132 x 64 px

Binary inputs

Number	8, non-isolated
Close/Open indication	0-2 V DC close contact 6-36 V DC open contact

Binary outputs

Low current	6 low current output, non-isolated BO 3-8 = 0,5 A switching to positive supply terminal
--------------------	---

Communications

USB port	Non-isolated
CAN 1 + CAN 2	250 / 50 kbps, isolated, nominal impedance 120 Ω

[⬅ back to Table of contents](#)

8 Appendix

8.1 Controller objects	186
8.2 Alarms	558
8.3 Modules	594

 [back to Table of contents](#)

8.1 Controller objects

8.1.1 Setpoints	187
8.1.2 Values	406
8.1.3 Logical binary inputs	444
8.1.4 Logical binary outputs	482
8.1.5 Logical analog inputs	516
8.1.6 PLC	545

8.1.1 Setpoints

What setpoints are:

Setpoints are analog, binary or special data objects which are used for adjusting the controller to the specific environment. Setpoints are organized into groups according to their meaning. Setpoints can be adjusted from the controller front panel, PC, MODBUS, etc.

All setpoints can be protected by a password against unauthorized changes. Password protection can be assigned to the setpoints during the configuration procedure.

IMPORTANT: Do not write setpoints repeatedly (e.g. power control from a PLC by repeated writing of baseload setpoint via Modbus). The setpoints are stored in EEPROM memory, which can be overwritten up to 10⁵ times without risk of damage or data loss, but it may become damaged, when the allowed number of writing cycles is exceeded.

List of setpoint groups

Group: Process Control	193
Group: Basic settings	203
Group: Communication Settings	209
Group: Bus Settings	211
Group: Mains Settings	214
Group: Load Sheeding	226
Group: Power Management	228
Group: Load Control	238
Group: Voltage/PF Control	243
Group: Synchronisation	245
Group: General Analog Inputs	248
Group: Scheduler	288
Group: Plug-In Modules	303
Group: CM-RS232-485	304
Group: CM-GPRS	306
Group: CM-4G-GPS	315
Group: CM-Ethernet	325
Group: Alternate Configuration	335
Group: PLC	342

For full list of setpoints go to the chapter **List of setpoints (page 188)**.

List of setpoints

Process Control

Application Mode Select	193
#System Load Control	
PTM	195
#System PF Control PTM	195
Load Control PTM	196
PF Control PTM	196
Import Load	197
Import PF	197
Import/Export Limitation	198
#System BaseLoad	198
#System Power Factor	198
Mains Coupling	199
CB Control In MAN Mode	200
Mains Import	
Measurement	201
Peak Shaving	201
Peak Shaving Start Level	202
Peak Shaving Stop Level	202
Peak Shaving Start/Stop	
Delay	202
AMF Start	219

Basic settings

Controller Name	203
Nominal Mains Import	203
Nominal Current	204
Mains Import CT Ratio	204
Connection type	204
Nominal Voltage Ph-N	205
Nominal Voltage Ph-Ph	206
Mains VT Ratio	206
Nominal Frequency	206
Controller mode	207
Power On Mode	207
Backlight Timeout	207
Horn Timeout	208

Phase Rotation	208
Battery Undervoltage	208
Battery Overvoltage	209
Battery <> Voltage Delay	209

Communication Settings

Controller Address	209
RS485 Mode	210
RS485 Communication	
Speed	210
RS485 MODBUS Speed	210

Bus Settings

Bus Overvoltage	211
Bus Undervoltage	211
Bus <> Voltage Delay	211
Bus Voltage Unbalance	212
Bus Voltage Unbalance	
Delay	212
Bus Overfrequency	212
Bus Underfrequency	212
Bus <> Frequency Delay	213
Bus Measurement Error	213

Mains Settings

Overload MPR	214
Overload Wrm	214
Overload Delay	214
Short Circuit MPR	215
Short Circuit MPR Delay	215
IDMT Overcurrent	216
Current Unbalance	217
Current Unbalance Delay	217
Minimal Power PTM	217
Emergency Start Delay	218
Mains Return Delay	218

MCB Close Delay	219
Mains Overvoltage	219
Mains Undervoltage	219
Mains <> Voltage Delay	220
Mains Voltage Unbalance	220
Mains Voltage Unbalance	
Delay	220
Mains Overfrequency	220
Mains Underfrequency	221
Mains <> Frequency	
Delay	221
MCB Logic	221
MCB Opens On	223
Vector Shift Protection	223
Vector Shift Limit	224
ROCOF Protection	224
ROCOF Windows Length	225
ROCOF df/dt	225
Vector Shift CB Selector	225

Load Shedding

Load Shedding Active	226
Load Shedding Level	226
Load Shedding Delay	227
Load Reconnection Level	227
Load Reconnection Delay	227
Auto Load Reconnection	228

Power Management

#Power Management	
Mode	228
#Priority Auto Swap	229
#System Start Delay	229
#System Stop Delay	230
#Starting Load Reserve 1	230
#Stopping Load Reserve 1	230
#Starting Rel Load	
Reserve 1	231

#Stopping Rel Load Reserve 1	231
#Starting Load Reserve 2	232
#Stopping Load Reserve 2	232
#Starting Rel Load Reserve 2	233
#Stopping Rel Load Reserve 2	233
#Min Run Power	234
#Next Engine Start Delay	234
#Next Engine Stop Delay	234
#Slow Stop Delay	235
#Overload Next Start Protection	235
#Overload Next Start Level	235
#Overload Next Start Delay	236
#Run Hours Max Difference	236
Run Hours Base	236
#Power Band Change Up Delay	237
#Power Band Change Down Delay	237
Control Group	237
Group Link L	238
Group Link R	238

Load Control

Frequency Gain	238
Frequency Int	239
Angle Gain	239
Load Gain	239
Load Int	240
Close Transfer Max Duration	240
Open Transfer Min Break	240
Transfer Mains To Bus	241
Transfer Bus To Mains	242
Unload MGCB Open Level	242

Unload MCB Open Window	243
Load Ramp	243

Voltage/PF Control

Voltage Gain	243
Voltage Int	244
PF Gain	244
PF Int	244

Synchronisation

Synchronization Type	245
Synchronization Timeout	245
Voltage Window	246
Phase Window	246
Dwell Time	246
Slip Frequency	246
Slip Frequency Window	247
MGCB Latency	247
MCB Latency	247

General Analog Inputs

Analog Protection 1 Wm	248
Analog Protection 1 Sd	248
Analog Protection 1 Delay	248
Analog Switch 1 On	249
Analog Switch 1 Off	249
Analog Protection 2 Wm	250
Analog Protection 2 Sd	250
Analog Protection 2 Delay	250
Analog Switch 2 On	251
Analog Switch 2 Off	251
Analog Protection 3 Wm	252
Analog Protection 3 Sd	252
Analog Protection 3 Delay	252
Analog Switch 3 On	253
Analog Switch 3 Off	253
Analog Protection 4 Wm	254
Analog Protection 4 Sd	254
Analog Protection 4 Delay	254

Analog Switch 4 On	255
Analog Switch 4 Off	255
Analog Protection 5 Wm	256
Analog Protection 5 Sd	256
Analog Protection 5 Delay	256
Analog Switch 5 On	257
Analog Switch 5 Off	257
Analog Protection 6 Wm	258
Analog Protection 6 Sd	258
Analog Protection 6 Delay	258
Analog Switch 6 On	259
Analog Switch 6 Off	259
Analog Protection 7 Wm	260
Analog Protection 7 Sd	260
Analog Protection 7 Delay	260
Analog Switch 7 On	261
Analog Switch 7 Off	261
Analog Protection 8 Wm	262
Analog Protection 8 Sd	262
Analog Protection 8 Delay	262
Analog Switch 8 On	263
Analog Switch 8 Off	263
Analog Protection 9 Wm	264
Analog Protection 9 Sd	264
Analog Protection 9 Delay	264
Analog Switch 9 On	265
Analog Switch 9 Off	265
Analog Protection 10 Wm	266
Analog Protection 10 Sd	266
Analog Protection 10 Delay	266
Analog Switch 10 On	267
Analog Switch 10 Off	267
Analog Protection 11 Wm	268
Analog Protection 11 Sd	268
Analog Protection 11 Delay	268
Analog Switch 11 On	269
Analog Switch 11 Off	269
Analog Protection 12 Wm	270

Analog Protection 12 Sd .	270
Analog Protection 12 Delay	270
Analog Switch 12 On	271
Analog Switch 12 Off	271
Analog Protection 13 Wrm	272
Analog Protection 13 Sd .	272
Analog Protection 13 Delay	272
Analog Switch 13 On	273
Analog Switch 13 Off	273
Analog Protection 14 Wrm	274
Analog Protection 14 Sd .	274
Analog Protection 14 Delay	274
Analog Switch 14 On	275
Analog Switch 14 Off	275
Analog Protection 15 Wrm	276
Analog Protection 15 Sd .	276
Analog Protection 15 Delay	276
Analog Switch 15 On	277
Analog Switch 15 Off	277
Analog Protection 16 Wrm	278
Analog Protection 16 Sd .	278
Analog Protection 16 Delay	278
Analog Switch 16 On	279
Analog Switch 16 Off	279
Analog Protection 17 Wrm	280
Analog Protection 17 Sd .	280
Analog Protection 17 Delay	280
Analog Switch 17 On	281
Analog Switch 17 Off	281
Analog Protection 18 Wrm	282
Analog Protection 18 Sd .	282
Analog Protection 18 Delay	282
Analog Switch 18 On	283
Analog Switch 18 Off	283

Analog Protection 19 Wrm	284
Analog Protection 19 Sd .	284
Analog Protection 19 Delay	284
Analog Switch 19 On	285
Analog Switch 19 Off	285
Analog Protection 20 Wrm	286
Analog Protection 20 Sd .	286
Analog Protection 20 Delay	286
Analog Switch 20 On	287
Analog Switch 20 Off	287

Scheduler

Time	288
Date	288
Time Stamp act	288
Time Stamp Period	289
#Summer Time Mode	289
Timer 1 Setup	290
Timer 1 Function	291
Timer 1 Repetition	291
Timer 1 First Occur. Date	292
Timer 1 First Occur. Time	292
Timer 1 Duration	292
Timer 1 Repeated	293
Timer 1 Refresh Period ...	294
Timer 1 Weekends	295
Timer 1 Day	295
Timer 1 Repeat Day	295
Timer 1 Repeated Day In Week	296
Timer 1 Repeat Day In Month	296
Timer 1 Repeat Week In Month	296
Timer 2 Setup	297
Timer 2 Function	298
Timer 2 Repetition	298
Timer 2 First Occur. Date	299
Timer 2 First Occur. Time	299

Timer 2 Duration	299
Timer 2 Repeated	300
Timer 2 Refresh Period ...	301
Timer 2 Weekends	302
Timer 2 Day	302
Timer 2 Repeat Day	302
Timer 2 Repeated Day In Week	303
Timer 2 Repeat Day In Month	303
Timer 2 Repeat Week In Month	303

Plug-In Modules

Slot A	303
Slot B	304

Communication Modules

COM1 Mode	304
COM1 Communication Speed	304
COM1 MODBUS Communication Speed ...	305
COM2 Mode	305
COM2 Communication Speed	305
COM2 MODBUS Communication Speed ...	306
Mode	306
APN Name	306
APN User Name	307
APN User Password	307
Email Address 1	307
Email Address 2	308
Email Address 3	308
Email Address 4	308
Message Language	309
SMTP User Name	309
SMTP User Password	309
SMTP Server Address	310

SMTP Sender Address ...	310	Email Address 1	325	Nominal Voltage Ph-N 2 ..	337
Time Zone	311	Email Address 2	326	Nominal Voltage Ph-Ph 2 ..	338
Event Message	311	Email Address 3	326	Nominal Current 2	338
Wrm Message	311	Email Address 4	326	Connection type 2	338
BOC Message	312	Message Language	327	Nominal Frequency 3	339
Sd Messages	312	Time Zone	327	Nominal Voltage Ph-N 3 ..	339
Telephone Number 1	312	Event Message	327	Nominal Voltage Ph-Ph 3 ..	340
Telephone Number 2	313	Wrm Message	328	Nominal Current 3	340
Telephone Number 3	313	BOC Message	328	Connection type 3	340
Telephone Number 4	313	Sd Messages	328		
DNS IP Address	314	SMTP UserName	329	PLC	
AirGate Connection	314	SMTP User Password	329	PLC Setpoint 1	342
AirGate Address	314	SMTP Server Address	329	PLC Setpoint 2	343
ComAp TCP Port	315	SMTP Sender Address ...	330	PLC Setpoint 3	344
Mode	315	IP Address Mode	330	PLC Setpoint 4	345
Required Connection Type	316	IP Address	331	PLC Setpoint 5	346
APN Name	316	Subnet Mask	331	PLC Setpoint 6	347
APN User Name	316	Gateway IP	331	PLC Setpoint 7	348
APN User Password	317	DNS IP Address 1	332	PLC Setpoint 8	349
Email Address 1	317	DNS IP Address 2	332	PLC Setpoint 9	350
Email Address 2	317	MODBUS Server	332	PLC Setpoint 10	351
Email Address 3	318	SNMP Agent	333	PLC Setpoint 11	352
Email Address 4	318	SNMP RD Community		PLC Setpoint 12	353
Message Language	318	String	333	PLC Setpoint 13	354
SMTP User Name	319	SNMP WR Community		PLC Setpoint 14	355
SMTP User Password	319	String	333	PLC Setpoint 15	356
SMTP Server Address	319	SNMP Traps IP Address 1	333	PLC Setpoint 16	357
SMTP Sender Address ...	320	SNMP Traps IP Address 2	334	PLC Setpoint 17	358
Time Zone	320	AirGate Connection	334	PLC Setpoint 18	359
Event Message	321	AirGate Address	334	PLC Setpoint 19	360
Wrm Message	321	ComAp TCP Port	335	PLC Setpoint 20	361
BOC Message	321			PLC Setpoint 21	362
Sd Messages	322	Alternate		PLC Setpoint 22	363
Telephone Number 1	322	Configuration		PLC Setpoint 23	364
Telephone Number 2	322	Nominal Frequency 1	335	PLC Setpoint 24	365
Telephone Number 3	323	Nominal Voltage Ph-N 1 ..	335	PLC Setpoint 25	366
Telephone Number 4	323	Nominal Voltage Ph-Ph 1 ..	336	PLC Setpoint 26	367
AirGate Connection	324	Nominal Current 1	336	PLC Setpoint 27	368
AirGate Address	324	Connection Type 1	336	PLC Setpoint 28	369
ComAp TCP Port	325	Nominal Frequency 2	337	PLC Setpoint 29	370

PLC Setpoint 30371
 PLC Setpoint 31372
 PLC Setpoint 32373
 PLC Setpoint 33374
 PLC Setpoint 34375
 PLC Setpoint 35376
 PLC Setpoint 36377
 PLC Setpoint 37378
 PLC Setpoint 38379
 PLC Setpoint 39380
 PLC Setpoint 40381
 PLC Setpoint 41382
 PLC Setpoint 42383
 PLC Setpoint 43384
 PLC Setpoint 44385
 PLC Setpoint 45386
 PLC Setpoint 46387
 PLC Setpoint 47388
 PLC Setpoint 48389
 PLC Setpoint 49390
 PLC Setpoint 50391
 PLC Setpoint 51392
 PLC Setpoint 52393
 PLC Setpoint 53394
 PLC Setpoint 54395
 PLC Setpoint 55396
 PLC Setpoint 56397
 PLC Setpoint 57398
 PLC Setpoint 58399
 PLC Setpoint 59400
 PLC Setpoint 60401
 PLC Setpoint 61402
 PLC Setpoint 62403
 PLC Setpoint 63404
 PLC Setpoint 64405

Group: Process Control

Subgroup: Application Selector

Application Mode Select

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	MCB / MGCB [-]		
Default value	MCB	Alternative config	NO
Step	[-]		
Comm object	12157	Related applications	MCB, MGCB

Description

This setpoint defines the controller application.

The change of this setpoint is accepted in OFF mode only = It is not possible to change the setpoint while the controller is not set to OFF mode.

MCB	<p>InteliMains controls only the MCB.</p> <p>Power control is controlled via load sharing and VAr sharing line integrated in CAN communication line.</p> <p>InteliMains controller senses the mains parameters and in case of mains failure activates the Automatic Mains Failure (AMF) function. In this case is opened MCB and activated start signal to the gen-set controllers. After mains recovery is MCB back synchronised and after that is gen-set load transferred to the mains and start signal for gen-sets is deactivated. AMF function activation is conditioned by parameter AMF Start - ENABLED/DISABLED.</p> <p>In AUT mode could be start signal activated with extra dedicated binary inputs (e.g. Remote Start/Stop, Force Parallel, Force Island, Test On Load...).</p> <p>Peak Shaving mode activates the start signal based on the adjusted requested mains import value.</p> <p>Different types of load transfers from Mains to Bus or from Bus to Mains can be used.</p> <ul style="list-style-type: none"> ▶ Open Transfer ▶ Soft Transfer ▶ Close Only ▶ Close Primarily <p>In MAN mode could be start signal activated with start-stop buttons. If the MAN mode is switched the controller follows the previous internal state.</p> <p>MCB can be switched on/off with MCB button.</p>
-----	--

MGCB

InteliMains controls the MCB and MGCB.

Power control is controlled via load sharing and VAr sharing line integrated in CAN communication line.

InteliMains controller senses the mains parameters and in case of mains failure activates the Automatic Mains Failure (AMF) function. In this case is opened MCB and activated start signal to the gen-set controllers. MGCB breaker is closed only in case the sufficient power is available (Load Reserve is achieved). After mains recovery is MCB back synchronised and after that is gen-set load transferred to the mains and start signal for gen-sets is deactivated. AMF function activation is conditioned by parameter AMF Start - ENABLED/DISABLED.

In AUT mode could be start signal activated with extra dedicated binary inputs (e.g. Remote Start/Stop, Force Parallel, Force Island, Test On Load...).

Peak Shaving mode activates the start signal based on the adjusted requested mains import value.

Different types of load transfers from Mains to Bus or from Bus to Mains can be used.

- ▶ Open Transfer
- ▶ Soft Transfer
- ▶ Close Only
- ▶ Close Primarily

In MAN mode could be start signal activated with start-stop buttons. If the MAN mode is switched the controller follows the previous internal state. MCB and MGCB can be switched on/off with MCB and MGCB buttons but the control is conditioned on setting of parameter CB Control In MAN Mode.

IMPORTANT: Control of MGCB breaker is affected by System Start/Stop signal in MAN mode when MCB breaker is closed. It is necessary to activate System Start/Stop signal in MAN mode before closing MGCB breaker (otherwise it is not possible to close MGCB breaker). System Start/Stop signal can be activated by Start button on controller's front facia.

 [back to List of setpoints](#)

Subgroup: Load Control

#System Load Control PTM

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	Baseload / Loadsharing [-]		
Default value	Baseload	Alternative config	NO
Step	[-]		
Comm object	8774	Related applications	MCB, MGCB, BTB
Description			
Load control mode in parallel to mains operation of the whole group of gen-sets.			
Baseload	The total power of the group is controlled to constant level given by the setpoint #System BaseLoad (page 198) . Each loaded gen-set takes equal part (relative to their nominal power) from this requested value. The load is regulated locally in each controller by Load control regulation loop, load-sharing is not active. The setpoint #System BaseLoad (page 198) is also used for determining which gen-sets have to run or not.		
Loadsharing	Gen-sets load is controlled by IM210 controller to share the total load (given by the setpoint #System BaseLoad (page 198)) with other loaded gen-sets in such a way, that all loaded gen-sets will be loaded at the same level (relative to gen-set nominal power). Load-sharing regulation loop is active.		
<p>Note: The Loadsharing mode shall be used in case a IM210 controller is present in the system. In systems without IM210 the setpoint must be in the Baseload position.</p> <p>Note: The power factor (PF) is regulated to constant level given by the setpoint #System PF Control PTM (page 195) in parallel to mains operation and does not depend on active load control mode.</p>			

[back to List of setpoints](#)

#System PF Control PTM

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	Base PF / Var Sharing [-]		
Default value	Base PF	Alternative config	NO
Step	[-]		
Comm object	8779	Related applications	MCB, MGCB, BTB
Description			
Power factor control mode in parallel to mains operation of the whole group of gen-sets.			
Base PF	Gensets PF is controlled by their PF control loops to provide constant power factor adjusted by setpoint #System Power Factor (page 198) . IntelliMains doesn't play active role in PF control in parallel to mains operation.		
Var Sharing	Gensets PF is controlled by IntelliMains through the VAr sharing line.		

[back to List of setpoints](#)

Load Control PTM

Setpoint group	Process Control	Related FW	2.0.0				
Range [units]	Baseload / Import/Export [-]						
Default value	Baseload	Alternative config	NO				
Step	[-]						
Comm object	8638	Related applications	MCB, MGCB				
Description							
This setpoint adjust the type of load control.							
<table border="1"> <tr> <td>Baseload</td> <td>The load of the gen-set group is controlled to keep constant level of base load of the whole system. The level is adjusted by the setpoint #System BaseLoad (page 198).</td> </tr> <tr> <td>Imp/Exp</td> <td>Gen-set produces the certain amount of power to keep constant import/export from the mains regardless the demand of the load. The requested import/export is given by setpoint Import Load (page 197). If the value of the setpoint is >0 the power is imported from the mains, if setpoint value is <0, then the power is exported to the mains.</td> </tr> </table>				Baseload	The load of the gen-set group is controlled to keep constant level of base load of the whole system. The level is adjusted by the setpoint #System BaseLoad (page 198) .	Imp/Exp	Gen-set produces the certain amount of power to keep constant import/export from the mains regardless the demand of the load. The requested import/export is given by setpoint Import Load (page 197) . If the value of the setpoint is >0 the power is imported from the mains, if setpoint value is <0, then the power is exported to the mains.
Baseload	The load of the gen-set group is controlled to keep constant level of base load of the whole system. The level is adjusted by the setpoint #System BaseLoad (page 198) .						
Imp/Exp	Gen-set produces the certain amount of power to keep constant import/export from the mains regardless the demand of the load. The requested import/export is given by setpoint Import Load (page 197) . If the value of the setpoint is >0 the power is imported from the mains, if setpoint value is <0, then the power is exported to the mains.						

[back to List of setpoints](#)

PF Control PTM

Setpoint group	Process Control	Related FW	2.0.0				
Range [units]	Base PF/ PF Import/Export [-]						
Default value	Base PF	Alternative config	NO				
Step	[-]						
Comm object	10120	Related applications	MCB, MGCB				
Description							
This setpoint adjust the type of power factor control.							
<table border="1"> <tr> <td>Base PF</td> <td>Gen-sets are controlled to keep the constant level of the power factor. The level is adjusted by setpoint #System Power Factor (page 198).</td> </tr> <tr> <td>PF Imp/Exp</td> <td>Gen-set produces the certain amount of reactive power to keep constant PF imported from the mains regardless the demand of the load. The requested power factor import is given by setpoint Import PF (page 197). Values >1 means that the gen-set is pushing the capacitive power to the system (system Gen-set - Load-Mains), values <1 means that the gen-set is pushing the inductive power to the system.</td> </tr> </table>				Base PF	Gen-sets are controlled to keep the constant level of the power factor. The level is adjusted by setpoint #System Power Factor (page 198) .	PF Imp/Exp	Gen-set produces the certain amount of reactive power to keep constant PF imported from the mains regardless the demand of the load. The requested power factor import is given by setpoint Import PF (page 197) . Values >1 means that the gen-set is pushing the capacitive power to the system (system Gen-set - Load-Mains), values <1 means that the gen-set is pushing the inductive power to the system.
Base PF	Gen-sets are controlled to keep the constant level of the power factor. The level is adjusted by setpoint #System Power Factor (page 198) .						
PF Imp/Exp	Gen-set produces the certain amount of reactive power to keep constant PF imported from the mains regardless the demand of the load. The requested power factor import is given by setpoint Import PF (page 197) . Values >1 means that the gen-set is pushing the capacitive power to the system (system Gen-set - Load-Mains), values <1 means that the gen-set is pushing the inductive power to the system.						

[back to List of setpoints](#)

Import Load

Setpoint group	Process Control	Related FW	2.0.0				
Range [units]	-32 000 .. 32 000 [kW]						
Default value	0 kW	Alternative config	NO				
Step	1 kW						
Comm object	8641	Related applications	MCB, MGCB				
Description							
Defines maximal limit of load for import/export. Behavior of setpoint depends on setpoint Load Control PTM (page 196) .							
<table border="1"> <tr> <td>Baseload</td> <td>Setpoint adjust the maximal value of import/export. Also Import/Export Limitation (page 198) setpoint has to be set to Enabled.</td> </tr> <tr> <td>Import/Export</td> <td>Setpoint adjust requested value of constant import/export.</td> </tr> </table>				Baseload	Setpoint adjust the maximal value of import/export. Also Import/Export Limitation (page 198) setpoint has to be set to Enabled.	Import/Export	Setpoint adjust requested value of constant import/export.
Baseload	Setpoint adjust the maximal value of import/export. Also Import/Export Limitation (page 198) setpoint has to be set to Enabled.						
Import/Export	Setpoint adjust requested value of constant import/export.						
If the value of the setpoint is >0 the power is imported from the mains, if the setpoint value is <0, then the power is exported to the mains.							

[back to List of setpoints](#)

Import PF

Setpoint group	Process Control	Related FW	2.0.0				
Range [units]	0,60 .. 1,20 [-]						
Default value	1,00 [-]	Alternative config	NO				
Step	0,01 [-]						
Comm object	8642	Related applications	MCB, MGCB				
Description							
Defines maximal limit of power factor for import/export. Behavior of setpoint depends on setpoint PF Control PTM (page 196) .							
<table border="1"> <tr> <td>Baseload</td> <td>Setpoint adjust the maximal value of import. Also Import/Export Limitation (page 198) setpoint has to be set to Enabled.</td> </tr> <tr> <td>Import/Export</td> <td>Setpoint adjust requested value of constant import.</td> </tr> </table>				Baseload	Setpoint adjust the maximal value of import. Also Import/Export Limitation (page 198) setpoint has to be set to Enabled.	Import/Export	Setpoint adjust requested value of constant import.
Baseload	Setpoint adjust the maximal value of import. Also Import/Export Limitation (page 198) setpoint has to be set to Enabled.						
Import/Export	Setpoint adjust requested value of constant import.						

[back to List of setpoints](#)

Import/Export Limitation

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	ENABLED / DISABLED [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	9592	Related applications	MCB, MGCB
Description			
<p>Enable or disable limitation for import/export. If function is enabled, then the request for the power of the gen set is limited to prevent the Import/Export go below the limits. Limits are adjusted via setpoints Import Load (page 197) and Import PF (page 197).</p> <p>Example: Baseload = 1000 kW, load = 700 kW, Import load = 100 kW. Then the Baseload request will be limited to 600 kW to prevent the Import power go below 100 kW.</p> <p>Example: Baseload = 1000 kW, load = 700 kW, Import load = -100 kW. Then the Baseload request will be limited to 800 kW to prevent the Import power go below -100 kW (actually it is limitation of the export).</p>			

🔍 back to List of setpoints

#System BaseLoad

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	0 .. 32 000 [kW]		
Default value	1 000 kW	Alternative config	NO
Step	1 kW		
Comm object	8775	Related applications	MCB, MGCB, BTB
Description			
<p>Required total load of the gen-set group in parallel to mains operation in baseload mode (setpoint #System Load Control PTM (page 195) = Baseload).</p>			

🔍 back to List of setpoints

#System Power Factor

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	0,60 .. 1,20 [-]		
Default value	1,00 [-]	Alternative config	NO
Step	0,01 [-]		
Comm object	8776	Related applications	MCB, MGCB, BTB
Description			
<p>Required gen-set power factor when the group of gen-sets is running parallel to the mains. The PF is regulated locally in each controller by PF control regulation loop, VARsharing is not active.</p>			

🔍 back to List of setpoints

Subgroup: Mains coupling

Mains Coupling

Setpoint group	Process Control	Related FW	2.0.0				
Range [units]	Enabled / Disabled [-]						
Default value	Disabled	Alternative config	NO				
Step	[-]						
Comm object	11037	Related applications	MCB, MGCB, BTB				
Description							
<p>This setpoint selects how the controller cooperates with other mains controllers in systems where one common busbar is supplied from many mains incomers, which are controlled by many mains controllers.</p> <table border="1" data-bbox="231 716 1420 1064"> <tr> <td>Enabled</td> <td>If there is voltage on Bus, however it is supplied from other mains incomer controlled by other IntelliMains, the respective IntelliMains may also close its MCB and MGCB and it will couple the two mains incomers together.</td> </tr> <tr> <td>Disabled</td> <td>The IntelliMains will not close it's MCB and MGCB if there is other IntelliMains with closed MCB and MGCB detected on the CAN2 bus (in the same control group - control groups may be connected together via Group Link).</td> </tr> </table> <p>Note: <i>Passive phase/voltage check is performed before mains coupling.</i></p>				Enabled	If there is voltage on Bus, however it is supplied from other mains incomer controlled by other IntelliMains, the respective IntelliMains may also close its MCB and MGCB and it will couple the two mains incomers together.	Disabled	The IntelliMains will not close it's MCB and MGCB if there is other IntelliMains with closed MCB and MGCB detected on the CAN2 bus (in the same control group - control groups may be connected together via Group Link).
Enabled	If there is voltage on Bus, however it is supplied from other mains incomer controlled by other IntelliMains, the respective IntelliMains may also close its MCB and MGCB and it will couple the two mains incomers together.						
Disabled	The IntelliMains will not close it's MCB and MGCB if there is other IntelliMains with closed MCB and MGCB detected on the CAN2 bus (in the same control group - control groups may be connected together via Group Link).						

[back to List of setpoints](#)

Subgroup: Process Limitation

CB Control In MAN Mode

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	Full Ctrl / Aut Trans / Islnd Disl [-]		
Default value	Full Ctrl	Alternative config	NO
Step	[-]		
Comm object	14962	Related applications	MGCB
Description			
The behavior of transition of load in MAN mode is adjusted via this setpoint.			
Full Ctrl	No limitation of CB control in MAN mode (operator can close any breaker manually or evoke the synchronization and consequential operation in parallel to mains)		
Aut Trans	<p>Operator can control both MCB or MGCB breaker. However once transition is evoked the controller performs the automatic transfer of the load (depends on adjustment of setpoints Transfer Bus To Mains (page 242) and Transfer Mains To Bus (page 241)).</p> <p>Controller performs synchronisation accross MCB, if MGCB is closed and MCB button is pushed. Load transfer is done after synchronisation and MGCB is opened automatically.</p> <p>Controller performs synchronisation accross MGCB, if MCB is closed and MGCB button is pushed. Load transfer is done after synchronisation and MCB is opened automatically.</p> <p>It is also possible to open currently closed breaker and keep the load non-energized. Then it is possible to close MCB or MGCB to energize the load from a healthy source.</p> <p>Note: Parallel operation with mains continues, if system already operates in parallel with mains and setting is changed to Aut Trans. It is necessary to push MCB or MGCB button to open a breaker.</p> <p>Note: Open transfer is performed, if the Open option is selected with Transfer Bus To Mains (page 242) or Transfer Mains To Bus (page 241)</p>		
Islnd Disl	<p>Behaves like the full manual control but the Island operation is disabled.</p> <p>Example: When MCB opened and MGCB pressed, controller don't go to island.</p> <p>Example: In parallel operation when MCB button pressed, MCB is not opened.</p>		

 [back to List of setpoints](#)

Subgroup: Mains Import Measurement

Mains Import Measurement

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	None/Mains CT/Analog Input [-]		
Default value	Mains CT	Alternative config	NO
Step	[-]		
Comm object	10599	Related applications	MCB, MGCB, BTB
Description			
Defines source value of the Mains Import (page 409) measurement.			
None	The Mains Import is not measured and the duration of the load transfer in direction Mains to Generator is given exactly by the setpoint Speed/Load Control / Close Transfer Max Duration (page 240) .		
Mains CT	The Mains Import (page 409) value is measured via Mains CTs. The load transfer in direction Mains to Generator is considered to be finished when the mains is unloaded under certain level.		
Analog Input	The Mains Import (page 409) value is measured via analog input, accordingly LAI: MAINS IMPORT MEASUREMENT (PAGE 544) . The load transfer in direction Mains to Generator is considered to be finished when the mains is unloaded under certain level.		

[back to List of setpoints](#)

Subgroup: Peak Shaving

Peak Shaving

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	Enabled / Disabled [-]		
Default value	Disable	Alternative config	NO
Step	[-]		
Comm object	11601	Related applications	MCB, MGCB
Description			
The behavior of peak shaving functions			
Enabled	The Peak Shaving function is active and the start command is activated when the conditions for Peaks Shaving activation were fulfilled.		
Disabled	The Peak Shaving function is BLOCKED and the start command can not be activated even the conditions for Peaks Shaving activation were fulfilled.		

[back to List of setpoints](#)

Peak Shaving Start Level

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	Peak Shaving Stop Level (page 202) .. 32000 [kW]		
Default value	1000 kW	Alternative config	NO
Step	1 kW		
Comm object	8643	Related applications	MCB, MGCB
Description			
<p>This setpoint starts genset, when the value of the load consumption Load kW exceeds the value given by this setpoint for the time of Peak Shaving Start/Stop Delay (page 202).</p> <p>The gen-set is synchronized to the Mains (kept in the parallel to the Mains) and the genset power is controlled according to the settings in the Group Process Control/Load Control.</p> <p>The gen-set stays running until the conditions for Peak Shaving run are active. Conditions of deactivation are given by the setpoint Peak Shaving Stop Level (page 202) and Peak Shaving Start/Stop Delay (page 202).</p>			

[back to List of setpoints](#)

Peak Shaving Stop Level

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	0 .. Peak Shaving Start Level (page 202) [kW]		
Default value	900 kW	Alternative config	NO
Step	1 kW		
Comm object	8644	Related applications	MCB, MGCB
Description			
<p>This setpoint stops gen-set, of the load consumption Load kW decreases under the value given by this setpoint for the time of Peak Shaving Start/Stop Delay (page 202).</p>			

[back to List of setpoints](#)

Peak Shaving Start/Stop Delay

Setpoint group	Process Control	Related FW	2.0.0
Range [units]	0 .. 600 [s]		
Default value	600 s	Alternative config	NO
Step	1 s		
Comm object	9989	Related applications	MCB, MGCB
Description			
<p>Defines of the delay of activation or deactivation of the Peak Shaving. Starts when:</p> <ul style="list-style-type: none"> ▶ The value of the load consumption Load kW exceeds the value given by the setpoint Peak Shaving Start Level (page 202). ▶ The value of the load consumption Load kW decreases under the value given by the setpoint Peak Shaving Stop Level (page 202) 			

[back to List of setpoints](#)

Group: Basic settings

Subgroup: Name

Controller Name

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	0 .. 15 characters [-]		
Default value	InteliGen	Alternative config	NO
Step	[-]		
Comm object	8637	Related applications	MCB, MGCB, BTB
Description			
User defined name, used for the controller identification at remote phone or mobile connection. Gen-Set Name is maximally 15 characters long and can be entered using InteliConfig or from controller's configuration menu.			
<i>Note: If the Gen-Set Name is "TurboRunHours", the running hours will be counted faster - 1 minute in real will represent 1 hour.</i>			

[back to List of setpoints](#)

Subgroup: Power settings

Nominal Mains Import

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	1 .. 5 000 [kW]		
Default value	200 kW	Alternative config	Yes
Step	1 kW		
Comm object	8276	Related applications	MCB, MGCB, BTB
Description			
Nominal power imported from the Mains. Mains Overload MPR protection is based on this setpoint.			

[back to List of setpoints](#)

Subgroup: Current settings

Nominal Current

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	1 .. 10 000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	8275	Related applications	MCB, MGCB, BTB
Description			
It is current limit for current protections and means maximal continuous current. Nominal Current can be different from mains rated current value.			
<p>Note: To lock this setpoint against editing you also have to lock setpoint Nominal Current 1 (page 336), Nominal Current 2 (page 338) and Nominal Current 3 (page 340).</p>			

⬅ back to List of setpoints

Mains Import CT Ratio

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	1 .. 2 000 [A/5A]		
Default value	500 A/5A	Alternative config	NO
Step	1 A/5A		
Comm object	8274	Related applications	MCB, MGCB, BTB
Description			
Mains current transformers ratio.			
<p>Note: Generator currents and power measurement is suppressed if current level is below 1% of CT range.</p>			

⬅ back to List of setpoints

Subgroup: Voltage settings

Connection type

Setpoint group	Basic settings	Related FW	2.0.0				
Range [units]	Mono Phase / SplitPhase / 3Ph3Wire / High Leg D / 3Ph4Wire [-]						
Default value	3Ph4Wire	Alternative config	YES				
Step	[-]						
Comm object	11628	Related applications	MCB, MGCB				
Description							
Connection type:							
<table border="1"> <tr> <td>Mono Phase</td> <td>Single phase voltage measurement L1-N 1x CT (Current Transformer)</td> </tr> <tr> <td>Split Phase</td> <td>Double Delta connection Split Phase</td> </tr> </table>				Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)	Split Phase	Double Delta connection Split Phase
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)						
Split Phase	Double Delta connection Split Phase						

	Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)
3Ph3Wire	Ungrounded Delta connection Open Delta Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)
High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)

Note: To lock this setpoint against editing you also have to lock setpoint **Connection Type 1** (page 336), **Connection type 2** (page 338) and **Connection type 3** (page 340).

[back to List of setpoints](#)

Nominal Voltage Ph-N

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	80 .. 20 000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	8277	Related applications	MCB, MGCB, BTB
Description			
Nominal voltage (phase to neutral).			
Note: To lock this setpoint against editing you also have to lock setpoint Nominal Voltage Ph-N 1 (page 335), Nominal Voltage Ph-N 2 (page 337) and Nominal Voltage Ph-N 3 (page 339).			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	80 .. 40 000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	11657	Related applications	MCB, MGCB, BTB
Description			
Nominal system voltage (phase to phase).			
<p>Note: To lock this setpoint against editing you also have to lock setpoint <i>Nominal Voltage Ph-Ph 1 (page 336)</i>, <i>Nominal Voltage Ph-Ph 2 (page 338)</i> and <i>Nominal Voltage Ph-Ph 3 (page 340)</i>.</p>			

[back to List of setpoints](#)

Mains VT Ratio

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	0,1 .. 500,0 [V/V]		
Default value	1,0 V/V	Alternative config	NO
Step	0,1 V/V		
Comm object	9579	Related applications	MCB, MGCB, BTB
Description			
Mains voltage potential transformers ratio. If no PTs are used, adjust the setpoint to 1.			

[back to List of setpoints](#)

Subgroup: Frequency settings

Nominal Frequency

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	8278	Related applications	MCB, MGCB, BTB
Description			
Nominal system frequency (usually 50 or 60 Hz).			
<p>Note: To lock this setpoint against editing you also have to lock setpoint <i>Nominal Frequency 1 (page 335)</i>, <i>Nominal Frequency 2 (page 337)</i> and <i>Nominal Frequency 3 (page 339)</i>.</p>			

[back to List of setpoints](#)

Subgroup: Controller settings

Controller mode

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	OFF / MAN / AUTO / TEST [-]		
Default value	OFF	Alternative config	NO
Step	[-]		
Comm object	8315	Related applications	MCB, MGCB, BTB
Description			
This setpoint can be used for changing the Controller mode remotely, e.g. via MODBUS. Use the mode selector on the main screen for changing the mode from the front panel. Use mode selector in the control window for changing the mode from IntelliConfig.			

[back to List of setpoints](#)

Power On Mode

Setpoint group	Basic settings	Related FW	2.0.0				
Range [units]	Previous / OFF [-]						
Default value	Previous	Alternative config	NO				
Step	[-]						
Comm object	13000	Related applications	MCB, MGCB, BTB				
Description							
This setpoint adjusts controller mode after power on of controller.							
<table border="1"> <tr> <td>Previous</td> <td>When controller is power on, than is switched into last mode before power off.</td> </tr> <tr> <td>OFF</td> <td>When controller is power on, than is switched into OFF mode.</td> </tr> </table>				Previous	When controller is power on, than is switched into last mode before power off.	OFF	When controller is power on, than is switched into OFF mode.
Previous	When controller is power on, than is switched into last mode before power off.						
OFF	When controller is power on, than is switched into OFF mode.						
<p>Note: Remote modes - In case that some LBI remote mode is activated during power on of controller than this LBI has higher priority than this setpoint - controller mode is forced into mode selected via LBI. After deactivation of LBI, controller is switched into value selected via setpoint Power On Mode</p>							

[back to List of setpoints](#)

Backlight Timeout

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	Disabled / 1 .. 255 [min]		
Default value	Disabled	Alternative config	NO
Step	1 min		
Comm object	10121	Related applications	MCB, MGCB, BTB
Description			
The display backlight is switched off when this timer exceed. When setpoint is adjusted to disabled then the display will be backlit all the time.			

[back to List of setpoints](#)

Horn Timeout

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	Disabled / 1 .. 599 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	8264	Related applications	MCB, MGCB, BTB
Description			
Setting of horn behavior.			
Disabled	Disabling the Horn sounding function		
1 .. 599 [s]	Timeout for HORN (PAGE 503) binary output. The HORN (PAGE 503) output is opened when this timeout elapsed.		
<p><i>Note: Horn timeout starts again from the beginning if a new alarm appears before previous Horn timeout has elapsed.</i></p>			

[back to List of setpoints](#)

Subgroup: Phase rotation

Phase Rotation

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	Clockwise / CounterCCW [-]		
Default value	Clockwise	Alternative config	NO
Step	[-]		
Comm object	15122	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjust the phase sequence of voltage terminals.			

[back to List of setpoints](#)

Subgroup: Battery Protections

Battery Undervoltage

Setpoint group	Engine settings	Related FW	2.0.0
Range [units]	8,0 V .. Battery Overvoltage (page 209) [V]		
Default value	18,0 V	Alternative config	NO
Step	0,1 V		
Comm object	8387	Related applications	MCB, MGCB, BTB
Description			
Warning threshold for low battery voltage.			

[back to List of setpoints](#)

Battery Overvoltage

Setpoint group	Engine settings	Related FW	2.0.0
Range [units]	Battery Undervoltage (page 208) .. 40,0 [V]		
Default value	36,0 V	Alternative config	NO
Step	0,1 V		
Comm object	9587	Related applications	MCB, MGCB, BTB
Description			
Warning threshold for high battery voltage.			

[back to List of setpoints](#)

Battery <> Voltage Delay

Setpoint group	Engine settings	Related FW	2.0.0
Range [units]	0 .. 600 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8383	Related applications	MCB, MGCB, BTB
Description			
Delay for Battery Undervoltage (page 208) and Battery Overvoltage (page 209) protection.			

[back to List of setpoints](#)

Group: Communication Settings

Subgroup: Controller CAN Address

Controller Address

Setpoint group	Communication Settings	Related FW	2.0.0
Range [units]	1 .. 32 [-]		
Default value	1	Alternative config	NO
Step	1		
Comm object	24537	Related applications	MCB, MGCB, BTB
Description			
Controller identification number. It is possible to set controller address different from the default value (1) so that more controllers can be interconnected (via RS485) and accessed e.g. from MODBUS terminal.			
<p>Note: When opening connection to the controller it's address has to correspond with the setting in PC tool.</p>			

[back to List of setpoints](#)

Subgroup: RS485 Settings

RS485 Mode

Setpoint group	Communication Settings	Related FW	2.0.0				
Range [units]	Direct / MODBUS [-]						
Default value	Direct	Alternative config	NO				
Step	[-]						
Comm object	24134	Related applications	MCB, MGCB, BTB				
Description							
Communication protocol switch for on-board RS485.							
<table border="1"> <tr> <td>Direct</td> <td>InteliConfig communication protocol via serial cable.</td> </tr> <tr> <td>MODBUS</td> <td>MODBUS protocol.</td> </tr> </table>				Direct	InteliConfig communication protocol via serial cable.	MODBUS	MODBUS protocol.
Direct	InteliConfig communication protocol via serial cable.						
MODBUS	MODBUS protocol.						

[back to List of setpoints](#)

RS485 Communication Speed

Setpoint group	Communication Settings	Related FW	2.0.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200 [bps]		
Default value	57600 bps	Alternative config	NO
Step	[-]		
Comm object	24135	Related applications	MCB, MGCB, BTB
Description			
If the direct mode is selected on on-board RS485, the direct communication speed of controller part of line can be adjusted here. Speed of second part of line has to be adjusted to the same value.			
<i>Note: Winscope supports only 19200, 38400, 57600 speeds.</i>			

[back to List of setpoints](#)

RS485 MODBUS Speed

Setpoint group	Communication Settings	Related FW	2.0.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200 [bps]		
Default value	9600 bps	Alternative config	NO
Step	[-]		
Comm object	24141	Related applications	MCB, MGCB, BTB
Description			
If the MODBUS mode is selected on COM1 channel, the MODBUS communication speed can be adjusted here.			

[back to List of setpoints](#)

Group: Bus Settings

Subgroup: Bus Voltage Limits

Bus Overvoltage

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	Bus Undervoltage (page 211) .. 150 [%]		
Default value	110 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 206)		
Comm object	9686	Related applications	MCB, MGCB, BTB
Description			
Threshold for Bus overvoltage. All three phases are checked. Maximum out of three is used.			

[back to List of setpoints](#)

Bus Undervoltage

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	50 .. Bus Overvoltage (page 211) [%]		
Default value	60 %	Alternative config	YES
Step	1 % of Nominal Voltage Ph-Ph (page 206)		
Comm object	9687	Related applications	MCB, MGCB, BTB
Description			
Threshold for Bus undervoltage. All three phases are checked. Minimum voltage out of three phases is used.			

[back to List of setpoints](#)

Bus < > Voltage Delay

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	0,0 .. 600,0 [s]		
Default value	2,0 s	Alternative config	YES
Step	0,1 s		
Comm object	9103	Related applications	MCB, MGCB, BTB
Description			
Delay for Bus Undervoltage (page 211) and Bus Overvoltage (page 211) protection.			

[back to List of setpoints](#)

Bus Voltage Unbalance

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	1 .. 150 [%] of Nominal Voltage Ph-Ph (page 206)		
Default value	10 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 206)		
Comm object	8288	Related applications	MCB, MGCB, BTB
Description			
Threshold for Bus voltage unbalance.			

[back to List of setpoints](#)

Bus Voltage Unbalance Delay

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	0,0 .. 60,0 [s]		
Default value	2,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8289	Related applications	MCB, MGCB, BTB
Description			
Delay for Bus Voltage Unbalance (page 212) protection.			

[back to List of setpoints](#)

Subgroup: Bus Frequency Limits

Bus Overfrequency

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	Bus Underfrequency (page 212) .. 150 [%]		
Default value	102,0 %	Alternative config	NO
Step	1,0 % of Nominal Frequency (page 206)		
Comm object	9688	Related applications	MCB, MGCB, BTB
Description			
Threshold for Bus overfrequency.			

[back to List of setpoints](#)

Bus Underfrequency

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	50 .. Bus Overfrequency (page 212) [%]		
Default value	98,0 %	Alternative config	NO
Step	1,0 % of Nominal Frequency (page 206)		
Comm object	9689	Related applications	MCB, MGCB, BTB
Description			
Threshold for Bus underfrequency.			

[back to List of setpoints](#)

Bus < > Frequency Delay

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	0,0 .. 60,0 [s]		
Default value	0,5 s	Alternative config	NO
Step	0,1 s		
Comm object	8297	Related applications	MCB, MGCB, BTB
Description			
Delay for Bus Underfrequency (page 212) and Bus Overfrequency (page 212) protection.			

[◀ back to List of setpoints](#)

Subgroup: Bus Measurement Error

Bus Measurement Error

Setpoint group	Bus Settings	Related FW	2.0.0
Range [units]	DISABLED / ENABLED		
Default value	DISABLED	Alternative config	NO
Step	-		
Comm object	10558	Related applications	MCB, MGCB, BTB
Description			
<p>Bus measure error is detected when the voltage on controller's bus terminals is out of limits for 20 seconds under these conditions:</p> <p>MCB application</p> <ul style="list-style-type: none"> ▶ MCB (feedback) was closed in AUTO mode. ▶ Any GCB in power management group (on CAN bus) was closed. The alarm is activated after 20 s, however the MCB closing is blocked immediately for safety reasons. <p>MGCB application</p> <ul style="list-style-type: none"> ▶ MCB and MGCB (feedbacks) were closed in AUTO mode. ▶ Any GCB in power management group (on CAN bus) was closed. The alarm is activated after 20 s, however the MGCB closing is blocked immediately from safety reasons. <p>BTB application</p> <ul style="list-style-type: none"> ▶ BTB feedback was closed in AUTO mode ▶ Any GCB in power management group (on CAN bus) was closed. The alarm is activated after 20 s, however the BTB closing is blocked immediately for safety reasons. The GCBs at "left" and "right" sides are evaluated independently 			

[◀ back to List of setpoints](#)

Group: Mains Settings

Subgroup: Overload Protection

Overload MPR

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	0 .. 200 [%]		
Default value	120 %	Alternative config	NO
Step	1 % of Nominal Mains Import (page 203)		
Comm object	8280	Related applications	MCB, MGCB, BTB
Description			
Threshold level for Mains overload (in % of Nominal power) protection. Protection is MPR (Mains protection without reset).			

[back to List of setpoints](#)

Overload Wrn

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	0 .. 200 [%]		
Default value	120 %	Alternative config	NO
Step	1 % of Nominal Mains Import (page 203)		
Comm object	9685	Related applications	MCB, MGCB, BTB
Description			
Threshold level for Mains overload (in % of Nominal power) protection. This is only warning.			

[back to List of setpoints](#)

Overload Delay

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	0,0 .. 600,0 [s]		
Default value	5,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8281	Related applications	MCB, MGCB, BTB
Description			
Delay for Overload MPR (page 214) and Overload Wrn (page 214) protection.			

[back to List of setpoints](#)

Subgroup: Current Protection

Short Circuit MPR

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	100 .. 500 [%]		
Default value	250 %	Alternative config	NO
Step	1 % of Nominal Current (page 204)		
Comm object	8282	Related applications	MCB, MGCB, BTB
Description			
MPR occurs when current reaches this preset threshold.			

[◀ back to List of setpoints](#)

Short Circuit MPR Delay

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	0,00 .. 10,00 [s]		
Default value	0,04 s	Alternative config	YES
Step	0,01 s		
Comm object	9991	Related applications	MCB, MGCB, BTB
Description			
Delay for Short Circuit MPR (page 215) protection.			

[◀ back to List of setpoints](#)

IDMT Overcurrent

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	1,0 .. 180,0 [s]		
Default value	4,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8283	Related applications	MCB, MGCB, BTB

Description

IDMT curve shape selection. IDMT Overcurrent Delay is a reaction time of IDMT protection for 200% overcurrent $I_{gen} = 2 * \text{Nominal Current}$ (page 204)

IDMT is “very inverse” over current protection. Reaction time is not constant but depends on over current level according to the following formula:

$$\text{Reaction time} = \frac{\text{Overcurrent IDMT Delay} * \text{Nominal Current}}{I_{gen} - \text{Nominal Current}}$$

Note: Reaction time is limited to 3600 s = 60 minutes. IDMT protection is not active for Reaction time values longer than 60 minutes.

I_{gen} is maximal value of all measured phases of Mains current.

Table 8.1 EXAMPLE of Reaction time for different over current levels

	Overcurrent IDMT Delay	Overcurrent		
		≤ 100 %	101 %	110 %
Reaction time	0,2 s	No action	20 s	2 s
	2 s	No action	200 s	20 s
	20 s	No action	2000 s	200 s

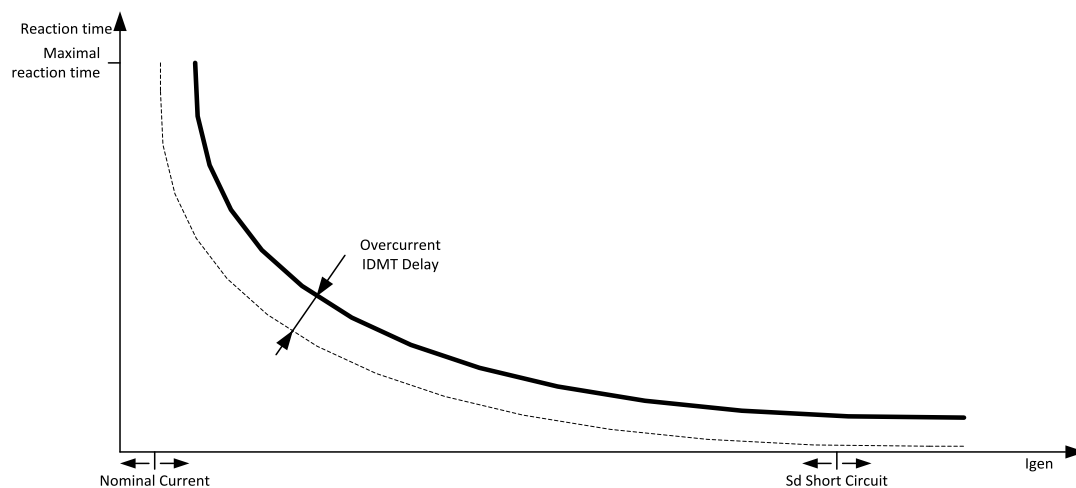


Image 8.1 IDMT Overcurrent Delay

[back to List of setpoints](#)

Current Unbalance

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	1 .. 200 [%] of Nominal Current (page 204)		
Default value	50 %	Alternative config	NO
Step	1 % of Nominal Current (page 204)		
Comm object	8284	Related applications	MCB, MGCB, BTB
Description			
Threshold for Mains current asymmetry (unbalance). Protection is MP (mains protect with automatic reset)			

[back to List of setpoints](#)

Current Unbalance Delay

Setpoint group	Generator settings	Related FW	2.0.0
Range [units]	0,0 .. 600,0 [s]		
Default value	5,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8285	Related applications	MCB, MGCB, BTB
Description			
Delay for Current Unbalance (page 217) protection.			

[back to List of setpoints](#)

Subgroup: Underload Protection


Minimal Power PTM

Setpoint group	Bus	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	5 %	Alternative config	NO
Step	1 % of Nominal Mains Import (page 203)		
Comm object	9241	Related applications	MCB, MGCB
Description			
Minimal power of the gen-set. Value of this setpoint is used in Load Control PTM (page 196) .			

[back to List of setpoints](#)

Subgroup: AMF Timers

Emergency Start Delay

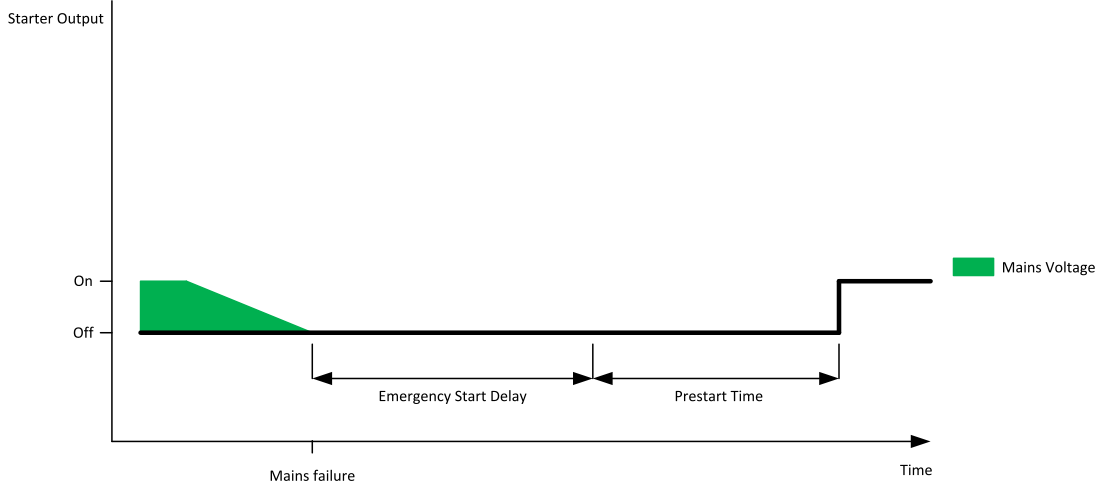Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	0 .. 6 000 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8301	Related applications	MCB, MGCB
Description			
Delay after the mains failure to the start command of the gen-set.			
			
Image 8.2 Emergency Start Delay			

[back to List of setpoints](#)

Mains Return Delay

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	1 .. 3 600 [s]		
Default value	20 s	Alternative config	NO
Step	1 s		
Comm object	8302	Related applications	MCB, MGCB
Description			
This setpoint adjust the delay, how long mains has to be returned after mains fail to start load transfer to mains.			

[back to List of setpoints](#)

MCB Close Delay

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	0,0 .. 60,0 [s]		
Default value	1,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8389	Related applications	MCB, MGCB
Description			
Delay after mains returns to MCB closing, if the gen-set is not running(e.g. is in start-up procedure)			

[back to List of setpoints](#)

AMF Start

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	ENABLED / DISABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	9238	Related applications	MCB, MGCB
Description			
Use this setpoint to enable or disable the AMF operation (page 88).			

[back to List of setpoints](#)

Subgroup: Mains Voltage Limits

Mains Overvoltage

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	Mains Undervoltage (page 219) .. 150 [%]		
Default value	110 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 206)		
Comm object	8305	Related applications	MCB, MGCB, BTB
Description			
Threshold for Mains overvoltage. All three phases are checked. Maximum out of three is used.			

[back to List of setpoints](#)

Mains Undervoltage

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	50 .. Mains Overvoltage (page 219) [%]		
Default value	60 %	Alternative config	YES
Step	1 % of Nominal Voltage Ph-Ph (page 206)		
Comm object	8307	Related applications	MCB, MGCB, BTB
Description			
Threshold for Mains undervoltage. All three phases are checked. Minimum voltage out of three phases is used.			

[back to List of setpoints](#)

Mains < > Voltage Delay

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	0,0 .. 600,0 [s]		
Default value	2,0 s	Alternative config	YES
Step	0,1 s		
Comm object	8306	Related applications	MCB, MGCB, BTB
Description			
Delay for Mains Undervoltage (page 219) and Mains Overvoltage (page 219) protection.			

[back to List of setpoints](#)

Mains Voltage Unbalance

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	1 .. 150 [%] of Nominal Voltage Ph-Ph (page 206)		
Default value	10 %	Alternative config	NO
Step	1 % of Nominal Voltage Ph-Ph (page 206)		
Comm object	8446	Related applications	MCB, MGCB, BTB
Description			
Threshold for Mains voltage unbalance.			

[back to List of setpoints](#)

Mains Voltage Unbalance Delay

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	0,0 .. 60,0 [s]		
Default value	2,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8447	Related applications	MCB, MGCB, BTB
Description			
Delay for Mains Voltage Unbalance (page 220) protection.			

[back to List of setpoints](#)

Subgroup: Mains Frequency Limits

Mains Overfrequency

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	Mains Underfrequency (page 221) .. 150 [%]		
Default value	102,0 %	Alternative config	NO
Step	1,0 % of Nominal Frequency (page 206)		
Comm object	8310	Related applications	MCB, MGCB, BTB
Description			
Threshold for Mains overfrequency.			

[back to List of setpoints](#)

Mains Underfrequency

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	50 .. Mains Overfrequency (page 220) [%]		
Default value	98,0 %	Alternative config	NO
Step	1,0 % of Nominal Frequency (page 206)		
Comm object	8312	Related applications	MCB, MGCB, BTB
Description			
Threshold for Mains underfrequency.			

🔍 back to List of setpoints

Mains < > Frequency Delay

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	0,0 .. 600,0 [s]		
Default value	0,5 s	Alternative config	NO
Step	0,1 s		
Comm object	8311	Related applications	MCB, MGCB, BTB
Description			
Delay for Mains Underfrequency (page 221) and Mains Overfrequency (page 220) protection.			

🔍 back to List of setpoints

Subgroup: AMF Settings

MCB Logic

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	Close On / Close Off [-]		
Default value	Close Off	Alternative config	NO
Step	[-]		
Comm object	8444	Related applications	MCB, MGCB
Description			
The set point influences the behavior of the output MCB CLOSE/OPEN (PAGE 504) .			
Close On When the output MCB CLOSE/OPEN (PAGE 504) is closed – MCB should be closed.			
Close Off When the output MCB CLOSE/OPEN (PAGE 504) is closed – MCB should be opened.			

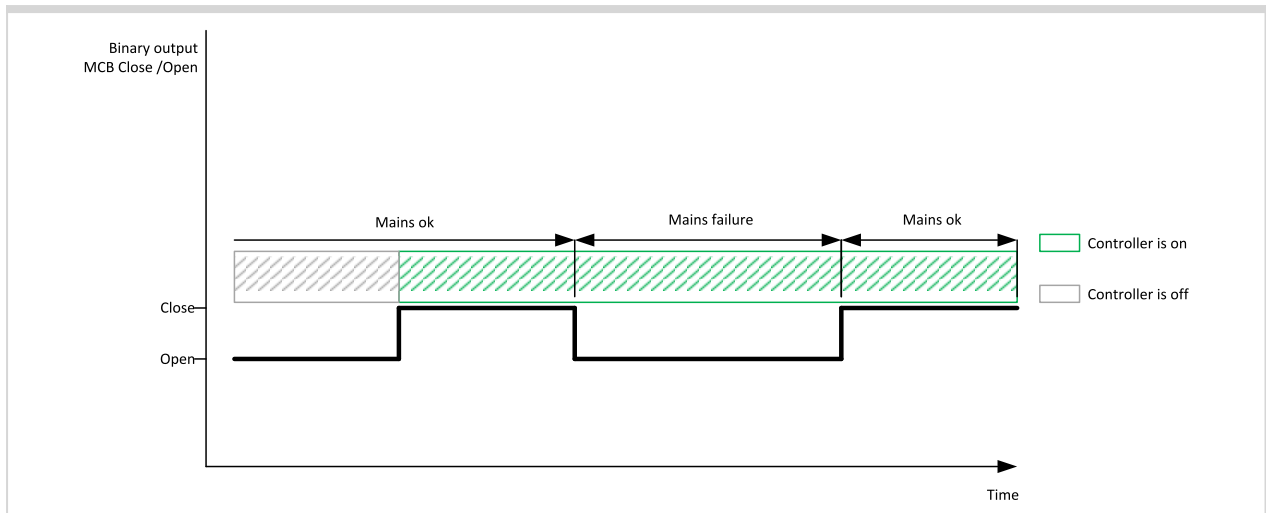


Image 8.3 MCB Logic 1

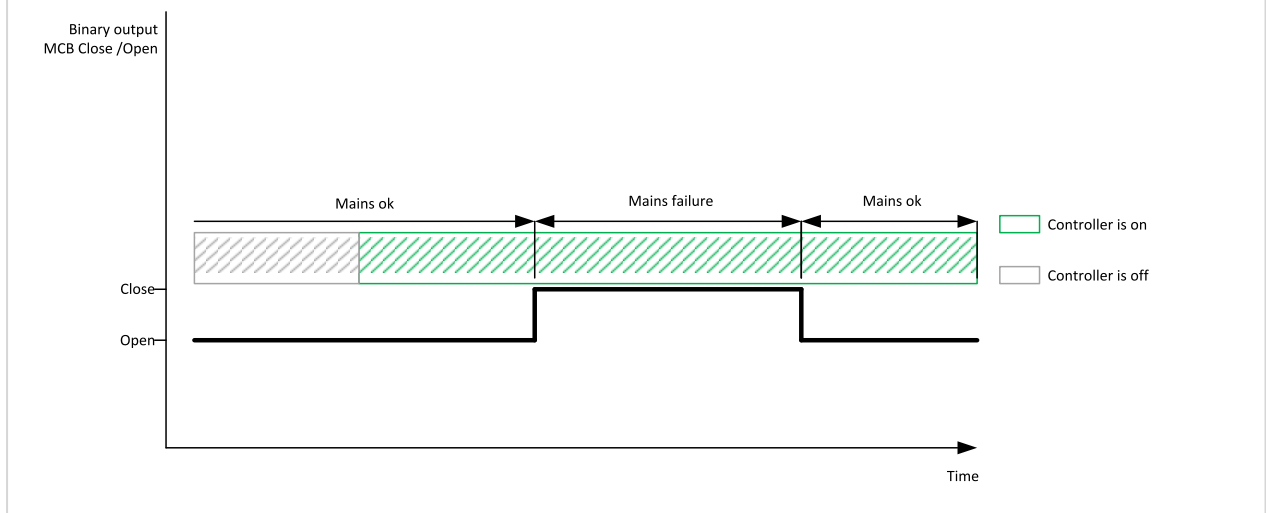


Image 8.4 MCB Logic 2

[back to List of setpoints](#)

MCB Opens On

Setpoint group	Mains settings	Related FW	2.0.0
Range [units]	Mains Fail / Gen Run [-]		
Default value	Gen Run	Alternative config	NO
Step	[-]		
Comm object	9850	Related applications	MCB, MGCB
Description			
Setpoint adjust the behavior of opening MCB in AUTO mode when there is mains fail.			
<p>Mains Fail The command to open the MCB is given immediately after mains fail condition is evaluated. If the mains will return into parameters after MCB was opened and before GCB is closed, timer MCB Close Delay (page 219) is applied before MCB closing.</p> <p>Gen Run MCB will be opened when engine will be running and it will be possible to transfer load from Mains to gen-set (after stabilisation phase).</p>			
<p>Note: This option should be used for MCBs using 230V control and not equipped with the undervoltage coil.</p>			

🔍 back to List of setpoints

Subgroup: Mains Decoupling Protection

Vector Shift Protection

Setpoint group	Mains Settings	Related FW	2.0.0						
Range [units]	Enabled / Parallel Only / Disabled [-]								
Default value	Disabled	Alternative config	NO						
Step	[-]								
Comm object	10551	Related applications	MCB, MGCB						
Description									
This setpoint selects the function of the built-in vector shift protection.									
<table border="1"> <tr> <td>Disabled</td> <td>The vector shift protection is disabled.</td> </tr> <tr> <td>Parallel Only</td> <td>The vector shift protection is enabled only while the gen-set is running parallel to the mains, i.e. the both MCB and MGCB are closed.</td> </tr> <tr> <td>Enabled</td> <td>The vector shift protection is active always while the MCB is closed, regardless of the MGCB position.</td> </tr> </table>				Disabled	The vector shift protection is disabled.	Parallel Only	The vector shift protection is enabled only while the gen-set is running parallel to the mains, i.e. the both MCB and MGCB are closed.	Enabled	The vector shift protection is active always while the MCB is closed, regardless of the MGCB position.
Disabled	The vector shift protection is disabled.								
Parallel Only	The vector shift protection is enabled only while the gen-set is running parallel to the mains, i.e. the both MCB and MGCB are closed.								
Enabled	The vector shift protection is active always while the MCB is closed, regardless of the MGCB position.								
<p>Note: The vectorshift protection is recorded into the history file, however it is not indicated in the Alarm list. When it occurs the controller opens either MCB or MGCB depending on the setpoint Vector Shift CB Selector (page 225). If the MCB is not controlled in the particular application then MGCB is opened.</p>									
<p>Note: If a vector shift is detected and consequently the MCB is opened, however mains voltage and frequency remain in limits, the MCB is then reclosed again after Mains Return Delay (page 218), as the mains is evaluated as healthy.</p>									

🔍 back to List of setpoints

Vector Shift Limit

Setpoint group	Mains Settings	Related FW	2.0.0
Range [units]	1 .. 45 [°]		
Default value	10 °	Alternative config	NO
Step	1 °		
Comm object	9843	Related applications	MCB, MGCB
Description			
This setpoint adjusts the threshold level for the vector shift protection.			
<p>Note: To adjust this setpoint properly, check the value Max Vector Shift (page 415). The value is available in <i>InteliConfig</i>, contains the maximal measured vector shift value since the gen-set has been synchronized to the mains and after opening of GCB or MCB it is "frozen". In normal conditions the value should not be higher than 3 ° and the most common setting of the threshold is about 7 °.</p>			

🔍 back to List of setpoints

ROCOF Protection

Setpoint group	Mains Settings	Related FW	2.0.0						
Range [units]	Enabled / Parallel Only / Disabled [-]								
Default value	Disabled	Alternative config	NO						
Step	[-]								
Comm object	9840	Related applications	MCB, MGCB						
Description									
This setpoint selects the function of the built-in ROCOF protection.									
<table border="1"> <tr> <td>Disabled</td> <td>The ROCOF protection is disabled.</td> </tr> <tr> <td>Parallel Only</td> <td>The ROCOF protection is enabled only while the gen-set is running parallel to the mains, i.e. the both MCB and MGCB are closed.</td> </tr> <tr> <td>Enabled</td> <td>The ROCOF protection is active always while the MCB is closed, regardless of the MGCB position.</td> </tr> </table>				Disabled	The ROCOF protection is disabled.	Parallel Only	The ROCOF protection is enabled only while the gen-set is running parallel to the mains, i.e. the both MCB and MGCB are closed.	Enabled	The ROCOF protection is active always while the MCB is closed, regardless of the MGCB position.
Disabled	The ROCOF protection is disabled.								
Parallel Only	The ROCOF protection is enabled only while the gen-set is running parallel to the mains, i.e. the both MCB and MGCB are closed.								
Enabled	The ROCOF protection is active always while the MCB is closed, regardless of the MGCB position.								
<p>Note: The ROCOF protection is recorded into the history file, however it is not indicated in the Alarm list. When it occurs the controller opens either MCB or MGCB depending on the setpoint Vector Shift CB Selector (page 225). If the MCB is not controlled in the particular application then MGCB is opened.</p>									
<p>Note: If a ROCOF is detected and consequently the MCB is opened, however mains voltage and frequency remain in limits, the MCB is then reclosed again after Mains Return Delay (page 218), as the mains is evaluated as healthy.</p>									

🔍 back to List of setpoints

ROCOF Windows Length

Setpoint group	Mains Settings	Related FW	2.0.0
Range [units]	3 .. 30 [-]		
Default value	5	Alternative config	NO
Step	1 [-]		
Comm object	9990	Related applications	MCB, MGCB
Description			
<p>This setpoint adjusts the averaging level for the ROCOF Protection (page 224). It defines number of periods of the mains voltage in which the ROCOF protection is evaluated. The higher length of ROCOF window means less sensitive protection for short oscillations of the frequency to both directions from the nominal value. Also delay of evaluation is higher.</p>			

🔍 back to List of setpoints

ROCOF df/dt

Setpoint group	Mains Settings	Related FW	2.0.0
Range [units]	0,1 .. 10,0 [Hz/s]		
Default value	1,0 Hz/s	Alternative config	NO
Step	0,1 Hz/s		
Comm object	9844	Related applications	MCB, MGCB
Description			
<p>This setpoint adjusts the trip level for ROCOF Protection (page 224) (Rate Of Change Of Frequency).</p>			

🔍 back to List of setpoints

Vector Shift CB Selector

Setpoint group	Mains Settings	Related FW	2.0.0
Range [units]	MCB / MGCB [-]		
Default value	MCB	Alternative config	NO
Step	[-]		
Comm object	10552	Related applications	MCB, MGCB
Description			
<p>This setpoint selects which breaker will be opened when the Vector Shift Protection (page 223) or ROCOF Protection (page 224) protection is detected.</p>			
<p>Note: <i>If the MGCB is selected and a mains failure occurs the MGCB will be opened immediately when the vectorshift or ROCOF is detected, however also MCB will be opened consequently due to other mains protection as underfrequency or undervoltage.</i></p>			

🔍 back to List of setpoints

Group: Load Shedding

Load Shedding Active

Setpoint group	Load Shedding	Related FW	2.0.0
Range [units]	Disabled / Island only / ISL+Trip paral / All the time [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	11001	Related applications	MCB, MGCB
Description			
This setpoint is used for adjustment when the load shedding function is active.			
Disabled	The Load shedding function is disabled. All the outputs are open.		
Island only	<p>In Island operation (e.g. MCB is open and (M)GCB is closed) Load shedding outputs are controlled by load shedding function.</p> <ul style="list-style-type: none"> ▶ Load shedding outputs are activated/Deactivated one by one in island operation ▶ All Loadshedding outputs are tripped once the genset comes into the island operation from "NO LOAD" operation (MCB and (M)GCB were opened -> Genset started and (M)GCB closed). 		
ISL+Trip paral	<p>This setting adjusts the same behavior as ISLAND ONLY but in addition to it all load shedding outputs are closed when gen-set group goes from parallel operation into the island operation.</p> <ul style="list-style-type: none"> ▶ Load shedding outputs are activated/Deactivated one by one in island operation. ▶ All Loadshedding outputs are tripped at once when the genset comes into the island operation from "NO LOAD" operation (MCB and (M)GCB were opened -> Genset started and (M)GCB closed). ▶ All Loadshedding outputs are tripped at once when the genset comes from Parallel operation (MCB, (M)GCB closed) to island operation (MCB opens, (M)GCB stays closed). This scenario is also valid when Test On Load is taken. 		

[◀ back to List of setpoints](#)

Load Shedding Level

Setpoint group	Load Shedding	Related FW	2.0.0
Range [units]	Load Reconnection Level .. 200 [%] of Nominal Mains Import (page 203)		
Default value	80 %	Alternative config	NO
Step	1 %		
Comm object	8884	Related applications	MCB, MGCB
Description			
This setpoint is used to proceeds the next Load shedding stage. When gen-set load exceeds this level for more than Load Shedding Delay (page 227) time			

[◀ back to List of setpoints](#)

Load Shedding Delay

Setpoint group	Load Shedding	Related FW	2.0.0
Range [units]	0,0..600,0 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	8887	Related applications	MCB, MGCB
Description			
This setpoint is used to proceeds the next Load shedding stage. When gen-set load exceeds this level for more than Load Shedding Level (page 226) time			

🔍 back to List of setpoints

Load Reconnection Level

Setpoint group	Load Shedding	Related FW	2.0.0
Range [units]	0 .. Load Shedding Level (page 226)		
Default value	20 %	Alternative config	NO
Step	1 %		
Comm object	8890	Related applications	MCB, MGCB
Description			
This setpoint is used to proceeds the next Load shedding stage. When gen-set load exceeds this level for more than Load Shedding Delay (page 227) time			

🔍 back to List of setpoints

Load Reconnection Delay

Setpoint group	Load Shedding	Related FW	2.0.0
Range [units]	0..600 [s]		
Default value	10 s	Alternative config	NO
Step	1 s		
Comm object	8893	Related applications	MCB, MGCB
Description			
This setpoint is used to proceeds the lower Load shedding stage. When gen-set load drops under Load Reconnection Level (page 227) for more than this delay time. The binary output for higher stage is opened. Automatic load reconnection works only when Auto Load Reconnection (page 228) = Enabled			

🔍 back to List of setpoints

Auto Load Reconnection

Setpoint group	Load Shedding	Related FW	2.0.0
Range [units]	Disabled / Enabled [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	9649	Related applications	MCB, MGCB
Description			
Switch between manual and automatic reconnection of shedded load..			
Disabled	Rising edge on binary input MANUAL LD RECON resets controller to the lower stage, but only if the load is under the Load Reconnection Level (page 227) . Load Reconnection Delay (page 227) is not taken into account in this case.		
Enabled	Load reconnection is automatic depend on setpoints Load Reconnection Level (page 227) and Load Reconnection Delay (page 227) . Binary input MANUAL LOAD RECONNECTION (PAGE 474) has no function.		

🔍 back to List of setpoints

Group: Power Management

Subgroup: Power Management Control

#Power Management Mode

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	ABS [kW] / REL [%]		
Default value	ABS	Alternative config	NO
Step	[-]		
Comm object	9874	Related applications	MCB, MGCB
Description			
This setpoint is used to select the Power management (page 89) mode.			
ABS [kW]	The power management is based on actual active power and gen-set nominal power. The reserves are calculated and adjusted in kW.		
REL [%]	The power management is based on the relative load, i.e. ratio active power to nominal power. The reserves are calculated and adjusted in %.		

🔍 back to List of setpoints

#Priority Auto Swap

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	Disabled / Run Hours Equal / Efficient [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	10593	Related applications	MCB, MGCB
Description			
This setpoint adjusts priority auto swapping.			
Disabled	Optimization is disabled.		
Run Hours Equal	This method changes the priorities (not the setpoints itself) to equalize running hours of the gen-sets or to keep constant difference of running hours by the controller (adjusted via setpoint #Run Hours Max Difference (page 236)).		
Efficient	<p>This method changes the priorities (not the setpoints itself) to optimize which gen-sets are running according to their capacities and actual load demand.</p> <div style="border: 1px solid gray; padding: 5px; background-color: #f0f0f0;"> <p>IMPORTANT: This priority swapping function is only for absolute mode of power management (#Power Management Mode (page 228) = ABS).</p> </div> <p>Optimal power band (number of running gen-sets) is calculated based on the nominal power of each gen-set, their Run Hours and requested Load reserve. For gen-sets with the same nominal power also run hour equalization is being performed.</p>		

[back to List of setpoints](#)

#System Start Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 600 [-]		
Default value	5	Alternative config	NO
Step	1		
Comm object	8549	Related applications	MCB, MGCB
Description			
This setpoint adjusts the delay of the system activation after the binary input REMOTE START/STOP (PAGE 479) has been activated.			

[back to List of setpoints](#)

#System Stop Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 600 [-]		
Default value	30	Alternative config	NO
Step	1		
Comm object	8550	Related applications	MCB, MGCB
Description			
This setpoint adjusts the delay of the system deactivation after the binary input REMOTE START/STOP (PAGE 479) has been deactivated.			

🔍 back to List of setpoints

Subgroup: Load Reserve Set 1

#Starting Load Reserve 1

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. #Stopping Load Reserve 1 (page 230) [kW]		
Default value	60 kW	Alternative config	NO
Step	1 kW		
Comm object	8489	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for start of next gen-set in absolute mode. i.e. #Power Management Mode (page 228) = ABS.			
<p>IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be deactivated, otherwise setpoints of Load Reserve Set 2 are used.</p>			
<p><i>Note: See Power management (page 89) chapter for more information.</i></p>			

🔍 back to List of setpoints

#Stopping Load Reserve 1

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	#Starting Load Reserve 1 (page 230) .. 32 000 [kW]		
Default value	110 kW	Alternative config	NO
Step	1 kW		
Comm object	8491	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for stop of next gen-set in absolute mode. i.e. #Power Management Mode (page 228) = ABS.			
<p>IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be deactivated, otherwise setpoints of Load Reserve Set 2 are used.</p>			
<p><i>Note: See Power management (page 89) chapter for more information.</i></p>			

🔍 back to List of setpoints

#Starting Rel Load Reserve 1

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. #Stopping Rel Load Reserve 1 (page 231) [%]		
Default value	60 %	Alternative config	NO
Step	1 %		
Comm object	10648	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for start of next gen-set in relative mode. i.e. #Power Management Mode (page 228) = REL.			
IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be deactivated, otherwise setpoints of Load Reserve Set 2 are used.			
<i>Note: See Power management (page 89) chapter for more information.</i>			

⬅ back to List of setpoints

#Stopping Rel Load Reserve 1

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	#Starting Rel Load Reserve 1 (page 231) .. 110 [%]		
Default value	80 %	Alternative config	NO
Step	1 %		
Comm object	10652	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for stop of next gen-set in relative mode. i.e. #Power Management Mode (page 228) = REL.			
IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be deactivated, otherwise setpoints of Load Reserve Set 2 are used.			
<i>Note: See Power management (page 89) chapter for more information.</i>			

⬅ back to List of setpoints

Subgroup: Load Reserve Set 2

#Starting Load Reserve 2

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. #Stopping Load Reserve 2 (page 232) [kW]		
Default value	410 kW	Alternative config	NO
Step	1 kW		
Comm object	8490	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for start of next gen-set in absolute mode. i.e. #Power Management Mode (page 228) = ABS.			
<p>IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be activated, otherwise setpoints of Load Reserve Set 1 are used.</p>			
<p><i>Note: See Power management (page 89) chapter for more information.</i></p>			

⬅ back to List of setpoints

#Stopping Load Reserve 2

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	#Starting Load Reserve 2 (page 232) .. 32 000 [kW]		
Default value	460 kW	Alternative config	NO
Step	1 kW		
Comm object	8633	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for stop of next gen-set in absolute mode. i.e. #Power Management Mode (page 228) = ABS.			
<p>IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be activated, otherwise setpoints of Load Reserve Set 1 are used.</p>			
<p><i>Note: See Power management (page 89) chapter for more information.</i></p>			

⬅ back to List of setpoints

#Starting Rel Load Reserve 2

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. #Stopping Rel Load Reserve 2 (page 233) [%]		
Default value	60 %	Alternative config	NO
Step	1 %		
Comm object	10649	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for start of next gen-set in relative mode. i.e. #Power Management Mode (page 228) = REL.			
<p>IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be activated, otherwise setpoints of Load Reserve Set 1 are used.</p>			
<p><i>Note: See Power management (page 89) chapter for more information.</i></p>			

🔍 back to List of setpoints

#Stopping Rel Load Reserve 2

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	#Starting Rel Load Reserve 2 (page 233) .. 110 [%]		
Default value	80 %	Alternative config	NO
Step	1 %		
Comm object	10653	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust the load reserve for stop of next gen-set in relative mode. i.e. #Power Management Mode (page 228) = REL.			
<p>IMPORTANT: Logical binary input LOAD RES 2 ACTIVE (PAGE 473) has to be activated, otherwise setpoints of Load Reserve Set 1 are used.</p>			
<p><i>Note: See Power management (page 89) chapter for more information.</i></p>			

🔍 back to List of setpoints

Subgroup: Minimal Running Power

#Min Run Power

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 65 000 [kW]		
Default value	210 kW	Alternative config	NO
Step	1 kW		
Comm object	9584	Related applications	MCB, MGCB
Description			
<p>This setpoint is used to adjust certain minimum value of the sum of nominal power of all running gen-sets. If the function is active (by logical binary input Min Run Power Active (page 476)), then the gen-sets would not be stopped, although the reserve for stop is fulfilled, if the total remaining nominal power drops below this minimal value.</p> <p><i>Note: Logical binary input Min Run Power Active (page 476) needs to be activated on all gen-sets in the same time.</i></p>			

[back to List of setpoints](#)

Subgroup: Start/Stop Timing

#Next Engine Start Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 3 600 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8492	Related applications	MCB, MGCB
Description			
<p>This setpoint adjusts the delay for starting the next gen-set after the reserve has dropped below the reserve for start.</p>			

[back to List of setpoints](#)

#Next Engine Stop Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 3 600 [s]		
Default value	20 s	Alternative config	NO
Step	1 s		
Comm object	8494	Related applications	MCB, MGCB
Description			
<p>This setpoint adjusts the delay for stopping the gen-set after the reserve has risen above the reserve for stop.</p>			

[back to List of setpoints](#)

#Slow Stop Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 600 [s]		
Default value	60 s	Alternative config	NO
Step	1 s		
Comm object	8495	Related applications	MCB, MGCB
Description			
This setpoint is used to adjust how long the particular gen-set will suppress it's own Slow stop alarm to give chance to another gen-set to start and replace the defective one.			
<i>Note: If there isn't any available gen-set to start, the alarm is not suppressed.</i>			

[back to List of setpoints](#)

Subgroup: Over Load Next Start Protection

#Overload Next Start Protection

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	Enabled / Disabled [-]		
Default value	Enabled	Alternative config	NO
Step	[-]		
Comm object	14942	Related applications	MCB, MGCB
Description			
This setpoint is intended for activation of the protection against the overloading of the system due to rapid change of the load. It makes the next gen-set (in priority order) to start when the load excises the value given by the setpoint #Overload Next Start Level (page 235) right after the delay #Overload Next Start Delay (page 236).			

[back to List of setpoints](#)

#Overload Next Start Level

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	80 %	Alternative config	NO
Step	1 %		
Comm object	14941	Related applications	MCB, MGCB
Description			
Threshold level for #Overload Next Start Protection (page 235).			

[back to List of setpoints](#)

#Overload Next Start Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 5 [s]		
Default value	1 s	Alternative config	NO
Step	1 s		
Comm object	8493	Related applications	MINT
Description			
Delay for #Overload Next Start Protection (page 235).			

[back to List of setpoints](#)

Subgroup: Run Hours Equalization

#Run Hours Max Difference

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 65 000 [h]		
Default value	100 h	Alternative config	NO
Step	1 h		
Comm object	9919	Related applications	MCB, MGCB
Description			
This setpoint adjusts the "dead-band" for the running hours equalization function (#Priority Auto Swap (page 229) = Run Hours Equal). The priorities are swapped when engine hours difference is higher than this dead-band.			
<i>Note: The system calculates with whole hours.</i>			
Example: The difference in engine running hours has to be 11.0 hours, if #Run Hours Max Difference is set to 10. The priorities shuffling is not done with the difference just 10.1 hours.			

[back to List of setpoints](#)

Run Hours Base

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0,0 .. 200000,0 [h]		
Default value	0,0 h	Alternative config	NO
Step	0,1 h		
Comm object	10600	Related applications	MINT
Description			
Running hours base corrects actual Running hours differences between particular gen-sets.			
Example: Gen-set 1 actual Running hours = 1000 h. Gen-set 2 actual Running hours = 2000 h. Adjust this setpoint for Gen-set 1 = 1000 h and for Gen-set 2 = 2000 h to be on the same base for Running Hours Equalization.			

[back to List of setpoints](#)

Subgroup: Efficient Mode

#Power Band Change Up Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 3 600 [s]		
Default value	10 s	Alternative config	NO
Step	[s]		
Comm object	8896	Related applications	MCB, MGCB
Description			
This setpoint is used for adjusting the delay of changing the power band if the load demand rose above the upper limit of the current power band. Setpoint is taken into account only if #Priority Auto Swap (page 229) = Efficient.			

[back to List of setpoints](#)

#Power Band Change Down Delay

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	0 .. 3 600 [s]		
Default value	10 s	Alternative config	NO
Step	[s]		
Comm object	10795	Related applications	MCB, MGCB
Description			
This setpoint is used for adjusting the delay of changing the power band if the load demand drops below the lower limit of the current power band. Setpoint is taken into account only if #Priority Auto Swap (page 229) = Efficient.			

[back to List of setpoints](#)

Subgroup: Group Settings

Control Group

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	1,2 .. 32 [-]		
Default value	1 s	Alternative config	NO
Step	1 s		
Comm object	10589	Related applications	MCB, MGCB
Description			
This setpoint selects the control group (to get more information on this function please refer to the chapter Control groups (page 107) to which the particular gen-set belongs. If there aren't logical groups at the site, adjust the setpoint to 1.			

[back to List of setpoints](#)

Group Link L

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	1,2 .. 32 [-]		
Default value	1 s	Alternative config	NO
Step	1 s		
Comm object	10590	Related applications	MCB, MGCB
Description			
<p>If the input GROUP LINK (PAGE 472) of this particular controller is used to provide the "group link" information for two Control groups (to get more information refer to the chapter Control groups (page 107)), then this setpoint is used to select which group is located at the left side of the group link breaker (bus tie breaker). If this particular controller is not used for the group link function, adjust this setpoint to 1.</p>			

🔍 back to List of setpoints

Group Link R

Setpoint group	Power Management	Related FW	2.0.0
Range [units]	1,2 .. 32 [-]		
Default value	1 s	Alternative config	NO
Step	1 s		
Comm object	10591	Related applications	MCB, MGCB
Description			
<p>If the input GROUP LINK (PAGE 472) of this particular controller is used to provide the "group link" information for two Control groups (to get more information refer to the chapter Control groups (page 107)), then this setpoint is used to select which group is located at the right side of the group link breaker (bus tie breaker). If this particular controller is not used for the group link function, adjust this setpoint to 1.</p>			

🔍 back to List of setpoints

Group: Load Control

Subgroup: Regulation Loops

Frequency Gain

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0,0 .. 200,0 [%]		
Default value	10,0 %	Alternative config	NO
Step	0,1 %		
Comm object	8715	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint adjusts the gain factor (P-factor) of the frequency control PI loop.</p> <p>Note: See the chapter <i>Regulation loops (page 112)</i> for more information.</p>			

🔍 back to List of setpoints

Frequency Int

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	8716	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts the relative integration factor (I-factor) of the frequency control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[back to List of setpoints](#)

Angle Gain

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0,0 .. 200,0 [%]		
Default value	10,0 %	Alternative config	NO
Step	0,1 %		
Comm object	8718	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used for adjusting of the gain factor (P-factor) of the phase angle P-control loop.			
<i>Note: During synchronization, first the frequency loop is started to match the generator frequency with the mains or bus and after that the phase angle loop is started to match the phase angle.</i>			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[back to List of setpoints](#)

Load Gain

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0,0 .. 200,0 [%]		
Default value	10,0 %	Alternative config	NO
Step	0,1 %		
Comm object	8659	Related applications	MCB, MGCB
Description			
This setpoint adjusts the gain factor (P-factor) of the load control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[back to List of setpoints](#)

Load Int

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	8713	Related applications	MCB, MGCB
Description			
This setpoint adjusts the relative integration factor (I-factor) of the load control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[back to List of setpoints](#)

Subgroup: Load Transfer

Close Transfer Max Duration

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0,1 .. Load Ramp (page 243) [s]		
Default value	5,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8661	Related applications	MCB, MGCB
Description			
The time of parallel work of gen-set and mains in close transition.			

[back to List of setpoints](#)

Open Transfer Min Break

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0,1 .. 600,0 [s]		
Default value	1,0 s	Alternative config	NO
Step	0,1 s		
Comm object	8303	Related applications	MCB, MGCB
Description			
Minimal duration of break in open transition when Transfer Bus To Mains (page 242) or Transfer Mains To Bus (page 241) is chosen as open transfer.			

[back to List of setpoints](#)

Transfer Mains To Bus

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	Open / Close Only / Close Primarily / Soft Transfer [-]		
Default value	Soft Transfer	Alternative config	NO
Step	[-]		
Comm object	12969	Related applications	MCB, MGCB

Description

This setpoint defines the type of transfer of load from mains to bus.

Open	Transfer of the load from mains to generator without parallel work and synchronization (one breaker opens and second is closed - checking feedbacks). The setpoint Open Transfer Min Break (page 240) sets the minimal duration of break.
Close Only	Transfer of the load from mains to generator with synchronization and parallel work. The time of parallel work is given by setpoint Close Transfer Max Duration (page 240) . In case of synchronization fail, MCB stays close and gen-set is stopped.
Close Primarily	Transfer of the load from mains to generator with synchronization and parallel work. The time of parallel work is given by setpoint Close Transfer Max Duration (page 240) . In case of synchronization fail, open transfer is done.
Soft Transfer	Transfer of the load from mains to generator with parallel work and soft loading of the gen-set. This function is proceeded like the closed transfer, but there is time limitation of loading of the gen-set adjusted via setpoint Load Ramp (page 243) . The transfer is succeed only when the gen-set is fully loaded - mains is fully unloaded (level of load when mains is considered as unloaded is adjusted via setpoint Unload MCB Open Window (page 243)).

Note: Close transfer of load is also affected by setpoint **Mains Import Measurement (page 201)**.

[▲ back to List of setpoints](#)

Transfer Bus To Mains

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	Open / Close Only / Close Primarily / Soft Transfer [-]		
Default value	Soft Interchange	Alternative config	NO
Step	[-]		
Comm object	14688	Related applications	MCB, MGCB

Description

This setpoint defines the type of transfer of load from generator to mains.

Open	Transfer of the load from generator to mains without parallel work and synchronization (one breaker opens and second is closed - checking feedbacks). The setpoint Open Transfer Min Break (page 240) sets the minimal duration of break.
Close Only	Transfer of the load from generator to mains with synchronization and parallel work. The time of parallel work is given by setpoint Close Transfer Max Duration (page 240) . In case of synchronization fail, MCB stays close and gen-set is stopped.
Close Primarily	Transfer of the load from generator to mains with synchronization and parallel work. The time of parallel work is given by setpoint Close Transfer Max Duration (page 240) . In case of synchronization fail, open transfer is done.
Soft Transfer	Transfer of the load from generator to mains with parallel work and soft unloading of the gen-set. This function is proceeded like the closed transfer, but there is time limitation of unloading of the gen-set adjusted via setpoint Load Ramp (page 243) . The transfer is succeed only when the gen-set is fully unloaded (level of load when gen-set is considered as unloaded is adjusted via setpoint Unload MGCB Open Level (page 242)).

[back to List of setpoints](#)

Unload MGCB Open Level

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	10 %	Alternative config	NO
Step	1 % of Nominal Mains Import (page 203)		
Comm object	8547	Related applications	MCB, MGCB

Description

This setpoint adjusts the value of the power when the MGCB is opened during unloading of the gen-set.

Note: It is set usually higher than 0 to prevent the engine to go to reverse power.

[back to List of setpoints](#)

Unload MCB Open Window

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	10 %	Alternative config	NO
Step	1 % of Nominal Mains Import (page 203)		
Comm object	14694	Related applications	MCB, MGCB
Description			
This setpoint adjusts the value which defines the level where the mains is considered as unloaded.			
<i>Note: This setpoint is window. It means that when you adjust this setpoint to 10%, there is window from -10% to +10%. The reason is import/export function.</i>			

⬅ back to List of setpoints

Load Ramp

Setpoint group	Load Control	Related FW	2.0.0
Range [units]	0 .. 600 [s]		
Default value	5 s	Alternative config	NO
Step	1 s		
Comm object	8658	Related applications	MCB, MGCB
Description			
The max duration of soft transition(time for gen-set loading / unloading).			

⬅ back to List of setpoints

Group: Voltage/PF Control

Subgroup: Regulation Loops

Voltage Gain

Setpoint group	Voltage/PF Control	Related FW	2.0.0
Range [units]	0,0 .. 200,0 [%]		
Default value	10,0 %	Alternative config	NO
Step	0,1 %		
Comm object	8501	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts the gain factor (P-factor) of the voltage control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

⬅ back to List of setpoints

Voltage Int

Setpoint group	Voltage/PF Control	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	8720	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts the relative integration factor (I-factor) of the voltage control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[⬅ back to List of setpoints](#)

PF Gain

Setpoint group	Voltage/PF Control	Related FW	2.0.0
Range [units]	0,0 .. 200,0 [%]		
Default value	10,0 %	Alternative config	NO
Step	0,1 %		
Comm object	8503	Related applications	MCB, MGCB
Description			
This setpoint adjusts the gain factor (P-factor) of the PF control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[⬅ back to List of setpoints](#)

PF Int

Setpoint group	Voltage/PF Control	Related FW	2.0.0
Range [units]	0 .. 100 [%]		
Default value	50 %	Alternative config	NO
Step	1 %		
Comm object	8721	Related applications	MCB, MGCB
Description			
This setpoint adjusts the relative integration factor (I-factor) of the PF control PI loop.			
<i>Note: See the chapter Regulation loops (page 112) for more information.</i>			

[⬅ back to List of setpoints](#)

Group: Synchronisation

Synchronization Type

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	Phase Match / Slip Synchro [-]		
Default value	Phase Match	Alternative config	NO
Step	[-]		
Comm object	14802	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts the type of synchronization.			
Phase Match	This type of synchronization is based on voltage and phase shift match. Limits are adjusted via setpoints Voltage Window (page 246) and Phase Window (page 246) . When voltage and phase shift are match, Dwell Time (page 246) starts countdown. After that the command for breaker closing is activated.		
Slip Synchro	This type of synchronization regulates the value of frequency to the value Mains/Bus frequency + Slip Frequency (page 246) (Mains frequency in SPTM, Bus frequency in MINT application). When this frequency is reached, Dwell Time (page 246) starts countdown. After that the command for breaker closing is activated. The closing breaker command is issued in advance due to latency of breakers (adjusted via setpoints MGCB Latency (page 247) and MCB Latency (page 247)). Note: Condition of Voltage Window (page 246) has to be also fulfilled.		

[back to List of setpoints](#)

Synchronization Timeout

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	OFF / 1 .. 1800 [s]		
Default value	60 s	Alternative config	NO
Step	1 s		
Comm object	8657	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts the maximum duration of synchronizing.			
Note: If this setpoint is adjusted to OFF then automatic restart of synchronization occurs every 180s. This method helps to synchronize successfully even in difficult conditions.			

[back to List of setpoints](#)

Voltage Window

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	0,0 .. 100,0 [%]		
Default value	10,0 %	Alternative config	NO
Step	0,1 %		
Comm object	8650	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts maximum difference between Bus and Mains voltage in respective phases for synchronization.			

⬅ back to List of setpoints

Phase Window

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	0 .. 90 [°]		
Default value	10 °	Alternative config	NO
Step	1 °		
Comm object	8652	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts the maximum absolute value of difference between actual phase angle between the Bus and Mains voltages for synchronization.			

⬅ back to List of setpoints

Dwell Time

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	0,0 .. 25,0 [s]		
Default value	0,3 s	Alternative config	NO
Step	0,1 s		
Comm object	8653	Related applications	MCB, MGCB, BTB
Description			
The period of time that the phase angle difference must be within Phase Window (page 246) and voltage difference within Voltage Window (page 246) before the breaker is closed.			

⬅ back to List of setpoints

Slip Frequency

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	-0,50 .. 0,50 [Hz]		
Default value	-0,25 Hz	Alternative config	NO
Step	0,01 Hz		
Comm object	14798	Related applications	MCB, MGCB, BTB
Description			
Slip frequency for slip synchronization (Synchronization Type (page 245) = Slip Synchro).			

⬅ back to List of setpoints

Slip Frequency Window

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	0,01 .. 0,50 [Hz]		
Default value	0,15 Hz	Alternative config	NO
Step	0,01 Hz		
Comm object	14799	Related applications	MCB, MGCB, BTB
Description			
Window of slip frequency for slip synchronization (Synchronization Type (page 245) = Slip Synchro).			

[back to List of setpoints](#)

MGCB Latency

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	20 .. 1 000 [ms]		
Default value	80 ms	Alternative config	NO
Step	1 ms		
Comm object	14800	Related applications	MCB, MGCB, BTB
Description			
Latency of MGCB.			
IMPORTANT: This setpoint is enable, when Synchronization Type (page 245) has Split Synchro value			

[back to List of setpoints](#)

MCB Latency

Setpoint group	Synchronisation	Related FW	2.0.0
Range [units]	20 .. 1 000 [ms]		
Default value	80 ms	Alternative config	NO
Step	1 ms		
Comm object	14801	Related applications	MCB, MGCB, BTB
Description			
Latency of MCB.			
IMPORTANT: This setpoint is enable, when Synchronization Type (page 245) has Split Synchro value			

[back to List of setpoints](#)

Group: General Analog Inputs

General Analog Input 1

Analog Protection 1 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9259	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT01 (PAGE 518).			
<i>Note: These setpoints are used only if LAI AIN PROT01 (PAGE 518) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 1 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9260	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT01 (PAGE 518).			
<i>Note: These setpoints are used only if LAI AIN PROT01 (PAGE 518) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 1 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9261	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT01 (PAGE 518).			
<i>Note: These setpoints are used only if LAI AIN PROT01 (PAGE 518) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 1 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11407	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH01 (PAGE 487) on. The value is measured from AIN SWITCH 01 (PAGE 538) analog input.			
Image 8.5 General analog input 1 switch			

[back to List of setpoints](#)

Analog Switch 1 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11410	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH01 (PAGE 487) off. The value is measured from AIN SWITCH 01 (PAGE 538) analog input.			
Image 8.6 General analog input 1 switch			

[back to List of setpoints](#)

General Analog Input 2

Analog Protection 2 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9262	Related applications	MCB, MGCB
Description			
Warning or history threshold level for AIN PROT02 (PAGE 519) .			
<i>Note: These setpoints are used only if LAI AIN PROT02 (PAGE 519) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 2 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9263	Related applications	MCB, MGCB
Description			
Shutdown or BOC threshold level for AIN PROT02 (PAGE 519) .			
<i>Note: These setpoints are used only if LAI AIN PROT02 (PAGE 519) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 2 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9264	Related applications	MCB, MGCB
Description			
Delay for AIN PROT02 (PAGE 519) .			
<i>Note: These setpoints are used only if LAI AIN PROT02 (PAGE 519) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Switch 2 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11408	Related applications	MCB, MGCB
Description			
Threshold level for switching the binary output AIN SWITCH 02 (PAGE 538) on. The value is measured from AIN SWITCH 02 (PAGE 538) analog input.			
Image 8.7 General analog input 2 switch			

[back to List of setpoints](#)

Analog Switch 2 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11411	Related applications	MCB, MGCB
Description			
Threshold level for switching the binary output AIN SWITCH 02 (PAGE 538) off. The value is measured from AIN SWITCH 02 (PAGE 538) analog input.			
Image 8.8 General analog input 2 switch			

[back to List of setpoints](#)

General Analog Input 3

Analog Protection 3 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9265	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT03 (PAGE 520) .			
<i>Note: These setpoints are used only if LAI AIN PROT03 (PAGE 520) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 3 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9266	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT03 (PAGE 520) .			
<i>Note: These setpoints are used only if LAI AIN PROT03 (PAGE 520) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 3 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9267	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT03 (PAGE 520) .			
<i>Note: These setpoints are used only if LAI AIN PROT03 (PAGE 520) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Switch 3 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11409	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 03 (PAGE 538) on. The value is measured from AIN SWITCH 03 (PAGE 538) analog input.			
Image 8.9 General analog input 3 switch			

[back to List of setpoints](#)

Analog Switch 3 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	11412	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 03 (PAGE 538) off. The value is measured from AIN SWITCH 03 (PAGE 538) analog input.			
Image 8.10 General analog input 3 switch			

[back to List of setpoints](#)

General Analog Input 4

Analog Protection 4 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9268	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT04 (PAGE 521) .			
<i>Note: These setpoints are used only if LAI AIN PROT04 (PAGE 521) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 4 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9269	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT04 (PAGE 521) .			
<i>Note: These setpoints are used only if LAI AIN PROT04 (PAGE 521) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 4 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9270	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT04 (PAGE 521) .			
<i>Note: These setpoints are used only if LAI AIN PROT04 (PAGE 521) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 4 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14385	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 04 (PAGE 539) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.11 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 4 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14386	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 04 (PAGE 539) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.12 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 5

Analog Protection 5 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9271	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT05 (PAGE 522) .			
<i>Note: These setpoints are used only if LAI AIN PROT05 (PAGE 522) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 5 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9272	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT05 (PAGE 522) .			
<i>Note: These setpoints are used only if LAI AIN PROT05 (PAGE 522) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 5 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9273	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT05 (PAGE 522) .			
<i>Note: These setpoints are used only if LAI AIN PROT05 (PAGE 522) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 5 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14963	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 05 (PAGE 539) on. The value is measured from AIN SWITCH 05 (PAGE 539) analog input.			
Image 8.13 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 5 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14979	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 05 (PAGE 539) off. The value is measured from AIN SWITCH 05 (PAGE 539) analog input.			
Image 8.14 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 6

Analog Protection 6 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9274	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT06 (PAGE 523) .			
<i>Note: These setpoints are used only if LAI AIN PROT06 (PAGE 523) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 6 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9275	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT06 (PAGE 523) .			
<i>Note: These setpoints are used only if LAI AIN PROT06 (PAGE 523) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 6 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9276	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT06 (PAGE 523) .			
<i>Note: These setpoints are used only if LAI AIN PROT06 (PAGE 523) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 6 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14964	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 06 (PAGE 539) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.15 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 6 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14980	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 06 (PAGE 539) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.16 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 7

Analog Protection 7 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9277	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT07 (PAGE 524).			
<i>Note: These setpoints are used only if LAI AIN PROT07 (PAGE 524) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 7 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9278	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT07 (PAGE 524).			
<i>Note: These setpoints are used only if LAI AIN PROT07 (PAGE 524) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 7 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9279	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT07 (PAGE 524).			
<i>Note: These setpoints are used only if LAI AIN PROT07 (PAGE 524) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 7 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14965	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 07 (PAGE 540) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.17 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 7 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14981	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 07 (PAGE 540) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.18 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 8

Analog Protection 8 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9280	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT08 (PAGE 525) .			
<i>Note: These setpoints are used only if LAI AIN PROT08 (PAGE 525) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 8 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9281	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT08 (PAGE 525) .			
<i>Note: These setpoints are used only if LAI AIN PROT08 (PAGE 525) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 8 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9282	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT08 (PAGE 525) .			
<i>Note: These setpoints are used only if LAI AIN PROT08 (PAGE 525) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Switch 8 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14966	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 08 (PAGE 540) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.19 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 8 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14982	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 08 (PAGE 540) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.20 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 9

Analog Protection 9 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9283	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT09 (PAGE 526).			
<i>Note: These setpoints are used only if LAI AIN PROT09 (PAGE 526) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 9 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9284	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT09 (PAGE 526).			
<i>Note: These setpoints are used only if LAI AIN PROT09 (PAGE 526) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 9 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9285	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT09 (PAGE 526).			
<i>Note: These setpoints are used only if LAI AIN PROT09 (PAGE 526) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Switch 9 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14967	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 09 (PAGE 540) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.21 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 9 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14983	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 09 (PAGE 540) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.22 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 10

Analog Protection 10 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9286	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT10 (PAGE 527).			
<i>Note: These setpoints are used only if LAI AIN PROT10 (PAGE 527) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 10 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9287	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT10 (PAGE 527).			
<i>Note: These setpoints are used only if LAI AIN PROT10 (PAGE 527) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 10 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9288	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT10 (PAGE 527).			
<i>Note: These setpoints are used only if LAI AIN PROT10 (PAGE 527) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 10 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14968	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 10 (PAGE 541) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.23 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 10 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14984	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 10 (PAGE 541) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.24 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 11

Analog Protection 11 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9289	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT11 (PAGE 528).			
<i>Note: These setpoints are used only if LAI AIN PROT11 (PAGE 528) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 11 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9290	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT11 (PAGE 528).			
<i>Note: These setpoints are used only if LAI AIN PROT11 (PAGE 528) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 11 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9291	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT11 (PAGE 528).			
<i>Note: These setpoints are used only if LAI AIN PROT11 (PAGE 528) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 11 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14969	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 11 (PAGE 541) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.25 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 11 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14985	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 11 (PAGE 541) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.26 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 12

Analog Protection 12 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9292	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT12 (PAGE 529) .			
<i>Note: These setpoints are used only if LAI AIN PROT12 (PAGE 529) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 12 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9293	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT12 (PAGE 529) .			
<i>Note: These setpoints are used only if LAI AIN PROT12 (PAGE 529) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 12 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9294	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT12 (PAGE 529) .			
<i>Note: These setpoints are used only if LAI AIN PROT12 (PAGE 529) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 12 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14970	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 12 (PAGE 541) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.27 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 12 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14986	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 12 (PAGE 541) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.28 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 13

Analog Protection 13 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9295	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT13 (PAGE 530) .			
<i>Note: These setpoints are used only if LAI AIN PROT13 (PAGE 530) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 13 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9296	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT13 (PAGE 530) .			
<i>Note: These setpoints are used only if LAI AIN PROT13 (PAGE 530) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 13 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9297	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT13 (PAGE 530) .			
<i>Note: These setpoints are used only if LAI AIN PROT13 (PAGE 530) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 13 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14971	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 13 (PAGE 542) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.29 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 13 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14987	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 13 (PAGE 542) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.30 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 14

Analog Protection 14 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9298	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT14 (PAGE 531) .			
<i>Note: These setpoints are used only if LAI AIN PROT14 (PAGE 531) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 14 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9299	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT14 (PAGE 531) .			
<i>Note: These setpoints are used only if LAI AIN PROT14 (PAGE 531) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 14 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9300	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT14 (PAGE 531) .			
<i>Note: These setpoints are used only if LAI AIN PROT14 (PAGE 531) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 14 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14972	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 14 (PAGE 542) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.31 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 14 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14988	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 14 (PAGE 542) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.32 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 15

Analog Protection 15 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9301	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT15 (PAGE 532) .			
<i>Note: These setpoints are used only if LAI AIN PROT15 (PAGE 532) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 15 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9302	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT15 (PAGE 532) .			
<i>Note: These setpoints are used only if LAI AIN PROT15 (PAGE 532) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Protection 15 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9303	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT15 (PAGE 532) .			
<i>Note: These setpoints are used only if LAI AIN PROT15 (PAGE 532) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

⬅ back to List of setpoints

Analog Switch 15 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14973	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 15 (PAGE 542) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.33 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 15 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14989	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 15 (PAGE 542) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.34 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 16

Analog Protection 16 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9304	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT16 (PAGE 533) .			
<i>Note: These setpoints are used only if LAI AIN PROT16 (PAGE 533) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 16 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9305	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT16 (PAGE 533) .			
<i>Note: These setpoints are used only if LAI AIN PROT16 (PAGE 533) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 16 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9306	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT16 (PAGE 533) .			
<i>Note: These setpoints are used only if LAI AIN PROT16 (PAGE 533) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 16 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14974	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 16 (PAGE 543) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.35 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 16 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14990	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 16 (PAGE 543) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.36 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 17

Analog Protection 17 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9307	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT17 (PAGE 534) .			
<i>Note: These setpoints are used only if LAI AIN PROT17 (PAGE 534) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 17 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9308	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT17 (PAGE 534) .			
<i>Note: These setpoints are used only if LAI AIN PROT17 (PAGE 534) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 17 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9309	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT17 (PAGE 534) .			
<i>Note: These setpoints are used only if LAI AIN PROT17 (PAGE 534) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 17 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14975	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 17 (PAGE 543) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.37 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 17 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14991	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 17 (PAGE 543) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.38 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 18

Analog Protection 18 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9310	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT18 (PAGE 535) .			
<i>Note: These setpoints are used only if LAI AIN PROT18 (PAGE 535) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 18 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9311	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT18 (PAGE 535) .			
<i>Note: These setpoints are used only if LAI AIN PROT18 (PAGE 535) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 18 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9312	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT18 (PAGE 535) .			
<i>Note: These setpoints are used only if LAI AIN PROT18 (PAGE 535) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 18 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14976	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 18 (PAGE 543) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.39 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 18 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14992	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 18 (PAGE 543) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.40 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 19

Analog Protection 19 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9313	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT19 (PAGE 536) .			
<i>Note: These setpoints are used only if LAI AIN PROT19 (PAGE 536) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 19 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9314	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT19 (PAGE 536) .			
<i>Note: These setpoints are used only if LAI AIN PROT19 (PAGE 536) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 19 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9315	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT19 (PAGE 536) .			
<i>Note: These setpoints are used only if LAI AIN PROT19 (PAGE 536) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 19 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14977	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 19 (PAGE 544) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.41 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 19 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14993	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 19 (PAGE 544) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.42 General analog input 4 switch			

[back to List of setpoints](#)

General Analog Input 20

Analog Protection 20 Wrn

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9316	Related applications	MCB, MGCB, BTB
Description			
Warning or history threshold level for AIN PROT20 (PAGE 537) .			
<i>Note: These setpoints are used only if LAI AIN PROT20 (PAGE 537) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 20 Sd

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	9317	Related applications	MCB, MGCB, BTB
Description			
Shutdown or BOC threshold level for AIN PROT20 (PAGE 537) .			
<i>Note: These setpoints are used only if LAI AIN PROT20 (PAGE 537) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Protection 20 Delay

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	0 .. 900 [s]		
Default value	0 s	Alternative config	NO
Step	1 s		
Comm object	9318	Related applications	MCB, MGCB, BTB
Description			
Delay for AIN PROT20 (PAGE 537) .			
<i>Note: These setpoints are used only if LAI AIN PROT20 (PAGE 537) is adjusted to required protection type. Otherwise these setpoints are useless.</i>			

[back to List of setpoints](#)

Analog Switch 20 On

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14978	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 20 (PAGE 544) on. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.43 General analog input 4 switch			

[back to List of setpoints](#)

Analog Switch 20 Off

Setpoint group	General Analog Inputs	Related FW	2.0.0
Range [units]	the range is defined by analog sensor curve		
Default value	the value is defined by analog sensor curve	Alternative config	NO
Step	the step is defined by analog sensor curve		
Comm object	14994	Related applications	MCB, MGCB, BTB
Description			
Threshold level for switching the binary output AIN SWITCH 20 (PAGE 544) off. The value is measured from AIN SWITCH 04 (PAGE 539) analog input.			
Image 8.44 General analog input 4 switch			

[back to List of setpoints](#)

Group: Scheduler

Subgroup: Time & Date

Time

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	HH:MM:SS [-]		
Default value	0:0:0	Alternative config	NO
Step	[-]		
Comm object	24554	Related applications	MCB, MGCB, BTB
Description			
Real time clock adjustment.			

[back to List of setpoints](#)

Date

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	DD/MM/YYYY [-]		
Default value	1.1.2015	Alternative config	NO
Step	[-]		
Comm object	24553	Related applications	MCB, MGCB, BTB
Description			
Actual date adjustment.			

[back to List of setpoints](#)

Time Stamp act

Setpoint group	Scheduler	Related FW	2.0.0						
Range [units]	Disabled / Condition / Always [-]								
Default value	DISABLED	Alternative config	NO						
Step	[-]								
Comm object	10532	Related applications	MCB, MGCB, BTB						
Description									
The setpoint selects the Time stamp function mode.									
<table border="1"> <tr> <td>Disabled</td> <td>The function is disabled.</td> </tr> <tr> <td>Condition</td> <td>While the binary input TIME STAMP ACT (PAGE 481) is active the Time stamps records are recorded into the history log with period adjusted by setpoint Time Stamp Period (page 289).</td> </tr> <tr> <td>Always</td> <td>The Time stamps records are recorded into the history log with period adjusted by setpoint Time Stamp Period (page 289) all the time while the controller is switched on.</td> </tr> </table>				Disabled	The function is disabled.	Condition	While the binary input TIME STAMP ACT (PAGE 481) is active the Time stamps records are recorded into the history log with period adjusted by setpoint Time Stamp Period (page 289) .	Always	The Time stamps records are recorded into the history log with period adjusted by setpoint Time Stamp Period (page 289) all the time while the controller is switched on.
Disabled	The function is disabled.								
Condition	While the binary input TIME STAMP ACT (PAGE 481) is active the Time stamps records are recorded into the history log with period adjusted by setpoint Time Stamp Period (page 289) .								
Always	The Time stamps records are recorded into the history log with period adjusted by setpoint Time Stamp Period (page 289) all the time while the controller is switched on.								

[back to List of setpoints](#)

Time Stamp Period

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	0 .. 240 [min]		
Default value	60 min	Alternative config	NO
Step	1 min		
Comm object	8979	Related applications	MCB, MGCB, BTB
Description			
Time interval for periodic history records.			
<i>Note: History record is made only when engine is running.</i>			

[⬅ back to List of setpoints](#)

#Summer Time Mode

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Disabled / Winter / Summer / Winter - S / Summer - S [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	8727	Related applications	MCB, MGCB, BTB
Description			
Behavior of switching between winter and summer time.			
Disable	Automatic switching between summer and wintertime is disabled.		
Winter (Summer)	Automatic switching between summer and wintertime is enabled and it is set to winter (summer) season.		
Winter - S (Summer - S)	Modification for southern hemisphere.		

[⬅ back to List of setpoints](#)

Subgroup: Timer 1

Timer 1 Setup

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	10969	Related applications	MCB, MGCB, BTB
Description			
<p>Related setpoints for timer 1 are:</p> <ul style="list-style-type: none"> ▶ Timer 1 Function (page 291) ▶ Timer 1 Repetition (page 291) ▶ Timer 1 First Occur. Date (page 292) ▶ Timer 1 First Occur. Time (page 292) ▶ Timer 1 Duration (page 292) ▶ Timer 1 Repeated (page 293) ▶ Timer 1 Repeat Day (page 295) ▶ Timer 1 Day (page 295) ▶ Timer 1 Repeated Day In Week (page 296) ▶ Timer 1 Repeat Day In Month (page 296) ▶ Timer 1 Repeat Week In Month (page 296) ▶ Timer 1 Refresh Period (page 294) ▶ Timer 1 Weekends (page 295) 			

[◀ back to List of setpoints](#)

Timer 1 Function

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Disable / No Func / TEST / Test OnLd / MFail Blk / Mode OFF [-]		
Default value	Disable	Alternative config	NO
Step	[-]		
Comm object	15358	Related applications	MCB, MGCB, BTB
Description			
<p>It is possible to choose from following timer functions. Binary output EXERCISE TIMER 1 (PAGE 501) is always activated when Timer is active regardless of chosen timer function. Timer functions require controller running in AUTO mode.</p> <p>IMPORTANT: Binary output is activated always when timer should be activated e.g. even when controller is in different mode than AUTO.</p> <p>Timer 1 has the highest priority. Timer 8 has the lowest priority. So if Timer 1 is configured for OFF mode and Timer 8 is over the same time configured for AUTO mode, controller will work in OFF mode.</p> <p>Controller activates timer whenever it is powered up even in period, where timer should be already running.</p> <p>Disable The Timer is disabled.</p> <p>No Func There is no any other function, only binary output of timer is activated.</p> <p>TEST When this option is chosen then the binary output of timer is internally connected to the binary input Remote TEST.</p> <p>TEST OnLd When this option is chosen then the binary output of timer is internally connected to the Remote TEST On Load binary input.</p> <p>MFail Blk When this option is chosen then the binary output of timer is internally connected to the Mains Fail Block binary input.</p> <p>Mode OFF When this option is chosen then the binary output of timer is internally connected to the Remote OFF binary input.</p>			

[back to List of setpoints](#)

Timer 1 Repetition

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Off / Once / Repeated [-]		
Default value	Off	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
<p>Defines repetition of Timer 1 Function (page 291).</p> <p>Off Timer 1 Function (page 291) will not be activated.</p> <p>Once Timer 1 Function (page 291) will be activated only one time.</p> <p>Repeated Timer 1 Function (page 291) will be repeatedly activated.</p>			

[back to List of setpoints](#)

Timer 1 First Occur. Date

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[DD/MM/YYYY]		
Default value	01/01/2000	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Date of first occurrence of Timer 1 Function (page 291).			

[◀ back to List of setpoints](#)

Timer 1 First Occur. Time

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Time of first occurrence of Timer 1 Function (page 291).			

[◀ back to List of setpoints](#)

Timer 1 Duration

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Timer 1 Function (page 291) duration time.			

[◀ back to List of setpoints](#)

Timer 1 Repeated

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Daily / Weekly / Monthly / Short Period [-]		
Default value	Daily	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Repeated interval of Timer 1 Function (page 291) .			
Daily	Timer 1 Function (page 291) is repeated every day.		
Weekly	Timer 1 Function (page 291) is repeated every week in chosen days.		
Monthly	Timer 1 Function (page 291) is repeated in chosen day every month or in chosen days of chosen week of month		
Short Period	Timer 1 Function (page 291) is repeated in adjusted period.		

[◀ back to List of setpoints](#)

Timer 1 Refresh Period

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Refresh period of Timer 1 Function (page 291) . Meaning of this setpoint depends on type of repetition adjusted in Timer 1 Repeated (page 293) .			
Daily	<p>Range [units]: 1 .. 1000 [day]. This setpoint adjust that every X day the timer will be activated.</p> <p>Example: If you have daily repetition and you set this setpoint to 2, then every second day from first occurrence of Timer 1 Function (page 291), the Timer 1 Function (page 291) will be activated.</p>		
Weekly	<p>Range [units]: 1 .. 60 [week]. This setpoint adjust that every X week the timer will be activated.</p> <p>Example: If you have weekly repetition and you set this setpoint to 2, then every second week from first occurrence of Timer 1 Function (page 291), the Timer 1 Function (page 291) will be activated in selected days adjusted by Timer 1 Day (page 295).</p>		
Monthly	<p>Range [units]: 1 .. 12 [month]. This setpoint adjust that every X month the timer will be activated.</p> <p>Example: If you have monthly repetition and you set this setpoint to 2, then every second month from first occurrence of Timer 1 Function (page 291), the Timer 1 Function (page 291) will be activated in selected day of month adjusted by Timer 1 Repeat Day In Month (page 296) or in selected days of week of month adjusted by Timer 1 Day (page 295) and Timer 1 Repeat Week In Month (page 296).</p>		
Short Period	<p>Range [units]: [HH:MM]. This setpoint adjust that every X short period the timer will be activated.</p> <p>Example: If you have short period repetition and you set this setpoint to 2, then every second minute from first occurrence of Timer 1 Function (page 291), the Timer 1 Function (page 291) will be activated.</p>		

 [back to List of setpoints](#)

Timer 1 Weekends

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Including / Skip / Postpone [-]		
Default value	Including	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Behavior of Timer 1 Function (page 291) on weekends.			
Including	Timer 1 Function (page 291) counter is running on the weekends and Timer 1 Function (page 291) can be active.		
Skip	Timer 1 Function (page 291) counter is running on the weekends but Timer 1 Function (page 291) isn't active.		
Postpone	Timer 1 Function (page 291) counter isn't running on the weekends and Timer 1 Function (page 291) isn't active. If the activation of timer is counted on the weekend, than timer will be activated after weekend. Another activation of timer is counted from original date of first occurrence date.		

[back to List of setpoints](#)

Timer 1 Day

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to include or exclude individual days of week. To select the day use Up and Down buttons. To change the value of day use Enter button.			

[back to List of setpoints](#)

Timer 1 Repeat Day

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Repeated Day / Repeated Day In Week [-]		
Default value	Repeated Day	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to adjust behavior of monthly repetition of the Timer 1 Function (page 291) .			
Repeated Day	Chose one day in month when Timer 1 Function (page 291) will be activated.		
Repeated Day In Week	Chose days in one week when Timer 1 Function (page 291) will be activated.		

[back to List of setpoints](#)

Timer 1 Repeated Day In Week

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to select the day of week when timer will be activated.			
<i>Note: More day can be selected. Timer will be activated on the day which happened like the first.</i>			

[List of setpoints \(page 188\)](#)

Timer 1 Repeat Day In Month

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	1..31 [day]		
Default value	0	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to chose the day in month when the Timer 1 Function (page 291) will be activated.			

[back to List of setpoints](#)

Timer 1 Repeat Week In Month

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	1 .. 5 [week]		
Default value	1 week	Alternative config	NO
Step	1 week		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjust the week of month in which the Timer 1 Function (page 291) will be activated.			

[back to List of setpoints](#)

Subgroup: Timer 2

Timer 2 Setup

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	10970	Related applications	MCB, MGCB, BTB
Description			
<p>Related setpoints for timer 2 are:</p> <ul style="list-style-type: none"> ▶ Timer 2 Function (page 298) ▶ Timer 2 Repetition (page 298) ▶ Timer 2 First Occur. Date (page 299) ▶ Timer 2 First Occur. Time (page 299) ▶ Timer 2 Duration (page 299) ▶ Timer 2 Repeated (page 300) ▶ Timer 2 Repeat Day (page 302) ▶ Timer 2 Day (page 302) ▶ Timer 2 Repeated Day In Week (page 303) ▶ Timer 2 Repeat Day In Month (page 303) ▶ Timer 2 Repeat Week In Month (page 303) ▶ Timer 2 Refresh Period (page 301) ▶ Timer 2 Weekends (page 302) 			

[◀ back to List of setpoints](#)

Timer 2 Function

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Disable / No Func / TEST / Test OnLd / MFail Blk / Mode OFF [-]		
Default value	No Func	Alternative config	NO
Step	[-]		
Comm object	15359	Related applications	MCB, MGCB, BTB
Description			
<p>It is possible to choose from following Timer functions. Binary output EXERCISE TIMER 2 (PAGE 502) is always activated when Timer is active regardless of chosen timer function. Timer functions require controller running in AUTO mode.</p> <p>IMPORTANT: Binary output is activated always when timer should be activated e.g. even when controller is in different mode than AUTO.</p> <p>Timer 1 has the highest priority. Timer 8 has the lowest priority. So if Timer 1 is configured for OFF mode and Timer 8 is over the same time configured for AUTO mode, controller will work in OFF mode.</p> <p>Controller activates timer whenever it is powered up even in period, where timer should be already running.</p> <p>Disable The Timer is disabled.</p> <p>No Func There is no any other function, only binary output of timer is activated.</p> <p>TEST When this option is chosen then the binary output of timer is internally connected to the binary input Remote TEST.</p> <p>TEST OnLd When this option is chosen then the binary output of timer is internally connected to the Remote TEST On Load binary input.</p> <p>MFail Blk When this option is chosen then the binary output of timer is internally connected to the Mains Fail Block binary input.</p> <p>Mode OFF When this option is chosen then the binary output of timer is internally connected to the Remote OFF binary input.</p>			

[back to List of setpoints](#)

Timer 2 Repetition

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Off / Once / Repeated [-]		
Default value	Off	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
<p>Defines repetition of Timer 2 Function (page 298).</p> <p>Off Timer 2 Function (page 298) will not be activated.</p> <p>Once Timer 2 Function (page 298) will be activated only one time.</p> <p>Repeated Timer 2 Function (page 298) will be repeatedly activated.</p>			

[List of setpoints \(page 188\)](#)

Timer 2 First Occur. Date

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[DD/MM/YYYY]		
Default value	01/01/2000	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Date of first occurrence of Timer 2 Function (page 298) .			

[◀ back to List of setpoints](#)

Timer 2 First Occur. Time

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Time of first occurrence of Timer 2 Function (page 298) .			

[◀ back to List of setpoints](#)

Timer 2 Duration

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[HH:MM]		
Default value	00:00	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Timer 2 Function (page 298) duration time.			

[◀ back to List of setpoints](#)

Timer 2 Repeated

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Daily / Weekly / Monthly / Short Period [-]		
Default value	Daily	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Repeated interval of Timer 2 Function (page 298) .			
Daily	Timer 2 Function (page 298) is repeated every day.		
Weekly	Timer 2 Function (page 298) is repeated every week in chosen days.		
Monthly	Timer 2 Function (page 298) is repeated in chosen day every month or in chosen days of chosen week of month		
Short Period	Timer 2 Function (page 298) is repeated in adjusted period.		

 [List of setpoints \(page 188\)](#)

Timer 2 Refresh Period

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	[-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Refresh period of Timer 2 Function (page 298) . Meaning of this setpoint depends on type of repetition adjusted in Timer 2 Repeated (page 300) .			
Daily	<p>Range [units]: 1 .. 1000 [day]. This setpoint adjust that every X day the timer will be activated.</p> <p>Example: If you have daily repetition and you set this setpoint to 2, then every second day from first occurrence of Timer 2 Function (page 298), the Timer 2 Function (page 298) will be activated.</p>		
Weekly	<p>Range [units]: 1 .. 60 [week]. This setpoint adjust that every X week the timer will be activated.</p> <p>Example: If you have weekly repetition and you set this setpoint to 2, then every second week from first occurrence of Timer 2 Function (page 298), the Timer 2 Function (page 298) will be activated in selected days adjusted by Timer 2 Day (page 302).</p>		
Monthly	<p>Range [units]: 1 .. 12 [month]. This setpoint adjust that every X month the timer will be activated.</p> <p>Example: If you have monthly repetition and you set this setpoint to 2, then every second month from first occurrence of Timer 2 Function (page 298), the Timer 2 Function (page 298) will be activated in selected day of month adjusted by Timer 2 Repeat Day In Month (page 303) or in selected days of week of month adjusted by Timer 2 Day (page 302) and Timer 2 Repeat Week In Month (page 303).</p>		
Short Period	<p>Range [units]: [HH:MM]. This setpoint adjust that every X short period the timer will be activated.</p> <p>Example: If you have short period repetition and you set this setpoint to 2, then every second minute from first occurrence of Timer 2 Function (page 298), the Timer 2 Function (page 298) will be activated.</p>		

 [back to List of setpoints](#)

Timer 2 Weekends

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Including / Skip / Postpone [-]		
Default value	Including	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Behavior of Timer 2 Function (page 298) on weekends.			
Including	Timer 2 Function (page 298) counter is running on the weekends and Timer 2 Function (page 298) can be active.		
Skip	Timer 2 Function (page 298) counter is running on the weekends but Timer 2 Function (page 298) isn't active.		
Postpone	Timer 2 Function (page 298) counter isn't running on the weekends and Timer 2 Function (page 298) isn't active. If the activation of timer is counted on the weekend, than timer will be activated after weekend. Another activation of timer is counted from original date of first occurrence date.		

[back to List of setpoints](#)

Timer 2 Day

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to include or exclude individual days of week. To select the day use Up and Down buttons. To change the value of day use Enter button.			

[back to List of setpoints](#)

Timer 2 Repeat Day

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Repeated Day / Repeated Day In Week [-]		
Default value	Repeated Day	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to adjust behavior of monthly repetition of the Timer 2 Function (page 298) .			
Repeated Day	Chose one day in month when Timer 2 Function (page 298) will be activated.		
Repeated Day In Week	Chose days in one week when Timer 2 Function (page 298) will be activated.		

[back to List of setpoints](#)

Timer 2 Repeated Day In Week

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday/ Sunday[-]		
Default value	All OFF	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to select the day of week when timer will be activated.			
<i>Note: More day can be selected. Timer will be activated on the day which happened like the first.</i>			

🔍 [List of setpoints \(page 188\)](#)

Timer 2 Repeat Day In Month

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	1..31 [day]		
Default value	0	Alternative config	NO
Step	[-]		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to chose the day in month when the Timer 2 Function (page 298) will be activated.			

🔍 [back to List of setpoints](#)

Timer 2 Repeat Week In Month

Setpoint group	Scheduler	Related FW	2.0.0
Range [units]	1 .. 5 [week]		
Default value	1 week	Alternative config	NO
Step	1 week		
Comm object	0	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjust the week of month in which the Timer 2 Function (page 298) will be activated.			

🔍 [back to List of setpoints](#)

Group: Plug-In Modules

Slot A

Setpoint group	Plug-In Modules	Related FW	2.0.0
Range [units]	ENABLED / DISABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24280	Related applications	MCB, MGCB, BTB
Description			
This setpoint enable or disable module in slot A.			

[back to List of setpoints](#)

Slot B

Setpoint group	Plug-In Modules	Related FW	2.0.0
Range [units]	ENABLED / DISABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24279	Related applications	MCB, MGCB, BTB
Description			
This setpoint enable or disable module in slot B.			

[back to List of setpoints](#)

Group: CM-RS232-485

COM1 Mode

Setpoint group	CM-RS232-485	Related FW	2.0.0
Range [units]	Direct / MODBUS [-]		
Default value	Direct	Alternative config	NO
Step	[-]		
Comm object	24522	Related applications	MCB, MGCB, BTB
Description			
Communication protocol switch for the COM1 channel.			
Direct	InteliConfig communication protocol via serial cable.		
MODBUS	MODBUS protocol.		

[back to List of setpoints](#)

COM1 Communication Speed

Setpoint group	CM-RS232-485	Related FW	2.0.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200[bps]		
Default value	57600 bps	Alternative config	NO
Step	[-]		
Comm object	24341	Related applications	MCB, MGCB, BTB
Description			
If the direct mode is selected on COM1 channel, the direct communication speed of controller part of line can be adjusted here. Speed of second part of line has to be adjusted to the same value.			
Note: Winscope supports only 19200, 38400, 57600 speeds.			

[List of setpoints \(page 188\)](#)

COM1 MODBUS Communication Speed

Setpoint group	CM-RS232-485	Related FW	2.0.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200 [bps]		
Default value	9600 bps	Alternative config	NO
Step	[-]		
Comm object	24477	Related applications	MCB, MGCB, BTB
Description			
If the MODBUS mode is selected on COM1 channel, the MODBUS communication speed can be adjusted here.			

🔍 [List of setpoints \(page 188\)](#)

COM2 Mode

Setpoint group	CM-RS232-485	Related FW	2.0.0
Range [units]	Direct / MODBUS [-]		
Default value	Direct	Alternative config	NO
Step	[-]		
Comm object	24451	Related applications	MCB, MGCB, BTB
Description			
Communication protocol switch for the COM2 channel.			
Direct	InteliConfig communication protocol via serial cable.		
MODBUS	MODBUS protocol.		

🔍 [back to List of setpoints](#)

COM2 Communication Speed

Setpoint group	CM-RS232-485	Related FW	2.0.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200[bps]		
Default value	57600 bps	Alternative config	NO
Step	[-]		
Comm object	24340	Related applications	MCB, MGCB, BTB
Description			
If the direct mode is selected on COM2 channel, the direct communication speed of controller part of line can be adjusted here. Speed of second part of line has to be adjusted to the same value.			
Note: Winscope supports only 19200, 38400, 57600 speeds.			

🔍 [List of setpoints \(page 188\)](#)

COM2 MODBUS Communication Speed

Setpoint group	CM-RS232-485	Related FW	2.0.0
Range [units]	9600 / 19200 / 38400 / 57600 / 115200 [bps]		
Default value	9600 bps	Alternative config	NO
Step	[-]		
Comm object	24420	Related applications	MCB, MGCB, BTB
Description			
If the MODBUS mode is selected on COM2 channel, the MODBUS communication speed can be adjusted here.			

🔍 [List of setpoints \(page 188\)](#)

Group: CM-GPRS

Mode

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	Email+SMS / SMS Only [-]		
Default value	Email+SMS	Alternative config	NO
Step	[-]		
Comm object	24315	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjust the communication mode of module.			
Email+SMS	Controller is connected to the Internet and is able to send e-mails as well as SMS. The controller is also accessible via AirGate. Internet-enabled SIM card must be used. Also APN Name (page 316) has to be adjusted.		
SMS Only	Only SMS are sent. Internet-enabled SIM card is not required.		
IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.			

🔍 [List of setpoints \(page 188\)](#)

APN Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24363	Related applications	MCB, MGCB, BTB
Description			
APN (Access Point Name) of the GPRS/4G network, provided by GSM operator.			

🔍 [back to List of setpoints](#)

APN User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24361	Related applications	MCB, MGCB, BTB
Description			
User name for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[back to List of setpoints](#)

APN User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24360	Related applications	MCB, MGCB, BTB
Description			
User password for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[back to List of setpoints](#)

Email Address 1

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24298	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Email Address 2

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24297	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 3

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24145	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 4

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24144	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Message Language

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	[-]		
Default value	English	Alternative config	NO
Step	[-]		
Comm object	24299	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to set the language of SMS and e-mail.			
<p>Note: Numbers correspond with languages in language list. See the chapter for <i>Language selection</i> (page 78) more information.</p>			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

SMTP User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24313	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to enter the username for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[back to List of setpoints](#)

SMTP User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24312	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to enter the password for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[back to List of setpoints](#)

SMTP Server Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	airgate.comap.cz:9925	Alternative config	NO
Step	[-]		
Comm object	24311	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint is used for entering the domain name (e.g. smtp.yourprovider.com) or IP address (e.g. 74.125.39.109) or number of port (with colon like a first mark) of the SMTP server. Ask your internet provider or IT manager for this information.</p> <p>Note: You may use also any public SMTP server which does not require connection over SSL/TLS channels. If the device is connected to AirGate the AirGate SMTP server at "airgate.comap.cz" may be used. Ports 25 and 9925 are supported. After controller connects to AirGate for the first time (or with new public IP address), it may not be able to send emails for first 5-10 minutes.</p>			

🔍 back to List of setpoints

SMTP Sender Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24310	Related applications	MCB, MGCB, BTB
Description			
<p>Enter an existing email address into this setpoint. This address will be used as sender address in active e-mails that will be sent from the controller.</p> <p>Note: It is not needed to enter an existing email address, nevertheless valid email format needs to be followed.</p> <p>IMPORTANT: This item is obligatory when emails are configured.</p>			

🔍 back to List of setpoints

Time Zone

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	GMT-12:00 .. GMT+13:00 [hours]		
Default value	GMT+1:00 hour	Alternative config	NO
Step	[-]		
Comm object	24366	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint is used to select the time zone where the controller is located. See your computer time zone setting (click on the time indicator located in the rightmost position of the Windows task bar) if you are not sure about your time zone.</p> <p>Note: <i>If the time zone is not selected properly the active e-mails may contain incorrect information about sending time, which may result in confusion when the respective problem actually occurred.</i></p> <p>Note: <i>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[back to List of setpoints](#)

Event Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10926	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint enables or disables Event Messages.</p> <p>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Wrn Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8482	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint enables or disables Wrn Messages.</p> <p>This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

BOC Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10566	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables BOC Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Sd Messages

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8484	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Sd Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Telephone Number 1

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24296	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a "+" character followed by the country prefix.			
IMPORTANT: Telephone number has to be entered without spaces.			

[back to List of setpoints](#)

Telephone Number 2

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24295	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
IMPORTANT: Telephone number has to be entered without spaces.			

[back to List of setpoints](#)

Telephone Number 3

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24143	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
IMPORTANT: Telephone number has to be entered without spaces.			

[back to List of setpoints](#)

Telephone Number 4

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24142	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
IMPORTANT: Telephone number has to be entered without spaces.			

[back to List of setpoints](#)

DNS IP Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24314	Related applications	MCB, MGCB, BTB
Description			
The setpoint is used to adjust the domain name server (DNS), which is needed to translate domain names in email addresses and server names into correct IP addresses.			

🔍 [List of setpoints \(page 188\)](#)

AirGate Connection

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24273	Related applications	MCB, MGCB, BTB
Description			
This setpoint enable or disable AirGate connection via CM-GPRS or via CM-4G-GPS.			
DISABLED: Only SMS are sent. Internet-enabled SIM card is not required. AirGate is not used.			
ENABLED This mode uses the “AirGate” service. Internet-enabled SIM card must be used. The AirGate server address is adjusted by the setpoint AirGate Address (page 334) .			
IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.			

🔍 [back to List of setpoints](#)

AirGate Address

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	[-]		
Default value	airgate.comap.cz	Alternative config	NO
Step	[-]		
Comm object	24364	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used for entering the domain name or IP address of the AirGate server. Use the free AirGate server provided by ComAp at airgate.comap.cz.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

🔍 [back to List of setpoints](#)

ComAp TCP Port

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0 .. 65 535[-]		
Default value	23	Alternative config	NO
Step	[-]		
Comm object	24374	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint is used to adjust the port number, which is used for Ethernet connection to a PC with any of ComAp PC program (i.e. IntelliConfig). This setpoint should be adjusted to 23, which is the default port used by all ComAp PC programs. A different value should be used only in special situations as e.g. sharing one public IP address among many controllers or to overcome a firewall restrictions.</p> <p>IMPORTANT: If AirGate is used, this setpoint has to be adjusted to 23.</p> <p><i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[back to List of setpoints](#)

Group: CM-4G-GPS

Mode

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	Email+SMS / SMS Only [-]		
Default value	Email+SMS	Alternative config	NO
Step	[-]		
Comm object	24315	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint adjust the communication mode of module.</p> <p>Email+SMS Controller is connected to the Internet and is able to send e-mails as well as SMS. The controller is also accessible via AirGate. Internet-enabled SIM card must be used. Also APN Name (page 316) has to be adjusted.</p> <p>SMS Only Only SMS are sent. Internet-enabled SIM card is not required.</p> <p>IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.</p>			

[List of setpoints \(page 188\)](#)

Required Connection Type

Setpoint group	CM-4G-GPS	Related FW	2.0.0
Range [units]	2G/3G/4G/Automatic [-]		
Default value	Automatic	Alternative config	NO
Step	[-]		
Comm object	24132	Related applications	MCB, MGCB, BTB
Description			
This setpoint adjusts preferred connection type of CM-4G-GPS module.			

[back to List of setpoints](#)

APN Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24363	Related applications	MCB, MGCB, BTB
Description			
APN (Access Point Name) of the GPRS/4G network, provided by GSM operator.			

[back to List of setpoints](#)

APN User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24361	Related applications	MCB, MGCB, BTB
Description			
User name for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[back to List of setpoints](#)

APN User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24360	Related applications	MCB, MGCB, BTB
Description			
User password for the GPRS/4G Access Point if authentication is required. But mostly it is not required and should be left blank.			

[back to List of setpoints](#)

Email Address 1

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24298	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 2

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24297	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 3

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24145	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

⬅ back to List of setpoints

Email Address 4

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24144	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

⬅ back to List of setpoints

Message Language

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	[-]		
Default value	English	Alternative config	NO
Step	[-]		
Comm object	24299	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to set the language of SMS and e-mail.			
<i>Note: Numbers correspond with languages in language list. See the chapter for Language selection (page 78) more information.</i>			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

⬅ back to List of setpoints

SMTP User Name

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24313	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to enter the username for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[back to List of setpoints](#)

SMTP User Password

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24312	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to enter the password for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[back to List of setpoints](#)

SMTP Server Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	airgate.comap.cz:9925	Alternative config	NO
Step	[-]		
Comm object	24311	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used for entering the domain name (e.g. smtp.yourprovider.com) or IP address (e.g. 74.125.39.109) or number of port (with colon like a first mark) of the SMTP server. Ask your internet provider or IT manager for this information.			
<p>Note: You may use also any public SMTP server which does not require connection over SSL/TLS channels. If the device is connected to AirGate the AirGate SMTP server at "airgate.comap.cz" may be used. Ports 25 and 9925 are supported. After controller connects to AirGate for the first time (or with new public IP address), it may not be able to send emails for first 5-10 minutes.</p>			

[back to List of setpoints](#)

SMTP Sender Address

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24310	Related applications	MCB, MGCB, BTB
Description			
Enter an existing email address into this setpoint. This address will be used as sender address in active e-mails that will be sent from the controller.			
<i>Note: It is not needed to enter an existing email address, nevertheless valid email format needs to be followed.</i>			
IMPORTANT: This item is obligatory when emails are configured.			

[◀ back to List of setpoints](#)

Time Zone

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	GMT-12:00 .. GMT+13:00 [hours]		
Default value	GMT+1:00 hour	Alternative config	NO
Step	[-]		
Comm object	24366	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used to select the time zone where the controller is located. See your computer time zone setting (click on the time indicator located in the rightmost position of the Windows task bar) if you are not sure about your time zone.			
<i>Note: If the time zone is not selected properly the active e-mails may contain incorrect information about sending time, which may result in confusion when the respective problem actually occurred.</i>			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[◀ back to List of setpoints](#)

Event Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10926	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Event Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

Wrn Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8482	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Wrn Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

BOC Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10566	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables BOC Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

Sd Messages

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8484	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Sd Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Telephone Number 1

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24296	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a "+" character followed by the country prefix.			
IMPORTANT: Telephone number has to be entered without spaces.			

[back to List of setpoints](#)

Telephone Number 2

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24295	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a "+" character followed by the country prefix.			
IMPORTANT: Telephone number has to be entered without spaces.			

[back to List of setpoints](#)

Telephone Number 3

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24143	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[back to List of setpoints](#)

Telephone Number 4

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24142	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint either a valid GSM phone number where the alarm messages shall be sent. For GSM numbers use either the national format (i.e. the number you would dial if you wanted to make a local call) or the full international format beginning with a “+” character followed by the country prefix.			
<div style="background-color: #f0f0f0; padding: 5px;">IMPORTANT: Telephone number has to be entered without spaces.</div>			

[back to List of setpoints](#)

AirGate Connection

Setpoint group	CM-GPRS; CM-4G-GPS	Related FW	2.0.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24273	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint enable or disable AirGate connection via CM-GPRS or via CM-4G-GPS.</p> <p>DISABLED: Only SMS are sent. Internet-enabled SIM card is not required. AirGate is not used.</p> <p>ENABLED This mode uses the “AirGate” service. Internet-enabled SIM card must be used. The AirGate server address is adjusted by the setpoint AirGate Address (page 334).</p>			
<p>IMPORTANT: When this setpoint is changed the controller has to be restarted to apply changes.</p>			

🔍 back to List of setpoints

AirGate Address

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	[-]		
Default value	airgate.comap.cz	Alternative config	NO
Step	[-]		
Comm object	24364	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint is used for entering the domain name or IP address of the AirGate server. Use the free AirGate server provided by ComAp at airgate.comap.cz.</p>			
<p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

🔍 back to List of setpoints

ComAp TCP Port

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0 .. 65 535[-]		
Default value	23	Alternative config	NO
Step	[-]		
Comm object	24374	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint is used to adjust the port number, which is used for Ethernet connection to a PC with any of ComAp PC program (i.e. IntelliConfig). This setpoint should be adjusted to 23, which is the default port used by all ComAp PC programs. A different value should be used only in special situations as e.g. sharing one public IP address among many controllers or to overcome a firewall restrictions.</p> <p>IMPORTANT: If AirGate is used, this setpoint has to be adjusted to 23.</p> <p><i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[back to List of setpoints](#)

Group: CM-Ethernet

Email Address 1

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24298	Related applications	MCB, MGCB, BTB
Description			
<p>Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.</p> <p><i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[back to List of setpoints](#)

Email Address 2

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24297	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 3

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24145	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Email Address 4

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0..63 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24144	Related applications	MCB, MGCB, BTB
Description			
Enter in this setpoint a valid e-mail address where the alarm and event e-mails shall be sent. Leave this setpoint blank if alarm and event email should not be send.			
<i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i>			

[back to List of setpoints](#)

Message Language

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	[-]		
Default value	English	Alternative config	NO
Step	[-]		
Comm object	24299	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to set the language of SMS and e-mail.			
<p>Note: Numbers correspond with languages in language list. See the chapter for <i>Language selection</i> (page 78) more information.</p>			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Time Zone

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	GMT-12:00 .. GMT+13:00 [hours]		
Default value	GMT+1:00 hour	Alternative config	NO
Step	[-]		
Comm object	24366	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used to select the time zone where the controller is located. See your computer time zone setting (click on the time indicator located in the rightmost position of the Windows task bar) if you are not sure about your time zone.			
<p>Note: If the time zone is not selected properly the active e-mails may contain incorrect information about sending time, which may result in confusion when the respective problem actually occurred.</p>			
<p>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</p>			

[back to List of setpoints](#)

Event Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10926	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Event Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[back to List of setpoints](#)

Wrn Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8482	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Wrn Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

BOC Message

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	10566	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables BOC Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

Sd Messages

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	ON / OFF [-]		
Default value	ON	Alternative config	NO
Step	[-]		
Comm object	8484	Related applications	MCB, MGCB, BTB
Description			
This setpoint enables or disables Sd Messages.			
This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

[◀ back to List of setpoints](#)

SMTP UserName

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24370	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to enter the username for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[▲ back to List of setpoints](#)

SMTP User Password

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	0..15 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24369	Related applications	MCB, MGCB, BTB
Description			
Use this setpoint to enter the password for the SMTP server. Leave the setpoint blank if the SMTP server does not require authentication.			

[▲ back to List of setpoints](#)

SMTP Server Address

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	airgate.comap.cz:9925	Alternative config	NO
Step	[-]		
Comm object	24368	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used for entering the domain name (e.g. smtp.yourprovider.com) or IP address (e.g. 74.125.39.109) or number of port (with colon like a first mark) of the SMTP server. Ask your internet provider or IT manager for this information.			
<p>Note: You may use also any public SMTP server which does not require connection over SSL/TLS channels. If the device is connected to AirGate the AirGate SMTP server at "airgate.comap.cz" may be used. Ports 25 and 9925 are supported. After controller connects to AirGate for the first time (or with new public IP address), it may not be able to send emails for first 5-10 minutes.</p>			

[▲ back to List of setpoints](#)

SMTP Sender Address

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	[-]	Alternative config	NO
Step	[-]		
Comm object	24367	Related applications	MCB, MGCB, BTB
Description			
Enter an existing email address into this setpoint. This address will be used as sender address in active e-mails that will be sent from the controller.			
<p><i>Note: It is not needed to enter an existing email address, nevertheless valid email format needs to be followed.</i></p>			
<p>IMPORTANT: This item is obligatory when emails are configured.</p>			

🔍 back to List of setpoints

IP Address Mode

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	FIXED / AUTOMATIC [-]		
Default value	AUTOMATIC	Alternative config	NO
Step	[-]		
Comm object	24259	Related applications	MCB, MGCB, BTB
Description			
The setpoint is used to select the method how the ethernet connection is adjusted.			
DISABLED:	<p>The Ethernet connection is fixed by means of the setpoints <u>IP Addr</u>, <u>NetMask</u>, <u>GateIP</u>, <u>DNS IP Address</u>.</p> <p>This method should be used for a classic Ethernet or internet connection. When this type of connection opens, the controller is specified by its IP address. This means that it would be inconvenient if the IP address were not fixed (static).</p>		
ENABLED:	<p>The Ethernet connection setting is obtained automatically from the DHCP server. The obtained settings are then copied to the related setpoints. If the process of obtaining the settings from the DHCP server is not successful, the value <i>000.000.000.000</i> is copied to the setpoint IP address and the module continues to try to obtain the settings.</p>		

🔍 back to List of setpoints

IP Address

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	192.168.1.254	Alternative config	NO
Step	[-]		
Comm object	24376	Related applications	MCB, MGCB, BTB
Description			
<p>The setpoint is used to set the address when you are in static mode.</p> <p>If IP Address Mode (page 330) is FIXED this setpoint is used to adjust the IP address of the ethernet interface of the controller. Ask your IT specialist for help with this setting.</p> <p>If IP Address Mode (page 330) is AUTOMATIC this setpoint is inactive. The IP address is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

Subnet Mask

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	255.255.255.0	Alternative config	NO
Step	[-]		
Comm object	24375	Related applications	MCB, MGCB, BTB
Description			
<p>The setpoint is used to select the method how the Subnet Mask is adjusted.</p> <p>If IP Address Mode (page 330) is FIXED this setpoint is used to adjust the Subnet Mask. Ask your IT specialist for help with this setting.</p> <p>If IP Address Mode (page 330) is AUTOMATIC this setpoint is inactive. The Subnet Mask is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

Gateway IP

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	192.168.1.1	Alternative config	NO
Step	[-]		
Comm object	24373	Related applications	MCB, MGCB, BTB
Description			
<p>The setpoint is used to select the method how the Gateway IP is adjusted.</p> <p>If IP Address Mode (page 330) is DISABLE this setpoint is used to adjust the IP address of the gateway of the network segment where the controller is connected.</p> <p>If IP Address Mode (page 330) is ENABLED this setpoint is used to display the gateway IP address which has been assigned by the DHCP server.</p> <p>A gateway is a device which connects the respective segment with the other segments and/or Internet.</p>			

[back to List of setpoints](#)

DNS IP Address 1

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	8.8.8.8	Alternative config	NO
Step	[-]		
Comm object	24362	Related applications	MCB, MGCB, BTB
Description			
<p>The setpoint is used to select the method how the DNS Address 1 is adjusted.</p> <p>If IP Address Mode (page 330) is FIXED this setpoint is used to adjust the domain name server (DNS), which is needed to translate domain names in email addresses and server names into correct IP addresses.</p> <p>If IP Address Mode (page 330) is AUTOMATIC this setpoint is inactive. The DNS server IP address is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

DNS IP Address 2

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	8.8.8.8	Alternative config	NO
Step	[-]		
Comm object	24331	Related applications	MCB, MGCB, BTB
Description			
<p>The setpoint is used to select the method how the DNS Address 2 is adjusted.</p> <p>If IP Address Mode (page 330) is FIXED this setpoint is used to adjust the domain name server (DNS), which is needed to translate domain names in email addresses and server names into correct IP addresses.</p> <p>If IP Address Mode (page 330) is AUTOMATIC this setpoint is inactive. The DNS server IP address is assigned by the DHCP server.</p>			

[back to List of setpoints](#)

MODBUS Server

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	DISABLED / ENABLED [-]		
Default value	Disabled	Alternative config	NO
Step	[-]		
Comm object	24337	Related applications	MCB, MGCB, BTB
Description			
Enable or disable MODBUS communication via ethernet interface.			

[back to List of setpoints](#)

SNMP Agent

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	DISABLED / ENABLED [-]		
Default value	DISABLED	Alternative config	NO
Step	[-]		
Comm object	24336	Related applications	MCB, MGCB, BTB
Description			
Enable or disable SNMP v1 Agent.			

[back to List of setpoints](#)

SNMP RD Community String

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	public	Alternative config	NO
Step	[-]		
Comm object	24335	Related applications	MCB, MGCB, BTB
Description			
SNMP Community String only for reading.			

[back to List of setpoints](#)

SNMP WR Community String

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	0..31 characters [-]		
Default value	private	Alternative config	NO
Step	[-]		
Comm object	24334	Related applications	MCB, MGCB, BTB
Description			
SNMP Community String for writing and reading.			

[back to List of setpoints](#)

SNMP Traps IP Address 1

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	DISABLED	Alternative config	NO
Step	[-]		
Comm object	24294	Related applications	MCB, MGCB, BTB
Description			
IP address 1 for receiving SNMP Traps. Leave this setpoint blank if SNMP traps should not be send.			

[back to List of setpoints](#)

SNMP Traps IP Address 2

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	Valid IP address [-]		
Default value	DISABLED	Alternative config	NO
Step	[-]		
Comm object	24293	Related applications	MCB, MGCB, BTB
Description			
IP address 2 for receiving SNMP Traps. Leave this setpoint blank if SNMP traps should not be send.			

🔍 back to List of setpoints

AirGate Connection

Setpoint group	CM-Ethernet	Related FW	2.0.0
Range [units]	DISABLED / ENABLED [-]		
Default value	ENABLED	Alternative config	NO
Step	[-]		
Comm object	24365	Related applications	MCB, MGCB, BTB
Description			
This setpoint selects the Ethernet connection mode.			
DISABLED:	This is a standard mode in which the controller listens to the incoming traffic and answers the TCP/IP queries addressed to it. This mode requires the controller to be accessible from the remote device (PC), i.e. it must be accessible at a public and static IP address if you want to connect to it from the internet.		
ENABLED	This mode enables the AirGate service. The AirGate server address is adjusted by the setpoint AirGate Address (page 334) . Also the standard TCP/IP is enabled.		

🔍 back to List of setpoints

AirGate Address

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	[-]		
Default value	airgate.comap.cz	Alternative config	NO
Step	[-]		
Comm object	24364	Related applications	MCB, MGCB, BTB
Description			
This setpoint is used for entering the domain name or IP address of the AirGate server. Use the free AirGate server provided by ComAp at airgate.comap.cz.			
Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.			

🔍 back to List of setpoints

ComAp TCP Port

Setpoint group	CM-GPRS; CM-4G-GPS; CM-Ethernet	Related FW	2.0.0
Range [units]	0 .. 65 535[-]		
Default value	23	Alternative config	NO
Step	[-]		
Comm object	24374	Related applications	MCB, MGCB, BTB
Description			
<p>This setpoint is used to adjust the port number, which is used for Ethernet connection to a PC with any of ComAp PC program (i.e. IntelliConfig). This setpoint should be adjusted to 23, which is the default port used by all ComAp PC programs. A different value should be used only in special situations as e.g. sharing one public IP address among many controllers or to overcome a firewall restrictions.</p> <p>IMPORTANT: If AirGate is used, this setpoint has to be adjusted to 23.</p> <p><i>Note: This setpoint is common for CM-Ethernet, CM-GPRS and CM-4G-GPS modules.</i></p>			

[back to List of setpoints](#)

Group: Alternate Configuration

Subgroup: Configuration 1

Nominal Frequency 1

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	9913	Related applications	MCB, MGCB, BTB
Description			
<p>Nominal system frequency (usually 50 or 60 Hz).</p> <p><i>Note: This value is used when any other alternate configuration is not active.</i></p>			

[back to List of setpoints](#)

Nominal Voltage Ph-N 1

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	80 .. 20000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	12052	Related applications	MCB, MGCB, BTB
Description			
<p>Nominal system voltage (phase to neutral).</p> <p><i>Note: This value is used when any other alternate configuration is not active.</i></p>			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph 1

Setpoint group		Related FW	2.0.0
Range [units]	80 .. 40000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	12055	Related applications	MCB, MGCB, BTB
Description			
Nominal system voltage (phase to phase).			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Nominal Current 1

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	1 .. 10 000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	12049	Related applications	MCB, MGCB, BTB
Description			
It is current limit for current protections and means maximal continuous current. Nominal Current can be different from mains rated current value.			
<i>Note: This value is used when any other alternate configuration is not active.</i>			

[back to List of setpoints](#)

Connection Type 1

Setpoint group	Basic settings	Related FW	2.0.0						
Range [units]	Monophase / Splitphase / 3Ph3Wire / High Leg D / 3Ph4Wire[-]								
Default value	3Ph4Wire	Alternative config	YES						
Step	[-]								
Comm object	12058	Related applications	MCB, MGCB, BTB						
Description									
Connection type:									
	<table border="1"> <tr> <td>Mono Phase</td> <td>Single phase voltage measurement L1-N 1x CT (Current Transformer)</td> </tr> <tr> <td>Split Phase</td> <td>Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)</td> </tr> <tr> <td>3Ph3Wire</td> <td>Ungrounded Delta connection Open Delta</td> </tr> </table>			Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)	Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)	3Ph3Wire	Ungrounded Delta connection Open Delta
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)								
Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)								
3Ph3Wire	Ungrounded Delta connection Open Delta								

	Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)
High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)

Note: This value is used when binary input **ALTERNATE CONFIG 2 (PAGE 446)** is active.

[back to List of setpoints](#)

Subgroup: Configuration 2

Nominal Frequency 2

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	9914	Related applications	MCB, MGCB, BTB
Description			
Nominal system frequency (usually 50 or 60 Hz).			
Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 446) is active.			

[back to List of setpoints](#)

Nominal Voltage Ph-N 2

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	80 .. 20000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	12053	Related applications	MCB, MGCB, BTB
Description			
Nominal system voltage (phase to neutral).			
Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 446) is active.			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph 2

Setpoint group		Related FW	2.0.0
Range [units]	80 .. 40000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	12056	Related applications	MCB, MGCB, BTB
Description			
Nominal system voltage (phase to phase).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 446) is active.</i>			

⬅ back to List of setpoints

Nominal Current 2

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	1 .. 10000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	12050	Related applications	MCB, MGCB, BTB
Description			
It is current limit for current protections and means maximal continuous current. Nominal Current can be different from mains rated current value.			
<i>Note: This value is used when binary input ALTERNATE CONFIG 2 (PAGE 446) is active.</i>			

⬅ back to List of setpoints

Connection type 2

Setpoint group	Basic settings	Related FW	2.0.0						
Range [units]	Monophase / Splitphase / 3Ph3Wire / High Leg D / 3Ph4Wire[-]								
Default value	3Ph4Wire	Alternative config	YES						
Step	[-]								
Comm object	12059	Related applications	MCB, MGCB, BTB						
Description									
Connection type:									
	<table border="1"> <tr> <td>Mono Phase</td> <td>Single phase voltage measurement L1-N 1x CT (Current Transformer)</td> </tr> <tr> <td>Split Phase</td> <td>Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)</td> </tr> <tr> <td>3Ph3Wire</td> <td>Ungrounded Delta connection Open Delta</td> </tr> </table>			Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)	Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)	3Ph3Wire	Ungrounded Delta connection Open Delta
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)								
Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)								
3Ph3Wire	Ungrounded Delta connection Open Delta								

	Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)
High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)

Note: This value is used when binary input **ALTERNATE CONFIG 2 (PAGE 446)** is active.

[back to List of setpoints](#)

Subgroup: Configuration 3

Nominal Frequency 3

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	45 .. 65 [Hz]		
Default value	50 Hz	Alternative config	YES
Step	1 Hz		
Comm object	15197	Related applications	MCB, MGCB, BTB
Description			
Nominal system frequency (usually 50 or 60 Hz).			
Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 446) is active.			

[back to List of setpoints](#)

Nominal Voltage Ph-N 3

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	80 .. 20 000 [V]		
Default value	231 V	Alternative config	YES
Step	1 V		
Comm object	12054	Related applications	MCB, MGCB, BTB
Description			
Nominal system voltage (phase to neutral).			
Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 446) is active.			

[back to List of setpoints](#)

Nominal Voltage Ph-Ph 3

Setpoint group		Related FW	2.0.0
Range [units]	80 .. 40 000 [V]		
Default value	400 V	Alternative config	YES
Step	1 V		
Comm object	12057	Related applications	MCB, MGCB, BTB
Description			
Nominal system voltage (phase to phase).			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 446) is active.</i>			

⬅ back to List of setpoints

Nominal Current 3

Setpoint group	Basic settings	Related FW	2.0.0
Range [units]	1 .. 10 000 [A]		
Default value	350 A	Alternative config	YES
Step	1 A		
Comm object	12051	Related applications	MCB, MGCB, BTB
Description			
It is current limit for current protections and means maximal continuous current. Nominal Current can be different from mains rated current value.			
<i>Note: This value is used when binary input ALTERNATE CONFIG 3 (PAGE 446) is active.</i>			

⬅ back to List of setpoints

Connection type 3

Setpoint group	Basic settings	Related FW	2.0.0						
Range [units]	Monophase / Splitphase / 3Ph3Wire / High Leg D / 3Ph4Wire [-]								
Default value	3Ph4Wire	Alternative config	YES						
Step	[-]								
Comm object	12060	Related applications	MCB, MGCB, BTB						
Description									
Connection type:									
	<table border="1"> <tr> <td>Mono Phase</td> <td>Single phase voltage measurement L1-N 1x CT (Current Transformer)</td> </tr> <tr> <td>Split Phase</td> <td>Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)</td> </tr> <tr> <td>3Ph3Wire</td> <td>Ungrounded Delta connection Open Delta</td> </tr> </table>			Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)	Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)	3Ph3Wire	Ungrounded Delta connection Open Delta
Mono Phase	Single phase voltage measurement L1-N 1x CT (Current Transformer)								
Split Phase	Double Delta connection Split Phase Two phase voltage measurement L1,L2 with 180° phase shift 2x CT (Current Transformer)								
3Ph3Wire	Ungrounded Delta connection Open Delta								

	Ungrounded Wye Corner-Grounded Delta Split Phase Delta Three phase voltage measurement L1,L2,L3 with 120° phase shift No neutral is available 3x CT (Current Transformer)
High Leg D	High Leg Delta connection Three phase voltage measurement L1,L2,L3 3x CT (Current Transformer)
3Ph4Wire	Grounded Star (Grounded Wye) connection – 3PY Three phase voltage measurement L1,L2,L3 with 120° phase shift 3x CT (Current Transformer)

Note: This value is used when binary input **ALTERNATE CONFIG 2 (PAGE 446)** is active.

[⬅ back to List of setpoints](#)

Group: PLC

PLC Setpoint 1

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10440	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig


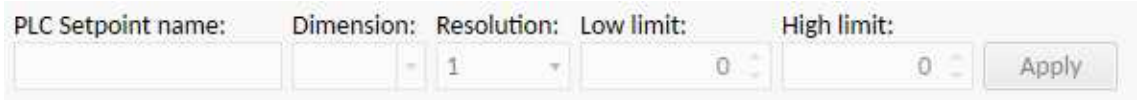


Image 8.45 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[back to List of setpoints](#)

PLC Setpoint 2

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10441	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.46 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 3

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10442	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig


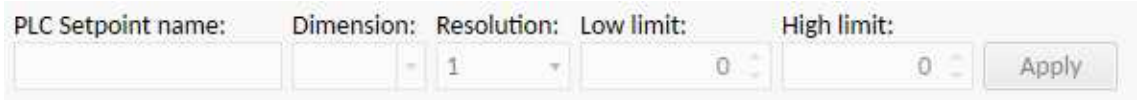


Image 8.47 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[◀ back to List of setpoints](#)

PLC Setpoint 4

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10443	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.48 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 5

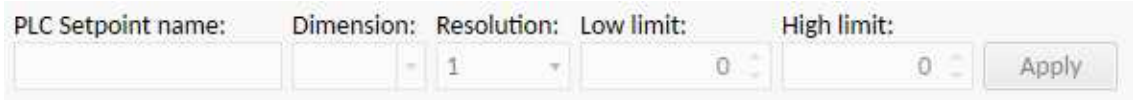Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10444	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.49 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 6

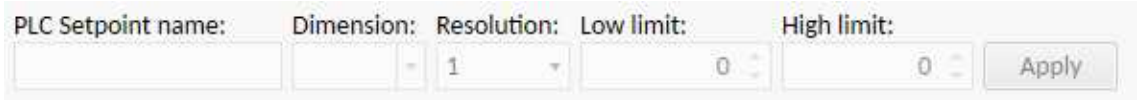Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10445	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.50 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 7

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10446	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

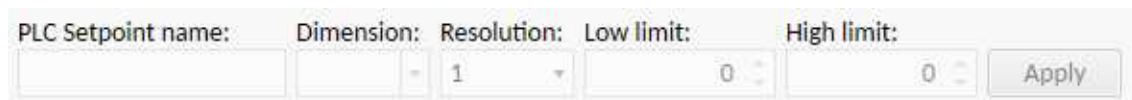


Image 8.51 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 8

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10447	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig



Image 8.52 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 9

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10448	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

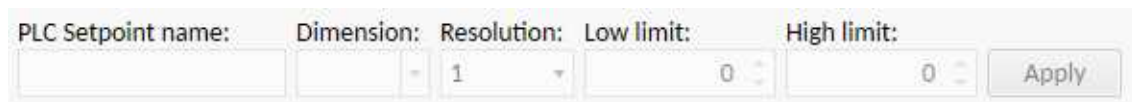


Image 8.53 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 10

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10449	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

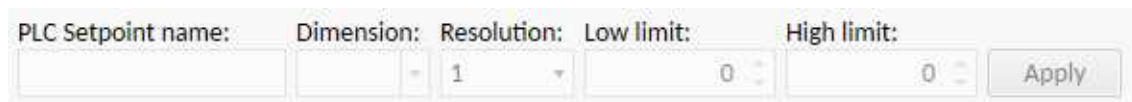
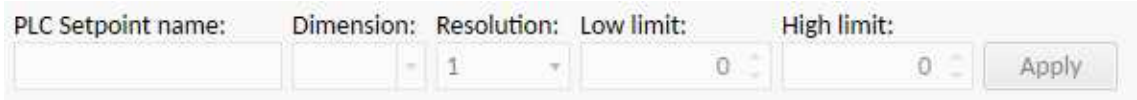


Image 8.54 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[back to List of setpoints](#)

PLC Setpoint 11

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10450	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.55 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 12

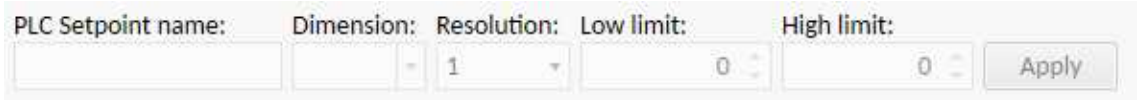Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10451	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.56 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 13

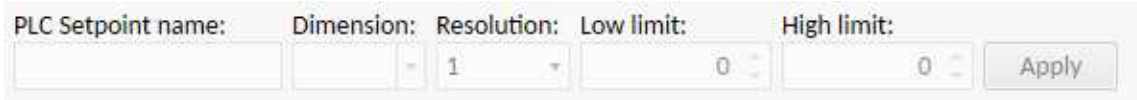Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10452	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.57 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 14

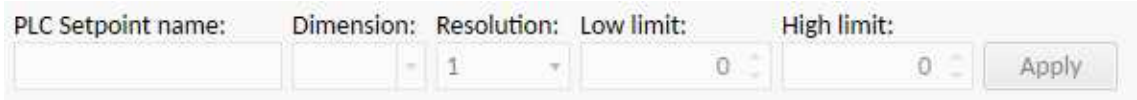Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10453	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.58 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 15

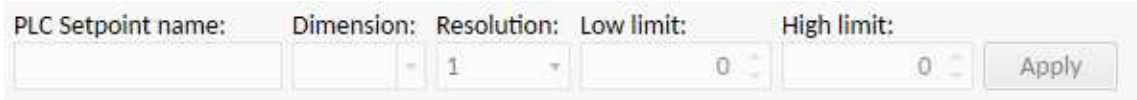Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10454	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.59 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 16

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10455	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

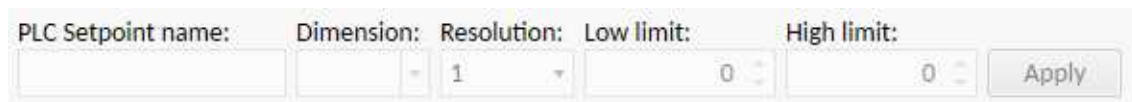


Image 8.60 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 17

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10456	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

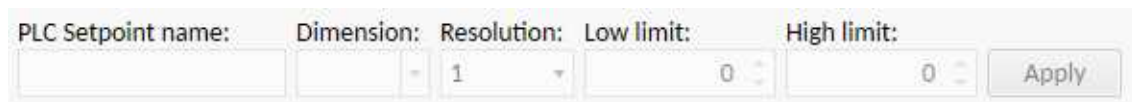
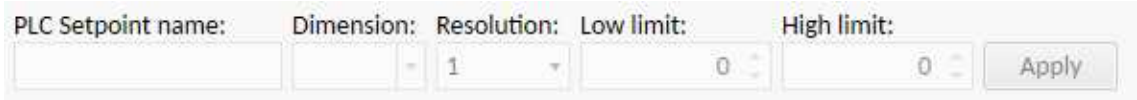


Image 8.61 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[◀ back to List of setpoints](#)

PLC Setpoint 18

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10457	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.62 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 19

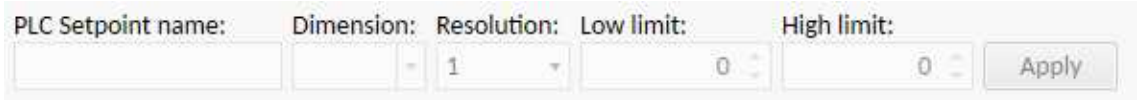Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10458	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.63 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 20

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10459	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

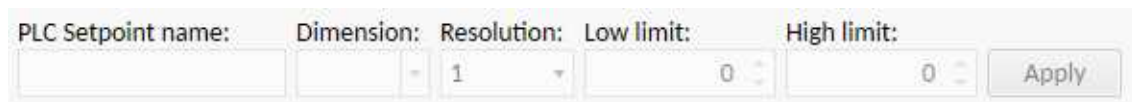
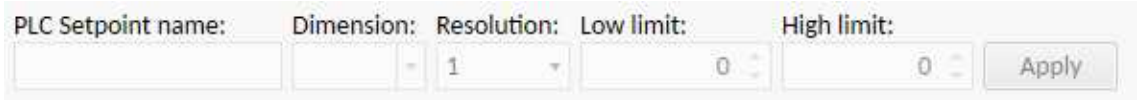


Image 8.64 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[back to List of setpoints](#)

PLC Setpoint 21

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10460	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.65 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 22

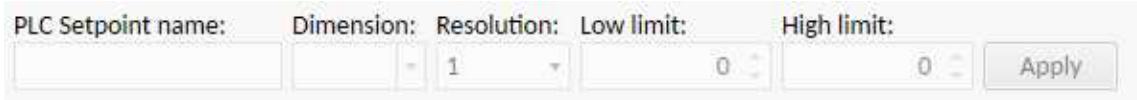Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10461	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.66 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 23

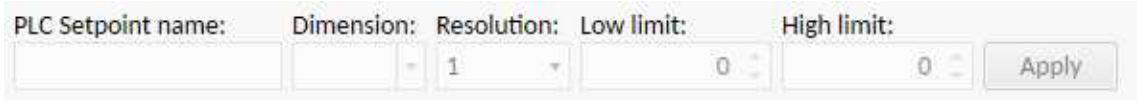Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10462	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.67 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 24

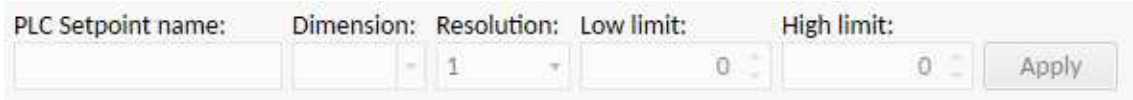Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10463	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.68 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 25

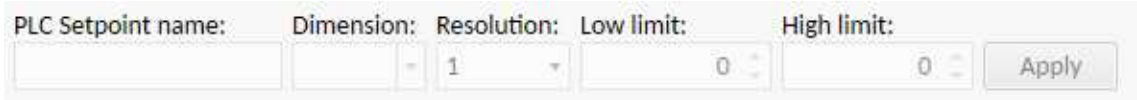Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10464	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.69 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 26

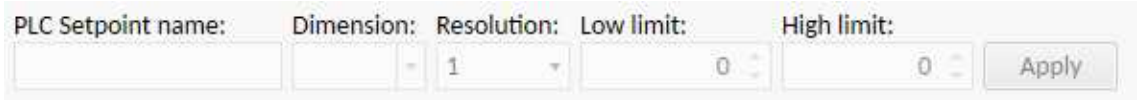Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10465	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.70 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 27

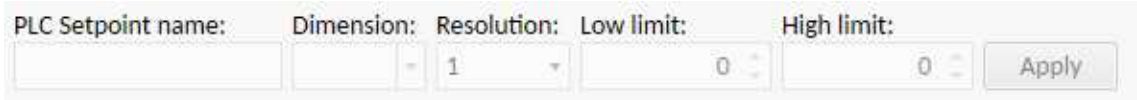Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10466	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.71 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 28

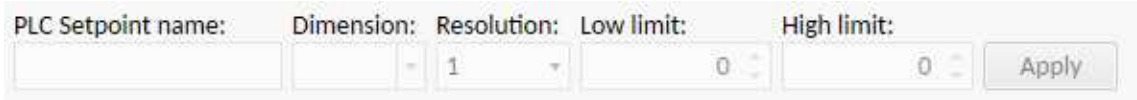Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10467	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.72 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 29

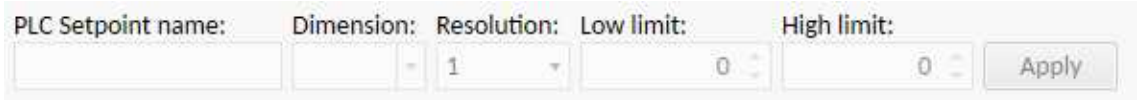Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10468	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.73 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 30

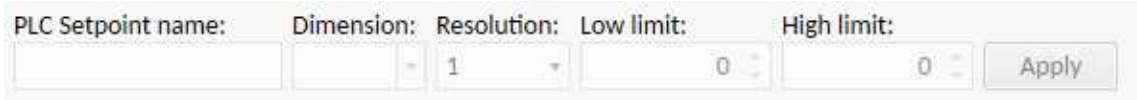Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10469	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.74 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 31

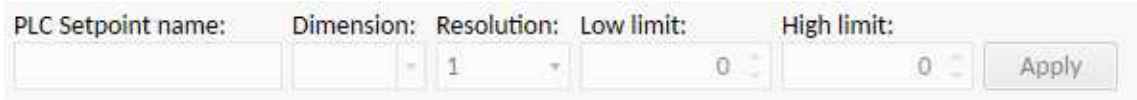Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10470	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.75 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 32

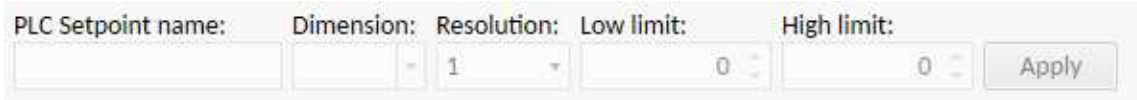Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10471	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.76 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 33

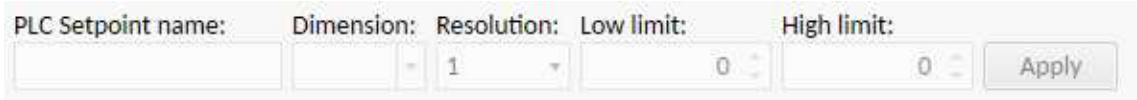Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10472	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.77 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 34

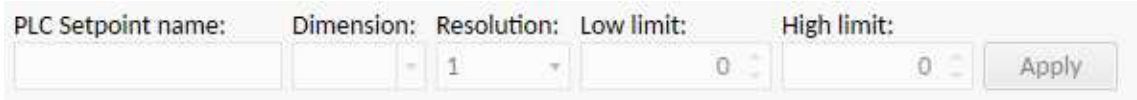Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10473	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.78 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 35

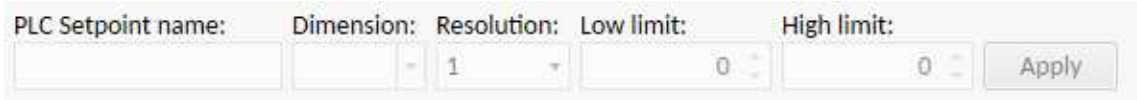Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10474	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.79 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 36

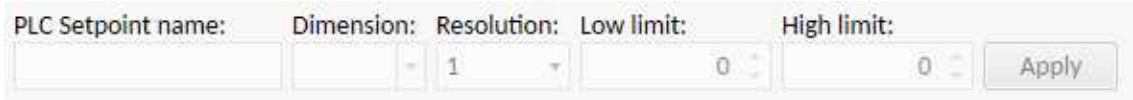Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10475	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.80 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 37

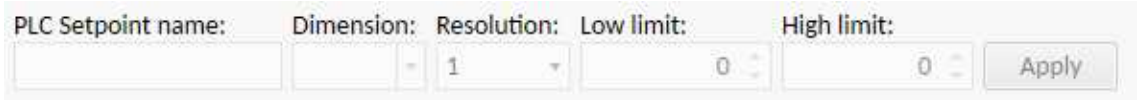Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10476	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.81 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 38

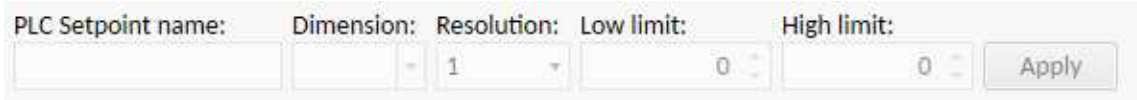Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10477	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.82 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 39

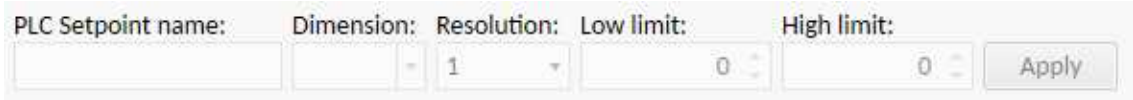Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10478	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.83 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 40

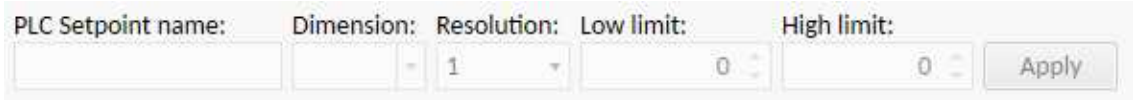Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10479	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.84 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 41

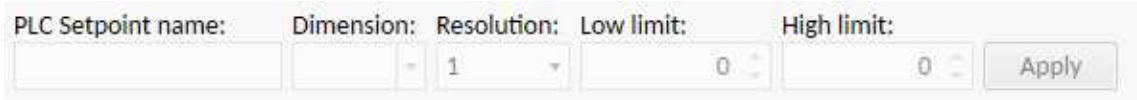Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10480	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.85 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 42

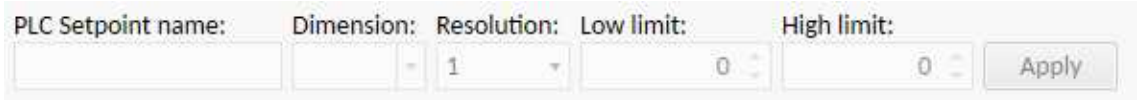Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10481	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.86 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 43

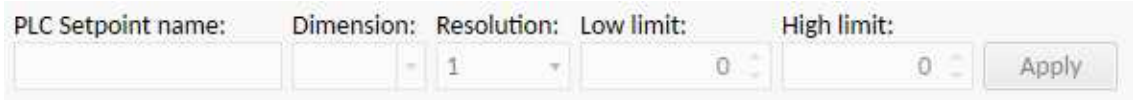Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10482	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.87 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 44

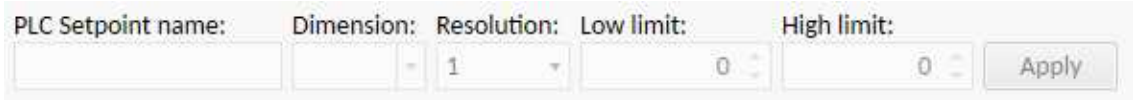Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10483	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.88 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 45

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10484	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

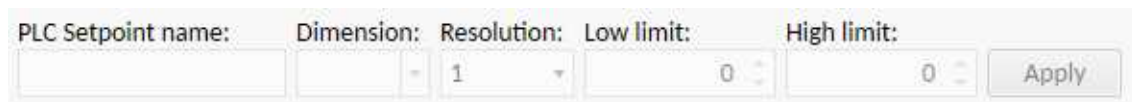
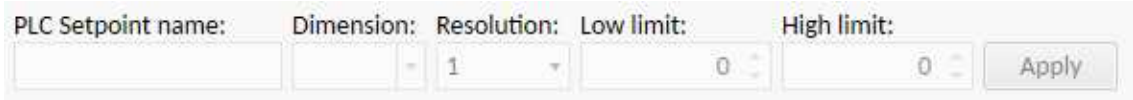


Image 8.89 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[◀ back to List of setpoints](#)

PLC Setpoint 46

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10485	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.90 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 47

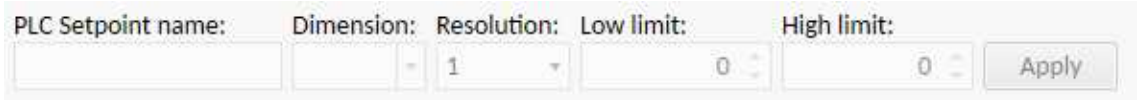Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10486	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.91 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 48

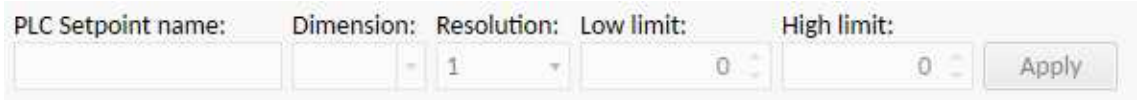Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10487	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.92 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 49

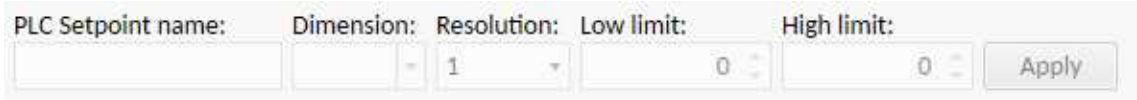Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10488	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.93 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 50

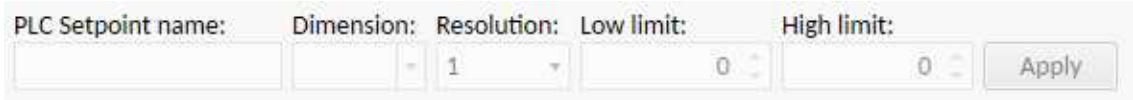Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10489	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.94 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 51

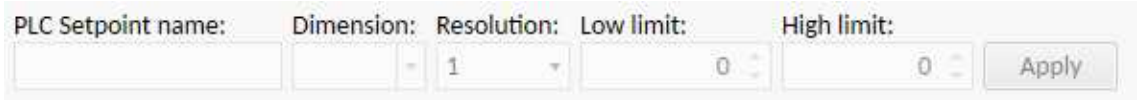Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10490	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.95 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 52

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10491	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

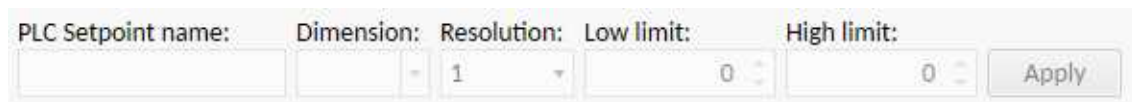
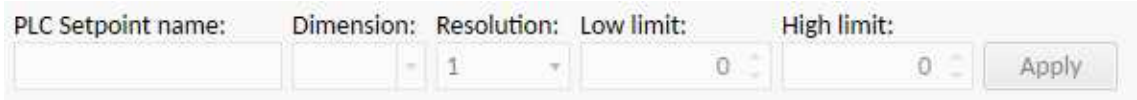


Image 8.96 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.

[◀ back to List of setpoints](#)

PLC Setpoint 53

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10492	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.97 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 54

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10493	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

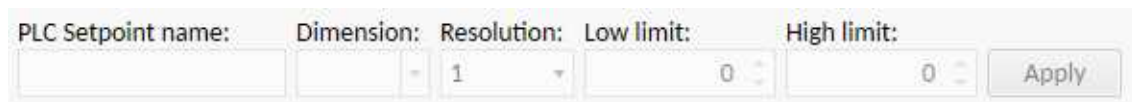
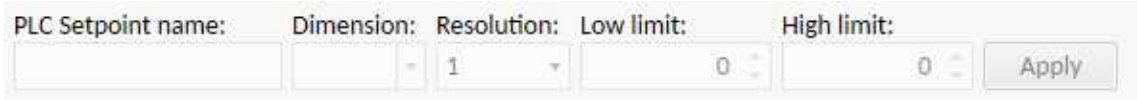


Image 8.98 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[◀ back to List of setpoints](#)

PLC Setpoint 55

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10494	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.99 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 56

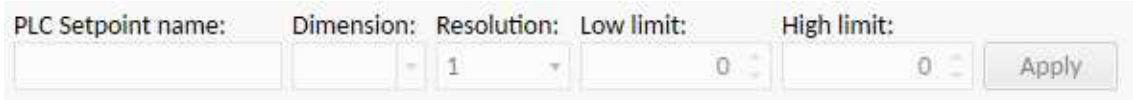Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10495	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.100 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[⬅ back to List of setpoints](#)

PLC Setpoint 57

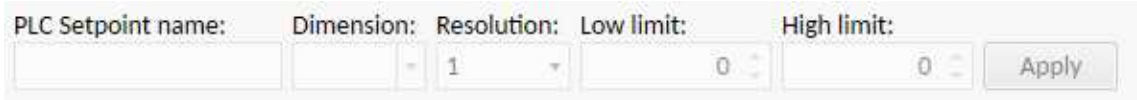Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10496	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.101 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 58

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10497	Related applications	MCB, MGCB, BTB

Description

Adjustable value for input in PLC logic.

Configuration of setpoint:

Configuration is made via configuration PC tool IntelliConfig

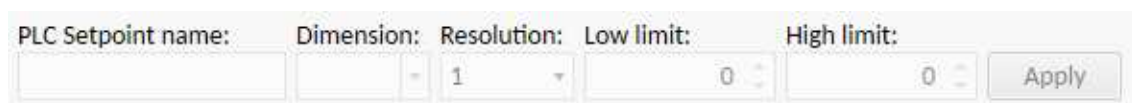
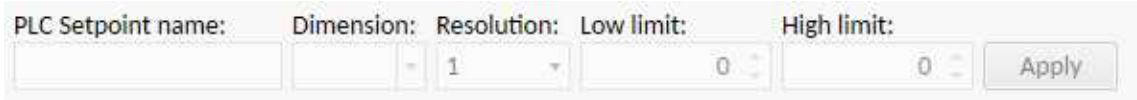


Image 8.102 Screen of configuration from IntelliConfig

PLC Setpoint name	Name of the setpoint (0..32 characters)
Dimension	Dimension of value of the setpoint.
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.


[back to List of setpoints](#)

PLC Setpoint 59

Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10498	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.103 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 60

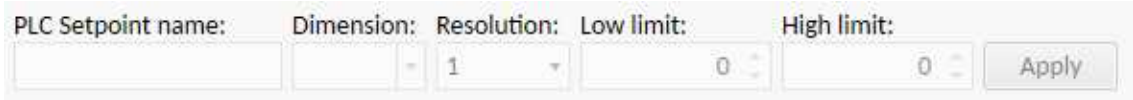Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10499	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.104 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 61

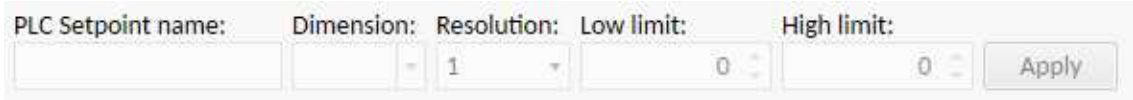Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10500	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.105 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[⬅ back to List of setpoints](#)

PLC Setpoint 62

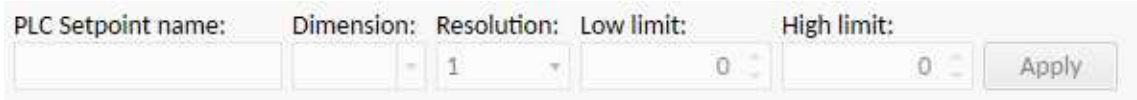Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10501	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.106 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		


[◀ back to List of setpoints](#)

PLC Setpoint 63

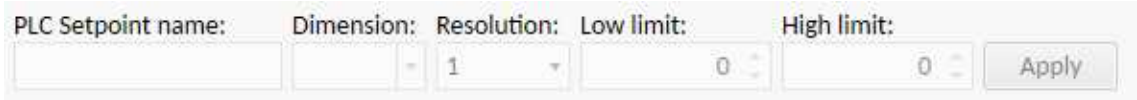Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10502	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.107 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

PLC Setpoint 64

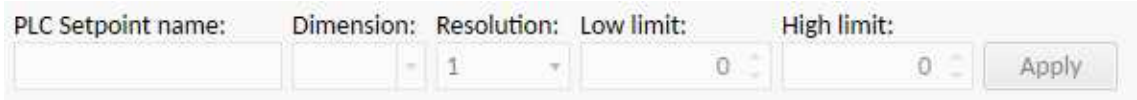Setpoint group	PLC	Related FW	2.0.0
Range [units]	Depends on resolution of value [-]		
Default value	Depends on resolution of value [-]	Alternative config	NO
Step	Depends on resolution of value [-]		
Comm object	10503	Related applications	MCB, MGCB, BTB
Description			
Adjustable value for input in PLC logic.			
Configuration of setpoint:			
Configuration is made via configuration PC tool IntelliConfig			
			
Image 8.108 Screen of configuration from IntelliConfig			
PLC Setpoint name	Name of the setpoint (0..32 characters)		
Dimension	Dimension of value of the setpoint.		
Resolution	Resolution of the value of the setpoint. Resolution adjust number of decimal places in low and high limit.		
Low limit	The lowest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		
High limit	The highest value of setpoint. Digit place of this value can be decrease or increase by resolution of setpoint.		

[◀ back to List of setpoints](#)

8.1.2 Values

What values are:

Values (or quantities) are analog or binary data objects, measured or computed by the controller, that are intended for reading from the controller screen, PC, MODBUS, etc. Values are organized into groups according to their meaning.

Invalid flag

If valid data is not available for a particular value, the invalid flag is set to it. This situation may be due to the following:

- ▶ The value is not being evaluated in the scope of the current application and configuration.
- ▶ Sensor fail has been detected on an analog input.
- ▶ The communication with extension module is interrupted.

A value containing the invalid flag is displayed as “####” in IntelliConfig and on the controller screen. If such a value is read out via MODBUS, it will contain the data 32768 in the case of signed values and 65535 in the case of unsigned values.

List of values groups

Group: Mains/Bus	409
Group: Load	417
Group: Power Management	418
Group: Load Control	421
Group: Voltage/PF Control	422
Group: Controller I/O	422
Group: Statistics	423
Group: Info	424
Group: Log Bout	429
Group: CM-GPRS	431
Group: CM-Ethernet	436
Group: Date/Time	439
Group: Plug-In I/O	439
Group: PLC	440

For full list of setpoints go to the chapter **List of values (page 407)**.

List of values

Mains/Bus

Mains Import	409
Mains kW L1	409
Mains kW L2	409
Mains kW L3	409
Mains kVAr	409
Mains kVAr L1	410
Mains kVAr L2	410
Mains kVAr L3	410
Mains kVA	410
Mains kVA L1	410
Mains kVA L2	411
Mains kVA L3	411
Mains Power Factor	411
Mains Load Character	411
Mains Power Factor L1	411
Mains Load Character L1	412
Mains Power Factor L2	412
Mains Load Character L2	412
Mains Power Factor L3	412
Mains Load Character L3	412
Mains Frequency	413
Mains Voltage L1-N	413
Mains Voltage L2-N	413
Mains Voltage L3-N	413
Mains Voltage L1-L2	413
Mains Voltage L2-L3	414
Mains Voltage L3-L1	414
Mains Current L1	414
Mains Current L2	414
Mains Current L3	414
Slip Frequency	415
Slip Angle	415
ROCOF	415
Max ROCOF	415

Bus

Bus Frequency	416
Bus Voltage L1-N	416
Bus Voltage L2-N	416
Bus Voltage L3-N	416
Bus Voltage L1-L2	416
Bus Voltage L2-L3	417
Bus Voltage L3-L1	417

Load

Load kW	417
Load kVAr	417
Load Power Factor	418
Load Character	418

Power Management

Actual Reserve	418
Actual Relative Reserve	418
Start Reserve	419
Stop Reserve	419
Start Relative Reserve	419
Stop Relative Reserve	419
Actual Active Power In PM	419
Actual Reactive Power In PM	420
Running Nominal Power In PM	420
Running Nominal Power Of All	420
Available Nominal Power	420
Minimal Running Nominal Power	420
Actual Power Band	421
Next Power Band	421

Speed/Load Control

Active Power Required	421
-----------------------	-----

Loadsharing Output	421
--------------------	-----

Voltage/PF Control

Reactive Power Required	422
Varsharing Output	422

Controller I/O

Battery Volts	422
Binary Inputs	422
Binary Outputs	423
CAN16	427
CAN32	428
Reg16	428
Reg32	428
Gen Loaded 16	428
Gen Loaded 32	429

Statistics

Mains kWh Imported	423
Mains kVArh Imported	423
Mains kVAh	423
Mains kVArh Exported	424
Mains kWh Exported	424
Running Hours	424

Info

Application Mode	424
Breaker State	425
Timer Text	425
Connection Type	425
SPI Module A	426
SPI Module B	426
Timer Value	426
ID String	426
FW Version	426
Application	427
FW Branch	427
Password Decode	427

Log Bout

Log Bout 1	429
Log Bout 2	429
Log Bout 3	429
Log Bout 4	430
Log Bout 5	430
Log Bout 6	430
Log Bout 7	430

Date/Time

Time	439
Date	439

Group: Mains/Bus

Mains Import

Value group	Mains	Related FW	2.0.0
Units	kW		
Comm object	8703	Related applications	MCBMGCB, BTB
Description			
Imported kW from Mains.			

[back to List of values](#)

Mains kW L1

Value group	Mains	Related FW	2.0.0
Units	kW		
Comm object	8805	Related applications	MCBMGCB, BTB
Description			
Mains active power in phase L1.			

[back to List of values](#)

Mains kW L2

Value group	Mains	Related FW	2.0.0
Units	kW		
Comm object	8806	Related applications	MCBMGCB, BTB
Description			
Mains active power in phase L2.			

[back to List of values](#)

Mains kW L3

Value group	Mains	Related FW	2.0.0
Units	kW		
Comm object	8807	Related applications	MCBMGCB, BTB
Description			
Mains active power in phase L3.			

[back to List of values](#)

Mains kVAr

Value group	Mains	Related FW	2.0.0
Units	kVAr		
Comm object	8704	Related applications	MCBMGCB, BTB
Description			
kVAr from Mains.			

[back to List of values](#)

Mains kVAr L1

Value group	Mains	Related FW	2.0.0
Units	kVAr		
Comm object	8808	Related applications	MCBMGCB, BTB
Description			
Mains reactive power in phase L1.			

[back to List of values](#)

Mains kVAr L2

Value group	Mains	Related FW	2.0.0
Units	kVAr		
Comm object	8809	Related applications	MCBMGCB, BTB
Description			
Mains reactive power in phase L2.			

[back to List of values](#)

Mains kVAr L3

Value group	Mains	Related FW	2.0.0
Units	kVAr		
Comm object	8810	Related applications	MCBMGCB, BTB
Description			
Mains reactive power in phase L3.			

[back to List of values](#)

Mains kVA

Value group	Mains	Related FW	2.0.0
Units	kVA		
Comm object	8811	Related applications	MCBMGCB, BTB
Description			
Mains apparent imported power.			

[back to List of values](#)

Mains kVA L1

Value group	Mains	Related FW	2.0.0
Units	kVA		
Comm object	8812	Related applications	MCBMGCB, BTB
Description			
Mains apparent power in phase L1.			

[back to List of values](#)

Mains kVA L2

Value group	Mains	Related FW	2.0.0
Units	kVA		
Comm object	8813	Related applications	MCBMGCB, BTB
Description			
Mains apparent power in phase L2.			

[back to List of values](#)

Mains kVA L3

Value group	Mains	Related FW	2.0.0
Units	kVA		
Comm object	8814	Related applications	MCBMGCB, BTB
Description			
Mains apparent power in phase L3.			

[back to List of values](#)

Mains Power Factor

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8705	Related applications	MCBMGCB, BTB
Description			
Mains power factor.			

[back to List of values](#)

Mains Load Character

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8709	Related applications	MCBMGCB, BTB
Description			
Character of Mains load. "L" means inductive load, "C" is capacitive and "R" is resistive load (power factor = 1).			

[back to List of values](#)

Mains Power Factor L1

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8815	Related applications	MCBMGCB, BTB
Description			
Mains power factor in phase L1.			

[back to List of values](#)

Mains Load Character L1

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8818	Related applications	MCBMGCB, BTB
Description			
Character of Mains load. "L" means inductive load, "C" is capacitive and "R" is resistive load (power factor = 1).			

[back to List of values](#)

Mains Power Factor L2

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8816	Related applications	MCBMGCB, BTB
Description			
Mains power factor in phase L2.			

[back to List of values](#)

Mains Load Character L2

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8819	Related applications	MCBMGCB, BTB
Description			
Character of Mains load. "L" means inductive load, "C" is capacitive and "R" is resistive load (power factor = 1).			

[back to List of values](#)

Mains Power Factor L3

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8817	Related applications	MCBMGCB, BTB
Description			
Mains power factor in phase L3.			

[back to List of values](#)

Mains Load Character L3

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8820	Related applications	MCBMGCB, BTB
Description			
Character of Mains load. "L" means inductive load, "C" is capacitive and "R" is resistive load (power factor = 1).			

[back to List of values](#)

Mains Frequency

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8211	Related applications	MCBMGCB, BTB
Description			
Frequency of Mains.			

[back to List of values](#)

Mains Voltage L1-N

Value group	Mains	Related FW	2.0.0
Units	V		
Comm object	8195	Related applications	MCBMGCB, BTB
Description			
Mains voltage on phase 1.			

[back to List of values](#)

Mains Voltage L2-N

Value group	Mains	Related FW	2.0.0
Units	V		
Comm object	8196	Related applications	MCBMGCB, BTB
Description			
Mains voltage on phase 2.			

[back to List of values](#)

Mains Voltage L3-N

Value group	Mains	Related FW	2.0.0
Units	V		
Comm object	8197	Related applications	MCBMGCB, BTB
Description			
Mains voltage on phase 3.			

[back to List of values](#)

Mains Voltage L1-L2

Value group	Mains	Related FW	2.0.0
Units	V		
Comm object	9631	Related applications	MCBMGCB, BTB
Description			
Mains phase to phase voltage between L1 and L2 phases.			

[back to List of values](#)

Mains Voltage L2-L3

Value group	Mains	Related FW	2.0.0
Units	V		
Comm object	9632	Related applications	MCBMGCB, BTB
Description			
Mains phase to phase voltage between L2 and L3 phases.			

[back to List of values](#)

Mains Voltage L3-L1

Value group	Mains	Related FW	2.0.0
Units	V		
Comm object	9633	Related applications	MCBMGCB, BTB
Description			
Mains phase to phase voltage between L3 and L1 phases.			

[back to List of values](#)

Mains Current L1

Value group	Mains	Related FW	2.0.0
Units	A		
Comm object	8801	Related applications	MCB, MGCB, BTB
Description			
Mainscurrent in phase L1.			

[back to List of values](#)

Mains Current L2

Value group	Mains	Related FW	2.0.0
Units	A		
Comm object	8802	Related applications	MCBMGCB, BTB
Description			
Mainscurrent in phase L2.			

[back to List of values](#)

Mains Current L3

Value group	Mains	Related FW	2.0.0
Units	A		
Comm object	8803	Related applications	MCBMGCB, BTB
Description			
Mainscurrent in phase L3.			

[back to List of values](#)

Max Vector Shift

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	9847	Related applications	MCB, MGCB
Description			
This is maximal measured value of vector shift of the generator voltage. It is set to zero always when Controller goes to parallel to mains operation (When Vector Shift Protection = PARALLEL ONLY) or when MCB gets closed (when Vector shift protection = ENABLED).			

[back to List of values](#)

Slip Frequency

Value group	Mains	Related FW	2.0.0
Units	Hz		
Comm object	8224	Related applications	MCBMGCB, BTB
Description			
Differential frequency between the mains and bus.			

[back to List of values](#)

Slip Angle

Value group	Mains	Related FW	2.0.0
Units	°		
Comm object	8225	Related applications	MCBMGCB, BTB
Description			
Angle between the phasors of the mains and bus.			

[back to List of values](#)

ROCOF

Value group	Mains	Related FW	2.0.0
Units	Hz/s		
Comm object	9848	Related applications	MCB MGCB
Description			
This value show actual measured value of ROCOF.			

[back to List of values](#)

Max ROCOF

Value group	Mains	Related FW	2.0.0
Units	Hz/s		
Comm object	10049	Related applications	MCB MGCB
Description			
This value show maximal measured value of ROCOF.			

[back to List of values](#)

Group: Bus

Bus Frequency

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	8210	Related applications	MCB, MGCB, BTB
Description			
Frequency of the Bus.			

[back to List of values](#)

Bus Voltage L1-N

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	8192	Related applications	MCB, MGCB, BTB
Description			
Bus voltage on phase L1.			

[back to List of values](#)

Bus Voltage L2-N

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	8193	Related applications	MCB, MGCB, BTB
Description			
Bus voltage on L2.			

[back to List of values](#)

Bus Voltage L3-N

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	8194	Related applications	MCB, MGCB, BTB
Description			
Bus voltage on phase L3.			

[back to List of values](#)

Bus Voltage L1-L2

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	9628	Related applications	MCB, MGCB, BTB
Description			
Phase to phase Bus voltage between L1-L2.			

[back to List of values](#)

Bus Voltage L2-L3

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	9629	Related applications	MCB, MGCB, BTB
Description			
Phase to phase Bus voltage between L2-L3.			

[back to List of values](#)

Bus Voltage L3-L1

Value group	Bus	Related FW	2.0.0
Units	V		
Comm object	9630	Related applications	MCB, MGCB, BTB
Description			
Phase to phase Bus voltage between L3-L1.			

[back to List of values](#)

Group: Load

Load kW

Value group	Load	Related FW	2.0.0
Units	kW		
Comm object	10601	Related applications	MCB, MGCB, BTB
Description			
Load active power.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load kVAr

Value group	Load	Related FW	2.0.0
Units	kVAr		
Comm object	10644	Related applications	MCB, MGCB, BTB
Description			
Load reactive power.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Load Power Factor

Load	Load	Related FW	2.0.0
Units	[-]		
Comm object	9025	Related applications	MCB, MGCB, BTB
Description			
Load power factor.			

[back to List of values](#)

Load Character

Value group	Load	Related FW	2.0.0
Units	A		
Comm object	9026	Related applications	MCB, MGCB, BTB
Description			
Character of the load. "L" means inductive load, "C" is capacitive and "R" is resistive load (power factor = 1).			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Group: Power Management

Actual Reserve

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	15805	Related applications	MCB, MGCB, BTB
Description			
Actual absolute reserve in power management.			

[back to List of values](#)

Actual Relative Reserve

Value group	Power Management	Related FW	2.0.0
Units	%		
Comm object	10788	Related applications	MCB, MGCB, BTB
Description			
Actual relative reserve in power management.			

[back to List of values](#)

Start Reserve

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	15806	Related applications	MCB, MGCB, BTB
Description			
Actual absolute reserve for start.			

[back to List of values](#)

Stop Reserve

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	15807	Related applications	MCB, MGCB, BTB
Description			
Actual absolute reserve - when the reserve is higher than this value the last started gen-set (the gen-set with the highest priority) is stopped.			

[back to List of values](#)

Start Relative Reserve

Value group	Power Management	Related FW	2.0.0
Units	%		
Comm object	10786	Related applications	MCB, MGCB, BTB
Description			
Actual relative reserve for start.			

[back to List of values](#)

Stop Relative Reserve

Value group	Power Management	Related FW	2.0.0
Units	%		
Comm object	10787	Related applications	MCB, MGCB, BTB
Description			
Actual relative reserve - when the relative reserve is higher than this value the last started gen-set (the gen-set with the highest priority) is stopped.			

[back to List of values](#)

Actual Active Power In PM

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	10657	Related applications	MCB, MGCB, BTB
Description			
Actual value of active power from all gen-sets running in power management.			

[back to List of values](#)

Actual Reactive Power In PM

Value group	Power Management	Related FW	2.0.0
Units	kVAr		
Comm object	10656	Related applications	MCB, MGCB, BTB
Description			
Actual value of reactive power from all gen-sets running in power management.			

[back to List of values](#)

Running Nominal Power In PM

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	10658	Related applications	MCB, MGCB, BTB
Description			
Actual nominal power of all gen-sets in power management, which are running.			

[back to List of values](#)

Running Nominal Power Of All

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	10999	Related applications	MCB, MGCB, BTB
Description			
Actual nominal power of all gen-sets, which are running.			

[back to List of values](#)

Available Nominal Power

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	10998	Related applications	MCB, MGCB, BTB
Description			
Available nominal power of all gen-sets in power management.			

[back to List of values](#)

Minimal Running Nominal Power

Value group	Power Management	Related FW	2.0.0
Units	kW		
Comm object	10012	Related applications	MCB, MGCB, BTB
Description			
Actual minimal nominal power of all gen-sets, which are running.			

[back to List of values](#)

Actual Power Band

Value group	Power Management	Related FW	2.0.0
Units	-		
Comm object	8974	Related applications	MCB, MGCB, BTB
Description			
State of all gen-sets in actual power band of power management. 1 means that gen-set is running, 0 means that gen set is stopped.			
<i>Note: This value is evaluated only in controller with the lowest CAN address.</i>			

[back to List of values](#)

Next Power Band

Value group	Power Management	Related FW	2.0.0
Units	-		
Comm object	8975	Related applications	MCB, MGCB, BTB
Description			
State of all gen-sets in next higher power band of power management.. 1 means that gen-set is running, 0 means that gen set is stopped.			
<i>Note: This value is evaluated only in controller with the lowest CAN address.</i>			

[back to List of values](#)

Group: Load Control

Active Power Required

Value group	Load Control	Related FW	2.0.0
Units	kW		
Comm object	8663	Related applications	MCB, MGCB, BTB
Description			
This value contains actual required load level, which is used as the input into the load regulation loop in the parallel to mains operation.			

[back to List of values](#)

Loadsharing Output

Value group	Load Control	Related FW	2.0.0
Units	%		
Comm object	10924	Related applications	MCB, MGCB, BTB
Description			
Load sharing regulation loop output.			

[back to List of values](#)

Group: Voltage/PF Control

Reactive Power Required

Value group	Voltage/PF Control	Related FW	2.0.0
Units	kVAr		
Comm object	12877	Related applications	MCB, MGCB, BTB
Description			
Requested reactive power.			

[back to List of values](#)

Varsharing Output

Value group	Voltage/PF Control	Related FW	2.0.0
Units	kVAr		
Comm object	10925	Related applications	MCB, MGCB, BTB
Description			
Varsharing regulation loop output.			

[back to List of values](#)

Group: Controller I/O

Battery Volts

Value group	Controller I/O	Related FW	2.0.0
Units	V		
Comm object	8213	Related applications	MCB, MGCB, BTB
Description			
Controller supply voltage.			

[back to List of values](#)

Binary Inputs

Value group	Controller I/O	Related FW	2.0.0
Units	[-]		
Comm object	8235	Related applications	MCB, MGCB; BTB
Description			
State of the binary inputs of the controller.			

[back to List of values](#)

Binary Outputs

Value group	Controller I/O	Related FW	2.0.0
Units	[-]		
Comm object	8239	Related applications	MCB, MGCB, BTB
Description			
State of the binary outputs of the controller.			

[back to List of values](#)

Group: Statistics

Mains kWh Imported

Value group	Statistics	Related FW	2.0.0
Units	kWh		
Comm object	8205	Related applications	MCB, MGCB, BTB
Description			
Sum of kWh imported from the Mains.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Mains kVAh Imported

Value group	Statistics	Related FW	2.0.0
Units	kVAh		
Comm object	8539	Related applications	MCB, MGCB, BTB
Description			
Sum of kVAh imported from the Mains.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Mains kVAh

Value group	Statistics	Related FW	2.0.0
Units	kVAh		
Comm object	13663	Related applications	MCB, MGCB, BTB
Description			
This value shows sum of kVAh that were transferred through CB.			
<p>Note: This value can be also switch into one decimal power format (via IntelliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Mains kVArh Exported

Value group	Statistics	Related FW	2.0.0
Units	kVArh		
Comm object	11026	Related applications	MCB, MGCB, BTB
Description			
Sum of kWh exported to the Mains.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Mains kWh Exported

Value group	Statistics	Related FW	2.0.0
Units	kWh		
Comm object	11025	Related applications	MCB, MGCB, BTB
Description			
Sum of kWh exported to the Mains.			
<p>Note: This value can be also switch into one decimal power format (via InteliConfig PC tool). In this case the range of value is decrease 10 times.</p>			

[back to List of values](#)

Running Hours

Value group	Statistics	Related FW	2.0.0
Units	hours		
Comm object	8206	Related applications	MCB, MGCB, BTB
Description			
Engine operation hours counter. The engine hours are incremented in the controller while the engine is running.			
<p>Note: If an ECU is configured and it provides engine hours value, the value is taken from the ECU.</p>			

[back to List of values](#)

Group: Info

Application Mode

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	14446	Related applications	MCB, MGCB, BTB
Description			
This Value mirrors the active application in the controller.			
The intend of use it to display the value of the active application in InteliConfig or at the screen of the controller.			

[back to List of values](#)

Load Shedding Status

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	9591	Related applications	MCB, MGCB, BTB
Description			
The value contains actual "load shedding stage. The Value can get the values of the range 0 to 3, where 0 means no load shedding stage is active and 1, 2 or 3 means that the corresponding loadshedding stage is active.			

[back to List of values](#)

Breaker State

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	9245	Related applications	MCB, MGCB, BTB
Description			
The value contains actual "breaker state" message which is shown on the main screen of the controller.			

[back to List of values](#)

Timer Text

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	10040	Related applications	MCB, MGCB, BTB
Description			
The value contains the numeric code of the "Current process timer" text which is shown on the main screen of the controller.			
The assignment of texts to the codes can be obtained using IntelliConfig. Open any connection (also offline with a previously saved archive) and go to the Tools ribbon -> Generate CFG image (all). The resulting file will contain the assignment of texts to the codes.			

[back to List of values](#)

Connection Type

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	12944	Related applications	MCB, MGCB, BTB
Description			
The text of this value represents the connection type which is adjusted in setpoint Connection type (page 204) .			

[back to List of values](#)

SPI Module A

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	14447	Related applications	MCB, MGCB, BTB
Description			
The name of plug-in module which is inserted in slot A.			

[back to List of values](#)

SPI Module B

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	14448	Related applications	MCB, MGCB, BTB
Description			
The name of plug-in module which is inserted in slot B.			

[back to List of values](#)

Timer Value

Value group	Info	Related FW	2.0.0
Units	[HH:MM:SS]		
Comm object	14147	Related applications	MCB, MGCB, BTB
Description			
The value contains the "Current process timer" value which is shown on the main screen of the controller.			

[back to List of values](#)

ID String

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	24501	Related applications	MCB, MGCB, BTB
Description			
Name of controller which is used in IntelliConfig in command bar.			

[back to List of values](#)

FW Version

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	24339	Related applications	MCB, MGCB, BTB
Description			
Major and minor firmware version number.			

[back to List of values](#)

Application

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	8480	Related applications	MCB, MGCB, BTB
Description			
The value contains actual application in controller.			

[◀ back to List of values](#)

FW Branch

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	8707	Related applications	MCB, MGCB, BTB
Description			
The value contains actual branch of firmware in controller.			

[◀ back to List of values](#)

Password Decode

Value group	Info	Related FW	2.0.0
Units	[-]		
Comm object	24202	Related applications	MCB, MGCB, BTB
Description			
This value contains a number which can be used for retrieving a lost password. Send this number together with the controller serial number to your distributor if you have lost your password.			

[◀ back to List of values](#)

CAN16

Value group	Info	Related FW	2.0.0
Units	V		
Comm object	8546	Related applications	MCB, MGCB, BTB
Description			
Bits of this value show "1" if the controller receives messages from the controller which has address corresponding with the bit position. Bit 0 represents address 1 etc. This value contains information about controllers with addresses 1-16.			

[◀ back to List of values](#)

CAN32

Value group	Info	Related FW	2.0.0
Units	V		
Comm object	8827	Related applications	MCB, MGCB, BTB
Description			
Bits of this value show "1" if the controller receives messages from the controller which has address corresponding with the bit position. Bit 0 represents address 17 etc. This value contains information about controllers with addresses 17-32.			

[back to List of values](#)

Reg16

Value group	Info	Related FW	2.0.0
Units			
Comm object	11081	Related applications	MCB, MGCB, BTB
Description			
Bits of this value show "1" if the controller which has address corresponding with the bit position plays active role in the power management. Bit 0 represents address 1 etc. This value contains information about controllers with addresses 1-16.			

[back to List of values](#)

Reg32

Value group	Info	Related FW	2.0.0
Units			
Comm object	11082	Related applications	MCB, MGCB, BTB
Description			
Bits of this value show "1" if the controller which has address corresponding with the bit position plays active role in the power management. Bit 0 represents address 17 etc. This value contains information about controllers with addresses 17-32.			

[back to List of values](#)

Gen Loaded 16

Value group	Info	Related FW	2.0.0
Units	V		
Comm object	10196	Related applications	MCB, MGCB, BTB
Description			
Bits of this value show "1" if the controller which has address corresponding with the bit position plays active role in the power management. Bit 0 represents address 1 etc. This value contains information about controllers with addresses 1-16.			

[back to List of values](#)

Gen Loaded 32

Value group	Info	Related FW	2.0.0
Units	V		
Comm object	10197	Related applications	MCB, MGCB, BTB
Description			
Bits of this value show "1" if the controller which has address corresponding with the bit position plays active role in the power management. Bit 0 represents address 17 etc. This value contains information about controllers with addresses 17-32.			

[back to List of values](#)

Group: Log Bout

Log Bout 1

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9143	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 2

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9144	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 3

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9145	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[back to List of values](#)

Log Bout 4

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9146	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[▲ back to List of values](#)

Log Bout 5

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9147	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[▲ back to List of values](#)

Log Bout 6

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9148	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[▲ back to List of values](#)

Log Bout 7

Value group	Log Bout	Related FW	2.0.0
Units	[-]		
Comm object	9149	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs.			

[▲ back to List of values](#)

Group: CM-GPRS

AirGate Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0														
Units	[-]																
Comm object	24308	Related applications	MCB, MGCB, BTB														
Description																	
Diagnostic code for AirGate connection. Helps in troubleshooting.																	
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SIM card is not inserted</td> </tr> <tr> <td>1</td> <td>Controller registered, waiting for authorization</td> </tr> <tr> <td>2</td> <td>Not possible to register, controller blacklisted</td> </tr> <tr> <td>3</td> <td>Not possible to register, server has no more capacity</td> </tr> <tr> <td>4</td> <td>Not possible to register, other reason</td> </tr> <tr> <td>5</td> <td>Controller registered and authorized</td> </tr> </tbody> </table>				Code	Description	0	SIM card is not inserted	1	Controller registered, waiting for authorization	2	Not possible to register, controller blacklisted	3	Not possible to register, server has no more capacity	4	Not possible to register, other reason	5	Controller registered and authorized
Code	Description																
0	SIM card is not inserted																
1	Controller registered, waiting for authorization																
2	Not possible to register, controller blacklisted																
3	Not possible to register, server has no more capacity																
4	Not possible to register, other reason																
5	Controller registered and authorized																

[◀ back to List of values](#)

AirGate ID

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0
Units	[-]		
Comm object	24309	Related applications	MCB, MGCB, BTB
Description			
Identification string generated by AirGate server for the purpose of establishing communication via IntelliConfig or any other supported PC tool.			

[◀ back to List of values](#)

AirGate Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0														
Units	[-]																
Comm object	24308	Related applications	MCB, MGCB, BTB														
Description																	
Diagnostic code for AirGate connection. Helps in troubleshooting.																	
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SIM card is not inserted</td> </tr> <tr> <td>1</td> <td>Controller registered, waiting for authorization</td> </tr> <tr> <td>2</td> <td>Not possible to register, controller blacklisted</td> </tr> <tr> <td>3</td> <td>Not possible to register, server has no more capacity</td> </tr> <tr> <td>4</td> <td>Not possible to register, other reason</td> </tr> <tr> <td>5</td> <td>Controller registered and authorized</td> </tr> </tbody> </table>				Code	Description	0	SIM card is not inserted	1	Controller registered, waiting for authorization	2	Not possible to register, controller blacklisted	3	Not possible to register, server has no more capacity	4	Not possible to register, other reason	5	Controller registered and authorized
Code	Description																
0	SIM card is not inserted																
1	Controller registered, waiting for authorization																
2	Not possible to register, controller blacklisted																
3	Not possible to register, server has no more capacity																
4	Not possible to register, other reason																
5	Controller registered and authorized																

[back to List of values](#)

Connection Type

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0
Units	[-]		
Comm object	24146	Related applications	MCB, MGCB, BTB
Description			
The type of data connection.			

[back to List of values](#)

Cell Diag Code

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0										
Units	[-]												
Comm object	24288	Related applications	MCB, MGCB, BTB										
Description													
Diagnostic code for the CM-GPRS or CM-4G-GPS module.													
GSM Diag Code – Common list of diagnostic codes for cellular modules													
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OK. No error.</td> </tr> <tr> <td>1</td> <td>Not possible to hang up.</td> </tr> <tr> <td>2</td> <td>Modul is switched off</td> </tr> <tr> <td>3</td> <td>Module is switched on</td> </tr> </tbody> </table>				Code	Description	0	OK. No error.	1	Not possible to hang up.	2	Modul is switched off	3	Module is switched on
Code	Description												
0	OK. No error.												
1	Not possible to hang up.												
2	Modul is switched off												
3	Module is switched on												

4	Module – error in initialization
5	Module – not possible to set the APN
6	Module – not possible to connect to GPRS network
7	Module – not possible to retrieve IP address
8	Module – not accepted DNS IP address
9	Error in modem detection
10	Error in initialization of analog modem
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking
12	No GSM signal
13	Not possible to read the SIM card parameters
14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card
15	Unknown modem
16	Bad answer to complement initialization string
17	Not possible to read GSM signal strength
18	CDMA modem not detected
19	No CDMA network
20	Unsuccessful registration to CDMA network
21	SIMCom/ME909s: can't read FW version
22	SIMCom: GSM signal not found
23	SIMCom: can't detect module speed
24	SIMCom: HW reset issued
25	PUK is required
26	Error of SIM card detected
27	ME909s: can't set module bps
28	ME909s: can't set link configuration
29	ME909s: can't do power-off
30	ME909s: can't do power-on
31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued
35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration

41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

[back to List of values](#)

Cell ErrorRate

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0
Units	%		
Comm object	24300	Related applications	MCB, MGCB, BTB
Description			
This value contains information about relative quality of the cellular signal received by the CM-GPRS module or by CM-4G-GPS module. The lower value means higher quality of signal.			

[back to List of values](#)

Cell Signal Lev

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0
Units	%		
Comm object	24302	Related applications	MCB, MGCB, BTB
Description			
This value contains information about relative strength of the cellular signal received by the CM-GPRS module or by CM-4G-GPS module. It is a relative value helping to find the best signal and for troubleshooting cases.			

[back to List of values](#)

Cell Status

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0
Units	[-]		
Comm object	24290	Related applications	MCB, MGCB, BTB
Description			
The text of this value represents the status of the GSM modem.			

[back to List of values](#)

Last Email Result

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0																																																				
Units	[-]																																																						
Comm object	24307	Related applications	MCB, MGCB, BTB																																																				
Description																																																							
Result of last email, which was sent by controller.																																																							
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>0</td><td>Email was successfully sent.</td></tr> <tr><td>2</td><td>It is not possible to establish connection with SMTP server.</td></tr> <tr><td>3</td><td>SMTP server is not ready for communication.</td></tr> <tr><td>4</td><td>Maximum length of data can't be read.</td></tr> <tr><td>5</td><td>No appeal to send command.</td></tr> <tr><td>6</td><td>Command can't be send.</td></tr> <tr><td>7</td><td>Command can't be send.</td></tr> <tr><td>8</td><td>HELO command was refused.</td></tr> <tr><td>11</td><td>AUTH LOGIN command was refused.</td></tr> <tr><td>12</td><td>Wrong user name.</td></tr> <tr><td>13</td><td>Wrong password.</td></tr> <tr><td>14</td><td>MAIL FROM command was refused.</td></tr> <tr><td>15</td><td>RCPT TO command was refused.</td></tr> <tr><td>16</td><td>DATA command was refused.</td></tr> <tr><td>17</td><td>Sending of email failed.</td></tr> <tr><td>18</td><td>SMTP server refused the data of email.</td></tr> <tr><td>19</td><td>SMTP server refused the data of email.</td></tr> <tr><td>20</td><td>QUIT command was refused.</td></tr> <tr><td>21</td><td>Lost of connection.</td></tr> <tr><td>23</td><td>Error during closing the connection.</td></tr> <tr><td>24</td><td>No answer from server.</td></tr> <tr><td>25</td><td>It is impossible to create data for command DATA.</td></tr> <tr><td>26</td><td>It is impossible to read data for command DATA.</td></tr> <tr><td>28</td><td>Error of encoding.</td></tr> <tr><td>29</td><td>There was no attempt to send email.</td></tr> </tbody> </table>				Code	Description	0	Email was successfully sent.	2	It is not possible to establish connection with SMTP server.	3	SMTP server is not ready for communication.	4	Maximum length of data can't be read.	5	No appeal to send command.	6	Command can't be send.	7	Command can't be send.	8	HELO command was refused.	11	AUTH LOGIN command was refused.	12	Wrong user name.	13	Wrong password.	14	MAIL FROM command was refused.	15	RCPT TO command was refused.	16	DATA command was refused.	17	Sending of email failed.	18	SMTP server refused the data of email.	19	SMTP server refused the data of email.	20	QUIT command was refused.	21	Lost of connection.	23	Error during closing the connection.	24	No answer from server.	25	It is impossible to create data for command DATA.	26	It is impossible to read data for command DATA.	28	Error of encoding.	29	There was no attempt to send email.
Code	Description																																																						
0	Email was successfully sent.																																																						
2	It is not possible to establish connection with SMTP server.																																																						
3	SMTP server is not ready for communication.																																																						
4	Maximum length of data can't be read.																																																						
5	No appeal to send command.																																																						
6	Command can't be send.																																																						
7	Command can't be send.																																																						
8	HELO command was refused.																																																						
11	AUTH LOGIN command was refused.																																																						
12	Wrong user name.																																																						
13	Wrong password.																																																						
14	MAIL FROM command was refused.																																																						
15	RCPT TO command was refused.																																																						
16	DATA command was refused.																																																						
17	Sending of email failed.																																																						
18	SMTP server refused the data of email.																																																						
19	SMTP server refused the data of email.																																																						
20	QUIT command was refused.																																																						
21	Lost of connection.																																																						
23	Error during closing the connection.																																																						
24	No answer from server.																																																						
25	It is impossible to create data for command DATA.																																																						
26	It is impossible to read data for command DATA.																																																						
28	Error of encoding.																																																						
29	There was no attempt to send email.																																																						

[◀ back to List of values](#)

Operator

Value group	CM-GPRS; CM-4G-GPS (4G part)	Related FW	2.0.0
Units	[-]		
Comm object	24147	Related applications	MCB, MGCB, BTB
Description			
The name of operator which to SIM card is connected.			
<i>Note: If roaming service is used then prefix "R" is added before the name of operator.</i>			

[back to List of values](#)

Group: CM-Ethernet

AirGate Status

Value group	CM-Ethernet	Related FW	2.0.0														
Units	[-]																
Comm object	24344	Related applications	MCB, MGCB, BTB														
Description																	
Diagnostic code for AirGate connection. Helps in troubleshooting.																	
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Ethernet cable is disconnected</td> </tr> <tr> <td>1</td> <td>Controller registered, waiting for authorization</td> </tr> <tr> <td>2</td> <td>Not possible to register, controller blacklisted</td> </tr> <tr> <td>3</td> <td>Not possible to register, server has no more capacity</td> </tr> <tr> <td>4</td> <td>Not possible to register, other reason</td> </tr> <tr> <td>5</td> <td>Controller registered and authorized</td> </tr> </tbody> </table>				Code	Description	0	Ethernet cable is disconnected	1	Controller registered, waiting for authorization	2	Not possible to register, controller blacklisted	3	Not possible to register, server has no more capacity	4	Not possible to register, other reason	5	Controller registered and authorized
Code	Description																
0	Ethernet cable is disconnected																
1	Controller registered, waiting for authorization																
2	Not possible to register, controller blacklisted																
3	Not possible to register, server has no more capacity																
4	Not possible to register, other reason																
5	Controller registered and authorized																

[back to List of values](#)

AirGate ID

Value group	CM-EthernetInfo	Related FW	2.0.0
Units	[-]		
Comm object	24345	Related applications	MCB, MGCB, BTB
Description			
Identification string generated by AirGate server for the purpose of establishing communication via IntelliConfig or any other supported PC tool.			

[back to List of values](#)

Current DNS

Value group	CM-Ethernet	Related FW	2.0.0
Units	[-]		
Comm object	24181	Related applications	MCB, MGCB, BTB
Description			
Current domain name server.			

[back to List of values](#)

ETH Interface Status

Value group	CM-Ethernet	Related FW	2.0.0
Units	[-]		
Comm object	24180	Related applications	MCB, MGCB, BTB
Description			
Current status of ethernet communication.			

[back to List of values](#)

Current Gateway

Value group	CM-Ethernet	Related FW	2.0.0
Units	[-]		
Comm object	24182	Related applications	MCB, MGCB, BTB
Description			
Current gateway address.			

[back to List of values](#)

Current IP Address

Value group	CM-Ethernet	Related FW	2.0.0
Units	[-]		
Comm object	24184	Related applications	MCB, MGCB, BTB
Description			
Current IP address of the controller.			

[back to List of values](#)

Last Email Result

Value group	CM-Ethernet	Related FW	2.0.0																																						
Units	[-]																																								
Comm object	24332	Related applications	MCB, MGCB, BTB																																						
Description																																									
Result of last email, which was sent by controller.																																									
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Email was successfully sent.</td> </tr> <tr> <td>2</td> <td>It is not possible to establish connection with SMTP server.</td> </tr> <tr> <td>3</td> <td>SMTP server is not ready for communication.</td> </tr> <tr> <td>8</td> <td>HELO command was refused.</td> </tr> <tr> <td>9</td> <td>EHLO command was refused.</td> </tr> <tr> <td>11</td> <td>AUTH LOGIN command was refused.</td> </tr> <tr> <td>12</td> <td>Wrong user name.</td> </tr> <tr> <td>13</td> <td>Wrong password.</td> </tr> <tr> <td>14</td> <td>MAIL FROM command was refused.</td> </tr> <tr> <td>15</td> <td>RCPT TO command was refused.</td> </tr> <tr> <td>16</td> <td>DATA command was refused.</td> </tr> <tr> <td>17</td> <td>Sending of email failed.</td> </tr> <tr> <td>20</td> <td>QUIT command was refused.</td> </tr> <tr> <td>25</td> <td>It is impossible to create data for command DATA.</td> </tr> <tr> <td>26</td> <td>It is impossible to read data for command DATA.</td> </tr> <tr> <td>27</td> <td>Email address can't be read.</td> </tr> <tr> <td>30</td> <td>SMTP server address translation error (from DNS server).</td> </tr> <tr> <td>31</td> <td>Error reading email content data (24327).</td> </tr> </tbody> </table>				Code	Description	0	Email was successfully sent.	2	It is not possible to establish connection with SMTP server.	3	SMTP server is not ready for communication.	8	HELO command was refused.	9	EHLO command was refused.	11	AUTH LOGIN command was refused.	12	Wrong user name.	13	Wrong password.	14	MAIL FROM command was refused.	15	RCPT TO command was refused.	16	DATA command was refused.	17	Sending of email failed.	20	QUIT command was refused.	25	It is impossible to create data for command DATA.	26	It is impossible to read data for command DATA.	27	Email address can't be read.	30	SMTP server address translation error (from DNS server).	31	Error reading email content data (24327).
Code	Description																																								
0	Email was successfully sent.																																								
2	It is not possible to establish connection with SMTP server.																																								
3	SMTP server is not ready for communication.																																								
8	HELO command was refused.																																								
9	EHLO command was refused.																																								
11	AUTH LOGIN command was refused.																																								
12	Wrong user name.																																								
13	Wrong password.																																								
14	MAIL FROM command was refused.																																								
15	RCPT TO command was refused.																																								
16	DATA command was refused.																																								
17	Sending of email failed.																																								
20	QUIT command was refused.																																								
25	It is impossible to create data for command DATA.																																								
26	It is impossible to read data for command DATA.																																								
27	Email address can't be read.																																								
30	SMTP server address translation error (from DNS server).																																								
31	Error reading email content data (24327).																																								

[back to List of values](#)

MAC Address

Value group	CM-Ethernet	Related FW	2.0.0
Units	[-]		
Comm object	24333	Related applications	MCB, MGCB, BTB
Description			
Current MAC address of the controller ethernet interface.			

[back to List of values](#)

Current Subnet Mask

Value group	CM-Ethernet	Related FW	2.0.0
Units	[-]		
Comm object	24183	Related applications	MCB, MGCB, BTB
Description			
Current subnet mask.			

[back to List of values](#)

Group: Date/Time

Time

Value group	Date/Time	Related FW	2.0.0
Units	HH:MM:SS		
Comm object	24554	Related applications	MCB, MGCB, BTB
Description			
Shows setup time.			

[back to List of values](#)

Date

Value group	Date/Time	Related FW	2.0.0
Units	DD.MM.YYYY		
Comm object	24553	Related applications	MCB, MGCB, BTB
Description			
Shows setup date.			

[back to List of values](#)

Group: Plug-In I/O

EM BIO A

Value group	Plug-In I/O	Related FW	2.0.0
Units	[-]		
Comm object	14291	Related applications	MCB, MGCB, BTB
Description			
Binary inputs from extension module in slot A.			

[back to List of values](#)

EM BIO B

Value group	Plug-In I/O	Related FW	2.0.0
Units	[-]		
Comm object	14292	Related applications	MCB, MGCB, BTB
Description			
Binary inputs from extension module in slot B.			

[back to List of values](#)

Group: PLC

PLC Resource 1

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10504	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 2

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10505	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 3

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10506	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 4

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10507	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 5

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10508	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 6

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10509	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 7

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10510	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC Resource 8

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10511	Related applications	MCB, MGCB, BTB
Description			
Internal state of PLC countdowns (e.g. state of block Timer etc.).			

[back to List of values](#)

PLC-BOUT 1

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10424	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 2

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10425	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 3

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10426	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 4

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10427	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 5

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10428	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 6

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10429	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

[back to List of values](#)

PLC-BOUT 7

Value group	PLC	Related FW	2.0.0
Units	[-]		
Comm object	10430	Related applications	MCB, MGCB, BTB
Description			
State of binary outputs of PLC.			

 [back to List of values](#)

8.1.3 Logical binary inputs

What Logical binary inputs are:

Logical binary inputs are inputs for binary values and functions.

Alphabetical groups of Logical binary inputs

LBI: A	446
LBI: B	447
LBI: E	471
LBI: F	471
LBI: G	472
LBI: H	472
LBI: L	472
LBI: M	473
LBI: N	477
LBI: R	477
LBI: S	481
LBI: T	481





For full list of Logical binary inputs go to the chapter **Logical binary inputs alphabetically (page 445)**.

Logical binary inputs alphabetically

Access Lock	446	BIN Protection 34	463	Remote Start/Stop	479
Alternate Config 2	446	BIN Protection 35	464	Remote TEST	479
Alternate Config 3	446	BIN Protection 36	464	Remote Test On Load	480
AMF Start Block	446	BIN Protection 37	465	Start Button	481
BIN Protection 1	447	BIN Protection 38	465	Stop Button	481
BIN Protection 02	447	BIN Protection 39	466	Time Stamp Act	481
BIN Protection 03	448	BIN Protection 40	466		
BIN Protection 04	448	BIN Protection 41	467		
BIN Protection 05	449	BIN Protection 42	467		
BIN Protection 06	449	BIN Protection 43	468		
BIN Protection 07	450	BIN Protection 44	468		
BIN Protection 08	450	BIN Protection 45	469		
BIN Protection 09	451	BIN Protection 46	469		
BIN Protection 10	451	BIN Protection 47	470		
BIN Protection 11	452	BIN Protection 48	470		
BIN Protection 12	452	Emergency MAN	471		
BIN Protection 13	453	Fault Reset Button	471		
BIN Protection 14	453	Force Island	471		
BIN Protection 15	454	Force Parallel	471		
BIN Protection 16	454	Group link	472		
BIN Protection 17	455	Horn Reset Button	472		
BIN Protection 18	455	Lang Selection 1	472		
BIN Protection 19	456	Lang Selection 2	473		
BIN Protection 20	456	Load Res 2 Active	473		
BIN Protection 21	457	Mains Fail Block	473		
BIN Protection 22	457	Manual Load			
BIN Protection 23	458	Reconnection	474		
BIN Protection 24	458	MCB Button	474		
BIN Protection 25	459	MCB Feedback	475		
BIN Protection 26	459	Min Run Power Active	476		
BIN Protection 27	460	MGCB Feedback	476		
BIN Protection 28	460	MGCB Button	477		
BIN Protection 29	461	Not Used	477		
BIN Protection 30	461	Remote AUTO	477		
BIN Protection 31	462	Remote Ctrl Lock	477		
BIN Protection 32	462	Remote MAN	478		
BIN Protection 33	463	Remote OFF	478		

LBI: A

Access Lock

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1		
Description			
When this input is closed, no setpoints can be adjusted from controller's front panel and controller mode (OFF / MAN / AUTO / TEST) cannot be changed.			
<p>Note: Access Lock does not protect setpoints and mode changing from IntelliConfig. To avoid unqualified changes the selected setpoints have to be password protected.</p> <p>Also the buttons Fault Reset  and Horn Reset  are not blocked at all and buttons Start  and Stop  in MAN mode are not blocked.</p>			

⬅ back to Logical binary inputs alphabetically

Alternate Config 2

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	859		
Description			
This binary input can switch between configuration sets. When this binary input is active, setpoints in Alternate Configuration group are switched to the second set (setpoints with number 2).			

⬅ back to Logical binary inputs alphabetically

Alternate Config 3

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	860		
Description			
This binary input can switch between configuration sets. When this binary input is active, setpoints in Alternate Configuration group are switched to the third set (setpoints with number 3).			

⬅ back to Logical binary inputs alphabetically

AMF Start Block

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	211		
Description			
This binary input can allow or block the AMF start. In case of activated system start/stop due to AMF start, the system start/stop will be deactivated.			

⬅ back to Logical binary inputs alphabetically

LBI: B

BIN Protection 1

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9999		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnI	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wm	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 02

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9998		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnI	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wm	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 03

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9997		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 04

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9996		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 05

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9995		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 06

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9994		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 07

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9993		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 08

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9992		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 09

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9991		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 10

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9990		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 11

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9989		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 12

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9988		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 13

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9987		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 14

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9986		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 15

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9985		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 16

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9984		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 17

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9983		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 18

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9982		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 19

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9981		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 20

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9980		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 21

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9979		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 22

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9978		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 23

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9977		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 24

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9976		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 25

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9975		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 26

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9974		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 27

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9973		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 28

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9972		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 29

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9971		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 30

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9970		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 31

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9969		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 32

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9968		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 33

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9967		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 34

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9966		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 35

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9965		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 36

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9964		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signalized with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signalized with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 37

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9963		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 38

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9962		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 39

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9961		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 40

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9960		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 41

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9959		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 42

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9958		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 43

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9957		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 44

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9956		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 45

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9955		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 46

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9954		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 47

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9953		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

BIN Protection 48

Related FW	2.0.0	Related applications	AMF, MRS MINT, SPtM
Comm object	9952		
Description			
This binary input is for general input function used as alarm.			
Protection types			
Monitoring	Binary input is not used for protection or any other function. Signal is only monitored.		
HistRecOnl	Binary input is not used for protection. Only history record is made if binary input is active.		
AL Indic	Binary input is not used for protection. Only alarmlist record is made if binary input is active.		
Wrn	Binary input is used for warning protection only.		
MP	Mains protection without reset. Protection is signaled with red LED status but the alarm is not in alarm list.		
MPR	Mains protection with reset. Protection is signaled with red LED status and alarm is recorded in alarm list.		
FLS	Sensor fail protection.		

[◀ back to Logical binary inputs alphabetically](#)

LBI: E


Emergency MAN

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	45		
Description			
<p>This input is designed to allow the gen-set or breakers to be controlled externally, not by the controller. This feature can be useful in case of or in case of some failure, which disables the gen-set or breakers to be controlled by the controller, but the gen-set itself is operational.</p> <p>The controller behaves in the following way:</p> <ul style="list-style-type: none"> ▶ Shows the text EmergMan in the engine status on the main screen. ▶ Stops all functions regarding the gen-set or breaker control, deactivates all outputs related to it. ▶ Stop Fail alarm is not being evaluated and stop solenoid is not activated if nonzero speed is detected. ▶ When the input is deactivated, the controller takes control according to the situation in the moment of deactivation. 			

◀ back to Logical binary inputs alphabetically

LBI: F

Fault Reset Button

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	191		
Description			
<p>Binary input has the same function as Fault Reset button  on the IntelliMains 210 front panel.</p>			

◀ back to Logical binary inputs alphabetically

Force Island

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	787		
Description			
<p>Activation of this logical binary input starts the system and transfer it in to the island operation.</p> <p>Transition of load from mains is adjusted via setpoint Transfer Mains To Bus (page 241).</p>			

◀ back to Logical binary inputs alphabetically

Force Parallel

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	786		
Description			
<p>Activation of this logical binary input start the system and go to parallel operation if mains is healthy. Island operation is not allowed.</p>			

◀ back to Logical binary inputs alphabetically

LBI: G


Group link

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	59		
Description			
<p>This input is used for logical connection and disconnection of two gen-set groups selected with setpoints Group Link L (page 238) and Group Link R (page 238). If the input is active, then the two selected groups will perform power management, load sharing and kVAr sharing together as one large group.</p> <p>Note: This function is independent on the group which the particular controller belongs to, i.e. the controller can provide linking function e.g. for groups 3,4 although it belongs to group 2.</p>			

⬅ back to Logical binary inputs alphabetically

LBI: H

Horn Reset Button

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	192		
Description			
<p>Binary input has the same function as Horn reset  button on the IntelliMains 210 front panel.</p>			

⬅ back to Logical binary inputs alphabetically

LBI: L

Lang Selection 1

Related FW	2.0.0	Related applications	MCB, MGCB, BTB												
Comm object	107														
Description															
<p>Use this binary input with binary input LANG SELECTION 2 (PAGE 473) to choose required language of controller. The system is based on binary numbers.</p>															
<table border="1"> <thead> <tr> <th>Binary input</th> <th>Binary number</th> <th>Active language</th> </tr> </thead> <tbody> <tr> <td>Language Selection 1 is active</td> <td>1</td> <td>First language (English)</td> </tr> <tr> <td>LANG SELECTION 2 (PAGE 473) is active</td> <td>2</td> <td>Second language</td> </tr> <tr> <td>Language Selection 1 and LANG SELECTION 2 (PAGE 473) are active</td> <td>3</td> <td>Third language</td> </tr> </tbody> </table>				Binary input	Binary number	Active language	Language Selection 1 is active	1	First language (English)	LANG SELECTION 2 (PAGE 473) is active	2	Second language	Language Selection 1 and LANG SELECTION 2 (PAGE 473) are active	3	Third language
Binary input	Binary number	Active language													
Language Selection 1 is active	1	First language (English)													
LANG SELECTION 2 (PAGE 473) is active	2	Second language													
Language Selection 1 and LANG SELECTION 2 (PAGE 473) are active	3	Third language													

⬅ back to Logical binary inputs alphabetically

Lang Selection 2

Related FW	2.0.0	Related applications	MCB, MGCB, BTB												
Comm object	108														
Description															
Use this binary input with binary input LANG SELECTION 1 (PAGE 472) to choose required language of controller. The system is based on binary numbers.															
<table border="1"> <thead> <tr> <th>Binary input</th> <th>Binary number</th> <th>Active language</th> </tr> </thead> <tbody> <tr> <td>LANG SELECTION 1 (PAGE 472) is active</td> <td>1</td> <td>First language (English)</td> </tr> <tr> <td>Lang Selection 2 is active</td> <td>2</td> <td>Second language</td> </tr> <tr> <td>LANG SELECTION 1 (PAGE 472) and Lang Selection 2 are active</td> <td>3</td> <td>Third language</td> </tr> </tbody> </table>				Binary input	Binary number	Active language	LANG SELECTION 1 (PAGE 472) is active	1	First language (English)	Lang Selection 2 is active	2	Second language	LANG SELECTION 1 (PAGE 472) and Lang Selection 2 are active	3	Third language
Binary input	Binary number	Active language													
LANG SELECTION 1 (PAGE 472) is active	1	First language (English)													
Lang Selection 2 is active	2	Second language													
LANG SELECTION 1 (PAGE 472) and Lang Selection 2 are active	3	Third language													

🔍 back to Logical binary inputs alphabetically

Load Res 2 Active

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	49		
Description			
Activation of this logical binary input changes the set of load reserve setpoint, which are used in Power management (page 89) . This input is used to activate the load reserve set 2 instead of the set 1, which is active by default.			

🔍 back to Logical binary inputs alphabetically

LBI: M

Mains Fail Block

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	622		
Description			
If the input is closed, the automatic start of the system at Mains failure is blocked. In case of activated system start/stop in AUTO mode, timer Mains Return Delay (page 218) is started and when it elapses the MGCB is opened and system start/stop is deactivated.			
Note: <i>This input simulates healthy Mains.</i>			

🔍 back to Logical binary inputs alphabetically

Manual Load Reconnection

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	60		
Description			
<p>This input is used for manual reconnection of the last disconnected part of the load, if the load has dropped below the setpoint Load Reconnection Level (page 227). This works only if automatic reconnection is disabled, i.e. the setpoint Auto Load Reconnection (page 228) = Disabled.</p>			

◀ back to Logical binary inputs alphabetically

MCB Button

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	194		
Description			
<p>This binary input has the same function as MCB button <input type="checkbox"/> on the IntelliMains 210 front panel. It is evaluated in MAN mode only.</p>			

◀ back to Logical binary inputs alphabetically

MCB Feedback

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	65		

Description

Use this input for indication whether the mains circuit breaker is open or closed.

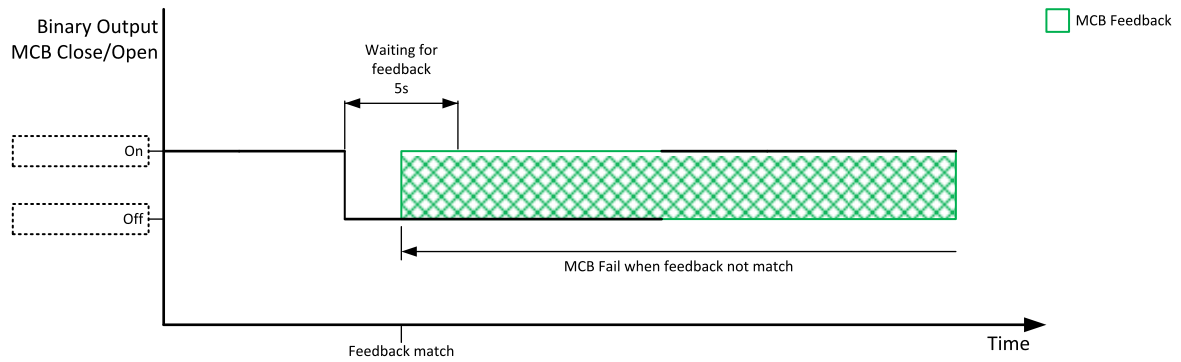


Image 8.109 MCB Feedback 1

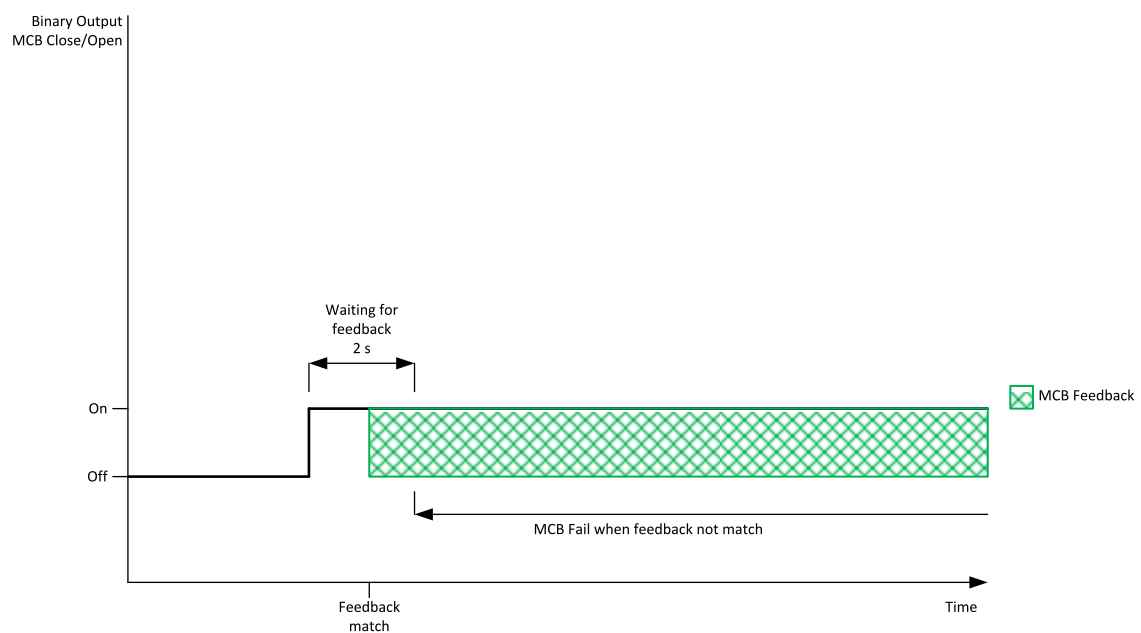


Image 8.110 MCB Feedback 2

[back to Logical binary inputs alphabetically](#)

Min Run Power Active

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	52		
Description			
This input is used to activate the function minimal running power, which is adjusted via setpoint #Min Run Power (page 234).			

⬅ back to Logical binary inputs alphabetically

MGCB Feedback

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	63		
Description			

Use this input for indication whether the generator circuit breaker is open or closed.

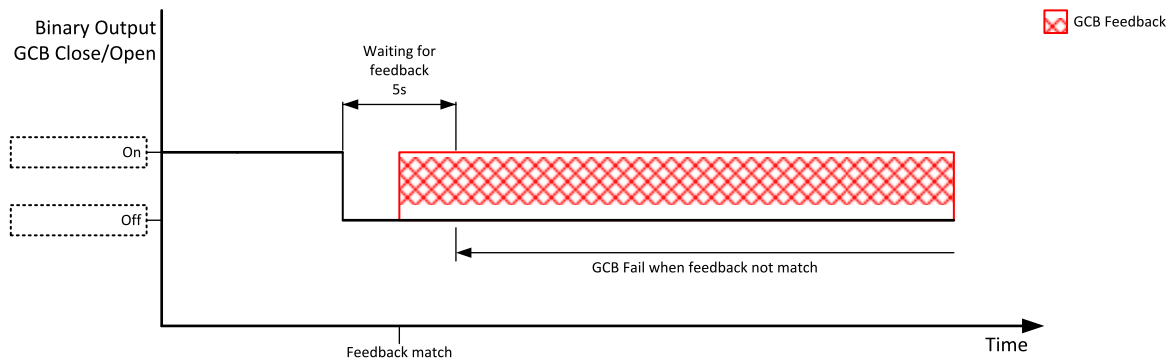


Image 8.111 GCB Feedback 1

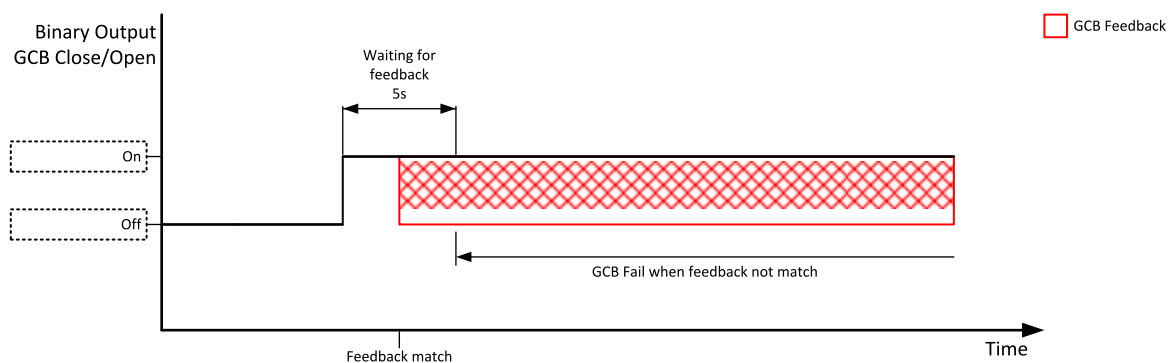



Image 8.112 GCB Feedback 2

⬅ back to Logical binary inputs alphabetically

MGCB Button

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	193		
Description			
Binary input has the same function as MGCB button  on the IntelliMains 210 front panel. It is evaluated in MAN mode only.			

[back to Logical binary inputs alphabetically](#)

LBI: N

Not Used

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	184		
Description			
Binary input has no function. Use this configuration when binary input is not used.			

[back to Logical binary inputs alphabetically](#)

LBI: R

Remote AUTO

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	620		
Description			
The controller is switched to the AUTO mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.			
This binary input has the lowest priority from Remote OFF / MAN / AUTO / TEST binary inputs			
Remote control priority:			
▶ Remote OFF (Highest priority)			
▶ Remote TEST			
▶ Remote MAN			
▶ Remote AUTO (Lowest Priority)			

[back to Logical binary inputs alphabetically](#)

Remote Ctrl Lock

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	4		
Description			
If the input is active, the controller will not accept any actions regarding the system control – e.g. writing of commands and setpoint changes via remote communication interfaces.			

[back to Logical binary inputs alphabetically](#)

Remote MAN

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	618		
Description			
<p>The controller is switched to the MAN mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.</p> <p>Remote control priority:</p> <ul style="list-style-type: none"> ▶ Remote OFF (Highest priority) ▶ Remote TEST ▶ Remote MAN ▶ Remote AUTO (Lowest Priority) 			

⬅ back to Logical binary inputs alphabetically

Remote OFF

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	617		
Description			
<p>The controller is switched to the OFF mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.</p> <p>Remote control priority:</p> <ul style="list-style-type: none"> ▶ Remote OFF (Highest priority) ▶ Remote TEST ▶ Remote MAN ▶ Remote AUTO (Lowest Priority) 			

⬅ back to Logical binary inputs alphabetically

Remote Start/Stop

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	38		
Description			
Use this input to start and stop the gen-set in AUTO mode and TEST mode.			
Taken action in MCB, MGCB application (AUTO Mode)			
Active	<ul style="list-style-type: none"> ▶ System Start/Stop is activated regardless the Mains is OK ▶ MGCB is closed in case of MGCB application ▶ Parallel operation - Baseload, import/export ▶ Reverse synchronising in case of mains return 		
Inactive	<ul style="list-style-type: none"> ▶ System Start/Stop deactivated ▶ MGCB opened 		
<p>Note: In the SPTM and AMF application there are more LBIs that can influence the state of the application and can be in the collision with the Common LBI Remote Start/Stop.</p>			

⬅ back to Logical binary inputs alphabetically

Remote TEST

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	621		
Description			
The controller is switched to the TEST mode (there are four modes OFF / MAN / AUTO / TEST) when this binary input is closed. When opens controller is switched back to previous mode.			
Remote control priority:			
<ul style="list-style-type: none"> ▶ Remote OFF (Highest priority) ▶ Remote TEST ▶ Remote MAN ▶ Remote AUTO (Lowest Priority) 			

⬅ back to Logical binary inputs alphabetically


Remote Test On Load

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	61		
Description			
Closing of the GCB in MRS and MINT or transferring of the load from the mains to genset in SPTM and AMF			
Application	TEST	Remote TEST On Load	
MCB	System Start/Stop activated until the TEST mode is deactivated	<p>Active:</p> <ul style="list-style-type: none"> ▶ Controller is switched in to the TEST mode ▶ System Start/Stop is activated ▶ Load transfer according the setting is performed ▶ MCB opened <p>Note: Remote TEST On Load has higher priority then Remote Start/Stop.</p> <p>Inactive:</p> <ul style="list-style-type: none"> ▶ The back synchronisation is performed ▶ After the synchronisation the Load transfer according the setting is performed ▶ System Start/Stop deactivated 	
MGCB	System Start/Stop activated until the TEST mode is deactivated	<p>Active:</p> <ul style="list-style-type: none"> ▶ Controller is switched in to the TEST mode ▶ System Start/Stop is activated ▶ MGCB is closed ▶ Load transfer according the setting is performed ▶ MCB opened <p>Note: Remote TEST On Load has higher priority then Remote Start/Stop.</p> <p>Inactive:</p> <ul style="list-style-type: none"> ▶ The back synchronisation is performed ▶ After the synchronisation the Load transfer according the setting is performed ▶ MGCB opened ▶ System Start/Stop deactivated 	

⬅ back to Logical binary inputs alphabetically


LBI: S

Start Button

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	189		
Description			
Binary input has the same function as Start Button  on the IntelliMains 210 front panel. It is evaluated in MAN mode only.			

[◀ back to Logical binary inputs alphabetically](#)

Stop Button

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	190		
Description			
Binary input has the same function as Stop Button  on the IntelliMains 210 front panel. It is evaluated in MAN Mode only.			

[◀ back to Logical binary inputs alphabetically](#)

LBI: T

Time Stamp Act

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	125		
Description			
Binary input activates time stamp writing to history depending on Date/Time:Time stamp act and Time Stamp Per setpoints.			

[◀ back to Logical binary inputs alphabetically](#)

8.1.4 Logical binary outputs

What Logical binary outputs are:

Logical binary outputs are outputs for binary values and functions.

Alphabetical groups of Logical binary outputs

LBO: A	484
LBO: B	497
LBO: E	501
LBO: F	502
LBO: H	502
LBO: I	503
LBO: L	503
LBO: M	504
LBO: N	513
LBO: P	514
LBO: R	514
LBO: S	514

For full list of Logical binary outputs go to the chapter **Logical binary outputs alphabetically (page 483)**.

Logical binary outputs alphabetically

AL Battery Voltage	484	AIN Switch20	497	Still Log 0	514
AL Bus Frequency	484	BIN 1 Status	497	Still Log 1	514
AL Bus Voltage	484	BIN 2 Status	498	Sys Start/Stop	515
AL Common Fls	484	BIN 3 Status	498	System Reserve OK	515
AL Common MP	484	BIN 4 Status	499		
AL Common MPR	485	BIN 5 Status	499		
AL Common Wrm	485	BIN 6 Status	500		
AL Mains Fail	485	BIN 7 Status	500		
AL Mains Frequency	485	BIN 8 Status	501		
AL Mains > Frequency	485	Bus Healthy	501		
AL Mains > Voltage	486	Exercise Timer 1	501		
AL Mains < Frequency	486	Exercise Timer 2	502		
AL Mains < Voltage	486	FltRes	502		
AL Mains Voltage	486	ForwardSynchro	502		
AL Overcurrent	486	Heartbeat	502		
AL Overload MPR	486	Horn	503		
AL Overload Wrm	487	In Mains Parallel	503		
Alarm	487	Load Shedding Stage 1	503		
AIN Switch01	487	Load Shedding Stage 2	503		
AIN Switch02	488	Load Shedding Stage 3	504		
AIN Switch03	488	Mains Healthy	504		
AIN Switch04	489	MCB Close/Open	504		
AIN Switch05	489	MCB OFF Coil	506		
AIN Switch06	490	MCB ON Coil	507		
AIN Switch07	490	MCB UV Coil	508		
AIN Switch08	491	MGCB Close/Open	508		
AIN Switch09	491	MGCB OFF Coil	510		
AIN Switch10	492	MGCB ON Coil	511		
AIN Switch11	492	MGCB UV Coil	511		
AIN Switch12	493	Mode AUTO	512		
AIN Switch13	493	Mode MAN	513		
AIN Switch14	494	Mode OFF	513		
AIN Switch15	494	Mode TEST	513		
AIN Switch16	495	Not In AUTO	513		
AIN Switch17	495	Not Used	513		
AIN Switch18	496	Peak Shaving Active	514		
AIN Switch19	496	ReverseSynchro	514		

LBO: A

AL Battery Voltage

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1293		
Description			
This output is active when the Wrn Battery Voltage (page 562) alarm is present in the alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Bus Frequency

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1266		
Description			
This output is active when at least one Bus frequency alarm is present in alarmlist or isn't confirm.			


⬅ back to Logical binary outputs alphabetically

AL Bus Voltage

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1263		
Description			
This output is active when at least one Bus voltage alarm is present in alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Common FIs

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	6		
Description			
Output closes when any sensor fail alarm appears.			
The output opens, if:			
<ul style="list-style-type: none"> ▶ No sensor fail alarm is active and ▶ Fault reset  button is pressed 			

⬅ back to Logical binary outputs alphabetically

AL Common MP

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	10		
Description			
Signalisation of released common mains protection.			


⬅ back to Logical binary outputs alphabetically

AL Common MPR

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	10		
Description			
Signalisation of released common mains protection with reset.			

[◀ back to Logical binary outputs alphabetically](#)

AL Common Wrn

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	3		
Description			
Output closes when any warning alarm appears.			
The output opens, if:			
<ul style="list-style-type: none"> ▶ No warning alarm is active and ▶ Fault reset  button is pressed 			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains Fail

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	197		
Description			
Output for signaling MainsFailure. This output is active when at least one Mains frequency alarm or at least one Mains voltage alarm is present in alarmlist or isn't confirmed.			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains Frequency

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1271		
Description			
This output is active when at least one Mains frequency alarm is present in alarmlist or isn't confirm.			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains > Frequency

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	2094		
Description			
Signalisation of released protection for Mains overfrequency.			

[◀ back to Logical binary outputs alphabetically](#)

AL Mains > Voltage

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	2092		
Description			
Signalisation of released protection for Mains overvoltage.			

⬅ back to Logical binary outputs alphabetically

AL Mains < Frequency

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	2095		
Description			
Signalisation of released protection for Mains underfrequency.			

⬅ back to Logical binary outputs alphabetically

AL Mains < Voltage

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	2093		
Description			
Signalisation of released protection for Mains undervoltage.			

⬅ back to Logical binary outputs alphabetically

AL Mains Voltage

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1270		
Description			
This output is active when at least one Mains voltage alarm is present in the alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Overcurrent

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	109		
Description			
This output is active when the MPR Overcurrent IDMT (page 579) or MPR Short Circuit (page 580) alarm is present in alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Overload MPR

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1268		
Description			
This output is active when the MPR Overload (page 580) alarm is present in the alarmlist or isn't confirm.			

⬅ back to Logical binary outputs alphabetically

AL Overload Wrn

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1269		
Description			
This output is active when the Wrn Overload (page 566) alarm is present in alarmlist or isn't confirm.			

◀ back to Logical binary outputs alphabetically

Alarm

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	2		
Description			
The output is designed to be used as external alarm indication such as a red bulb in the control room etc. The output is active when at least one unconfirmed alarm is present in the alarmlist and remains active until confirmation of alarm.			

◀ back to Logical binary outputs alphabetically

AIN Switch01

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1400		
Description			
This is an output from the General Analog Input 1 switch function. The behavior of the switch depends on the adjustment of the setpoints Analog Switch 1 On (page 249) and Analog Switch 1 Off (page 249) . The value is measured from AIN SWITCH 01 (PAGE 538) analog input.			

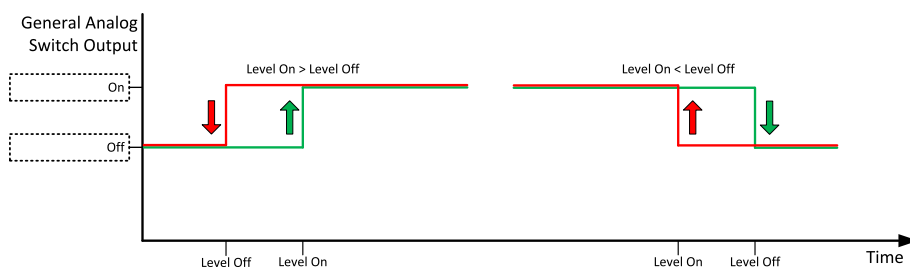


Image 8.113 General analog input 1 switch

◀ back to Logical binary outputs alphabetically

AIN Switch02

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1401		

Description

This is an output from the General Analog Input 2 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 2 On** (page 251) and **Analog Switch 2 Off** (page 251). The value is measured from **AIN SWITCH 02** (PAGE 538) analog input.

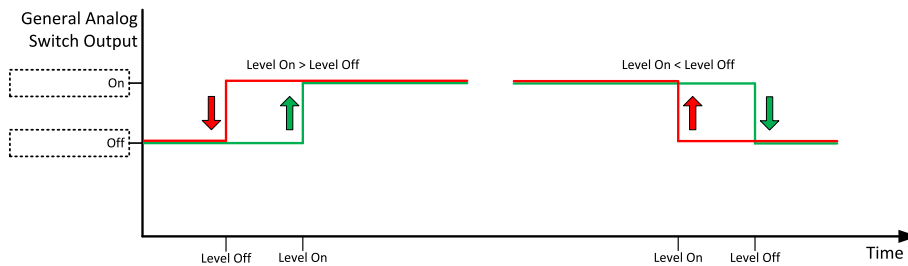


Image 8.114 General analog input 2 switch

[back to Logical binary outputs alphabetically](#)

AIN Switch03

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1402		

Description

This is an output from the General Analog Input 3 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 3 On** (page 253) and **Analog Switch 3 Off** (page 253). The value is measured from **AIN SWITCH 03** (PAGE 538) analog input.

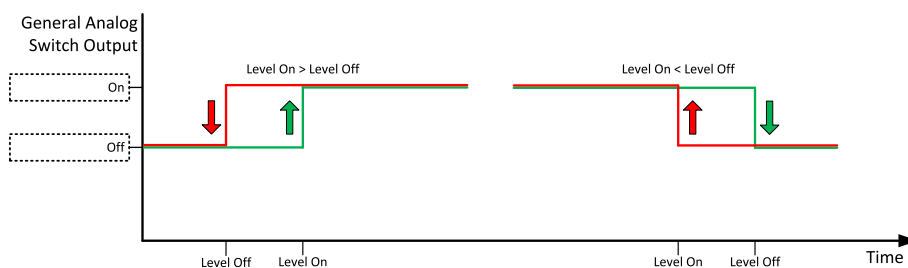


Image 8.115 General analog input 3 switch

[back to Logical binary outputs alphabetically](#)

AIN Switch04

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1403		

Description

This is an output from the General Analog Input 4 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 4 On** (page 255) and **Analog Switch 4 Off** (page 255). The value is measured from **AIN SWITCH 04** (PAGE 539) analog input.

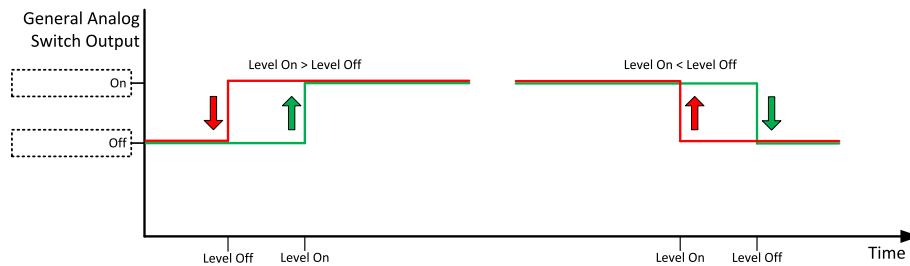


Image 8.116 General analog input 4 switch

Logical binary outputs alphabetically (page 483)

AIN Switch05

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1787		

Description

This is an output from the General Analog Input 5 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 5 On** (page 257) and **Analog Switch 5 Off** (page 257). The value is measured from **AIN SWITCH 05** (PAGE 539) analog input.

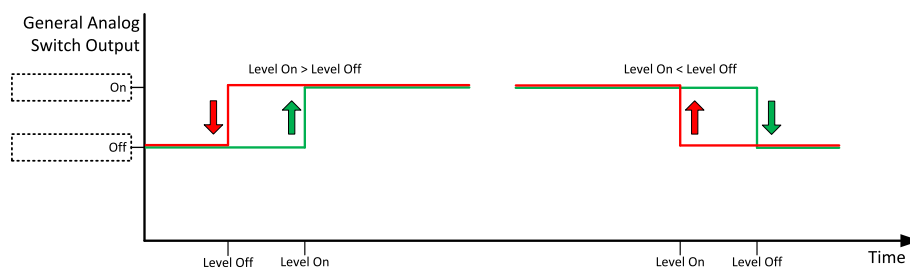


Image 8.117 General analog input 5 switch

Logical binary outputs alphabetically (page 483)

AIN Switch06

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1788		

Description

This is an output from the General Analog Input 6 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 6 On** (page 259) and **Analog Switch 6 Off** (page 259). The value is measured from **AIN SWITCH 06** (PAGE 539) analog input.

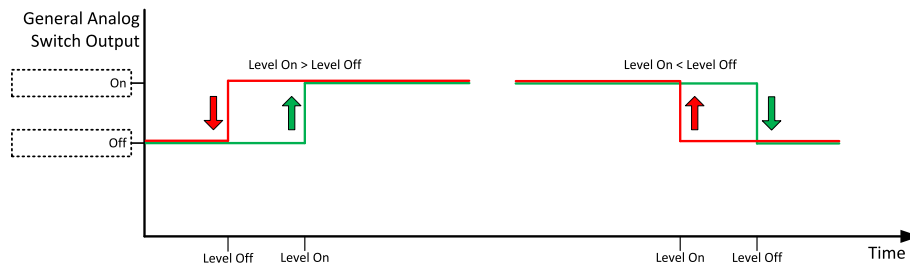


Image 8.118 General analog input 6 switch

Logical binary outputs alphabetically (page 483)

AIN Switch07

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1789		

Description

This is an output from the General Analog Input 7 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 7 On** (page 261) and **Analog Switch 7 Off** (page 261). The value is measured from **AIN SWITCH 07** (PAGE 540) analog input.

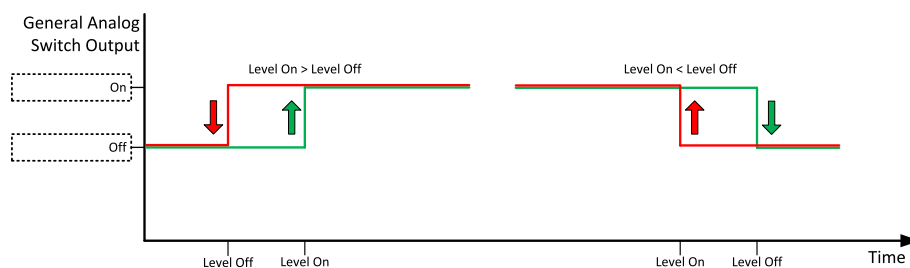


Image 8.119 General analog input 7 switch

Logical binary outputs alphabetically (page 483)

AIN Switch08

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1790		

Description

This is an output from the General Analog Input 8 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 8 On** (page 263) and **Analog Switch 8 Off** (page 263). The value is measured from **AIN SWITCH 08** (PAGE 540) analog input.

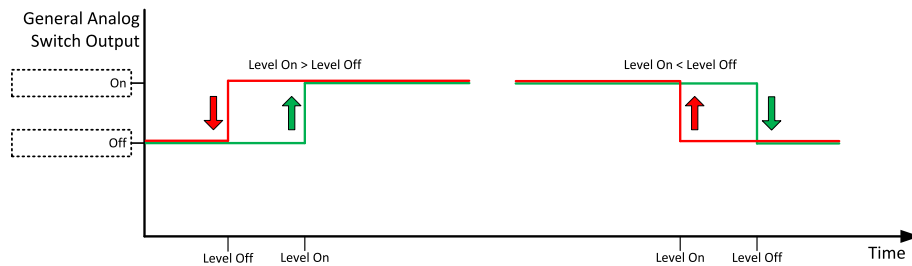


Image 8.120 General analog input 8 switch

Logical binary outputs alphabetically (page 483)

AIN Switch09

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1791		

Description

This is an output from the General Analog Input 9 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 9 On** (page 265) and **Analog Switch 9 Off** (page 265). The value is measured from **AIN SWITCH 09** (PAGE 540) analog input.

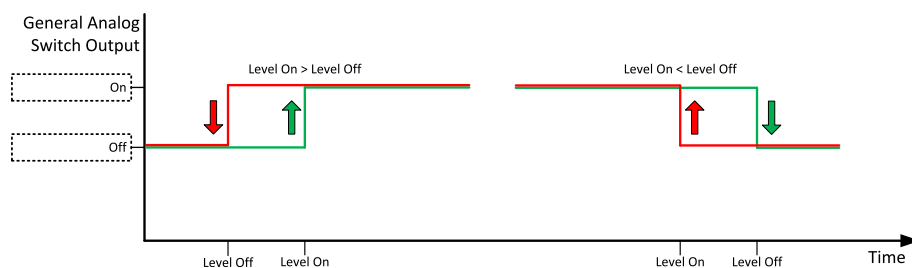


Image 8.121 General analog input 9 switch

Logical binary outputs alphabetically (page 483)

AIN Switch10

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1792		

Description

This is an output from the General Analog Input 10 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 10 On** (page 267) and **Analog Switch 10 Off** (page 267). The value is measured from **AIN SWITCH 10** (PAGE 541) analog input.

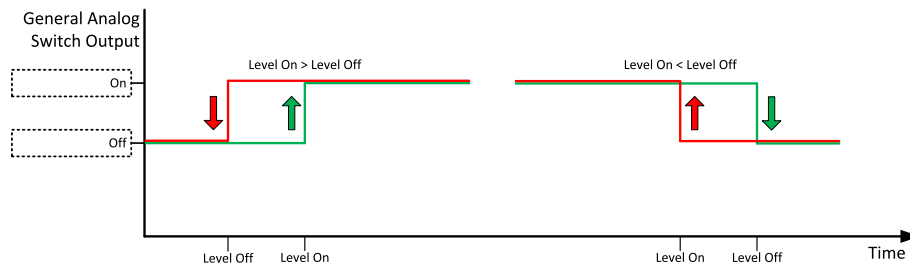


Image 8.122 General analog input 10 switch

Logical binary outputs alphabetically (page 483)

AIN Switch11

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1793		

Description

This is an output from the General Analog Input 11 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 11 On** (page 269) and **Analog Switch 11 Off** (page 269). The value is measured from **AIN SWITCH 11** (PAGE 541) analog input.

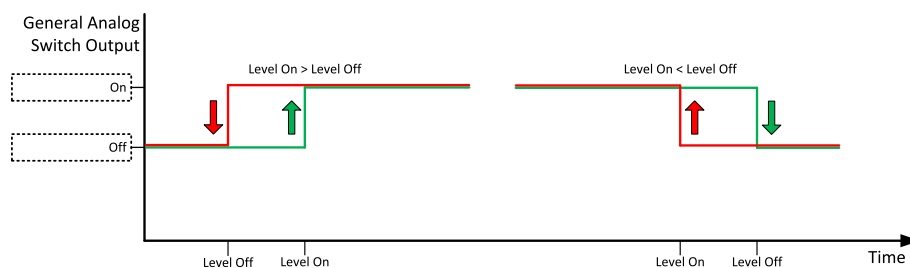


Image 8.123 General analog input 11 switch

Logical binary outputs alphabetically (page 483)

AIN Switch12

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1794		

Description

This is an output from the General Analog Input 12 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 12 On** (page 271) and **Analog Switch 12 Off** (page 271). The value is measured from **AIN SWITCH 12** (PAGE 541) analog input.

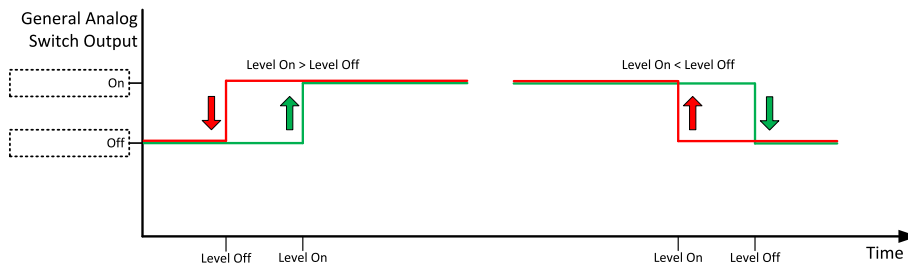


Image 8.124 General analog input 12 switch

Logical binary outputs alphabetically (page 483)

AIN Switch13

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1795		

Description

This is an output from the General Analog Input 13 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 13 On** (page 273) and **Analog Switch 13 Off** (page 273). The value is measured from **AIN SWITCH 13** (PAGE 542) analog input.

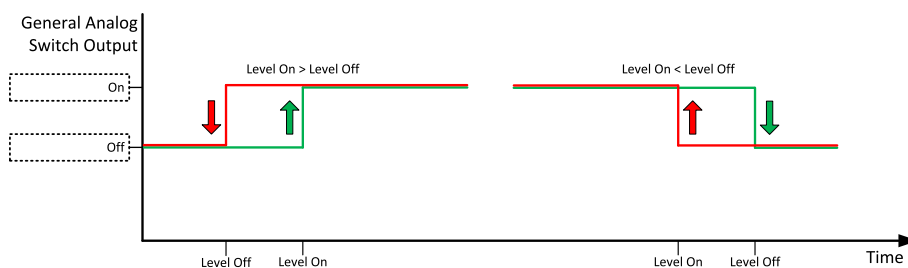


Image 8.125 General analog input 13 switch

Logical binary outputs alphabetically (page 483)

AIN Switch14

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1796		

Description

This is an output from the General Analog Input 14 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 14 On** (page 275) and **Analog Switch 14 Off** (page 275). The value is measured from **AIN SWITCH 14** (PAGE 542) analog input.

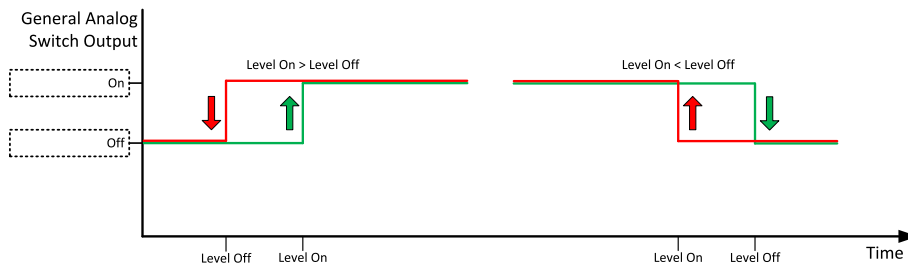


Image 8.126 General analog input 14 switch

Logical binary outputs alphabetically (page 483)

AIN Switch15

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1797		

Description

This is an output from the General Analog Input 15 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 15 On** (page 277) and **Analog Switch 15 Off** (page 277). The value is measured from **AIN SWITCH 15** (PAGE 542) analog input.

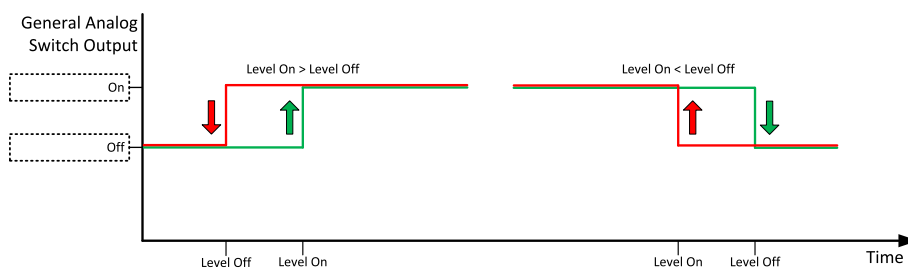


Image 8.127 General analog input 15 switch

Logical binary outputs alphabetically (page 483)

AIN Switch16

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1798		

Description

This is an output from the General Analog Input 16 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 16 On** (page 279) and **Analog Switch 16 Off** (page 279). The value is measured from **AIN SWITCH 16** (PAGE 543) analog input.

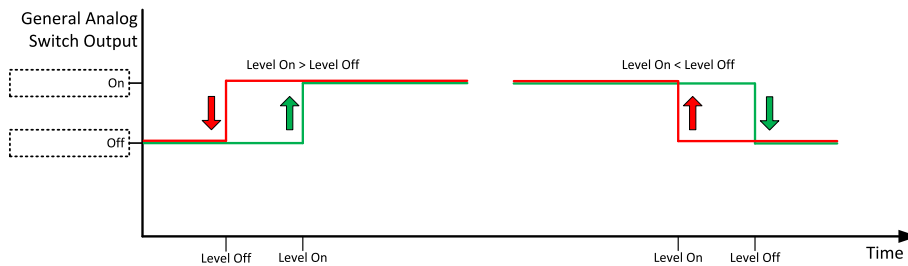


Image 8.128 General analog input 16 switch

Logical binary outputs alphabetically (page 483)

AIN Switch17

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1799		

Description

This is an output from the General Analog Input 17 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 17 On** (page 281) and **Analog Switch 17 Off** (page 281). The value is measured from **AIN SWITCH 17** (PAGE 543) analog input.

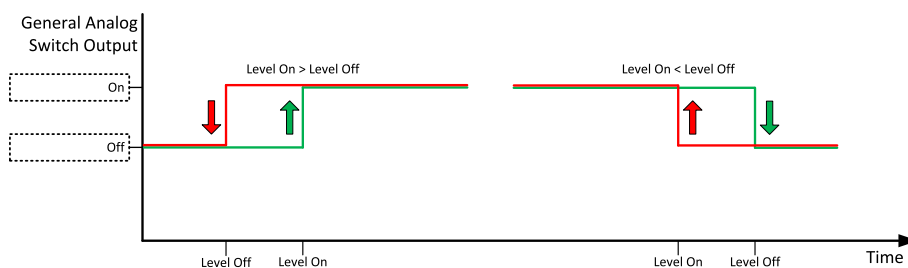


Image 8.129 General analog input 17 switch

Logical binary outputs alphabetically (page 483)

AIN Switch18

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1800		

Description

This is an output from the General Analog Input 18 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 18 On** (page 283) and **Analog Switch 18 Off** (page 283). The value is measured from **AIN SWITCH 18** (PAGE 543) analog input.

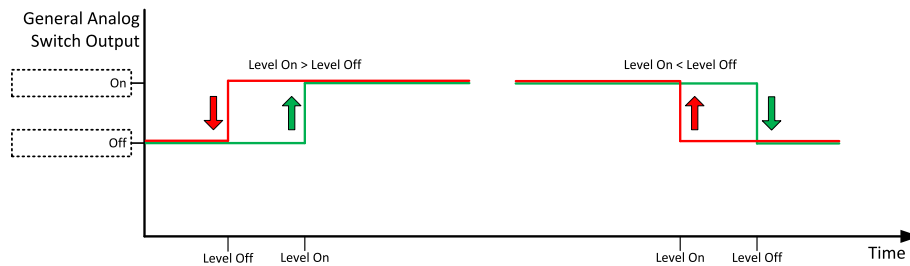


Image 8.130 General analog input 18 switch

Logical binary outputs alphabetically (page 483)

AIN Switch19

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1801		

Description

This is an output from the General Analog Input 19 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 19 On** (page 285) and **Analog Switch 19 Off** (page 285). The value is measured from **AIN SWITCH 19** (PAGE 544) analog input.

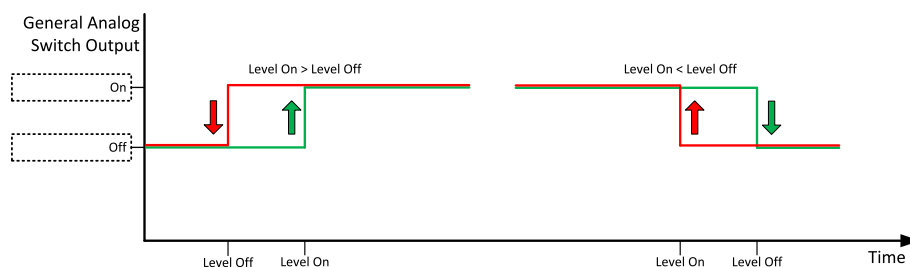


Image 8.131 General analog input 19 switch

Logical binary outputs alphabetically (page 483)

AIN Switch20

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1802		

Description

This is an output from the General Analog Input 20 switch function. The behavior of the switch depends on the adjustment of the setpoints **Analog Switch 20 On** (page 287) and **Analog Switch 20 Off** (page 287). The value is measured from **AIN SWITCH 20** (PAGE 544) analog input.

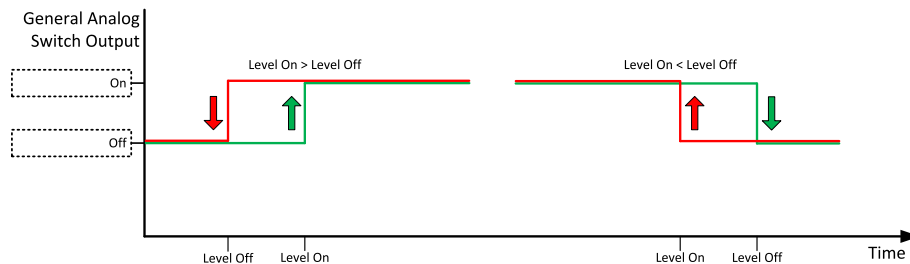


Image 8.132 General analog input 20 switch

🔍 Logical binary outputs alphabetically (page 483)

LBO: B

BIN 1 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1374		

Description

This output is closed, when Binary Input 1 is active and open when Binary Input 1 is inactive. When Binary Input 1 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.

Note: When LBI 1 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.

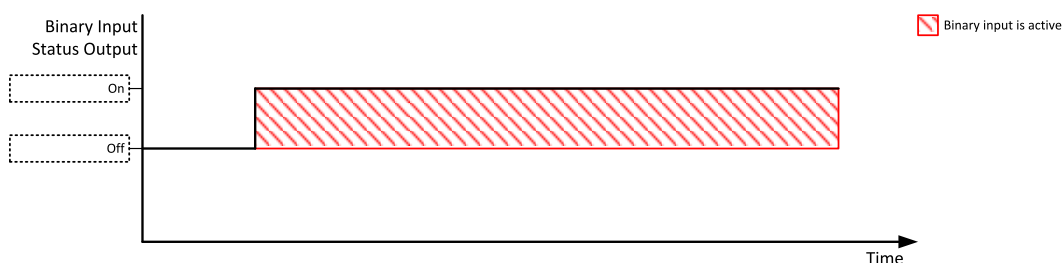


Image 8.133 Binary Input 1 Status

🔍 back to Logical binary outputs alphabetically

BIN 2 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1375		

Description

This output is closed, when Binary Input 2 is active and open when Binary Input 2 is inactive. When Binary Input 2 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.

Note: When LBI 2 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.

Image 8.134 Binary Input 2 Status

⬅ back to Logical binary outputs alphabetically

BIN 3 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1376		

Description

This output is closed, when Binary Input 3 is active and open when Binary Input 3 is inactive. When Binary Input 3 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.

Note: When LBI 3 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.

Image 8.135 Binary Input 3 Status

⬅ back to Logical binary outputs alphabetically

BIN 4 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1377		
Description			
<p>This output is closed, when Binary Input 4 is active and open when Binary Input 4 is inactive. When Binary Input 4 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 4 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 8.136 Binary Input 4 Status			

[back to Logical binary outputs alphabetically](#)

BIN 5 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1378		
Description			
<p>This output is closed, when Binary Input 5 is active and open when Binary Input 5 is inactive. When Binary Input 5 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 5 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 8.137 Binary Input 5 Status			

[back to Logical binary outputs alphabetically](#)

BIN 6 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1379		
Description			
<p>This output is closed, when Binary Input 6 is active and open when Binary Input 6 is inactive. When Binary Input 6 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 6 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 8.138 Binary Input 6 Status			

[back to Logical binary outputs alphabetically](#)

BIN 7 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1380		
Description			
<p>This output is closed, when Binary Input 7 is active and open when Binary Input 7 is inactive. When Binary Input 7 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 7 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 8.139 Binary Input 7 Status			

[back to Logical binary outputs alphabetically](#)

BIN 8 Status

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1381		
Description			
<p>This output is closed, when Binary Input 8 is active and open when Binary Input 8 is inactive. When Binary Input 8 is used for BIN protection function then this output is closed when BIN protection alarm is in Alarmlist.</p> <p>Note: When LBI 8 is used like protection, then state of this LBO is connected with this protection e.g. when LBI is inactive but alarm of protection is not confirm in alarmlist, LBO is still active.</p>			
Image 8.140 Binary Input 8 Status			

◀ back to Logical binary outputs alphabetically

Bus Healthy

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	77		
Description			
<p>This output is active when the Bus voltage and frequency is within limits.</p>			

◀ back to Logical binary outputs alphabetically

LBO: E

Exercise Timer 1

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1250		
Description			
<p>This is an output from the Exercise timer 1. This output makes it easy to make periodic tests of the gen-set and its activation depends on the setpoints in the Subgroup: Timer 1 (page 290) subgroup. This output is active when Timer 1 is active.</p> <p>Note: In the event that both Timers are active at the same time, Subgroup: Timer 1 (page 290) has a higher priority than Subgroup: Timer 2 (page 297).</p>			

◀ back to Logical binary outputs alphabetically

Exercise Timer 2

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1251		
Description			
<p>This is an output from the Exercise timer 2. This output makes it easy to make periodic tests of the gen-set and its activation depends on the setpoints in the Subgroup: Timer 2 (page 297) subgroup. This output is active when Timer 2 is active.</p> <p><i>Note: In the event that both Timers are active at the same time, Subgroup: Timer 1 (page 290) has a higher priority than Subgroup: Timer 2 (page 297).</i></p>			

⬆ back to Logical binary outputs alphabetically

LBO: F

FitRes

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	592		
Description			
<p>This output provides 1s pulse when:</p> <ul style="list-style-type: none"> ▶ Fault Reset button is pressed on the controller front facia or ▶ Fault Reset button is pressed on any of external local/remote terminals or ▶ Fault Reset command is received via communication line or ▶ the input FAULT RESET BUTTON is activated. 			

⬆ back to Logical binary outputs alphabetically

ForwardSynchro

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	592		
Description			
<p>Output is active when the forward synchronisation is active.</p>			

⬆ back to Logical binary outputs alphabetically



LBO: H

Heartbeat

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	81		
Description			
<p>This output toggles on/off in a period of 500 ms whenever the controller is switched on and functional.</p>			

⬆ back to Logical binary outputs alphabetically

Horn

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1		
Description			
<p>The output designed to be used for acoustic indication of a newly appeared alarm. The output is activated each time a new alarm has appeared and remains active until one of the following events occurs:</p> <ul style="list-style-type: none"> ▶ Fault reset  is pressed ▶ Horn reset  is pressed ▶ Horn Timeout (page 208) has elapsed 			

 back to Logical binary outputs alphabetically

LBO: I

In Mains Parallel

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	123		
Description			
Output is active in case the parallel bus voltage and mains voltage is present and breakers are closed.			

 back to Logical binary outputs alphabetically

LBO: L

Load Shedding Stage 1

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	51		
Description			
<p>Particular instances of the load shedding functionality</p> <p>The load shedding outputs are activated (load is being shedd) in the order 1, 2, 3.</p> <p>The load shedding outputs are deactivated (load is being reconnected) in the order 3, 2, 1.</p> <p>The load disconnected by the LBO Nr. 1 is the less essential load of these three possible loads instances.</p>			

 back to Logical binary outputs alphabetically

Load Shedding Stage 2

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	52		
Description			
<p>Particular instances of the load shedding functionality</p> <p>The load shedding outputs are activated (load is being shedd) in the order 1, 2, 3.</p> <p>The load shedding outputs are deactivated (load is being reconnected) in the order 3, 2, 1.</p> <p>The load disconnected by the LBO Nr. 1 is the less essential load of these three possible loads instances.</p>			

 back to Logical binary outputs alphabetically

Load Shedding Stage 3

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	53		
Description			
Particular instances of the load shedding functionality			
The load shedding outputs are activated (load is being shedd) in the order 1, 2, 3.			
The load shedding outputs are deactivated (load is being reconnected) in the order 3, 2, 1.			
The load disconnected by the LBO Nr.1 is the less essential load of these three possible loads instances.			

⬅ back to Logical binary outputs alphabetically

LBO: M

Mains Healthy


Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	78		
Description			
This output is active while Mains failure is not detected and Mains voltage and frequency is within limits.			

⬅ back to Logical binary outputs alphabetically

MCB Close/Open

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	45		
Description			
The output controls the mains circuit breaker. Its state represents the breaker position requested by the controller. The breaker must react within 5 seconds to a close or open command, otherwise an alarm is issued.			

Image 8.141 MCB Close command

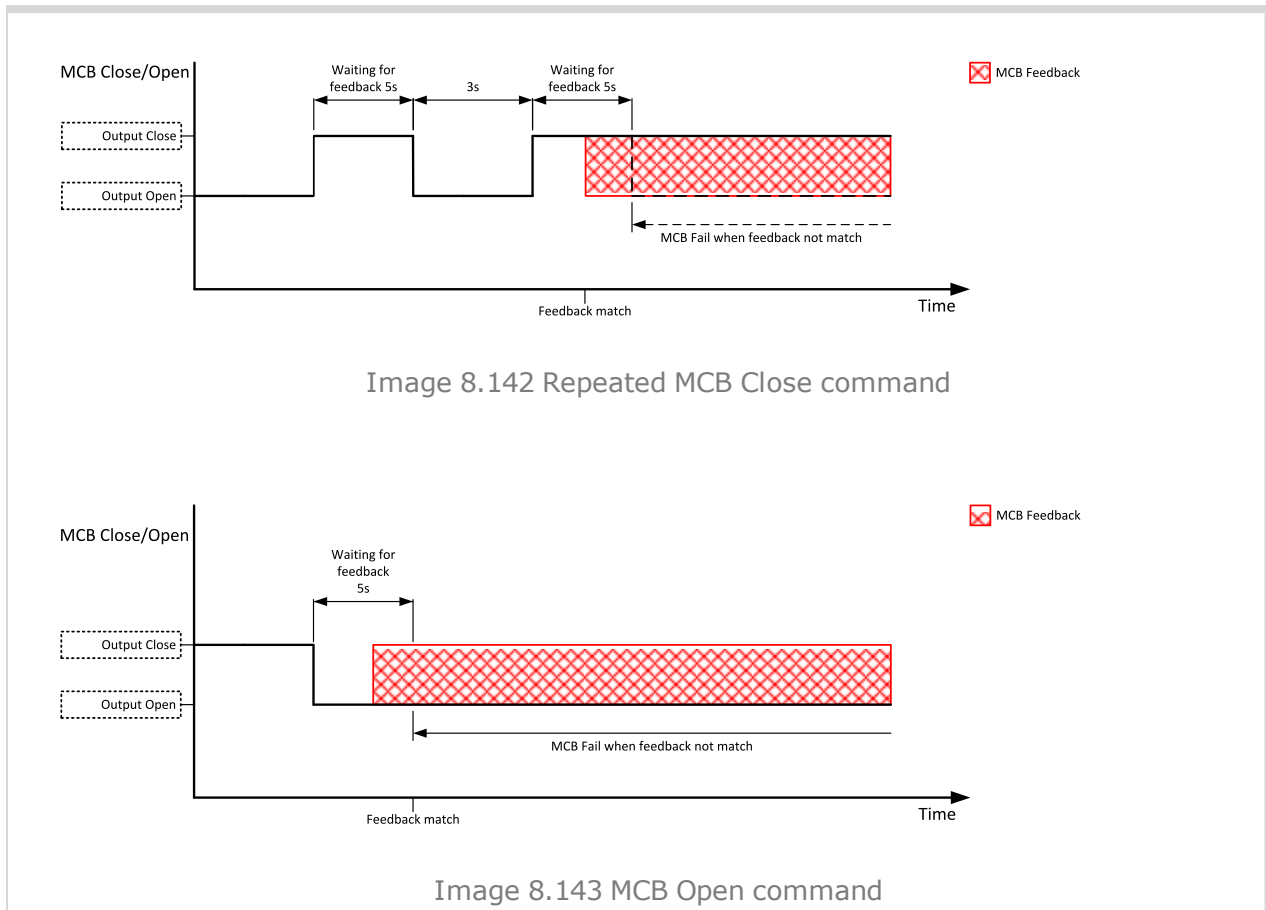

⬅ back to Logical binary outputs alphabetically

MCB OFF Coil

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	47		

Description

The output is intended for control of open coil of mains circuit breaker. The output gives a pulse in the moment the breaker has to be opened. The pulse lasts until the feedback deactivates, but at least for 5 seconds.

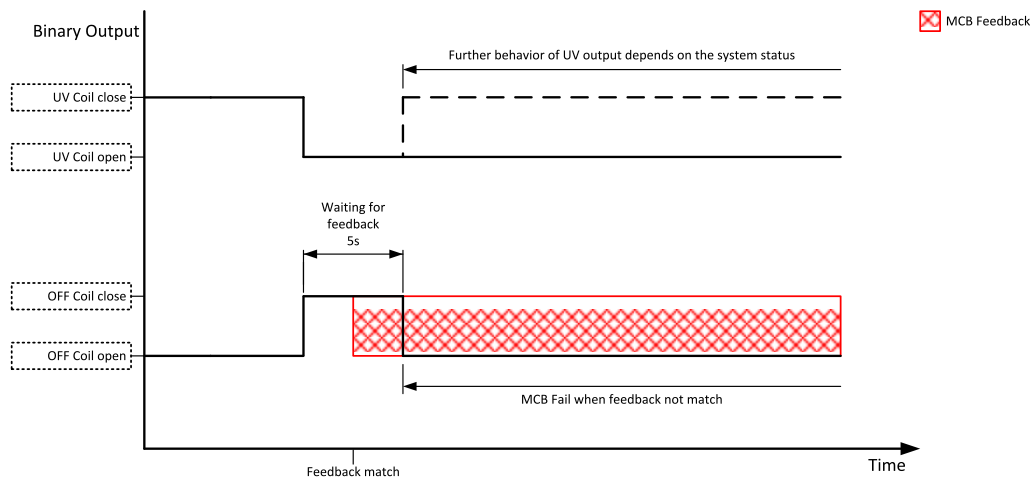


Image 8.144 MCB OFF Coil command

[back to Logical binary outputs alphabetically](#)

MCB ON Coil

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	46		

Description

The output is intended for control of close coil of mains circuit breaker. The output gives at least 5 second pulse in the moment the breaker has to be closed.

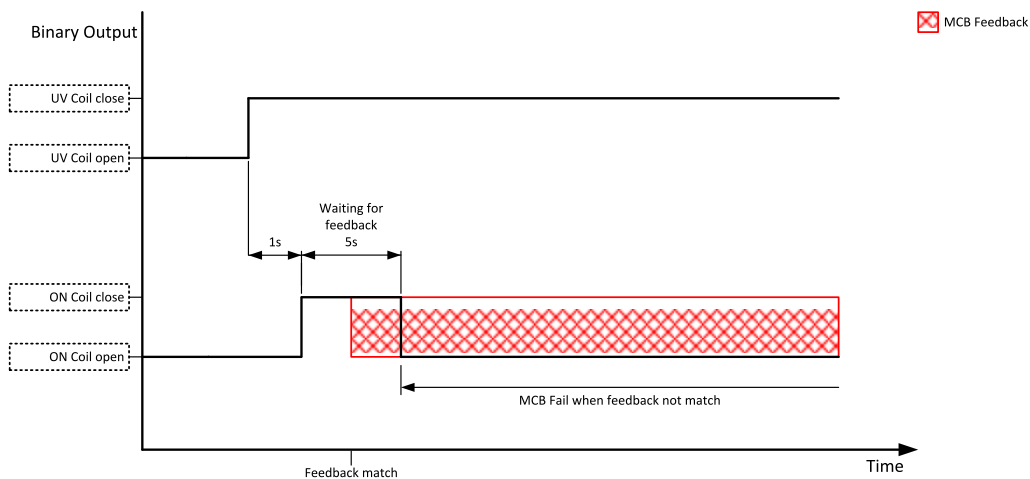


Image 8.145 MCB ON Coil close command

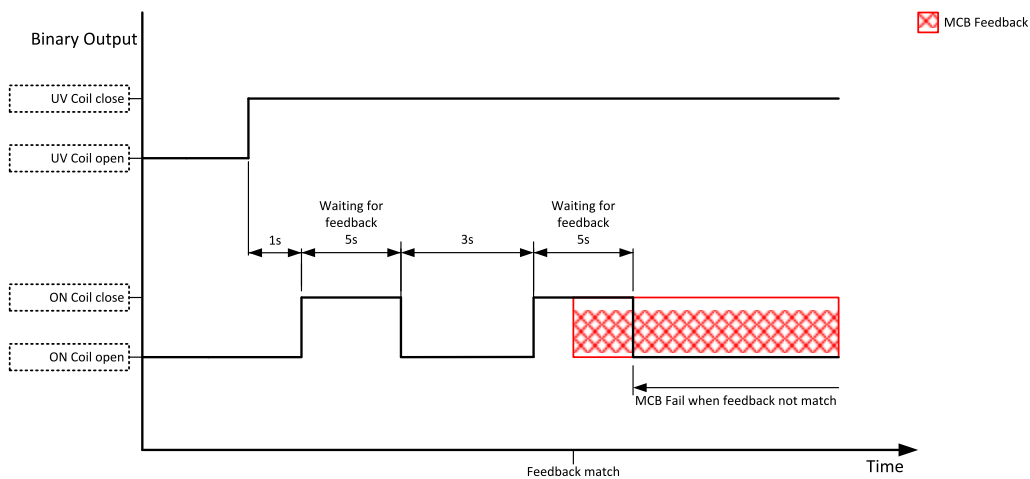


Image 8.146 Repeated MCB ON coil close command

[back to Logical binary outputs alphabetically](#)

MCB UV Coil

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	48		

Description

The output is intended for control of undervoltage coil of mains circuit breaker. The output is active the whole time when the controller is switched on. The output is deactivated for at least 5 seconds in the moment the breaker has to be switched off.

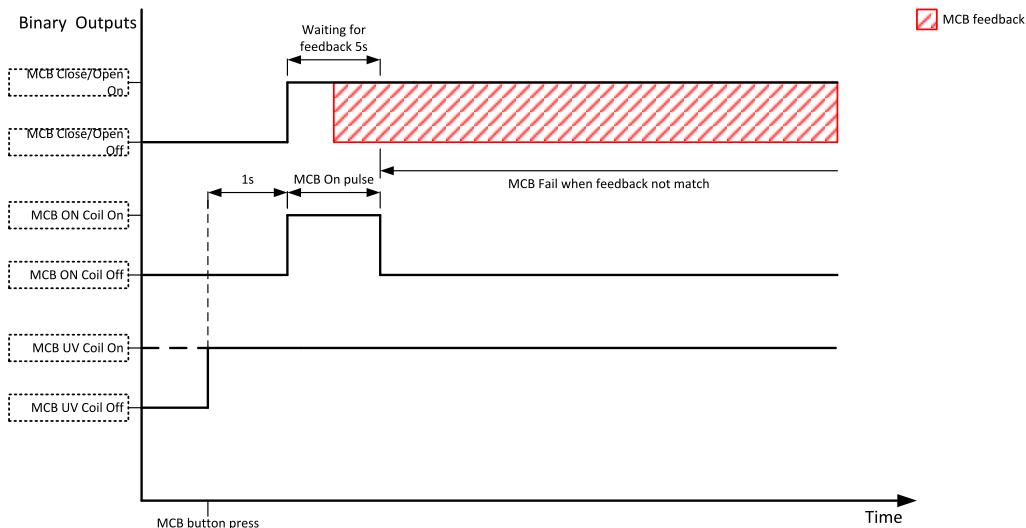


Image 8.147 MCB UV Coil close command

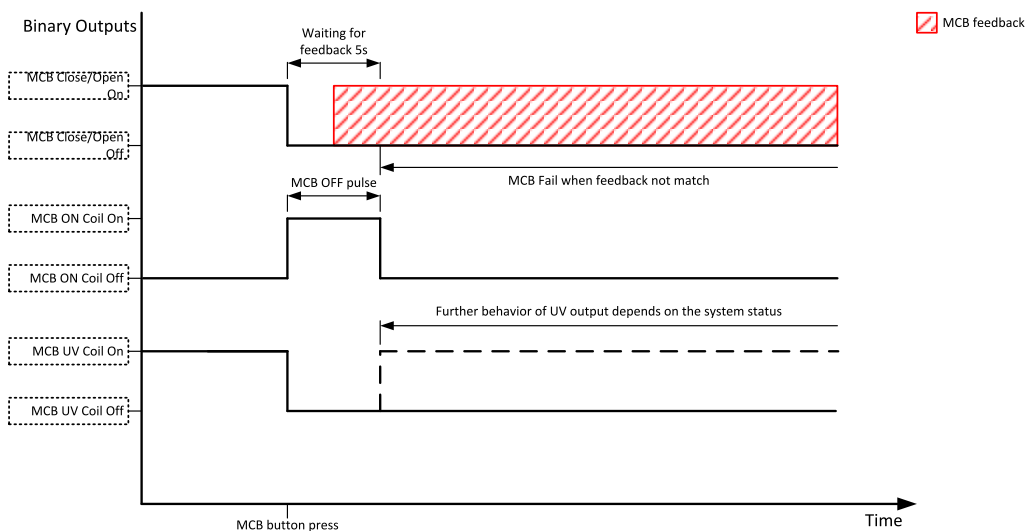


Image 8.148 MCB UV Coil open command

[back to Logical binary outputs alphabetically](#)

MGCB Close/Open

Related FW	2.0.0	Related applications	MCB, MGCB
-------------------	-------	-----------------------------	-----------

Comm object	41
--------------------	----

Description

The output controls the master generator circuit breaker. Its state represents the breaker position requested by the controller. The breaker must react within 5 seconds to a close or open command, otherwise an alarm is issued.

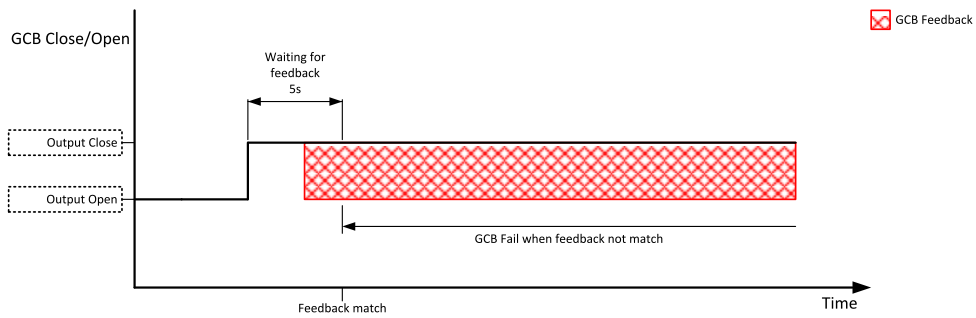


Image 8.149 MGCB Close command

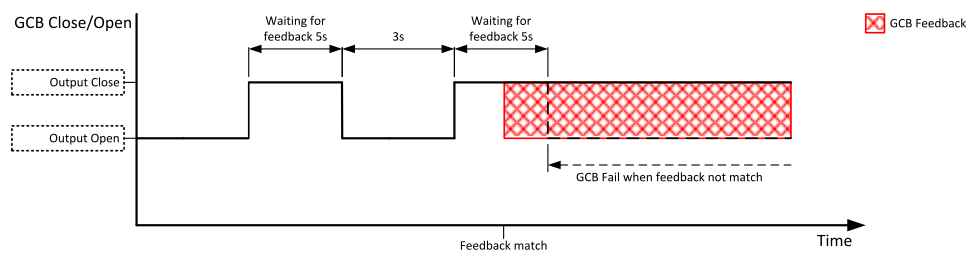


Image 8.150 Repeated MGCB Close command

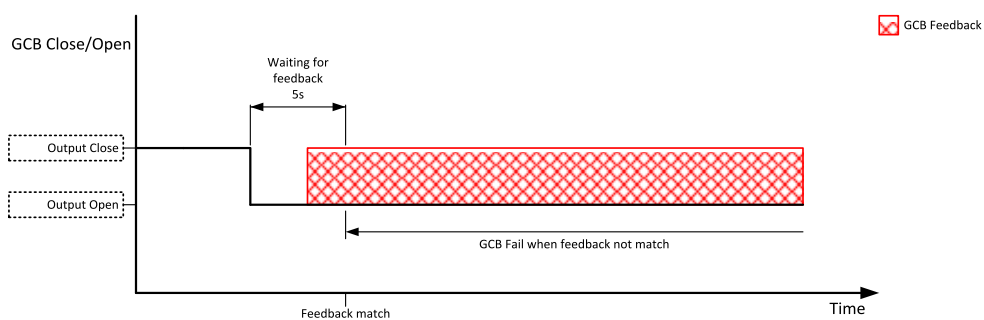


Image 8.151 MGCB Open command

[back to Logical binary outputs alphabetically](#)

MGCB OFF Coil

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	43		

Description

The output is intended for control of open coil of master generator circuit breaker. The output gives a pulse in the moment the breaker has to be opened. The pulse lasts until the feedback deactivates, but at least for 5 seconds.

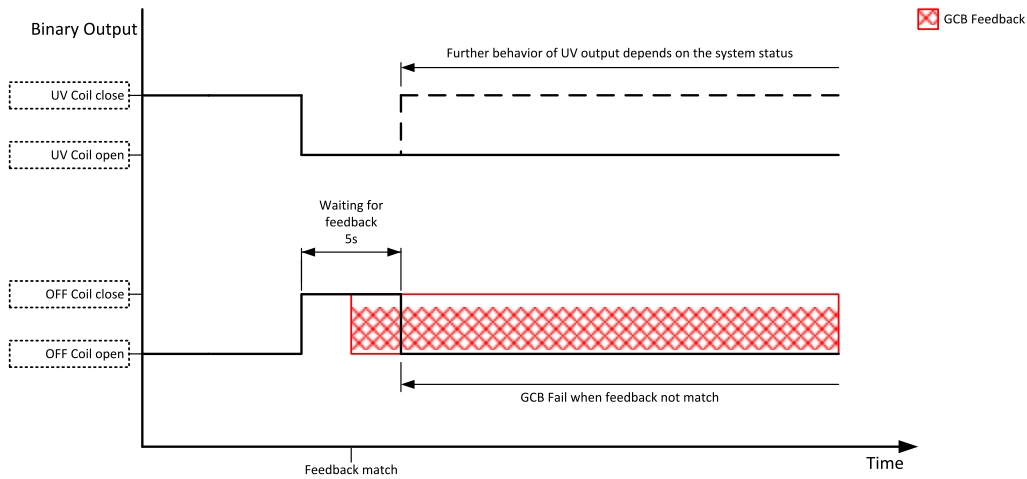


Image 8.152 MGCB OFF Coil command

[back to Logical binary outputs alphabetically](#)

MGCB ON Coil

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	42		

Description

The output is intended for control of close coil of master generator circuit breaker. The output gives at least 5 second pulse in the moment the breaker has to be closed.

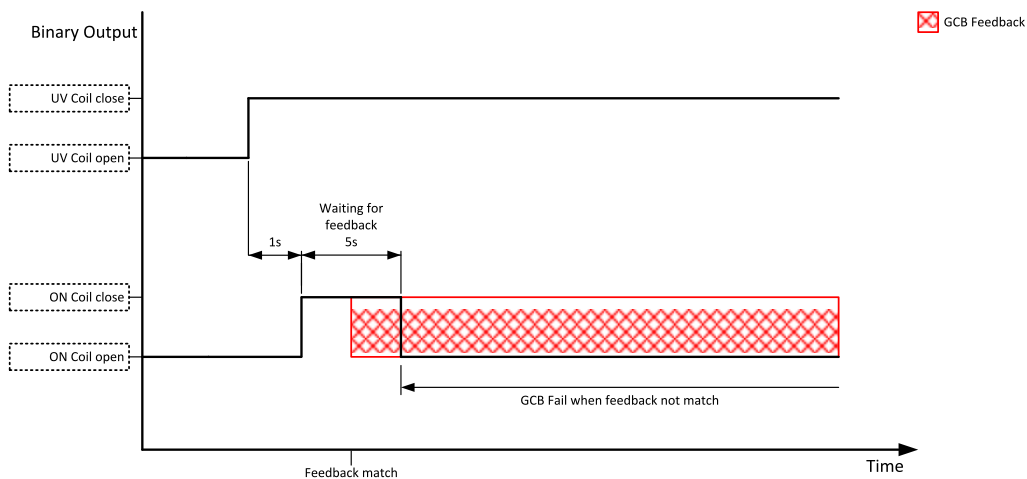


Image 8.153 MGCB ON Coil close command

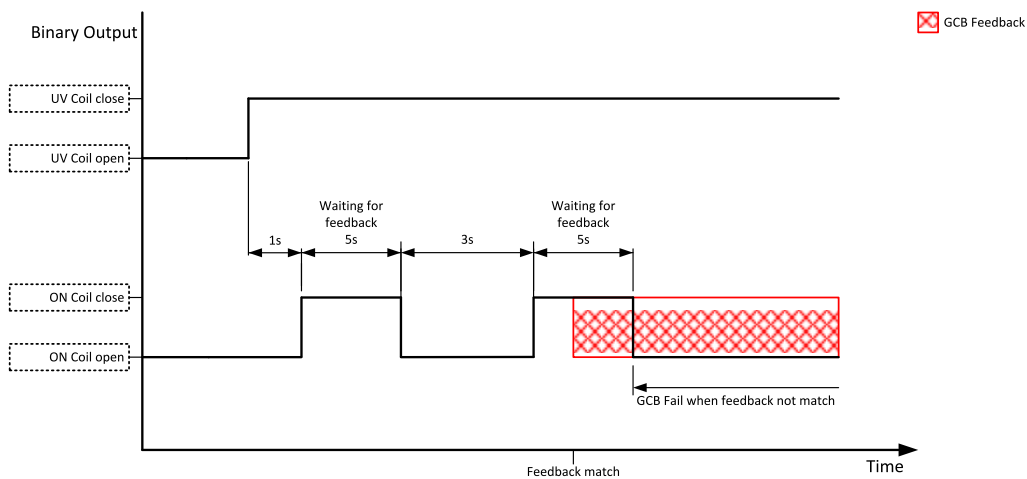


Image 8.154 Repeated MGCB ON coil close command

[back to Logical binary outputs alphabetically](#)

MGCB UV Coil

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	44		

Description

The output is intended for control of undervoltage coil of master generator circuit breaker. The output is

active in case the bus voltage is present. The output is deactivated for at least 5 seconds in the moment the breaker has to be switched off.

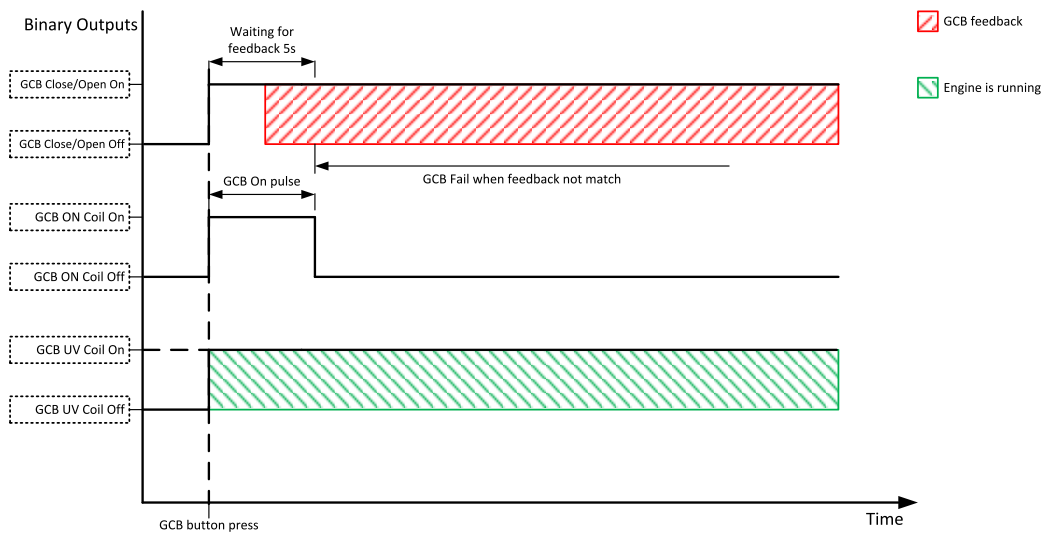


Image 8.155 MGCb UV Coil close command

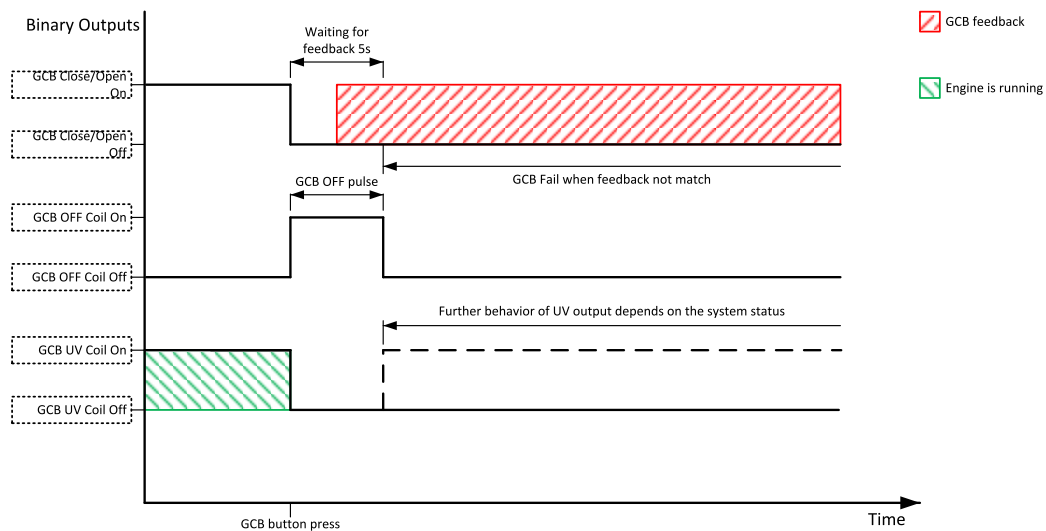


Image 8.156 MGCb UV Coil open command

[back to Logical binary outputs alphabetically](#)

Mode AUTO

Related FW	2.0.0	Related applications	MCB, MGCb, BTB
Comm object	19		
Description			
This output is active whenever the controller is in AUTO mode.			

[back to Logical binary outputs alphabetically](#)

Mode MAN

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	18		
Description			
This output is active whenever the controller is in MAN mode.			

[◀ back to Logical binary outputs alphabetically](#)

Mode OFF

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	17		
Description			
This output is active whenever the controller is in OFF mode.			

[◀ back to Logical binary outputs alphabetically](#)

Mode TEST

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	20		
Description			
This output is active whenever the controller is in TEST mode.			

[◀ back to Logical binary outputs alphabetically](#)

LBO: N

Not In AUTO

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	1248		
Description			
This output is active when controller isn't in AUTO mode.			

[◀ back to Logical binary outputs alphabetically](#)

Not Used

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	286		
Description			
Output has no function.			

[◀ back to Logical binary outputs alphabetically](#)

LBO: P

Peak Shaving Active

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	2118		
Description			
Active anytime, when the peak shaving start condition is fulfilled.			

[↶ back to Logical binary outputs alphabetically](#)

LBO: R

ReverseSynchro

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	69		
Description			
The output is active in case the reverse synchronisation is active.			

[↶ back to Logical binary outputs alphabetically](#)

LBO: S

Still Log 0

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	26		
Description			
Logical binary output which is still in logical 0.			

[↶ back to Logical binary outputs alphabetically](#)

Still Log 1

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	27		
Description			
Logical binary output which is still in logical 1.			

[↶ back to Logical binary outputs alphabetically](#)

Sys Start/Stop

Related FW	2.0.0	Related applications	MCB, MGCB
Comm object	190		
Description			
<p>The output is main signal which indicates the active role of controller in following situations:</p> <ul style="list-style-type: none"> ▶ binary inputs Remote Start/Stop, Force Parallel, Force Island are active ▶ TEST mode is active ▶ AMF condition is sensed (mains fail, mains protection...) ▶ Peakshaving function is activated and condition for start are fulfilled ▶ Start Button is pressed (only in MAN mode) 			

⬆ back to Logical binary outputs alphabetically

System Reserve OK

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	87		
Description			
<p>This LBO is active when System Reserve is higher than the actual reserve for start of next gen-sets.</p>			

⬆ back to Logical binary outputs alphabetically

8.1.5 Logical analog inputs

What Logical analog inputs are:

Logical analog inputs are inputs for analog values.

Note: Functions related to analog inputs are available only in case of configured analog extension module.

Alphabetical groups of Logical analog inputs

LAI: A	518
LAI: M	544
LAI: N	544

For full list of Logical analog inputs go to the chapter **Logical analog inputs alphabetically (page 517)**.

Logical analog inputs alphabetically

AIN Prot01	518	AIN Switch 18	543
AIN Prot02	519	AIN Switch 19	544
AIN Prot03	520	AIN Switch 20	544
AIN Prot04	521	Mains Import	
AIN Prot05	522	Measurement	544
AIN Prot06	523	Not Used	544
AIN Prot07	524		
AIN Prot08	525		
AIN Prot09	526		
AIN Prot10	527		
AIN Prot11	528		
AIN Prot12	529		
AIN Prot13	530		
AIN Prot14	531		
AIN Prot15	532		
AIN Prot16	533		
AIN Prot17	534		
AIN Prot18	535		
AIN Prot19	536		
AIN Prot20	537		
AIN Switch 01	538		
AIN Switch 02	538		
AIN Switch 03	538		
AIN Switch 04	539		
AIN Switch 05	539		
AIN Switch 06	539		
AIN Switch 07	540		
AIN Switch 08	540		
AIN Switch 09	540		
AIN Switch 10	541		
AIN Switch 11	541		
AIN Switch 12	541		
AIN Switch 13	542		
AIN Switch 14	542		
AIN Switch 15	542		
AIN Switch 16	543		
AIN Switch 17	543		

LAI: A

AIN Prot01

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9999		
Description			
<p>Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints Analog Protection 1 Wrn (page 248) and Analog Protection 1 Sd (page 248). Delay is adjusted by setpoint Analog Protection 1 Delay (page 248).</p>			
Protection types			
Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.		
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.		
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.		
Wrn	Analog value is used for warning protection only.		
Wrn+Stp	Analog value is used for warning and slow stop protection		
Stp	Analog value is used for slow stop protection		
Wrn+MPR	Analog value is used for warning and mains protection		
MPR	Analog value is used for mains protection		
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			
Alarm			
Under limit	Alarm is activated when value of analog input is under adjusted limits		
Over limit	Alarm is activated when value of analog input is over adjusted limits		
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.		
<p>Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.</p>			
Note: This parameter has to be adjusted via <i>InteliConfig</i> .			

 [back to Logical analog inputs alphabetically](#)

AIN Prot02

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9998		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 2 Wrn (page 250)** and **Analog Protection 2 Sd (page 250)**. Delay is adjusted by setpoint **Analog Protection 2 Delay (page 250)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot03

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9997		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 3 Wrn (page 252)** and **Analog Protection 3 Sd (page 252)**. Delay is adjusted by setpoint **Analog Protection 3 Delay (page 252)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot04

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9996		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 4 Wrn (page 254)** and **Analog Protection 4 Sd (page 254)**. Delay is adjusted by setpoint **Analog Protection 4 Delay (page 254)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot05

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9995		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 5 Wrn** (page 256) and **Analog Protection 5 Sd** (page 256). Delay is adjusted by setpoint **Analog Protection 5 Delay** (page 256).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot06

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9994		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 6 Wrn** (page 258) and **Analog Protection 6 Sd** (page 258). Delay is adjusted by setpoint **Analog Protection 6 Delay** (page 258).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot07

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9993		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 7 Wrn (page 260)** and **Analog Protection 7 Sd (page 260)**. Delay is adjusted by setpoint **Analog Protection 7 Delay (page 260)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot08

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9992		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 8 Wrn** (page 262) and **Analog Protection 8 Sd** (page 262). Delay is adjusted by setpoint **Analog Protection 8 Delay** (page 262).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot09

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9991		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 9 Wrn** (page 264) and **Analog Protection 9 Sd** (page 264). Delay is adjusted by setpoint **Analog Protection 9 Delay** (page 264).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot10

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9990		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 10 Wrn** (page 266) and **Analog Protection 10 Sd** (page 266). Delay is adjusted by setpoint **Analog Protection 10 Delay** (page 266).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot11

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9989		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 11 Wrn (page 268)** and **Analog Protection 11 Sd (page 268)**. Delay is adjusted by setpoint **Analog Protection 11 Delay (page 268)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot12

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9988		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 12 Wrn (page 270)** and **Analog Protection 12 Sd (page 270)**. Delay is adjusted by setpoint **Analog Protection 12 Delay (page 270)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot13

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9987		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 13 Wrn (page 272)** and **Analog Protection 13 Sd (page 272)**. Delay is adjusted by setpoint **Analog Protection 13 Delay (page 272)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot14

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9986		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 14 Wrn (page 274)** and **Analog Protection 14 Sd (page 274)**. Delay is adjusted by setpoint **Analog Protection 14 Delay (page 274)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot15

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9985		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 15 Wrn (page 276)** and **Analog Protection 15 Sd (page 276)**. Delay is adjusted by setpoint **Analog Protection 15 Delay (page 276)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot16

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9984		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 16 Wrn (page 278)** and **Analog Protection 16 Sd (page 278)**. Delay is adjusted by setpoint **Analog Protection 16 Delay (page 278)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot17

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9983		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 17 Wrn (page 280)** and **Analog Protection 17 Sd (page 280)**. Delay is adjusted by setpoint **Analog Protection 17 Delay (page 280)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot18

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9982		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 18 Wrn (page 282)** and **Analog Protection 18 Sd (page 282)**. Delay is adjusted by setpoint **Analog Protection 18 Delay (page 282)**.

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Prot19

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9981		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 19 Wrn** (page 284) and **Analog Protection 19 Sd** (page 284). Delay is adjusted by setpoint **Analog Protection 19 Delay** (page 284).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

 [back to Logical analog inputs alphabetically](#)

AIN Prot20

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	9980		

Description

Logical analog input designed for general value received from analog sensor. Limits for this protection are adjusted by setpoints **Analog Protection 20 Wrn** (page 286) and **Analog Protection 20 Sd** (page 286). Delay is adjusted by setpoint **Analog Protection 20 Delay** (page 286).

Protection types

Monitoring	Analog value is only measured and displayed on the LCD screen but not used for protection.
HistRecOnl	Analog value is only measured and displayed on the LCD screen but not used for protection. History record is made if value is out of the limits.
AL Indic	Analog value is not used for protection. Only alarmlist record is made if analog value is out of the limits.
Wrn	Analog value is used for warning protection only.
Wrn+Stp	Analog value is used for warning and slow stop protection
Stp	Analog value is used for slow stop protection
Wrn+MPR	Analog value is used for warning and mains protection
MPR	Analog value is used for mains protection

Note: This parameter has to be adjusted via *InteliConfig*.

Alarm

Under limit	Alarm is activated when value of analog input is under adjusted limits
Over limit	Alarm is activated when value of analog input is over adjusted limits
Under limit + fls	Alarm is activated when value of analog input is under adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.
Over limit + fls	Alarm is activated when value of analog input is over adjusted limits. If sensor fail is detected then the alarm with higher level is activate as well.

Example: Protection type is Wrn + Sd. When sensor fail is detected then Sd alarm will be activated + Sensor fail alarm will be activated.

Note: This parameter has to be adjusted via *InteliConfig*.

[🔍 back to Logical analog inputs alphabetically](#)

AIN Switch 01

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	209		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH01 (PAGE 487). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 1 On (page 249) and Analog Switch 1 Off (page 249).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[⬅ back to Logical analog inputs alphabetically](#)

AIN Switch 02

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	210		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH02 (PAGE 488). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 2 On (page 251) and Analog Switch 2 Off (page 251).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[⬅ back to Logical analog inputs alphabetically](#)

AIN Switch 03

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	211		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH03 (PAGE 488). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 3 On (page 253) and Analog Switch 3 Off (page 253).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[⬅ back to Logical analog inputs alphabetically](#)

AIN Switch 04

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	212		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH04 (PAGE 489). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 4 On (page 255) and Analog Switch 4 Off (page 255).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 05

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	278		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH05 (PAGE 489). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 5 On (page 257) and Analog Switch 5 Off (page 257).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 06

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	279		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH06 (PAGE 490). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 6 On (page 259) and Analog Switch 6 Off (page 259).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 07

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	280		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH07 (PAGE 490). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 7 On (page 261) and Analog Switch 7 Off (page 261).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[◀ back to Logical analog inputs alphabetically](#)

AIN Switch 08

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	281		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH08 (PAGE 491). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 8 On (page 263) and Analog Switch 8 Off (page 263).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[◀ back to Logical analog inputs alphabetically](#)

AIN Switch 09

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	282		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH09 (PAGE 491). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 9 On (page 265) and Analog Switch 9 Off (page 265).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[◀ back to Logical analog inputs alphabetically](#)

AIN Switch 10

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	283		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH10 (PAGE 492). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 10 On (page 267) and Analog Switch 10 Off (page 267).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 11

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	284		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH11 (PAGE 492). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 11 On (page 269) and Analog Switch 11 Off (page 269).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 12

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	285		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH12 (PAGE 493). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 12 On (page 271) and Analog Switch 12 Off (page 271).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 13

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	286		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH13 (PAGE 493). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 13 On (page 273) and Analog Switch 13 Off (page 273).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 14

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	287		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH14 (PAGE 494). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 14 On (page 275) and Analog Switch 14 Off (page 275).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 15

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	288		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH15 (PAGE 494). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 15 On (page 277) and Analog Switch 15 Off (page 277).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 16

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	289		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH16 (PAGE 495). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 16 On (page 279) and Analog Switch 16 Off (page 279).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 17

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	290		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH17 (PAGE 495). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 17 On (page 281) and Analog Switch 17 Off (page 281).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 18

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	291		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH18 (PAGE 496). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 18 On (page 283) and Analog Switch 18 Off (page 283).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

[back to Logical analog inputs alphabetically](#)

AIN Switch 19

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	292		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH19 (PAGE 496). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 19 On (page 285) and Analog Switch 19 Off (page 285).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

⬅ back to Logical analog inputs alphabetically

AIN Switch 20

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	293		
Description			
<p>Logical analog input designed for general value received from analog sensor. This analog input controls logical binary output AIN SWITCH20 (PAGE 497). The behavior of the switch depends on the adjustment of the setpoints Analog Switch 20 On (page 287) and Analog Switch 20 Off (page 287).</p> <p>IMPORTANT: This analog input has no protection. Input is designed only to control appropriate logical binary output.</p>			

⬅ back to Logical analog inputs alphabetically

LAI: M

Mains Import Measurement

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	5		
Description			
<p>Value from this input is used in load transfer from mains to generator. Load transfer is considered to be finished when this value is lower then Unload MCB Open Window (page 243)</p>			

⬅ back to Logical analog inputs alphabetically

LAI: N

Not Used

Related FW	2.0.0	Related applications	MCB, MGCB, BTB
Comm object	230		
Description			
<p>Input has no function.</p>			

⬅ back to Logical analog inputs alphabetically

8.1.6 PLC

List of PLC groups

Group: Basic Logical functions	547
Group: Comparison of analog inputs	550
Group: Time functions	552
Group: Other functions	556

For full list of PLC blocks go to the chapter **List of PLC blocks (page 546)**.

List of PLC blocks

Group: Basic logical functions

OR/AND	547
XOR/RS	549

Group: Comparison of analog inputs

Comparator With Hysteresis	550
Comparator With Delay ..	551

Group: Time functions


Timer	552
Delay	554

Group: Other functions

Force History Record	556
Force Protection	556

Group: Basic Logical functions

OR/AND

PLC group	Basic logical functions	
Related FW	2.0.0	
Related applications	AMF, MRS MINT, SPTM	
Comm object	1	

Inputs

Input	Type	Negation	Range	Function
Input 1..8	Binary	Yes	0/1	Inputs 1..8

Outputs

Output	Type	Negation	Range	Function
Output	Binary	Yes	0/1	Result of the logical operation

Description

The block performs logical operation OR / AND of 2 - 8 binary operands. The inputs as well as the output can be inverted.


Function OR

Input 1	Input 2	Output
0	0	0
0	1	1
1	0	1
1	1	1

Function AND


Input 1	Input 2	Output
0	0	0
0	1	0
1	0	0
1	1	1

There have to be at least 2 inputs every time. There may be up to 8 inputs configured.

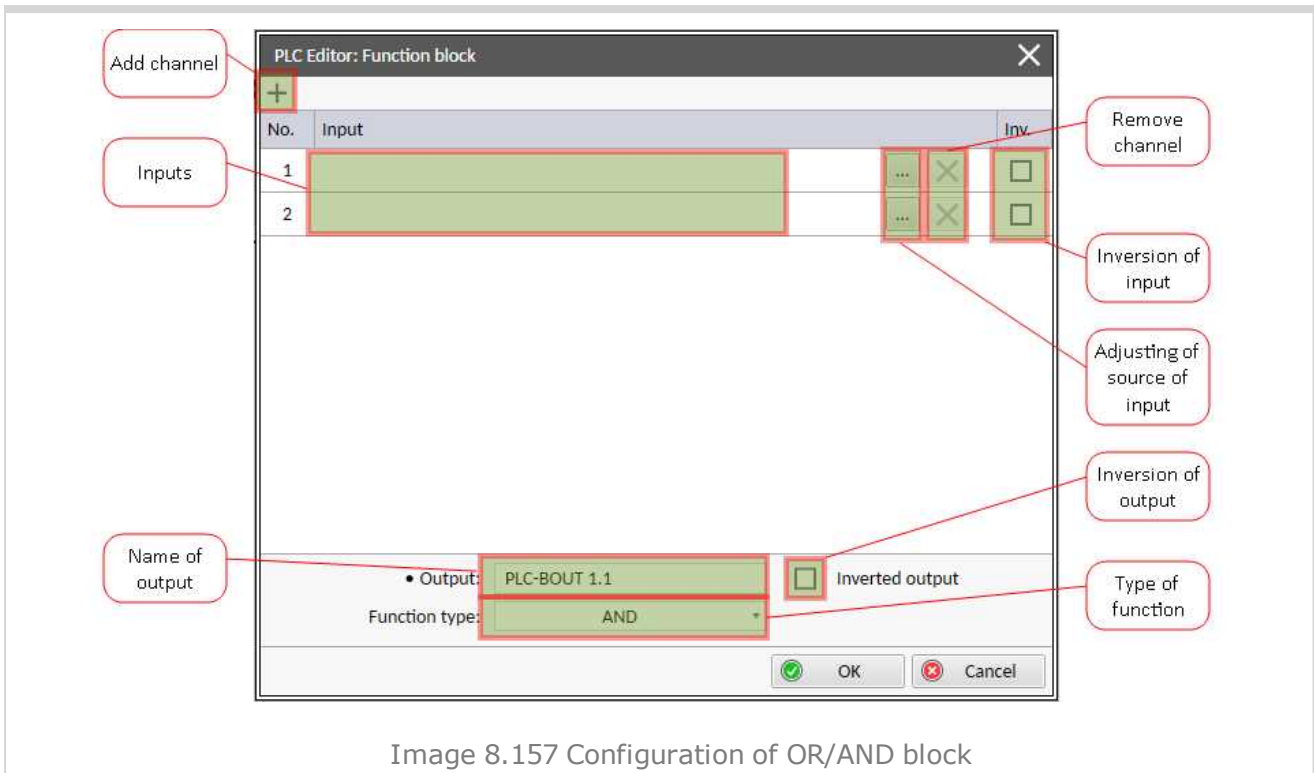

 [back to List of PLC blocks](#)

XOR/RS

PLC group	Basic logical functions	
Related FW	2.0.0	
Related applications	AMF, MRS MINT, SPTM	
Comm object	2	

Inputs

Input	Type	Negation	Range	Function
Input 1..2	Binary	Yes	0/1	Inputs 1..2

Outputs

Output	Type	Negation	Range	Function
Output	Binary	Yes	0/1	Result of the logical operation

Description

The block provides logical function of two values - XOR or RS flip-flop. Both inputs and output can be inverted.

Function XOR

Input 1	Input 2	Output
0	0	0
0	1	1
1	0	1
1	1	0

Function RS

R	S	Q _{n+1}
0	0	Q _n
0	1	1
1	0	0
1	1	0

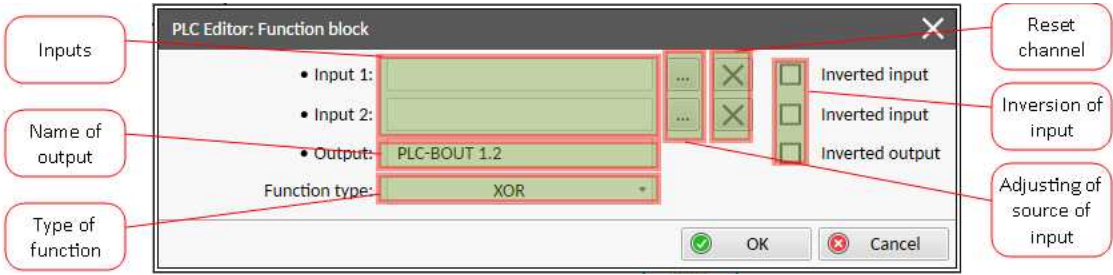


Image 8.158 Configuration of XOR/RS block

[back to List of PLC blocks](#)

Group: Comparison of analog inputs

Comparator With Hysteresis

PLC group	Comparison of analog inputs	
Related FW	2.0.0	
Related applications	AMF, MRS MINT, SPtM	
Comm object	3	

Inputs				
Input	Type	Negation	Range	Function
Input	Analog	No	Any	Compared value
Input ON	Analog	No	Same as Input	Comparative level for switching on
Input OFF	Analog	No	Same as Input	Comparative level for switching off

Outputs				
Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Comparator output

Description

The block compares the input value with the comparative levels. The behavior depends on whether the ON level is higher than OFF level or vice versa.

Image 8.159 Different On and Off levels

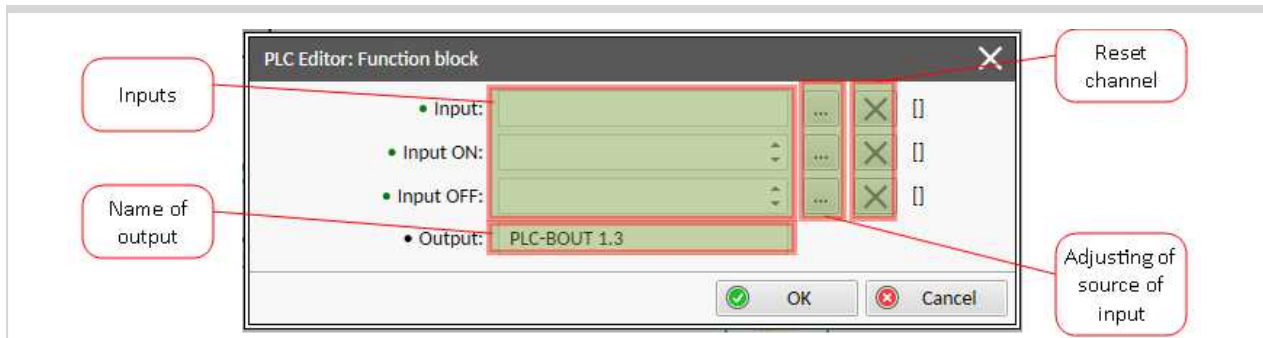


Image 8.160 Configuration of Comp Hyst block

Note: Level On and Level Off can be constants or values from controller.

IMPORTANT: In case that values on inputs have different decimal numbers than the values are converted and the name of block is red. It is strongly recommended to use values with the same decimal numbers.

⬅ back to List of PLC blocks

Comparator With Delay

PLC group	Comparison of analog inputs			
Related FW	2.0.0			
Related applications	AMF, MRS MINT, SPtM			
Comm object	4			
Inputs				
Input	Type	Negation	Range	Function
Input 1	Analog	No	Any	Compared value
Input 2	Analog	No	Same as Input 1	Comparative level
Delay	Analog	No	0.0..3000,0 [s]	Comparative delay
Outputs				
Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Comparator output
Description				
The block works as an analog switch. It compares the input value with the comparative level. The output will switch on if the input is equal or higher than the comparative level for time longer than the delay.				

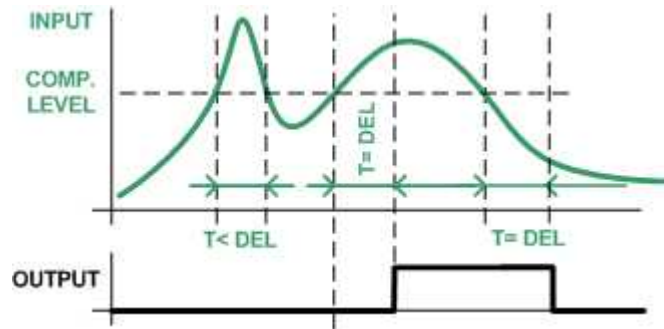


Image 8.161 Principle of delay

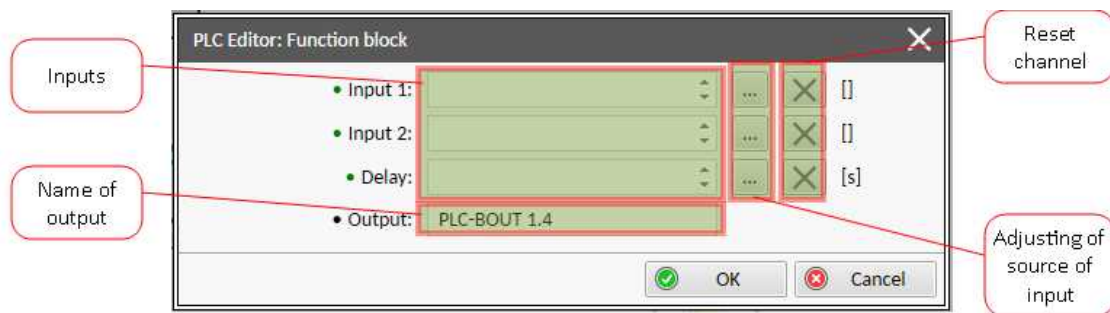



Image 8.162 Configuration of Comp Time block

Note: Input 2 and Delay can be constants or values from controller.

🔍 back to List of PLC blocks

Group: Time functions

Timer

PLC group	Time functions				
Related FW	2.0.0				
Related applications	AMF, MRS MINT, SPtM				
Comm object	14				
Inputs					
Input	Type	Negation	Range	Function	
Run	Binary	No	0/1	The timer runs only if this input is active or not connected	
Reload	Binary	No	0/1	This input reloads the timer to the initial value	
Reload value	Analog	No	0,0..3276,7 [s]	Initial value of the timer	
Outputs					

Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Timer output

Description

The block works as a countdown timer which is decreased by 1 every PLC cycle. The timer initial value is adjustable by the "Reload value" input. The timer is automatically reloaded with the initial value when it reaches zero or it can be reloaded in any other moment using the "reload" input. The timer is held at reload value until the reload input is deactivated. The timer output is inverted always when the timer is reloaded.

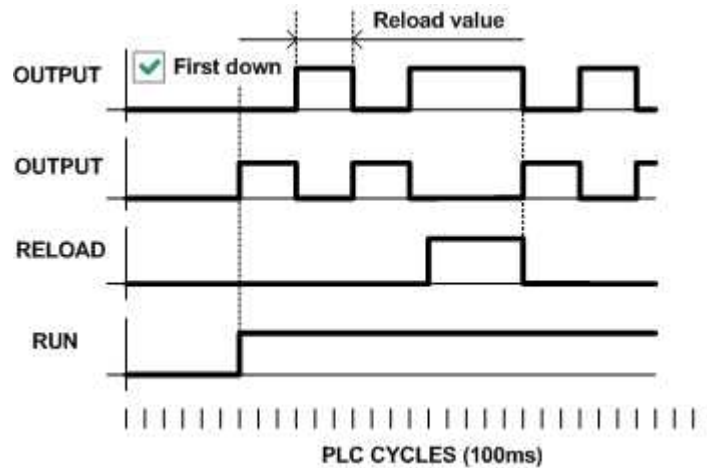


Image 8.163 Principle of timer

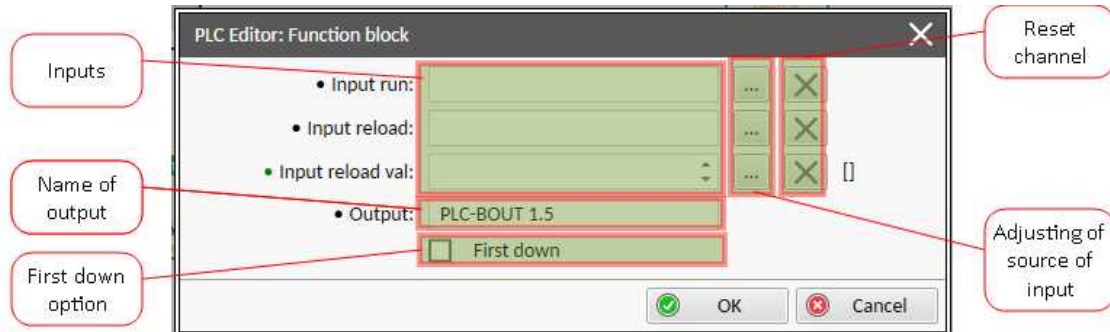


Image 8.164 Configuration of Timer block


Note: Input reload value can be constant or value from controller.

Note: If you want the output to start at logical 0, tick First down option. Otherwise the output will start at logical 1.

IMPORTANT: In case that inputs are not connected and First down option isn't tick, than output is active.

 back to List of PLC blocks

Delay

PLC group	Time functions			
Related FW	2.0.0			
Related applications	AMF, MRS MINT, SPTM			
Comm object	33			
Inputs				
Input	Type	Negation	Range	Function
Input	Binary	No	0/1	Input signal to be delayed
Input time up	Analog	No	-3200,0..3200,0 [s, m, h]	Delay of the rising edge resp. pulse length generated by rising edge of the input
Input time down	Analog	No	-3200,0..3200,0 [s, m, h]	Delay of the falling edge resp. pulse length generated by falling edge of the input
Input reset	Binary	No	0/1	Resets the output to logical 0. The output remains in logical 0 until new rising edge appears on Input (when Input reset is deactivated already)
Outputs				
Output	Type	Negation	Range	Function
Output	Binary	No	0/1	Output signal
Description				
<p>This block can work in two modes of operation:</p> <ul style="list-style-type: none"> ▶ Delay mode - the rising edge at the output is generated with delay of "input time up" when a rising edge at the input is detected. The falling edge at the output is generated with delay of "input time down" when a falling edge at the input is detected. If the delayed falling edge at the output came earlier than the delayed rising edge, then no pulse would be generated at the output. ▶ Pulse mode - a pulse of "input time up" length is generated at the output when a rising edge is detected, a pulse of "input time down" length is generated at the output when a falling edge is detected. 				

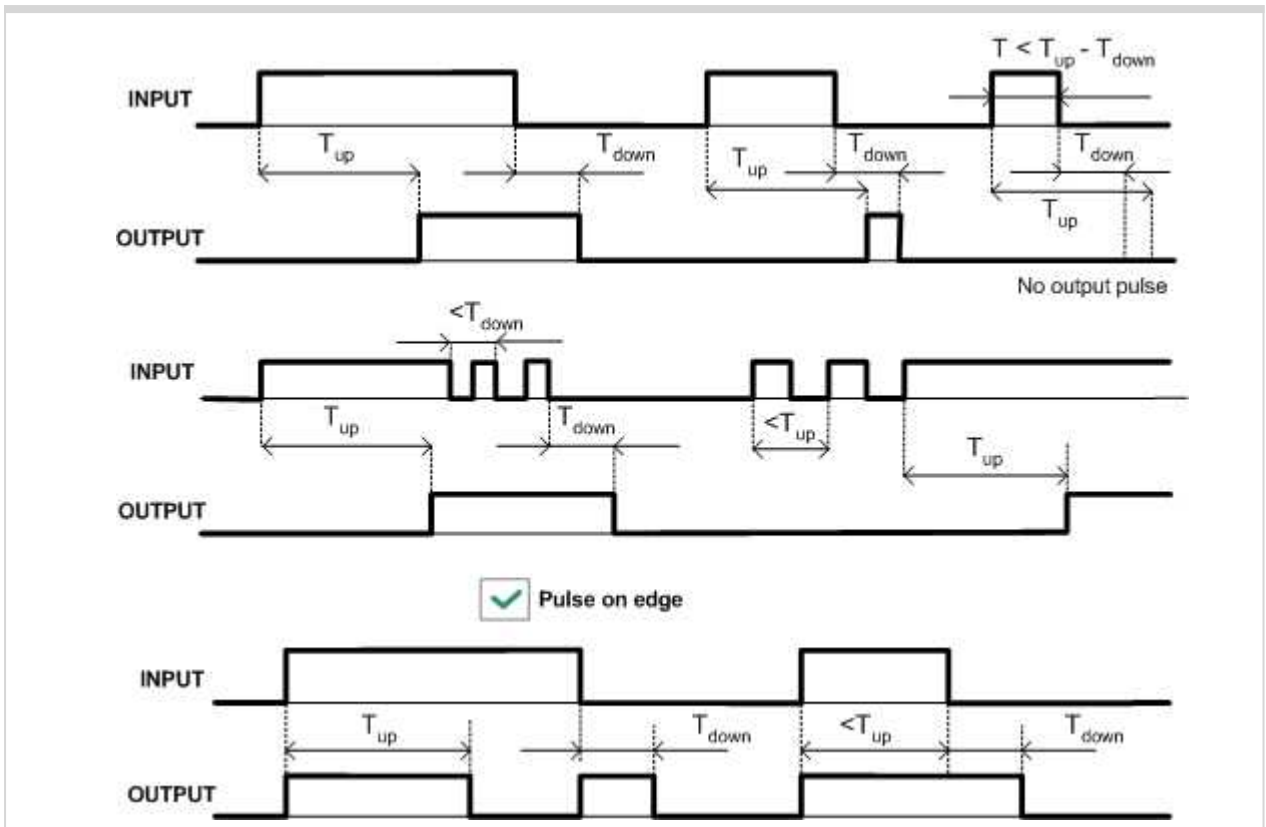


Image 8.165 Delay modes principles

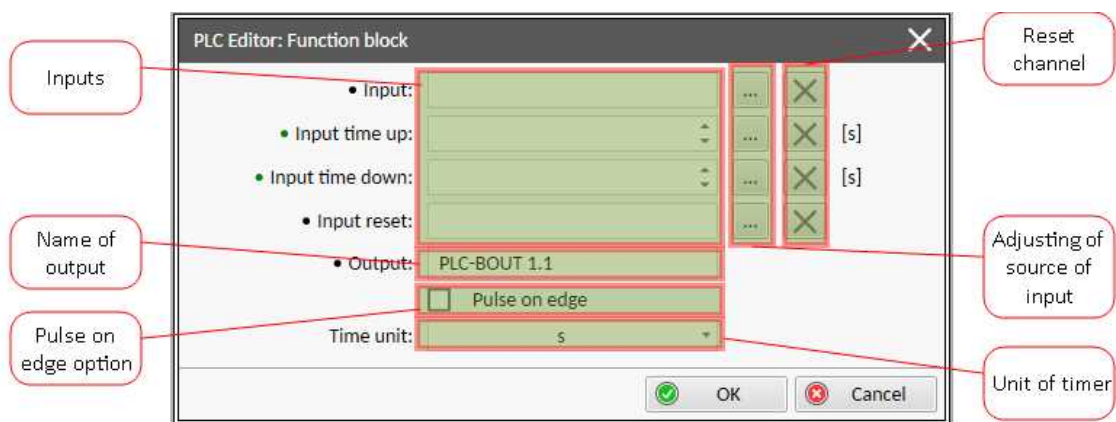


Image 8.166 Configuration of Delay block

Note: If Input time up or Input time down value is <0 , this input is internally set to zero.


Note: Input time up and Input time down values can be constants or values from controller.

Note: Use Pulse on edge option to choose between delay and pulse mode.

 back to List of PLC blocks

Group: Other functions

Force History Record

PLC group	Other functions	
Related FW	2.0.0	
Related applications	AMF, MRS MINT, SPtM	
Comm object	9	

Inputs

Input	Type	Negation	Range	Function
Input	Binary	No	0/1	A record with configured text is recorded into the controller history when the input is activated.

Outputs

No outputs.

Description

This block writes a record with defined text into the history when the input is activated.

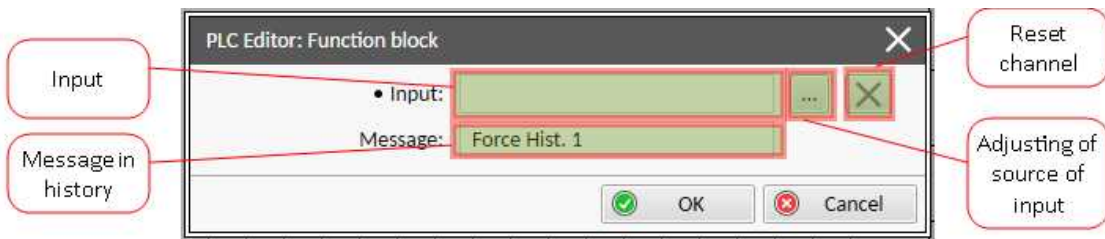



Image 8.167 Configuration of Force Hist block

Note: Maximal number of characters for history message is 15.

⬅ back to List of PLC blocks

Force Protection

PLC group	Other functions	
Related FW	2.0.0	
Related applications	AMF, MRS MINT, SPtM	
Comm object	10	

Inputs

Input	Type	Negation	Range	Function
Lvl 1	Binary	No	0/1	The input activates yellow level of the configured protection if it is configured
Lvl 2	Binary	No	0/1	The input activates red level of the configured protection if a red level protection is configured
Fls	Binary	No	0/1	The input activates sensor fail if a fls protection is configured

Outputs

No outputs.

Description

This block issues alarms of configured type and text when appropriate binary input is activated.

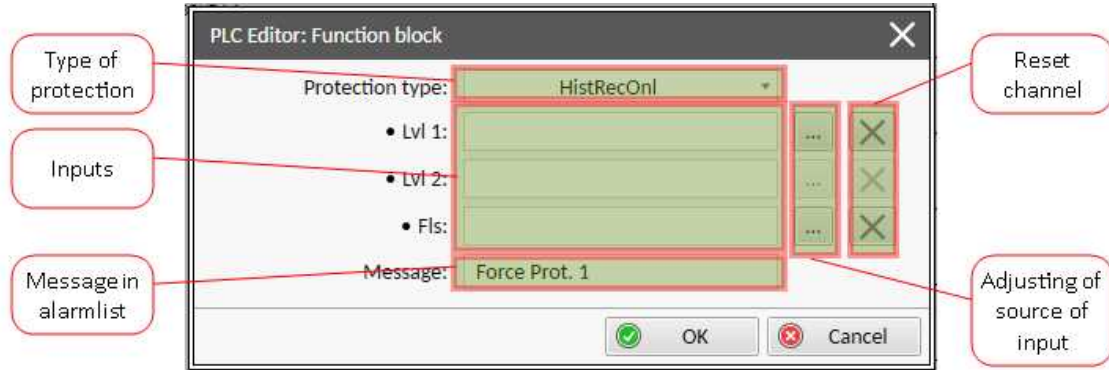


Image 8.168 Configuration of Force Prot block

Available protections are:

- ▶ Monitoring
- ▶ HistRecOnI
- ▶ AL Indic
- ▶ Wm
- ▶ Wm+BOC
- ▶ BOC
- ▶ Wm+Sd
- ▶ Sd

Note: Maximal number of characters for alarmlist message is 15.

Note: Prefix of protection (e.g. Wm, Sd, BOC) is added automatically into alarmlist message.

 [back to List of PLC blocks](#)

8.2 Alarms

8.2.1 Alarms level 1	558
8.2.2 Alarms level 2	577
8.2.3 Fail sensor and other types	587

What alarms are:

The controller evaluates two levels of alarms. For more information **see Alarm management on page 116**.

8.2.1 Alarms level 1

Warnings	560
Other type	568

For full list of Alarms level 1 go to **List of alarms level 1 (page 559)**.

What alarms level 1 are:

The level 1 alarm indicates that a value or parameter is out of normal limits, but has still not reached critical level. For more information **see Alarm types - Level 1 on page 117**.

List of alarms level 1

Alarm Email 1 Fail	560	Bus L3L1 Overvoltage	571
Alarm Email 2 Fail	560	Bus L3L1 Undervoltage ...	571
Alarm Email 3 Fail	560	Bus Overfrequency	572
Alarm Email 4 Fail	560	Bus Underfrequency	572
Alarm SMS 1 Fail	561	Bus Voltage Unbalance ..	572
Alarm SMS 2 Fail	561	EM(A) - a message lost ...	572
Alarm SMS 3 Fail	561	EM(A) - configuration	
Alarm SMS 4 Fail	561	mistake	573
Wrn Battery Voltage	562	EM(A) - insufficient	573
Event Email 1 Fail	562	EM(A) - missing or	
Event Email 2 Fail	562	damaged	573
Event Email 3 Fail	562	EM(B) - a message lost ...	573
Event Email 4 Fail	563	EM(B) - configuration	
Event SMS 1 Fail	563	mistake	574
Event SMS 2 Fail	563	EM(B) - insufficient	574
Event SMS 3 Fail	563	EM(B) - missing or	
Event SMS 4 Fail	564	damaged	574
Bus CCW Rotation	564	Module(slotA) - comm.	
Mains CCW Rotation	564	outage	574
Soft Transfer Fail	564	Module(slotA) - false	
Wrn AIN Prot	565	module	574
Wrn BadPwrCfg	565	Module(slotA) -	
Wrn BIN Protection	565	unattended	575
Wrn MCB Fail	565	Module(slotA) -	
Wrn MGCB Fail	566	unexpected	575
Wrn Overload	566	Module(slotA) - unknown	
Wrn Reverse Synchro Fail	567	module	575
Bus L1 Overvoltage	568	Module(slotB) - comm.	
Bus L1 Undervoltage	568	outage	575
Bus L1L2 Overvoltage ...	568	Module(slotB) - false	
Bus L1L2 Undervoltage ...	569	module	576
Bus L2 Overvoltage	569	Module(slotB) -	
Bus L2 Undervoltage	569	unattended	576
Bus L2L3 Overvoltage ...	570	Module(slotB) -	
Bus L2L3 Undervoltage ...	570	unexpected	576
Bus L3 Overvoltage	570	Module(slotB) - unknown	
Bus L3 Undervoltage	571	module	576

Warnings

Alarm Email 1 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 1 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 1 (page 325) and email wasn't send.

[⬅ back to List of alarms level 1](#)

Alarm Email 2 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 2 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 2 (page 326) and email wasn't send.

[⬅ back to List of alarms level 1](#)

Alarm Email 3 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 3 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 3 (page 326) and email wasn't send.

[⬅ back to List of alarms level 1](#)

Alarm Email 4 Fail

Alarm Type	Other
Alarmlist message	Alarm Email 4 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm email to email address which is adjusted in setpoint Email Address 4 (page 326) and email wasn't send.

[⬅ back to List of alarms level 1](#)

Alarm SMS 1 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 1 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 1 (page 322) and SMS wasn't send.

⬅ back to List of alarms level 1

Alarm SMS 2 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 2 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 2 (page 322) and SMS wasn't send.

⬅ back to List of alarms level 1

Alarm SMS 3 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 3 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 3 (page 323) and SMS wasn't send.

⬅ back to List of alarms level 1

Alarm SMS 4 Fail

Alarm Type	Other
Alarmlist message	Alarm SMS 4 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an alarm SMS to telephone number which is adjusted in setpoint Telephone Number 4 (page 323) and SMS wasn't send.

⬅ back to List of alarms level 1

Wrn Battery Voltage

Alarm Type	Warning
Alarmlist message	Wrn Battery Voltage
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm informs the operator that the controller supply voltage is out of limits. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Battery Undervoltage (page 208) ▶ Battery Overvoltage (page 209) ▶ Battery <> Voltage Delay (page 209)

⬅ back to List of alarms level 1

Event Email 1 Fail

Alarm Type	Other
Alarmlist message	Event Email 1 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 1 (page 325) and email wasn't send.</p>

⬅ back to List of alarms level 1

Event Email 2 Fail

Alarm Type	Other
Alarmlist message	Event Email 2 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 2 (page 326) and email wasn't send.</p>

⬅ back to List of alarms level 1

Event Email 3 Fail

Alarm Type	Other
Alarmlist message	Event Email 2 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 3 (page 326) and email wasn't send.</p>

⬅ back to List of alarms level 1

Event Email 4 Fail

Alarm Type	Other
Alarmlist message	Event Email 4 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an event email to email address which is adjusted in setpoint Email Address 4 (page 326) and email wasn't send.

⬅ back to List of alarms level 1

Event SMS 1 Fail

Alarm Type	Other
Alarmlist message	Event SMS 1 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 1 (page 322) and SMS wasn't send.

⬅ back to List of alarms level 1

Event SMS 2 Fail

Alarm Type	Other
Alarmlist message	Event SMS 2 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 2 (page 322) and SMS wasn't send.

⬅ back to List of alarms level 1

Event SMS 3 Fail

Alarm Type	Other
Alarmlist message	Event SMS 3 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 3 (page 323) and SMS wasn't send.

⬅ back to List of alarms level 1

Event SMS 4 Fail

Alarm Type	Other
Alarmlist message	Event SMS 4 Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The alarm indicates that there was a request to send an event SMS to telephone number which is adjusted in setpoint Telephone Number 4 (page 323) and SMS wasn't send.

⬅ back to List of alarms level 1

Bus CCW Rotation

Alarm Type	Alarm indication
Alarmlist message	Bus CCW Rotation
Alarm evaluated	All the time
Related applications	MCB, MGCB
Description	The controller detects phase sequence on bus voltage terminals. This protection is important after controller installation to avoid wrong voltage phase connection. There is a fixed defined phase sequence in InteliMains 210 controller: T35 = N, T36 = L1, T37 = L2 and T38 = L3. When the phases are connected in a different order, alarms are detected. This alarm prevent circuit breaker closing.

⬅ back to List of alarms level 1

Mains CCW Rotation

Alarm Type	Alarm indication
Alarmlist message	Mains CCW Rotation
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	The controller detects phase sequence on Mains voltage terminals. This protection is important after controller installation to avoid wrong voltage phase connection.

⬅ back to List of alarms level 1

Soft Transfer Fail

Alarm Type	Warning
Alarmlist message	Soft Transfer Fail
Alarm evaluated	During transition of load
Related applications	MCB, MGCB, BTB
Description	This alarm is issued when the unloading was not successful (Load Ramp (page 243) + 10 % gets elapsed).

⬅ back to List of alarms level 1

Wrn AIN Prot

Alarm Type	Warning
Alarmlist message	Wrn + Name of analog input
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that value the general analog protection is out of warning protection limit.

🔍 back to List of alarms level 1

Wrn BadPwrCfg

Alarm Type	Warning
Alarmlist message	Wrn BadPwrCfg
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm is issued when there is different power format on controller which are connected via CAN2.

🔍 back to List of alarms level 1

Wrn BIN Protection

Alarm Type	Warning
Alarmlist message	Wrn + Name of binary input
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	Binary input also can be adjusted like alarm. In this case message in alarmlist contains prefix - Wrn and binary input name. This alarm occurs, when appropriate binary input is active.

🔍 back to List of alarms level 1

Wrn MCB Fail

Alarm Type	Warning
Alarmlist message	Wrn MCB Fail
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>This alarm will occur when the MCB FEEDBACK (PAGE 475) input does not match the expected position given by the MCB CLOSE/OPEN (PAGE 504) output. It stays active until the mismatch between the output and feedback disappears.</p> <ul style="list-style-type: none"> ▶ If there was no command issued by the controller and the breaker (feedback) changes suddenly the position itself, the alarm will be issued immediately. ▶ Self-opening of the breaker is not considered a fault and if all mains values are within limits, the command to reclose the breaker is issued after delay given by the setpoint Mains Return Delay (page 218) has elapsed. ▶ The alarm will be also issued, if the breaker does not respond to the close command within 2 seconds. After this period has elapsed the output MCB CLOSE/OPEN (PAGE 504) is deactivated again and the next attempt to close the breaker will occur first after the alarm is reset.

⬅ back to List of alarms level 1

Wrn MGCB Fail

Alarm Type	Warning
Alarmlist message	Wrn MGCB Fail
Alarm evaluated	All the time
Related applications	MCB, MGCB
Description	<p>This alarm will occur when the MGCB FEEDBACK (PAGE 476) input does not match the expected position given by the MGCB CLOSE/OPEN (PAGE 508) output. It stays active until the mismatch between the output and feedback persists.</p> <ul style="list-style-type: none"> ▶ If there was no command issued by the controller and the breaker (feedback) changes suddenly the position itself, the alarm will be issued immediately. ▶ The alarm will be also issued if the breaker does not respond to an open or close command within 5 seconds.

⬅ back to List of alarms level 1

Wrn Overload

Alarm Type	Warning
Alarmlist message	Wrn Overload
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>The alarm is issued when the Mains power is over the limit for time period longer than the delay. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Overload Wrn (page 214) adjusts the overload limit. ▶ Overload Delay (page 214) Overload Del adjusts the delay.

⬅ back to List of alarms level 1

Wrn Reverse Synchro Fail

Alarm Type	Warning
Alarmlist message	Wrn Reverse Synchro Fail
Alarm evaluated	During synchronization
Related applications	MCB, MGCB
Description	This alarm is issued when gen-set is synchronizing to the mains/bus via MCB and Synchronization Timeout (page 245) gets elapsed.

⬅ back to List of alarms level 1

Synchronization Fail

Alarm Type	Warning
Alarmlist message	Synchronization Fail
Alarm evaluated	During synchronization
Related applications	MCB, MGCB, BTB
Description	This alarm is issued when gen-set is synchronizing to the mains/bus via M(G)CB and Synchronization Timeout (page 245) gets elapsed.

⬅ back to List of alarms level 2

Bus Measurement Error

Alarm Type	Warning
Alarmlist message	Bus Measurement Error
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>The alarm is issued when the voltage on the bus is out of limits for 20 seconds under these conditions:</p> <p>MCB application:</p> <ul style="list-style-type: none"> ▶ MCB is closed in AUTO mode ▶ Any GCB in the same control group was closed <p>MGCB application:</p> <ul style="list-style-type: none"> ▶ MCB and MGCB are closed in AUTO mode ▶ Any GCB in the same control group was closed. MGCB closing is blocked <p>BTB application:</p> <ul style="list-style-type: none"> ▶ BTB feedback was closed in AUTO mode ▶ Any GCB in power management group (on CAN bus) was closed. BTB closing is blocked

⬅ back to List of alarms level 2

Other type

Bus L1 Overvoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overvoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to <i>3Ph4Wire</i> or <i>MonoPhase</i>.</p>

⬅ back to List of alarms level 2

Bus L1 Undervoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Undervoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to <i>3Ph4Wire</i> or <i>MonoPhase</i>.</p>

⬅ back to List of alarms level 2

Bus L1L2 Overvoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus voltage between phases L1 a L2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overvoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to <i>3Ph3Wire</i> or <i>High Leg D</i>.</p>

⬅ back to List of alarms level 2

Bus L1L2 Undervoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus voltage between phases L1 a L2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Undervoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to 3Ph3Wire or High Leg D.</p>

⬅ back to List of alarms level 2

Bus L2 Overvoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overvoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to 3Ph4Wire.</p>

⬅ back to List of alarms level 2

Bus L2 Undervoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Undervoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to 3Ph4Wire.</p>

⬅ back to List of alarms level 2

Bus L2L3 Overvoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus voltage between phases L2 a L3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overvoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to <i>3Ph3Wire</i> or <i>High Leg D</i>.</p>

⬅ back to List of alarms level 2

Bus L2L3 Undervoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus voltage between phases L2 a L3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Undervoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to <i>3Ph3Wire</i> or <i>High Leg D</i>.</p>

⬅ back to List of alarms level 2

Bus L3 Overvoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overvoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type</i> (page 204) is set to <i>3Ph4Wire</i>.</p>

⬅ back to List of alarms level 2

Bus L3 Undervoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Undervoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type (page 204)</i> is set to <i>3Ph4Wire</i>.</p>

⬅ back to List of alarms level 2

Bus L3L1 Overvoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus voltage between phases L3 a L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overvoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type (page 204)</i> is set to <i>3Ph3Wire</i> or <i>High Leg D</i> or <i>SplitPhase</i>.</p>

⬅ back to List of alarms level 2

Bus L3L1 Undervoltage

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus voltage between phases L3 a L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Undervoltage (page 211) ▶ Bus < > Voltage Delay (page 211) <p>Note: Alarm is active only in case the setpoint <i>Connection type (page 204)</i> is set to <i>3Ph3Wire</i> or <i>High Leg D</i> or <i>SplitPhase</i>.</p>

⬅ back to List of alarms level 2

Bus Overfrequency

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus frequency. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Overfrequency (page 212) ▶ Bus < > Frequency Delay (page 213)

◀ back to List of alarms level 2

Bus Underfrequency

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus frequency. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Underfrequency (page 212) ▶ Bus < > Frequency Delay (page 213)

◀ back to List of alarms level 2

Bus Voltage Unbalance

Alarm Type	History record
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Bus phase voltage unbalance. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Bus Voltage Unbalance (page 212) ▶ Bus Voltage Unbalance Delay (page 212)

◀ back to List of alarms level 2

EM(A) - a message lost

Alarm Type	Other
Alarmlist message	EM(A) - a message lost
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm indicates that there is a problem with communication between controller and module in slot.</p>

◀ back to List of alarms level 1

EM(A) - configuration mistake

Alarm Type	Other
Alarmlist message	EM(A) - configuration mistake
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with configuration of binary input or output of module in slot.

[back to List of alarms level 1](#)

EM(A) - insufficient

Alarm Type	Other
Alarmlist message	EM(A) - insufficient
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that module does not support all required features.

[back to List of alarms level 1](#)

EM(A) - missing or damaged

Alarm Type	Other
Alarmlist message	EM(A) - missing or damaged
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with communication with module in slot (in first 5 second there was no communication and module is configured in slot).

[back to List of alarms level 1](#)

EM(B) - a message lost

Alarm Type	Other
Alarmlist message	EM(B) - a message lost
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

[back to List of alarms level 1](#)

EM(B) - configuration mistake

Alarm Type	Other
Alarmlist message	EM(B) - configuration mistake
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with configuration of binary input or output of module in slot.

[back to List of alarms level 1](#)

EM(B) - insufficient

Alarm Type	Other
Alarmlist message	EM(B) - insufficient
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that module does not support all required features.

[back to List of alarms level 1](#)

EM(B) - missing or damaged

Alarm Type	Other
Alarmlist message	EM(B) - missing or damaged
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with communication with module in slot (in first 5 second there was no communication and module is configured in slot).

[back to List of alarms level 1](#)

Module(slotA) - comm. outage

Alarm Type	Other
Alarmlist message	Module(slotA) - comm. outage
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

[back to List of alarms level 1](#)

Module(slotA) - false module

Alarm Type	Other
Alarmlist message	Module(slotA) - fake module
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that false module is inserted in slot.

[back to List of alarms level 1](#)

Module(slotA) - unattended

Alarm Type	Other
Alarmlist message	Module(slotA) - unattended
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that two same communication modules are inserted in slots and one of them will be inactive.

🔍 back to List of alarms level 1

Module(slotA) - unexpected

Alarm Type	Other
Alarmlist message	Module(slotA) - unexpected
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that in slot is inserted different module than which is configured or the module is unconfigured and has to be configured for proper function.

🔍 back to List of alarms level 1

Module(slotA) - unknown module

Alarm Type	Other
Alarmlist message	Module(slotA) - unknown module
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that unknown module is inserted in slot.

🔍 back to List of alarms level 1

Module(slotB) - comm. outage

Alarm Type	Other
Alarmlist message	Module(slotB) - comm. outage
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that there is a problem with communication between controller and module in slot.

🔍 back to List of alarms level 1

Module(slotB) - false module

Alarm Type	Other
Alarmlist message	Module(slotB) - fake module
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that false module is inserted in slot.

[back to List of alarms level 1](#)

Module(slotB) - unattended

Alarm Type	Other
Alarmlist message	Module(slotB) - unattended
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that two same communication modules are inserted in slots and one of them will be inactive.

[back to List of alarms level 1](#)

Module(slotB) - unexpected

Alarm Type	Other
Alarmlist message	Module(slotB) - unexpected
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that in slot is inserted different module than which is configured or the module is unconfigured and has to be configured for proper function.

[back to List of alarms level 1](#)

Module(slotB) - unknown module

Alarm Type	Other
Alarmlist message	Module(slotB) - unknown module
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that unknown module is inserted in slot.

[back to List of alarms level 1](#)

8.2.2 Alarms level 2

Other type579

For full list of Alarms level 2 go to **List of alarms level 2 (page 578)**.

What alarms level 2 are:

The level 2 level alarm indicates that a critical level of the respective value or parameter has been reached. For more information **see Alarm types - Level 2 on page 117**.

List of alarms level 2

Synchronization Fail	567
Bus Measurement Error ..	567
MPR AIN Prot	579
MPR BIN Protection	579
Current Unbalance	579
MPR Overcurrent IDMT ..	579
MPR Overload	580
MPR Short Circuit	580
Mains L1 Overvoltage	580
Mains L1 Undervoltage ...	581
Mains L1L2 Overvoltage ..	581
Mains L1L2 Undervoltage	581
Mains L2 Overvoltage	582
Mains L2 Undervoltage ...	582
Mains L2L3 Overvoltage ..	582
Mains L2L3 Undervoltage	583
Mains L3 Overvoltage	583
Mains L3 Undervoltage ...	583
Mains L3L1 Overvoltage ..	584
Mains L3L1 Undervoltage	584
Mains L1 Overvoltage	584
Mains L1 Overvoltage	585
Mains Voltage Unbalance	585
ROCOF	585
VectorShift	586

Other type

MPR AIN Prot

Alarm Type	MPR
Alarmlist message	MPR + Name of analog input
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that the value of general analog protection is out of MPR protection limit.

⬅ back to List of alarms level 2

MPR BIN Protection

Alarm Type	MPR
Alarmlist message	MPR + Name of binary input
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	Binary input also can be adjusted like alarm. In this case message in alarmlist contains prefix - MPR and binary input name. This alarm occurs, when appropriate binary input is active.

⬅ back to List of alarms level 2

Current Unbalance

Alarm Type	MPR
Alarmlist message	MPR Current Unbalance
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the unbalance of the phase currents, i.e. the difference between highest and lowest phase current at any given time. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Current Unbalance (page 217) adjusts the maximum allowed difference between the highest and lowest phase current at any given time. ▶ Current Unbalance Delay (page 217) adjusts the alarm delay.

⬅ back to List of alarms level 2

MPR Overcurrent IDMT

Alarm Type	MPR
Alarmlist message	MPR Overcurrent IDMT
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>The overcurrent alarm is based on IDMT principle. The reaction time of an IDMT alarm is not fixed, but depends on how much is the protected value above the limit (Nominal Current (page 204)). The higher is the overcurrent, the shorter the reaction time will be. All mains phases are evaluated.</p> <p>The behavior of the overcurrent alarm is adjusted by the following setpoints:</p> <ul style="list-style-type: none"> ▶ IDMT Overcurrent (page 216) defines the reaction time of the protection when the current is twice the amount of nominal value. ▶ Nominal Current (page 204) set the nominal current level, where the alarm starts to be evaluated. The reaction time is infinite at this point.

⬅ back to List of alarms level 2

MPR Overload

Alarm Type	MPR
Alarmlist message	MPR Overload
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>The alarm is issued when the Mains power is over the limit for time period longer than the delay. The behavior of the overload alarm is adjusted by the following setpoints:</p> <ul style="list-style-type: none"> ▶ Overload MPR (page 214) adjusts the overload limit. ▶ Overload Delay (page 214) adjusts the delay

⬅ back to List of alarms level 2

MPR Short Circuit

Alarm Type	Mains protect
Alarmlist message	MPR Short Circuit
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This is a fast overcurrent protection. The following setpoints are related to this alarm:</p> <ul style="list-style-type: none"> ▶ Short Circuit MPR (page 215) adjusts the short current limit ▶ Short Circuit MPR Delay (page 215) adjusts the delay in fine steps

⬅ back to List of alarms level 2

Mains L1 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph4Wire or MonoPhase.</p>

⬅ back to List of alarms level 2

Mains L1 Undervoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Undervoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph4Wire or MonoPhase.</p>

⬅ back to List of alarms level 2

Mains L1L2 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage between phases L1 a L2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph3Wire or High Leg D.</p>

⬅ back to List of alarms level 2

Mains L1L2 Undervoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage between phases L1 a L2. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Undervoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph3Wire or High Leg D.</p>

⬅ back to List of alarms level 2

Mains L2 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph4Wire.</p>

⬅ back to List of alarms level 2

Mains L2 Undervoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Undervoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph4Wire.</p>

⬅ back to List of alarms level 2

Mains L2L3 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage between phases L2 a L3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph3Wire or High Leg D.</p>

⬅ back to List of alarms level 2

Mains L2L3 Undervoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage between phases L2 a L3. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Undervoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph3Wire or High Leg D.</p>

⬅ back to List of alarms level 2

Mains L3 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph4Wire.</p>

⬅ back to List of alarms level 2

Mains L3 Undervoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Undervoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph4Wire.</p>

⬅ back to List of alarms level 2

Mains L3L1 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage between phases L3 a L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph3Wire or High Leg D or SplitPhase.</p>

⬅ back to List of alarms level 2

Mains L3L1 Undervoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage between phases L3 a L1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Undervoltage (page 219) ▶ Mains < > Voltage Delay (page 220) <p>Note: Alarm is active only in case the setpoint Connection type (page 204) is set to 3Ph3Wire or High Leg D or SplitPhase.</p>

⬅ back to List of alarms level 2

Mains L1 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time

Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220)

⬅ back to List of alarms level 2

Mains L1 Overvoltage

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains phase voltage in phases 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Overvoltage (page 219) ▶ Mains < > Voltage Delay (page 220)

⬅ back to List of alarms level 2

Mains Voltage Unbalance

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	<p>This alarm evaluates the Mains voltage unbalance. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ Mains Voltage Unbalance (page 220) ▶ Mains Voltage Unbalance Delay (page 220)

⬅ back to List of alarms level 2

ROCOF

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB
Description	<p>This alarm evaluates the mains phase voltage in phases 1. The following setpoints are related to it:</p> <ul style="list-style-type: none"> ▶ ROCOF df/dt (page 225) ▶ ROCOF Windows Length (page 225)

⬅ back to List of alarms level 2

VectorShift

Alarm Type	Mains protect
Alarmlist message	No
Alarm evaluated	All the time
Related applications	MCB, MGCB
Description	This alarm evaluates the mains phase voltage in phases 1. The following setpoints are related to it: ▶ Vector Shift Limit (page 224)

 [back to List of alarms level 2](#)

8.2.3 Fail sensor and other types

FIs AIN Prot 1	589
FIs AIN Protect 2	589
FIs AIN Protect 3	589
FIs AIN Protect 4	589
FIs AIN Protect 5	590
FIs AIN Protect 6	590
FIs AIN Protect 7	590
FIs AIN Protect 8	590
FIs AIN Protect 9	591
FIs AIN Protect 10	591
FIs AIN Protect 11	591
FIs AIN Protect 12	591
FIs AIN Protect 13	592
FIs AIN Protect 14	592
FIs AIN Protect 15	592
FIs AIN Protect 16	592
FIs AIN Protect 17	593
FIs AIN Protect 18	593
FIs AIN Protect 19	593
FIs AIN Protect 20	593

For full list of Fails sensor and other types of alarms go to **List of fail sensor alarms (page 587)**.

What Fail sensor and other types of alarms are

If the measured resistance on an analog input exceeds the valid range, a sensor fail will be detected and a sensor fail message will appear in the Alarmlist. For more information **see Sensor fail detection (FLS) on page 118**.

Note: Functions related to analog inputs are available only in case of configured analog extension module.

List of fail sensor alarms

FIs AIN Prot 1	589
FIs AIN Protect 2	589
FIs AIN Protect 3	589
FIs AIN Protect 4	589
FIs AIN Protect 5	590
FIs AIN Protect 6	590
FIs AIN Protect 7	590
FIs AIN Protect 8	590
FIs AIN Protect 9	591
FIs AIN Protect 10	591

FIs AIN Protect 11	591
FIs AIN Protect 12	591
FIs AIN Protect 13	592
FIs AIN Protect 14	592
FIs AIN Protect 15	592
FIs AIN Protect 16	592
FIs AIN Protect 17	593
FIs AIN Protect 18	593
FIs AIN Protect 19	593
FIs AIN Protect 20	593

Fail sensor

FIs AIN Prot 1

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 1
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm indicates that the value of general analog protection is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 2

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 2
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 2 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 3

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 3
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 3 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 4

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 4
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 4 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

Fls AIN Protect 5

Alarm Type	Fls
Alarmlist message	Fls + name of analog input 5
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 5 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

Fls AIN Protect 6

Alarm Type	Fls
Alarmlist message	Fls + name of analog input 6
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 6 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

Fls AIN Protect 7

Alarm Type	Fls
Alarmlist message	Fls + name of analog input 7
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 7 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

Fls AIN Protect 8

Alarm Type	Fls
Alarmlist message	Fls + name of analog input 8
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 8 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 9

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 9
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 9 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 10

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 10
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 10 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 11

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 11
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 11 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 12

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 12
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 12 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 13

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 13
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 13 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 14

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 14
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 14 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 15

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 15
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 15 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 16

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 16
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 16 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 17

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 17
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 17 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 18

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 18
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 18 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 19

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 19
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 19 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

FIs AIN Protect 20

Alarm Type	FIs
Alarmlist message	FIs + name of analog input 20
Alarm evaluated	All the time
Related applications	MCB, MGCB, BTB
Description	This alarm occurs when measurement value of analog input 20 is out of range or is missing.

[◀ back to List of fail sensor alarms](#)

8.3 Modules

8.3.1 Plug-In modules	594
8.3.2 CAN modules	609

8.3.1 Plug-In modules

Communication modules	594
Extension modules	607

IMPORTANT: 2nd generation of IntelliMains 210 controllers does not support new modules and 3rd generation does not support all old modules.

The available communication plug-in modules are:

- ▶ CM-RS232-485 - communication module for connection via RS232 or RS485 line
- ▶ CM-4G-GPS - communication module for connection via 4G
- ▶ CM-GPRS - communication module for connection via GPRS
- ▶ CM-Ethernet - communication module for internet connection via Ethernet

The available extension plug-in modules are:

- ▶ EM-BIO8-EFCP - extension module with 8 binary inputs/outputs and with earth fault current protection

Note: Controller has 12 plug-in module slots.

Supported combinations of plug-in modules

Module	CM-Ethernet	CM-4G-GPS	CM-GPRS	CM-RS232-485	EM-BIO8-EFCP
CM-Ethernet	✗	✓	✓	✓	✓
CM-4G-GPS	✓	✗	✗	✓	✓
CM-GPRS	✓	✗	✗	✓	✓
CM-RS232-485	✓	✓	✓	✗	✓
EM-BIO8-EFCP	✓	✓	✓	✓	✓

Communication modules

CM-RS232-485	595
CM-Ethernet	597
CM-GPRS	598
CM-4G-GPS	602

CM-RS232-485

CM-RS232-485 is optional plug-in card to enable IntelliMains 210 the RS232 and RS485 communication. This is required for computer or MODBUS connection. The CM-RS232-485 is a dual port module with RS232 and RS485 interfaces at independent COM channels. The RS232 is connected to COM1 and RS485 to COM2.


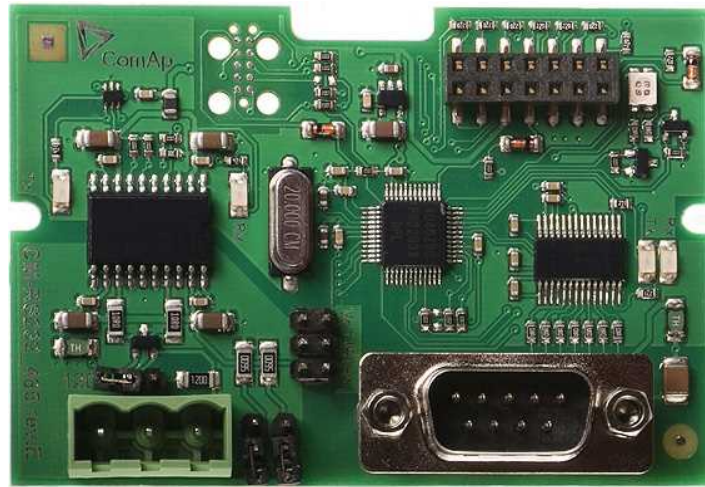


Image 8.169 CM-RS232-485 interface

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

RS-232 DB-9 Male Pinout

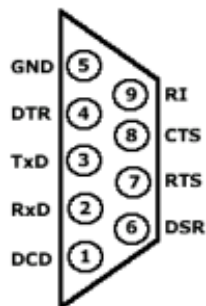

- PIN 1:** Data Carrier Detect
- PIN 2:** Receive Data
- PIN 3:** Transmit Data
- PIN 4:** Data Terminal Ready
- PIN 5:** Signal Ground
- PIN 6:** Data Set Ready
- PIN 7:** Request to Send
- PIN 8:** Clear to Send
- PIN 9:** Ring Indicator

SERIAL "CROSS-WIRED" CABLE

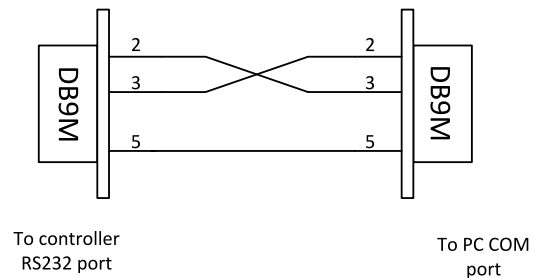


Image 8.170 Pinout of RS-232 line

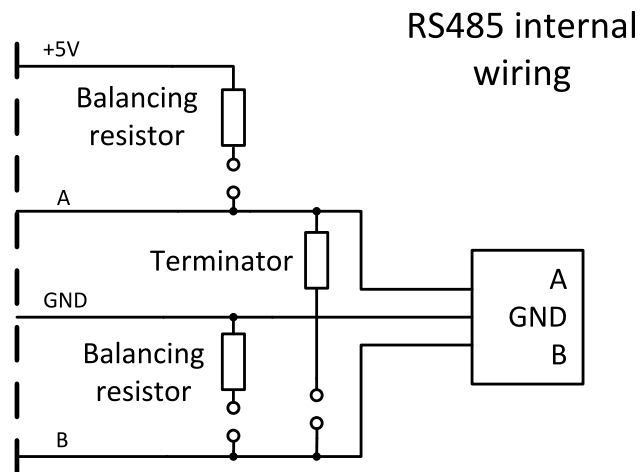


Image 8.171 Pinout of RS-485 line



Image 8.172 Jumpers description

Note: Balancing resistors shall be both closed at only one device in whole RS485 network.

Maximal distance of line is 10m for RS232 line and 1200m for RS485 line.

Terminator 120Ω

Balancing resistor +5V

Technical data

Power consumption	40 mA / 8 VDC
	26 mA / 12 VDC
	14 mA / 24 VDC
	10 mA / 36 VDC
Isolation	Galvanic separation

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into IntelliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via IntelliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware

you want to program into the module (in IntelliConfig).

- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

CM-Ethernet

CM-Ethernet is a plug-in card with Ethernet 10/100 Mbit interface in RJ45 connector. It provides an interface for connecting a PC with through ethernet/internet network, for sending active e-mails and for integration of the controller into a building management (MODBUS TCP and SNMP protocols). This card also enables to monitor and control the gen-set over web browser from any location with internet access using appropriate security measures.

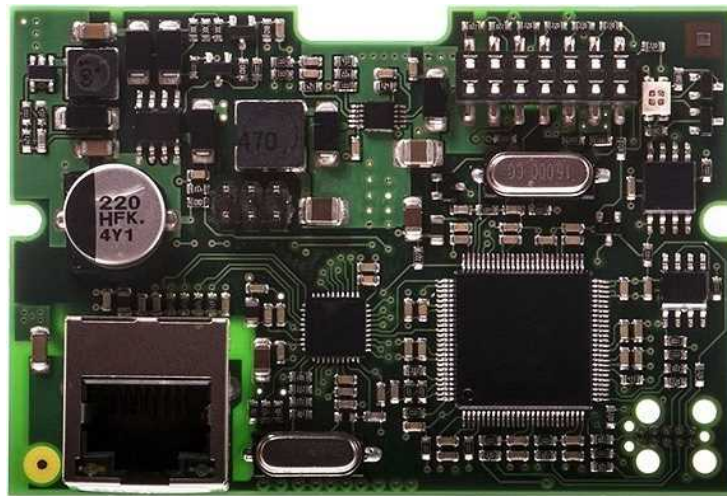


Image 8.173 CM-Ethernet interface

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

Use an Ethernet UTP cable with a RJ45 connector for linking the module with your Ethernet network. The module can also be connected directly to a PC using cross-wired UTP cable.

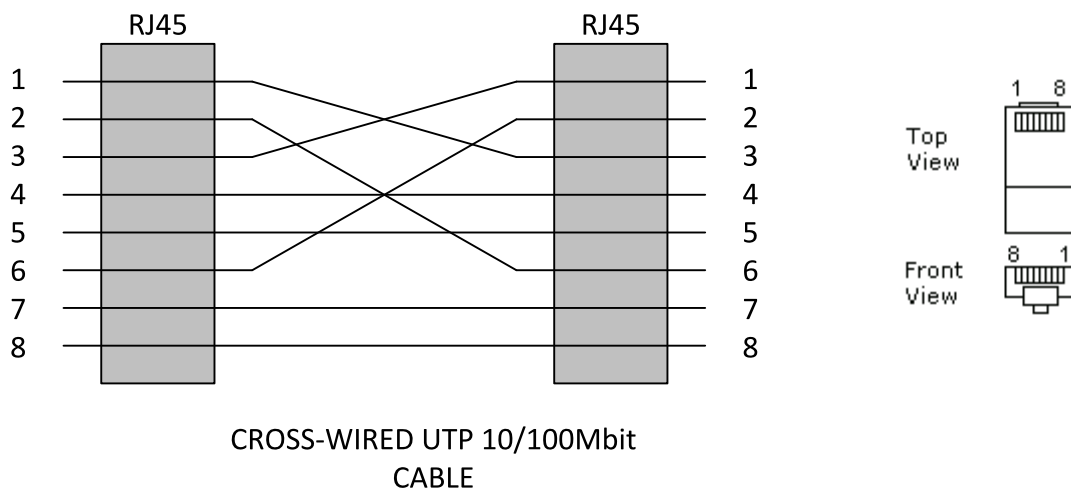


Image 8.174 Cross-wired cable

Technical data

Power consumption	120 mA / 8 VDC
	82 mA / 12 VDC
	35 mA / 24 VDC
	25 mA / 36 VDC

Module setup

All settings related to the module are to be adjusted via the controller setpoints. The respective setpoints are located in the setpoint **Group: CM-Ethernet (page 325)**.

All actual operational values like actual IP address etc. are available in controller values in a specific group as well.

Status LED

Blinking frequency	Color
1 Hz	Green - everything is OK
	Red - some of following errors occurred:
	<ul style="list-style-type: none"> ▶ unplugged ethernet cable ▶ module cannot connect to AirGate ▶ module can not obtain IP address from DHCP
10 Hz	Green - firmware is currently being programmed
	Red - no firmware present in the module

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

CM-GPRS

CM-GPRS plug-in module is a GSM/GPRS modem which can works in two modes of operation based on the settings in the setpoint **Mode (page 315)**.



Image 8.175 CM-GPRS module

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

IMPORTANT: CM-4G-GPS and CM-GPRS modules can't be used in one controller in the same time.

Note: GPRS and CSD services must be provided by your GSM/GPRS operator for successful operation.

Note: The GPRS and CSD connection should not be used for the firmware update process.

CM-GPRS module works with:

- ▶ WebSupervisor – internet-based remote monitoring solution
- ▶ AirGate – powerful connection technology to make internet access as simple as possible

Technical data

Power consumption	32 mA / 8 VDC
	18 mA / 12 VDC
	10 mA / 24 VDC
	12 mA / 36 VDC

SIM card settings

SIM card to be used in CM-4G-GPS or CM-GPRS modules must be adjusted as follows:

- ▶ SMS service enabled
- ▶ Packet data (Internet access) enabled (when required for the selected mode of operation)
- ▶ PIN code security disabled

How to start using CM-GPRS module

- ▶ You will need a controller, CM-GPRS module, antenna and SIM card with SMS and packet data service.

Make sure that your SIM supports the packet data network type you want to use. I.e. if you want to use the module in GPRS (2,5G) network you have to confirm with the operator that the particular SIM card does support 2,5G network.

- ▶ Contact your mobile operator for getting packet data APN (APN = Access Point Name), username and password.

Example: APN Name = "internet", UserName = [blank], Password = [blank].

- ▶ Make sure SIM card does not require PIN code. Use any mobile phone to switch the SIM PIN security off.
- ▶ Place the SIM card into slot on CM-GPRS card
- ▶ Connect the antenna to Cellular module antenna connector.
- ▶ Switch off the controller.
- ▶ Insert CM-GPRS module into controller
- ▶ Power up the controller.
- ▶ Select the mode of CM-GPRS module by adjusting setpoint Mode.
- ▶ Enter correct APN Name, APN User Name and APN User Password in controller's setpoint group CM-GPRS which is accessible by PAGE button from any measurement screen on controller. Setpoints can be set on controller's front panel keyboard or by IntelliConfig.
- ▶ Switch the controller off and on.
- ▶ Wait for approx 2 - 4 minutes for first connection of the system to AirGate. AirGate will generate automatically the AirGate ID value. Then navigate to measurement screens where you will find signal strength bar and AirGate ID identifier.



Image 8.176 Main screen of CM-GPRS module



Image 8.177 Screen of AirGate

GSM Diag Code – Diagnostic code for CM-GPRS modem

GSM Diag Code – Common list of diagnostic codes for cellular modules

Code	Description
0	OK. No error.
1	Not possible to hang up.
2	Modul is switched off
3	Module is switched on
4	Module – error in initialization
5	Module – not possible to set the APN
6	Module – not possible to connect to GPRS network
7	Module – not possible to retrieve IP address
8	Module – not accepted DNS IP address
9	Error in modem detection
10	Error in initialization of analog modem
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking
12	No GSM signal
13	Not possible to read the SIM card parameters
14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card
15	Unknown modem
16	Bad answer to complement initialization string
17	Not possible to read GSM signal strength
18	CDMA modem not detected
19	No CDMA network
20	Unsuccessful registration to CDMA network
21	SIMCom/ME909s: can't read FW version
22	SIMCom: GSM signal not found
23	SIMCom: can't detect module speed
24	SIMCom: HW reset issued
25	PUK is required
26	Error of SIM card detected
27	ME909s: can't set module bps
28	ME909s: can't set link configuration
29	ME909s: can't do power-off
30	ME909s: can't do power-on
31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued

35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration
41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

AirGate Diag – Diagnostic Code for AirGate connection

Code	Description
0	Waiting for connection to AirGate Server
1	Controller registered, waiting for authorization
2	Not possible to register, controller blacklisted
3	Not possible to register, server has no more capacity
4	Not possible to register, other reason
5	Controller registered and authorized

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

CM-4G-GPS

CM-4G-GPS plug-in module containing a GPS receiver and GSM/WCDMA/LTE modem which can works in two modes of operation based on the settings in the setpoint **Mode (page 315)**.



Image 8.178 CM-4G-GPS module

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

IMPORTANT: CM-4G-GPS and CM-GPRS modules cant be used in one controller in the same time.

IMPORTANT: Operating temperature of module is from -30°C to +75°C.

Note: Cellular data service must be enabled in your SIM card by your mobile operator for successful operation.

CM-4G-GPS module works with:

- ▶ WebSupervisor – internet-based remote monitoring solution
- ▶ AirGate – powerful connection technology to make internet access as simple as possible
- ▶ Locate – Cellular network based localization service

CM-4G-GPS module also works like GPS locator. Geo-fencing function can be used with this module.

Supported 4G bands are as follows:

- ▶ FDD LTE: Band 1, Band 2, Band 3, Band 4, Band 5, Band 7, Band 8, Band 20, all bands with diversity
- ▶ WCDMA/HSDPA/HSUPA/HSPA+: Band 1, Band 2, Band 5, Band 8, all bands with diversity
- ▶ GSM/GPRS/EDGE: 850 MHz/900 MHz/1800 MHz/1900 MHz

Technical data

Power consumption	55 mA / 8 VDC
	35 mA / 12 VDC
	8 mA / 24 VDC
	5 mA / 36 VDC

SIM card settings

SIM card to be used in CM-4G-GPS or CM-GPRS modules must be adjusted as follows:

- ▶ SMS service enabled
- ▶ Packet data (Internet access) enabled (when required for the selected mode of operation)
- ▶ PIN code security disabled

How to start using CM-4G-GPS module

- ▶ You will need a controller, CM-4G-GPS module, antenna and SIM card with SMS and packet data service.

Note: Make sure that your SIM supports the packet data network type you want to use. - i.e. if you want to use the module in LTE (4G) network you have to confirm with the operator that the particular SIM card supports 4G network.

- ▶ Contact your mobile operator for getting packet data APN (APN = Access Point Name), username and password.
- ▶ **Example:** APN Name = "internet", UserName = [blank], Password = [blank].
- ▶ Make sure SIM card does not require PIN code. Use any mobile phone to switch the SIM PIN security off.
- ▶ Place the SIM card into slot on CM-4G-GPS card
- ▶ Connect the antenna to Cellular module antenna connector.
- ▶ If you want to use the built-in GPS receiver connect also an **active** GPS antenna to the GPS antenna connector.
- ▶ Switch off the controller.
- ▶ Insert CM-4G-GPS module into controller
- ▶ Power up the controller.
- ▶ Select the mode of CM-4G-GPS module by adjusting setpoint Mode.
- ▶ Enter correct APN Name, APN User Name and APN User Password in controller's setpoint group CM-4G-GPS which is accessible by PAGE button from any measurement screen on controller. Setpoints can be set on controller's front panel keyboard or by IntelliConfig.
- ▶ Switch the controller off and on.
- ▶ Wait for approx 2 - 4 minutes for first connection of the system to AirGate. AirGate will generate automatically the AirGate ID value. Then navigate to measurement screens where you will find signal strength bar and AirGate ID identifier.



CM-4G-GPS		1/2
Cell Signal Lev		93%
Cell ErrorRate		12%
Cell Status		
Cell Diag Code		12
Operator		
Connection Type		4G

Image 8.179 Main screen of CM-4G-GPS module



Image 8.180 Screen of AirGate

GSM Diag Code – Common list of diagnostic codes for cellular modules

GSM Diag Code – Common list of diagnostic codes for cellular modules

Code	Description
0	OK. No error.
1	Not possible to hang up.
2	Modul is switched off
3	Module is switched on
4	Module – error in initialization
5	Module – not possible to set the APN
6	Module – not possible to connect to GPRS network
7	Module – not possible to retrieve IP address
8	Module – not accepted DNS IP address
9	Error in modem detection
10	Error in initialization of analog modem
11	SIM card is locked (Possibly PIN code required, PIN needs to be deactivated) or unknown status of SIM locking
12	No GSM signal
13	Not possible to read the SIM card parameters
14	GSM modem did not accepted particular initialization command, possibly caused by locked SIM card
15	Unknown modem
16	Bad answer to complement initialization string
17	Not possible to read GSM signal strength
18	CDMA modem not detected
19	No CDMA network
20	Unsuccessful registration to CDMA network
21	SIMCom/ME909s: can't read FW version
22	SIMCom: GSM signal not found
23	SIMCom: can't detect module speed

24	SIMCom: HW reset issued
25	PUK is required
26	Error of SIM card detected
27	ME909s: can't set module bps
28	ME909s: can't set link configuration
29	ME909s: can't do power-off
30	ME909s: can't do power-on
31	ME909s: can't do hardware reset
32	ME909s: ME909s not started
33	ME909s: switch off issued
34	ME909s: switch on issued
35	ME909s: HW reset issued
36	ME909s: can't switch echo off
37	ME909s: can't find out state of registration
38	ME909s: GSM signal not found
39	ME909s: no SIM memory for SMS
40	ME909s: waiting for registration
41	Can't read operator name
42	ME909s: can't set flow control
43	APN not typed
255	Only running communication is needed to indicate

AirGate Diag – Diagnostic Code for AirGate connection

Code	Description
0	Waiting for connection to AirGate Server
1	Controller registered, waiting for authorization
2	Not possible to register, controller blacklisted
3	Not possible to register, server has no more capacity
4	Not possible to register, other reason
5	Controller registered and authorized

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

Extension modules

EM-BIO8-EFCP607

EM-BIO8-EFCP

EM-BIO8-EFCP is optional plug-in card. Through this card controller can accommodate one AC current (CT) measuring input (1A or 5A input) and up to 8 binary inputs or outputs. In IntelliConfig PC configuration tool it is possible to easily choose if particular I/O will be binary input or output.

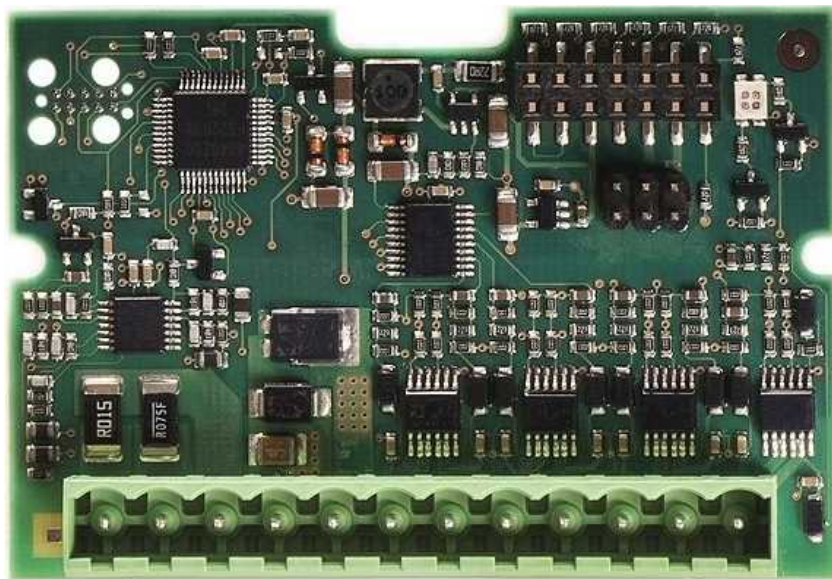


Image 8.181 EM-BIO8-EFCP interface

IMPORTANT: Any manipulation with plug-in module shall be done with disconnected power supply to controller.

IMPORTANT: Earth fault current measurement is supported by controller only in slot A.

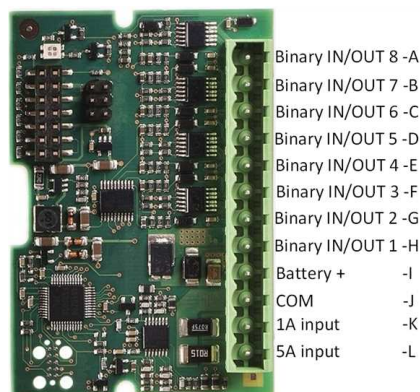


Image 8.182 Overview of EM-BIO8-EFCP

Note: Current inputs are supported only in MRS16 and AMF25 controllers.

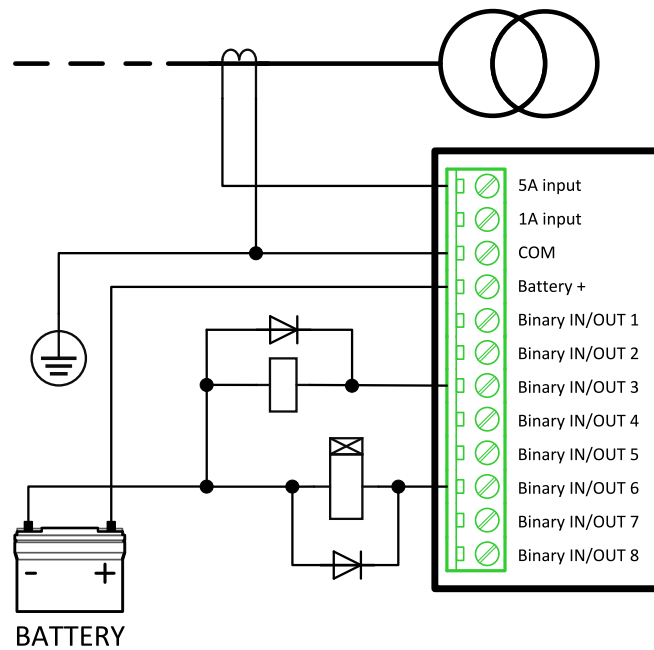


Image 8.183 EM-BIO8-EFCP wiring

Note: Current inputs are supported only in MRS16 and AMF25 controllers.

EM-BIO8-EFCP technical data

Power supply

Power supply range	8-36 VDC
Power consumption	40 mA / 8 VDC
	27 mA / 12 VDC
	22 mA / 24 VDC
	19 mA / 36 VDC

Binary inputs

Number	Up to 8, non-isolated
Close/Open indication	0-2 VDC close contact >6 VDC open contact

Binary outputs

Number	Up to 8, non-isolated
Max. current	0,5A
Switching to	positive supply terminal

Current measuring input

Number of inputs	2
Nominal input current	1A/5A
Load (CT output impedance)	< 0,1
Max measured current from CT	10 A
Current measurement tolerance	2% from Nominal current
Max peak current from CT	150 A / 1 s
Max continuous current	10 A

Firmware upgrade

- ▶ Download the newest FW of module from ComAp website (in form of PSI file or installation package)
- ▶ Instal package to computer or open PSI to instal it into InteliConfig
- ▶ Plug the module into the controller and power the controller on.
- ▶ Open a connection with controller via InteliConfig
- ▶ Go the menu Tools -> Firmware upgrade, select the Plug-in modules tab and select the appropriate firmware you want to program into the module (in InteliConfig).
- ▶ Press the OK button to start upgrade of firmware.

The firmware update process may be performed via any kind of connection including connection via the same module in which the firmware is to be updated. The connection is reestablished again automatically when the update process is finished.

8.3.2 CAN modules

Extension modules609

The available extension CAN modules are:

- ▶ Inteli AIN8 - extension CAN module with 8 analog inputs
- ▶ Inteli IO8/8 - extension CAN module with 8 binary inputs, 8 binary outputs and 2 analog outputs
 - this CAN module can be switched to Inteli IO16/0 - extension CAN module with 16 binary inputs and 2 analog outputs

Supported combinations of modules

Slot	Inteli AIN8	Inteli AIN8TC	Inteli IO8/8	Inteli IO16/0	IGL-RA15	IGS-PTM	Inteli AIO9/1
1	✓	✓	✓	✓	✓	✓	✓
1	✓	✓	✓	✓	✓	✓	✓
3	✓	✓	✓	✓	✓	✗	✗
4	✓	✓	✓	✓	✓	✗	✗
5	✗	✗	✓	✓	✗	✗	✗

IMPORTANT: In slot 3, 4 and 5 CAN modules Inteli IO8/8 and Inteli IO16/0 are supported without analog outputs. Analog outputs of these CAN modules are supported only in slot 1 and 2.

It is possible to add up to 80 binary inputs or up to 68 binary outputs or up to 32 analog inputs on CAN modules.

Extension modules

Inteli AIN8610

Inteli IO8/8615

IGS-PTM622

Inteli AIN8

Inteli AIN8 module is extension module equipped with analog inputs. Inteli AIN8 module is connected to controller by CAN1 bus.



Image 8.184 IntelI AIN8


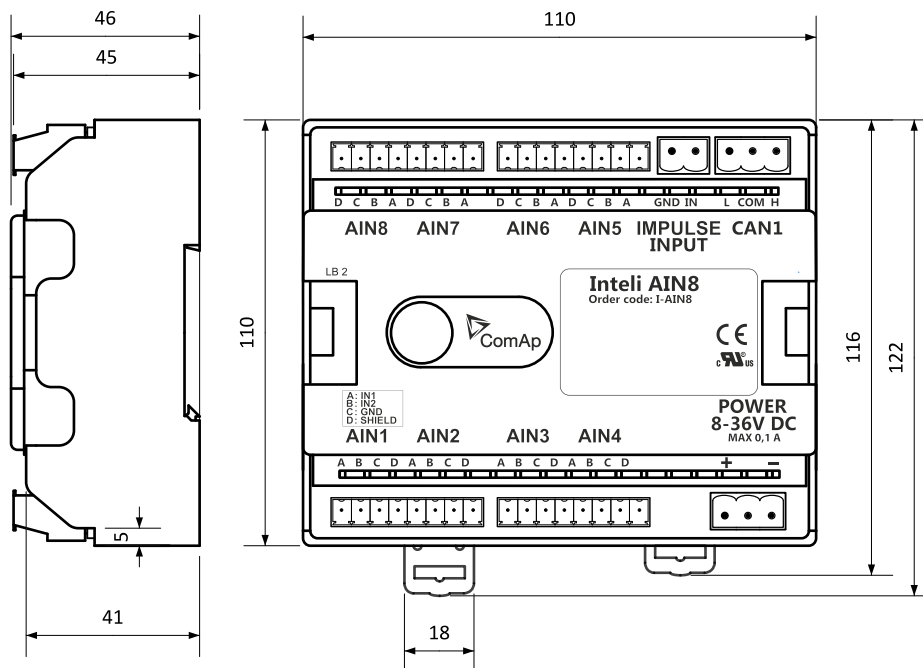


Image 8.185 IntelI AIN8 dimensions

Note: All dimensions are in mm.

Terminals

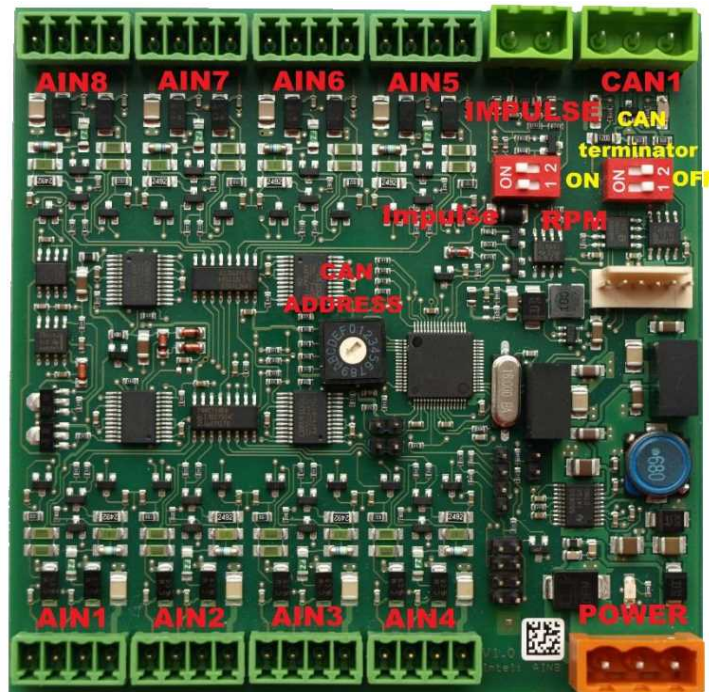

Analog input	8 analog Inputs
CAN	CAN1 line
Power	Power supply
CAN LED Tx, Rx	Indication transmitted or received data
Status LED	LED indication of correct function
CAN terminator	Terminating CAN resistor (active in position "ON" - switch both switches)

Note: Impulse input is not supported.

Analog inputs

- ▶ 8 channels
- ▶ can be configured as:
 - resistor three wire input
 - current input
 - voltage input

All inputs can be configured to any logical function or protection.

IMPORTANT: Impulse input is not supported in controller.

Supported sensors

Sensors		
User curves	NI100 [°F] (fix)	0-5V
PT100 [°C] (fix)	NI1000 [°F] (fix)	0-10V
PT1000 [°C] (fix)		4-20mA passive

Sensors		
NI100 [°C] (fix)	0-2400ohm	4-20mA active
NI1000 [°C] (fix)	0-10k ohm	0-20mA passive
PT100 [°F] (fix)	+1V	+20mA active
PT1000 [°F] (fix)	0-2.4V	

CAN address

DIP switch determinates CAN address for analog inputs.




Note: In case of setting the CAN address to zero, the appropriate group of signals is deactivated.

Programming firmware

Firmware upgrade process:

1. Disconnect all terminals from the unit.
2. Separate the top cover of module
3. Put the TEST jumper on a pins
4. Connect the unit with PC via RS232-null modem cable and AT-Link conv

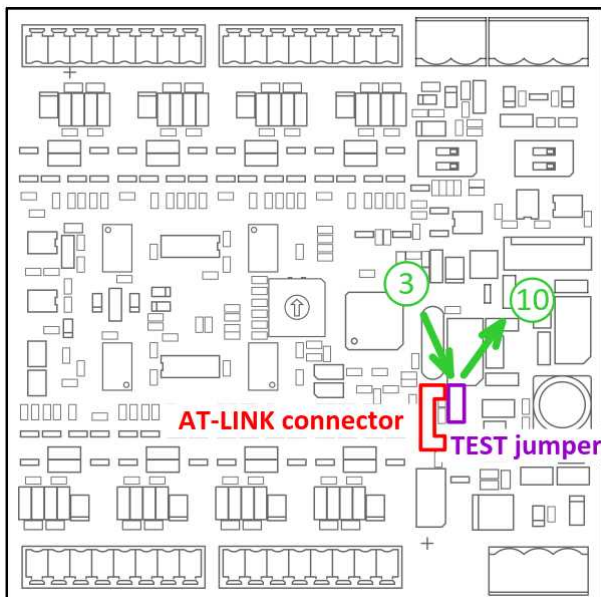

5. Connect power supply of the module (status LED lights continuously)
6. Launch FlashPgr.exe PC software (version 4.2 or higher)
7. In FlashPrg program choose card Inteli AIN8 and load FW for the module
8. Set the proper COM port (connected with the unit) and press Start button

9. Wait till process is done (If the process doesn't start – after 60 second the "Timeout" will be evaluated. In this case please check:
 - ▶ You have proper connection with the unit
 - ▶ COM port selection is correct
 - ▶ Module has power supply, (no CAN bus connection, status LED lights continuously)
10. After successful programming disconnect AT-Link conv , remove TEST jumper and disconnect power supply
11. Connect power supply again (status LED should blinking)
12. Module FW is upgraded


LED indication

LED status	Description
Dark	Fw in module does not work correctly.
Flashing	Module does not communicate with controller (in case non-zero CAN address).
Lights	Power supply is in the range and the communication between Inteli AIN8 and controller works properly. Or power supply is in range and zero CAN address is set. (in case zero CAN address module doesn't communicate with the controller).


Wiring

The following diagrams show the correct connection of sensors.

Terminator

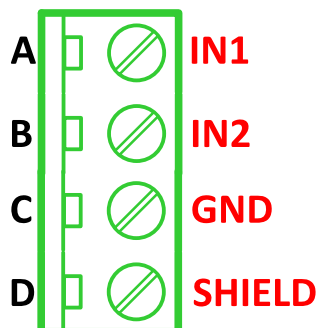


Resistance sensor - 3 wires

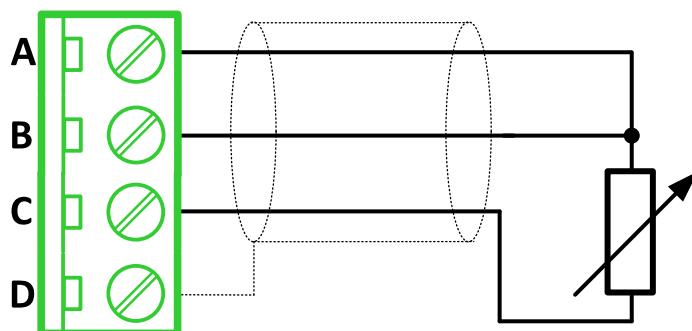


Note: Ranges: Pt100, Pt1000, Ni100, Ni1000, 0 – 2400 Ω, 0 – 10 kΩ

Resistance sensor - 2 wires

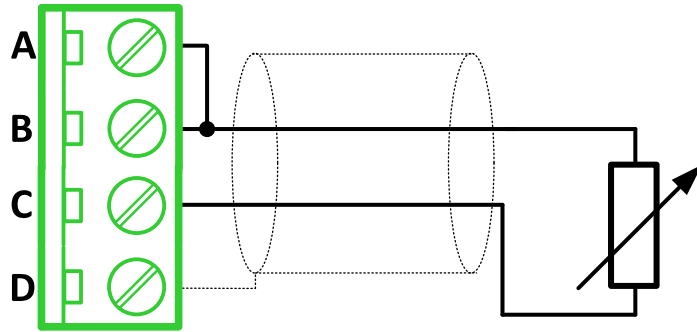


Note: Ranges: Pt100, Pt1000, Ni100, Ni1000, 0 – 2400 Ω , 0 – 10 k Ω

Current sensor - active

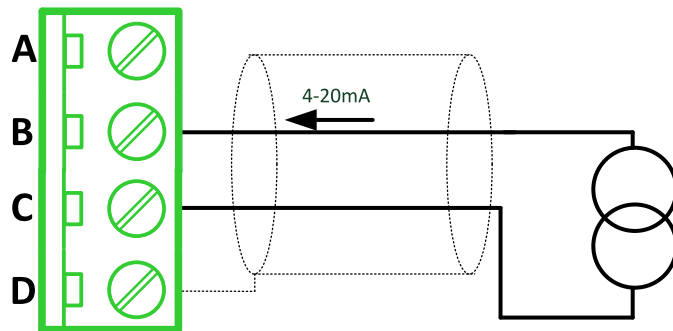


Note: Ranges: ± 20 mA, 4 – 20 mA

Current sensor - passive

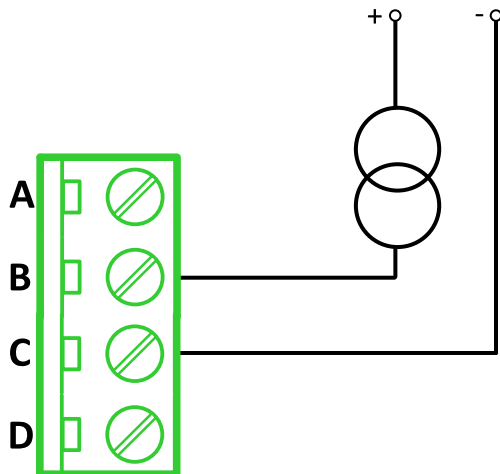

Note: Ranges: 0 – 20 mA, 4 – 20 mA

Voltage sensor

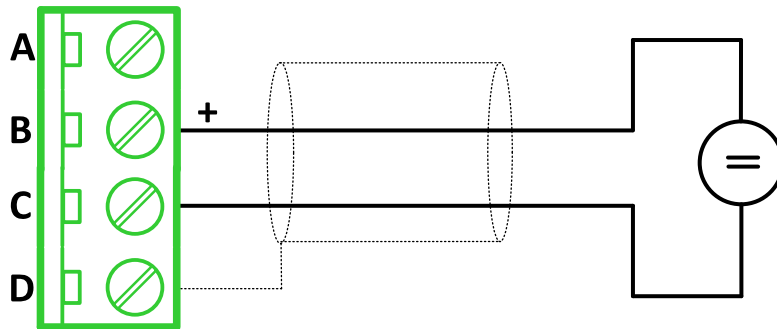

Note: Ranges: $\pm 1\text{ V}$, $0-2,5\text{ V}$, $0-5\text{ V}$, $0-10\text{ V}$

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	35 mA at 24 V ÷ 100 mA at 8 V
Interface to controller	CAN1
Protection	IP20
Storage temperature	- 40 °C to + 80 °C
Operating temperature	- 30 °C to + 70 °C
Dimensions (WxHxD)	110x110x46 mm (4,3"x4,3"x1,8")
Weight	221,5 grams

Analog inputs

Number of channels	8
Voltage	Range 0-10 V Accuracy: $\pm 0,25\%$ of actual value + $\pm 25\text{ mV}$
Current	Range: $\pm 20\text{ mA}$ Accuracy: $\pm 0,25\%$ of actual value + $\pm 50\text{ }\mu\text{A}$
Resistive	Range: 0- 10 k Ω Accuracy: $\pm 0,5\%$ of actual value + $\pm 2\text{ }\Omega$

Inteli IO8/8

Inteli IO8/8 module is an extension module equipped with binary inputs, binary outputs and analog outputs.

Inteli IO8/8 is the name of the module, but it is possible to configure the module (by internal switch) to two configurations:

- ▶ Inteli IO8/8 - 8 binary inputs, 8 binary outputs and 2 analog outputs
- ▶ Inteli IO16/0 - 16 binary inputs, 0 binary outputs and 2 analog outputs

The detection of communication speed is indicated by fast flashing of status LED. Once the speed is detected the module remains set for the speed even when the communication is lost. Renewal of communication speed detection is done by reset of the module.



Image 8.186 IntelI IO8/8


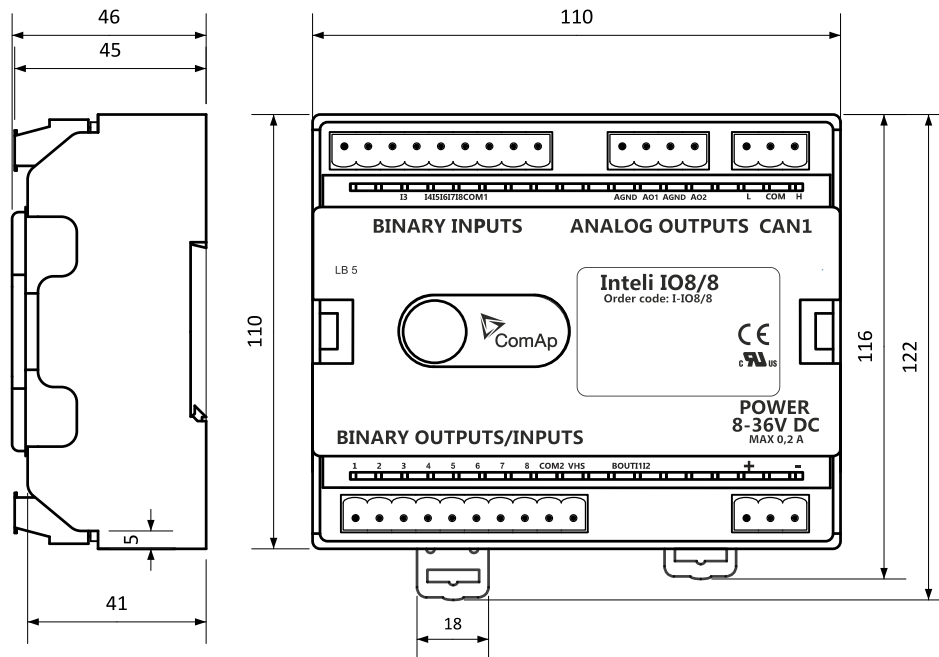


Image 8.187 IntelI IO8/8 dimensions

Note: All dimensions are in mm.

Terminals

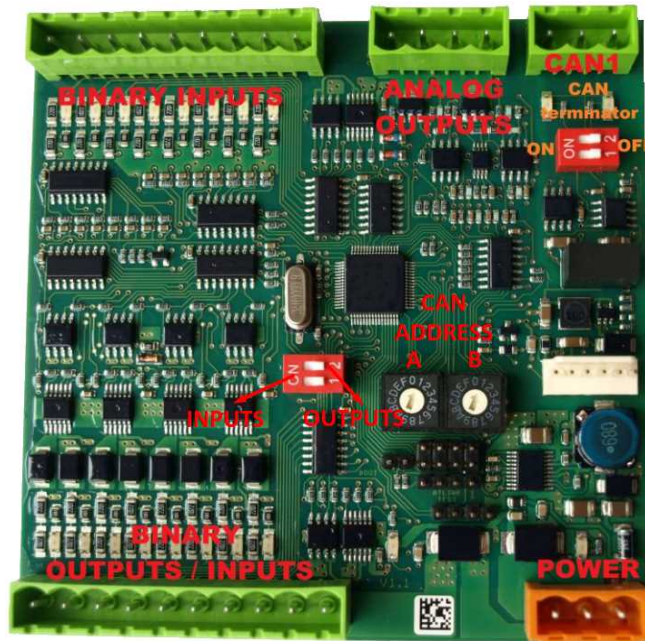

Binary inputs	8 binary inputs
Binary outputs	8 binary outputs (8 binary inputs)
Analog outputs	2 analog outputs
CAN	CAN1 line
Power	Power supply
Binary inputs LEDs	8 LEDs for binary input indication
Binary outputs LEDs	8 LEDs for binary output indication
CAN LED	Indication transmitted or received data
Status	LED indication of correct function
CAN terminator	Terminating CAN resistor (active in position "ON" - switch both switches)

Inputs and outputs

Binary inputs

- ▶ 8 channels
- ▶ can be configured as:
 - pull up
 - pull down

All 8 inputs are configured to one type together.

All inputs can be configured to any logical function or protection.

Binary outputs

- ▶ 8 channels
- ▶ can be configured as:
 - High side switch
 - Low side switch

Always all 8 inputs are configured to one type (HSS/LSS) together. All 8 outputs can be modified to inputs by switch on the PCB (Intel IO8/8 to Intel IO16/0).

Analog outputs

- ▶ 2 channels
- ▶ can be configured as:
 - voltage 0-10V
 - current 0-20mA
 - PWM (level 5V, with adjustable frequency from 200Hz to 2400Hz, with step 1Hz)

All inputs/outputs can be configured to any logical function or protection.

Output state check

Output state check function evaluates in real time the state of binary outputs and adjusted (required) state. In case of failure (different state of required state and real state) history record and alarm are issued (type of the alarm is set by “Protection upon module failure” - (No protection / Warning / Shutdown)).

This function is designed for short-circuit or other failure, which causes change of set state of binary output.

CAN address

In Intel IO8/8 mode CAN address for binary inputs is determined by DIP switch A, CAN address for binary output and analog outputs is determined by DIP switch B.

In Intel IO16/0 mode CAN address for binary inputs is determined by DIP switch A, first group of 8 input has address A, second group of 8 inputs has address A+1. CAN address of analog outputs is set by DIP switch B.




Note: In case of setting the CAN address to zero, the appropriate group of signals is deactivated.

Programming firmware

Firmware upgrade process:

1. Disconnect all terminals from the unit.
2. Separate the top cover of module
3. Put the TEST jumper on a pins

4. Connect the unit with PC via RS232-null modem cable and AT-Link conv

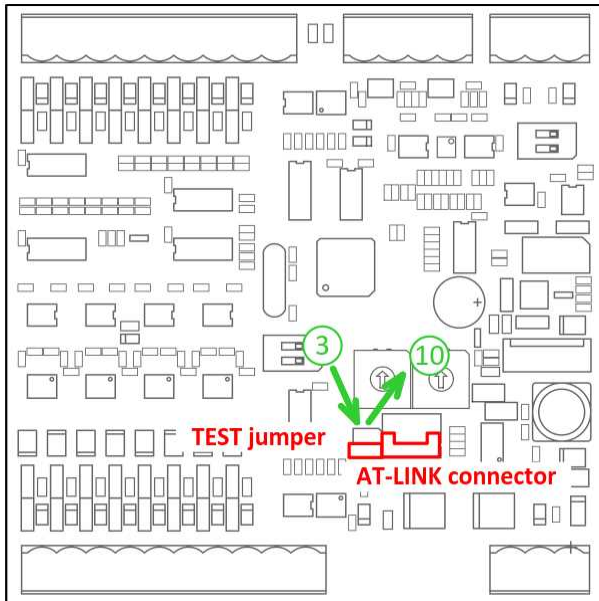

5. Connect power supply of the module (status LED lights continuously)
6. Launch FlashPgr.exe PC software (version 4.2 or higher)
7. In FlashPrg program choose card Inteli IO8/8 and load FW for the module
8. Set the proper COM port (connected with the unit) and press Start button
9. Wait till process is done (If the process doesn't start – after 60 second the "Timeout" will be evaluated. In this case please check:
 - ▶ You have proper connection with the unit
 - ▶ COM port selection is correct
 - ▶ Module has power supply, (no CAN bus connection, status LED lights continuously)
10. After successful programming disconnect AT-Link conv , remove TEST jumper and disconnect power supply
11. Connect power supply again (status LED should blinking)
12. Module FW is upgraded

LED indication

Binary input

Each binary input has LED which indicates input signal. LED is shining when input signal is set, and LED is dark while input signal has other state.

Binary output

Each binary output has LED which indicates output signal. Binary output LED is shining when binary output is set. When this LED is shining, then module is configured as 8 binary inputs and 8 binary outputs. When this LED is dark, then the module is configured as 16 binary inputs.


LED at power connector - status LED

LED status	Description
Dark	Fw in module does not work correctly.
Flashing	Module does not communicate with controller (in case non-zero CAN address).
Lights	Power supply is in the range and the communication between Intel IO8/8 and controller works properly. Or power supply is in range and zero CAN address is set. (in case zero CAN address module doesn't communicate with the controller).

Wiring

The following diagrams show the correct connection of inputs and outputs.


Binary inputs - pull up

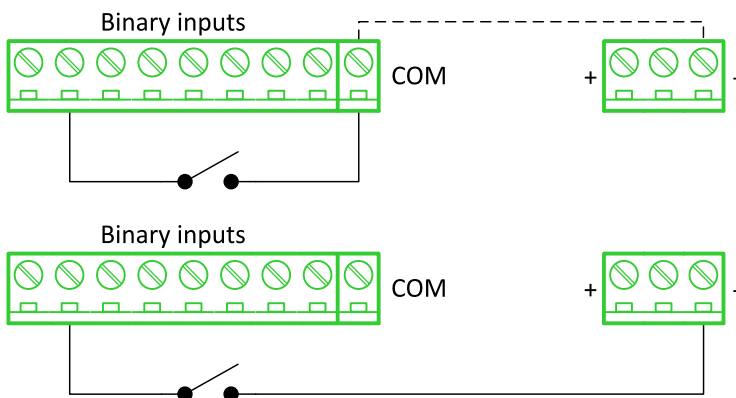

There are two options of wiring. On upper picture you can see case when binary input is connected between BIN2 and COM (COM is connected internally to the GND (-) - dashed line).

On lower picture is case of wiring between BIN2 and GND (-). Both ways are correct.


Binary inputs - pull down

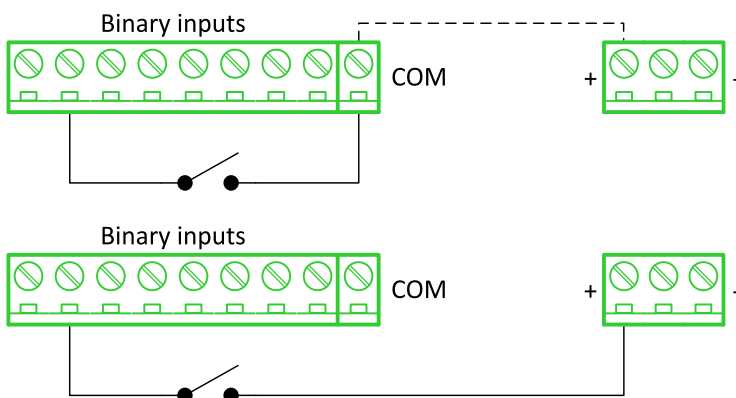

There are two options of wiring. On upper picture you can see case when binary input is connected between BIN2 and COM (COM is connected internally to the Ucc (+) - dashed line).


On lower picture is case of wiring between BIN2 and Ucc (+). Both ways are correct.

Binary outputs - high side

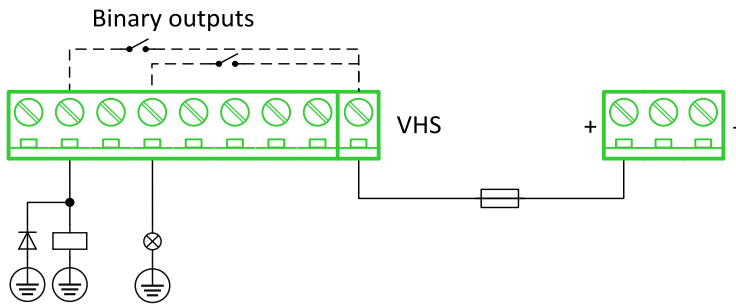

When high side setting of outputs is chosen - binary output must be connected to the minus potential directly Terminal VHS (voltage High side) has to be connected to positive potential directly. Maximal current of each binary output is 500 mA. Size of fuse depends on load.


Binary outputs - low side

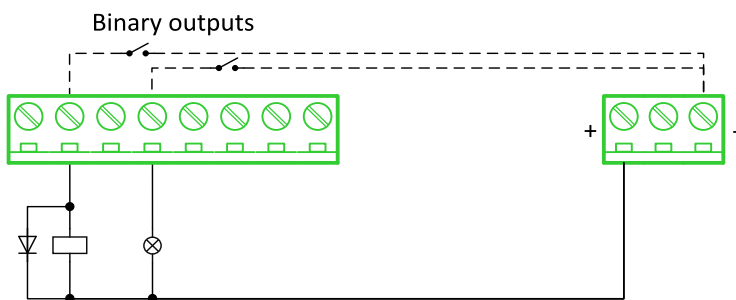

When low side setting of outputs is chosen - binary output must be connected to the plus potential of power supply directly. Minus potential is connected internally - dashed line.

Analog outputs

Analog outputs

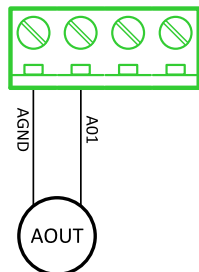

Note: Limit of analog ground (AGND) is 100mA.

IMPORTANT: Terminator for analog output has special analog ground (AGND), which must not be connected to the GND.

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	35 mA at 24 V + 100 mA at 8 V
Interface to controller	CAN1
Protection	IP20
Storage temperature	- 40 °C to + 80 °C

Operating temperature	- 30 °C to + 70 °C
Dimensions (WxHxD)	110x110x46 mm (4,3"x4,3"x1,8")
Weight	240 grams

Analog outputs

Number of channels	2
Voltage	Range 0-10 V Accuracy: ± 20 mV + $\pm 0,5$ % of actual value I _{max} 5 mA
Current	Range: 0-20 mA Accuracy: ± 100 μ A + $\pm 0,5$ % of actual value R _{max} 500 Ω
PWM	Level 5 V Frequency - adjustable 200-2400 Hz I _{max} 20 mA

Binary inputs

Number of channels	8 for Intel IO8/8, 16 for Intel IO16/0
Input resistance	4400 Ω
Input range	0 to 36 V DC
Switching voltage level for open contact indication	0 to 2 V DC
Max voltage level for close contact indication	6 to 36 V DC

Binary outputs

Number of channels	8 for Intel IO8/8, 0 for Intel IO16/0
Max current	500 mA
Max switching voltage	36 V DC

IGS-PTM

IGS-PTM module is extension module equipped with binary inputs, binary outputs, analog inputs and analog output. IGS-PTM module is connected to controller by CAN1 bus.



Image 8.188 IGS-PTM


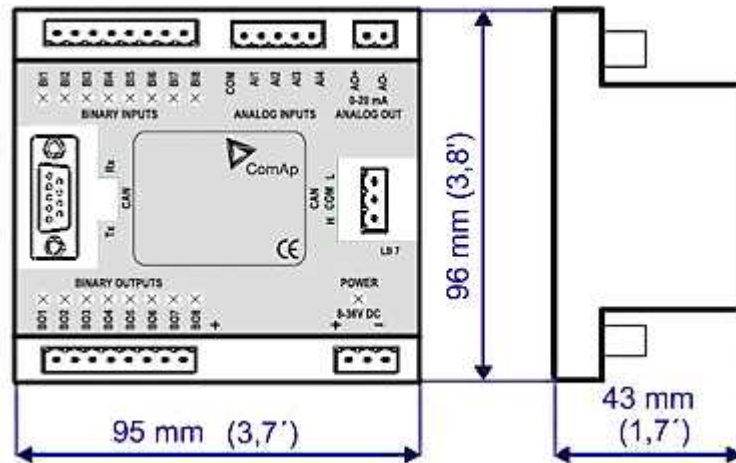


Image 8.189 IGS-PTM dimensions

Terminals

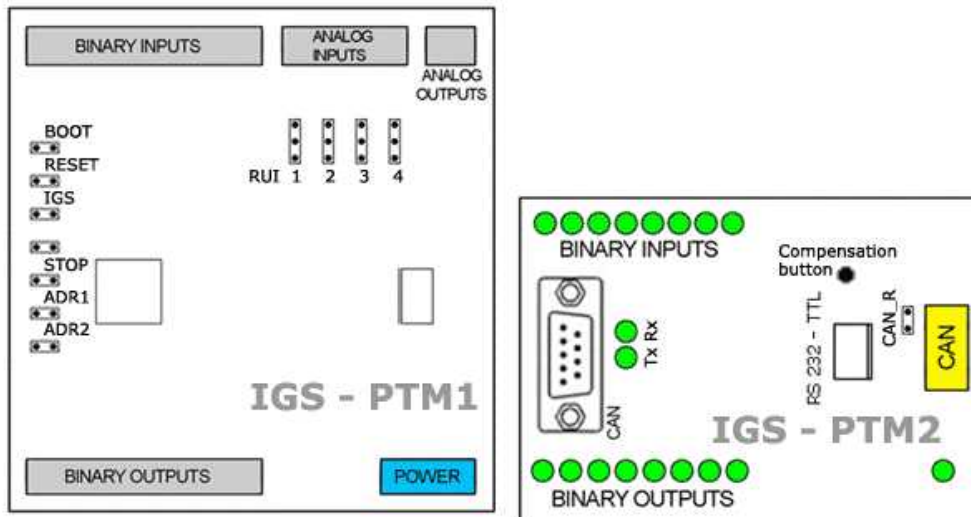

Binary inputs	8 binary inputs
Analog inputs	4 analog inputs
Analog outputs	1 analog output
Binary outputs	8 binary outputs
CAN	CAN1 line
RS232-TTL	Interface for programming
Power	Power supply

Analog inputs

Analog inputs can be configured for:

- ▶ Resistance measurement
- ▶ Current measurement
- ▶ Voltage measurement

The type of analog inputs is configured via jumpers RUI located on lower PCB.

RUI	Analog input configuration
1 - 2	Resistance measuring
2 - 3	Current measuring
no jumper	Voltage measuring

Supported sensors

Sensors	
PT100 [°C] (fix)	User curves
NI100 [°C] (fix)	0-100 mV
PT100 [°F] (fix)	0-2400 ohm
NI100 [°F] (fix)	±20 mA

CAN address

Controller type selection

The type of controller to be used with IGS-PTM must be selected via jumper labeled IGS accessible at the lower PCB.

IGS jumper	Controller type
OPEN	IL-NT, IC-NT
CLOSE	IG-NT, IS-NT, IntelliGen

Address configuration

If IntelliGen controller type is selected (by IGS jumper), address of IGS-PTM could be modified via jumpers labeled ADR1 and ADR2.

ADR1	ADR2	ADR offset	BIN module	BOUT module	AIN module
Open	Open	0 (default)	1	1	1
Close	Open	1	2	2	2
Open	Close	2	3	3	3
Close	Close	3	4	4	4

Programming firmware

Firmware upgrade is via AT-link (TTL). For programming is necessary to close jumper BOOT. RESET jumper is used to reset the device. Close jumper to reset the device. For programming is used FlashProg PC tool.

LED indication

Binary input

Each binary input has LED which indicates input signal. LED is shining when input signal is set, and LED is dark while input signal has other state.

Binary output


Each binary output has LED which indicates output signal. Binary output LED is shining when binary output is set.

LED at power connector - status LED


LED status	Description
Dark	No required power connected.
Quick flashing	Program check failure.
One flash and pause	Compensation fail.
Three flashes and pause	Compensation successful.
Flashes	There is no communication between IGS-PTM and the controller.
Lights	Power supply is in the range and communication between IGS-PTM and controller properly works.

Wiring


Binary inputs

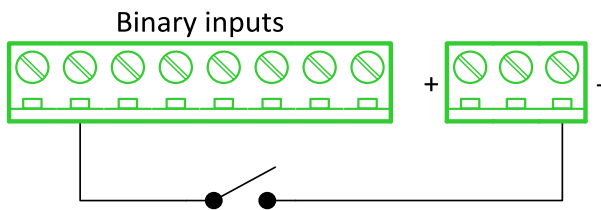

Binary outputs

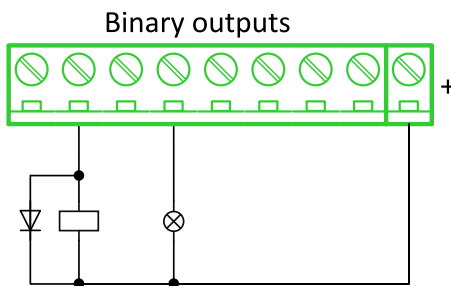


Resistance sensor

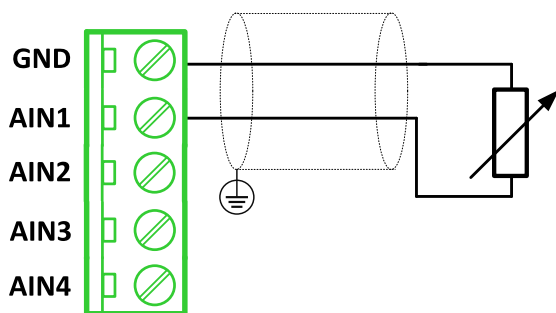

Note: Range: 0- 2400 Ω


IMPORTANT: Physical analog input range is 0-250 Ω . In sensor configuration in PC tool it is necessary to chose 0-2400 Ω sensor HW type to ensure proper function of analog input.

Voltage sensor

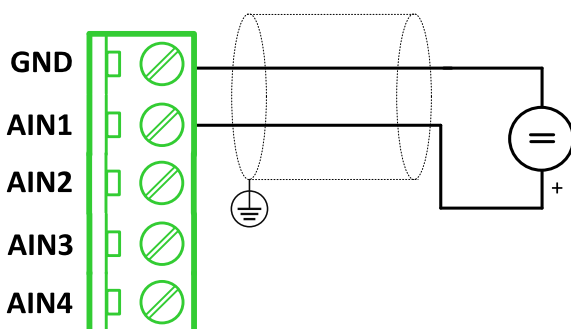

Note: Range 0-100 mV

Current sensor - passive

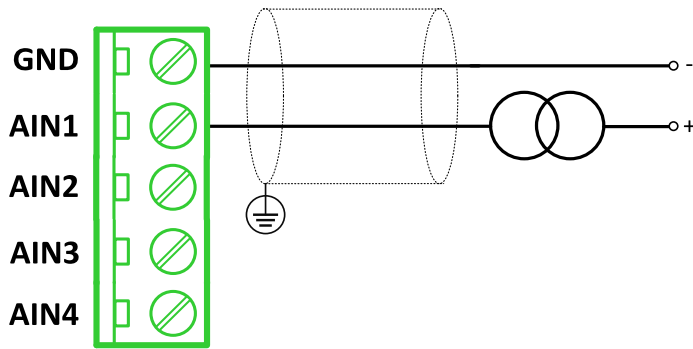

Note: Range: $\pm 0-20\text{ mA}$

IMPORTANT: Physical analog input range is 0-20mA. In sensor configuration in PC tool it is necessary to chose +- 20mA active sensor HW type to ensure proper function of analog input.

Analog outputs

Analog output



Note: Range: 0 to 20 mA $\pm 0,33\text{ mA}$

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	100 mA at 24V \div 500 mA
Interface to controller	CAN1
Protection	IP20
Storage temperature	- 40 °C to + 80 °C
Operating temperature	- 30 °C to + 70 °C
Dimensions (WxHxD)	95×96×43 mm (3.7'×3.8'×1.7')

Analog inputs

Number of channels	8
Voltage	Range 0-100 mV Accuracy: 1,5 % \pm 1 mV out of measured value
Current	Range: 0-20 mA Accuracy: 2.5 % \pm 0,5 ohm out of measured value
Resistive	Range: 0- 250 Ω Accuracy: 1 % \pm 2 ohm out of measured value

Analog outputs

Number of channels	1
Current	Range: 0 to 20 mA \pm 0,33 mA Resolution 10 bit

Binary inputs

Number of channels	8
Input resistance	4700 Ω
Input range	0 to 36 V DC
Switching voltage level for open contact indication	0 to 2 V DC
Max voltage level for close contact indication	8 to 36 V DC

Binary outputs

Number of channels	8
Max current	500 mA
Max switching voltage	36 V DC
Number of channels	8
Voltage	Range 0-100 mV Accuracy: 1,5 % \pm 1 mV out of measured value
Current	Range: 0-20 mA Accuracy: 2.5 % \pm 0,5 ohm out of measured value
Resistive	Range: 0- 250 Ω Accuracy: 1 % \pm 2 ohm out of measured value

IGL-RA15

Remote annunciator (IGL-RA15) is designed as an extension signaling unit.

The unit is equipped with a fully configurable tri color (red, orange, green) LED for intuitive operation together with high functionality.



Image 8.190 IGL-RA15

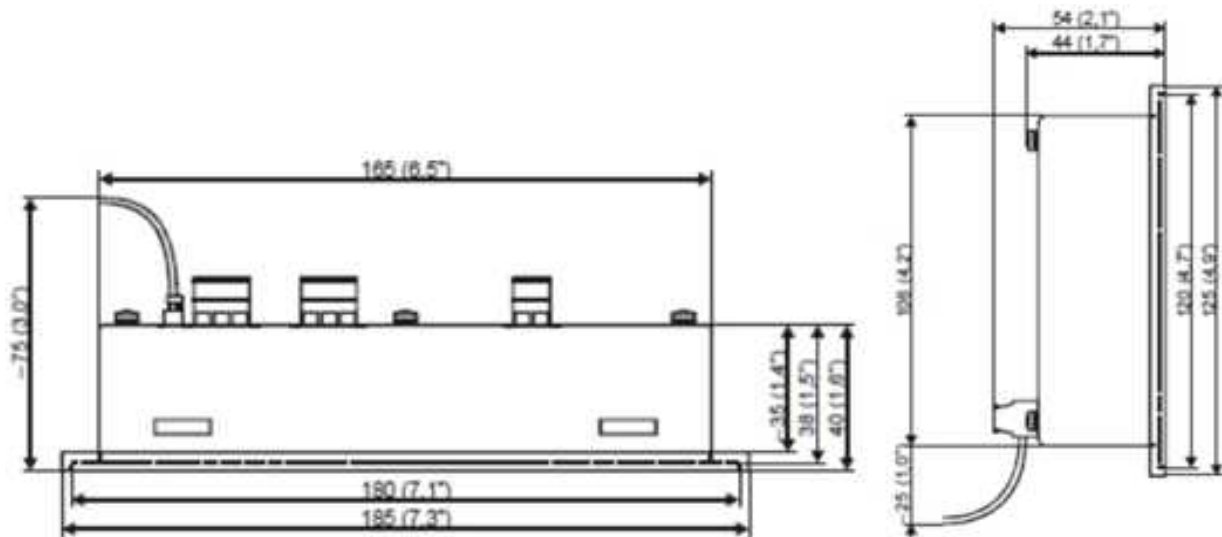


Image 8.191 IGL-RA15 dimensions

Terminals

Horn	Horn
CAN	CAN1 line
Power	Power supply

CAN address

Address	Jumper A	Jumper B
1	OPEN	OPEN
5+6	CLOSED	OPEN
Customer defined	CLOSED	CLOSED

SW changing of CAN1 address is enabled only when both jumpers are closed. Any one of these addresses (1+2 or 3+4 or 5+6 or 7+8) can be set by following steps:

- ▶ Switch to programming mode (Hold the Horn reset and Lamp test when unit is powering on). Status led is yellow
- ▶ Press Lamp test sixteen times
- ▶ Set the address up by pressing Horn reset.
 - The number of red luminous LEDs means the CAN1 addresses (two for addresses 1+2, four for addresses 3+4, six for addresses 5+6 and eight for addresses 7+8)
- ▶ Press Lamp test

LED indication

Each LED color is adjusted independently of controller output settings. If controller output 1 is set as “Common Shutdown” it doesn’t mean red LED1 color for iGL-RA15. The LEDs color can be adjusted by following steps:

- ▶ Switch to programming mode (Hold the Horn reset and Lamp test when unit is powering on). Status led is yellow
- ▶ Press Horn reset to change the LED1 color (green, yellow, red)

- ▶ Press Lamp test to switch to the next LED color adjusting
- ▶ Continue to adjust all LEDs color
- ▶ After LED15 color adjusting press three times Lamp test

Note: *If there is no operator action during address setting, color adjusting or timeout setting, the unit returns to normal operation without changes saving.*

Status LED

The signals LEDs are handled like binary outputs. It means all what can be configured to binary outputs can be also configured to the LEDs of IGL-RA15.

LED status	Description
Lights	Configured logical output is active on the controller
Dark green LED	Configured logical output is not active on the controller
Dark yellow or red LED	Configured logical output is not active on the controller and horn reset was pressed.
Yellow or red LED blinks	Configured logical output is not active on the controller and horn reset was still not pressed.

Power LED

LED status	Description
Blinking green	The unit is OK and the communication to the master controller is OK.
Blinking red	The unit is OK, but the communication to the master controller is not running.
Blinking yellow	EEPROM check not passed OK after power on
Yellow	Horn timeout or controller address adjustment

Horn setting

The horn output is activated if any of red or yellow LED is on. Output is on until pressing Horn reset or horn timeout counts down. The timeout can be set by following steps:

- ▶ Switch to programming mode (Hold the Horn reset and Lamp test when unit is powering on). Status led is yellow
- ▶ Press Lamp test fifteen times
- ▶ Set the horn timeout by pressing Horn reset.
 - The number of green luminous LEDs means timeout in 10 s (any for disabling horn output, 1 for 10s timeout, 2 for 10s timeout, 15 for disabling horn timeout).
 - Press Lamp test two times

Note: *If there is no operator action during address setting, color adjusting or timeout setting, the unit returns to normal operation without changes saving.*

The horn is activated if:

- ▶ Some of red or yellow LED lights up or
- ▶ At the end of the extended lamp test. See chapter **Lamp and horn test (page 631)**


The horn can be silenced:

- ▶ By pressing horn reset button or
- ▶ It silences automatically after adjusted time

Lamp and horn test

Pressing and holding lamp test button for less than 2 s execute the basic lamp test. All LEDs light up with the configured colour. If the button is hold longer than 2 s, an extended test is started. Every LED is tested step-by-step in green colour and then in red colour. The horn is activated at the end of the test. After that the unit returns to normal operation. The horn can be silenced with horn reset.

Wiring

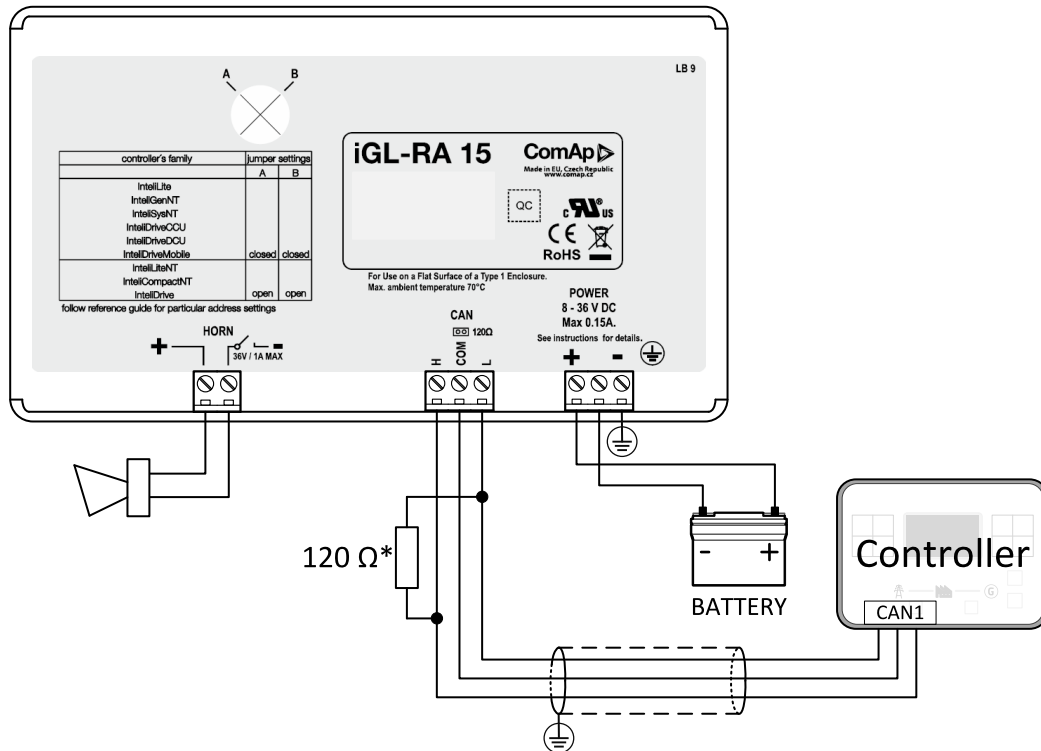

* terminator resistor only when iGL-RA 15 is the last unit on the CAN1 bus.

Note: The shielding of the CAN bus cable has to be grounded at one point only!

Note: See the section *Technical data* (page 631) for recommended CAN bus cable type

Technical data

General data

Power supply	8 to 36 V DC
Current consumption	0.35-0.1A (+1Amax horn output) depends on supply voltage
Protection	IP65
Humidity	85%
Storage temperature	- 30 °C to + 80 °C
Operating temperature	- 20 °C to + 70 °C
Dimensions (WxHxD)	180x120x55 mm
Weight	950 g

Horn output

Maximum current	1.0 A
Maximum switching voltage	36 V DC

CAN bus interface

Galvanic separated	
Maximal CAN bus length	200 m
Speed	250 kBd
Nominal impedance	120 Ω
Cable type	twisted pair (shielded)
Following dynamic cable parameters are important especially for maximal 200 meters CAN bus length	
Nominal Velocity of Propagation	min. 75 % (max. 4,4 ns/m)
Wire crosscut	min. 0,25 mm ²
Maximal attenuation (at 1 MHz)	2 dB/100m
Recommended Industrial Automation & Process Control Cables	
BELDEN (www.belden.com)	<ul style="list-style-type: none"> ▶ 3082A DeviceBus for Allen-Bradley DeviceNet ▶ 3083A DeviceBus for Allen-Bradley DeviceNet ▶ 3086A DeviceBus for Honeywell SDS ▶ 3087A DeviceBus for Honeywell SDS ▶ 3084A DeviceBus for Allen-Bradley DeviceNet ▶ 3085A DeviceBus for Allen-Bradley DeviceNet ▶ 3105A Paired EIA Industrial RS485 cable
LAPP CABLE (www.lappcable.com)	<ul style="list-style-type: none"> ▶ Unitronic BUS DeviceNet Trunk Cable ▶ Unitronic BUS DeviceNet Drop Cable ▶ Unitronic BUS CAN ▶ Unitronic-FD BUS P CAN UL/CSA